
SMARTCORE PRO

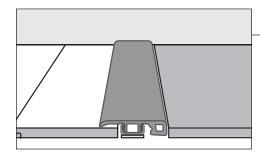

TRIM & MOLDING PROFILES

SMARTCORE trims and moldings are designed to coordinate effortlessly with your SMARTCORE floor. Each piece is 94" long and features a waterproof core wrapped in vinyl.




BABY THRESHOLD

Used for transitioning from a hard surface floor (SMARTCORE) to a thicker floor such as high pile carpet. It can also be used to transition between flooring and doorway thresholds, and/or around hearths and sliding glass doors.

INSTALLATION INSTRUCTIONS:

Measure and cut to fit. Affix **Baby Threshold** using adhesive, being sure to follow adhesive manufacturer's instructions completely.

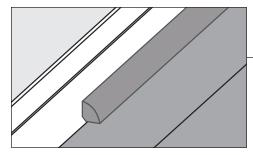


QUARTER ROUND

Used to accent the transition from the baseboards to floor surface.

INSTALLATION INSTRUCTIONS:

Measure and cut to fit. Affix **Quarter Round** using glue, molding tape or nails. When using adhesive, be sure to follow manufacturer's instructions completely.

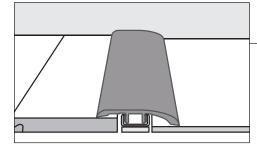


REDUCER

Used to transition from a hard surface floor (SMARTCORE) to a floor with a lower height (ceramic tile, low pile carpet).

INSTALLATION INSTRUCTIONS:

Cut **Reducer** and track to same desired length. Secure track to floor with glue, molding tape or nails and press or tap **Reducer** into track to desired depth using rubber mallet.

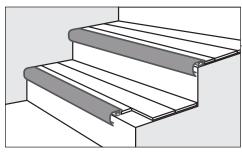


STAIRNOSE

Used to provide the finishing touch to the front stair edge when installing SMARTCORE on stairs.

INSTALLATION INSTRUCTIONS:

Measure and cut to fit. Affix **Stairnose** using adhesive, being sure to follow adhesive manufacturer's instructions completely.

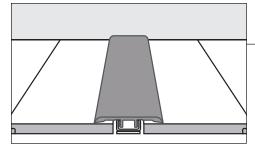

T-MOLDING

Used in doorways to join two adjacent floors that are close to the same height.

INSTALLATION INSTRUCTIONS:

Cut **T-Molding** and track to same desired length. Secure track to floor with glue, molding tape or nails and press or tap **T-Molding** into track to desired depth using rubber mallet.

TRIM INSTRUCTIONS & DETAILS











LENGTH: 94"

LENGTH: 94"

LENGTH: 94"

LENGTH: 94"

LENGTH: 94"

		BABY TI	HRESHOLD	QUARTER ROUND		REDUCER		STAIRNOSE		T-MOLDING	
COLOR	PRODUCT#	SOE/SOS#	MODEL #	SOE/SOS#	MODEL#	STOCK/ SOE/SOS #	MODEL #	SOE/SOS#	MODEL#	STOCK/ SOE/SOS #	MODEL#
Ashland Gray	1035297	1524874	LMTSP05046	1524868	LMQSP05046	1056479	LXMPR05046	1056485	LXSTN05046	1056473	LXTMD05046
Burbank Oak	1035292	1524873	LMTSP00252	1524867	LMQSP00252	1056474	LXMPR00252	1056480	LXSTN00252	1056468	LXTMD00252
Covington Oak	1035288	1056524	LXBTH05038	1056518	LXQTR05038	1056506	LXMPR05038	1056512	LXSTN05038	1056500	LXTMD05038
Claremount Oak	1035293	1524875	LMTSP07031	1524869	LMQSP07031	1056475	LXMPR07031	1056481	LXSTN07031	1056469	LXTMD07031
Gardena Marble	1035296	1524871	LMTSP00193	1524865	LMQSP00193	1056478	LXMPR00193	1056484	LXSTN00193	1056472	LXTMD00193
Glendale Pine	1035294	1524876	LMTSP07044	1524870	LMQSP07044	1056476	LXMPR07044	1056482	LXSTN07044	1056470	LXTMD07044
Jackson White Oak	1035286	1056522	LXBTH00186	1056516	LXQTR00186	1056504	LXMPR00186	1056510	LXSTN00186	1056498	LXTMD00186
Mocha Walnut	1437491	1437508	LXBTH07055	1437485	LXQTR07055	1437489	LXMPR07055	1437482	LXSTN07055	1437498	LXTMD07055
Moonlight Mist	1437518	1437514	LXBTH01030	1437503	LXQTR01030	1437499	LXMPR01030	1437484	LXSTN01030	1437511	LXTMD01030
Paramount	1035289	1056525	LXBTH00199	1056519	LXQTR00199	1056507	LXMPR00199	1056513	LXSTN00199	1056501	LXTMD00199
Riverside Granite	1035291	1056527	LXBTH05059	1056521	LXQTR05059	1056509	LXMPR05059	1056515	LXSTN05059	1056503	LXTMD05059
Springfield Mix	1035287	1056523	LXBTH00263	1056517	LXQTR00263	1056505	LXMPR00263	1056511	LXSTN00263	1056499	LXTMD00263
Sugar Valley Maple	1035295	1524872	LMTSP00245	1524866	LMQSP00245	1056477	LXMPR00245	1056483	LXSTN00245	1056471	LXTMD00245
Toasted Eucalyptus	1437478	1437510	LXBTH00822	1437506	LXQTR00822	1437477	LXMPR00822	1437479	LXSTN00822	1437524	LXTMD00822
Twilight	1035290	1056526	LXBTH00908	1056520	LXQTR00908	1056508	LXMPR00908	1056514	LXSTN00908	1056502	LXTMD00908