

# CONVENIENCE CONCEPTS

**TV STAND WITH THREE CABINETS**  
**50" MAXIMUM FLAT PANEL TELEVISION**  
**80 LB. MAXIMUM CAPACITY**



## ASSEMBLY INSTRUCTIONS

We have designed our furniture with you , the customer in mind . Our clear , easy to follow , step by step instructions will guide you through the project from start to finish . Feel confident that this will be a fun and rewarding project . The final product will be a quality piece of furniture that will go together smoothly and give years of enjoyment .


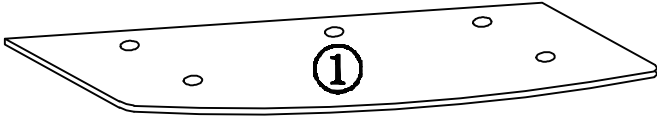

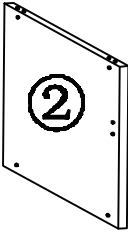


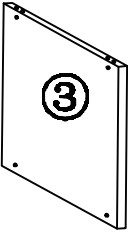



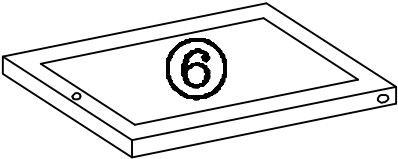
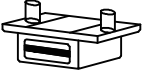
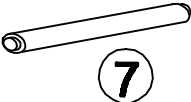


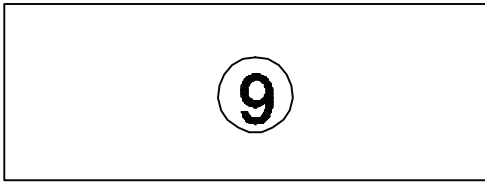
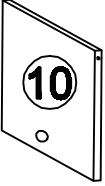






Please do not return to the store





Broken or missing parts?

Need help with assembly?

If you have any questions just call 1-800-468-6447 or email us at [parts@convenience-concepts.com](mailto:parts@convenience-concepts.com)


Hardware List	Panel List
<b>A</b> 	
Cam Bolt (16pcs)	Top panel (1pc)
<b>B</b> 	
Wood dowel (16pcs)	
<b>C</b> 	
Knob (3pcs)	
<b>D</b> 	
Spring insert (4pcs)	
<b>E</b> 	
Magnet (2pcs)	
<b>F</b> 	
Bracket (2pcs)	
<b>G</b> 	
Knob screw (3pcs)	
<b>H</b> 	
Nails (15pcs)	
<b>I</b> 	
Metal pin (8pcs)	
<b>J</b> 	
Glue (1pc)	

## Assembling the unit with camlocks and wood dowels.

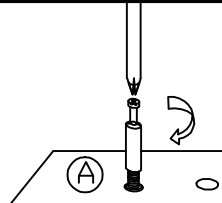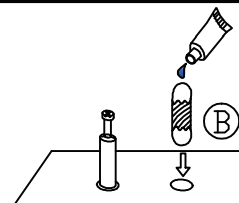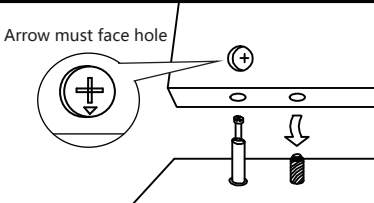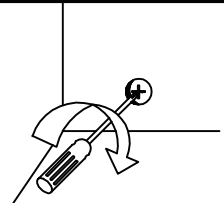			
Gently screw cam bolt into the threaded anchor.	Lightly glue one end of the wood dowel and tap halfway into hole.	Lightly glue wood dowel and connect to second panel by inserting dowels into holes.	Screw the camlock firmly into locked position.

## Step 1


1.Screw cambolts (A) and insert wood dowels (B) into bottom panel ⑤.

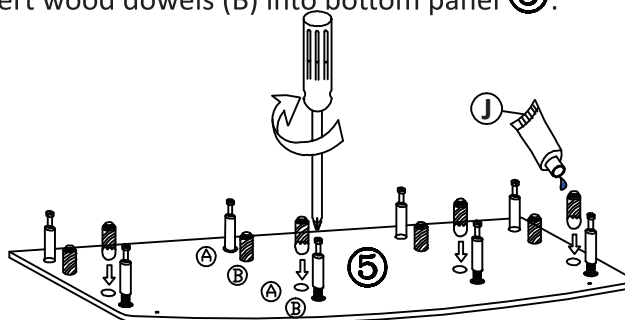

\*Refer to page 2 for dowel assembly . \*

## Step 2


1. Connect Left Divider Panel ② and Right Divider Panel ⑪ to Bottom Panel ⑤ by tightening camlocks already in panels.

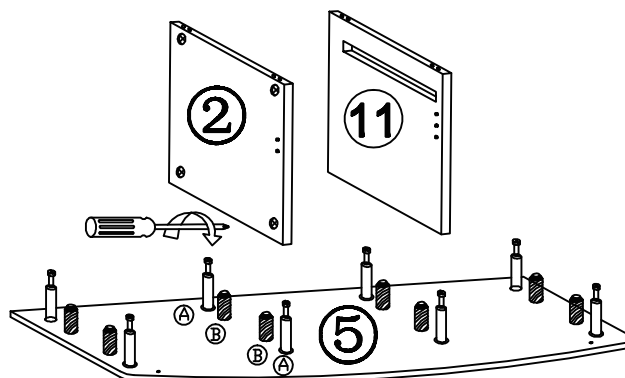

\*Note: Slots must face inside when installing middle dividers . \*


## Step 3

1.Connect side panels ③ to Bottom Panel ⑤ by tightening camlocks already in panels.

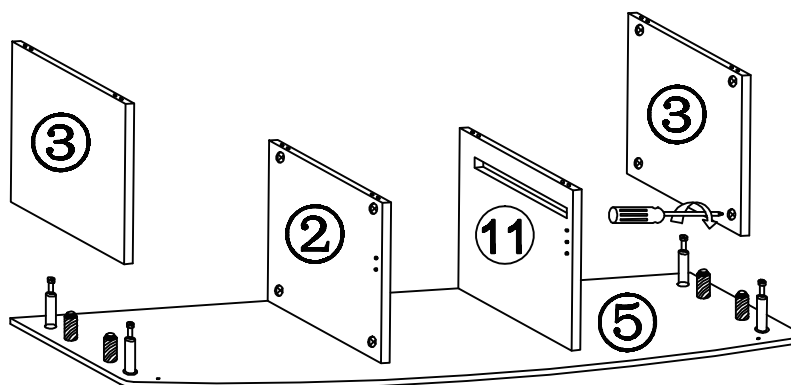


## Step 4

1. Attach the knobs (C) to Door ⑩ by using the screws (G) .
2. Insert the Metal Pins (I) into pre-drilled slots on Door ⑩
3. Slide pins in Door ⑩ into slots in Divider Panels ② and ⑪.
4. Insert Pins (I) into holes in Divider panels ② and ⑪.

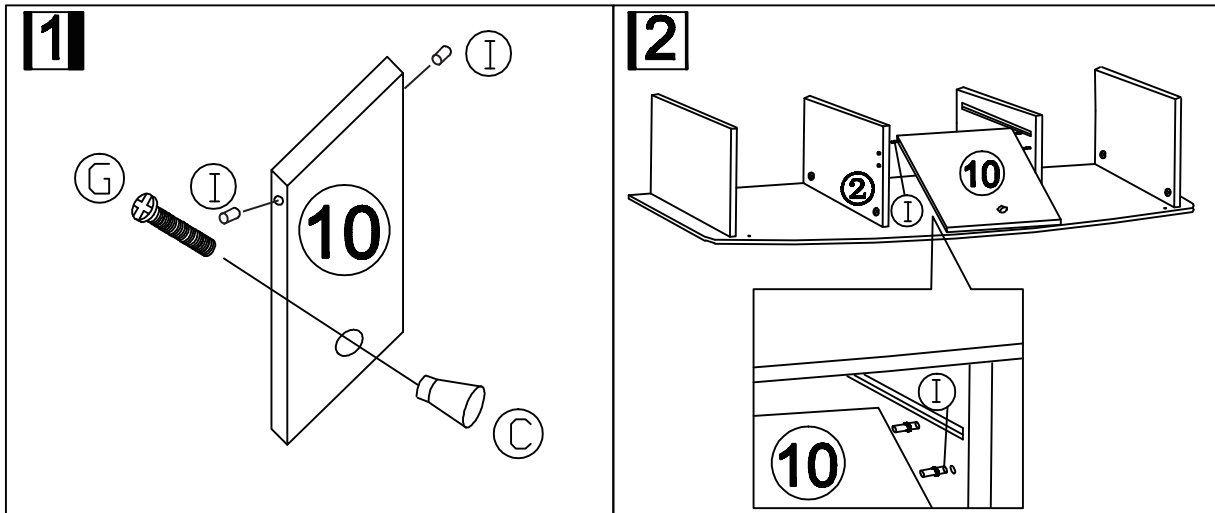

## Step 5


1. Screw cambolts (A) and insert wood dowels (B) into middle panel ④.

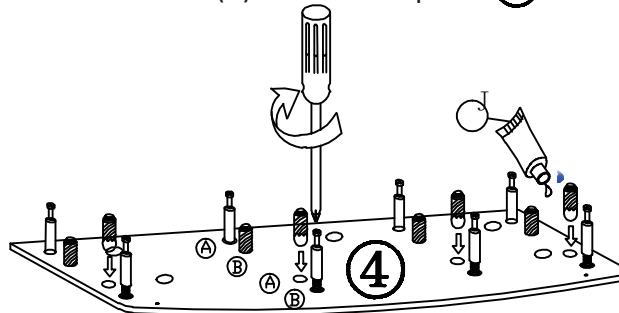

\*Refer to page 2 for dowel assembly .\*


## Step 6

1. Connect middle Panel ④ to assembly by tightening camlocks.

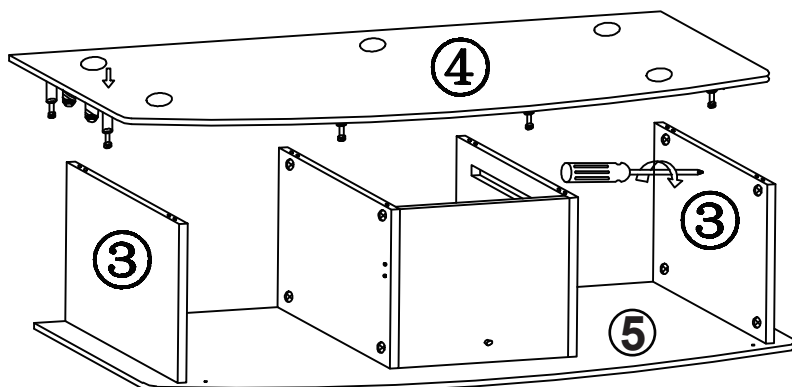


## Step 7

1. Attach Metal Tubes **7** to assembly using End Caps **8**, as shown.

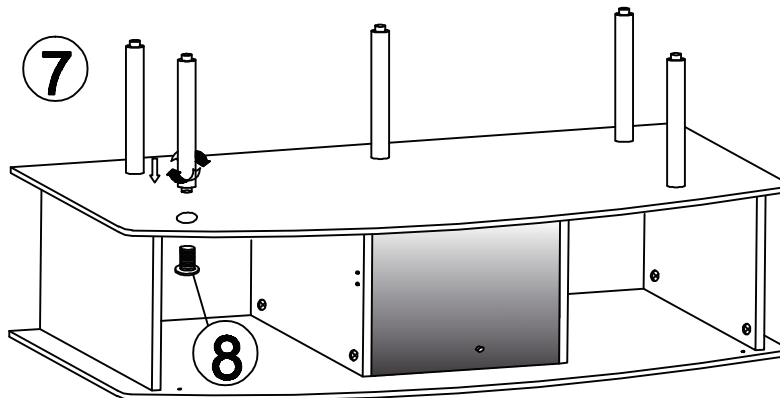


## Step 8

1. Place top panel **1** onto Metal Tubes **7**.  
2. Attach using End Caps **8**.

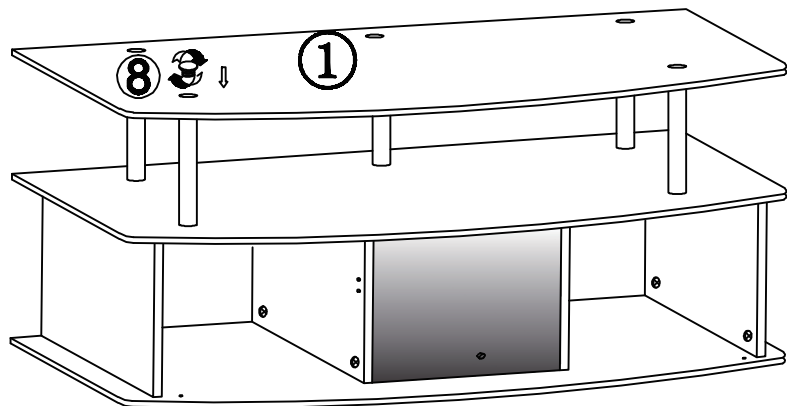


## Step 9

1. Turn the unit around, and connect back panel **9** using nails (H).

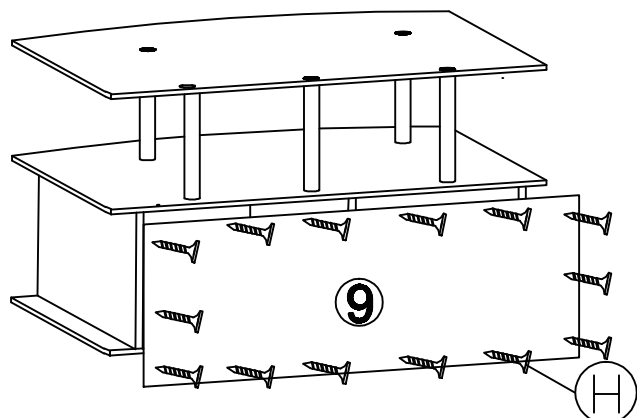


## Step 10

1. Attach Knob(C) and Bracket(F) to plastic Door (6) using knob Screw (G), as shown.
2. Insert spring inserts into doors.
3. Repeat for second door.

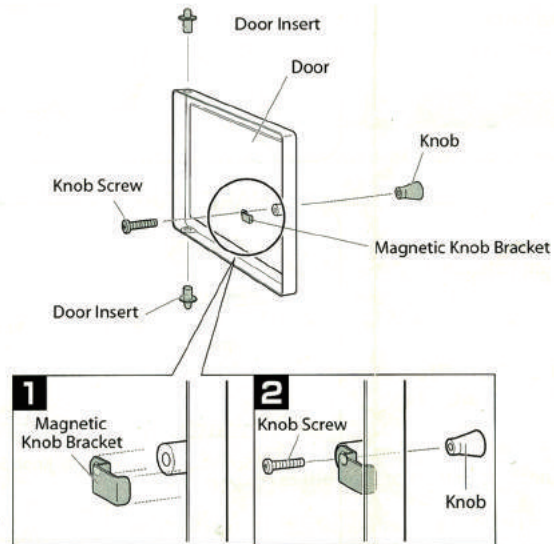

## Step 11

1. Attach magnets (E) to the middle divider panel (2) and (11) by inserting into pre-drilled holes.

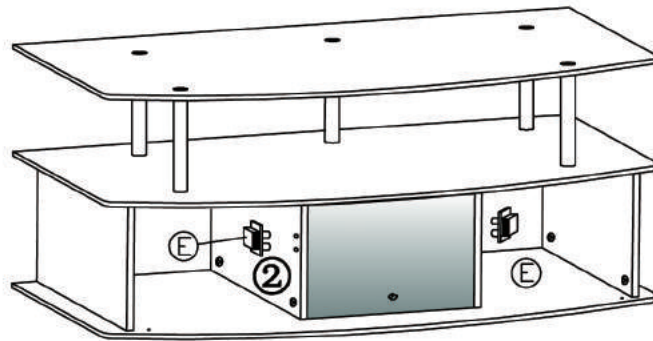

## Step 12

1. Attach doors (6) to unit.

