


Tribeca 62.99 Floating
Entertainment Center

Before starting


Prepare the room before starting the assembly, leaving it completely clean and the area in good condition to start the work.

Use the cardboard of the packaging and the foam sheets protection to separate and support the parts removed from the boxes.

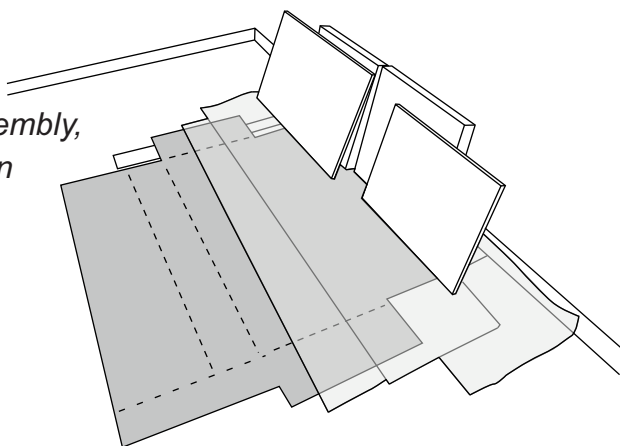

Dimension:

W: 62.99" H: 65.35" D: 11.02"

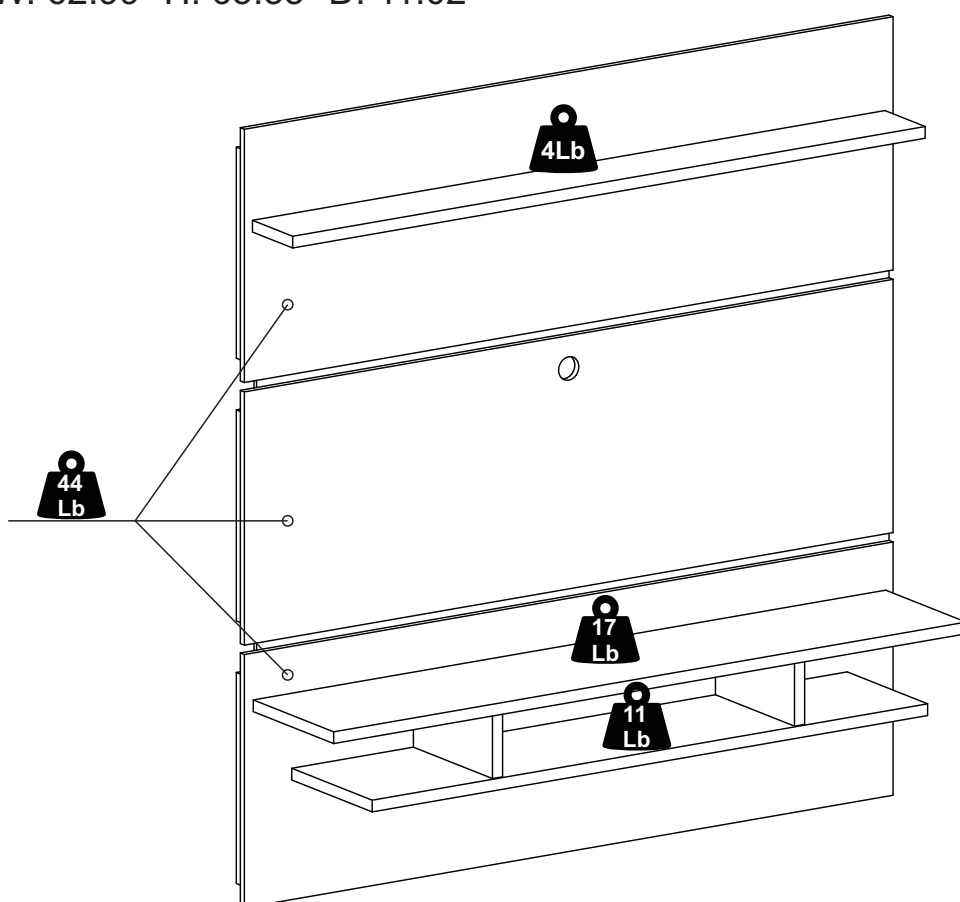




ASSEMBLY VIDEO




QUANTITY OF PEOPLE
TO ASSEMBLE THIS
FURNITURE





REQUIRED TOOLS

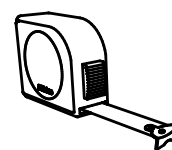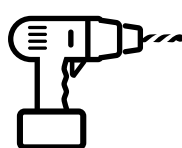

FRONT VIEW









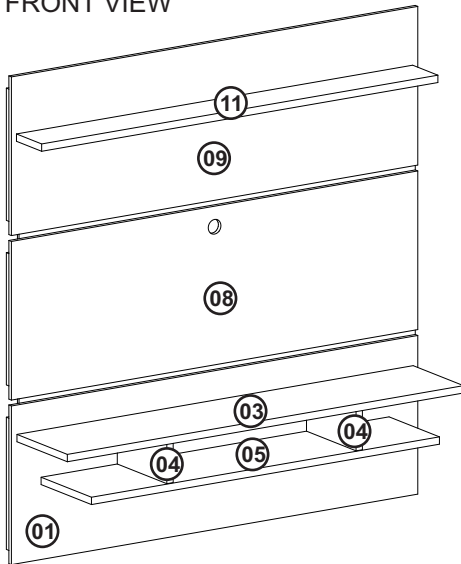


REAR VIEW

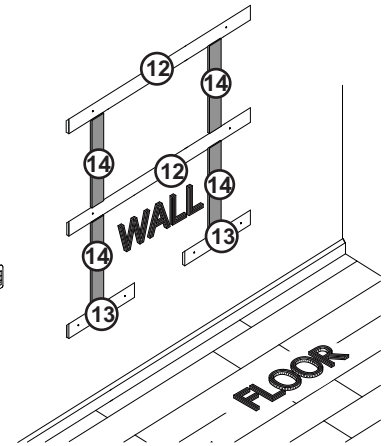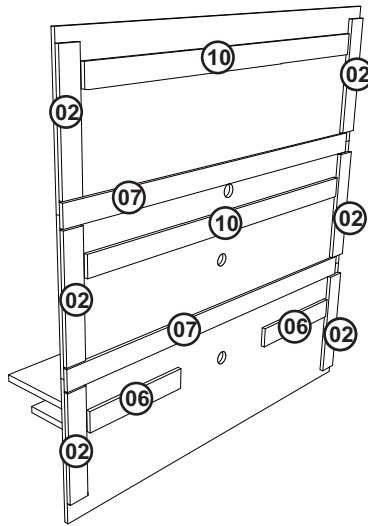


PART	DESCRIPTION	QUANTITY
01	LOWER PANEL (BOX 2/2)	01
02	SIDE STRUCTURE (BOX 1/2)	06
03	MID SHELF (BOX 1/2)	01
04	PARTITION (BOX 1/2)	02
05	BOTTOM SHELF (BOX 1/2)	01
06	SMALLER SUPPORT PANEL (BOX 1/2)	02
07	DECORATIVE INSERT (BOX 1/2)	02
08	CENTRAL PANEL (BOX 2/2)	02
09	TOP PANEL (BOX 2/2)	01
10	BIGGER SUPPORT PANEL (BOX 1/2)	02
11	TOP SHELF (BOX 1/2)	01
12	BIGGER WALL SUPPORT (BOX 1/2)	02
13	SMALLER WALL SUPPORT (BOX 1/2)	02
14	MOUNTING TEMPLATE (BOX 1/2)	02

HARDWARE

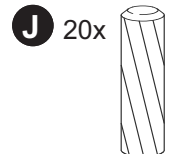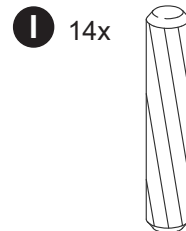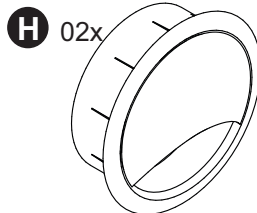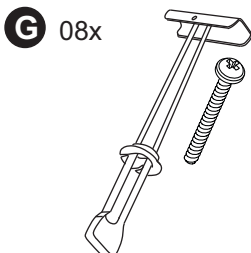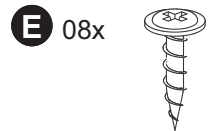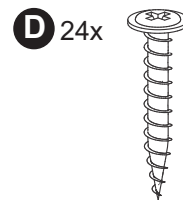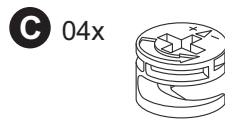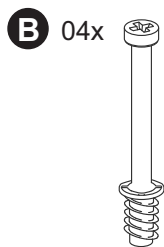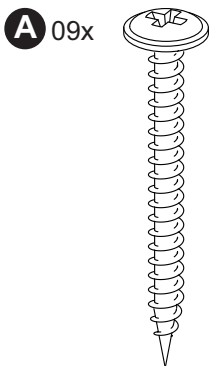


STEP 1

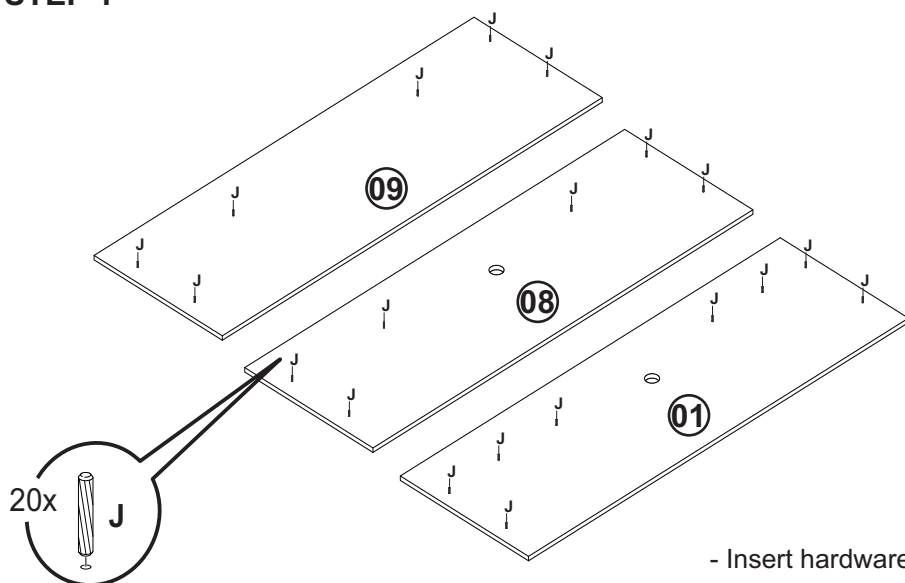


- Insert hardware (J) into panels (01, 08 and 09).

STEP 2

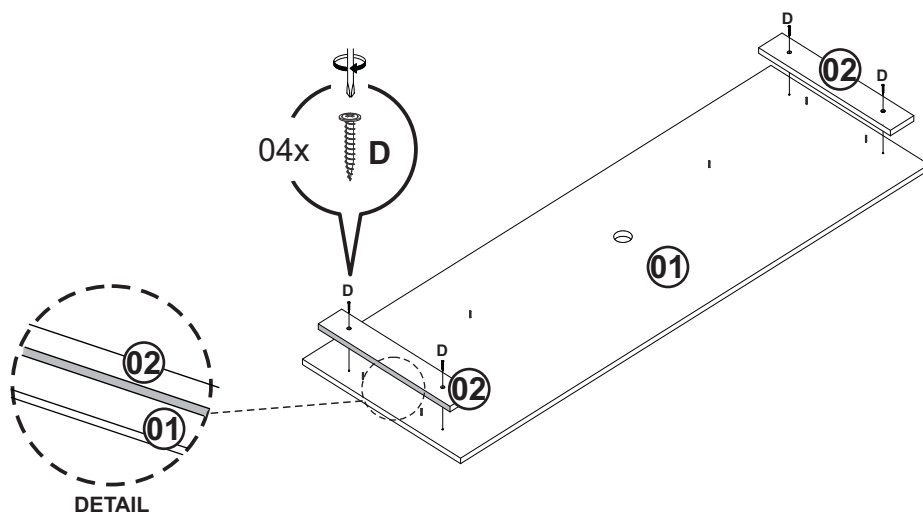

- Fix the parts (02) behind the panel (01) with bolt (D), observing the right position of the finished edges and correctly aligning as show in the drawing.


STEP 3

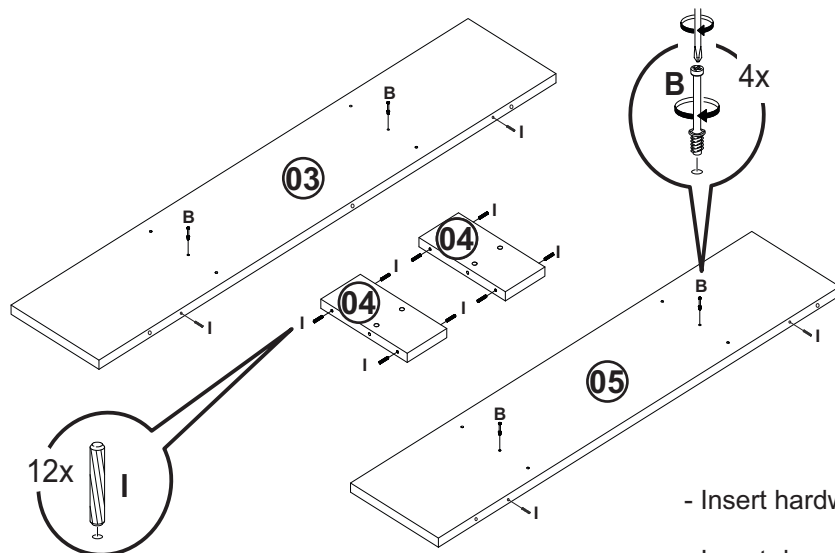


- Insert hardware (B) into parts (03 and 05).

- Insert dowels (I) into the parts (03, 04 and 05).


STEP 4

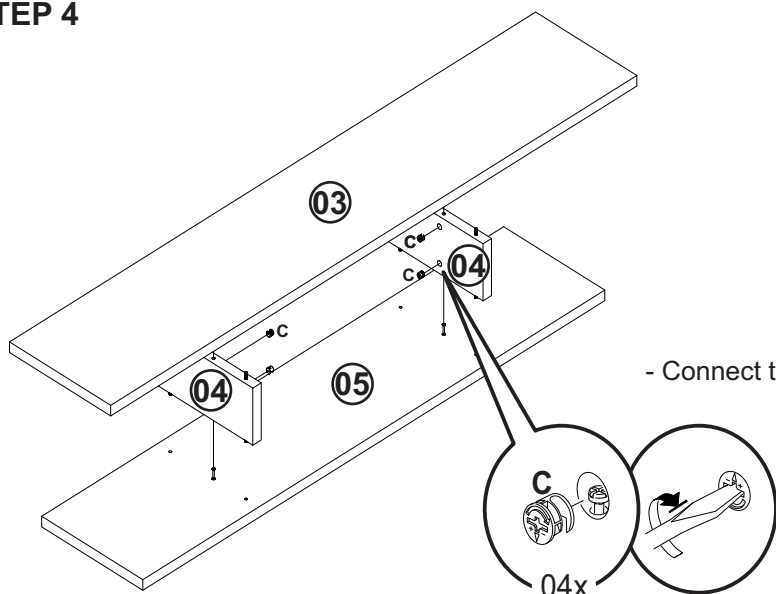

- Connect the parts (03, 04 and 05) with hardware (C).

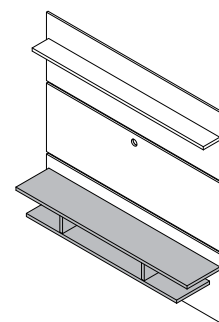


STEP 5

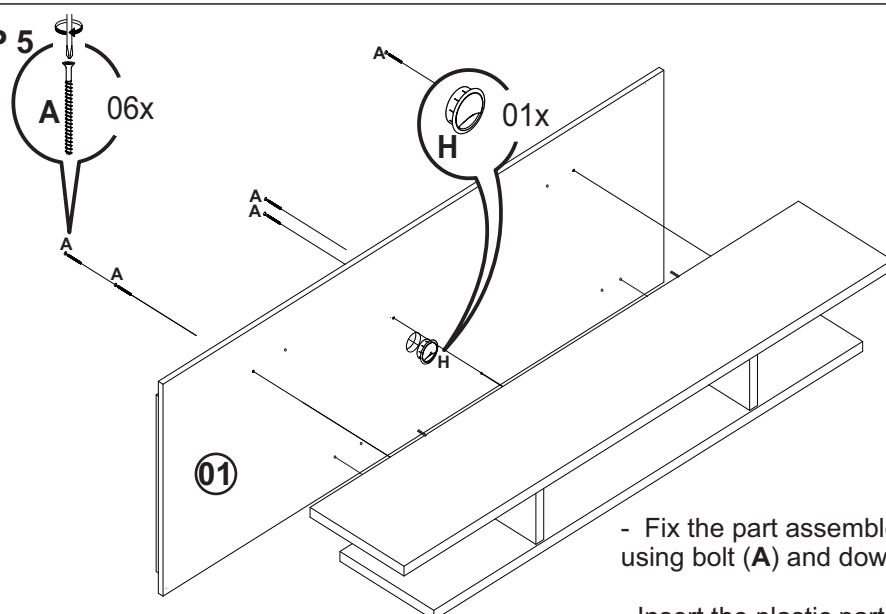


- Fix the part assembled on step 4 in the panel (01), using bolt (A) and dowels (I).


- Insert the plastic part (H) in the panel (01).



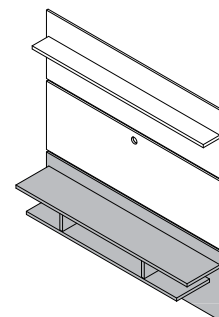


STEP 6

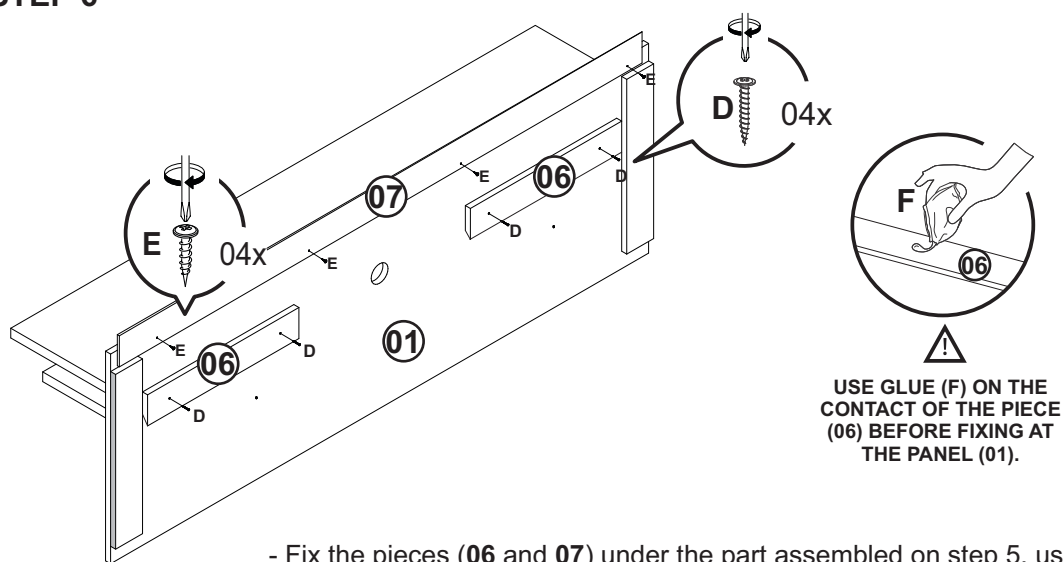


- Fix the pieces (06 and 07) under the part assembled on step 5, using bolt (D and E).

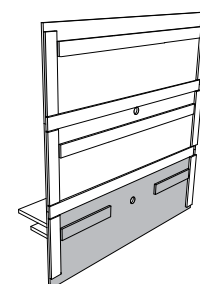

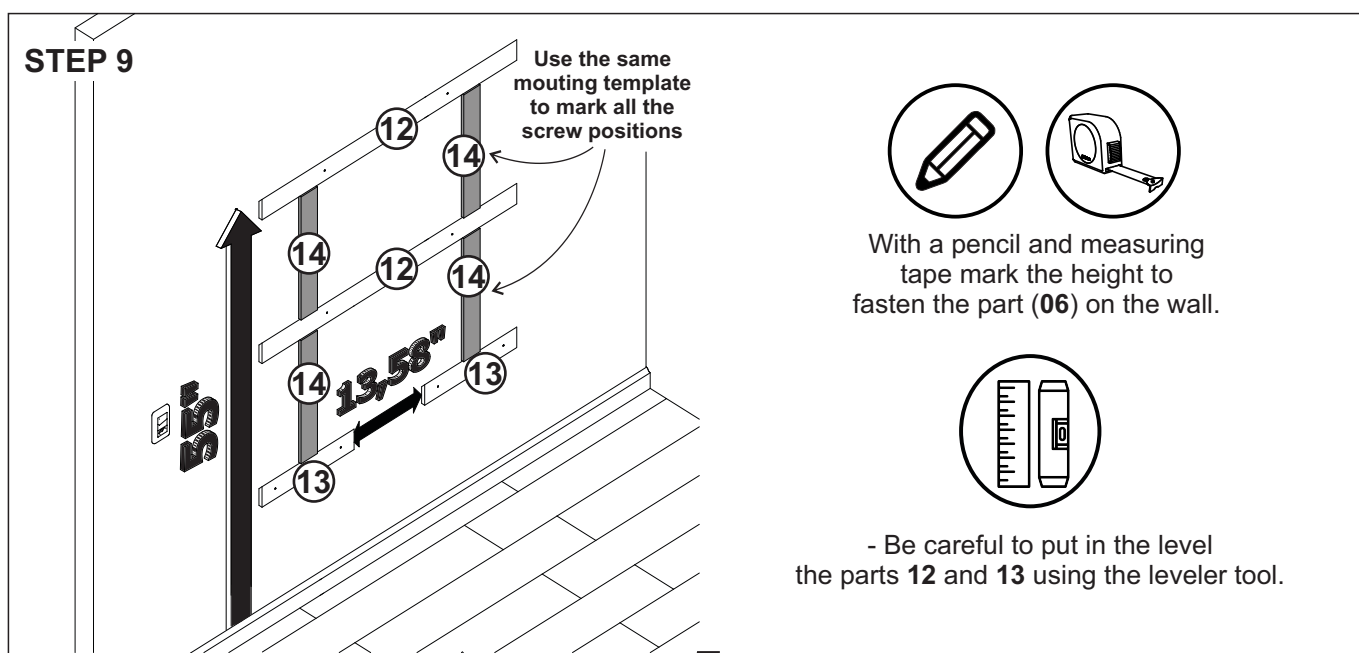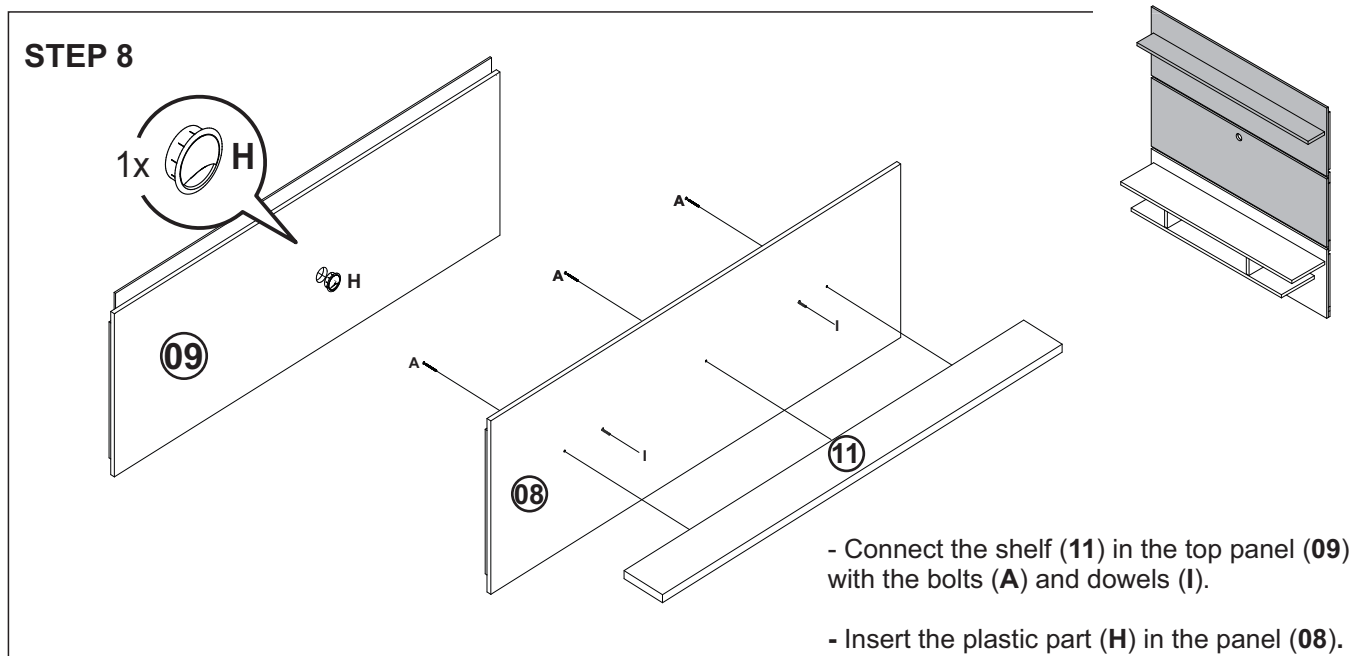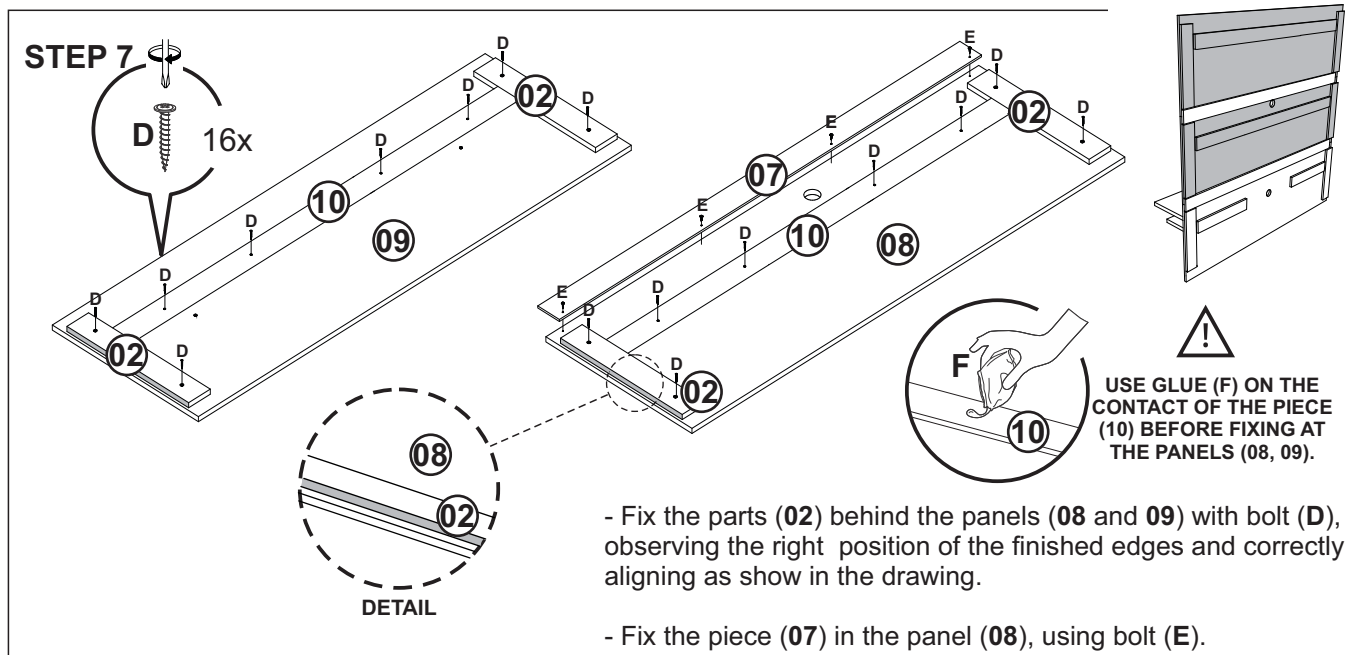


STEP 10


How to use the drywall toggle bolt (G):

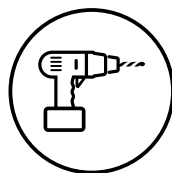



- Drill the wall with one twist bit drill of 1/2 inches.

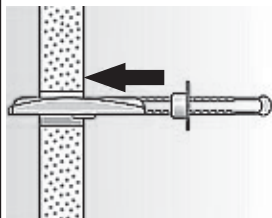


Insert the bolt and toggle into hole

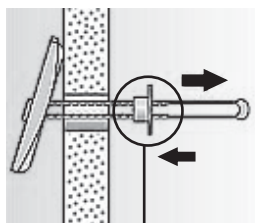

To push against the wall

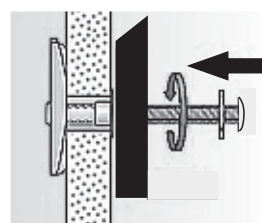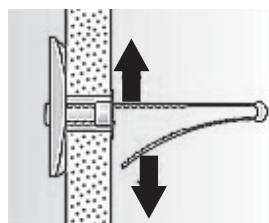

STEP 11


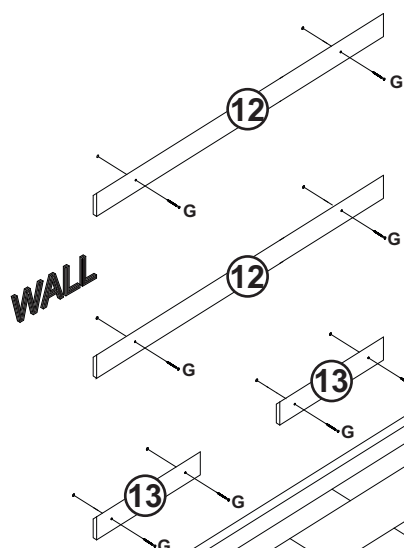


G

08x Toggle bolt screw

Fasten the parts (12 and 13) on the wall and keep the 45° degree cut to up side.



STEP 12

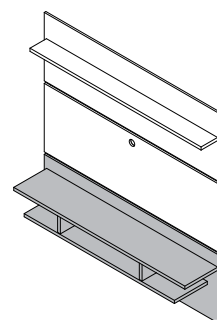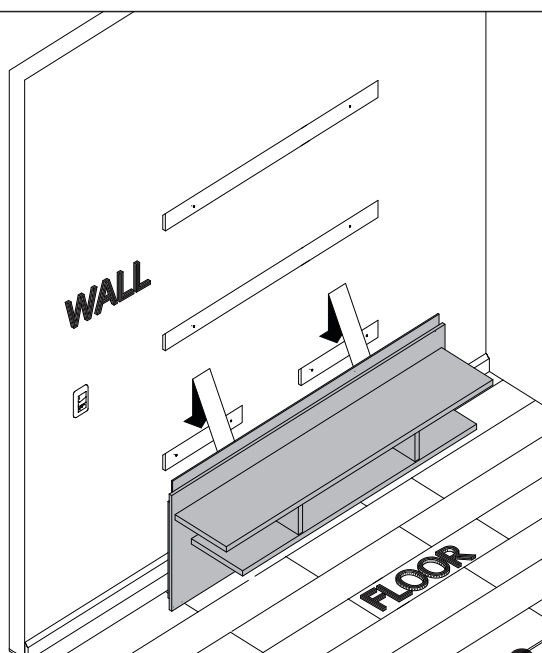

Verifying all the supports you are ready to hang your TV panels on the wall.



- Start hanging the lower panel (01).

STEP 13

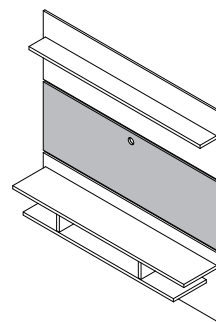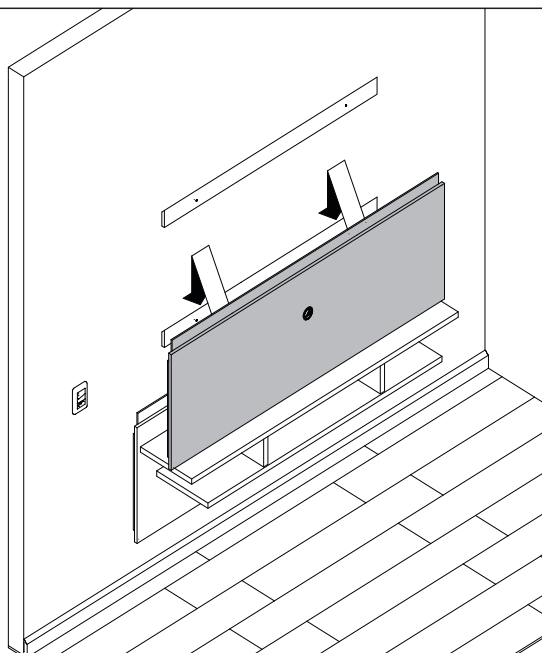

- Hang the central panel (08).

STEP 14

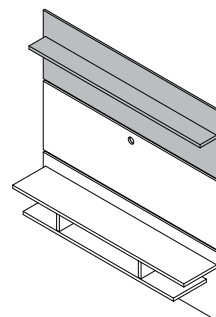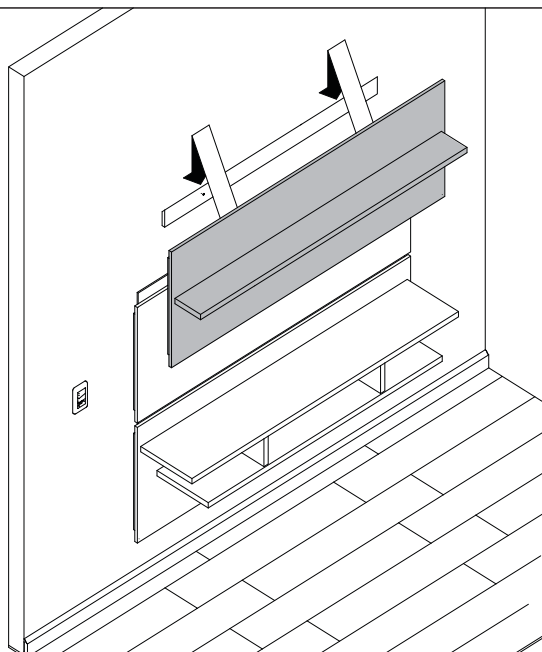

- Finally hang the top panel (09).