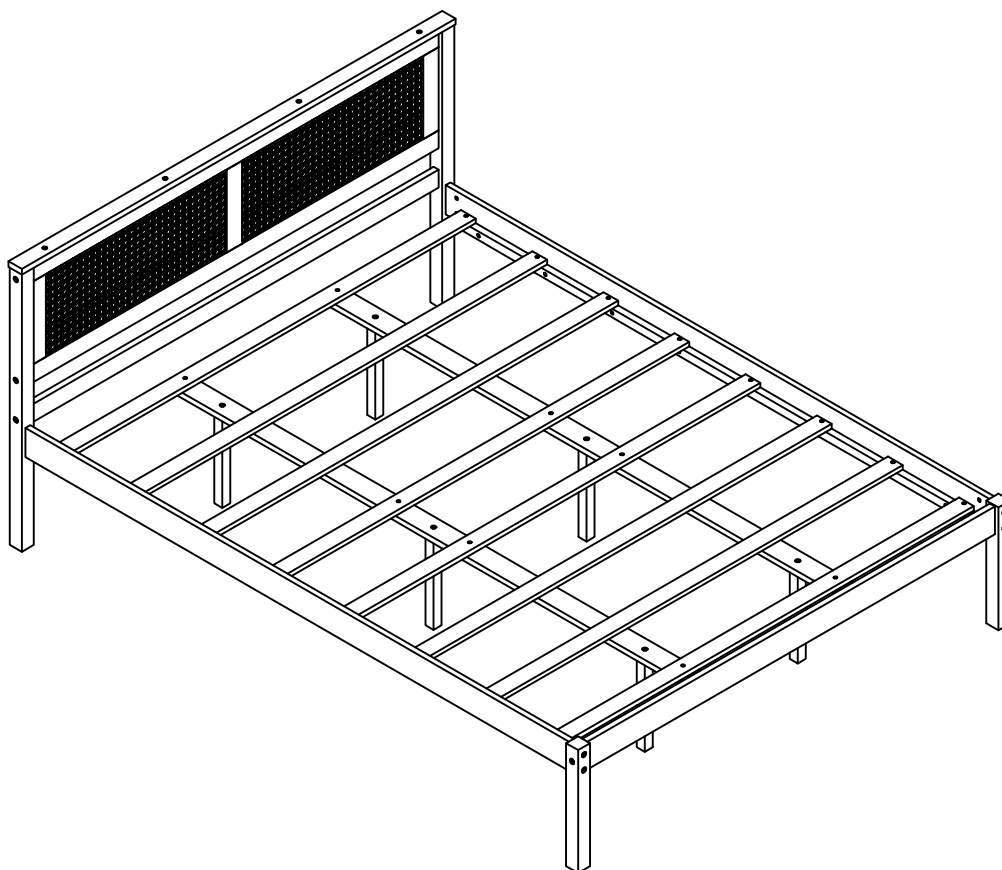


ASSEMBLY INSTRUCTIONS


QUEEN BED












SWB034-Q

Contact us: 13826959116@163.com



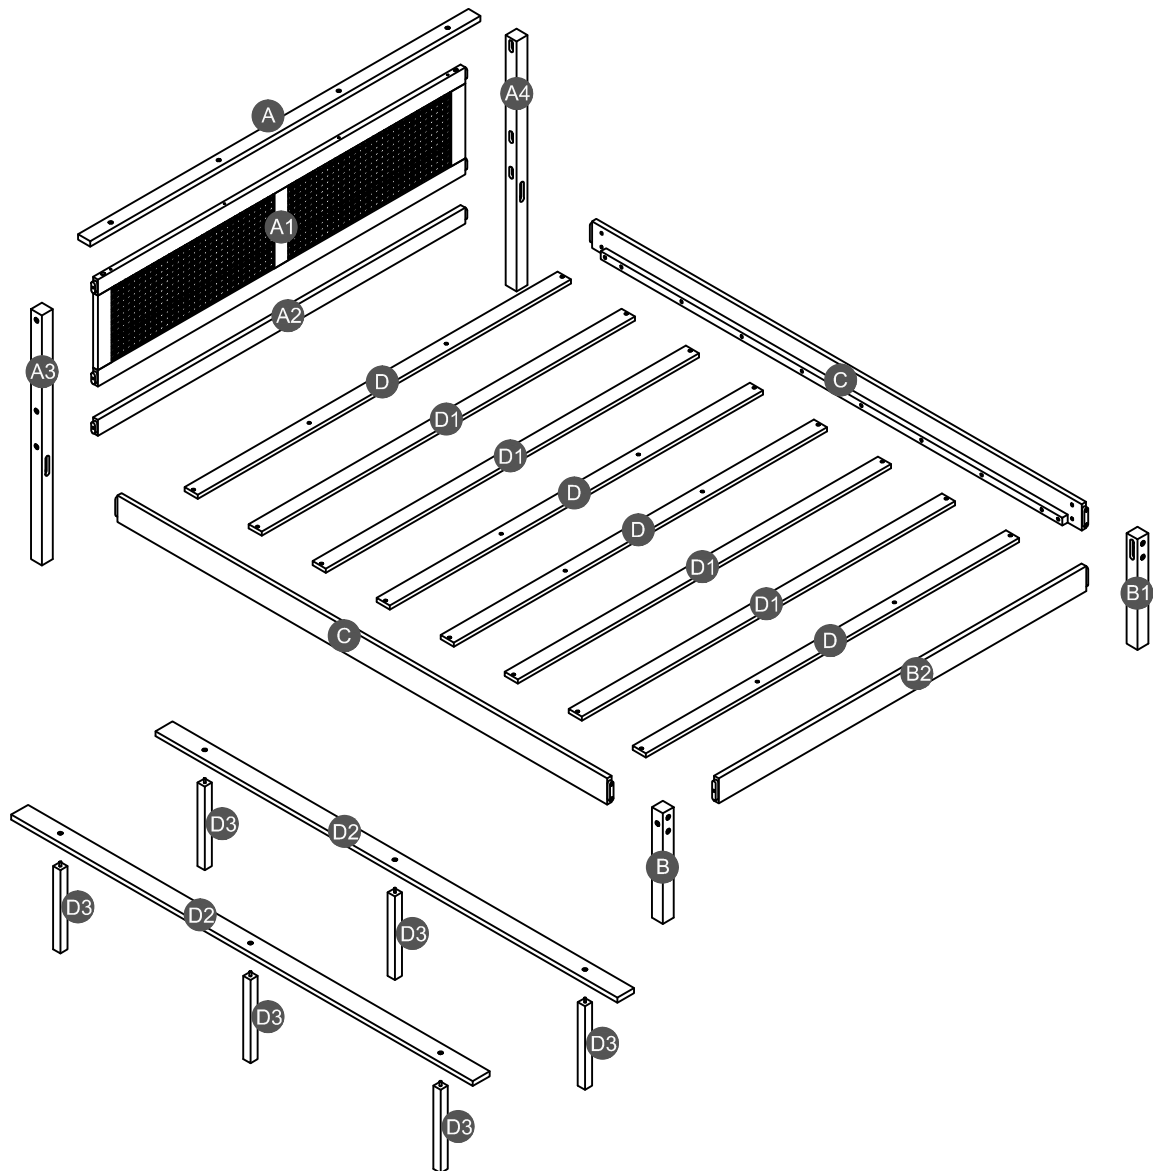
Detail View





Part List

A  Cap for Headboard - 1pc	A1  Frame headboard - 1pc	A2  Horizontal bar HB - 1pc
A3  Leg HB (Left) - 1pc	A4  Leg HB (Right) - 1pc	B  Leg FB (Left) - 1pc
B1  Leg FB (Right) - 1pc	B2  Horizontal bar FB - 1pc	C  Side rail - 2pcs
D  Slats - 4pcs	D1  Slats - 4pcs	D2  Lower support slat - 2pcs
D3  Leg support - 6pcs		

Hardware List

1	 (Ø15)1/4"*100mm Hex-Head bolts (8pcs)	2	 (Ø15)1/4"*80mm Hex-Head bolts (4pcs)	3	 1/4"*15 (9.5mm) Horizontal-Hole bolts(12pcs)
4	 (Ø12)1/4"*65mm Hex-Head bolts (4pcs)	5	 (Ø12)1/4"*40mm Hex-Head bolts (4pcs)	6	 Ø4*30mm Wood screws (24pcs)
7	 (1/4")4.5*58mm Allen key (1pc)				


OPTIONAL TOOLS FOR ASSEMBLY (NOT INCLUDED)





Electric
Screwdriver

PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !


STEP 1:


2		3		4	
2PCS		2PCS		4PCS	

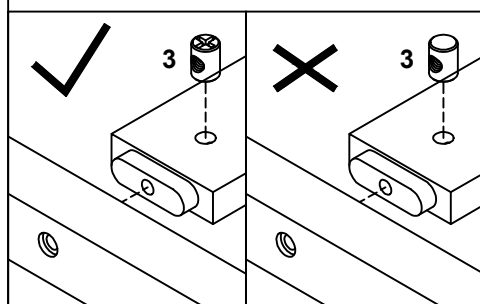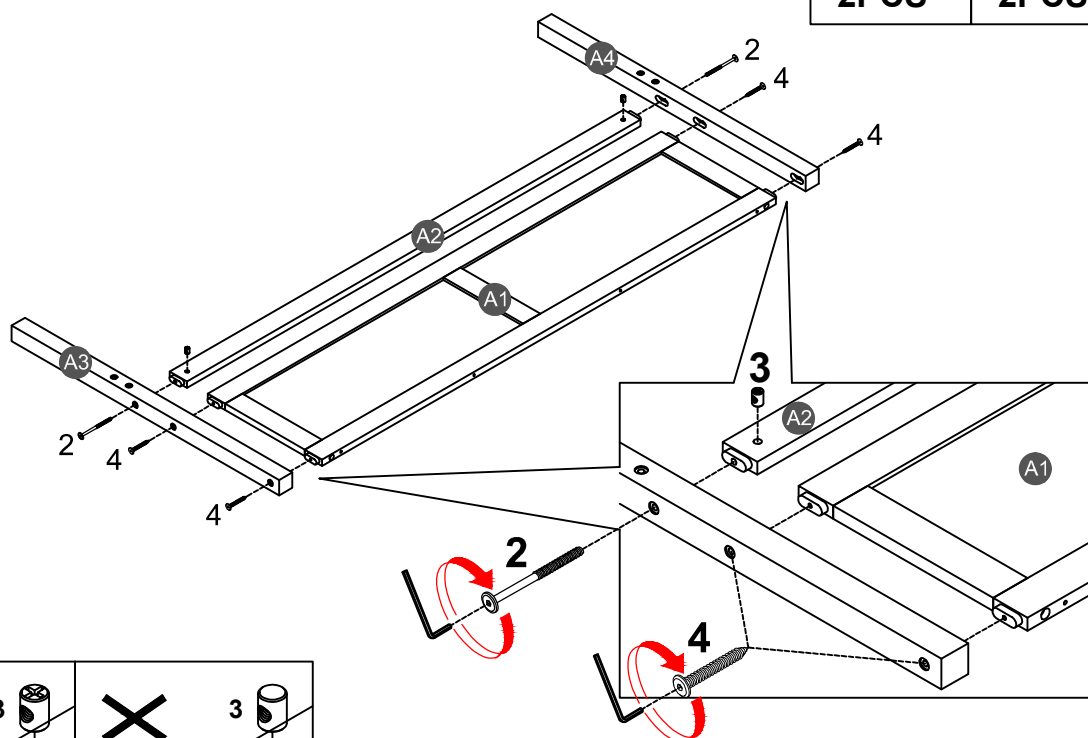


Note: Part 3 will face up with the "x" mark on it, otherwise it cannot be tightened

STEP 2:

5	
4PCS	

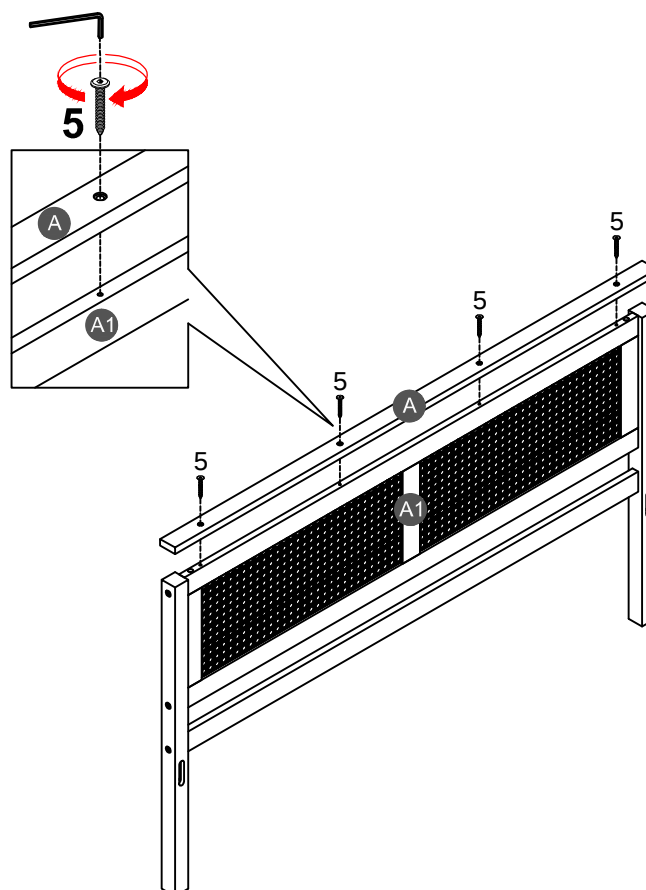


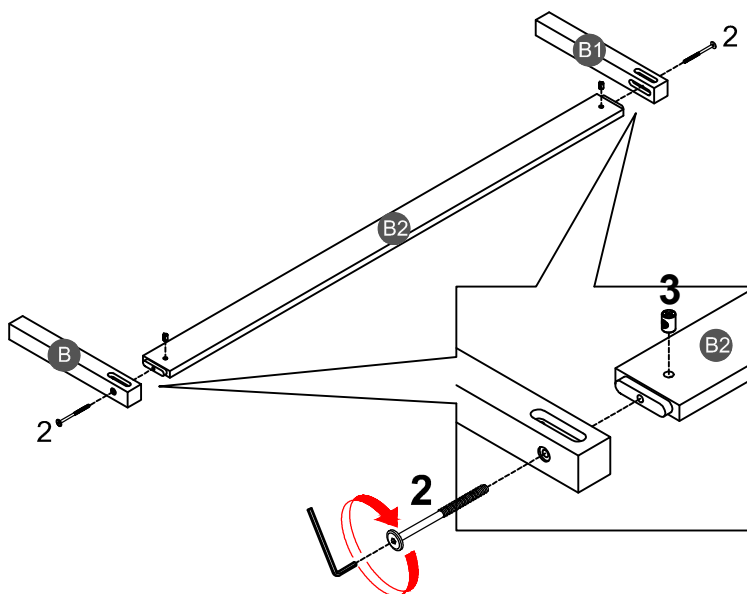STEP 3:



2		3	
2PCS		2PCS	

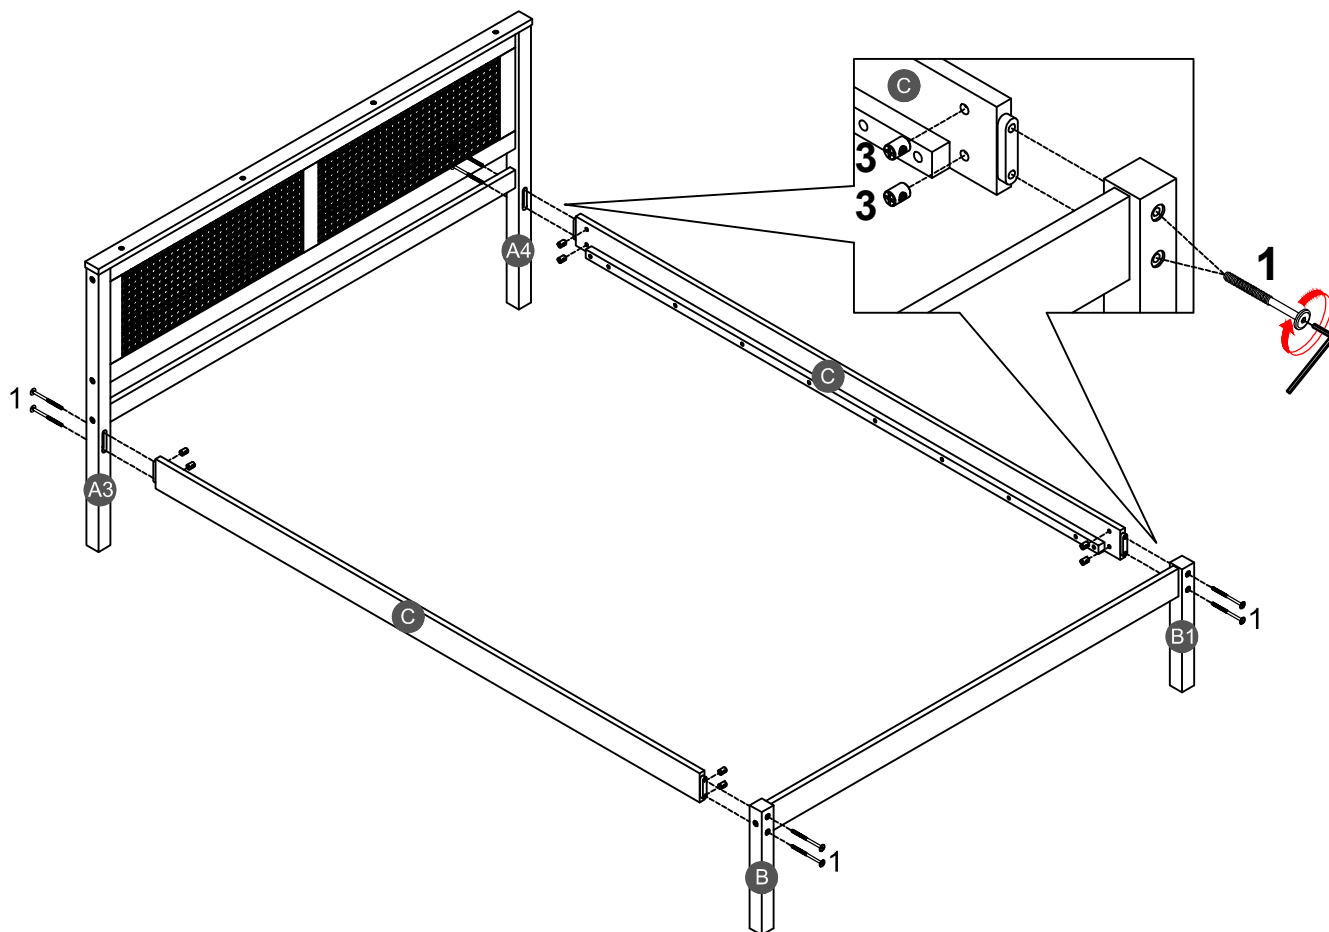
STEP 4:



1		3	
8PCS		8PCS	


STEP 5:

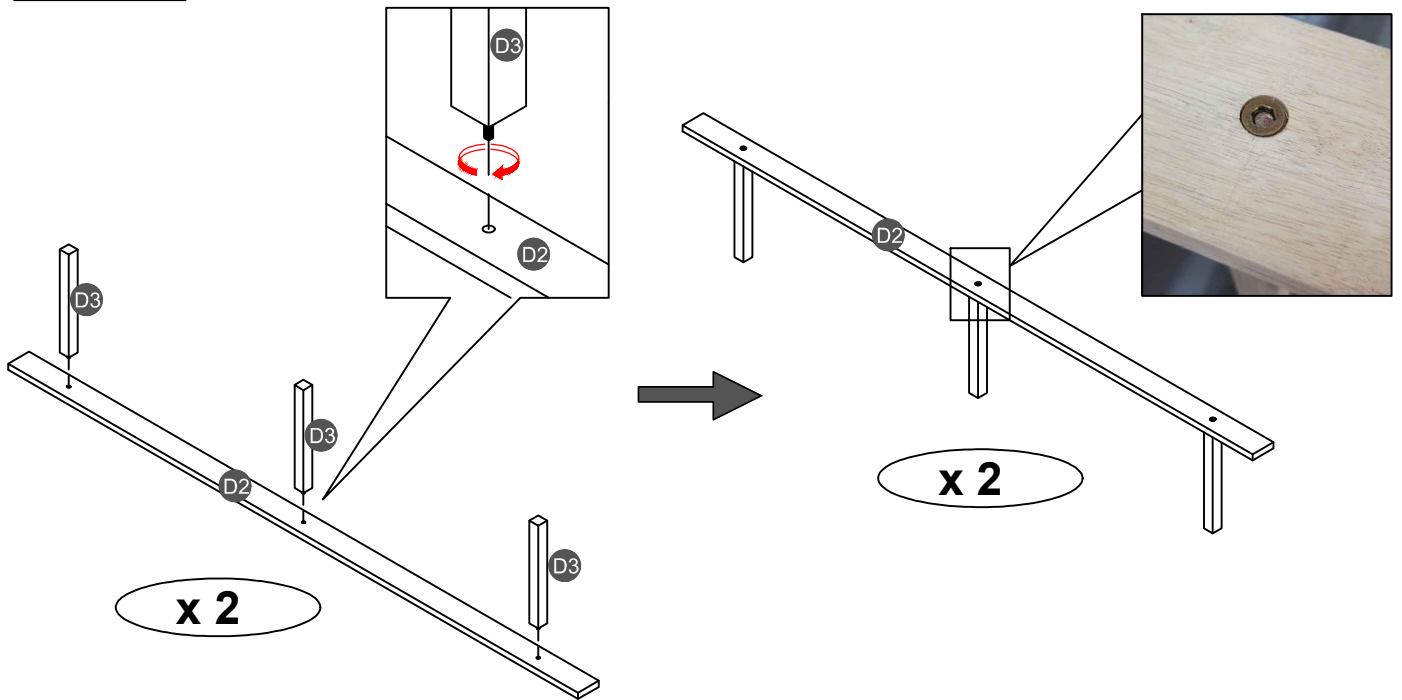Note holes on the lower support slat (D2) must face upward show in images.



Attach leg support (D2) to lower support slat (D3), then rotate to secure.
Move support slat inside Bed.

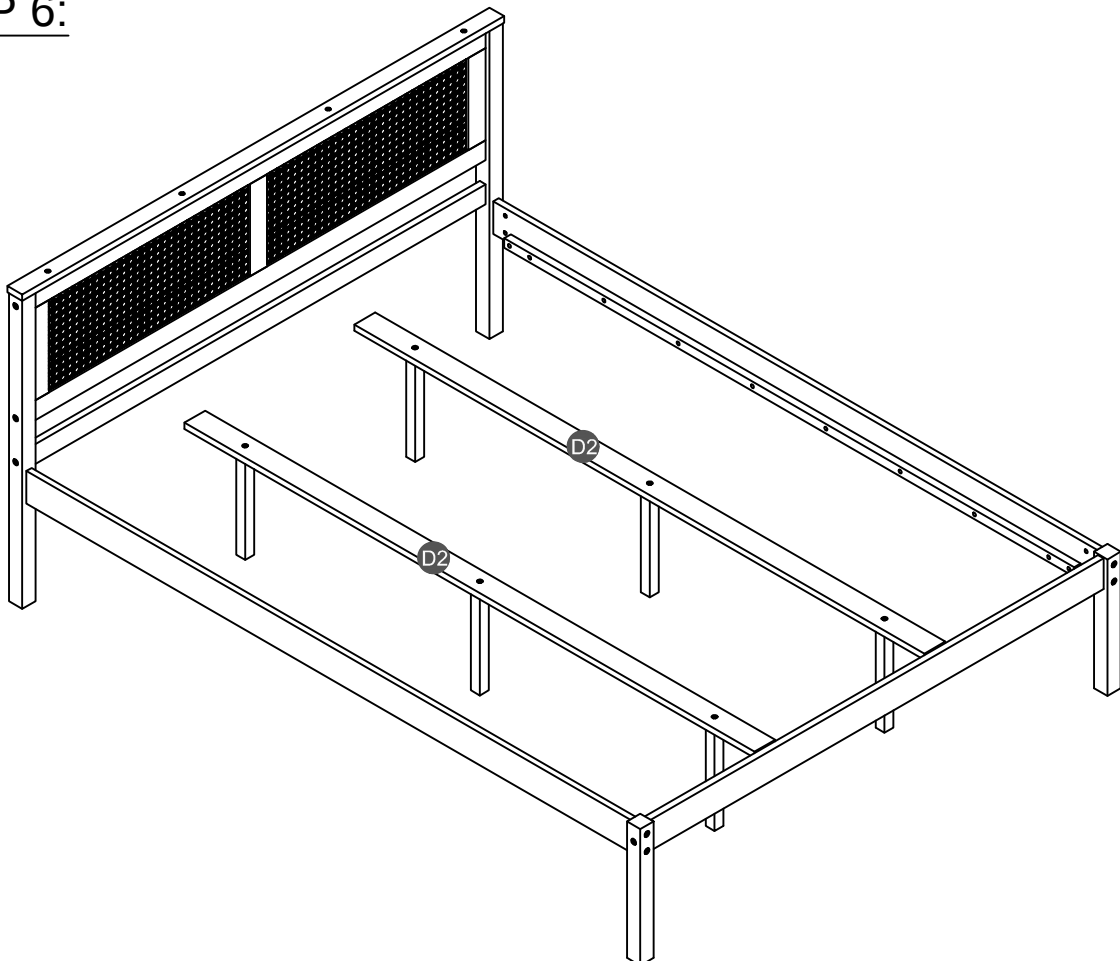STEP 6:



STEP 7:

6



24PCS

