

Decor Wonderland Tilton Collection Installation Guide

Included with your Mirror:


						
MOUNTING PLATE TEMPLATE WITH HOLES	MIRROR	(4) SCREW	(4) WALL ANCHOR	ALLEN WRENCH	(2) MOUNTING PLATE	RIGHT AND LEFT BRACKETS WITH (2) SCREW

Required Tools:

						
3/16" DRILL BIT	SCREW DRIVER	SAFETY GOGGLES	PENCIL	DRILL	LEVEL	HAMMER

Instructions To Hang Your Tilt Mirror:

1. Remove the mounting plate from the bracket back by loosening the screw (See Fig A).
2. Position the mounting template on the wall in the desired location. Using a level, align the template and tape to wall.
3. Use a 3/16" drill bit to drill holes into the template holes, then remove the template from wall. Place anchors into predrilled holes (See Fig B).
4. With mounting plate facing outwards, attach to wall using screws starting with the top hole (that is a horizontal hole See Fig C).
5. Separate the clamp from the base of the mounting bracket (see Fig D).
6. Unscrew (not completely) plastic and metal nuts from back of clamp (See Fig E).
7. With the back of mirror facing you, slide mirror into clamp, and align plastic nut with hole in mirror. Tighten plastic nut making sure the bracket is perfectly parallel to bottom of mirror, then tighten the metal nut (See Fig F). Don't overtighten but should be solid grasp.
8. Attach the mounting bracket back to the clamp. Make sure the Allen key hole is pointing down towards the floor.
9. Holding brackets with both hands guide mirror onto wall plate (see Fig G).
10. While you are holding the brackets and mirror still, your partner tightens the screw using the provided Allen Key (see Fig H).

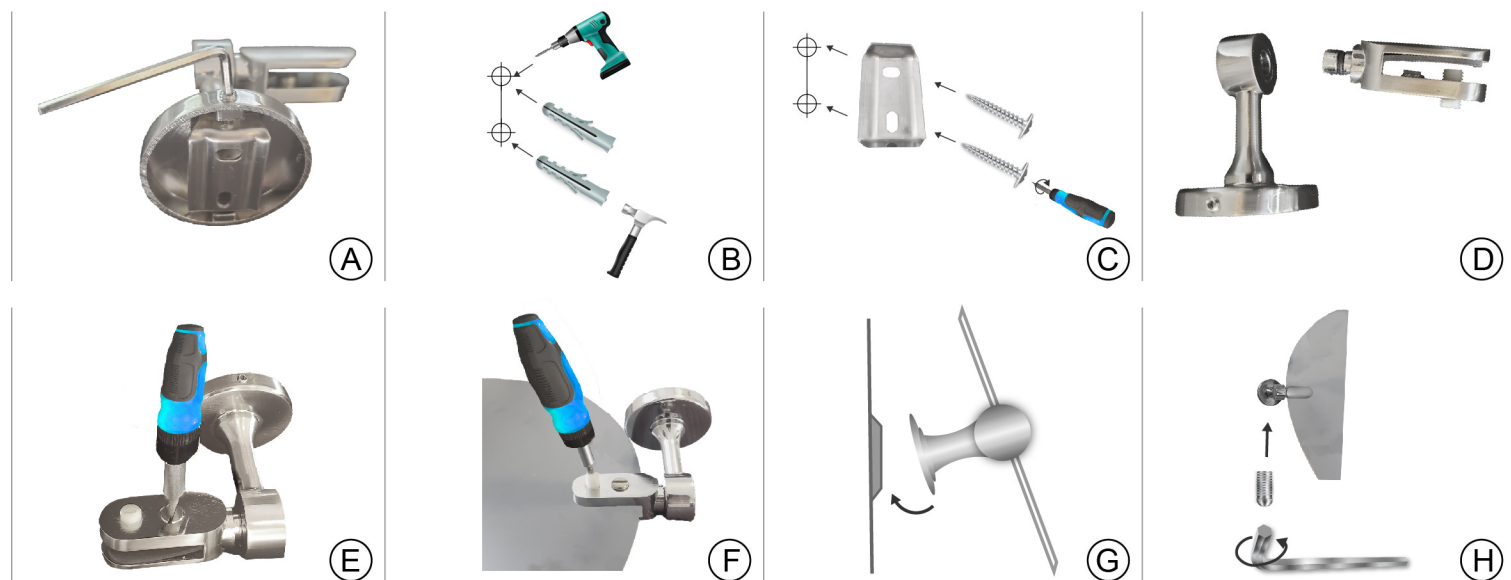

Thank you for purchasing a Decor Wonderland Tilt Mirror. If you need further support please email info@DecorWonderland.com.