

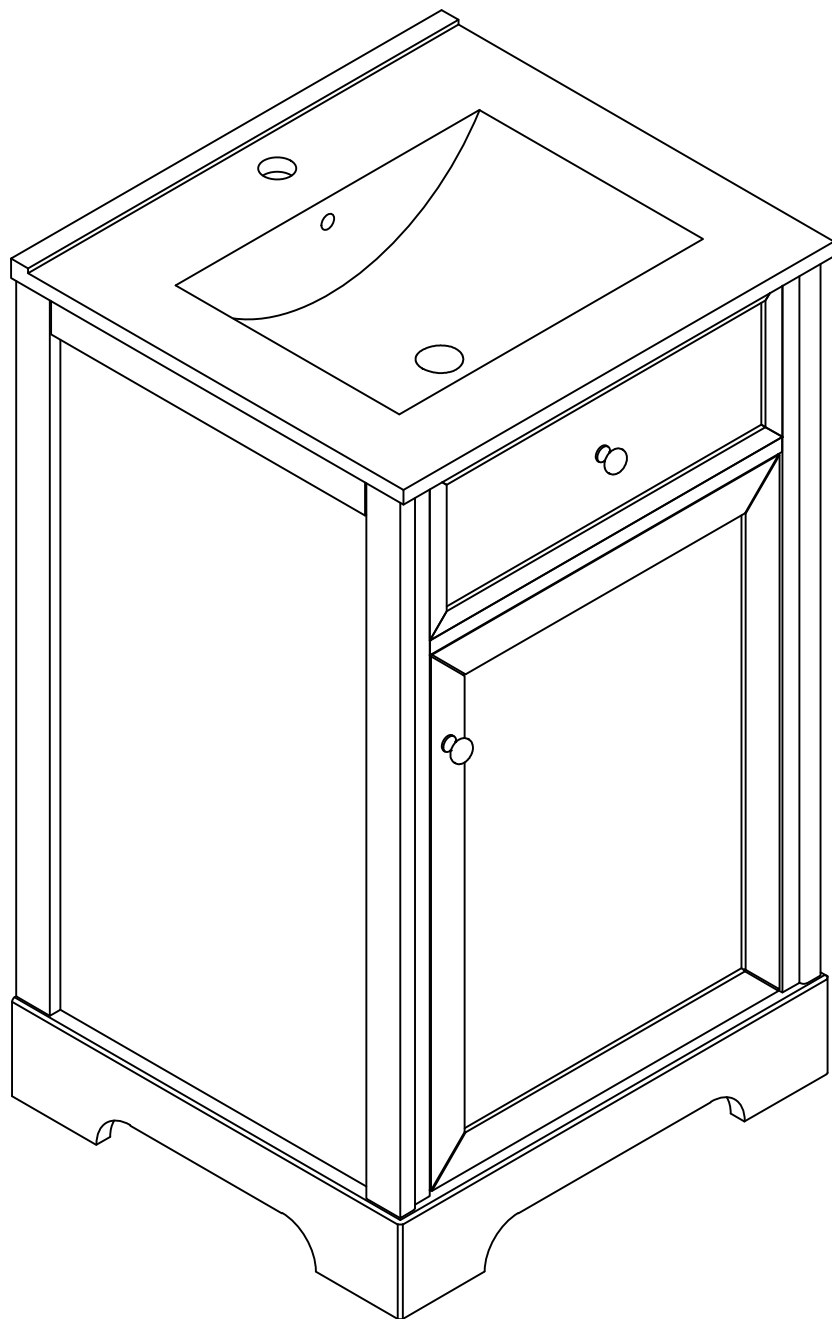
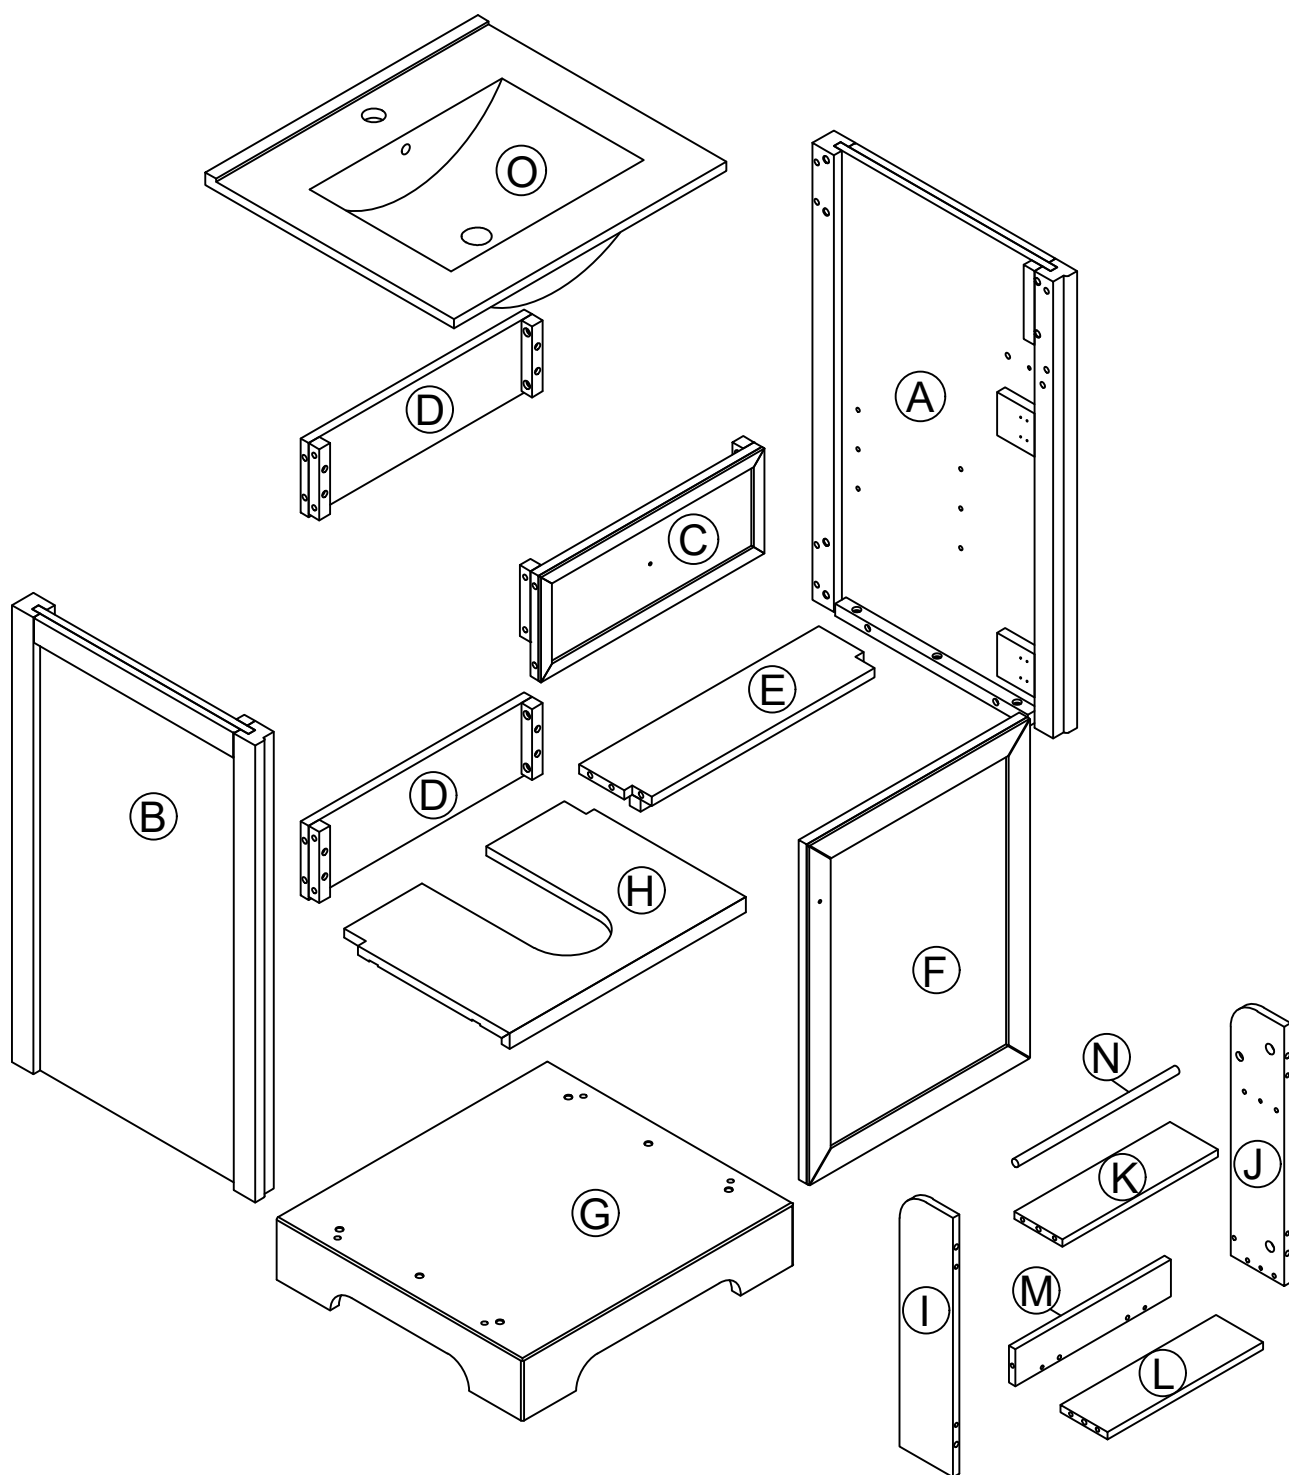
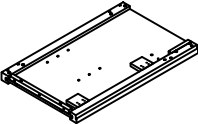
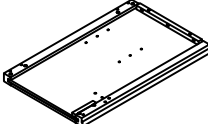
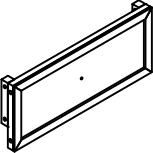
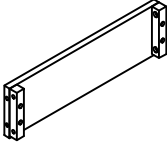
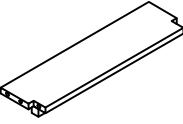

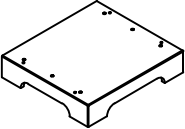




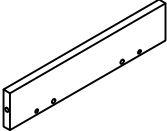


WF531249
N725P218017













PRODUCT PARTS:


A	B	C	D	E	F
					
1PC	1PC	1PC	2PCS	1PC	1PC
G	H	I	J	K	L
					
1PC	1PC	1PCS	1PC	1PCS	1PCS
M	N	O			
					
1PC	1PC	1PC			



HARDWARE:

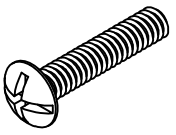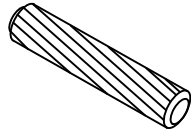①	②	③	④	⑤	⑥
					
1/4"x25mm	Ø8x30mm	Ø6x30mm	Ø6x33mm	Ø15x9mm	
18+1 PCS	20+2PCS	16+1 PCS	12+1 PCS	12+1 PCS	4 PCS
⑦	⑧	⑨	⑩		
					
	Ø4x12mm		5/32"x18mm		
2PCS	12+1PCS	2PCS	2PCS		

STEP 1


④  2pcs
Ø6x33mm

②  4pcs
Ø8x30mm

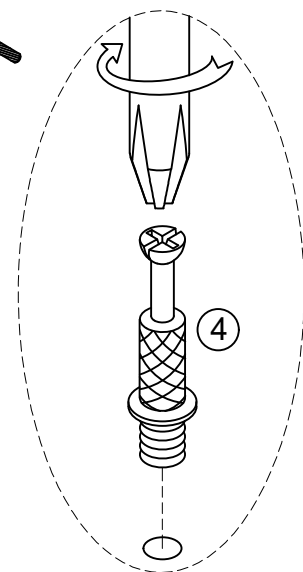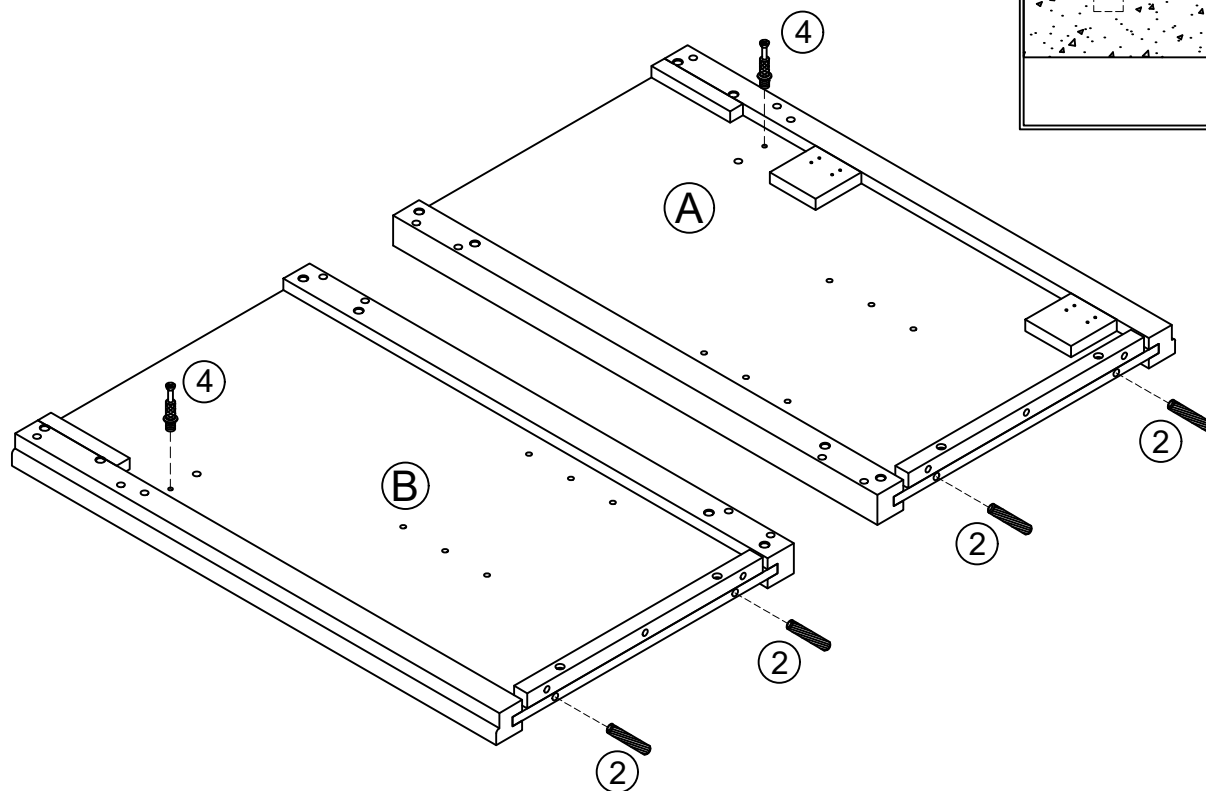

STEP 2



②  16pcs
Ø8x30mm

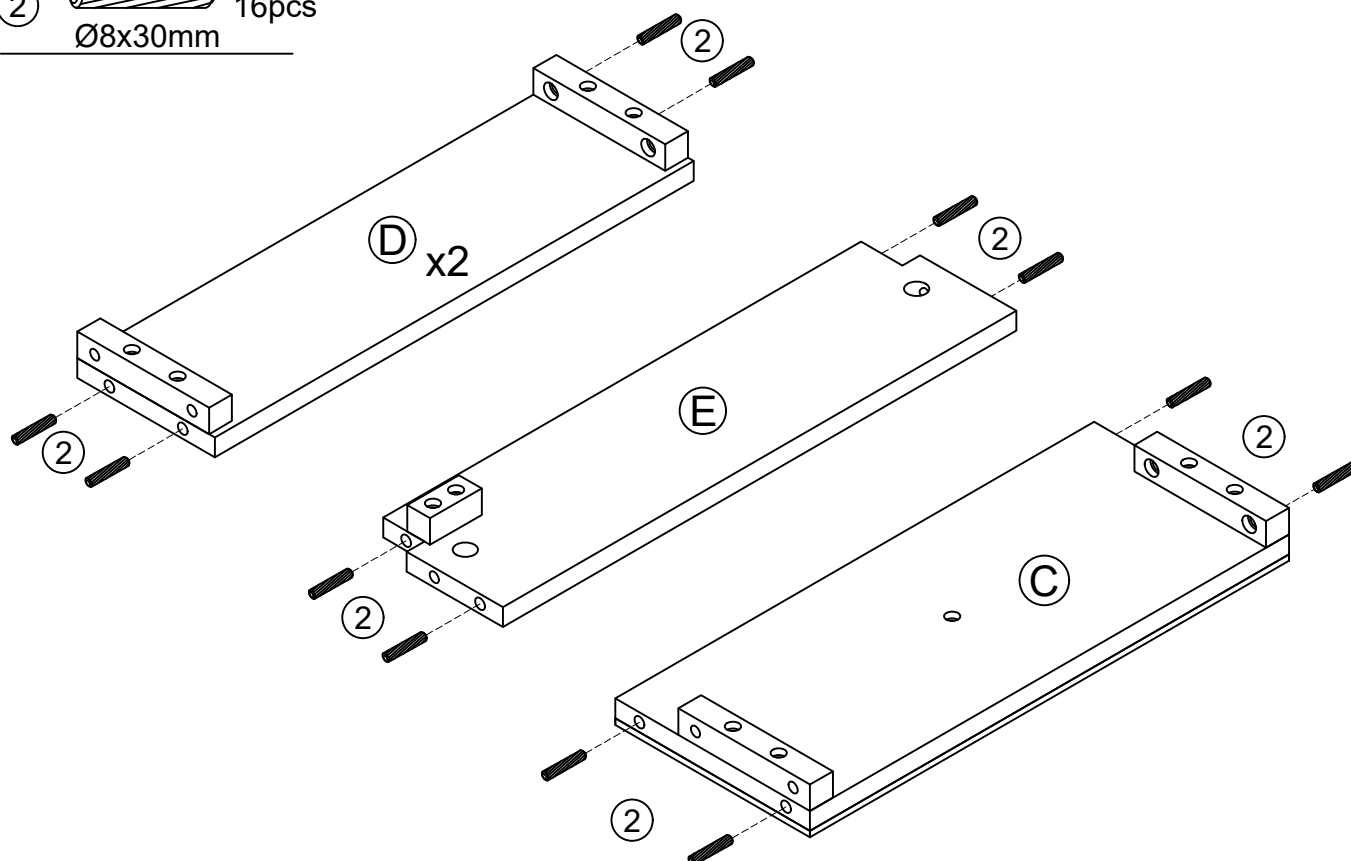

STEP 3

①  6pcs
1/4"x25mm


⑤  1pc
Ø15x9mm

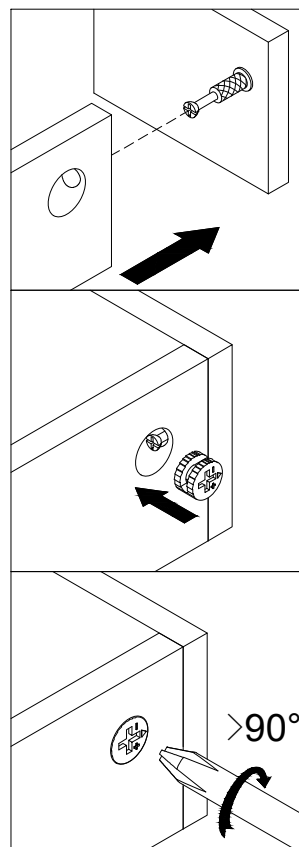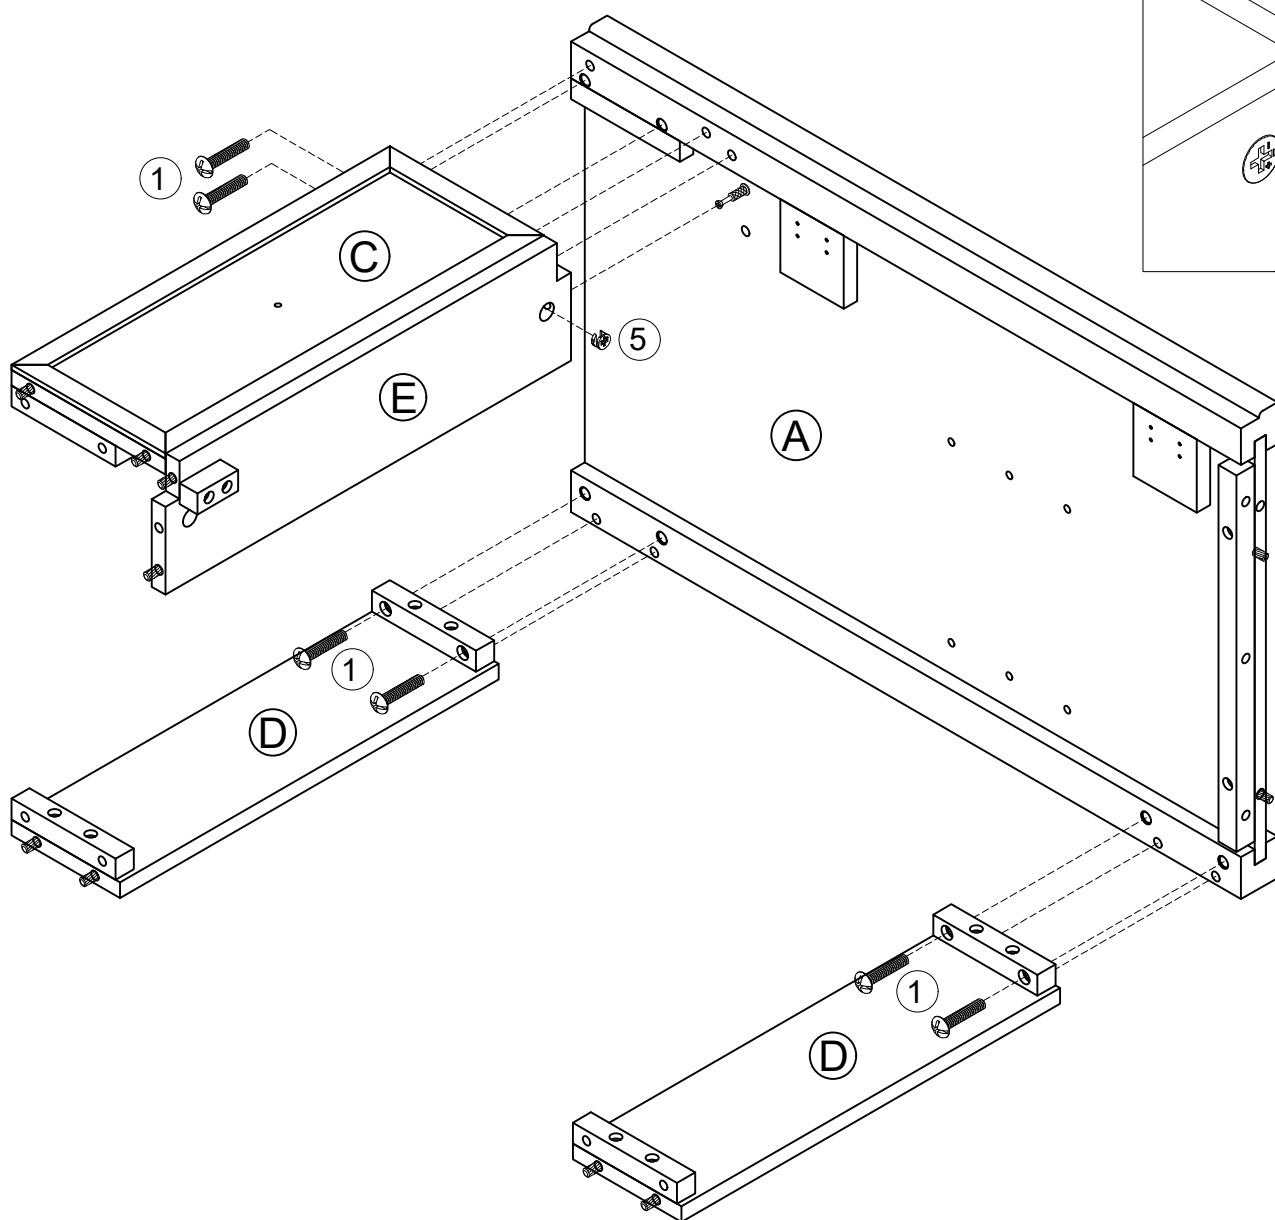

STEP 4


①  6pcs
1/4"x25mm

⑤  1pc
Ø15x9mm

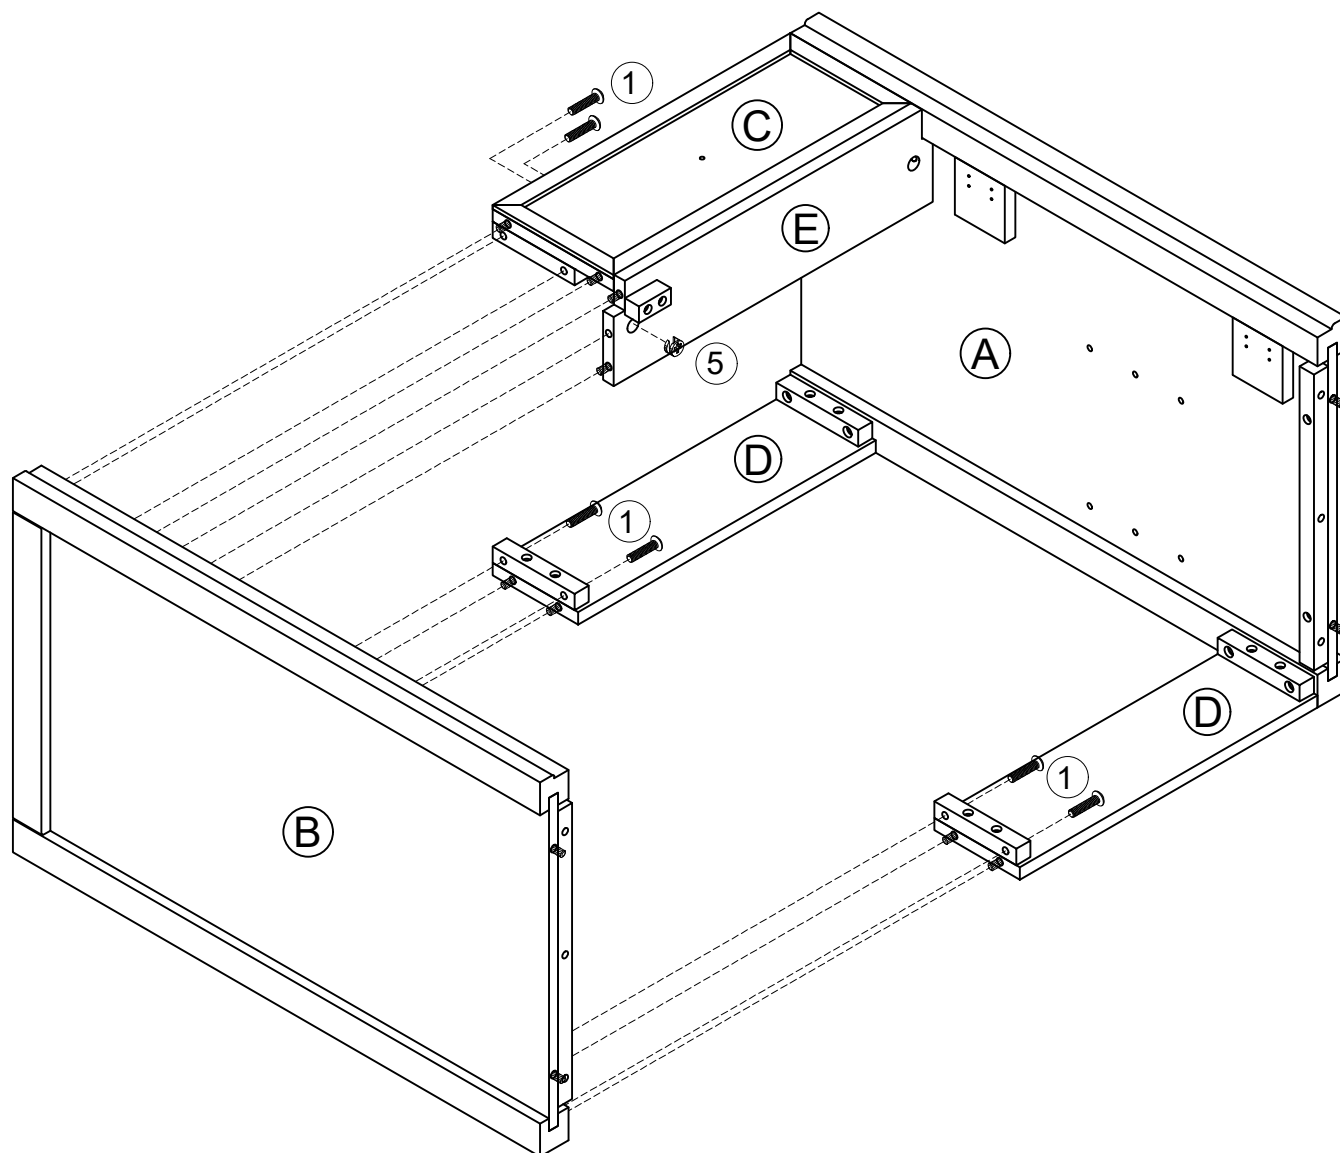

STEP 5


①  6pcs
1/4"x25mm

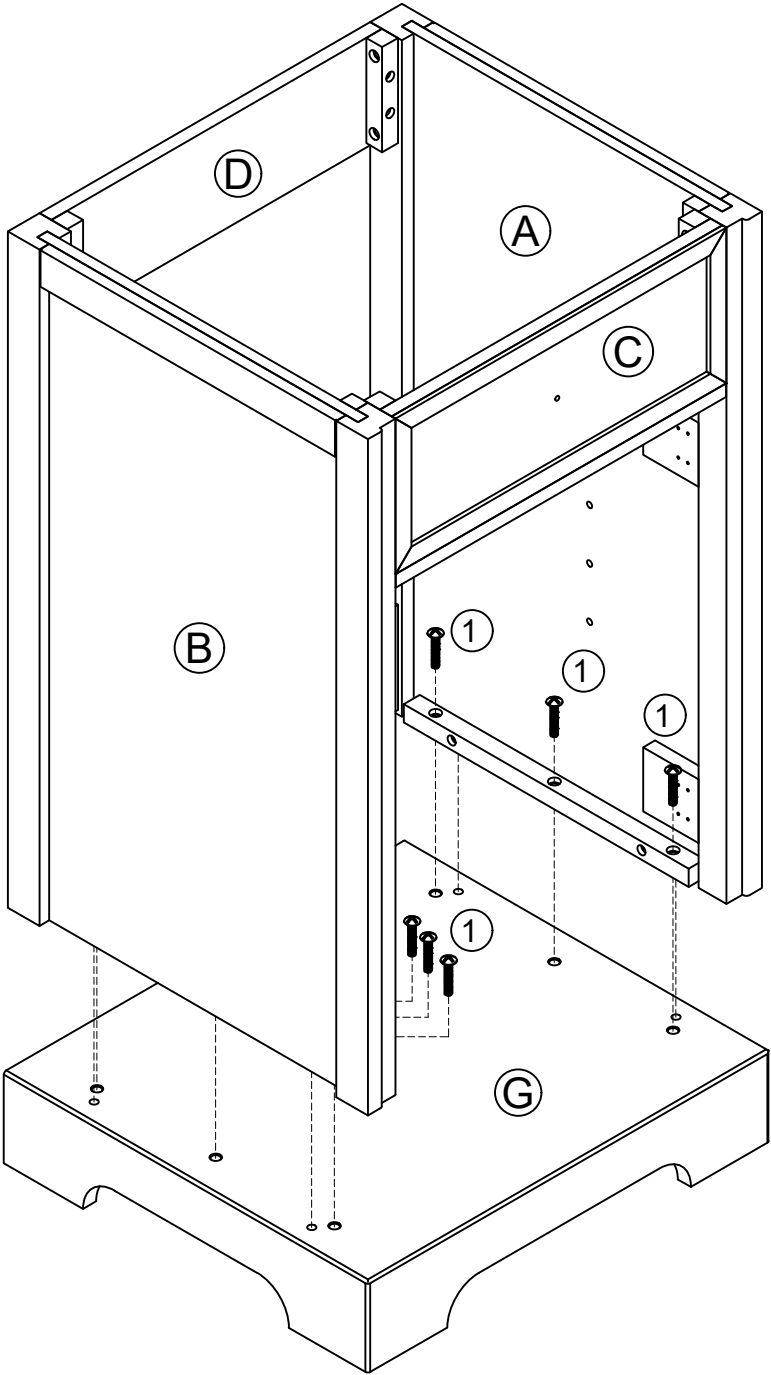

STEP 6

③  12pcs
Ø6x30mm


④  2pcs
Ø6x33mm

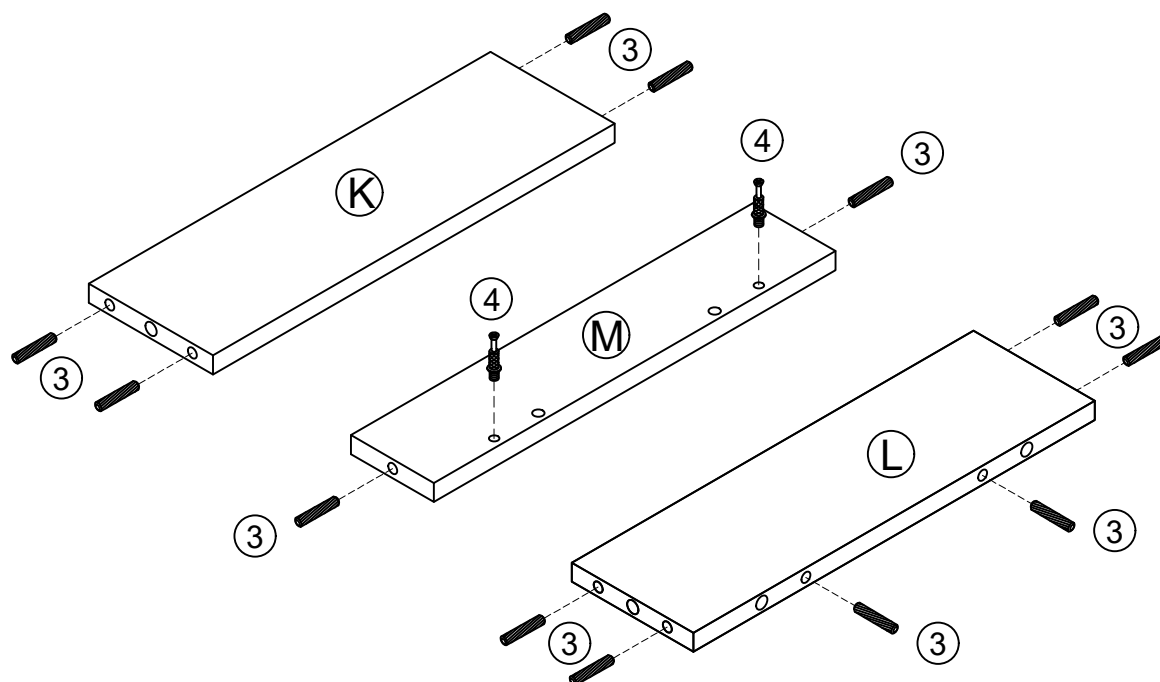

STEP 7


③  4pcs
Ø6x30mm

④  4pcs
Ø6x33mm

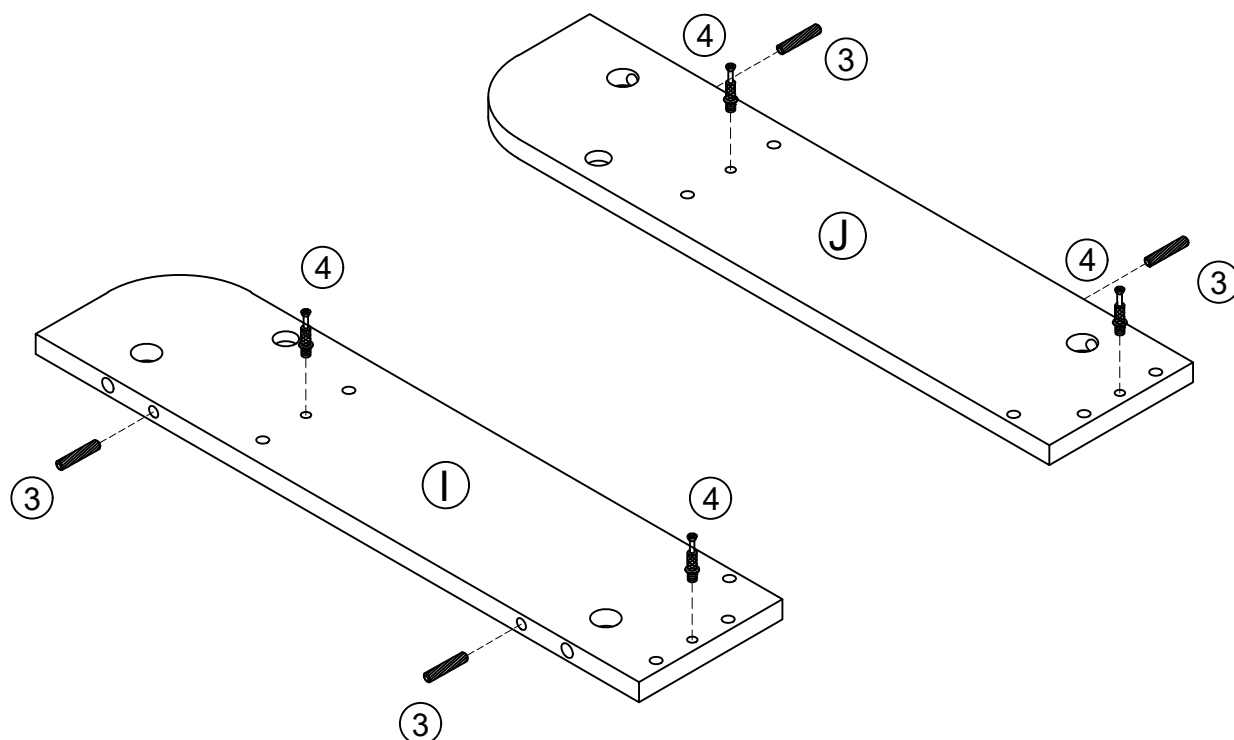



STEP 8

⑤  2pc
Ø15x9mm

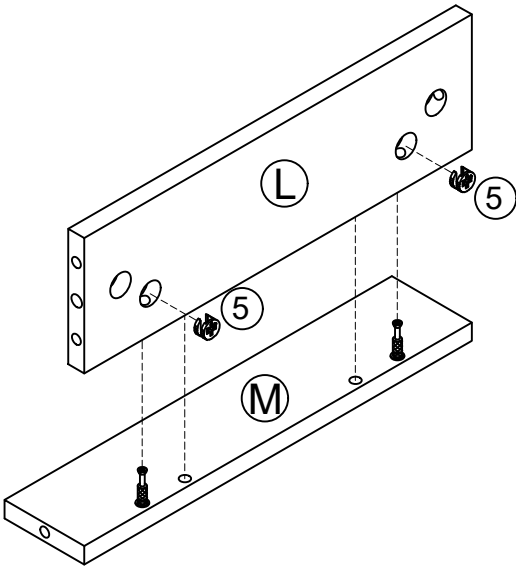


STEP 9

④  4pcs
Ø6x33mm

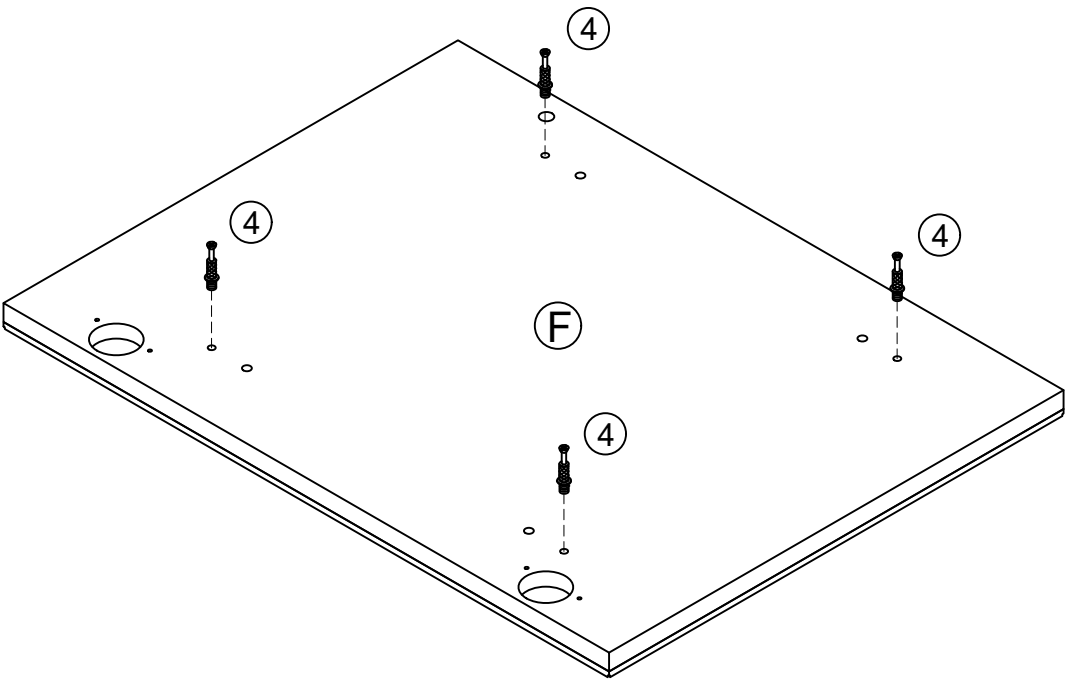


STEP 10

⑤  4pc
Ø15x9mm

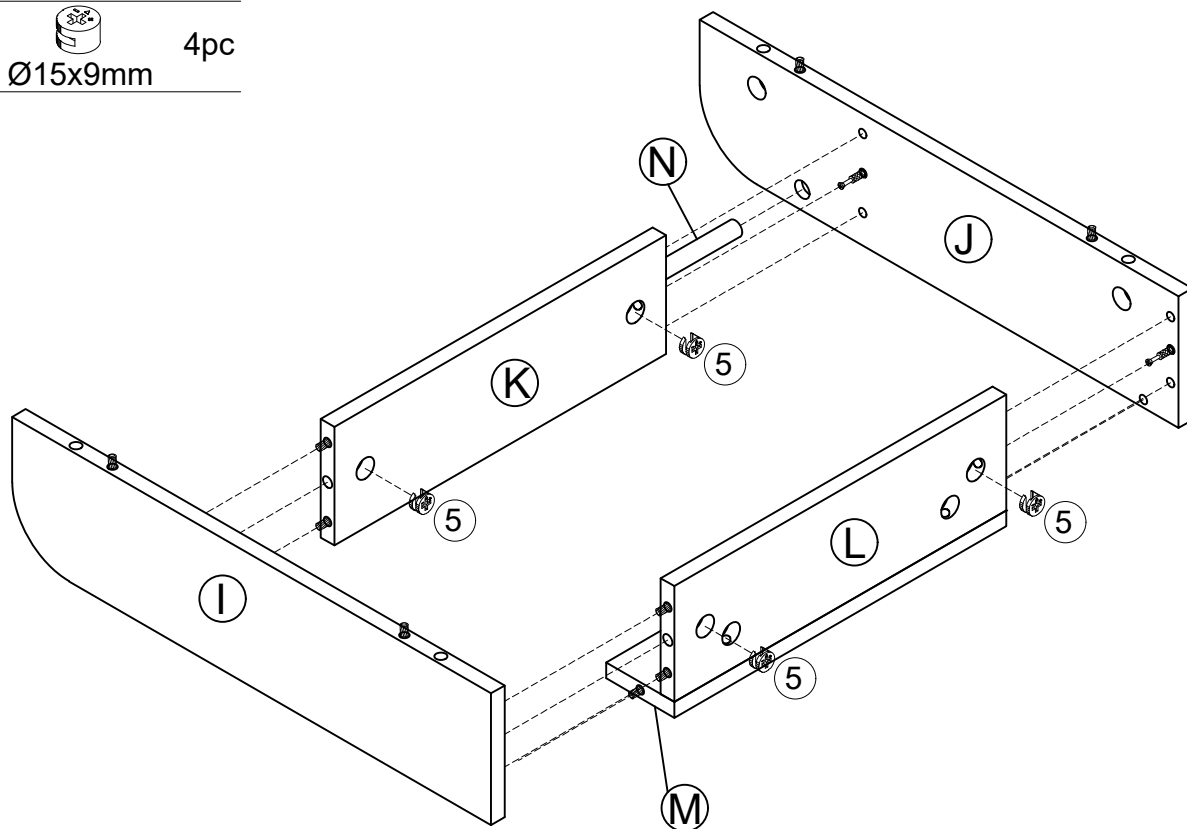

STEP 11

⑤  4pc
Ø15x9mm

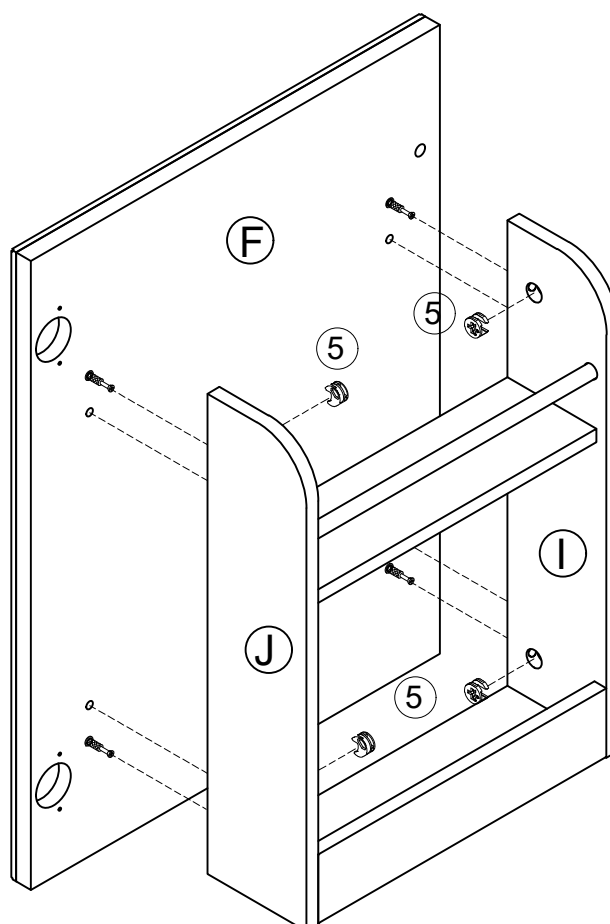

STEP 12


- ⑦



2pcs
- ⑧



4pcs
Ø4x12mm

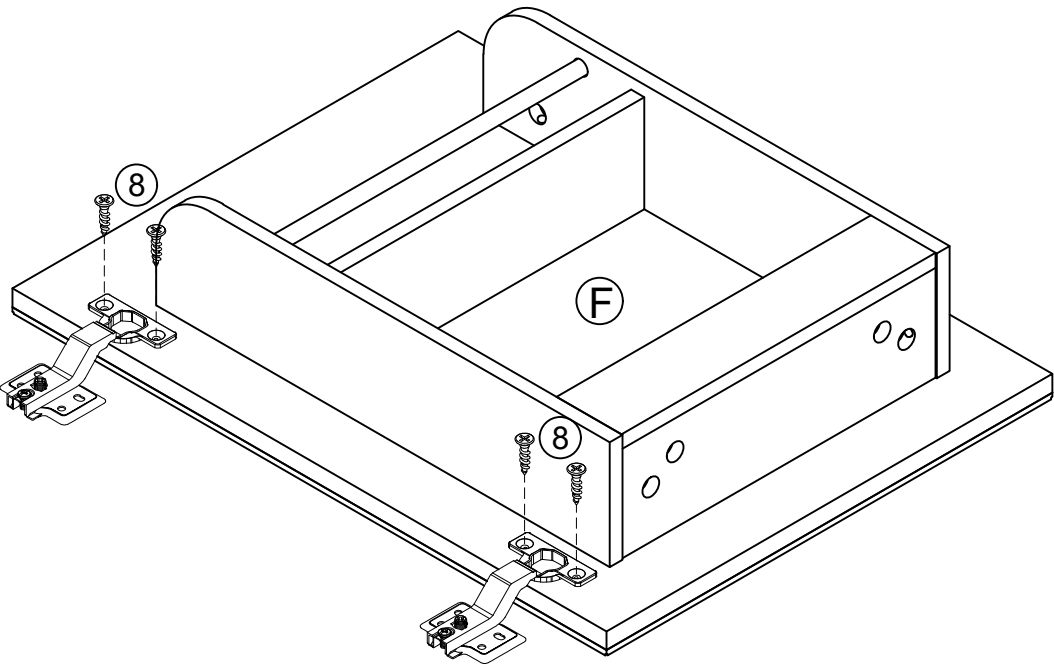


STEP 13

- ⑥



4pcs





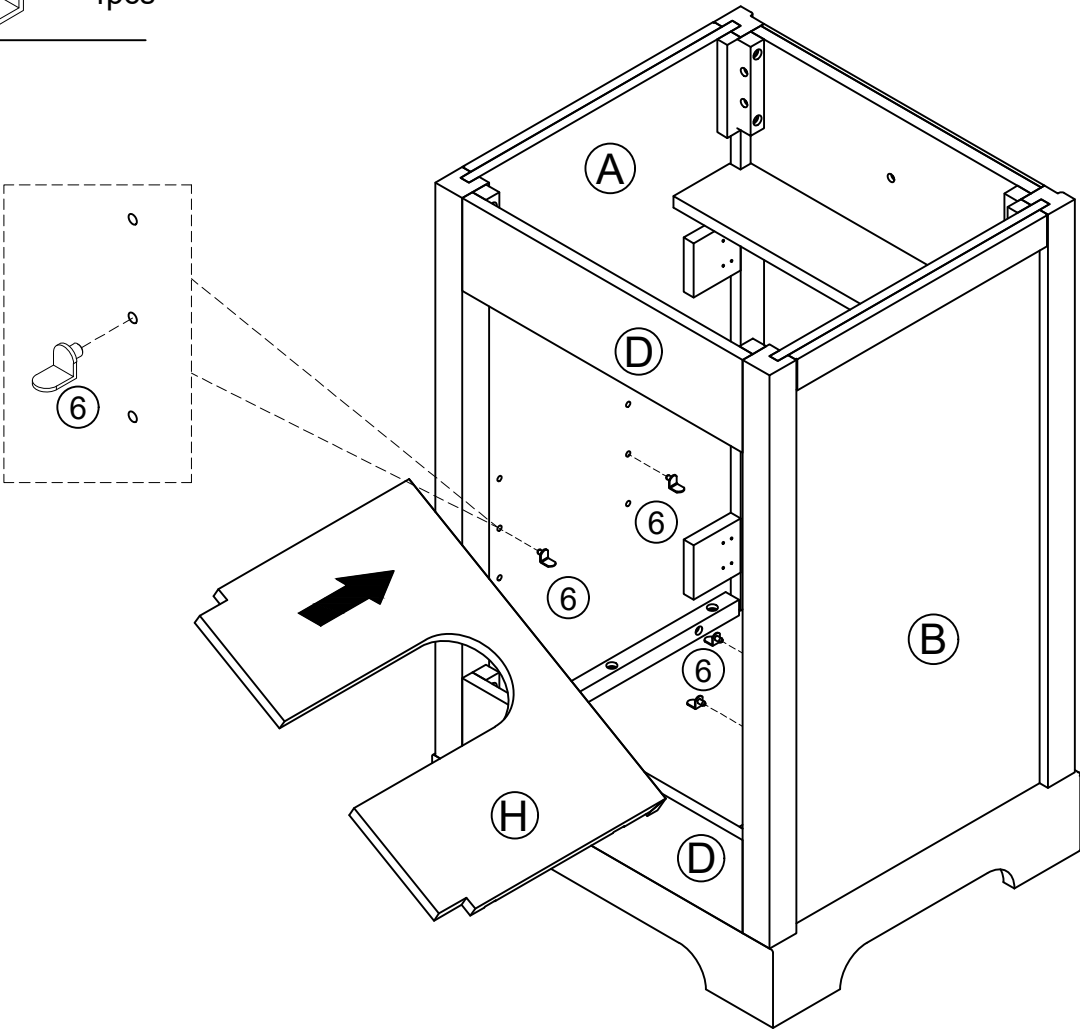


STEP 14




Three-way adjustable hinge for perfectly aligned doors


1. TO ADJUST DOOR FORWARD OR BACKWARD.
2. TO ADJUST DOOR TO RIGHT OR TO LEFT.
3. TO ADJUST DOOR UP OR DOWN.

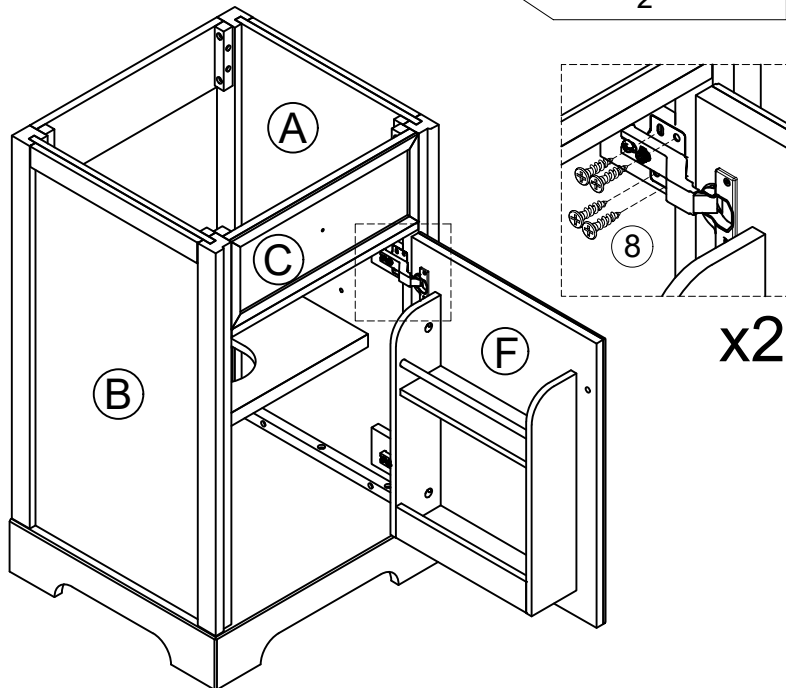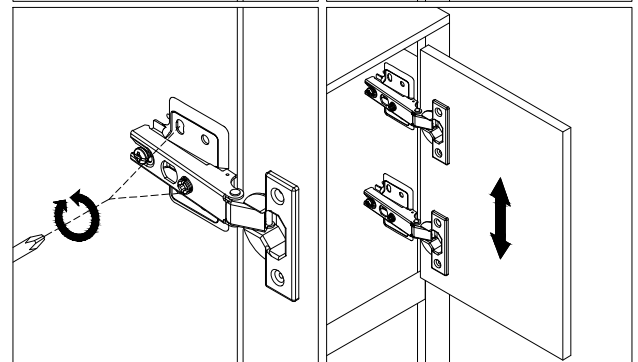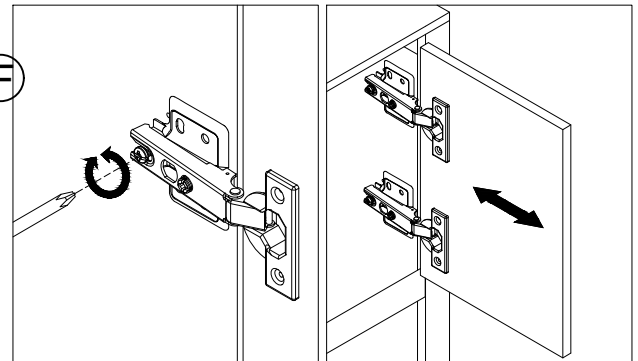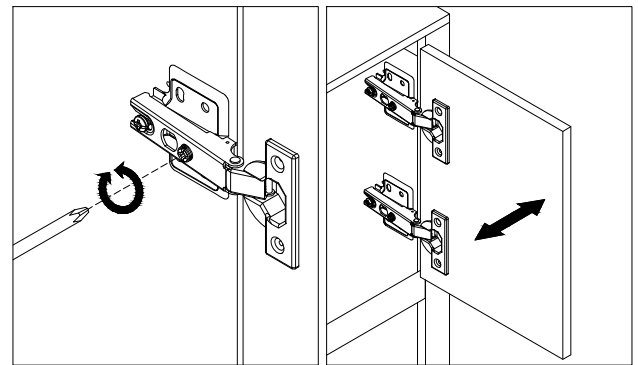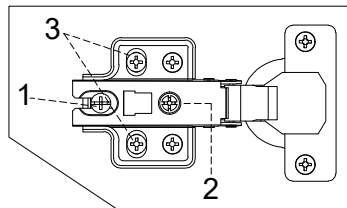

STEP 15

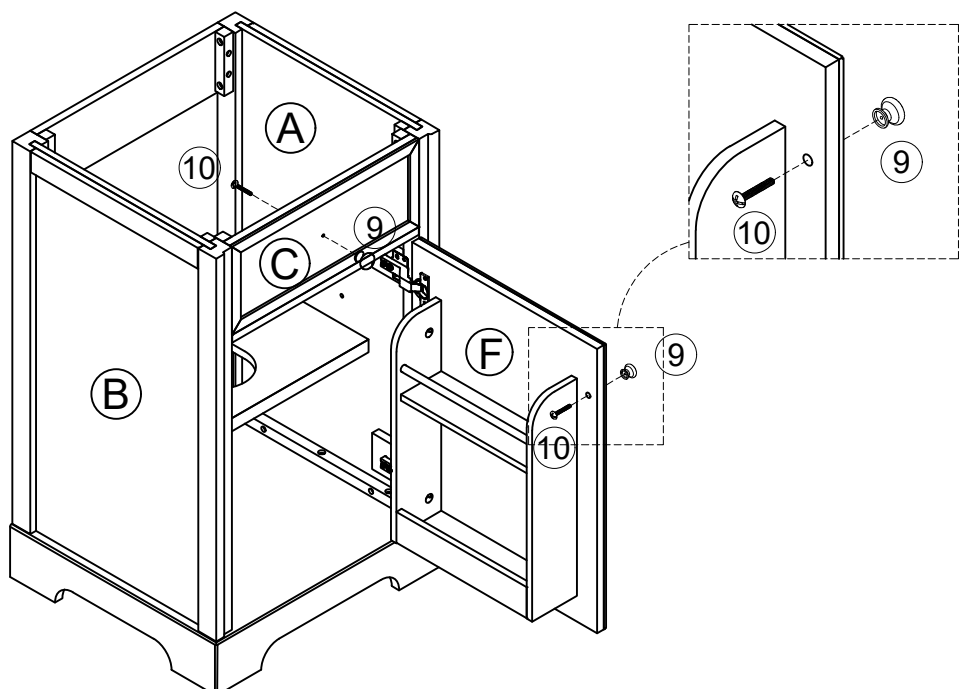

STEP 16

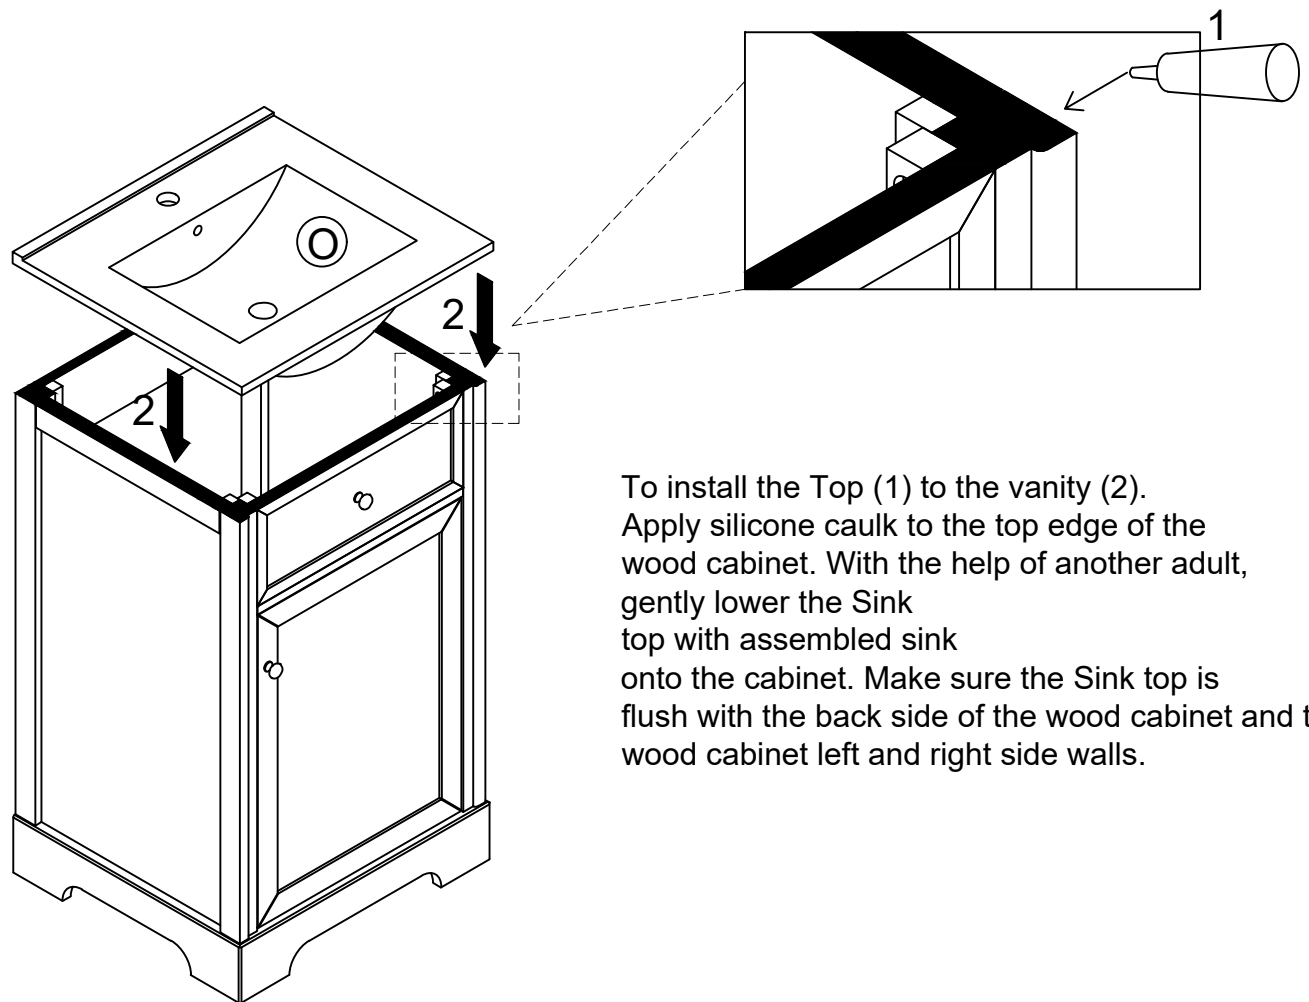

To install the Top (1) to the vanity (2). Apply silicone caulk to the top edge of the wood cabinet. With the help of another adult, gently lower the Sink top with assembled sink onto the cabinet. Make sure the Sink top is flush with the back side of the wood cabinet and the wood cabinet left and right side walls.

STEP 17

