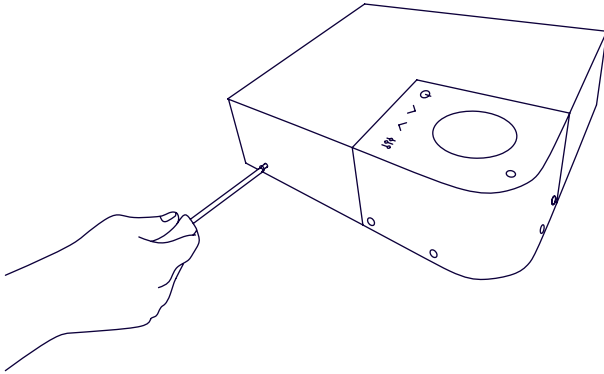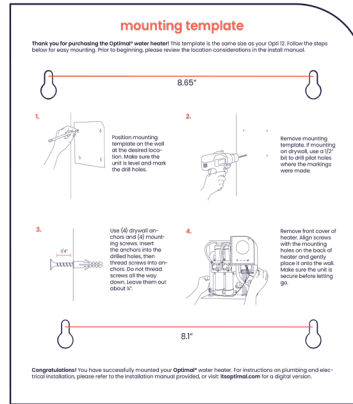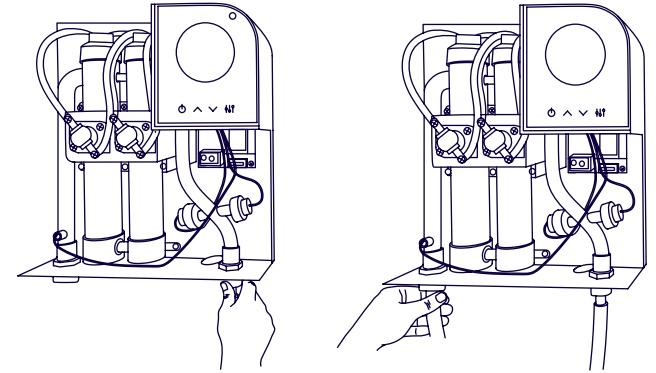# install instructions

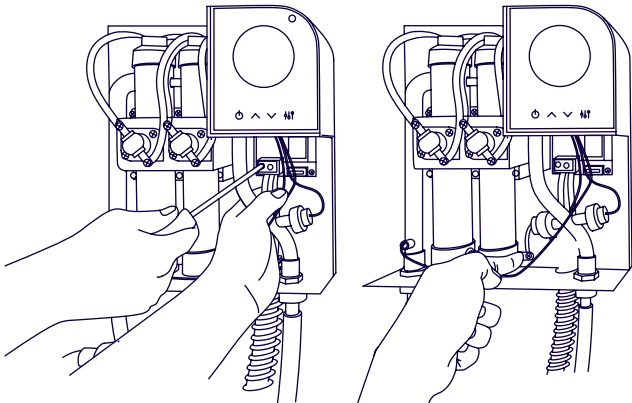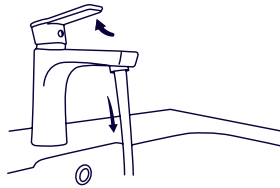**1.** remove front cover

2. follow instructions on mounting template or visit **itsoptimal.com** for digital version
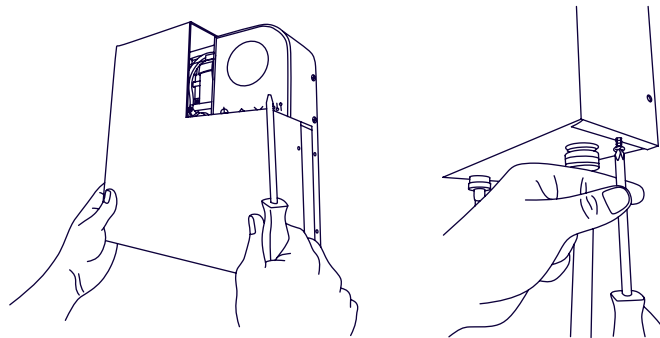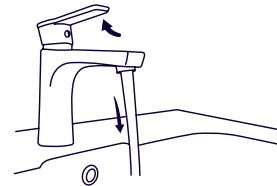

3. connect cold and hot water lines

4. run faucets to purge air, secure wire leads to termial block, and ground

5. run faucets to purge air, and then screw front cover back on

6. turn electrical breaker back on