

88 5008 611 Monarch Buffet

IMPORTANT NOTE


Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occurring to the wood parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

*Home
Styles*



Part List

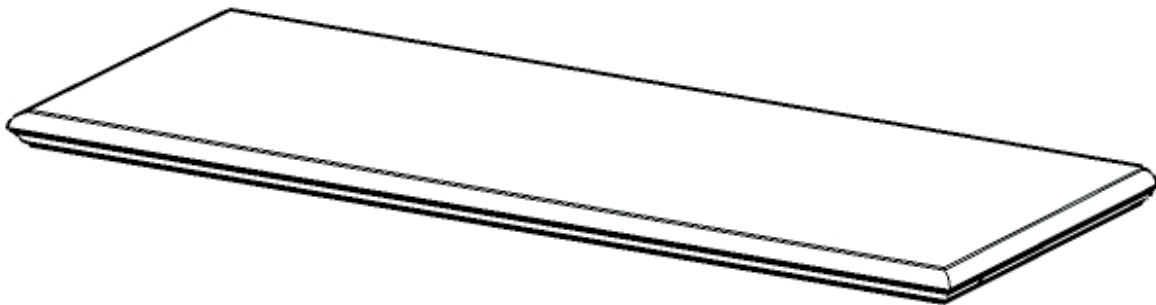

A.
Top
1 pc.

For assembly see instructions in carton 88 5008 612

Tools required for assembly : **Phillips** screwdriver

Tools recommended for assembly : Level

Home Styles Consumer Assistance: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319

88 5008 612 Monarch Buffet

IMPORTANT NOTE


Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occurring to the wood parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.


Home
Styles



Part List

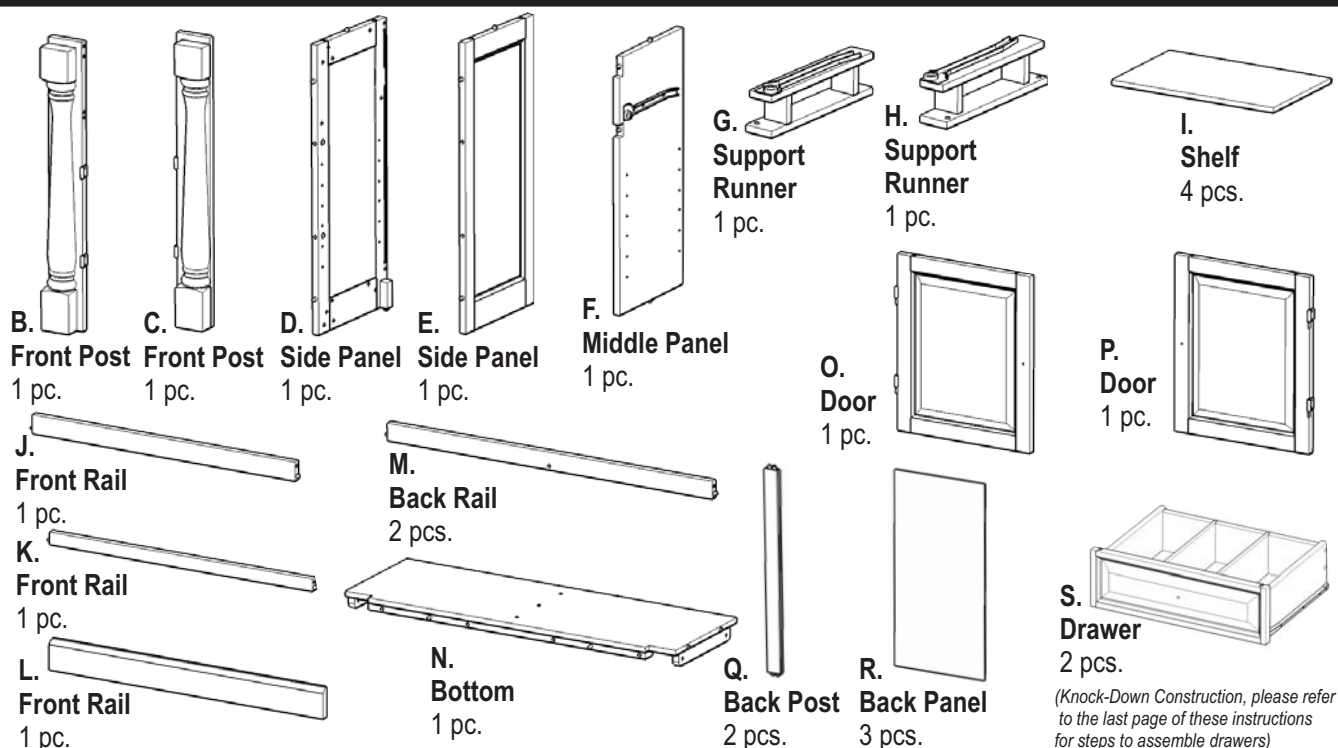

Hardware List

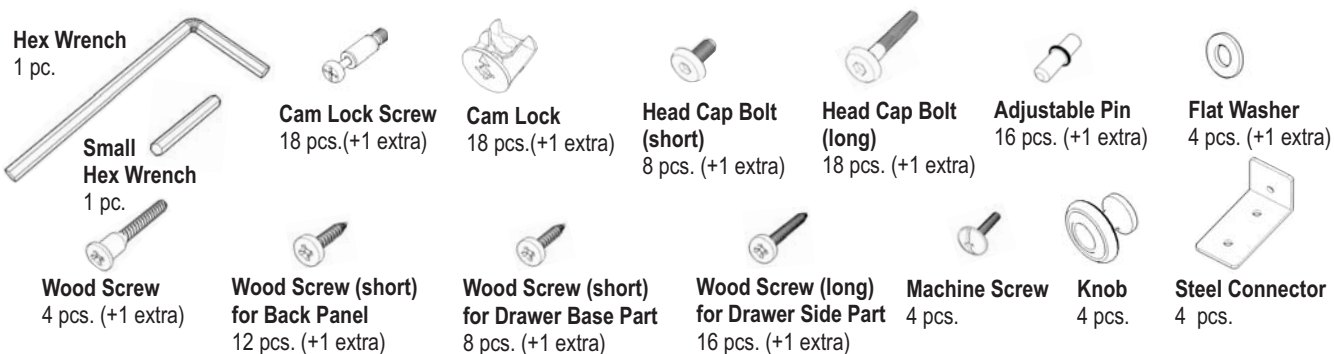

Also need Part in carton 88 5008 611

Tools required for assembly : **Phillips** screwdriver

Tools recommended for assembly : Level

Home Styles Consumer Assistance: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319

IMPORTANT

- * Do not tighten up all the screws until each part is properly assembled.
- * You should keep Hex Wrench in a safe place as you may need to tighten up the Head Cap Bolts in the future.
- * After assembly, item must be level to work properly. Use the included adjustable levelers to level.
- * Use a soft cloth between these parts and the floor.

STEP 1

Insert Cam Lock Screws into the pre-drilled holes of Front Post (B), (C) and Side Panels (D), (E) and Front Rail (J), (K) and (L). (see Figure 1)

Attach Steel Connectors to Side Panel (D) and (E) with Head Cap Bolts (short).

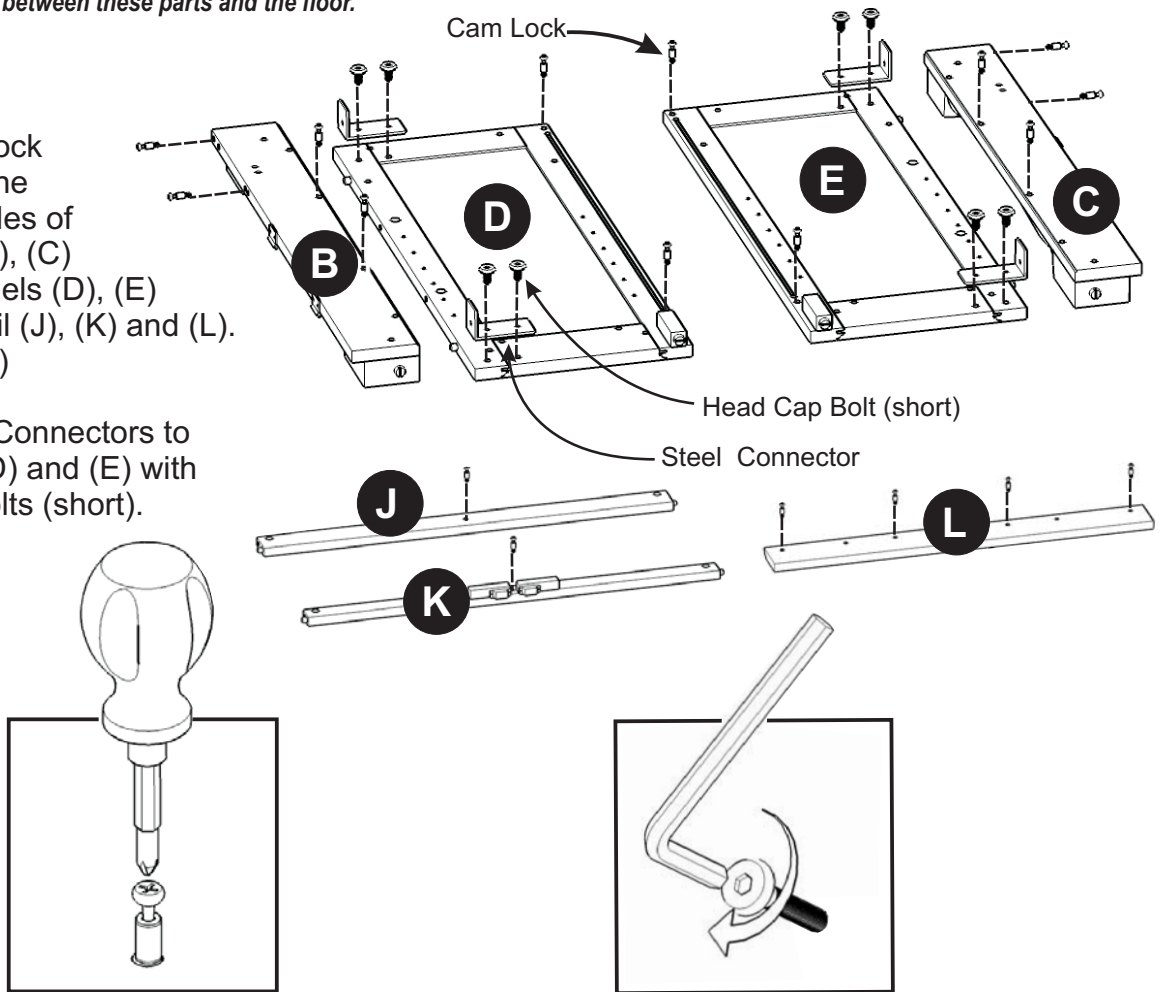



Figure 1

Figure 2

STEP 2

Attach Front Post (B) to Side Panel (D) and Front Post (C) to Side Panel (E) with Cam Locks and Head Cap Bolts (long). (see Figure 2)

Attach Support Runner (G) to Side Panel (D) and Support Runner (H) to Side Panel (E) with Head Cap Bolts (long).

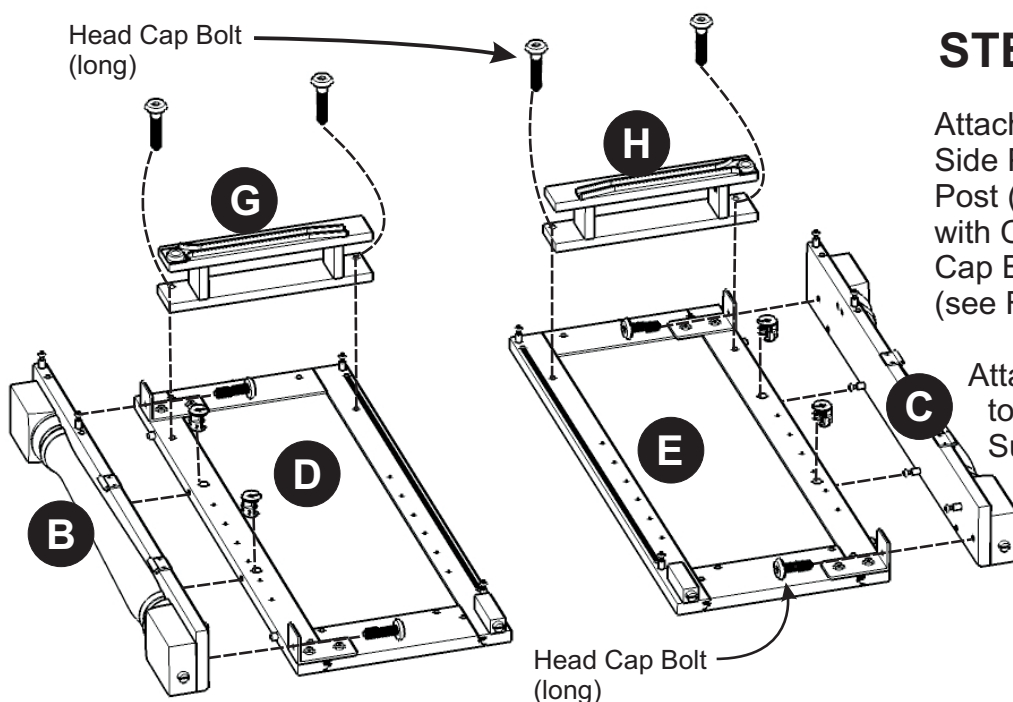

STEP 3

Attach Bottom (N) to Side Panel Unit (D) with Head Cap Bolts (long).

Attach Back Rail (M) to unit using a Cam Lock. (see Figure 3)

Attach Back Posts (Q) to Back Rail (M) and slide Back Panels (R) into place.

Attach Back Rail (M) to the unit using a Cam Lock.

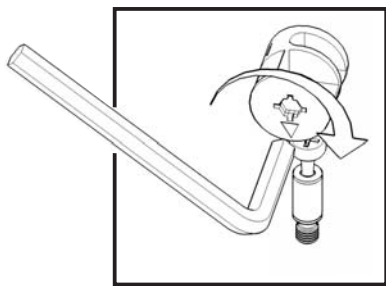
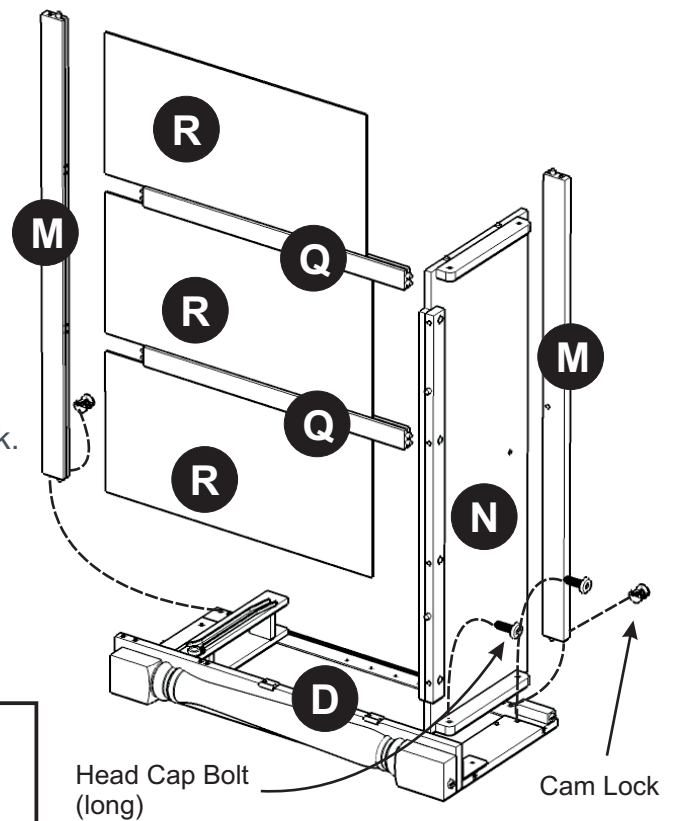


Figure 3


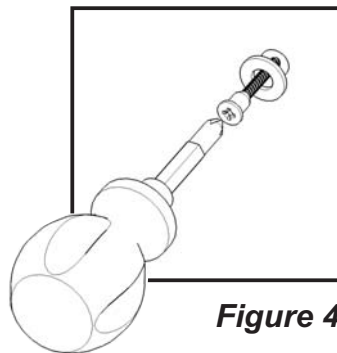


Figure 4

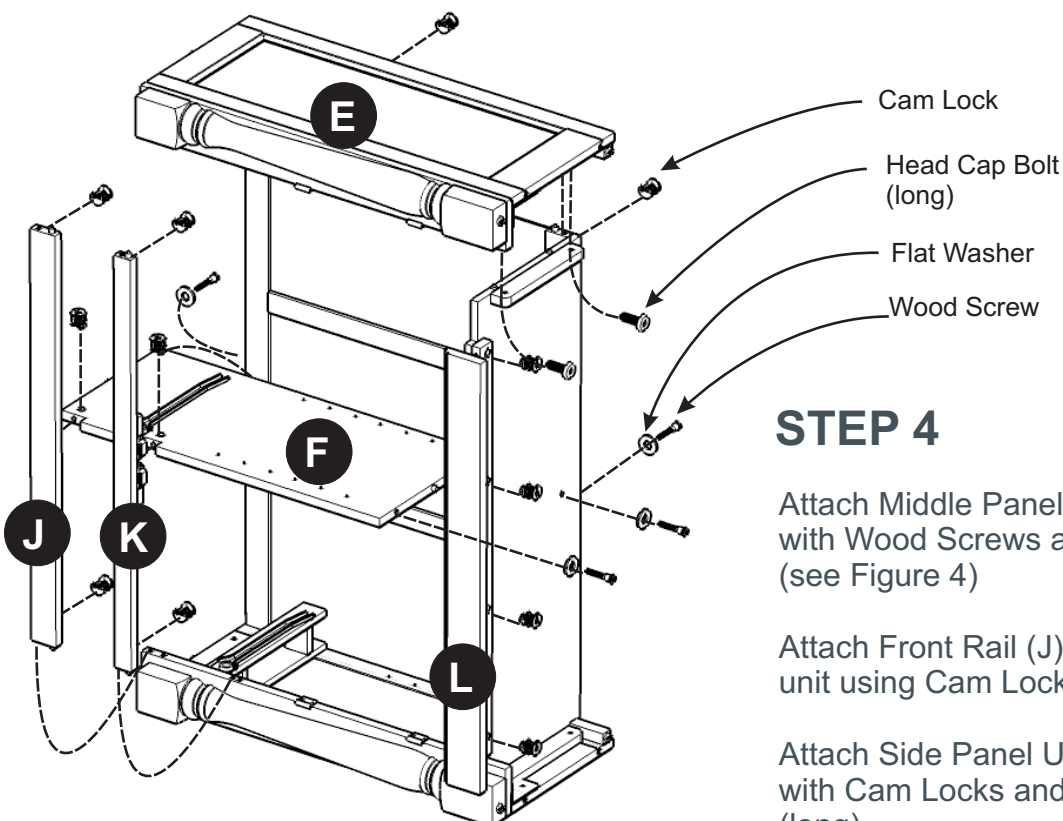

STEP 4

Attach Middle Panel (F) to the unit with Wood Screws and Flat Washers. (see Figure 4)

Attach Front Rail (J), (K) and (L) to the unit using Cam Locks.

Attach Side Panel Unit (E) to the unit with Cam Locks and Head Cap Bolts (long).

STEP 5

Turn the unit to its' upright position.

Place Top (A) onto unit and attach with Head Cap Bolts (long).

Insert Adjustable Pins into side panels and middle panel. Place Shelves (I) into position.

Slide Drawers (S) into position.

Attach Doors (O) and (P) to the side panels by sliding the door lift hinges into the side panel lift hinges. (see Figure 5)

Assemble Pull Handles to Door (O) and (P) with Machine Screws. (see Figure 6)

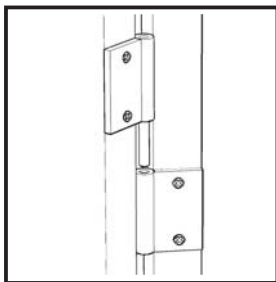
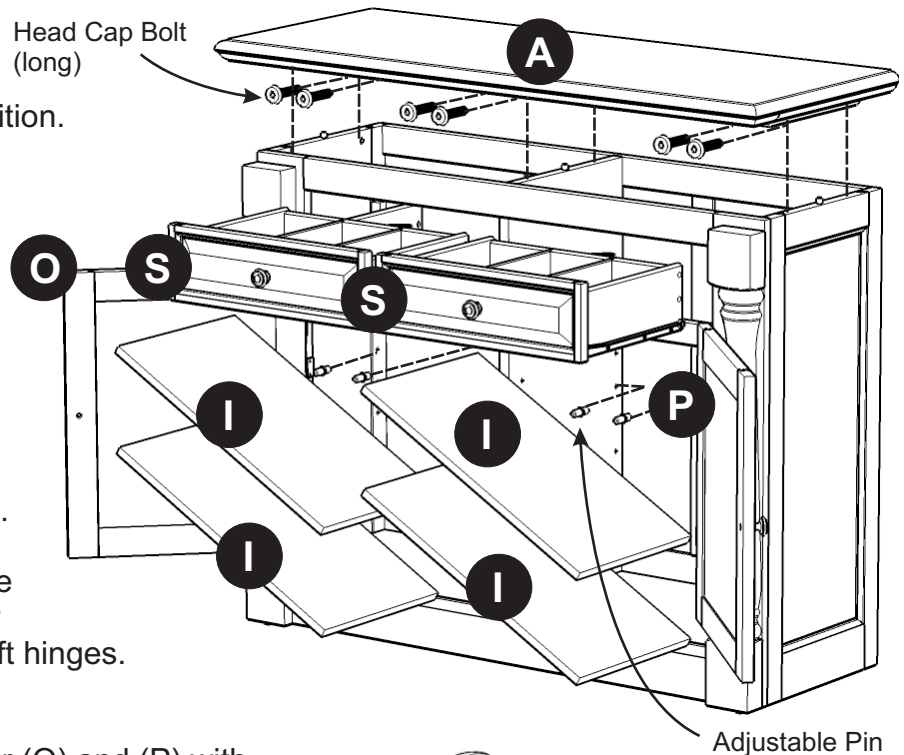


Figure 5

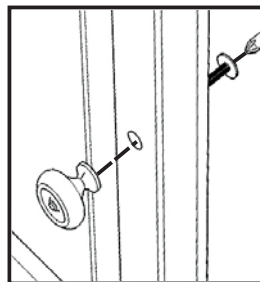


Figure 6

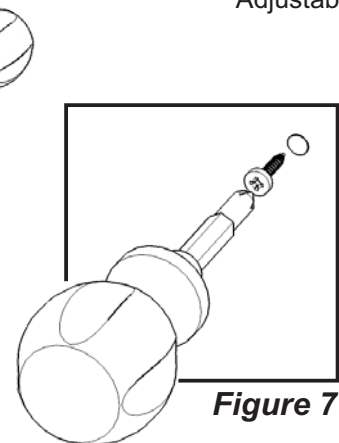



Figure 7

STEP 6

To level the unit, adjust the adjustable levelers on the bottom of unit. (see Figure 8)

Insert 12X Wood Screws from the back of the unit. (see Figure 7)

Note: Please make sure unit is level before tightening these screws.

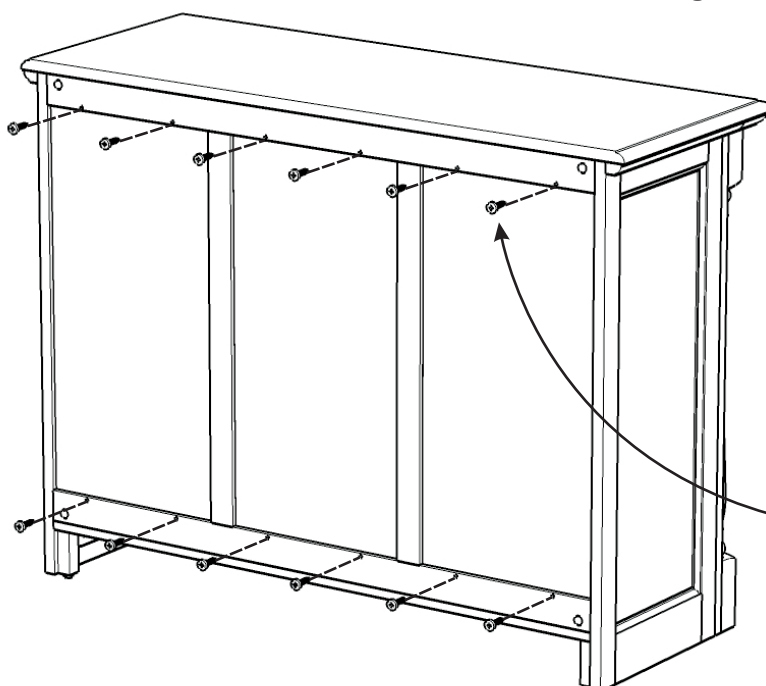

Wood Screw (short) for Back Panel


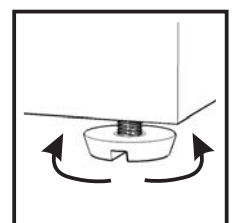


Figure 8

Drawer (S)

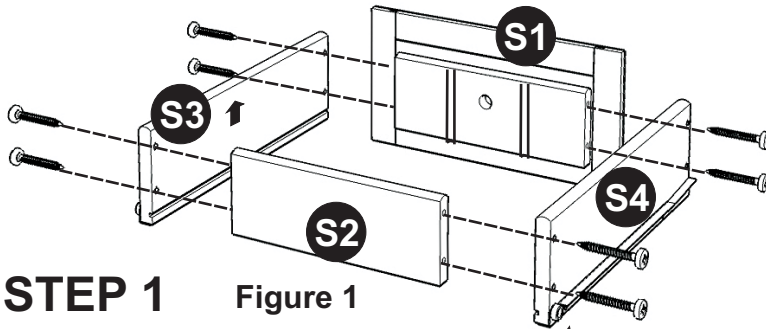

STEP 1 Figure 1

Attach S1 to S3 and S4, using a Phillips screwdriver and long wood screws (4X), tighten halfway.

Attach S2 to S3 and S4 using long wood screws (4X), tighten halfway. (see Figure 1)

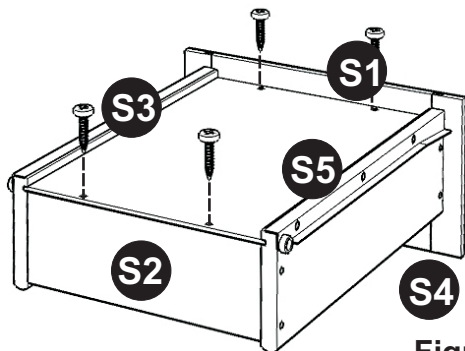


Figure 3


STEP 3

Insert short wood screws (4X) into the pre-drilled holes in S5 and tighten. (see Figure 3)

STEP 4

Assemble Pull Handle with machine screws. (see Figure 4)

Figure 4

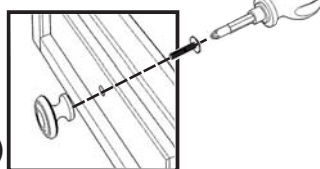

Tighten all screws used in drawer assembly.

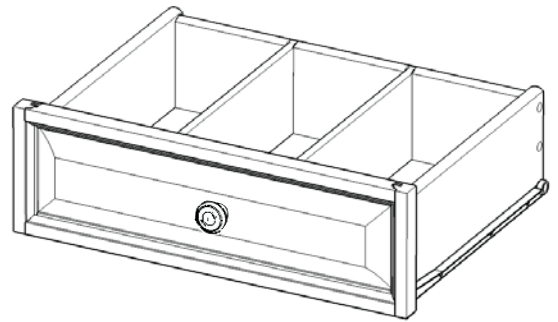


Figure 2

STEP 2

Slide S5 into the grooves in S3 and S4. Be sure to push S5 all the way forward so it meets S1. (see Figure 2)


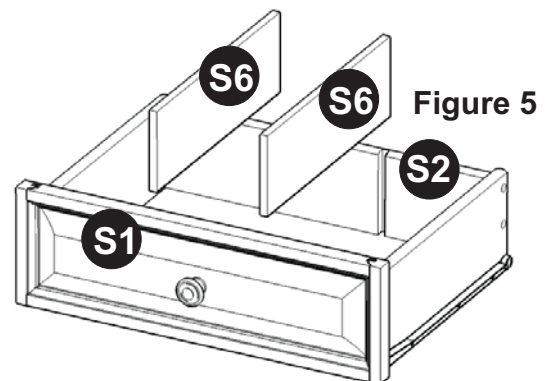


Figure 5


STEP 5

Insert S6 into grooves in S1 and S2. (see Figure 2)


Part List

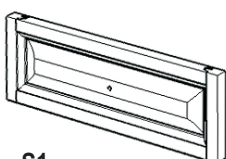


S1.
Front Part
2 pcs.

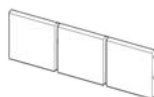

S2.
Back Part
2 pcs.

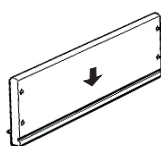


S3.
Side Part
2 pcs.

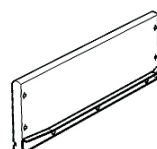

S4.
Side Part
2 pcs.



S5.
Base Part
2 pcs.

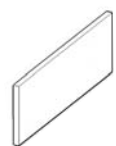

S6.
Divider
4 pcs.