
ASSEMBLY AND INSTALLATION INSTRUCTIONS

ED-OPU090

WARNING: BE SURE TO SHUT OFF POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE INSTALLING OR SERVICING THIS FIXTURE.

NOTE: 1. Before installing, consult local electrical codes for wiring and grounding requirements.

2. READ AND SAVE THIS INSTRUCTION.

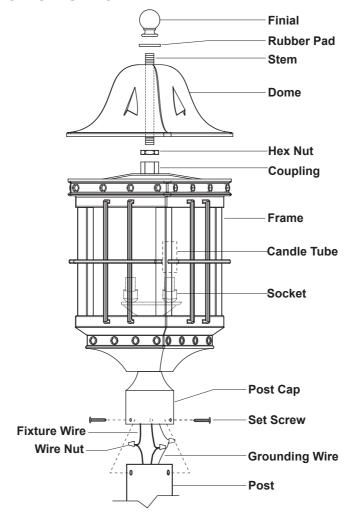

- 1. Pull out the wires and grounding wire from the post. Make wire connections using the wire nuts:
 - ---The black wire from the fixture to the black wire from the post.
 - ---The white wire from the fixture to the white wire from the post.
 - ---The grounding wire from the fixture to the grounding wire from the post. Carefully tuck the wires back into the post.
- 2. Place the post cap on the post, then secure it with the set screws.
- 3. Attach the candle tubes onto the sockets, then install bulbs (not included). See relamping label at socket area or packaging for maximum allowed wattage.
- 4. Secure the stem into the coupling using a hex nut. $\hfill\Box$
- 5. Attach the dome to the frame by inserting the stem, then secure it with a rubber pad and finial.
- 6. Turn on the power at the main fuse or circuit breaker box.

