

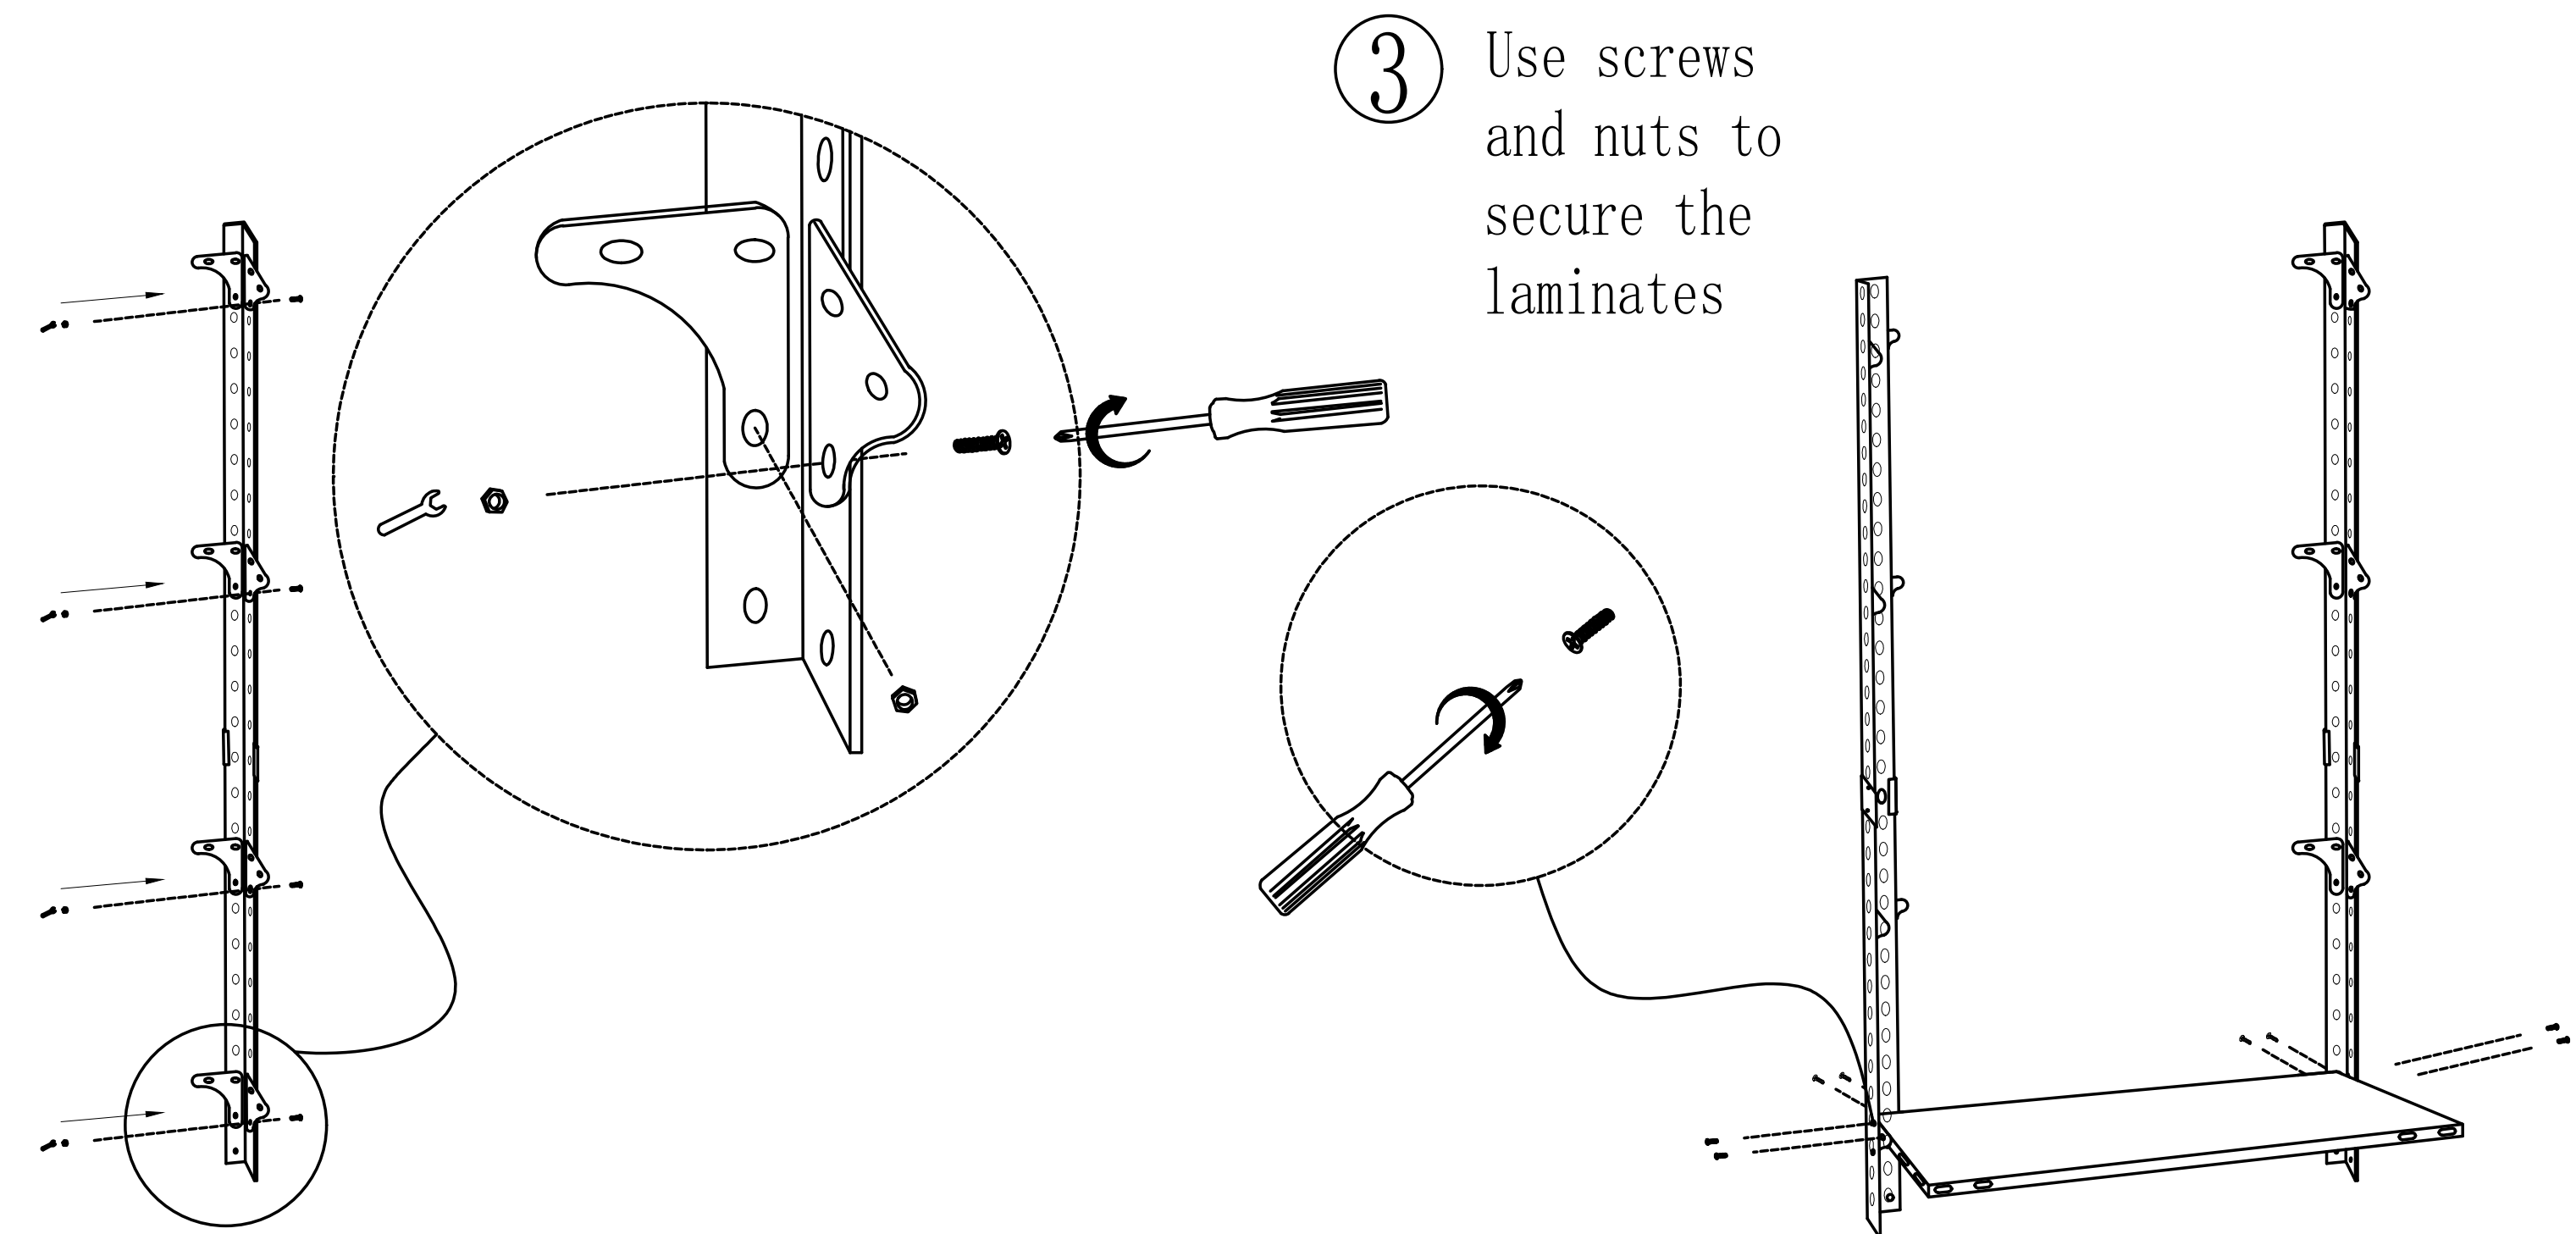
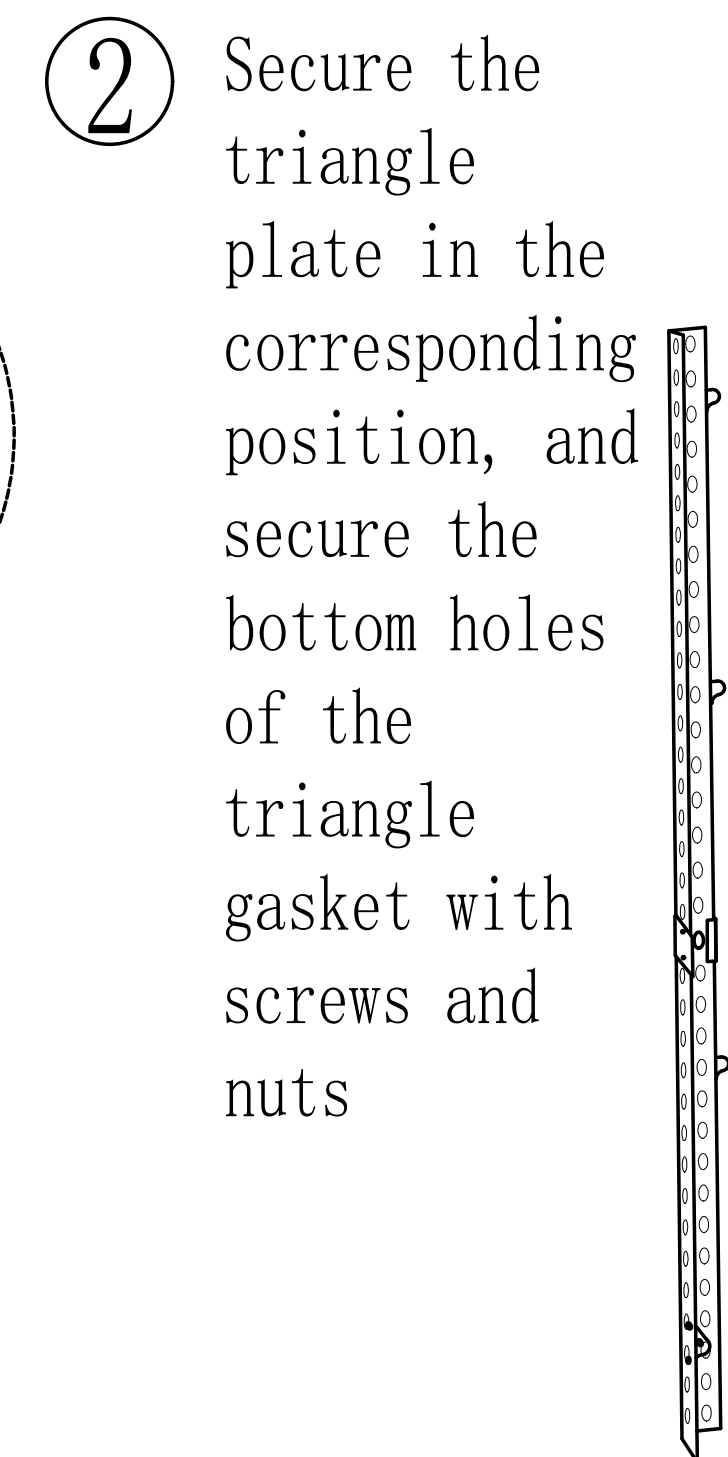


Installation process

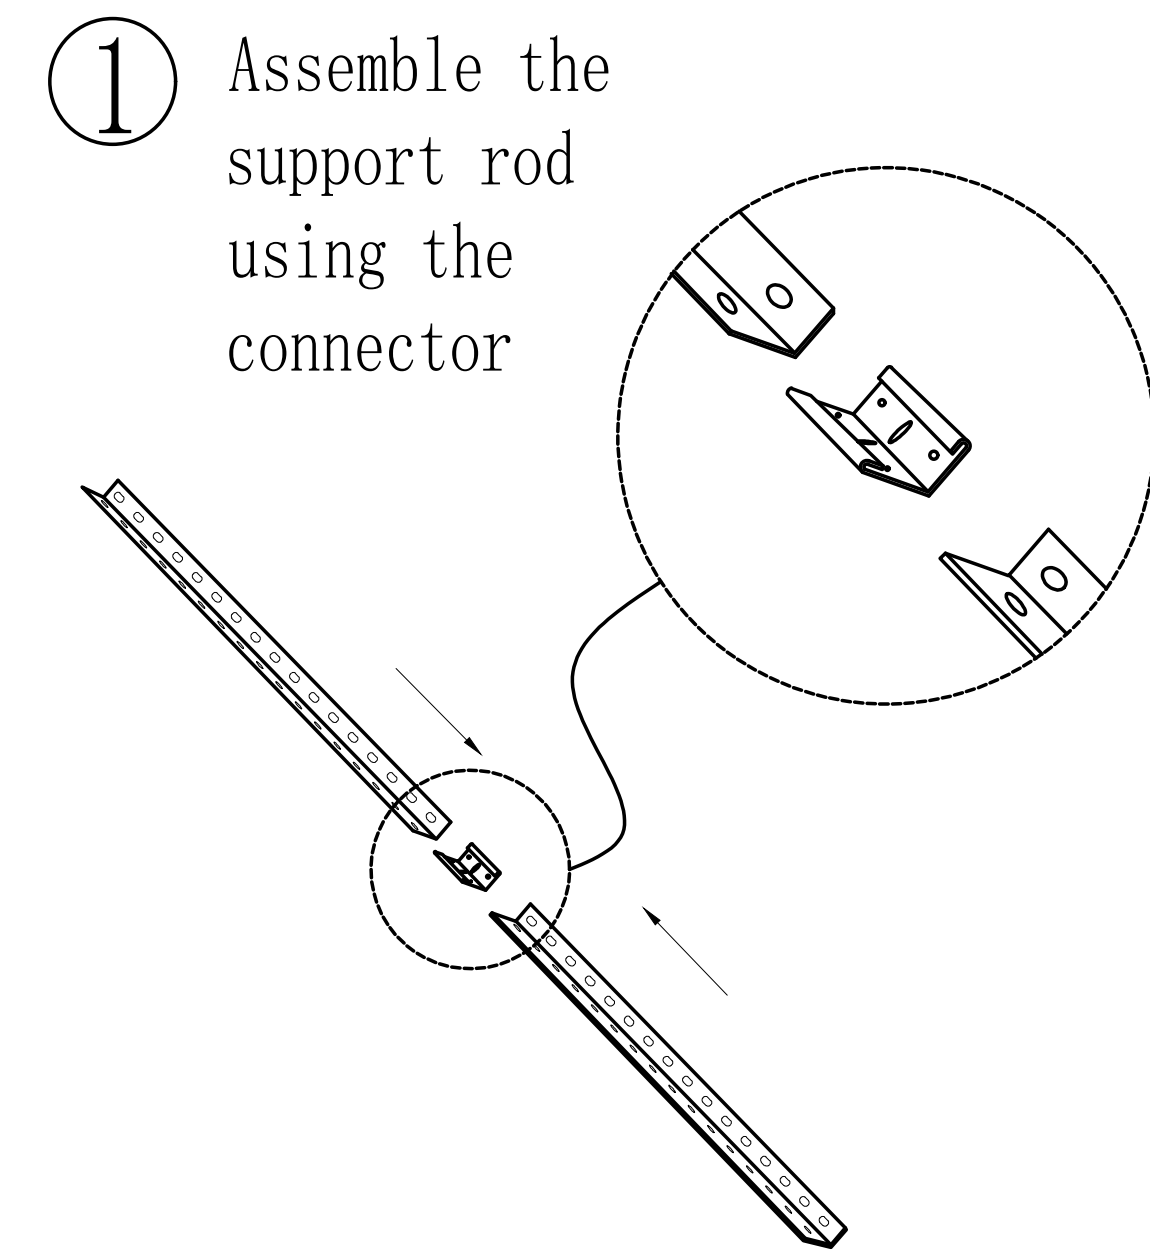

④ After the laminates are installed, repeat the second step to install and fix the other two support rods to the laminates.

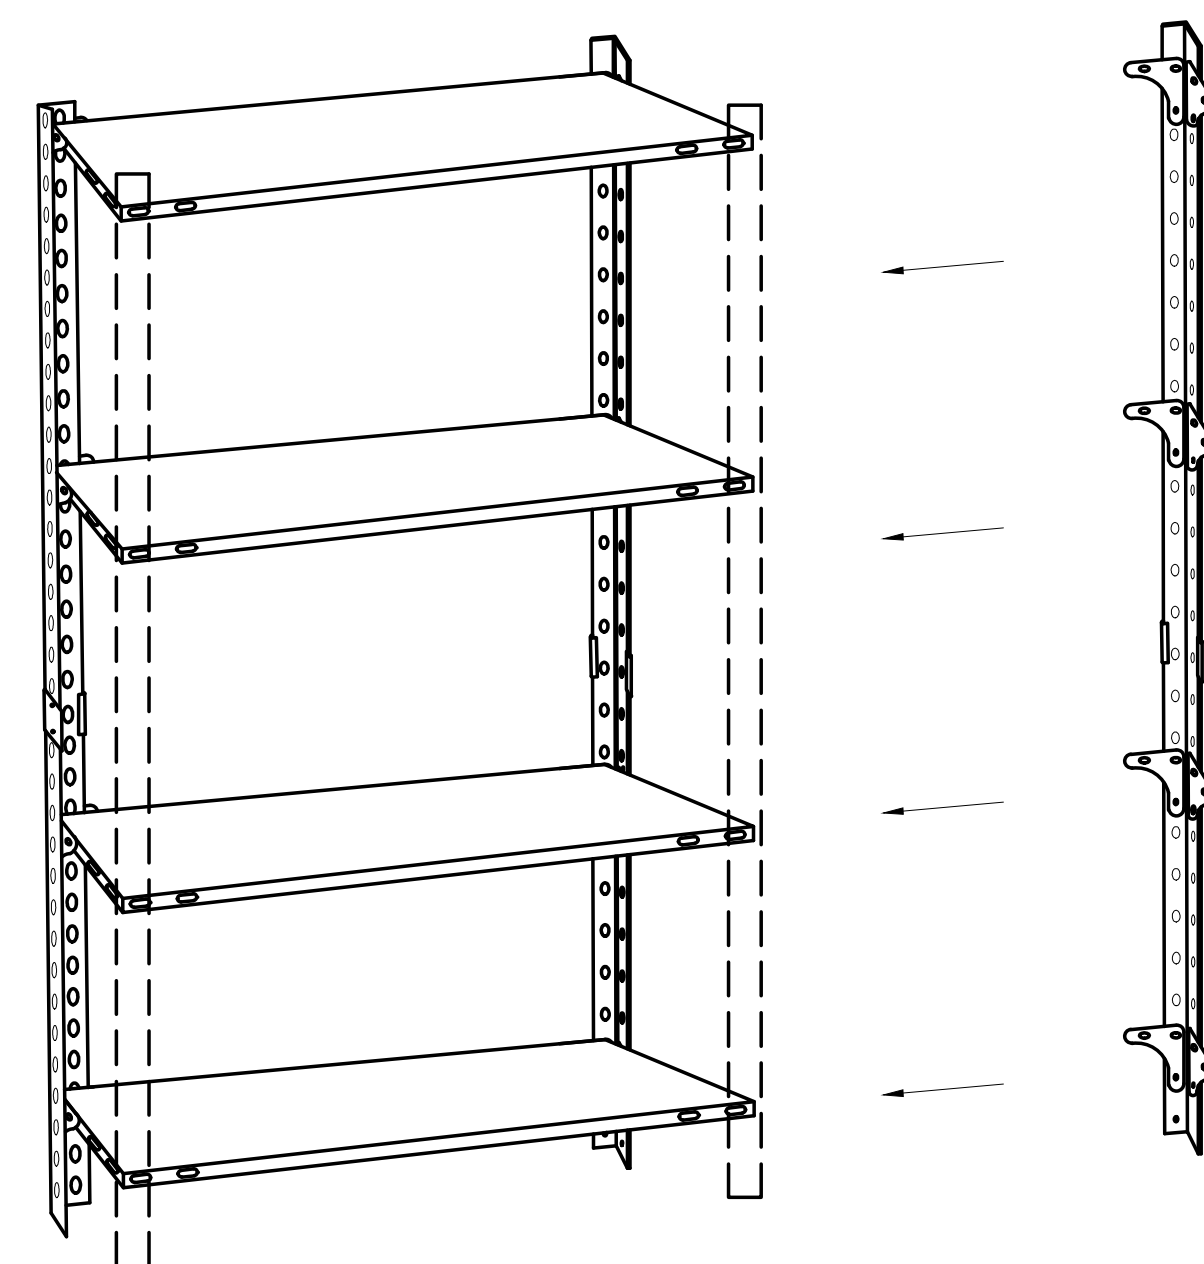

⑤ Finally, install the bottom rubber sleeve. The installation is complete.

