




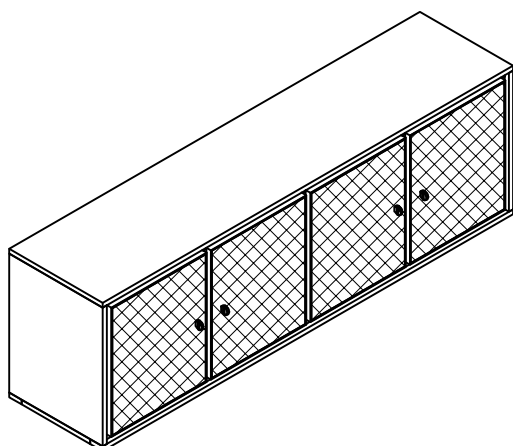


A: Chest x 1




B: Leg x 4



C: Support Leg x 1




D: Large shelf x



E: Small shelf x 2

STEP 1

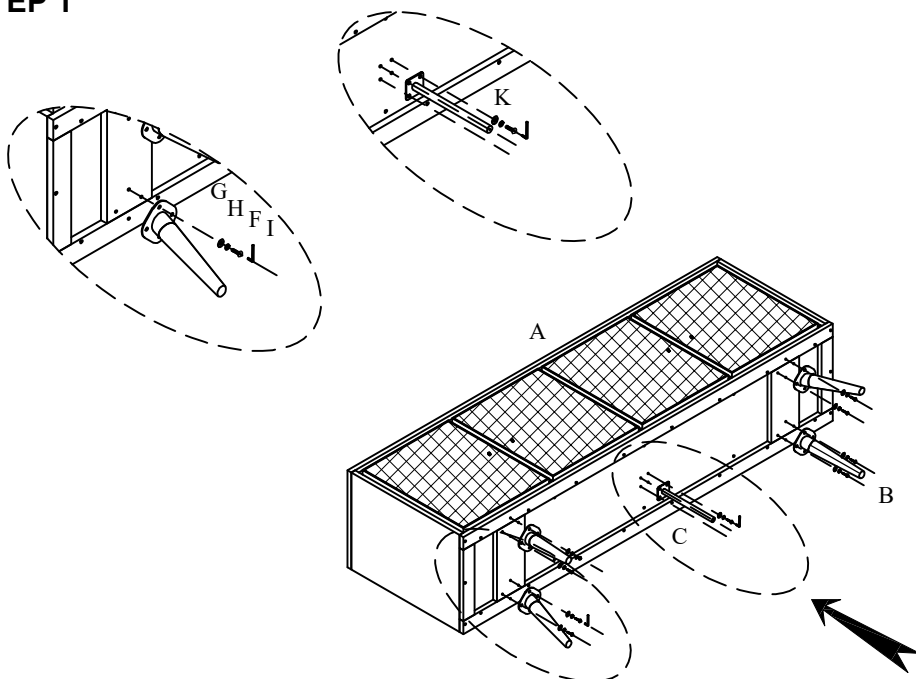

F: Bolt M6*20mm x 20



G: Washer x 20



H: Washer x 20





I: Allen wrench x 1




L: Support shelf x 16


STEP 2

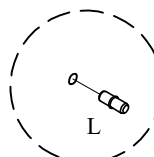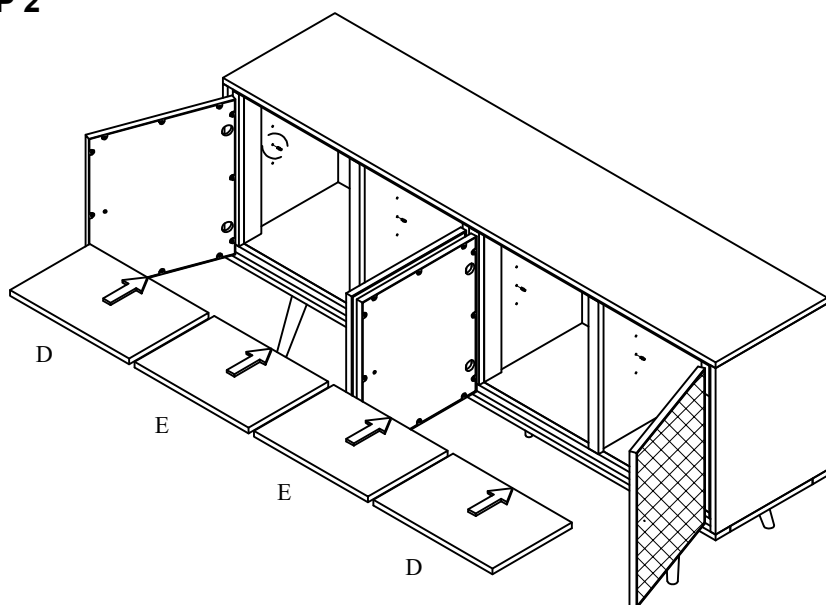


STEP 3

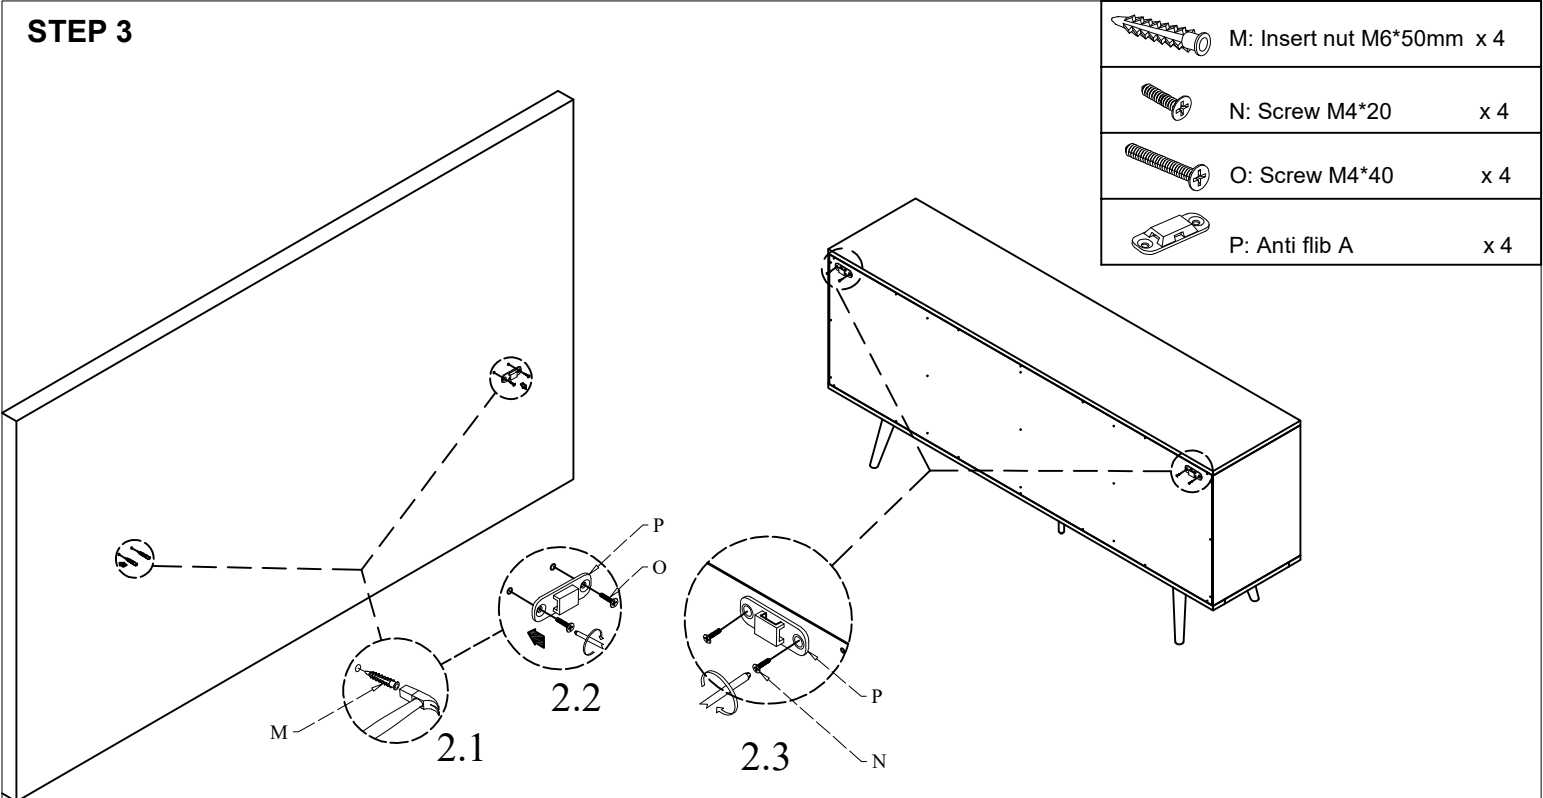


STEP 4

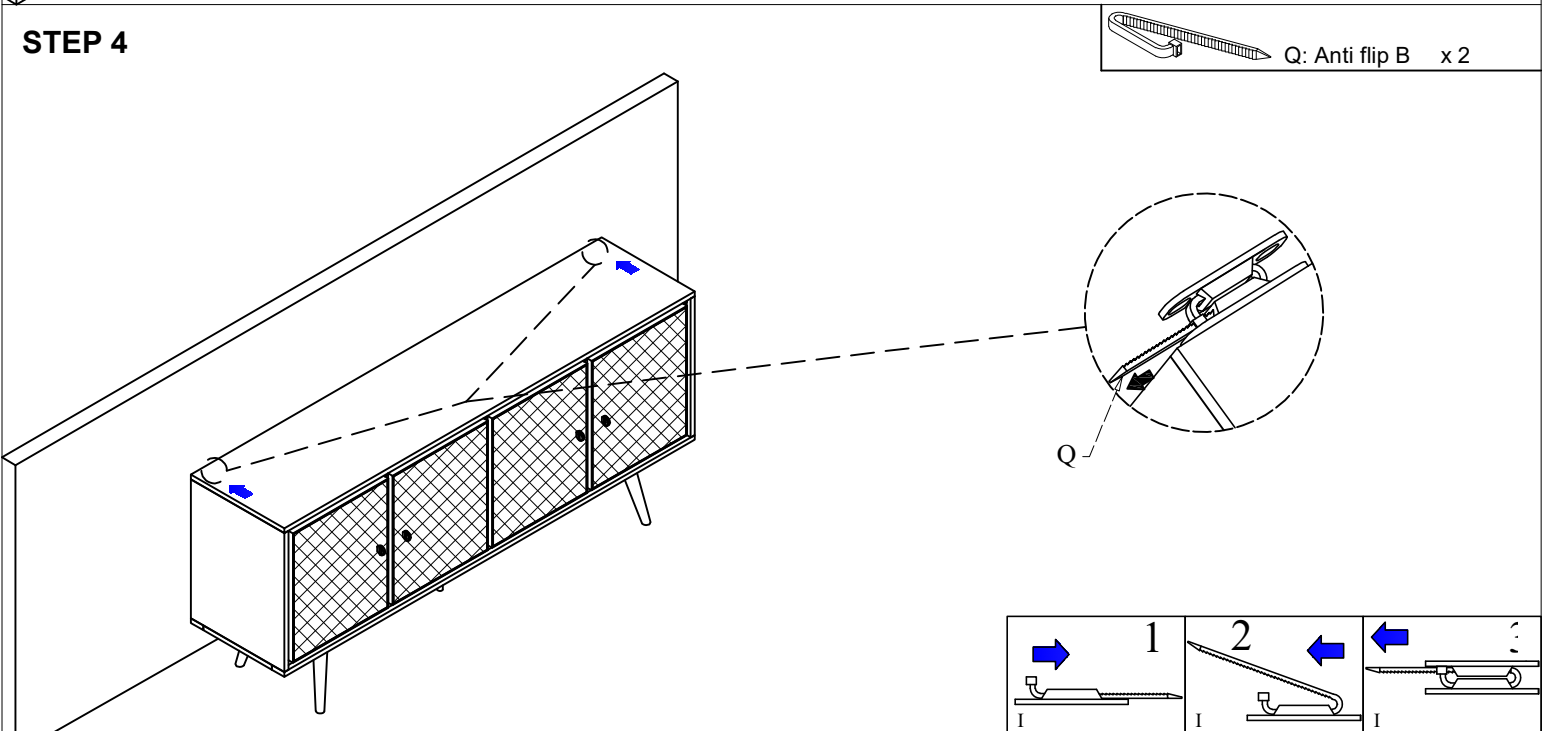


STEP 5

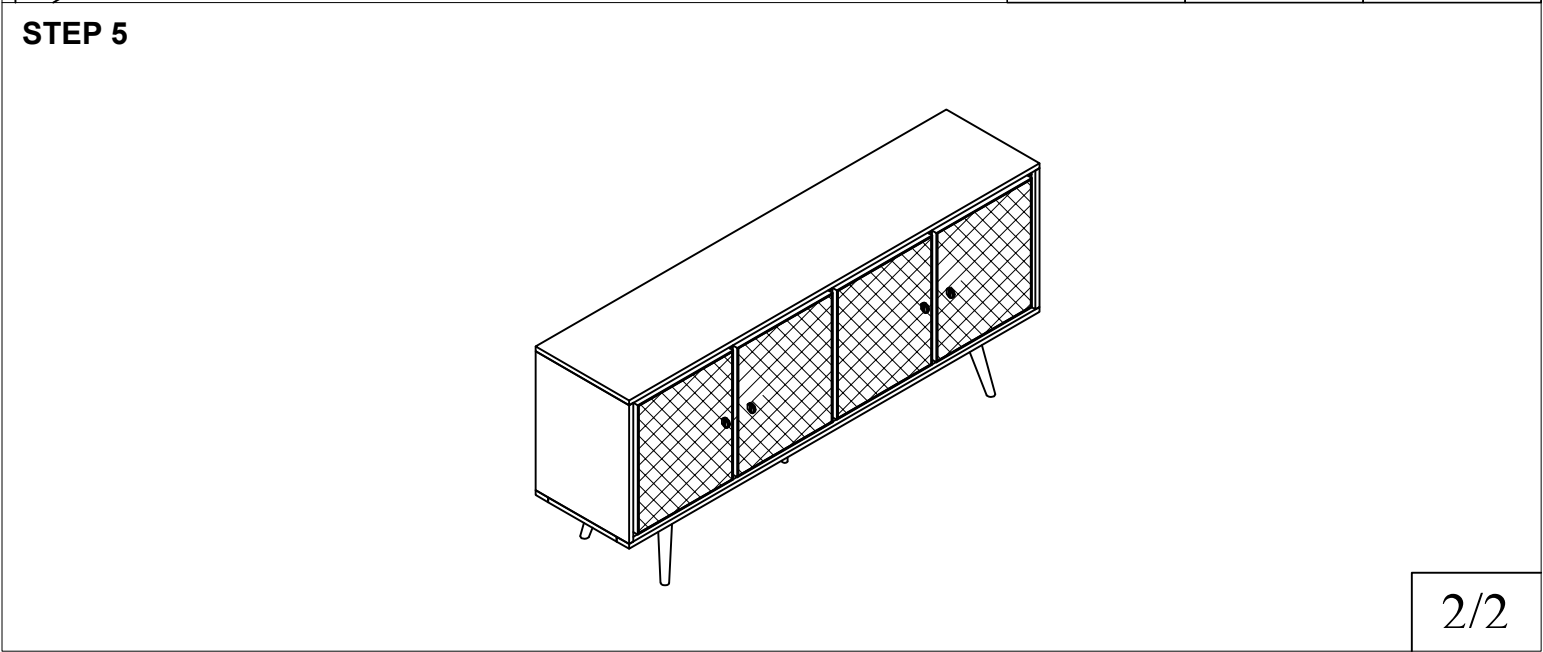

LCCODIBAL

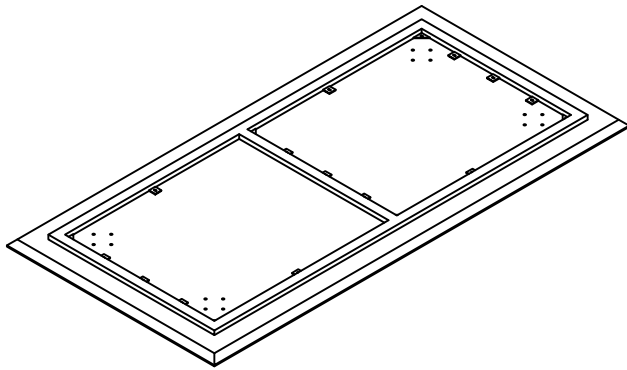

A: Chest x 1



B: Leg x 4



C: Bolt M8*25mm

x 16



D: Washer

x 16



E: Washer


x 16



F: Allen wrench

x 1

STEP 1

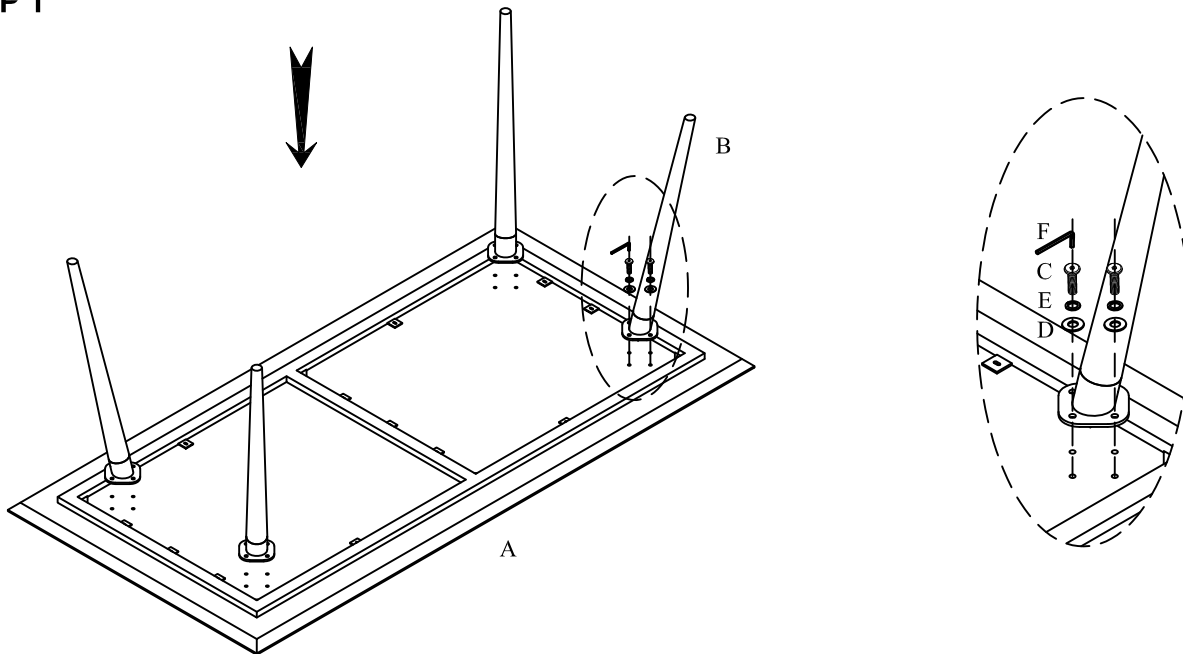

STEP 2

