# Trailer Rack Kit

Part Number: 504484

Part# 504483

#### Bill of Materials:

Part	Qty	Description
504482	4	TRAILER RACK MOUNTING BRACKET
504483	2	TRAILER RACK BAR
501157	4	1.25" SQUARE PLASTIC CAP - 16GA
501010	8	5/16-18 X 3/4" CARRIAGE BOLT
501077	8	5/16-18 X 2" CARRIAGE BOLT
501083	16	5/16-18 NYLON INSERT HEX FLANGE LOCKNUT
503199	1	5X8 4MIL ZIPPER BAG
503237	1	BOX - TRAILER RACK KIT
503238	1	TRAILER RACK INSTRUCTION SHEET





Part# 501010,501077 & 501083




Part# 501157

## 4 X 6 ft Trailer rack installation

Step 1: Assemble p/n 504483 Trailer Rack Bar to p/n 504482 Trailer Rack Mounting Bracket with 5/16x2" Carriage Bolts (501077) and nuts (501083).

Step 2: Align the assembled bar and mount to the trailer, mark the mounting holes and drill for a 5/16" bolt (501010).

Step 3: Secure the assembly to the trailer using the 5/16"x ¾" carriage bolts (501010) and nuts (501083)

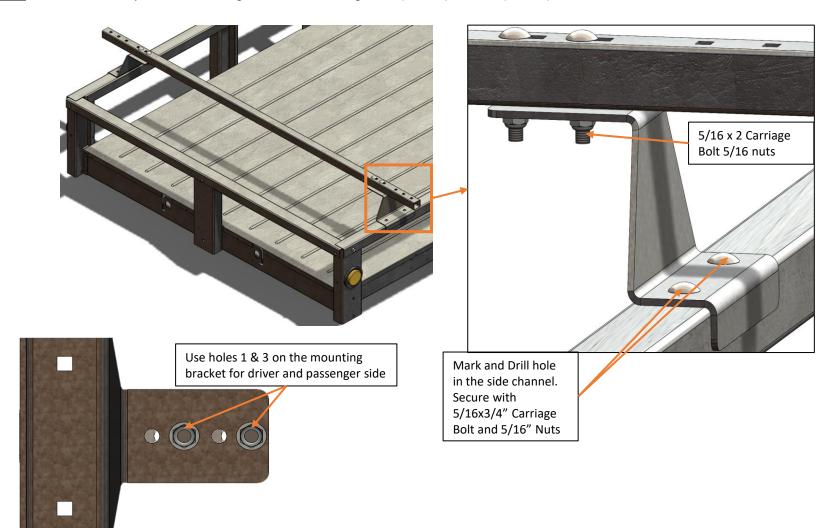


## 4 X 7 ft Trailer rack installation

Step 1: Assemble p/n 504483 Trailer Rack Bar to p/n 504482 Trailer Rack Mounting Bracket with 5/16x2" Carriage Bolts (501077) and nuts (501083).

Step 2: Align the assembled bar and mount to the trailer, mark the mounting holes and drill for a 5/16" bolt (501010).

Step 3: Secure the assembly to the trailer using the 5/16"x ¾" carriage bolts (501010) and nuts (501083)

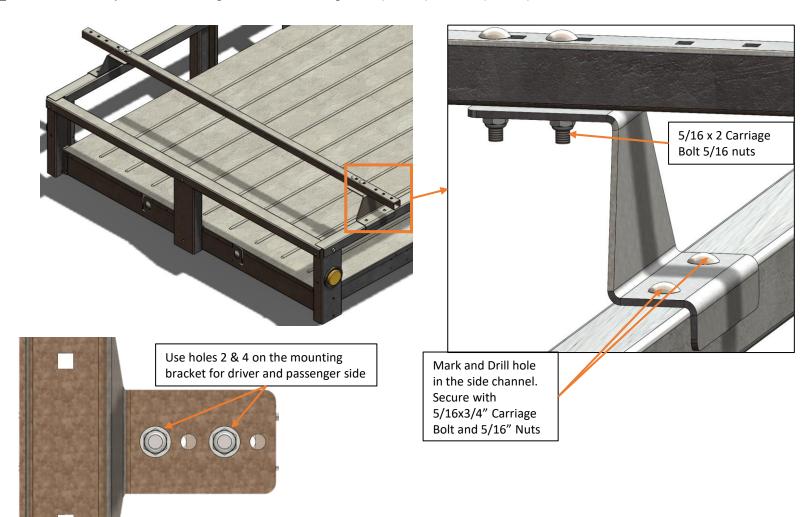


#### 5 X 7 ft/ 5 X 10 ft Trailer rack installation

Step 1: Assemble p/n 504483 Trailer Rack Bar to p/n 504482 Trailer Rack Mounting Bracket with 5/16x2" Carriage Bolts (501077) and nuts (501083).

Step 2: Align the assembled bar and mount to the trailer, mark the mounting holes and drill for a 5/16" bolt (501010).

Step 3: Secure the assembly to the trailer using the 5/16"x ¾" carriage bolts (501010) and nuts (501083)

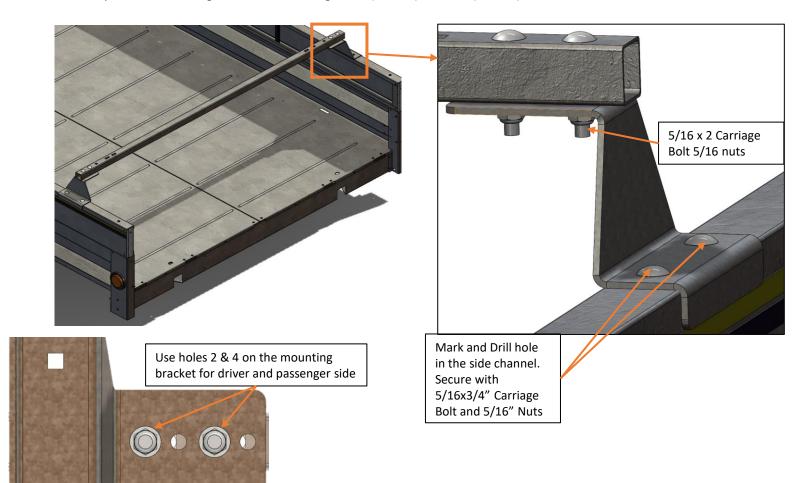

#### Kit trailer rack installation

Step 1: Assemble p/n 504483 Trailer Rack Bar to p/n 504482 Trailer Rack Mounting Bracket with 5/16x2" Carriage Bolts (501077) and nuts (501083).

Step 2: Align the assembled bar and mount to the trailer, mark the mounting holes and drill for a 5/16" bolt (501010).

Step 3: Secure the assembly to the trailer using the 5/16"x \%" carriage bolts (501010) and nuts (501083)

