


**INSTASET™**

**PEEL & STICK**  
**TILE SETTING ADHESIVE**  
TILE WORK MADE EASY!

**SIMPLE AS**

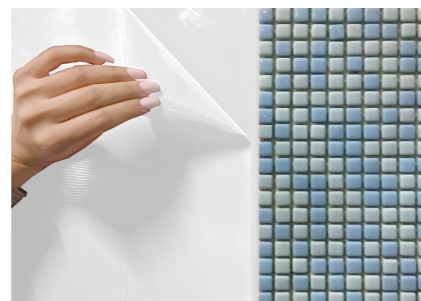

**1. PEEL**



**2. STICK**

**THINSET  
REPLACEMENT**



**1 ROLL = 12" x 14.5' (14 SQUARE FEET)**  
**INSTALLATION INSTRUCTIONS INCLUDED ON THE INSIDE**

**NO MESS**  
**PERMANENT**

**DIY**  
**BACKSPLASH**

**SHOWER WALL**

**NO MORTAR**

**FAST**

**RV/MOTORHOME**

**FIREPLACE**

**GBM®**

DISTRIBUTED BY:  
GBM MANUFACTURING INC.  
1188 S. Airport Way  
Stockton, CA 95205  
[www.GBMglass.com](http://www.GBMglass.com)

MADE IN CHINA



# INSTASET QUICK INSTALLATION GUIDE

## TOOLS YOU'LL NEED:

- RAZER KNIFE
- GROUT FLOAT
- TAPE MEASURE
- PENCIL
- LEVEL
- PRY BAR
- TILE SPACERS (OPTIONAL)
- GROUT (OPTIONAL)

## STEP 1 SURFACE PREPERATIONS:

- Wall/substrate must be free of any debris, dust, and/or loose paint.
- Wall must be leveled, non-porous, smooth, dry and flat.
- Wall/Substrate can be laid over an existing tile surface, as long as it meets the substrate requirements above.

## STEP 2 MEASURE THE WALL

Using a tape measure, pencil, ruler and level (if needed), mark out the measurements of your space.

## STEP 3 ADHERE ADHESIVE MEMBRANE TO WALL

- Roll out the adhesive onto the wall (inner side facing the wall). We recommend rolling the roll out in a vertical direction for a strong bonding (top to bottom).
- Follow any markings made previously to ensure a straight line. Repeat process with the entire wall.

## STEP 4 OUTLETS/FAUCETS/SHOWER HEADS

- Using a razer knife, carefully cut through any openings and remove the excess adhesive.

## STEP 5 FIRMLY PRESS DOWN

- Using a grout float, firmly press down the adhesive.

## STEP 6 CLEAN THE TILE

- Using a clean rag, wipe down the back of the tile/mosaic. Make sure the backing of the tile/mosaic is dry and smooth.
- Tile should be as flat as possible.
- Must achieve >80% direct bonding to the adhesive.

## STEP 7 PEEL

- Peel the top protective layer of the Instaset membrane to expose the front facing adhesive.

## STEP 8 STICK

- Following the lines drawn previously, gently press the tile onto the adhesive. Use a pry bar for adjustments/repositioning when needed.
- Firmly press the tile into the wall to secure bonding.

## STEP 9 GROUTING (OPTIONAL)

- Grouting may be optional depending on the usable and application. Check with the tile manufacturer's guideline for more details.



FIND MORE INSTASET RATED TILE PRODUCTS ON [GBMGLASS.COM](http://GBMGLASS.COM)

**FOR MORE DETAILED  
INSTALLATION TIPS, SEARCH  
“INSTASET TILE ADHESIVE”  
ON YOUTUBE.COM**

**HAVE QUESTIONS? CALL US  
1 (888) 862-8397**

