




**MANHATTAN  
COMFORT**

---

**NS009**

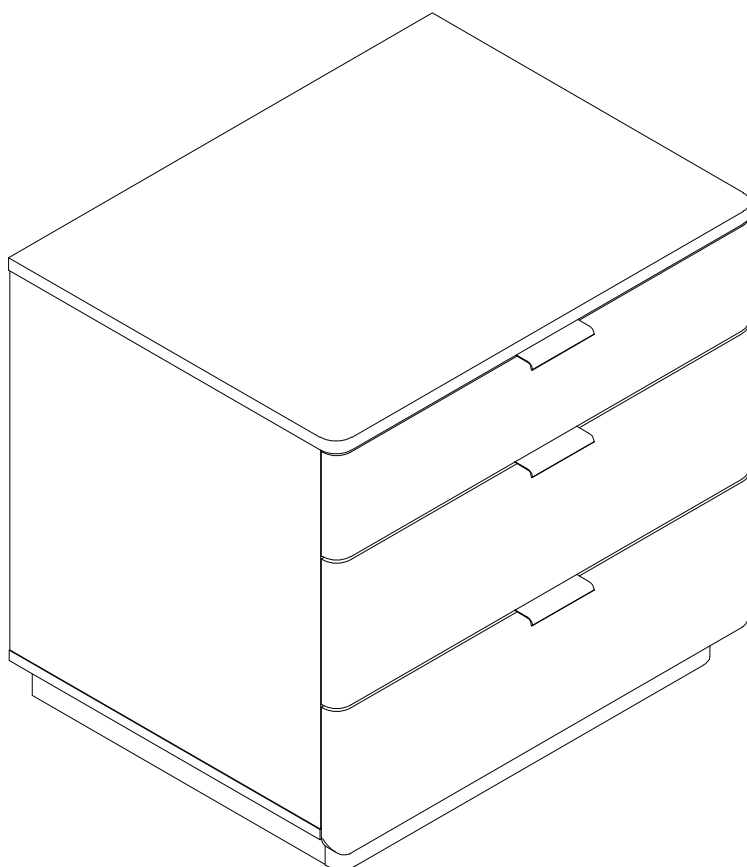




# STOP!


Before beginning the assembly process, ensure all boxes and parts have been delivered.

## FOR BEST RESULTS:

- Do not throw away packaging materials until assembly is complete.
- Assemble item on a soft surface, such as cardboard or carpet, to protect finish.
- Proper assembly requires two people.

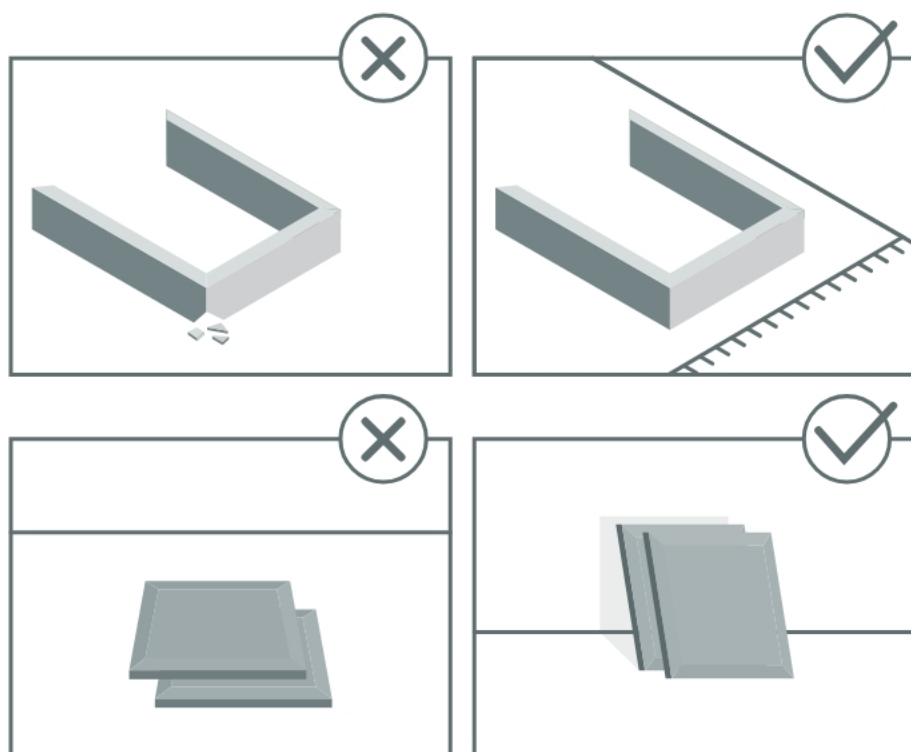

## TOOLS REQUIRED

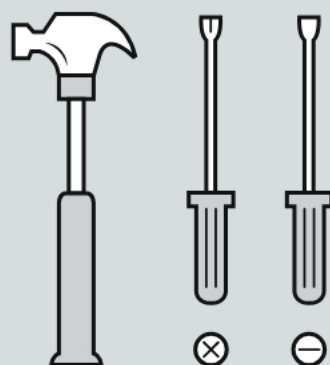

View our assembly video online:  
[WWW.MANHATTANCOMFORT.COM](http://WWW.MANHATTANCOMFORT.COM)




Stuck? Question? We are here to help.  
tel: **908-888-0818**  
e-mail:

Support Site



# Included in this package:

- |                                  |                                 |
|----------------------------------|---------------------------------|
| A. TOP PANEL(1)                  | L. LARGE DRAWER BACK PANEL (2)  |
| B. BOTTOM PANEL(1)               | M. DRAWER BOTTOM PANEL (3)      |
| C. LEFT PANEL (1)                | N. DRAWER SUPPORT PANEL (3)     |
| D. RIGHT PANEL (1)               | O. SMALL DRAWER LEFT PANEL (1)  |
| E. BACK PANEL (2)                | P. SMALL DRAWER RIGHT PANEL (1) |
| F. BACK HORIZONTAL PANEL(1)      | Q. SMALL DRAWER BACK PANEL (1)  |
| G. FRONT HORIZONTAL PANEL (2)    | R. DRAWER TOP FRONT PANEL (1)   |
| H. DRAWER MIDDLE FRONT PANEL (1) | S. LOWER FRONT PANEL(1)         |
| I. DRAWER BOTTOM FRONT PANEL (1) | T. LOWER BACK PANEL(1)          |
| J. LARGE DRAWER LEFT PANEL (2)   | U. LOWER LEFT PANEL(1)          |
| K. LARGE DRAWER RIGHT PANEL (2)  | V. LOWER RIGHT PANEL(1)         |

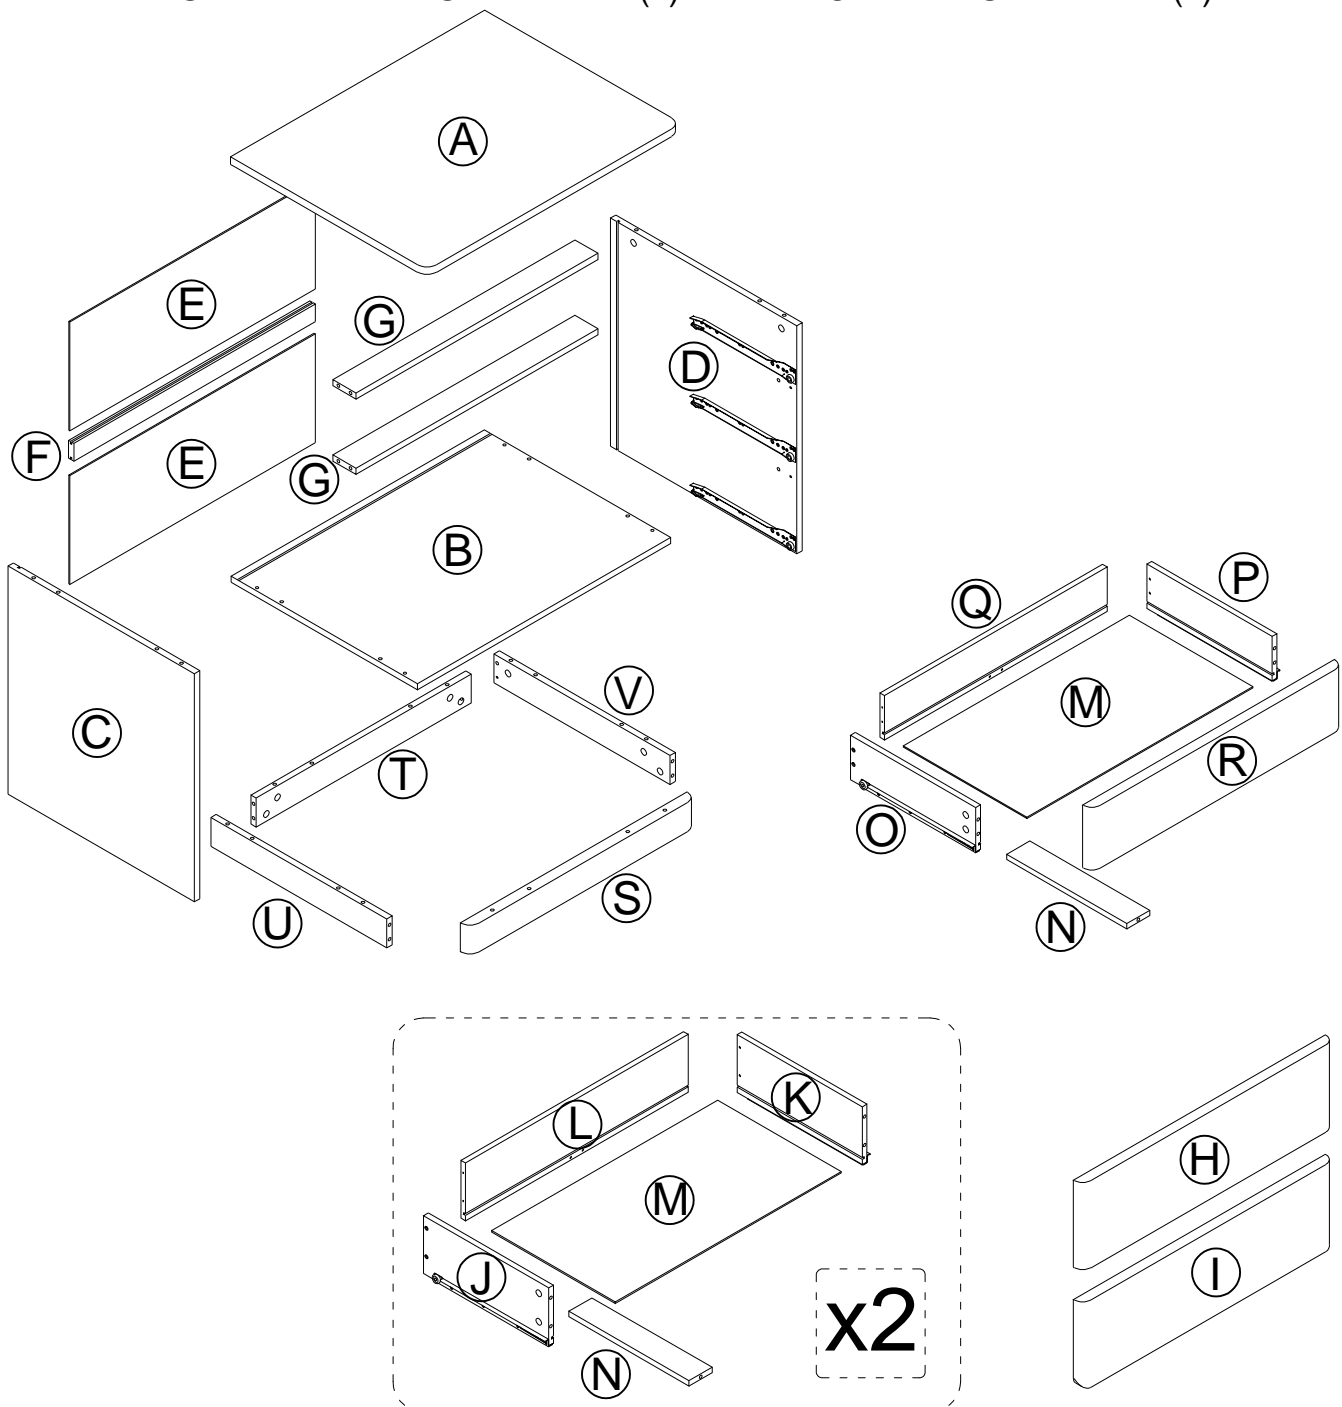


# Hardware Identification


- ① KD BOLT - 35pcs  
L=35mm




- ② KD LARGE CAM - 20pcs  
Ø15\*11mm




- ③ COVER CAP - 35pcs




- ④ WOOD DOWEL - 24pcs  
Ø8\*30mm




- ⑤ KD SMALL CAM - 15pcs  
Ø15\*9mm



- ⑥ SCREW - 18pcs  
Ø4\*38mm




- ⑦ SCREW - 4pcs  
Ø6\*50mm




- ⑧ LOCK - 1pc



- ⑨ BLACK HANDLE-3pcs

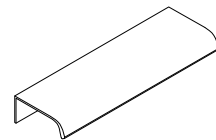


- ⑩ SCREW - 6pcs  
Ø3.5\*12mm




- ⑪ PLASTIC WEDGE - 8pcs




- ⑫ SCREW - 8pcs  
Ø3\*17mm




- ⑬ STRAPS - 1pc

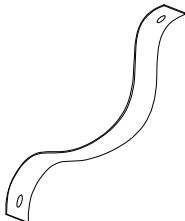

- ⑭ SCREW - 1pc  
Ø4\*18mm




- ⑮ SCREW - 1pc  
Ø4\*25mm




- ⑯ PLASTIC - 1pc




- ⑰ GOLD HANDLE-3pcs

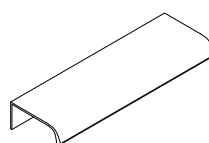

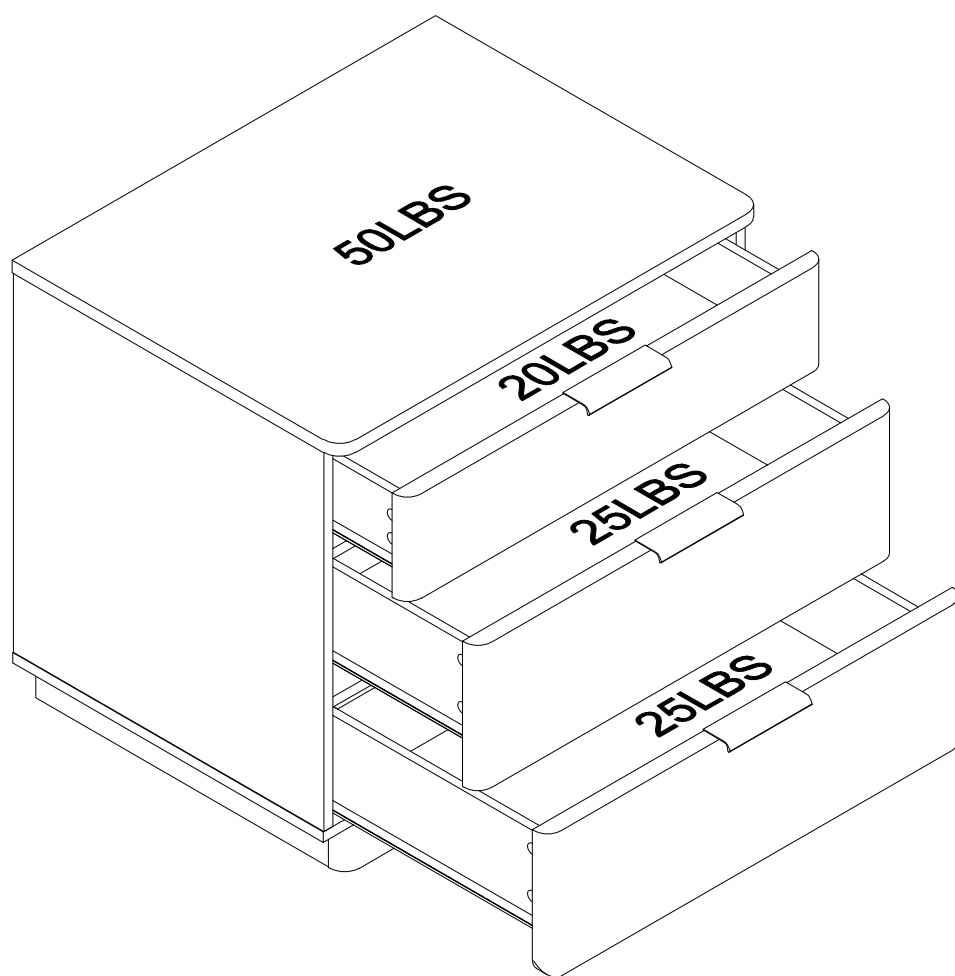


## Step 1:

\* Insert Eight KD BOLT (1) to the TOP PANEL(A), LEFT PANEL (C) and RIGHT PANEL(D).

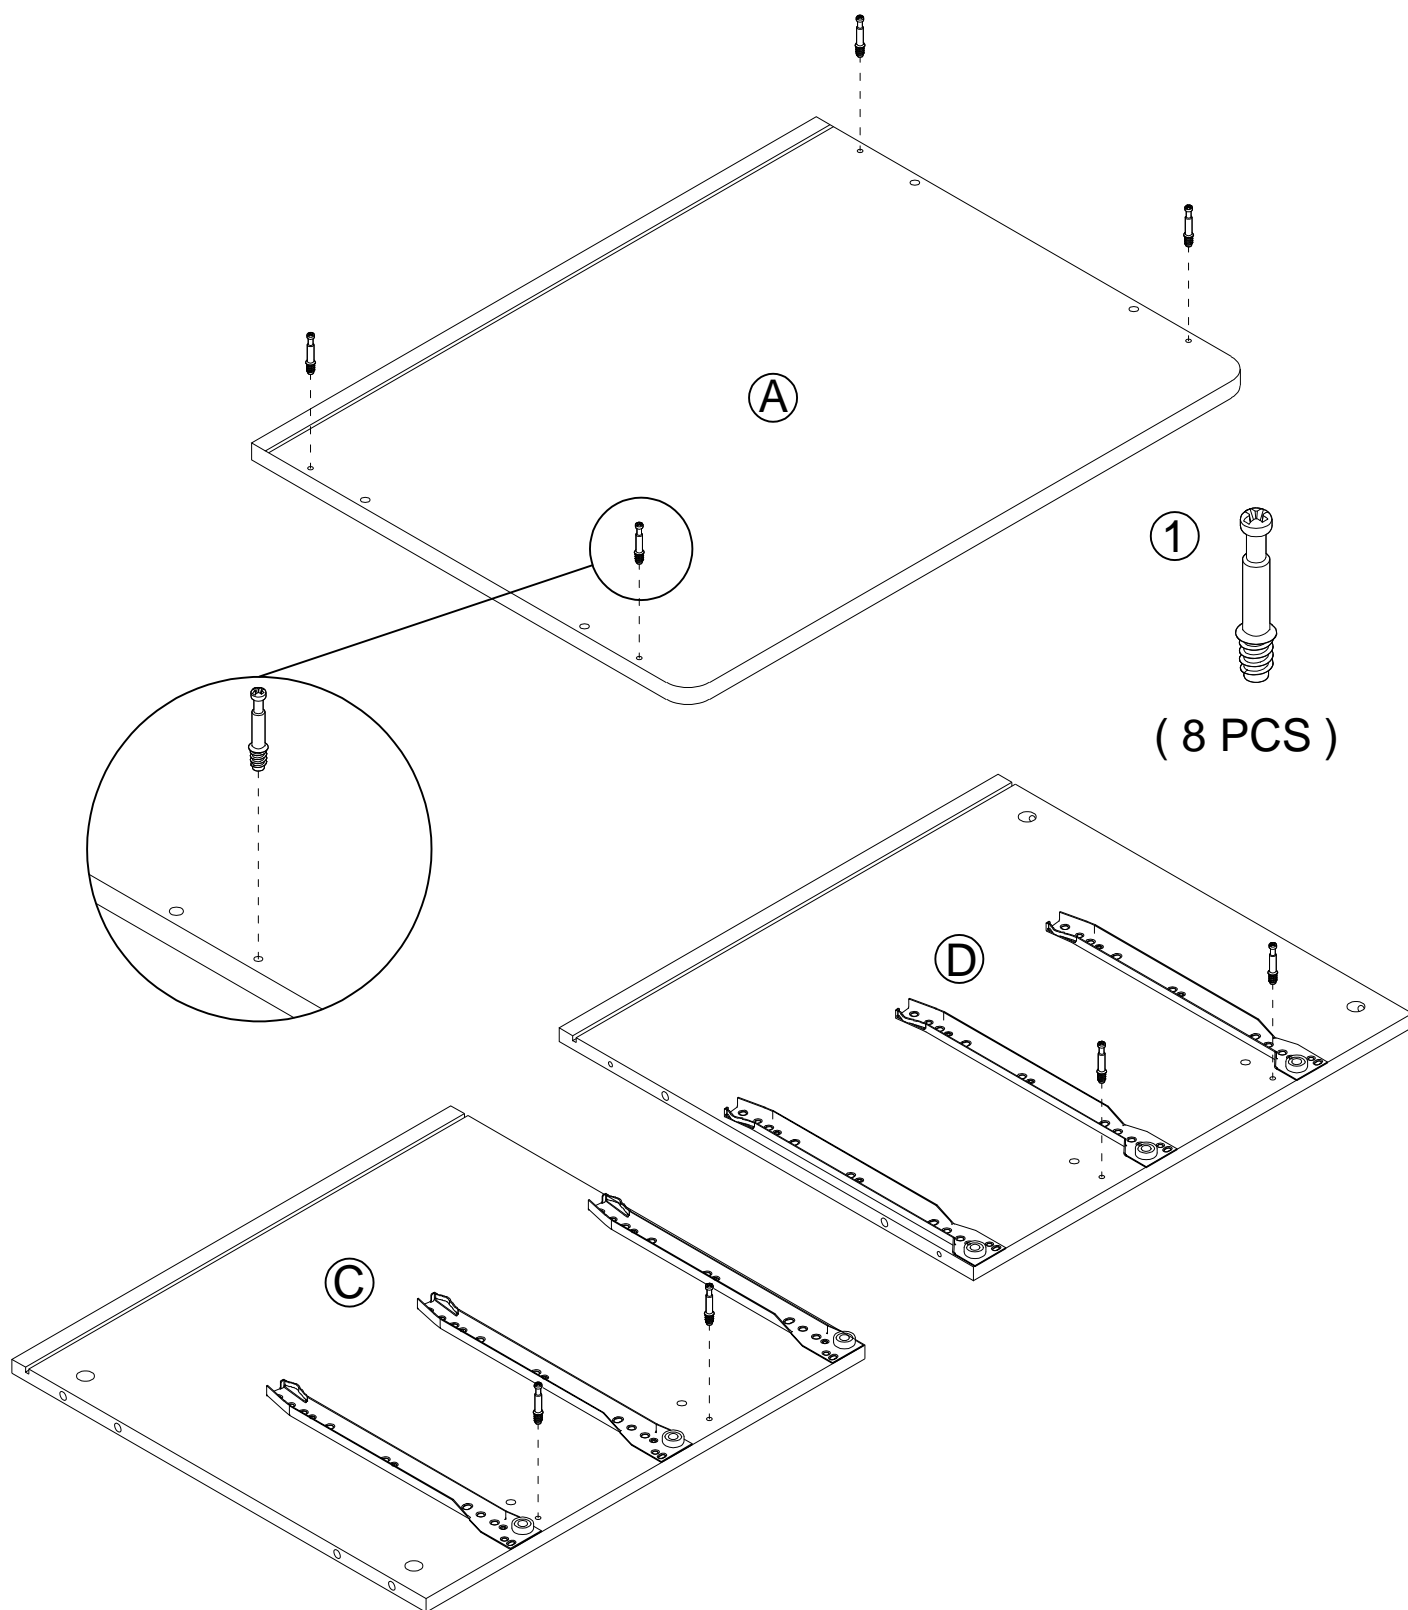

## Step 2:


\* Insert Twelve KD BOLT (1) to the BOTTOM PANEL(B), LOWER LEFT PANEL (U), LOWER RIGHT PANEL(V) and LOWER FRONT PANEL(S).

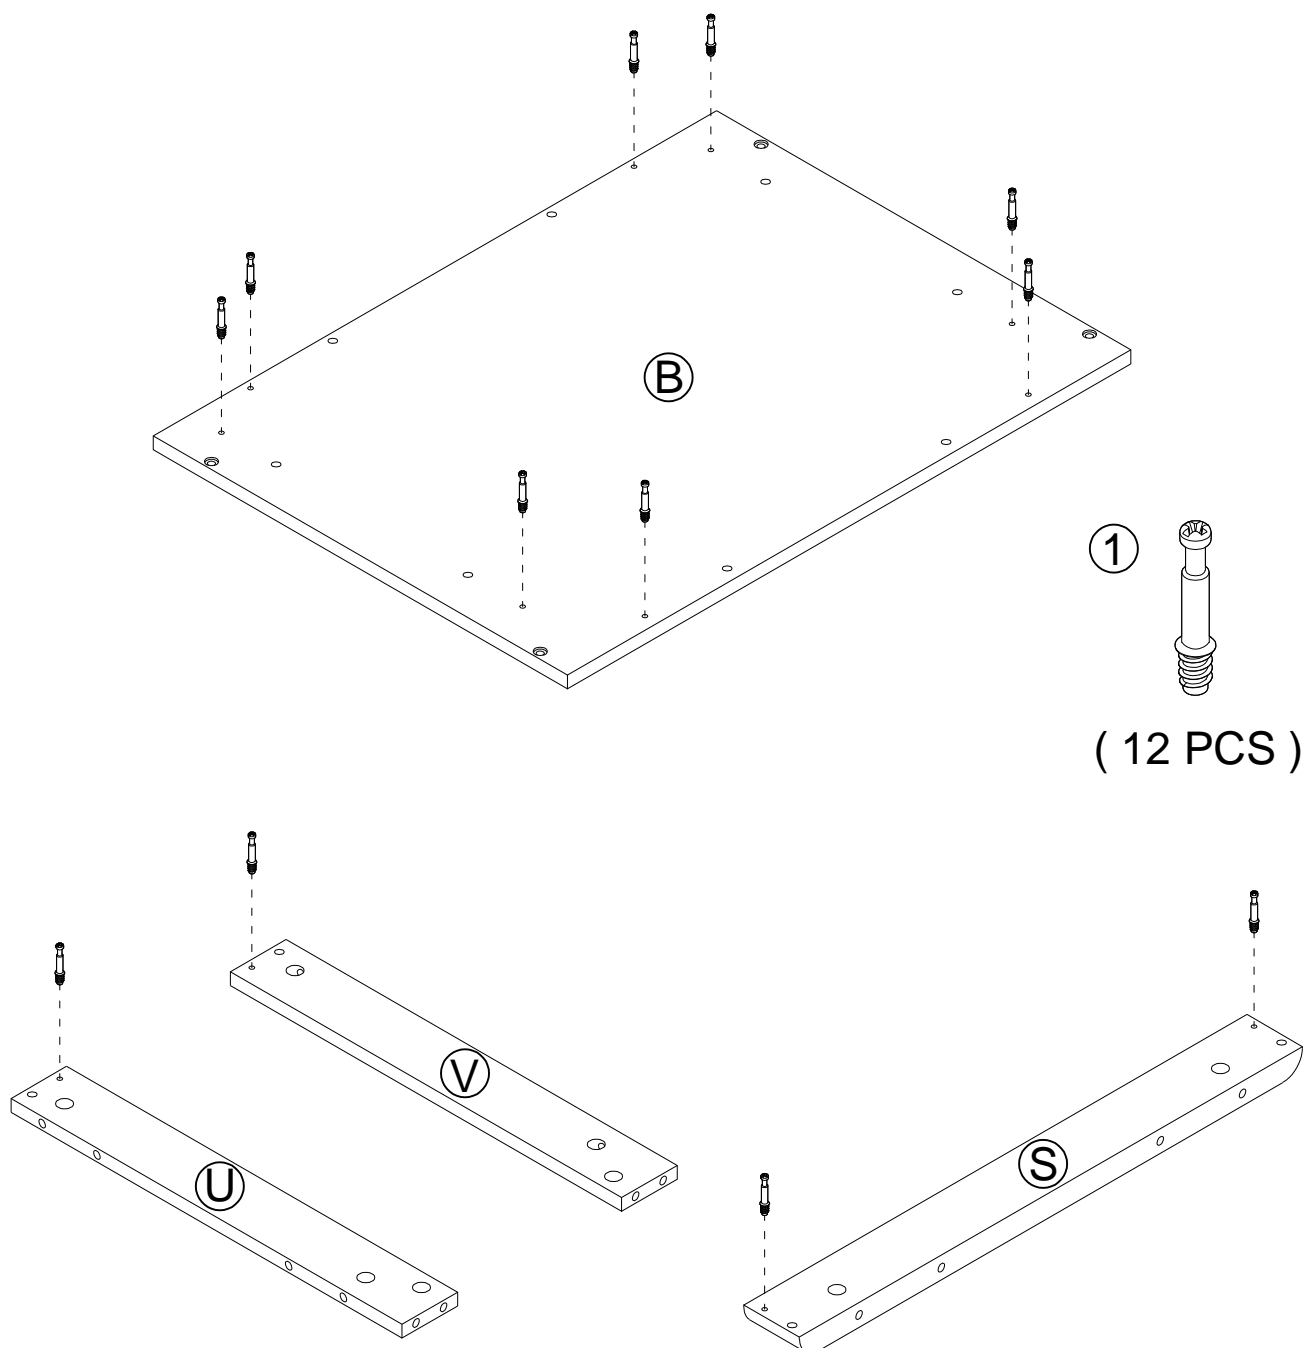

## Step 3:

---

\* Attach the Two FRONT HORIZONTAL PANEL(G) to the LEFT PANEL(C) by the Two KD LARGE CAM(2), Two COVER CAP(3) and Two WOOD DOWEL(4).

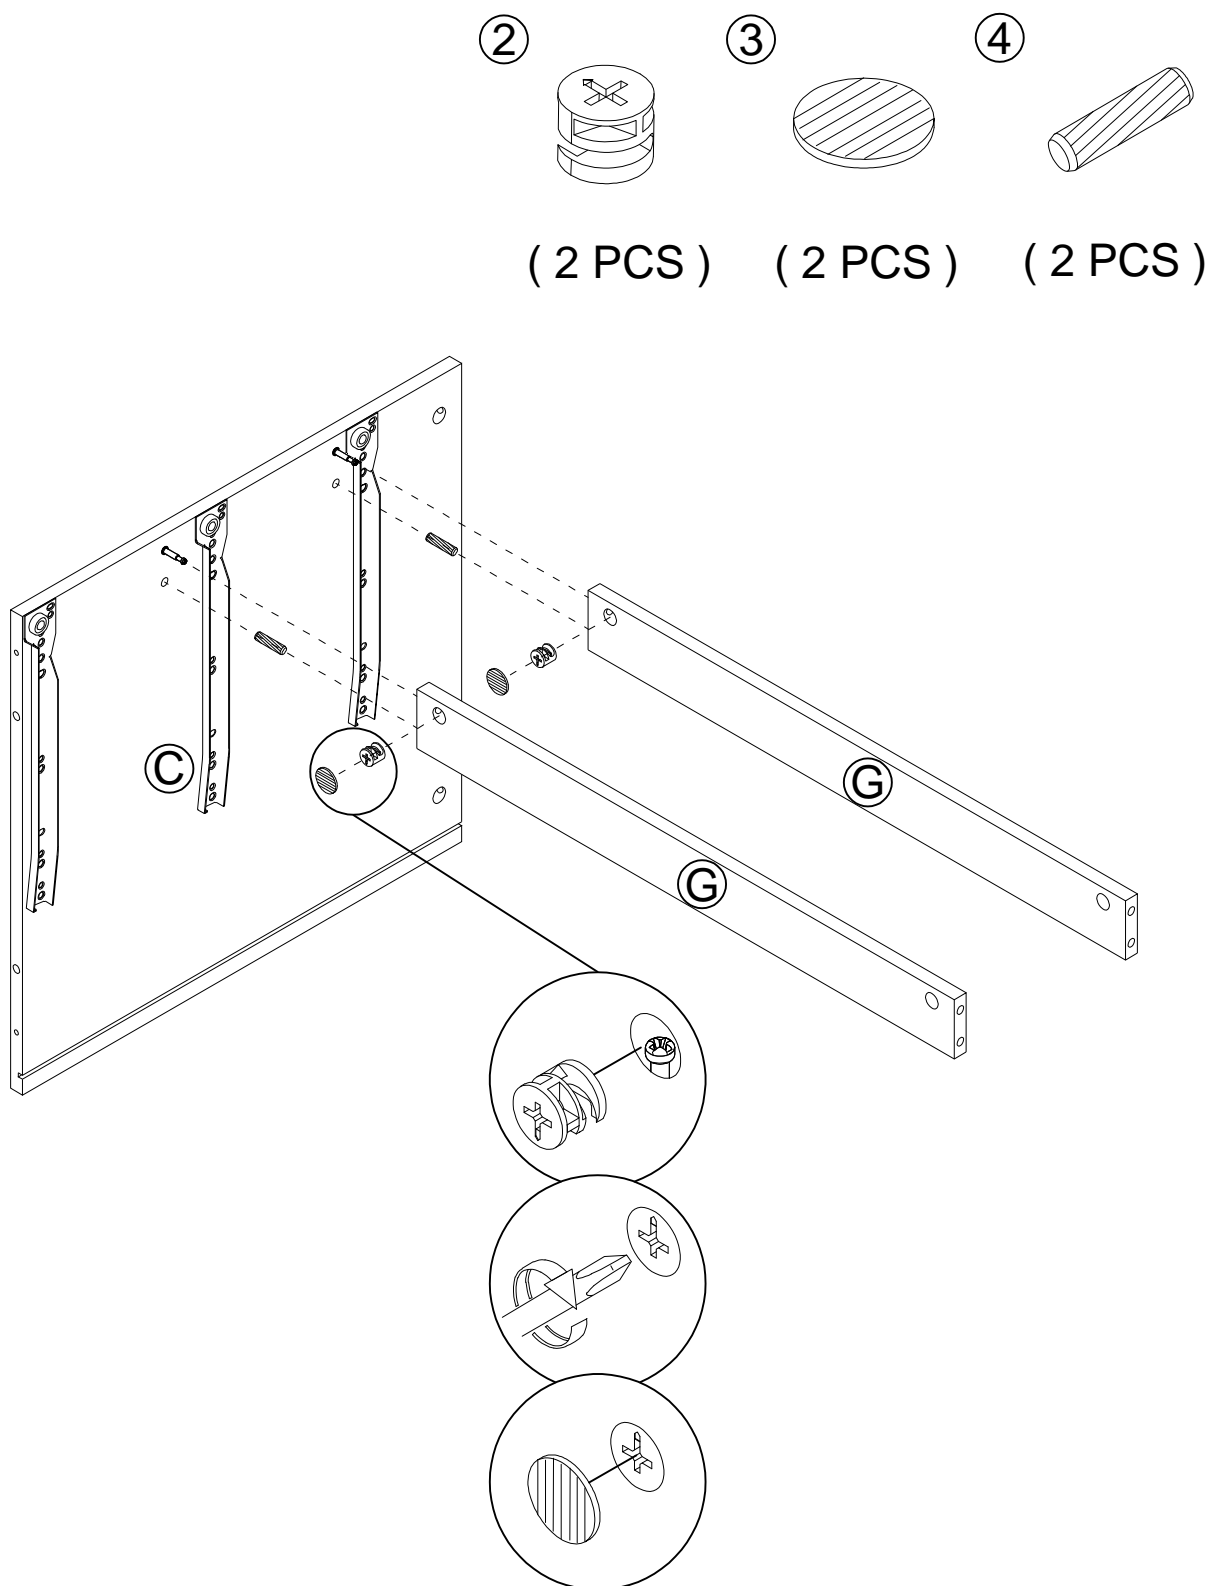




## Step 4:

---


\* Attach the RIGHT PANEL(D) to the Two FRONT HORIZONTAL PANEL(G) by the Two KD LARGE CAM(2) , Two COVER CAP(3) and Two WOOD DOWEL(4).

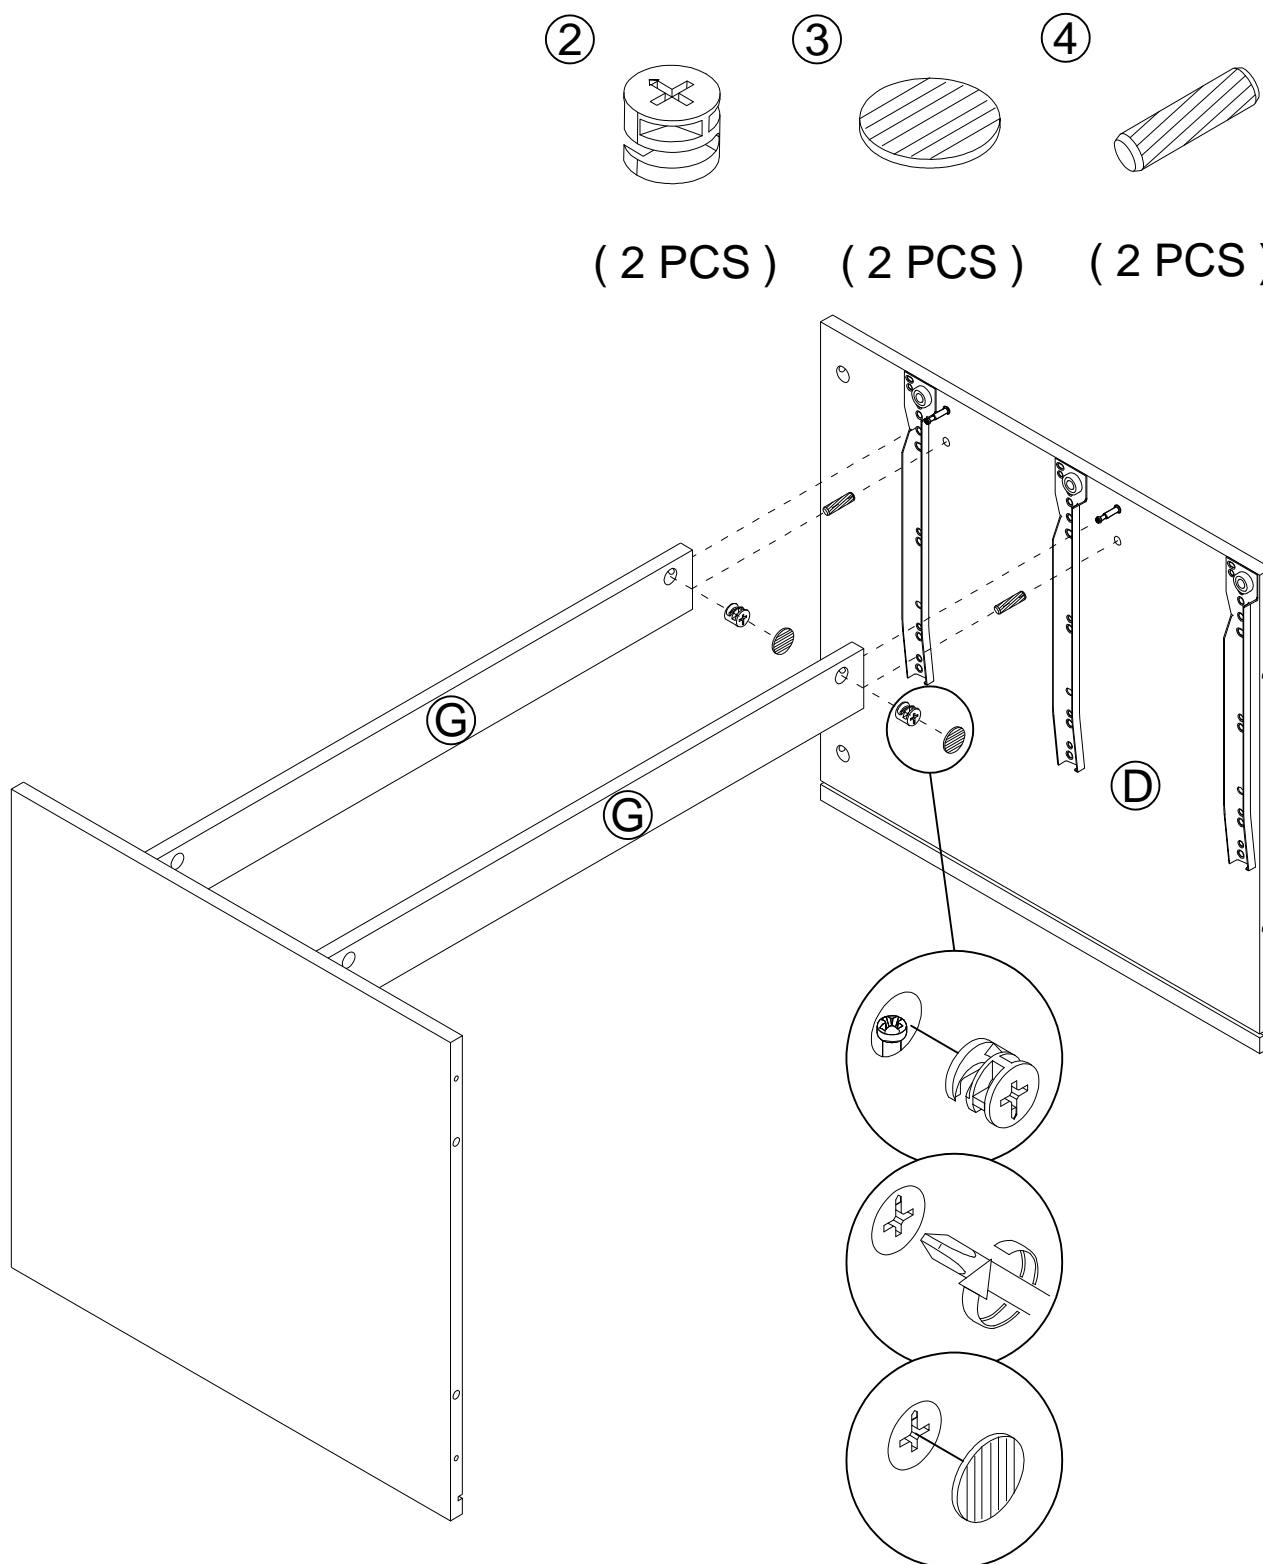

## Step 5:

---


\* Attach the LOWER BACK PANEL(T) to the LOWER LEFT PANEL(U) and LOWER RIGHT PANEL(V) by the Two KD LARGE CAM (2) , Two COVER CAP (3) and Two WOOD DOWEL (4) .

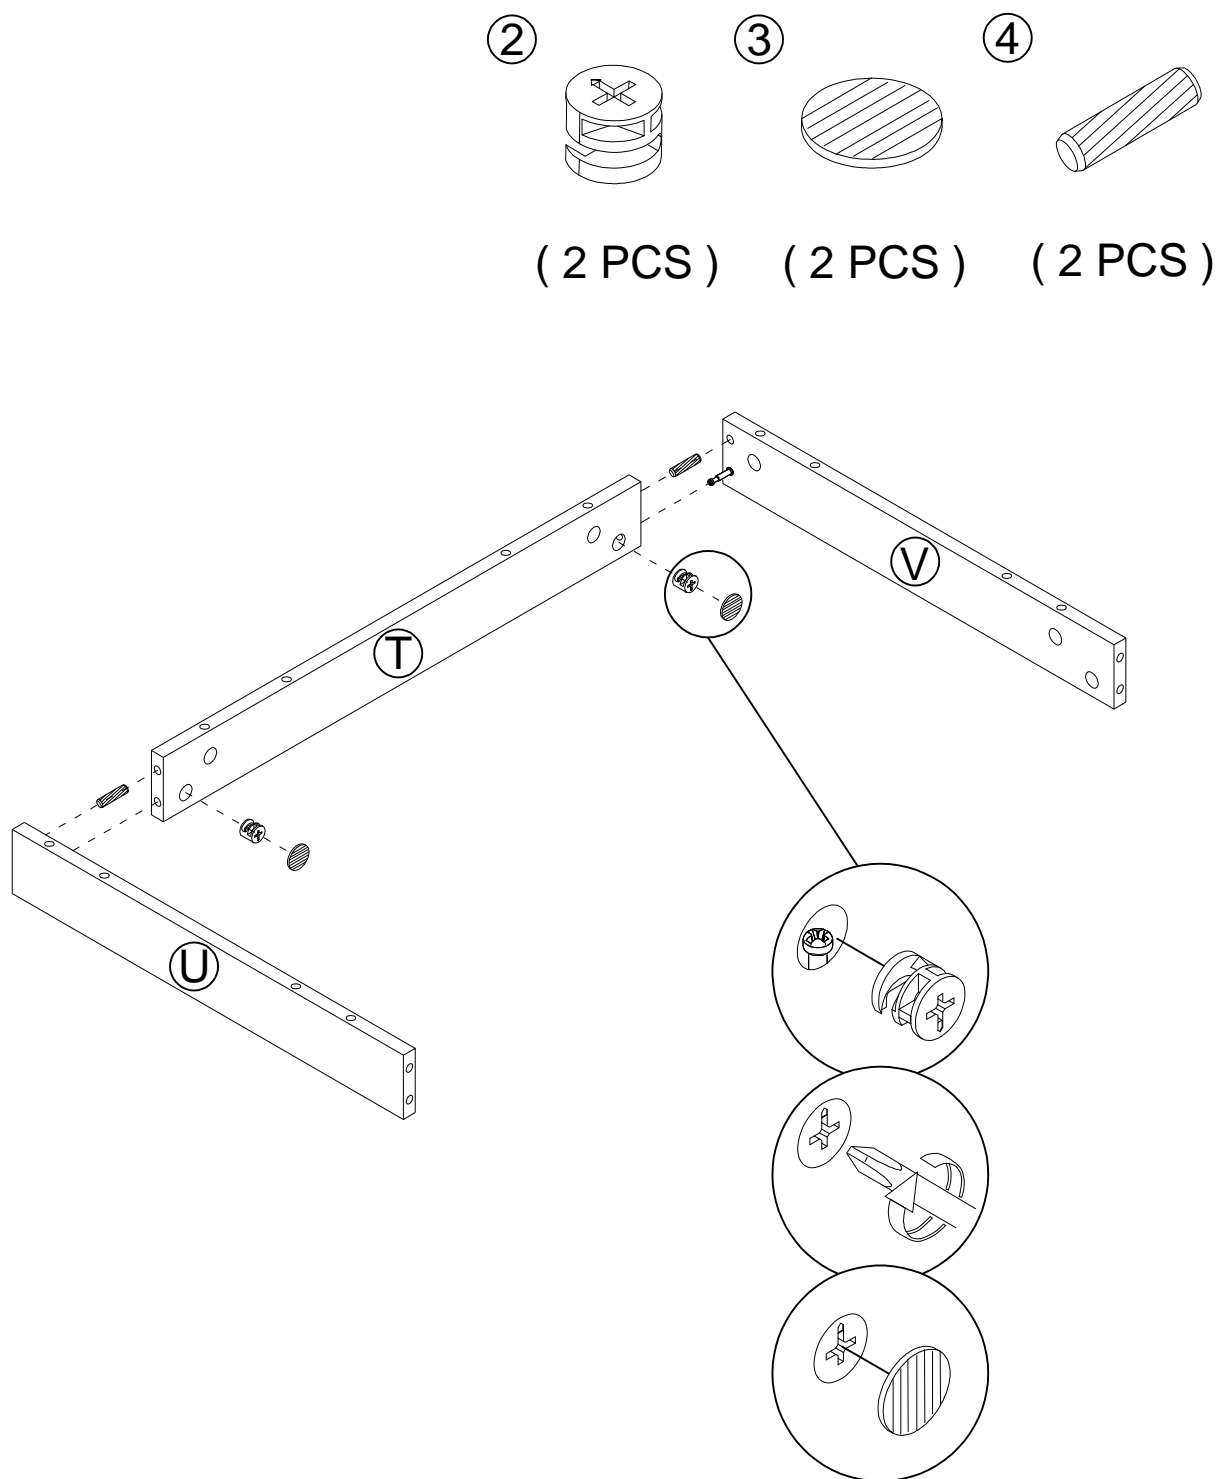

## Step 6:


---

\* Attach the LOWER FRONT PANEL(S) to the LOWER LEFT PANEL(U) and LOWER RIGHT PANEL(V) by the Two KD LARGE CAM (2) , Two COVER CAP (3) and Two WOOD DOWEL (4) .

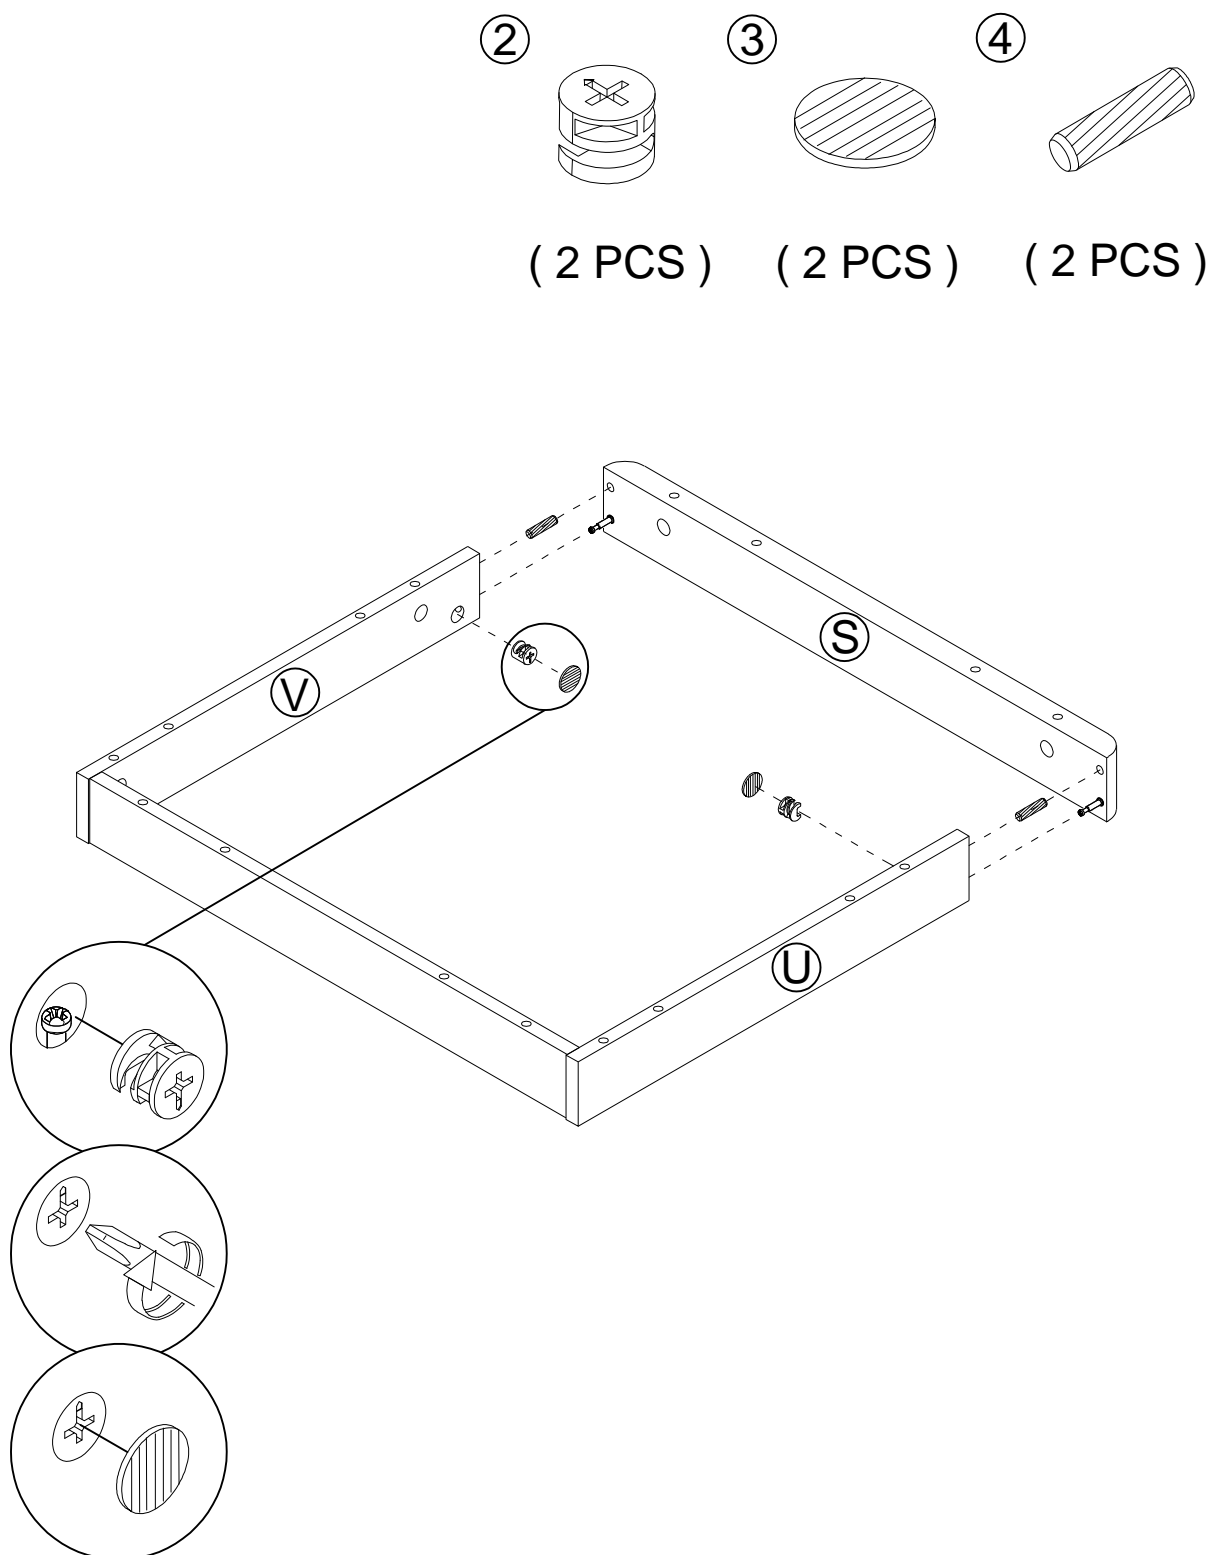


## Step 7:

\* Attach the LOWER FRONT PANEL(S), LOWER LEFT PANEL(U), LOWER RIGHT PANEL(V) and LOWER BACK PANEL(T) to the BOTTOM PANEL(B) by the Eight KD LARGE CAM (2) , Eight COVER CAP (3) and Eight WOOD DOWEL (4) .

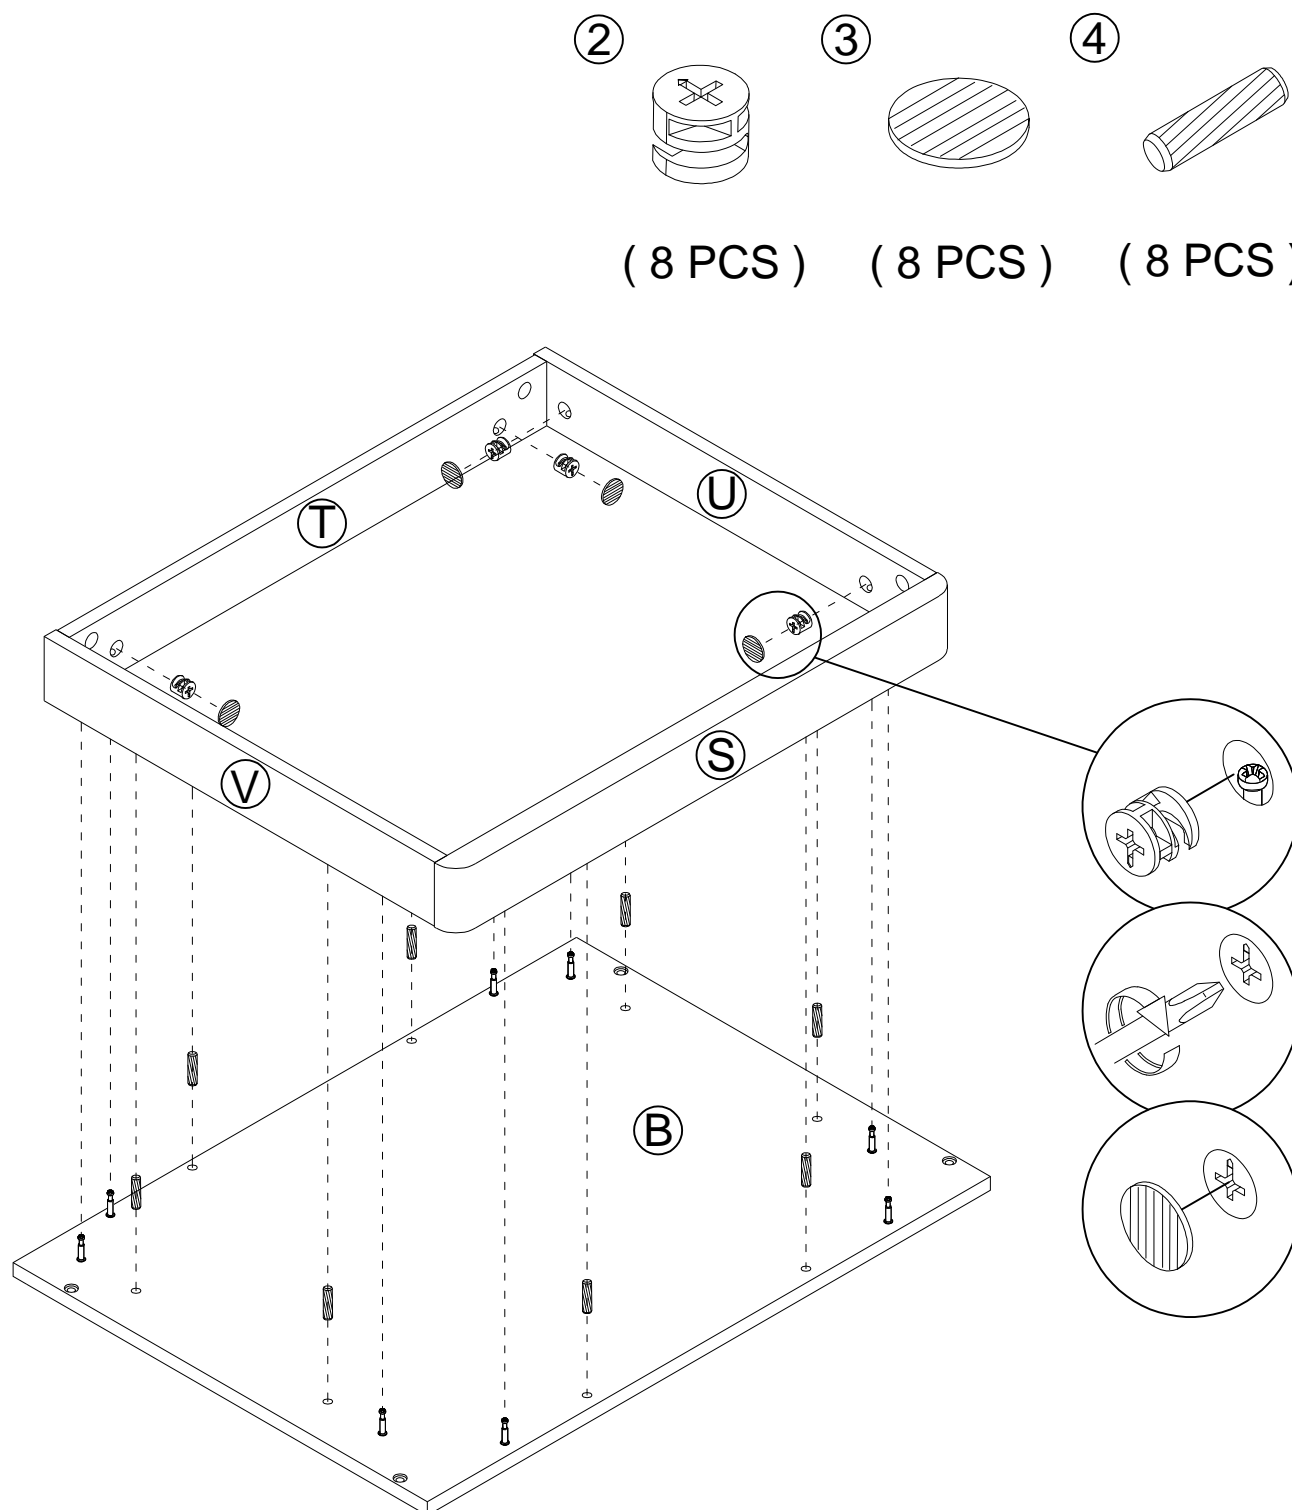


## Step 8:

\* Attach the BOTTOM PANEL(B) to the LEFT PANEL(C) and RIGHT PANEL(D) by the Four Screw(7), Four WOOD DOWEL (4) and LOCK(8) .

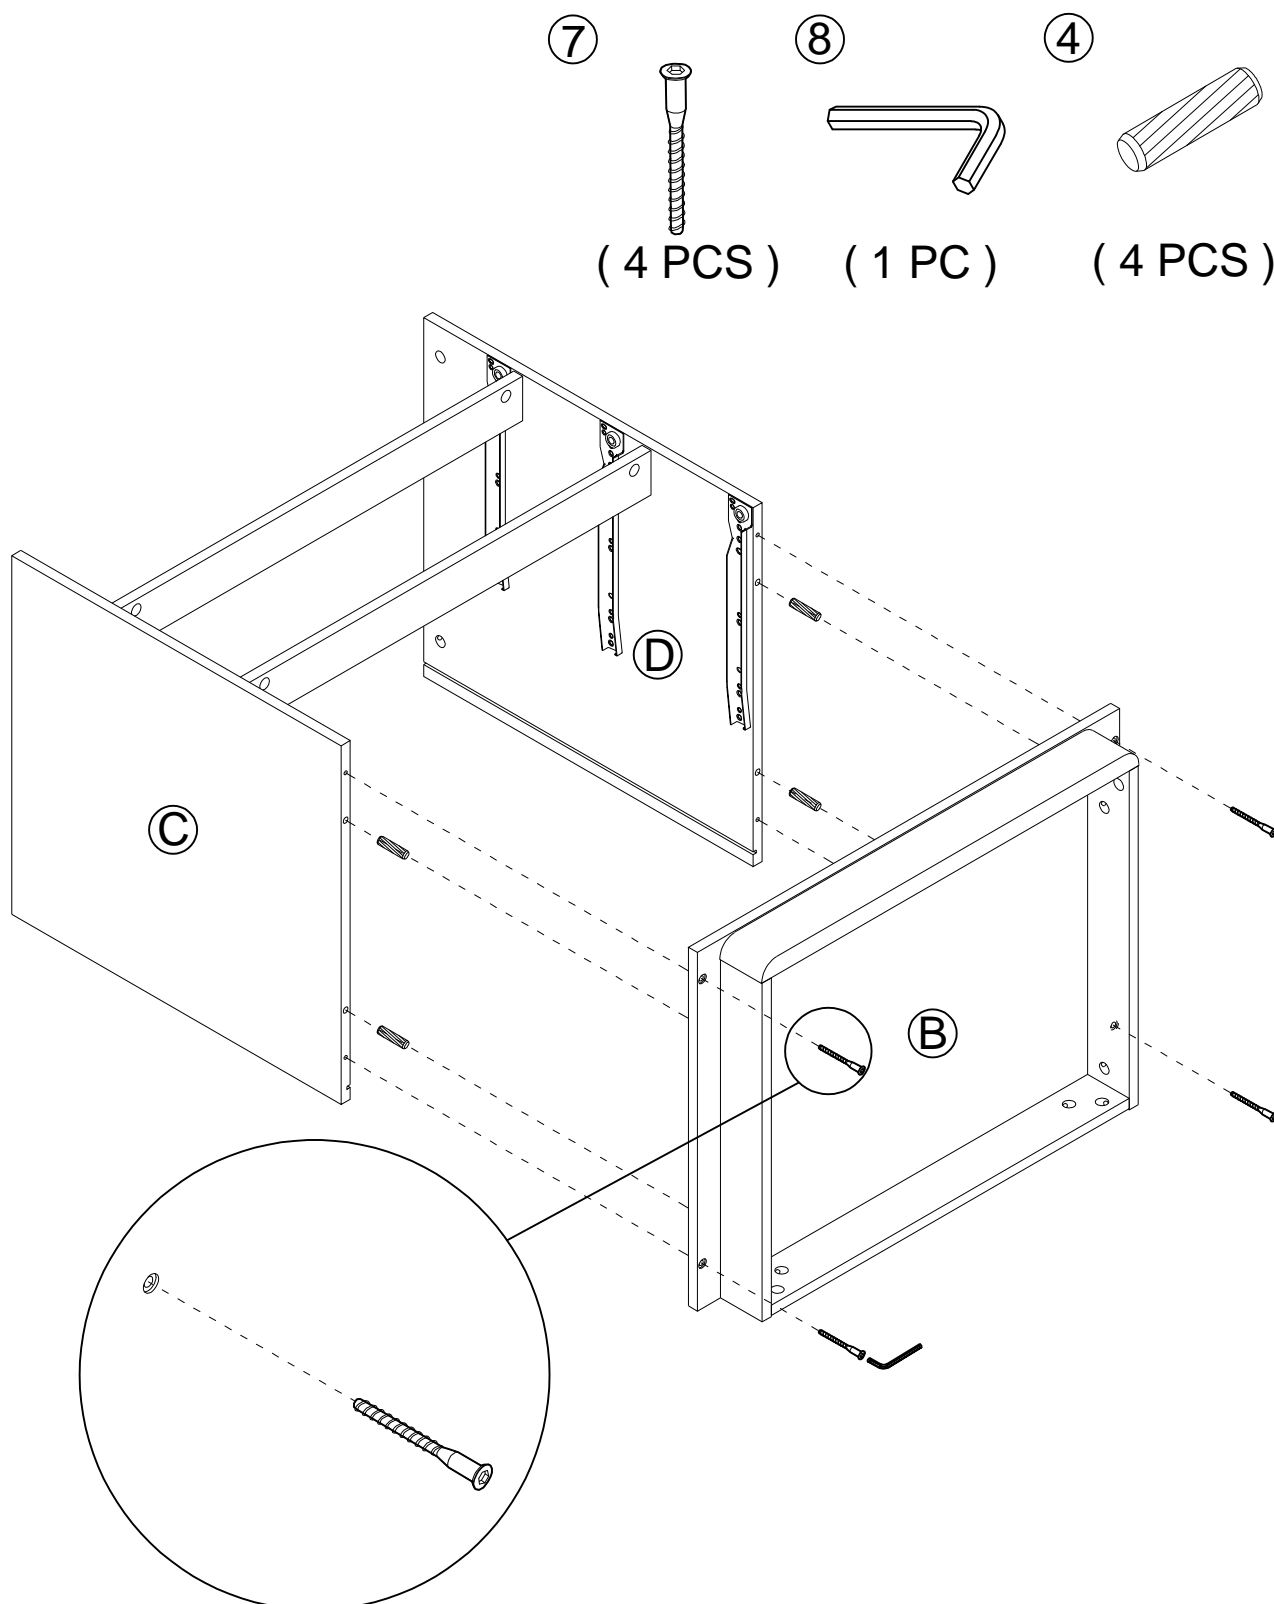



## Step 9:

\* Insert the Two BACK PANEL(E) and BACK HORIZONTAL PANEL(F) to the stand.

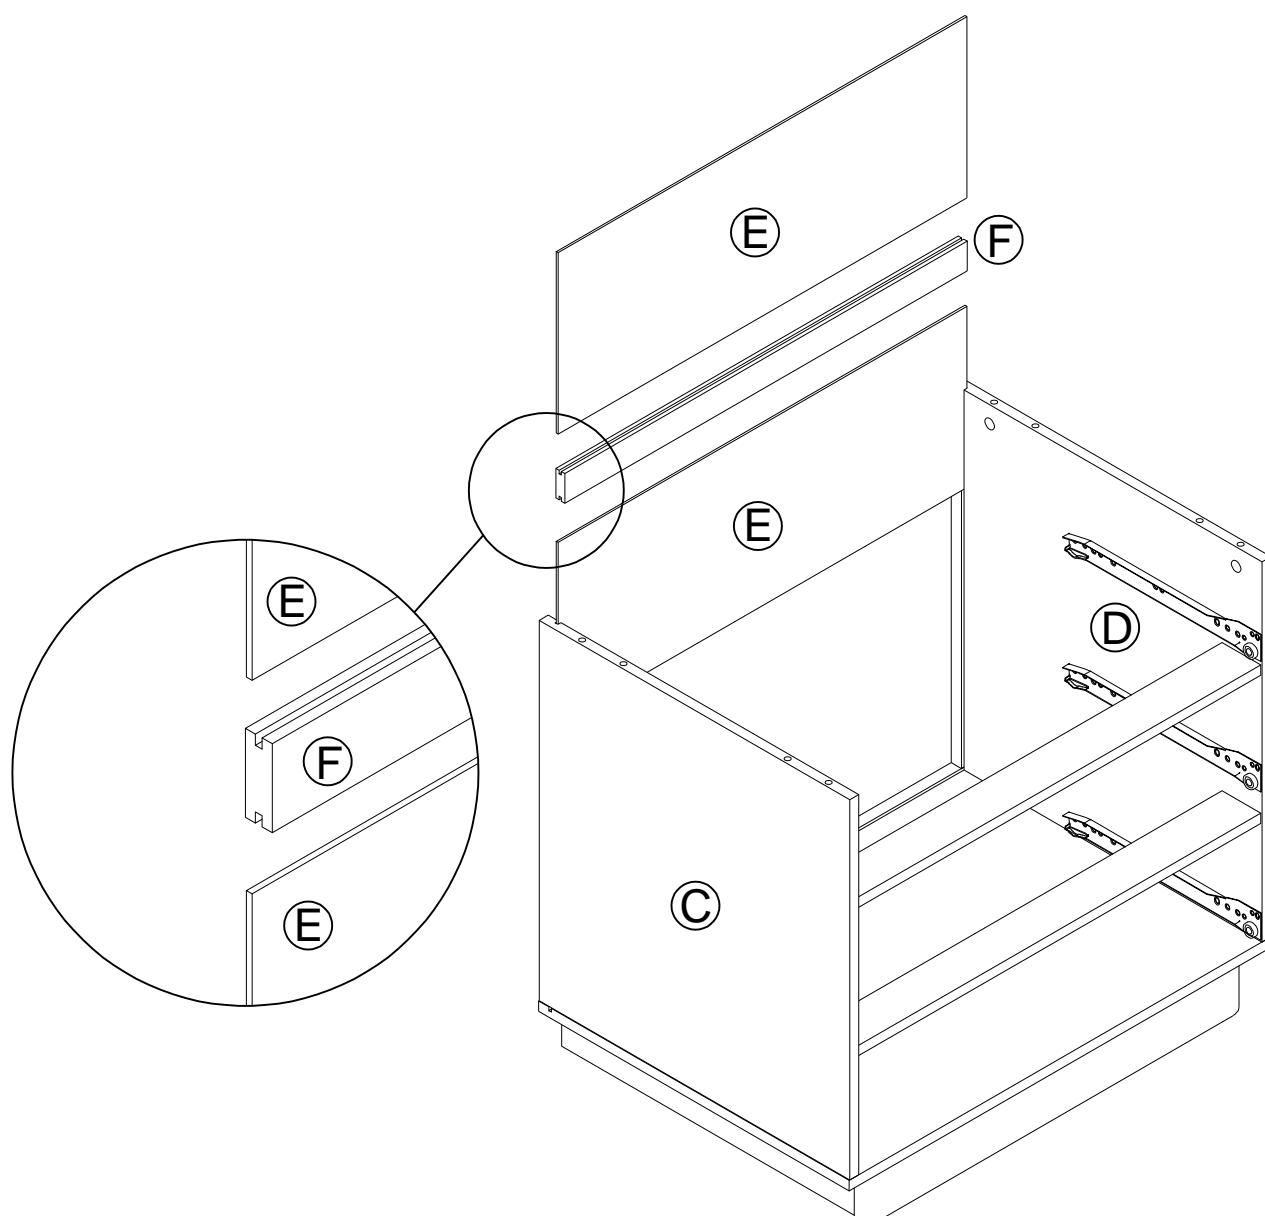


## Step 10:

\* Attach the TOP PANEL(A) to the LEFT PANEL(C) and RIGHT PANEL(D) by the Four KD LARGE CAM (2) , Four COVER CAP (3) and Four WOOD DOWEL (4) .

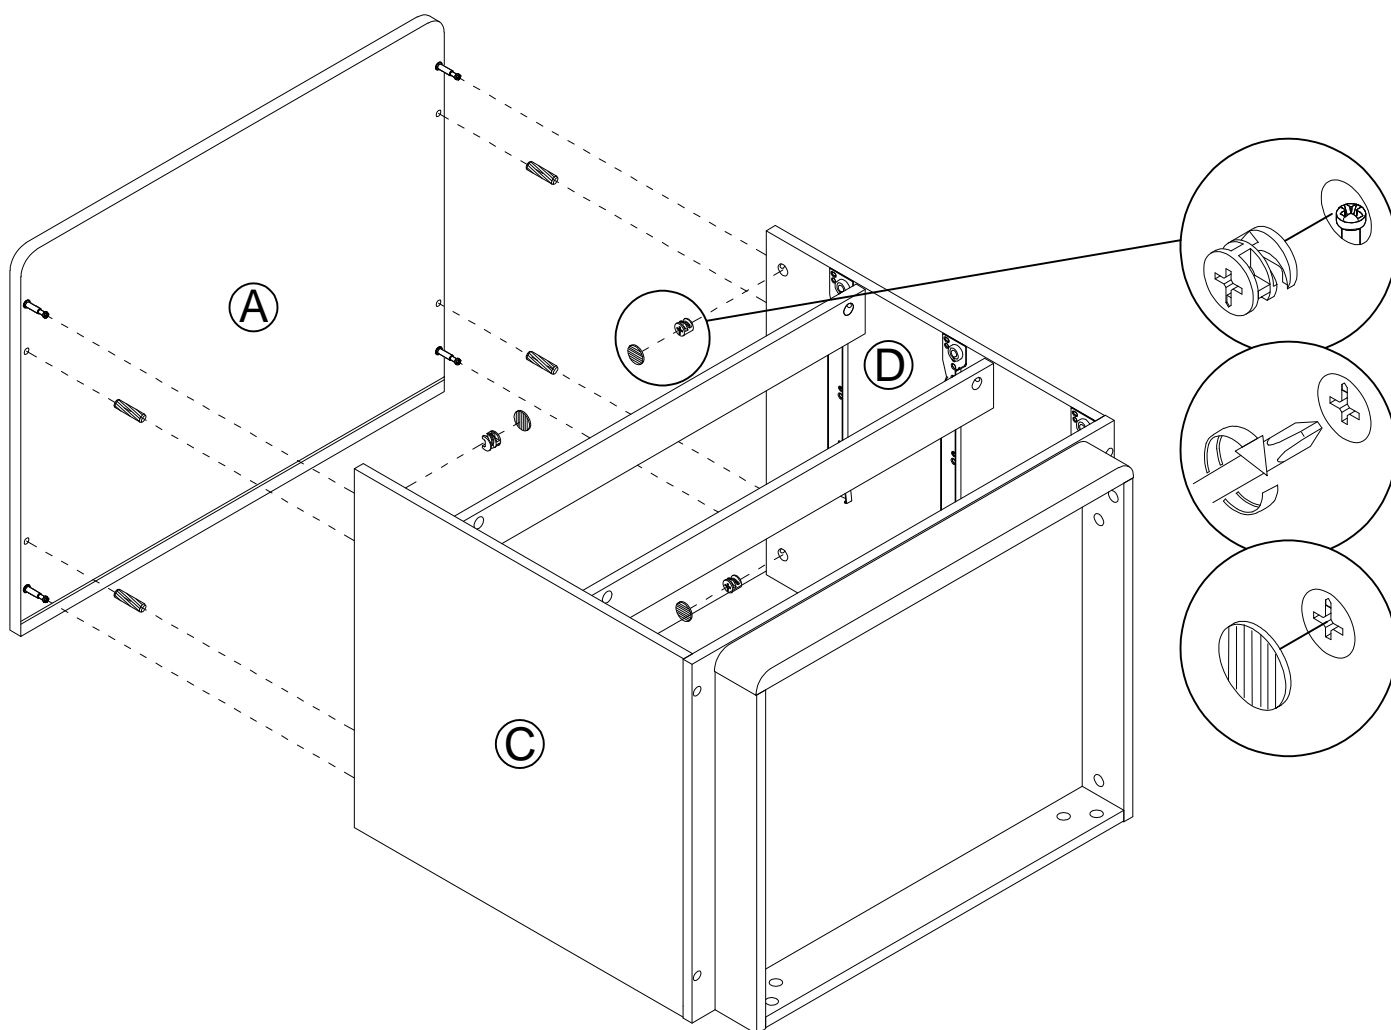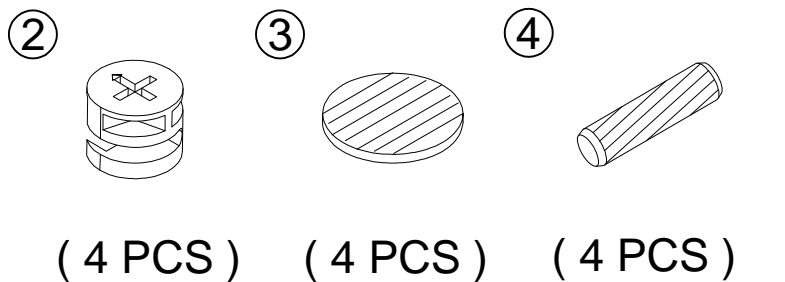

## Step 11:

\* Assemble the LARGE DRAWER BACK PANEL(L) to the LARGE DRAWER LEFT PANEL (J) and LARGE DRAWER RIGHT PANEL (K) by the SCREW (6) .

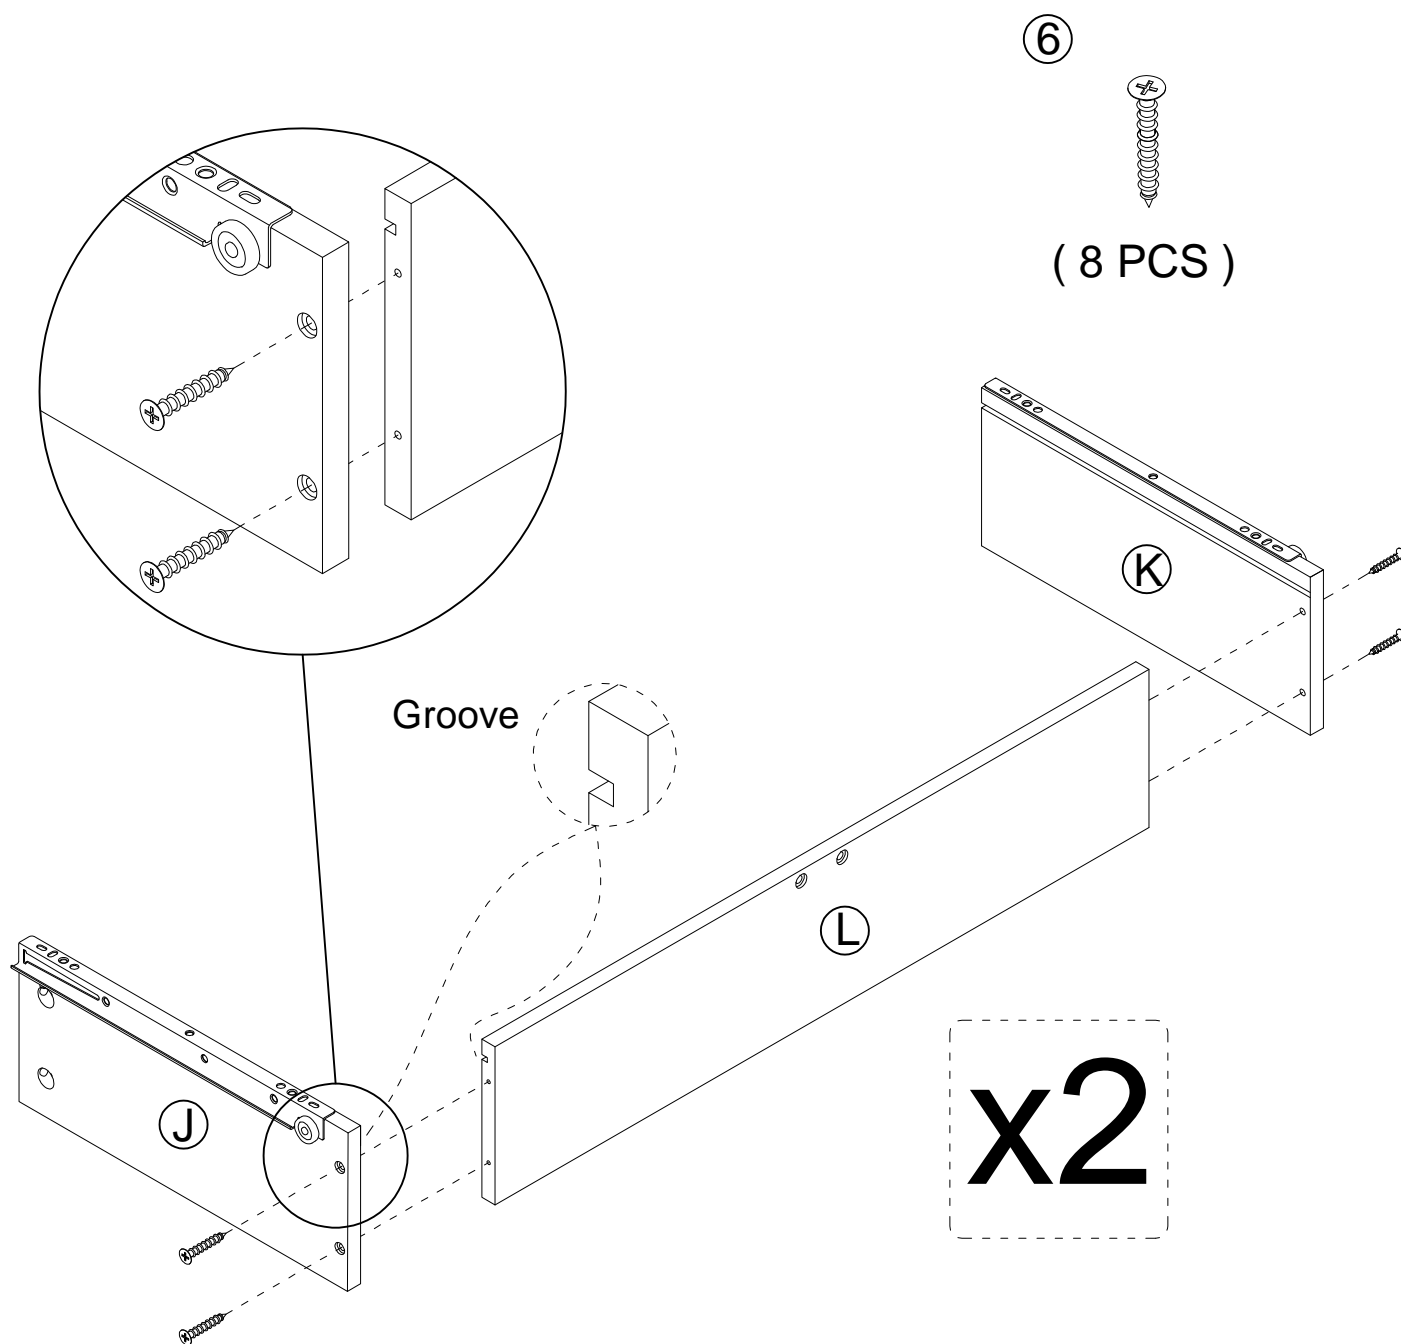




## Step 12:


---

- \* Slide in the DRAWER BOTTOM PANEL (M).

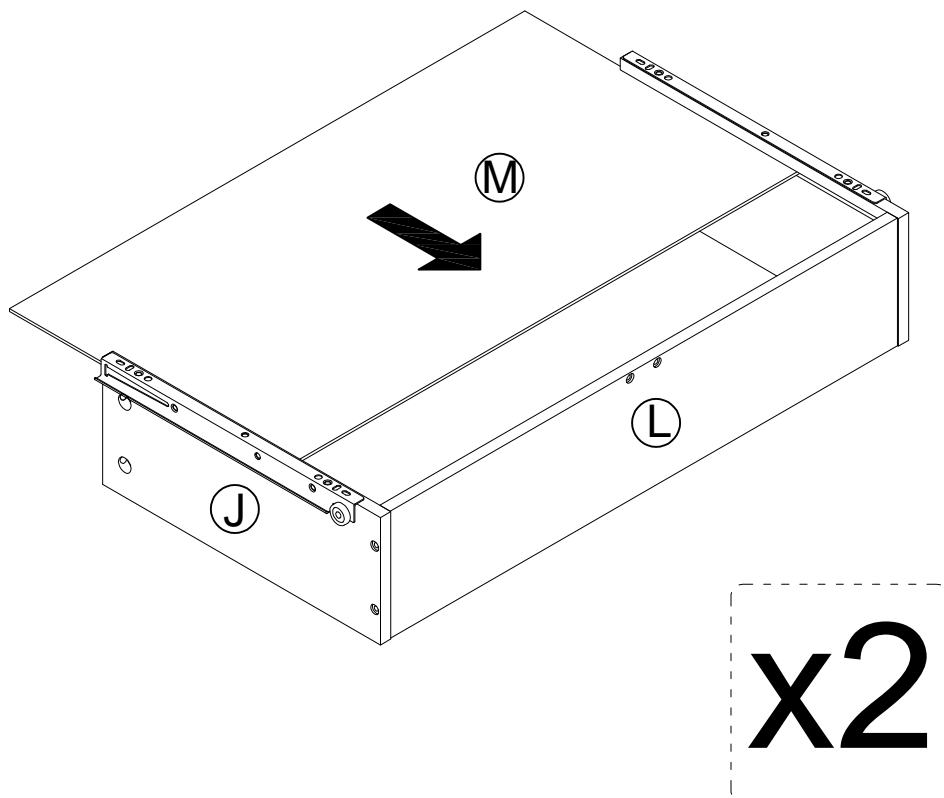


## Step 13:

\* Assemble the DRAWER SUPPORT PANEL (N) to the DRAWER TRAY by the SCREW (6) .

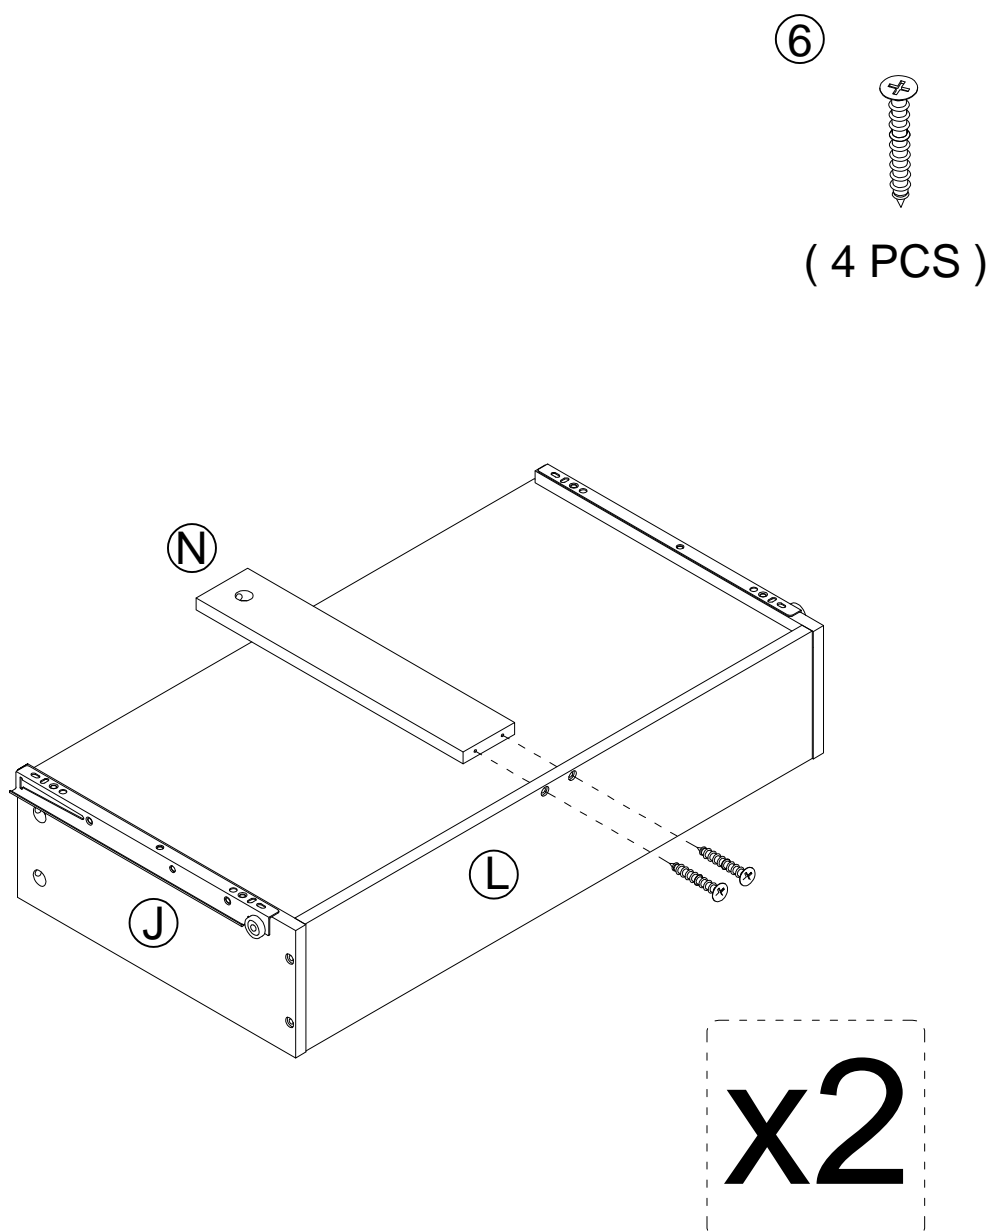

## Step 14:


\* Assemble the SMALL DRAWER BACK PANEL(Q) to the SMALL DRAWER LEFT PANEL (O) and SMALL DRAWER RIGHT PANEL (P) by the SCREW (6) .

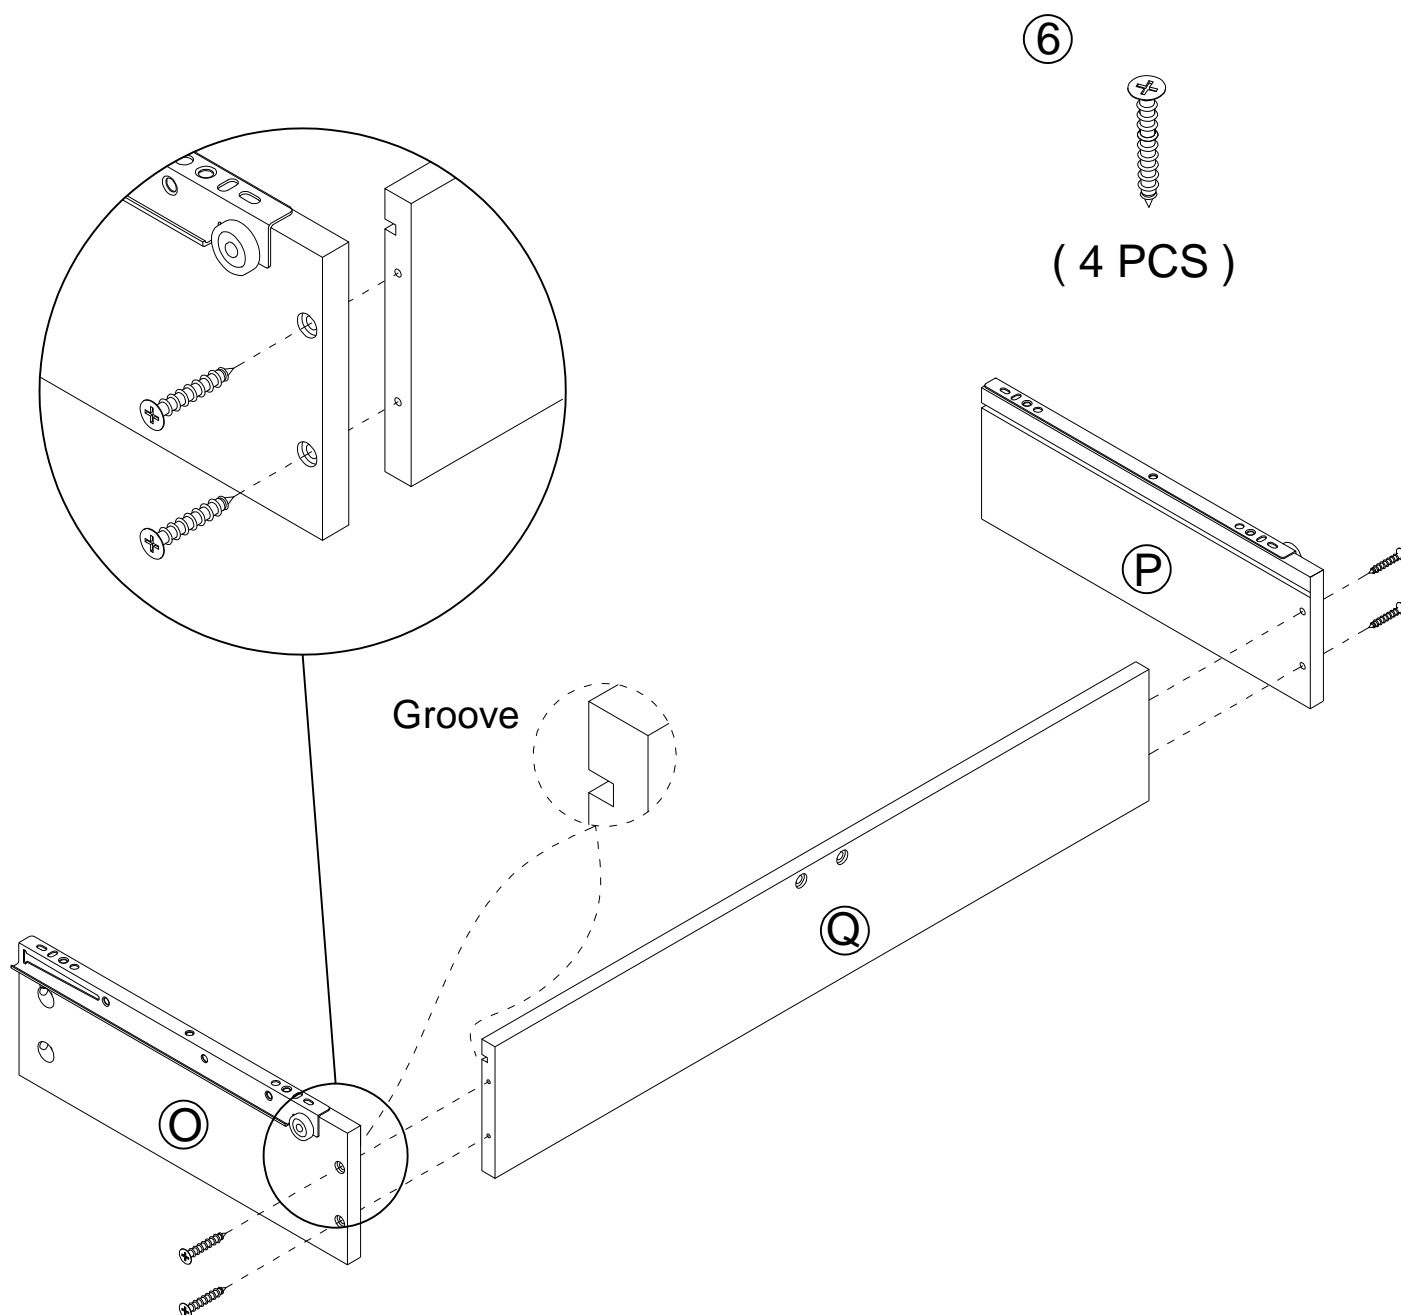

## Step 15:

---

- \* Slide in the DRAWER BOTTOM PANEL (M).

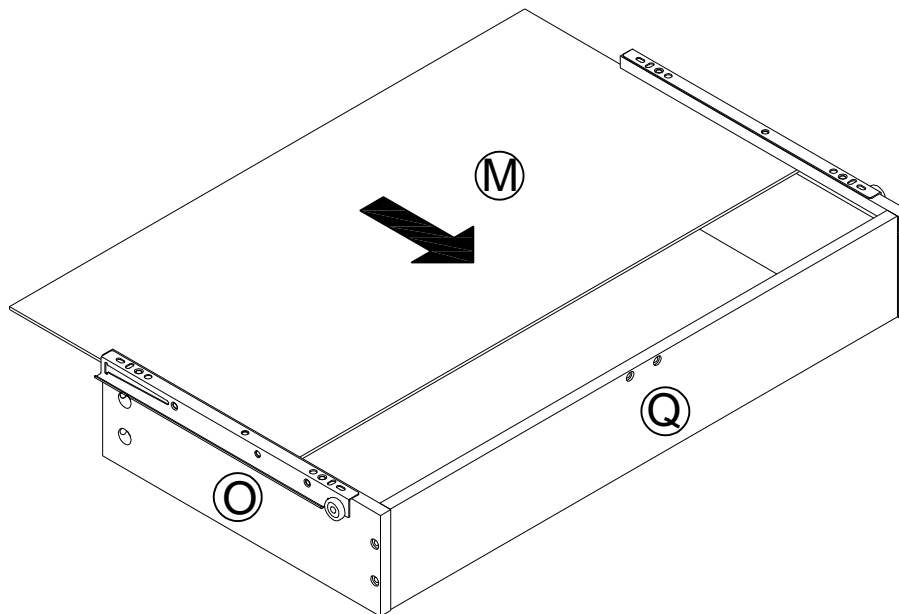


## Step 16:

\* Assemble the DRAWER SUPPORT PANEL (N) to the DRAWER TRAY by the SCREW (6) .

⑥




( 2 PCS )

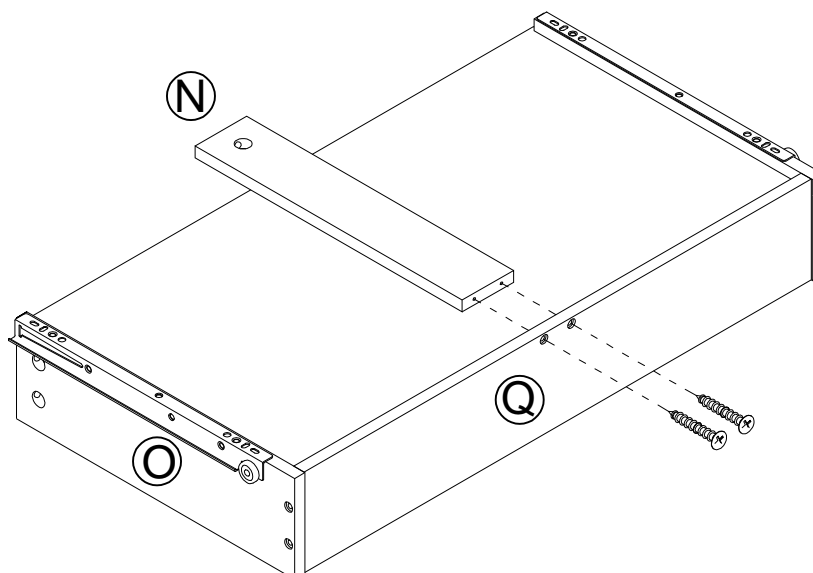

## Step 17:


\* Insert Fifteen KD BOLT (1) to the DRAWER MIDDLE FRONT PANEL (H), DRAWER TOP FRONT PANEL(R) and DRAWER BOTTOM FRONT PANEL(I).

Attach the Three BLACK HANDLE(9) or Three GOLD HANDLE(17) to the DRAWER MIDDLE FRONT PANEL (H), DRAWER TOP FRONT PANEL(R) and DRAWER BOTTOM FRONT PANEL(I) by the SCREW (10).

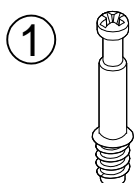


( 15 PCS )

⑨




( 3 PCS )

⑪⑦






( 3 PCS )

⑪⑩



( 6 PCS )

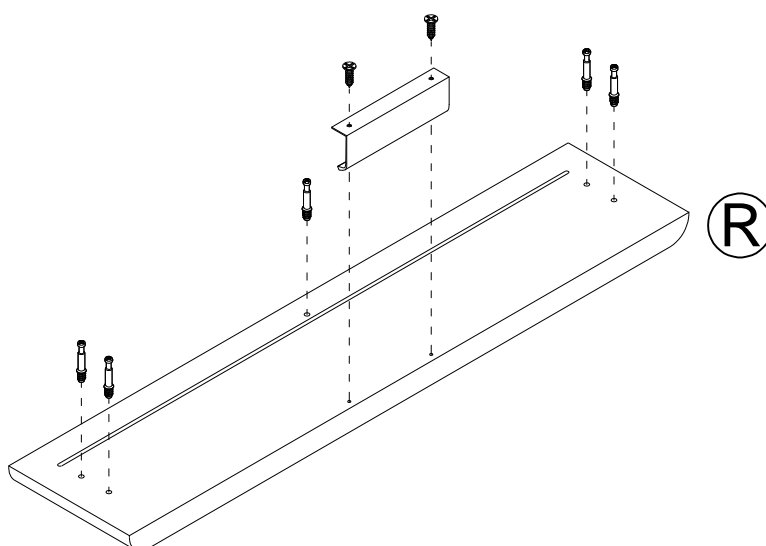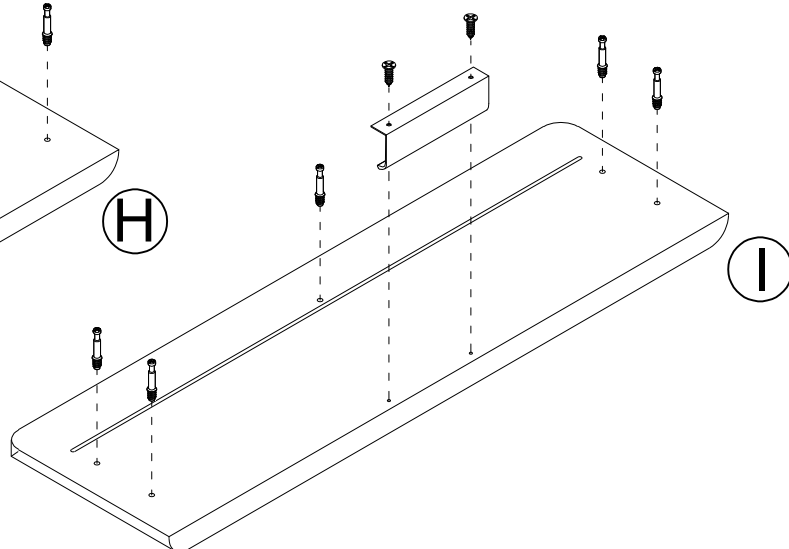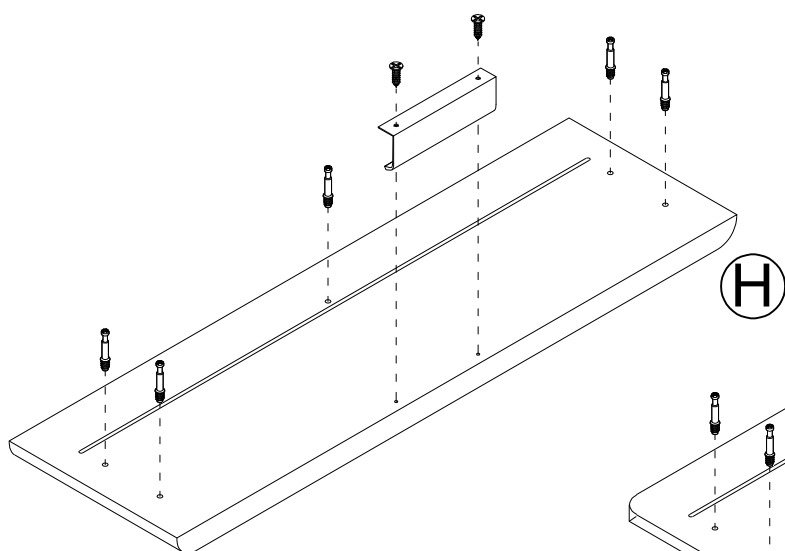

## Step 18:


\* Assemble the DRAWER MIDDLE FRONT PANEL(H) to the LARGE DRAWER TRAY by the Five KD SMALL CAM(5) and Five COVER CAP (3).

⑤




( 5 PCS )

③




( 5 PCS )

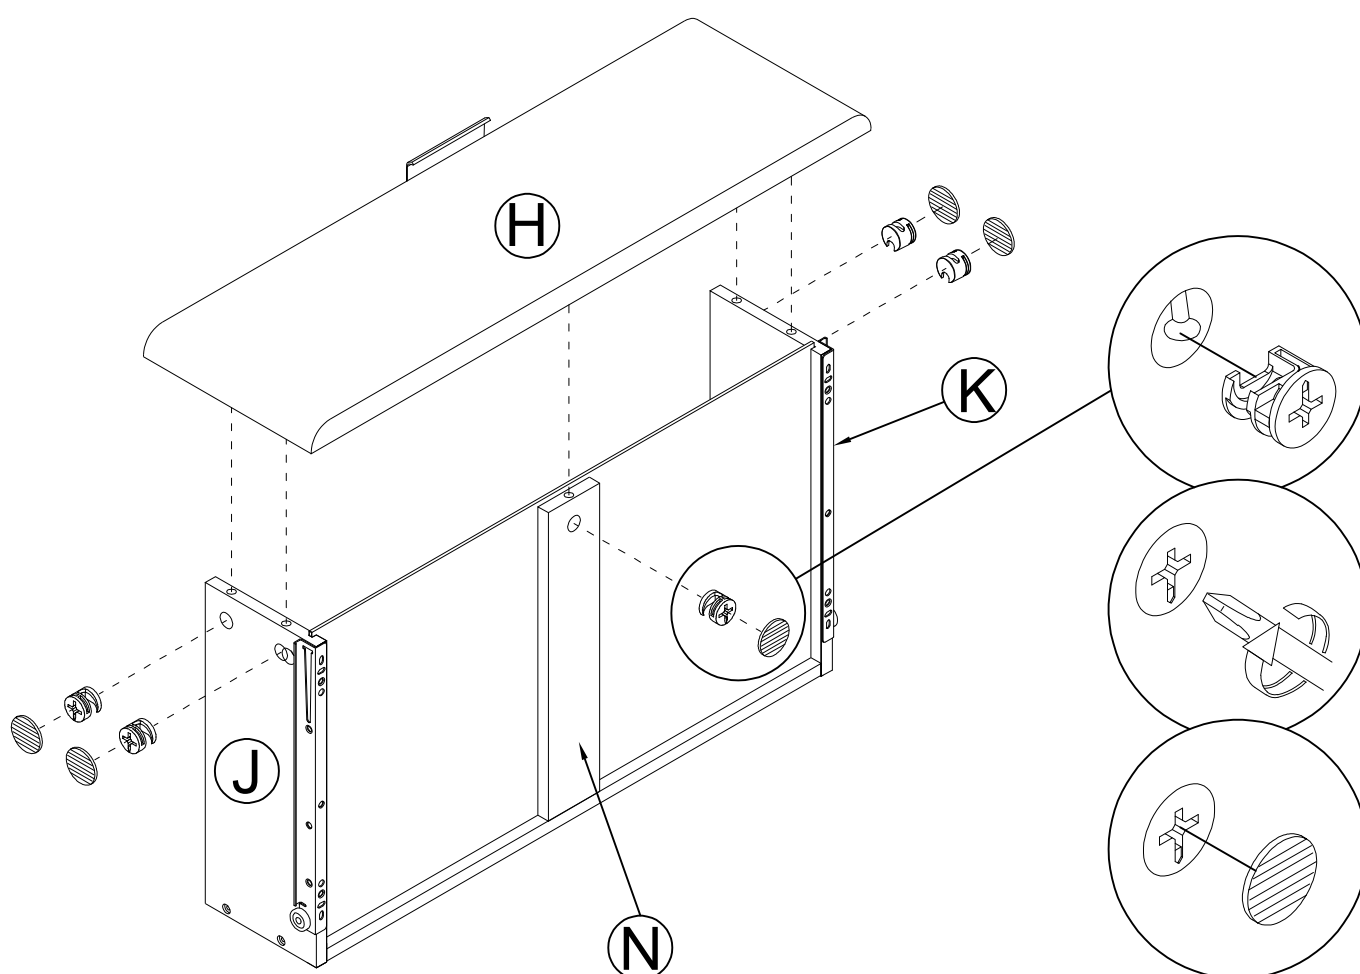

## Step 19:


\* Assemble the DRAWER BOTTOM FRONT PANEL(I) to the LARGE DRAWER TRAY by the Five KD SMALL CAM (5) and Five COVER CAP (3).

⑤




( 5 PCS )

③



( 5 PCS )

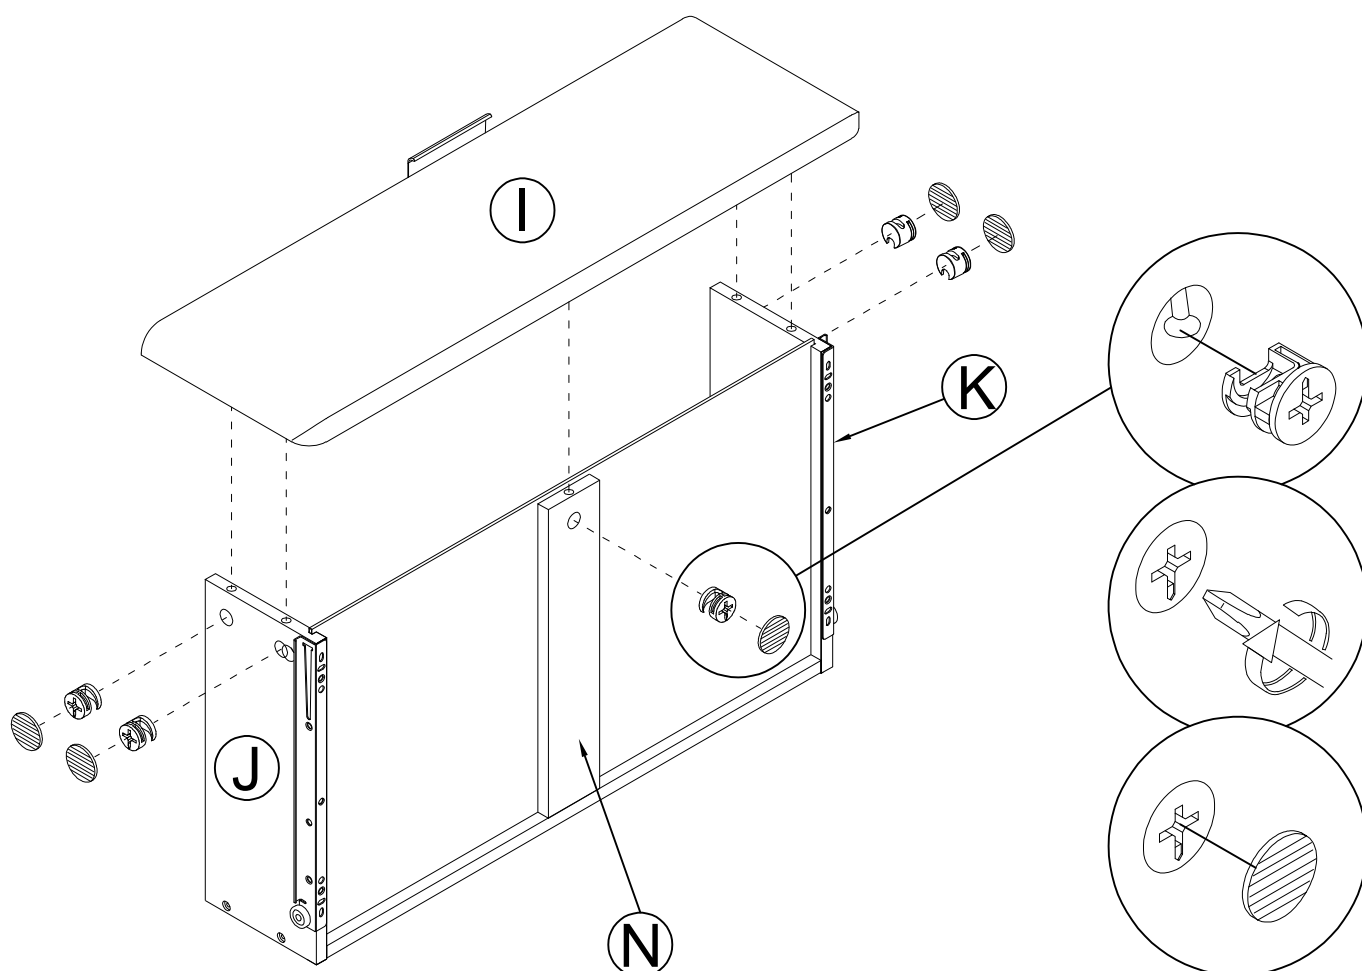



## Step 20:


\* Assemble the DRAWER TOP FRONT PANEL (R) to the SMALL DRAWER TRAY by the Five KD SMALL CAM (5) and Five COVER CAP (3).

⑤




( 5 PCS )

③





( 5 PCS )

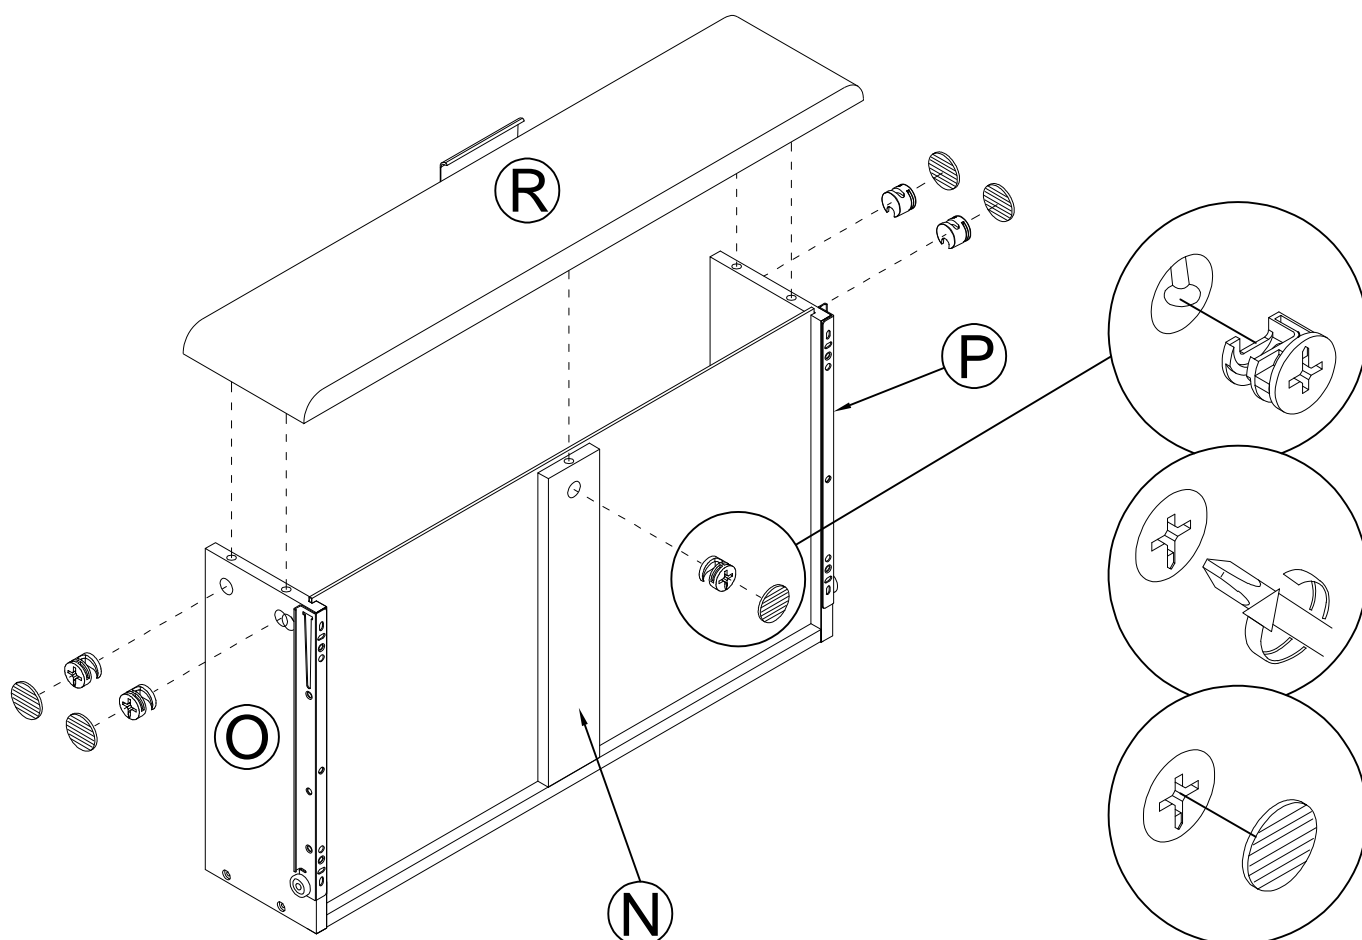

## Step 21:


---

\*Input Three Drawer tray to the stand.

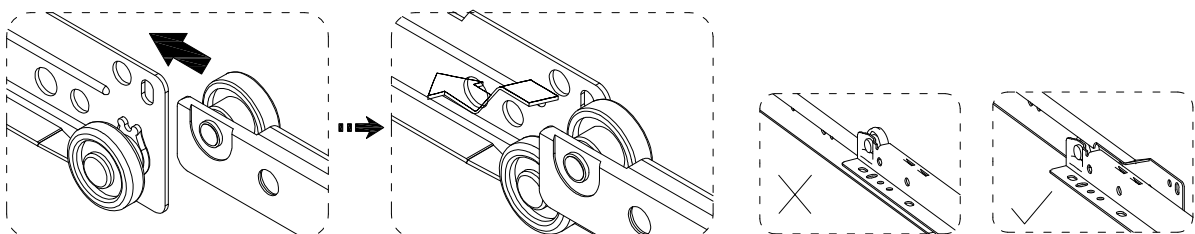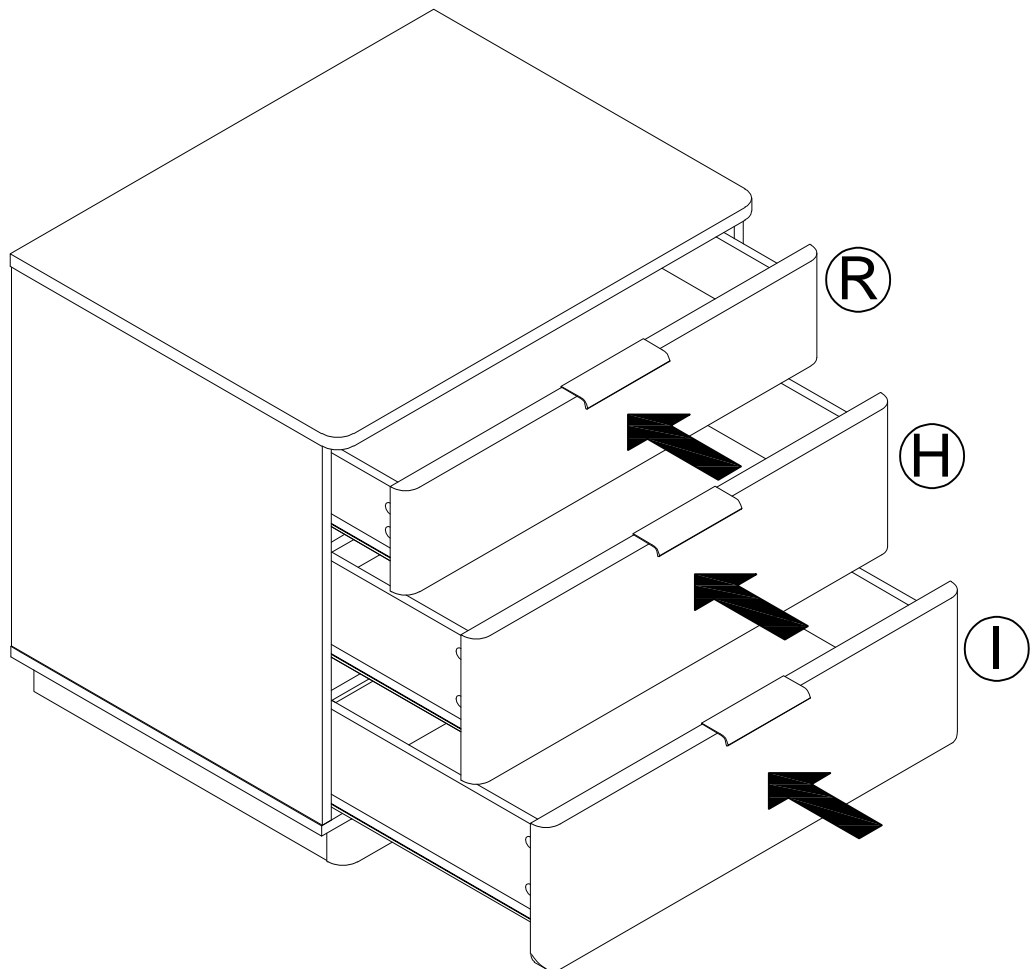

## Step 22:


\* Insert Eight PLASTIC WEDGE(11) and Eight SCREW(12) to the Two BACK PANEL (E).

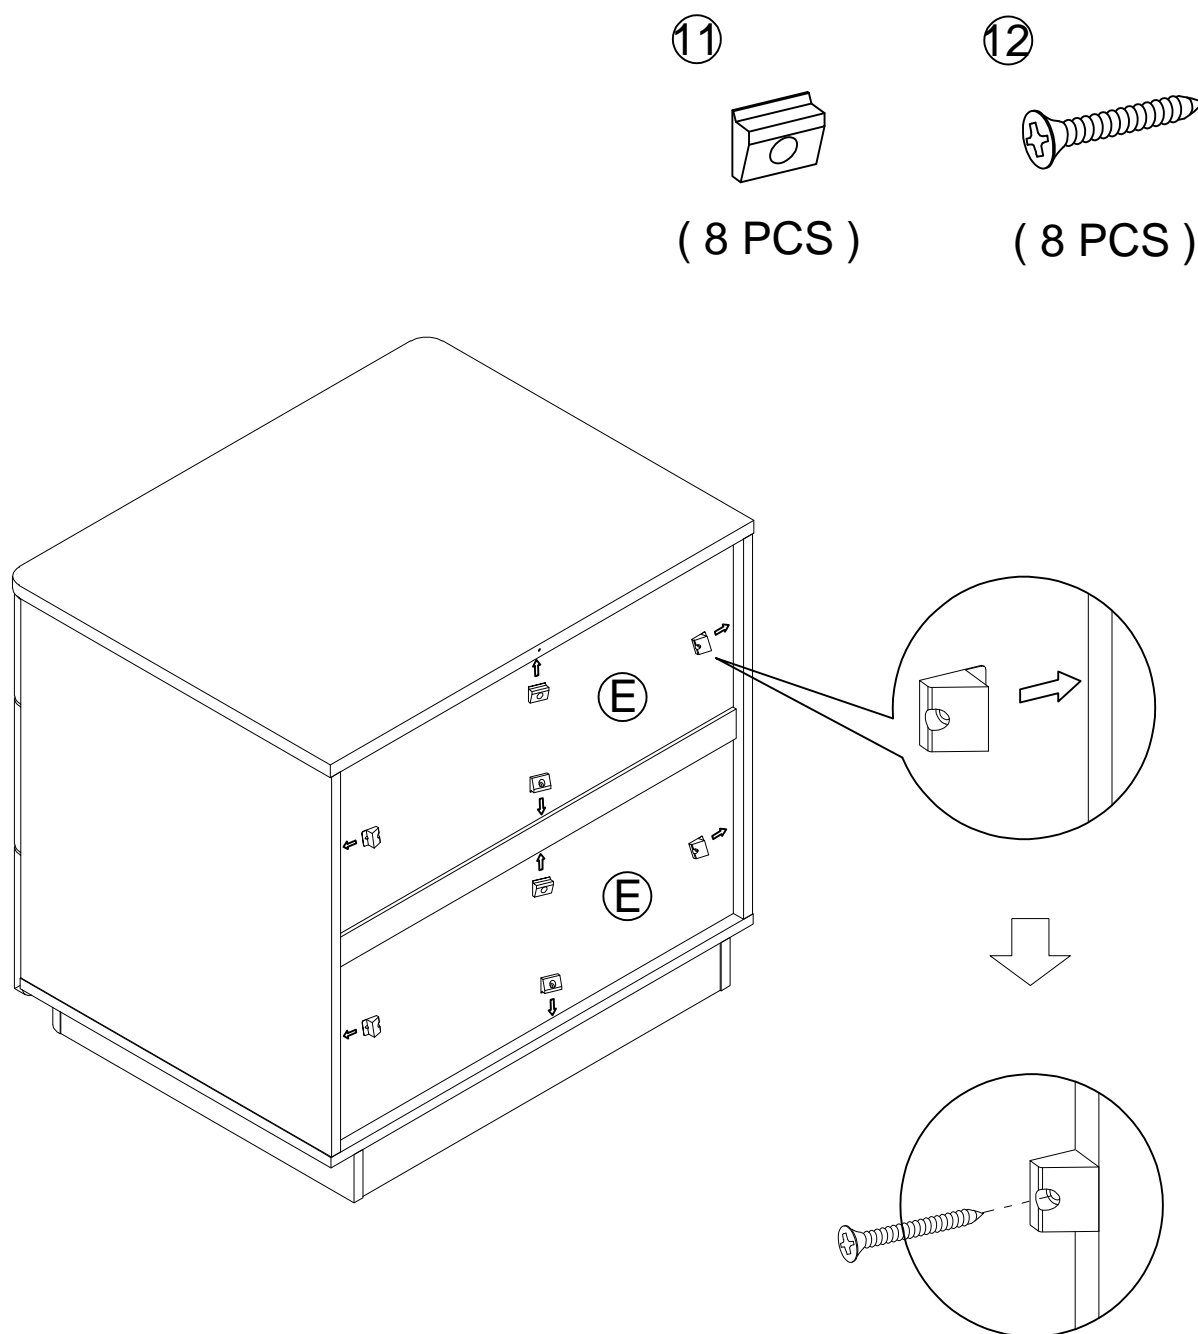

## Step 23:

---

\* Attach anti-tipping straps to the back of the stand.

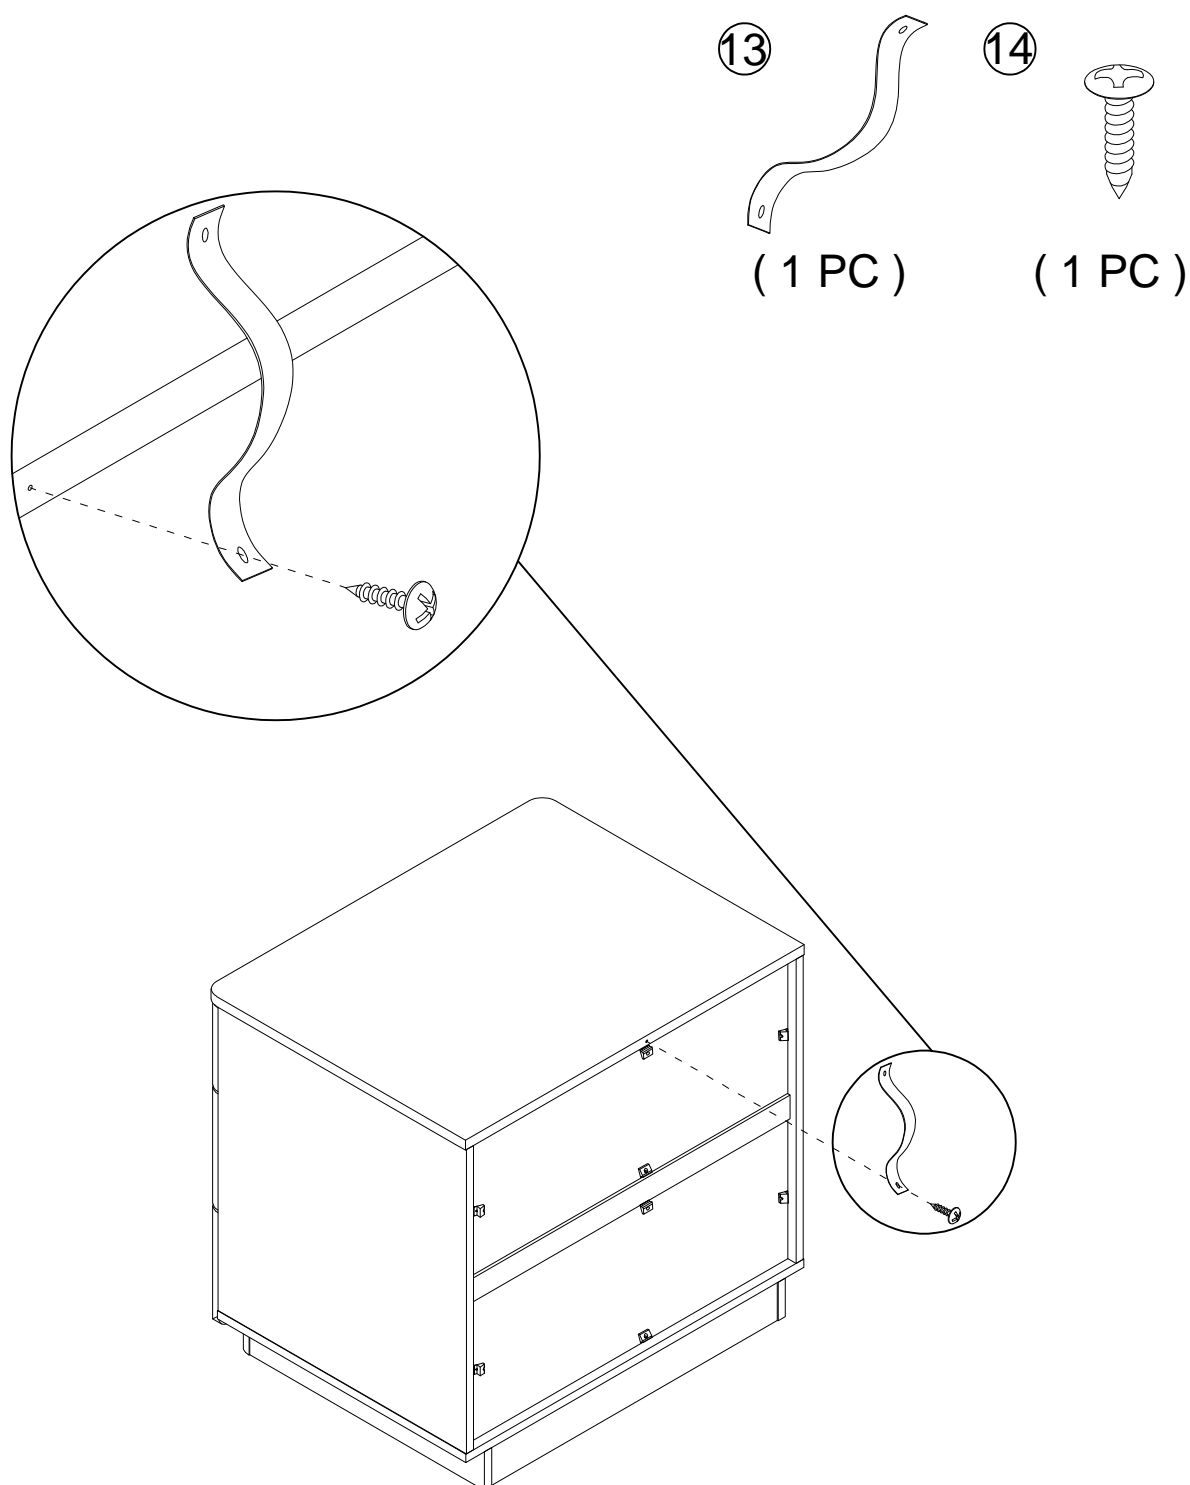

## Step 24:


1st- With your pencil, strike a mark through the center of the hole in the SAFETY STRAP.

2nd- Drill a 3/8" hole on the mark.

3rd- FURNITURE TIPPING RESTRAINT KIT (16) into the hole until it is even with the surface of the wall.

4th- Turn the LONG SCREW through the hole in the SAFETY STRAP and into the WALL ANCHOR.

NOTE: You will need to turn the LONG SCREW multiple turns to completely tighten and secure your unit.

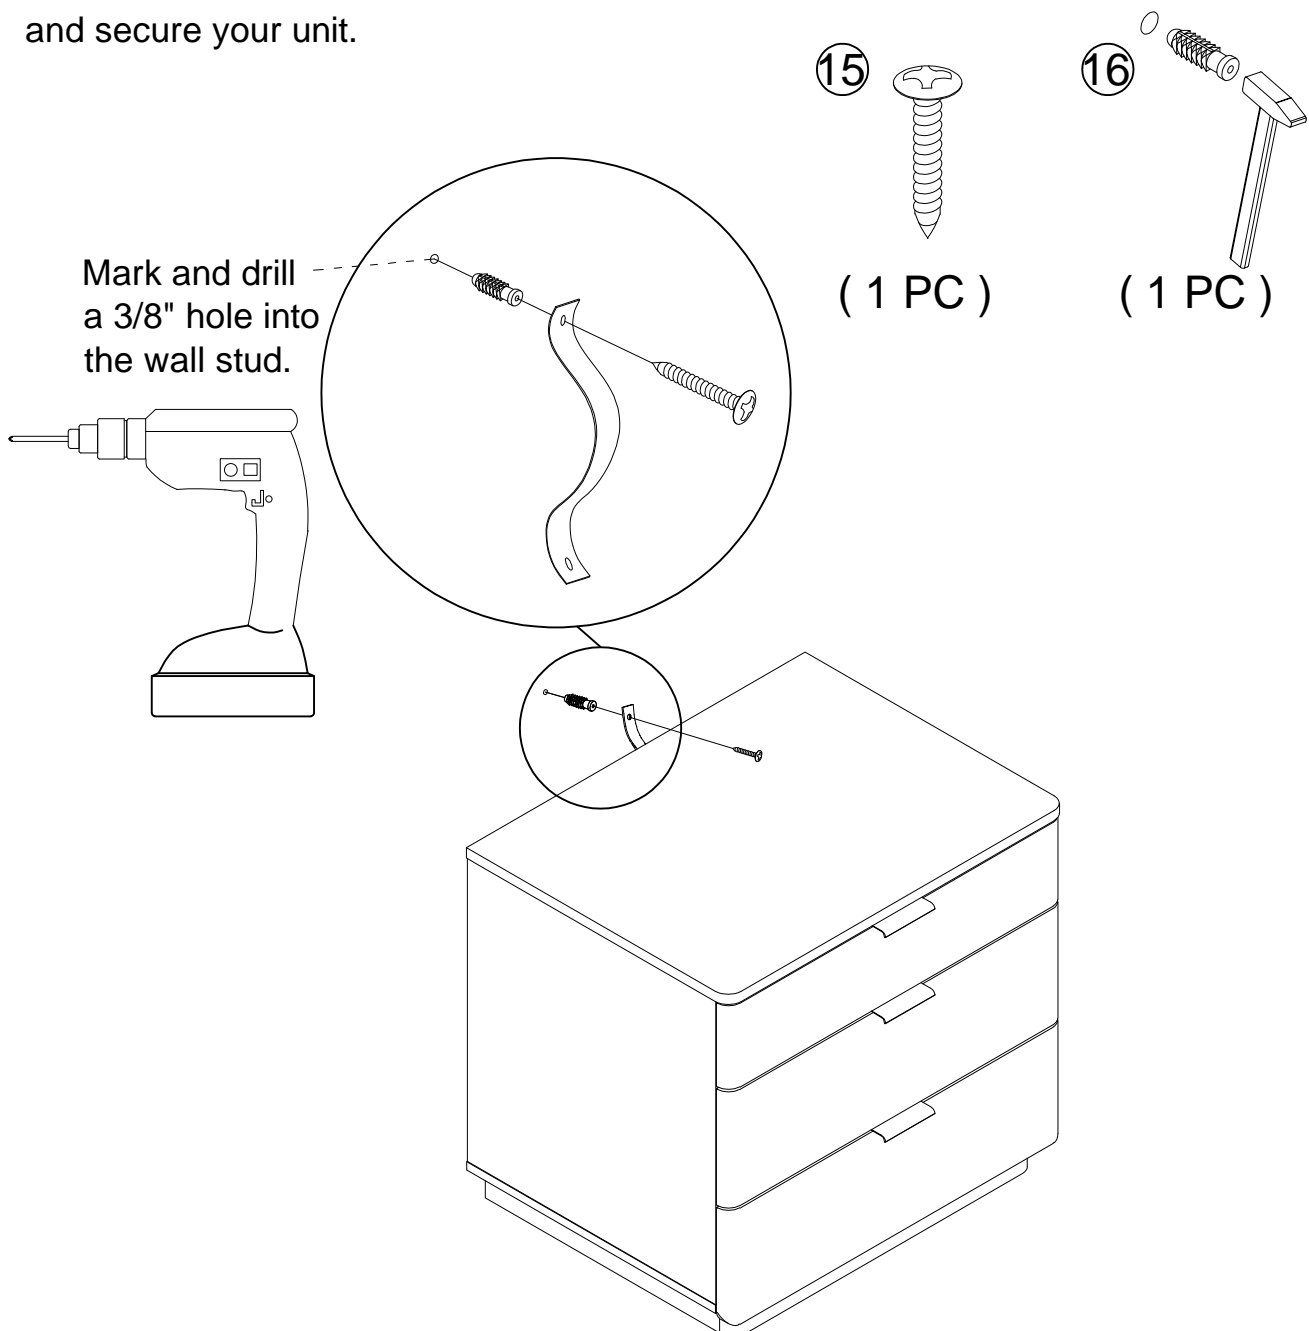



## WARRANTY POLICY

All Manhattan Comfort furniture products are warranted, to the original purchaser at the time of purchase and for a period of 30 days thereafter.

Our warranty is limited to new products purchased in factory sealed cartons. This warranty is valid in the United States of America and Canada.

In order to provide you with timely assistance, please thoroughly inspect your furniture for missing or defective parts immediately after opening the carton.

Manhattan Comfort offers a 30-day parts replacement warranty on all items.

Our furniture products are not intended for outdoor use.

### THE WARRANTY DOES NOT COVER:

- Defects/damages by improper assembly or disassembly.
- Defects/damages caused by shipping. Claims for damage during transit should be placed immediately to the transportation company.
- Defects/damages caused by inappropriate use of the furniture.



319 Ridge Rd. Dayton, NJ 08810  
908-888-0818