# **Assembly Instructions**

Caution: You must read this before you proceed

### Care & Maintenance



• Not for commercial use. For residential use only.



 Furniture may scratch floors. We recommend using furniture pads to protect your floors.



• Do not put hot items directly on furniture surface.



 Do not clean furniture with harsh cleansers or polish.



• Do not place furniture under direct sunlight.



 Do not place furniture near heating or cooling vents.



 Do not write on furniture without a padded barrier to protect the surface.



• Do not place furniture outside . For indoor use only.



 Stains may be removed with mild soap solution and damp cloth.



• Children should not climb or jump on the furniture.



 Dust and pick-up spills using a clean, noncolored, lint-free cloth.

Please look in carton for hardware packs and legs.


# BARSTOOL

Parts List				
Label	Picture	Description	QTY	
A		Chair Seat	1	
В		Leg (Upper)	1	
С		Leg (Lower)	1	
D		Foot Panel	1	

<u>Hardware</u>				
Label	Picture	Description	QTY	
0	9	Bolt(M6x16mm)	5	
2		Bolt(M6x25mm)	5	
3		Bolt(M8x60mm)	5	
4	0	Washer(∅ 6x16x1.2mm)	5	
5		Cross-piece	1	
6		Allen Wrench	1	

# Assembly Preparation

Before Beginning Assembly:

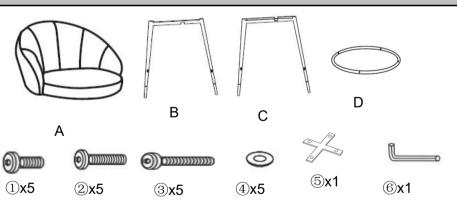



• Read instructions, cover to cover-



Have 2 adults on hand for assembly-




Do not assemble on flooring or carpet-




Assemble on a clean non-marring surface (packing foam)-




Save all packaging until finished-

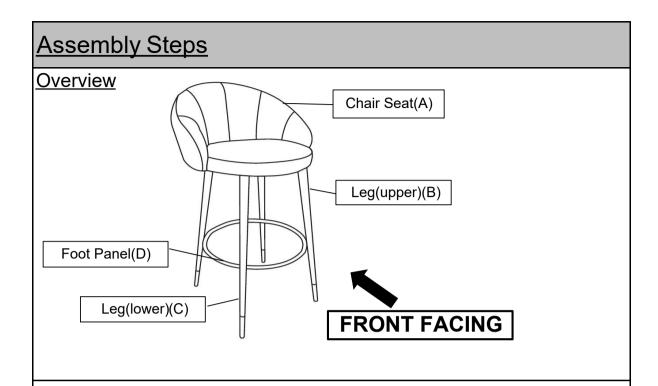

This barstool has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the barstool parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

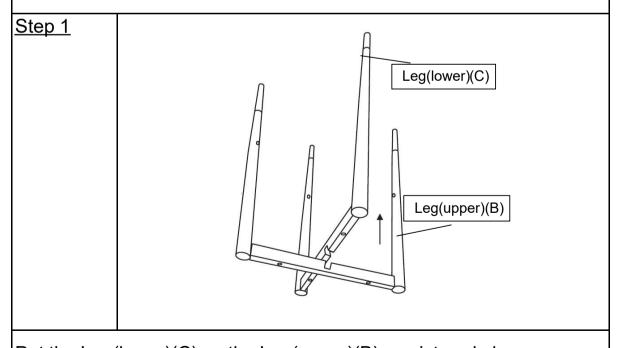


# Step 2

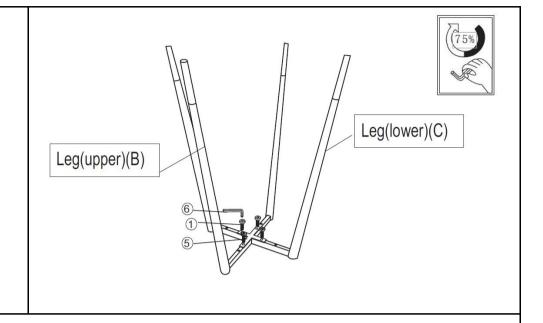

Attach the Leg(lower)(C) to the Leg(upper)(B) using Bolt(M6x16mm)(1), Cross-piece(5) with Allen Wrench(6) as pictured above.


Do not fully tighten the Bolts.

Step 3

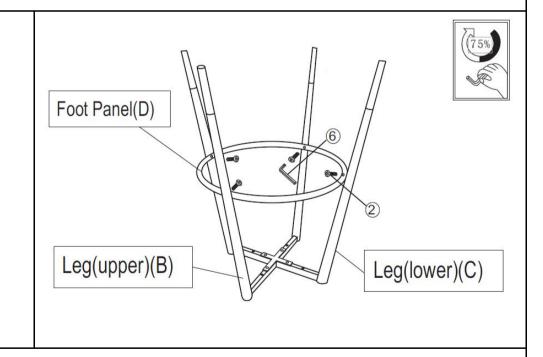

After step 2,attach the Foot Panel(D) to the Leg(B) and Leg(C) using Bolt(M6x25mm)(②) with Allen Wrench(⑥) as pictured above. Do not fully tighten the Bolts.


# Step 4

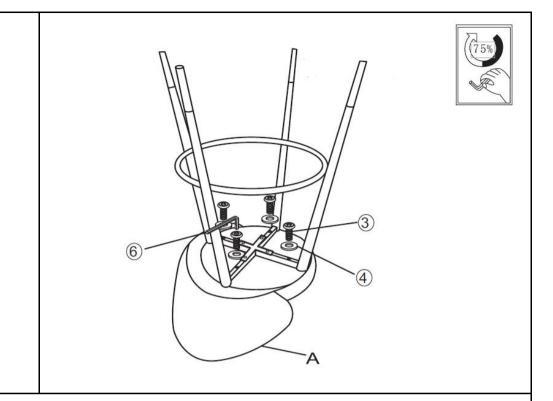

Attach the Chair Back(A) to assembled Leg Frame using the Bolt(M8x60mm)(③), Washer(④) with Allen Wrench(⑥) as pictured above.

Do not fully tighten the Bolts.

### Step 5

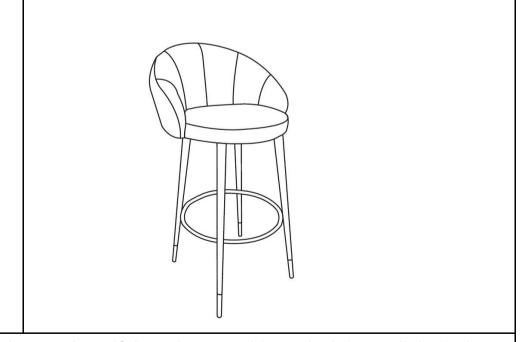

Stand the barstool up .If there is no problem,pls tighten all the bolts. Your barstool is ready to use.