
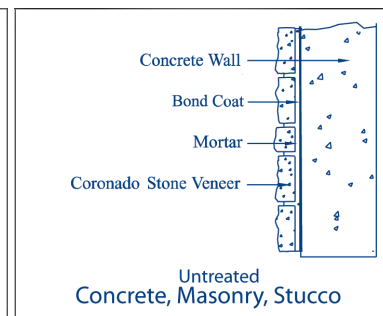
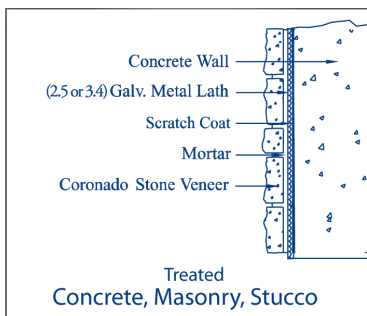
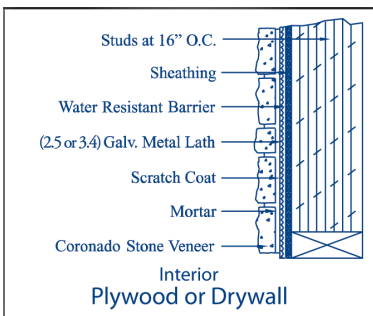


TYPES OF INSTALLATIONS

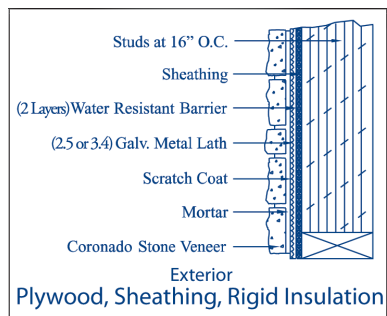

BASIC INSTALLATION INSTRUCTIONS



FIG. 1



FIG. 2



FIG. 3



FIG. 4



FIG. 5



FIG. 6

(Fig. 1) Apply a 3/8 in. layer of scratch coat to prepared surface. Scratch the plastered surface with wire lath or a hand rake while it is still wet. This will ensure that the surface is not too smooth and will allow proper adhesion between the stone and wall.

(Fig. 2) After the scratch coat has dried, mark both sides of the wall at 8 in. intervals in preparation for chalk lines. (Note: The ground below the installation may be uneven so a level may need to be utilized.)

(Fig. 3) Snapping chalk lines at 8 in. intervals will ensure that the courses of stone are installed straight and level.

(Fig. 4) Apply 1/2 in. of mortar to the back of each stone and distribute it from front to back using the lead edge of the trowel. (Note: Too much mortar can cause slipping.)

(Fig. 5) Start at the bottom corner installing one or two corner stones. Corner stones have long and short returns which should be alternated throughout the installation. (Note: Start the first stone above ground to ensure a level installation.)





(Fig. 6) While installing the first course of flats move the stone side to side, this will help the stone create a better bond to the wall surface. To avoid creating long vertical and horizontal joints, stagger stones in an ashlar pattern leaving at least a 2 in. offset on vertical joints.

PLEASE READ DETAILED INSTALLATION INSTRUCTIONS LOCATED AT
WWW.CORONADOSTONE.COM

50 YEAR LIMITED WARRANTY

www.CORONADO.com

TIPOS DE INSTALACION

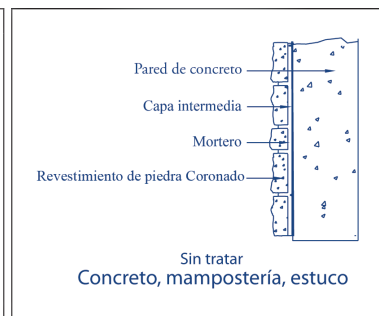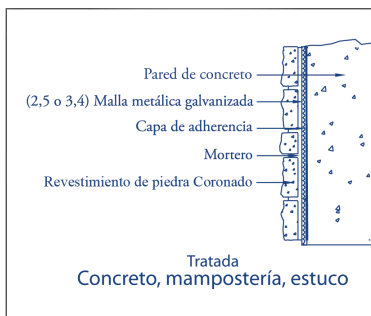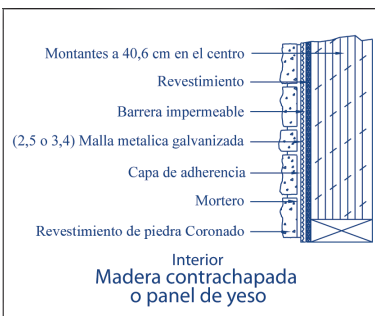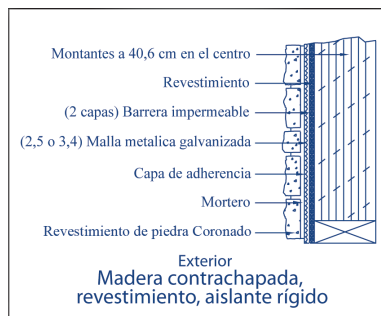

INSTRUCCIONES BÁSICAS PARA INSTALACIÓN



FIG. 1



FIG. 2



FIG. 3



FIG. 4



FIG. 5



FIG. 6

(Fig. 1) Aplique una capa de adherencia de 0,9 cm a la superficie preparada. Raspe la superficie enyesada con malla de alambre o un rastrillo de mano mientras aun esté húmeda. Esto garantizará que la superficie no esté demasiado lisa y permitirá la adherencia adecuada entre la piedra y la pared.

(Fig. 2) Después que la capa de adherencia se haya secado, marque ambos lados de la pared a intervalos de 20 cm para preparar las marcas con tiza. (Nota: El terreno debajo de la instalación puede ser desparejo así que es posible que necesite utilizar un nivel.)

(Fig. 3) El marcado de líneas de tiza a intervalos de 20 cm garantizará que las hileras de piedras sean instaladas en forma recta y nivelada.

(Fig. 4) Aplique 1,3 cm de mortero a la parte posterior de cada piedra y distribúyalo de adelante hacia atrás usando el borde frontal de la paleta. (Nota: Un exceso de mortero puede causar deslizamiento.)

(Fig. 5) Comience en la esquina inferior instalando una o dos piedras de esquina. Las piedras de esquina tienen retornos largos y cortos que se deben alternar a través de la instalación. (Nota: Comience la primera piedra por encima del nivel del suelo para garantizar una instalación a ras.)

(Fig. 6) Mientras instala la primera hilera de piedras planas mueva la piedra de lado a lado, esto ayudará a que la piedra cree una mejor adherencia con la superficie de la pared. Para evitar la creación de juntas verticales y horizontales largas, escalone las piedras en un patrón ashlar dejando una saliente de por lo menos 5,08 cm en las juntas verticales.

POR FAVOR LEA LAS INSTRUCCIONES DETALLADAS DE INSTALACION UBICADAS EN
WWW.CORONADOSTONE.COM

GARANTIA LIMITADA DE 50 AÑOS

www.CORONADO.com

