


ASSEMBLY INSTRUCTIONS

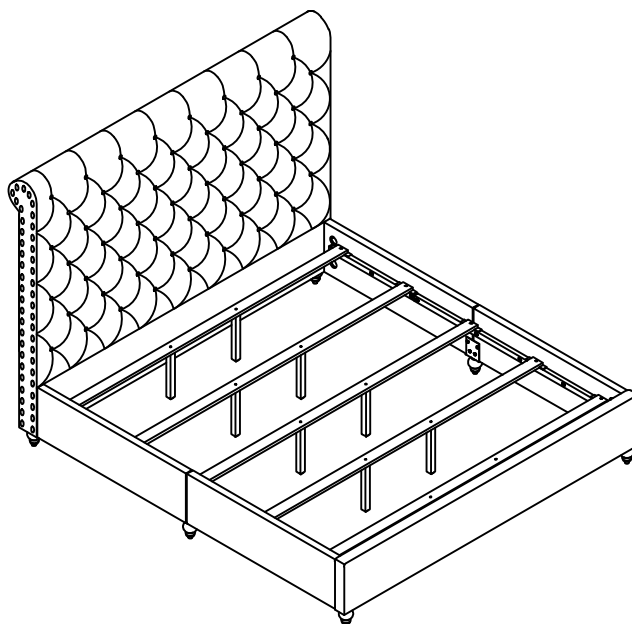

COMPLETED SHERIDAN 6/6 UPH KING BED ASSEMBLY

PART LIST

HARDWARE LIST:

No.	Description	Drawing	Size	Quantity
1	Short Allen Bolt		1/4" x 50mm	18 PCS
2	Full-thread bolt		5/16" x 88mm	8 PCS
3	Spring washer		1/4"	24 PCS
4	Flat washer		1/4"*Ø16*1.5mm	24 PCS
5	Allen key		4mm	1 PC
6	Curve washer		5/16"	8 PCS
7	Hex nut		5/16" x 18mm	8 PCS
8	Open wrench		1/2" x 90 mm	1 PC
9	Screw		Ø4 x 30mm	10 PCS
10	Long Allen Bolt		1/4" x 40mm	8 PCS

PARTS LIST:

No.	Description	Drawing	Quantity
A	Headboard		1PC
B	Short Side Rails		2 PCS
C	Long Side Rails		2 PCS
D	Short Support Bars		2 PCS
E	Long Support Bars		2 PCS
F	Slats		5PCS
G	Footboard		1PC
H	Support legs		10 PCS
I	Bun foot		4 PCS
K	Bun foot w/ metal plate		2 PCS

Customer Service Contact Information:
Toll Free Phone Number: 1-844-771-2727
Email: consumercare@lanefurniture.com
Website: www.lanefurniture.com


NOTES:

- CHECK CAREFULLY FOR SMALL PARTS WHICH MAY COME LOOSE DURING SHIPMENT.
- REMOVE ALL COMPONENTS FROM THE PACK AND PLACE ON A CLEAN, SOFT SURFACE TO ASSEMBLE.
- UNITS SHOULD BE ASSEMBLED BY TWO OR MORE PEOPLE.
- DO NOT OVER -TIGHTEN SCREW/ BOLTS UNTIL ASSEMBLY IS COMPLETED.
- WITH USE, SCREW MAY BE COME LOOSE & MUST BE TIGHTENED PERIODICALLY.



ASSEMBLY INSTRUCTIONS

THE PARTS ARE LOCATED INSIDE THE BOX AS BELOW:

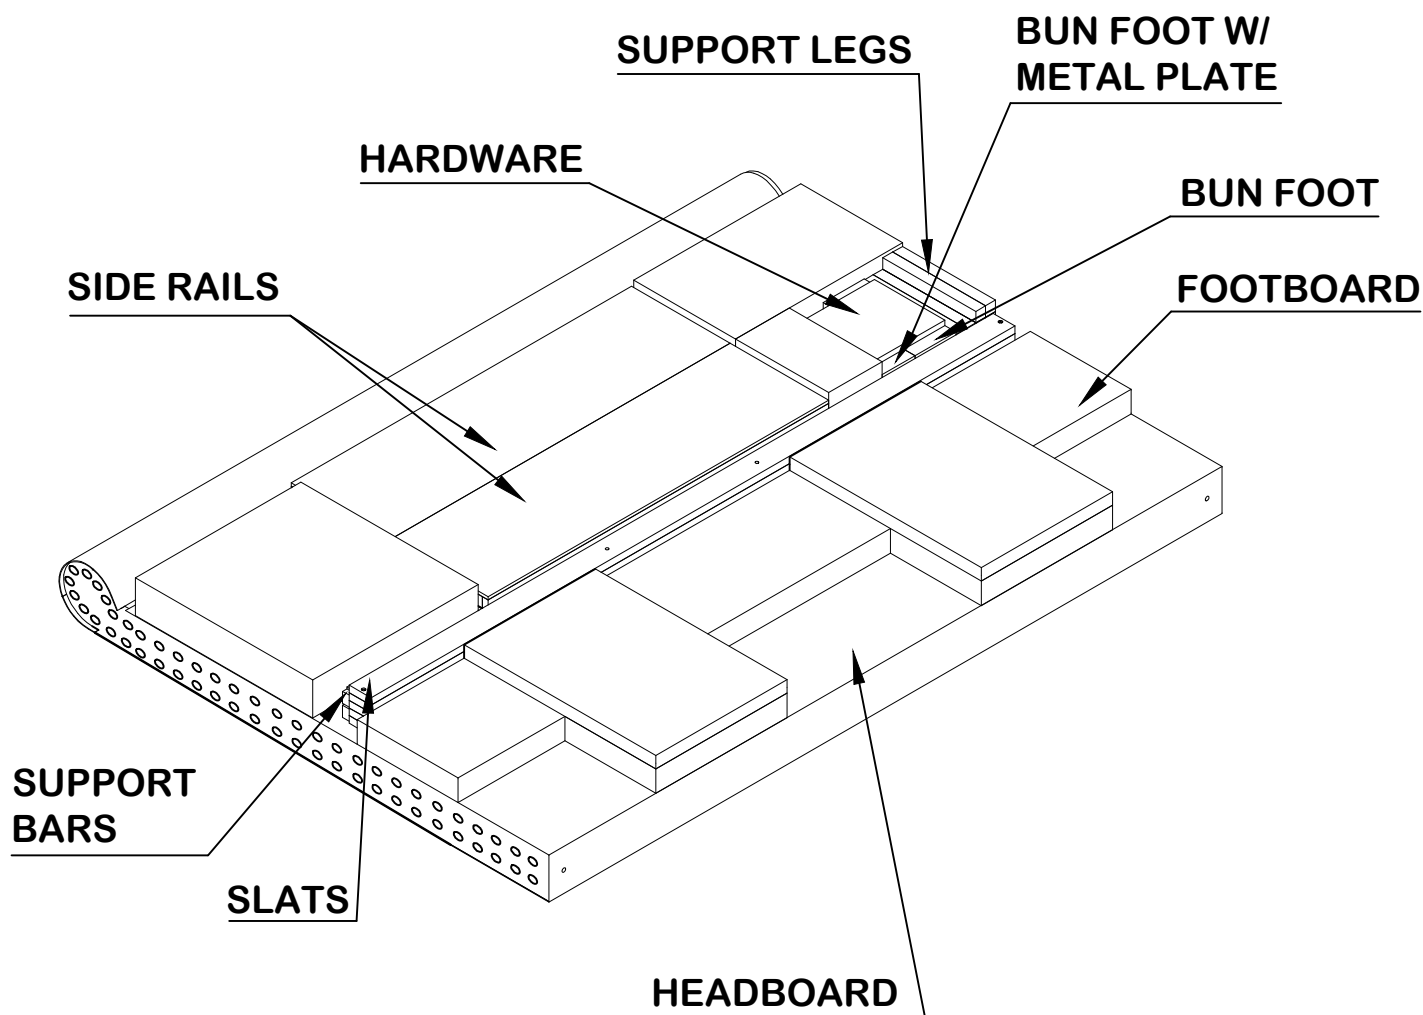

Customer Service Contact Information:
Toll Free Phone Number: 1-844-771-2727
Email: consumercare@lanefurniture.com
Website: www.lanefurniture.com

NOTES:


- 1.CHECK CAREFULLY FOR SMALL PARTS WHICH MAY COME LOOSE DURING SHIPMENT.
- 2.REMOVE ALL COMPONENTS FROM THE PACK AND PLACE ON A CLEAN, SOFT SURFACE TO ASSEMBLE.
- 3.UNITS SHOULD BE ASSEMBLED BY TWO OR MORE PEOPLE.
- 4.DO NOT OVER -TIGHTEN SCREW/ BOLTS UNTIL ASSEMBLY IS COMPLETED.
- 5.WITH USE, SCREW MAY BE COME LOOSE & MUST BE TIGHTENED PERIODICALLY.



ASSEMBLY INSTRUCTIONS


STEP 1 Important:

1. Attach Bun foot (I) to the Headboard (A) by turning the Bun foot (I) clockwise.

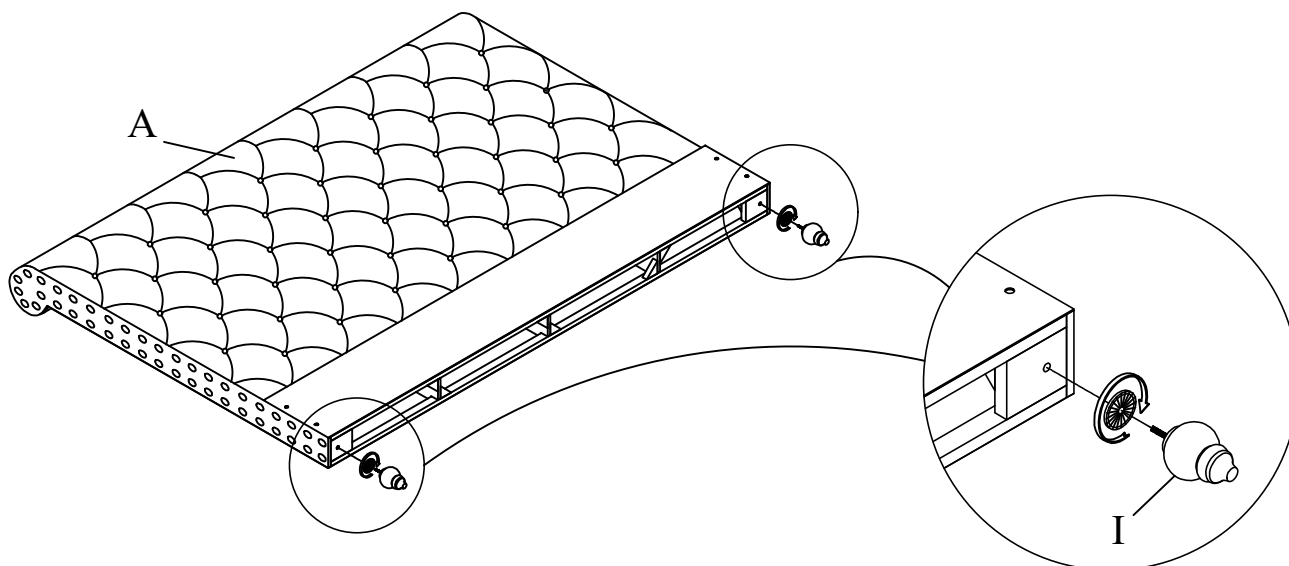

STEP 2 Important:


1. Attach Bun foot (I) to the Footboard (G) by turning the Bun foot (I) clockwise.

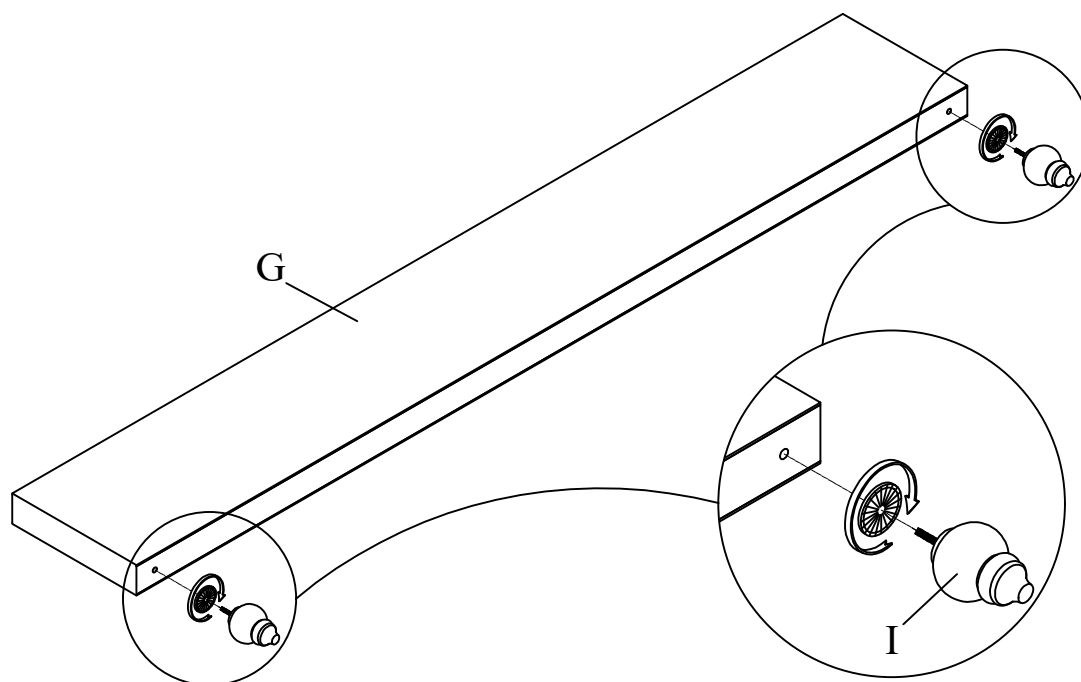

ASSEMBLY INSTRUCTIONS


STEP 3 Important:

1. Attach the Support bars (D/E) to the Bed side rails (B/C) by using Short Allen bolt (1), Spring washer (3), Flat washer (4) and Allen key (5).

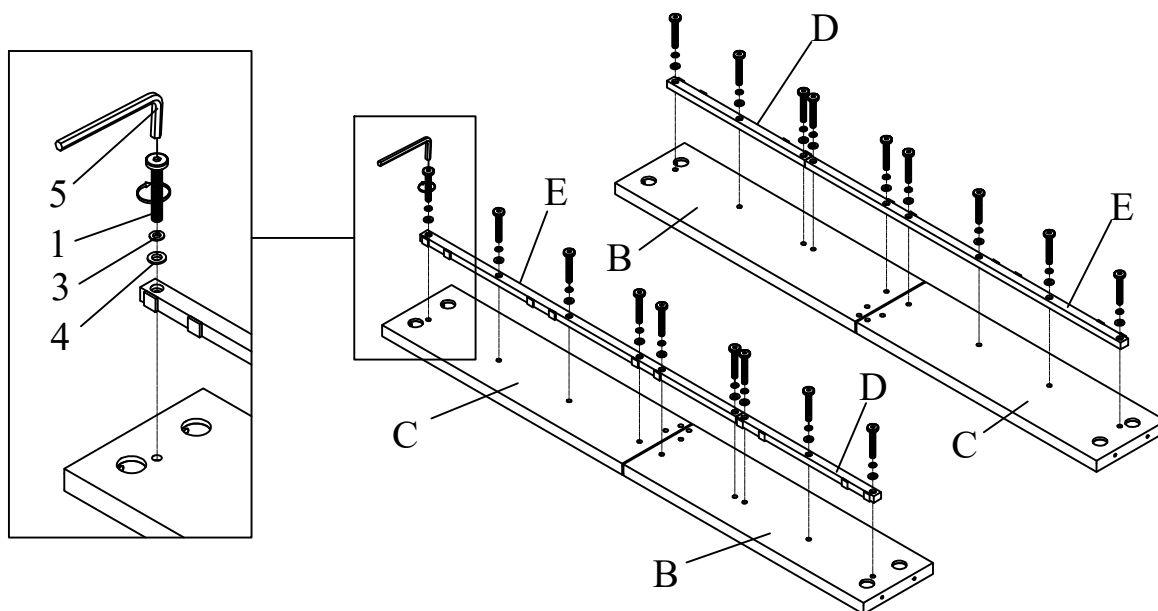

STEP 4 Important:


1. Attach Bun foot w/ metal plate (K) to the Bed side rails (B/C) by using Long Allen bolt (10), Spring washer (3), Flat washer (4) and Allen key (5).

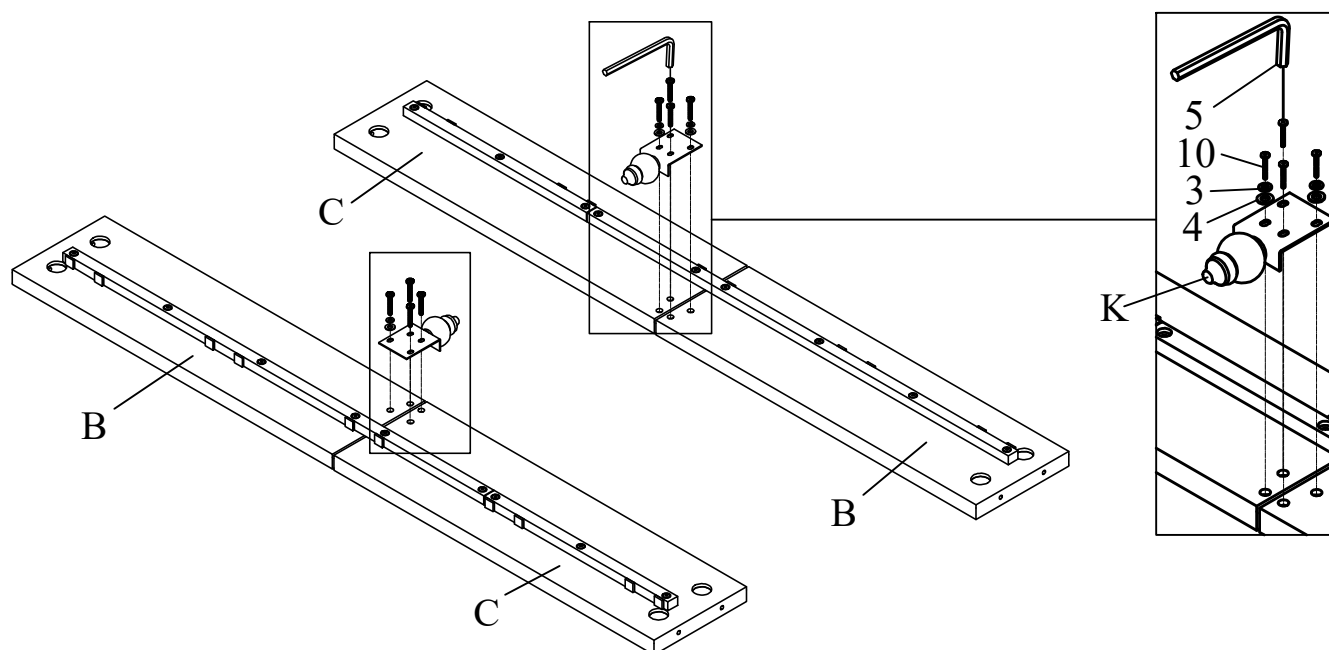

ASSEMBLY INSTRUCTIONS

STEP 5 Important:

1. Attach Bed side rails (B/C) to the Headboard (A) and to the Footboard (G) by Full-thread bolt (2), Curve washer (6), Hex nut (7) and Open wrench (8).

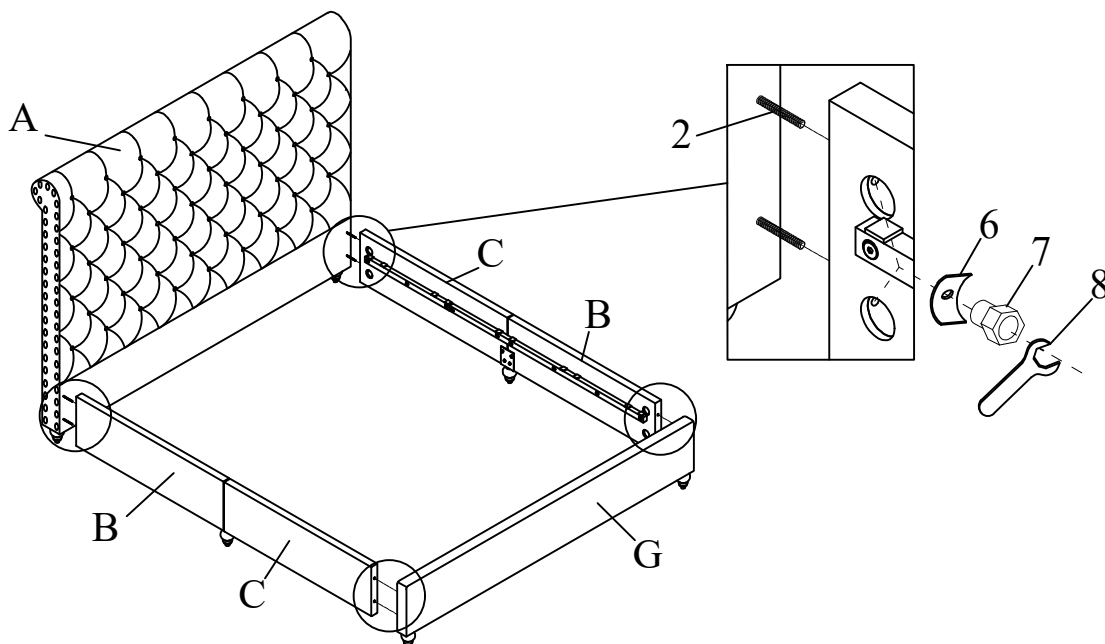

STEP 6 Important:

1. Attach Support legs (H) to Slats (F) by turning clockwise.

