

CARE AND MAINTENANCE

Wipe clean with a soft cloth dampened in water and a mild soapy solution. Wipe dry with a clean and dry cloth.

this rattan basket requires no maintenance

however, by keeping the furniture clean and storing it properly you can enjoy it year after year







NOTICE

* Please make sure that you have all parts indicated before you begin assembly of this item

* This item Should be assembled on a soft surface to prevent scratching the finish during assembly

* This Item may require periodic tightening

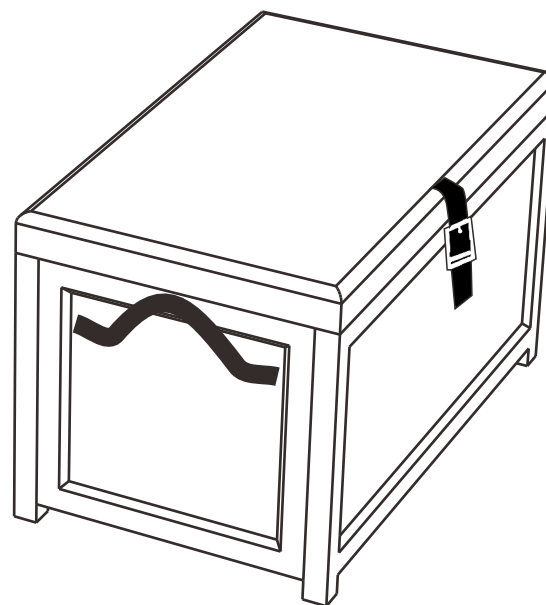
Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QTY
A	Side Frame		1
B	Bottom Base		1
C	Inter liner		1
D	Allen Bolt		4
E	Washer		4
F	Allen Key		1

happimess

Item # : HPM9001

Product Dimensions : W29.53" x D23.23" x H18.11"



Weight Capacity : 33.06 Lbs

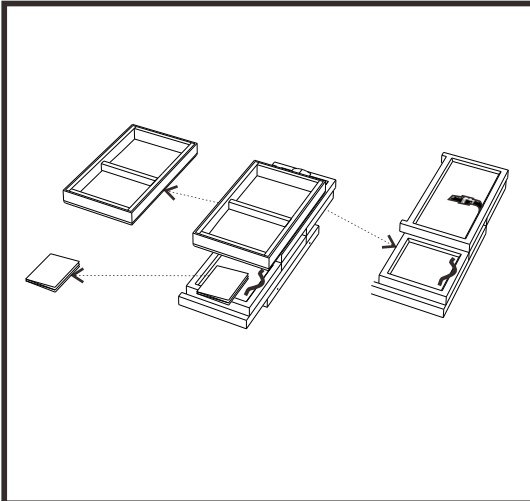
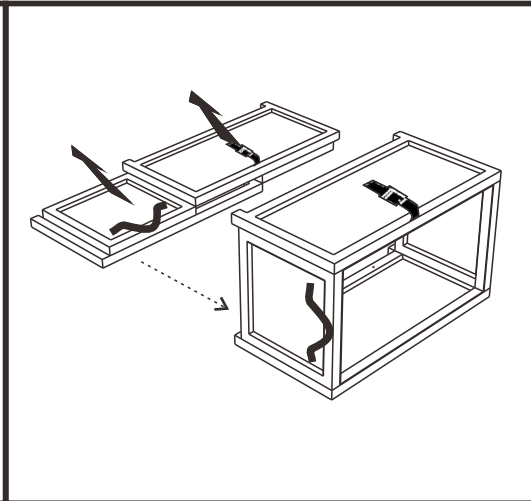
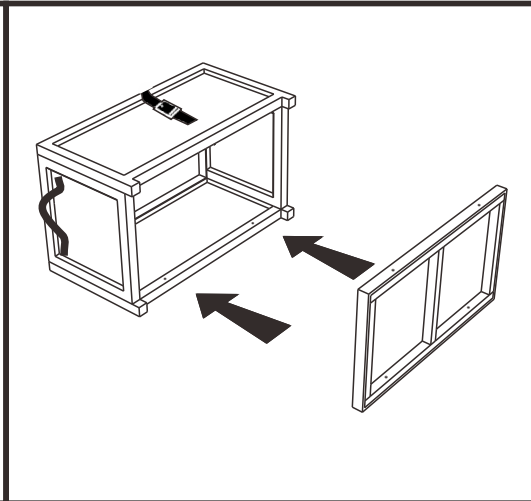
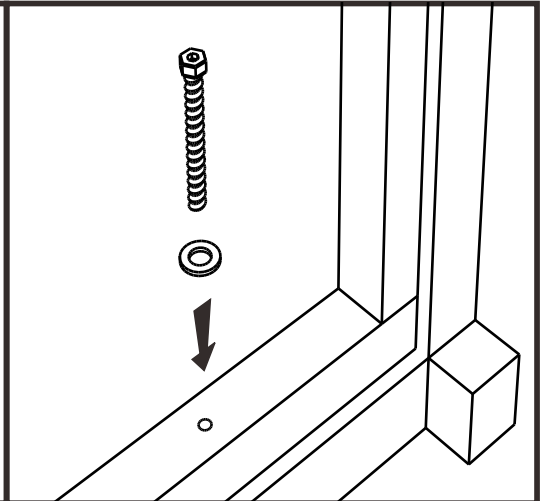
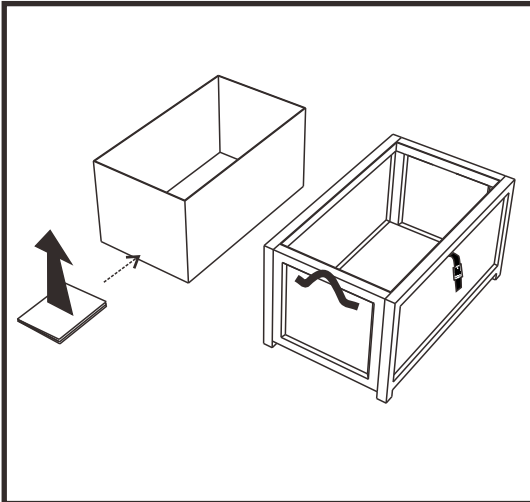
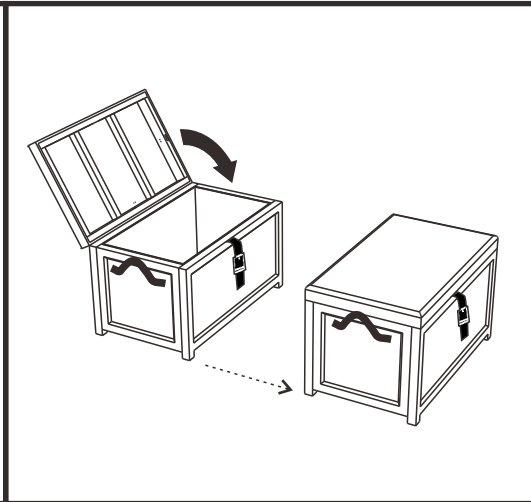
Warning : Do not stand on Basket

Warning : Do not sit on basket



PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware content list. If any parts is missing or damaged, do not attempt to assemble the product
Estimated Assembly Time 10 Minutes.

 <p>This diagram shows three separate components of the product laid out on a flat surface. A small rectangular piece is shown to the left of the main components. Dotted lines indicate the relationship between the parts.</p>	 <p>This diagram shows a side frame being unfolded. A hand is shown pulling one of the sides upwards, as indicated by a curved arrow. The frame is shown in its partially assembled state.</p>	 <p>This diagram shows the bottom base being slid onto the side frame. Arrows indicate the direction of movement, showing the base fitting into the frame's legs.</p>	 <p>This diagram shows a close-up of the corner where the bottom base meets the side frame. An Allen bolt with a washer is being inserted into a pre-drilled hole in the base.</p>
STEP 1 : SPREAD ALL COMPONENTS AND SPARE PARTS IN YOUR WORK AREA	STEP 2 : UNFOLD THE SIDE FRAME BY PULLING UP ONE OF ITS SIDES	STEP 3 : SLIDE THE BOTTOM BASE ON THE SIDE FRAME WHERE THE PROTRUDING LEGS ARE	STEP 4 : MOUNT EACH ALLEN BOLT WITH A WASHER AND THEN FASTEN THE BOTTOM BASE TO THE SIDE FRAME. DO NOT OVERTIGHTEN
 <p>This diagram shows the interior liner being unfolded and placed inside the trunk. An arrow points to the liner, and another points to the trunk's interior.</p>	 <p>This diagram shows the top lid being placed on the trunk. A curved arrow indicates the lid being lowered onto the trunk. The final assembled product is shown to the right.</p>		
STEP 5 : UNFOLD THE INTERIOR LINER AND PLACE IT INSIDE THE TRUNK AND THEN FASTEN TO THE HOOK-AND-LOOP	STEP 6 : PLACE THE TOP LID ON THE TRUNK, AND THE ASSEMBLY IS COMPLETED		