

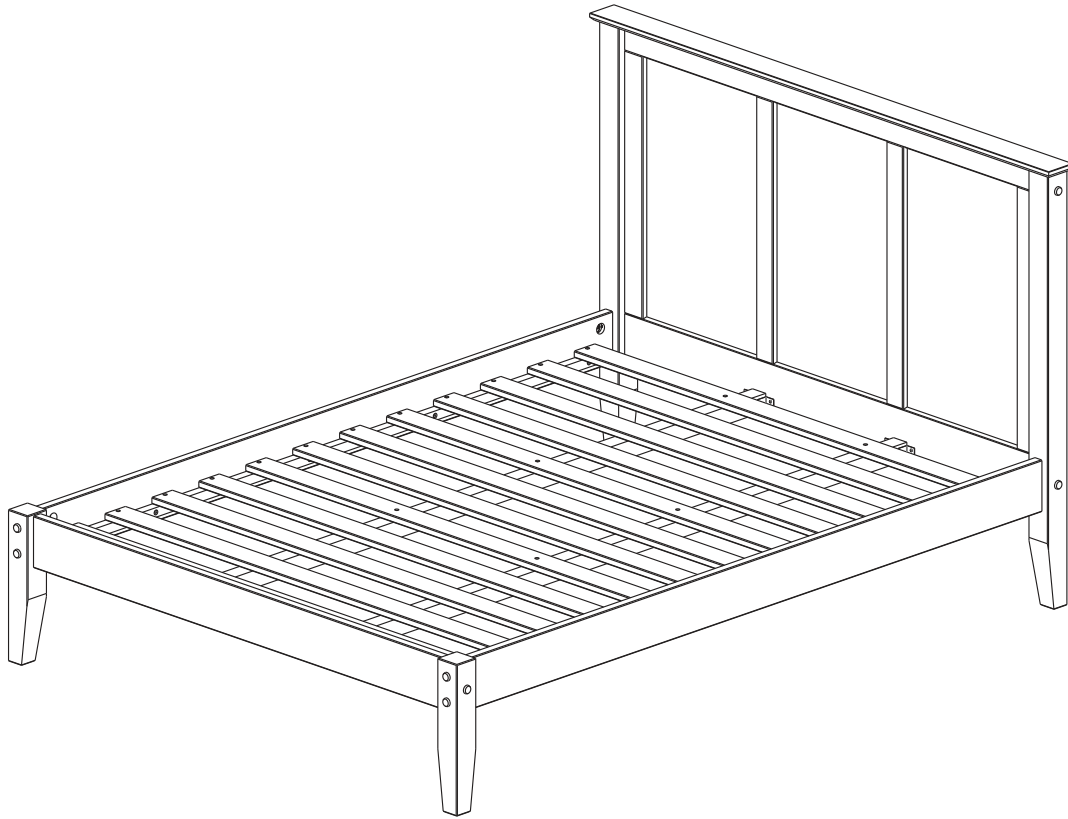
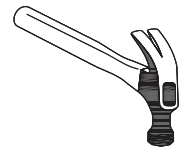


ASSEMBLY INSTRUCTIONS

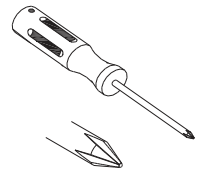


00:45 Hs

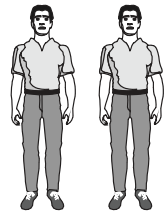


HARDWARE INCLUDED



A - 10,0x50 Wood Dowel
Qty. 14



B - 4,0x30 Screw
Qty. 04




C - 3,5x16 Screw
Qty. 24



D - 3,5x35 Screw
Qty. 32




E - Screw Nut
Qty. 14




F - Allen Key
Qty. 01




G - Tap Hole
Qty. 14




H - 1/4x90 Screw
Qty. 14



I - 8,0x30 Wood Dowel
Qty. 03




J - Bed Frame Separator 86mm
Qty. 02

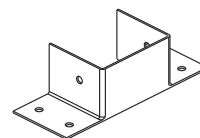


K - Support Bar
Qty. 04


PARTS INCLUDED

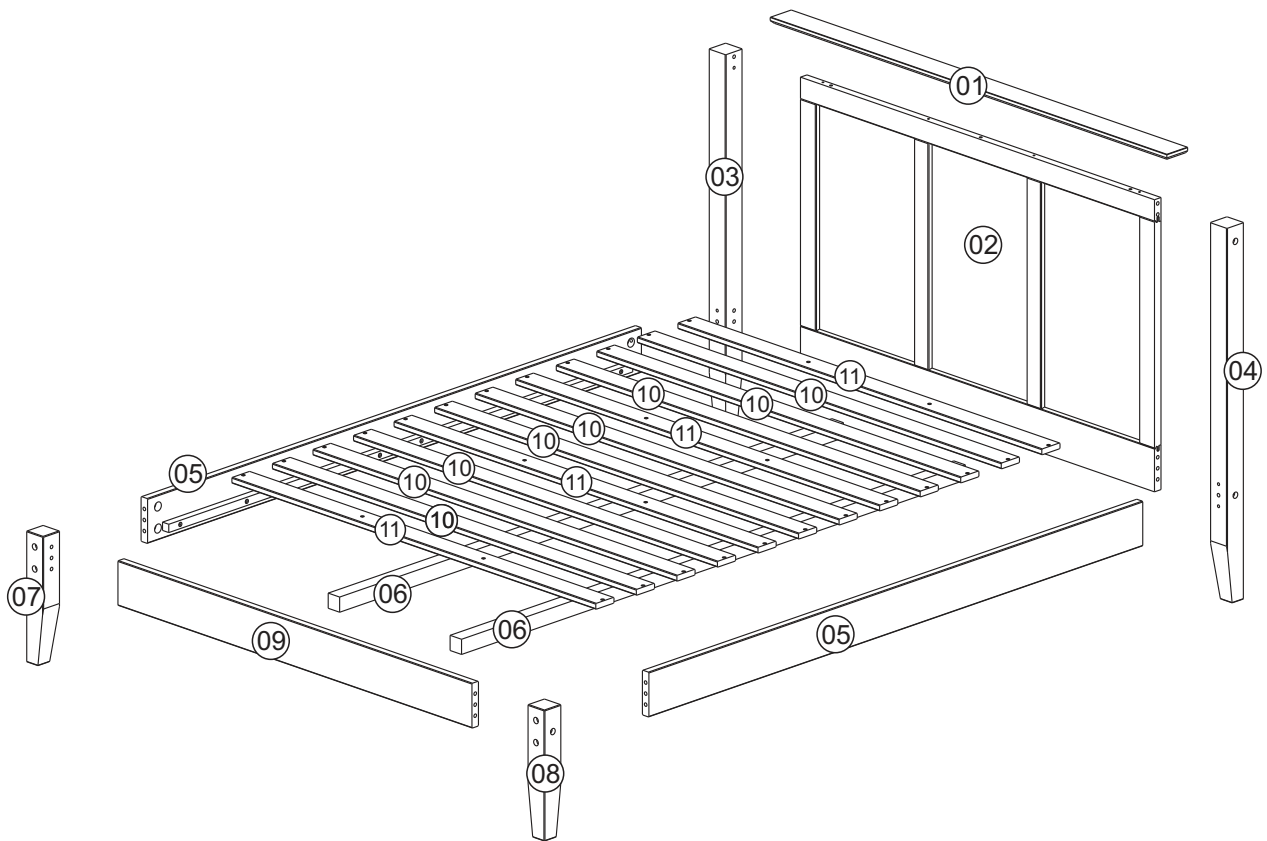


STEP 1

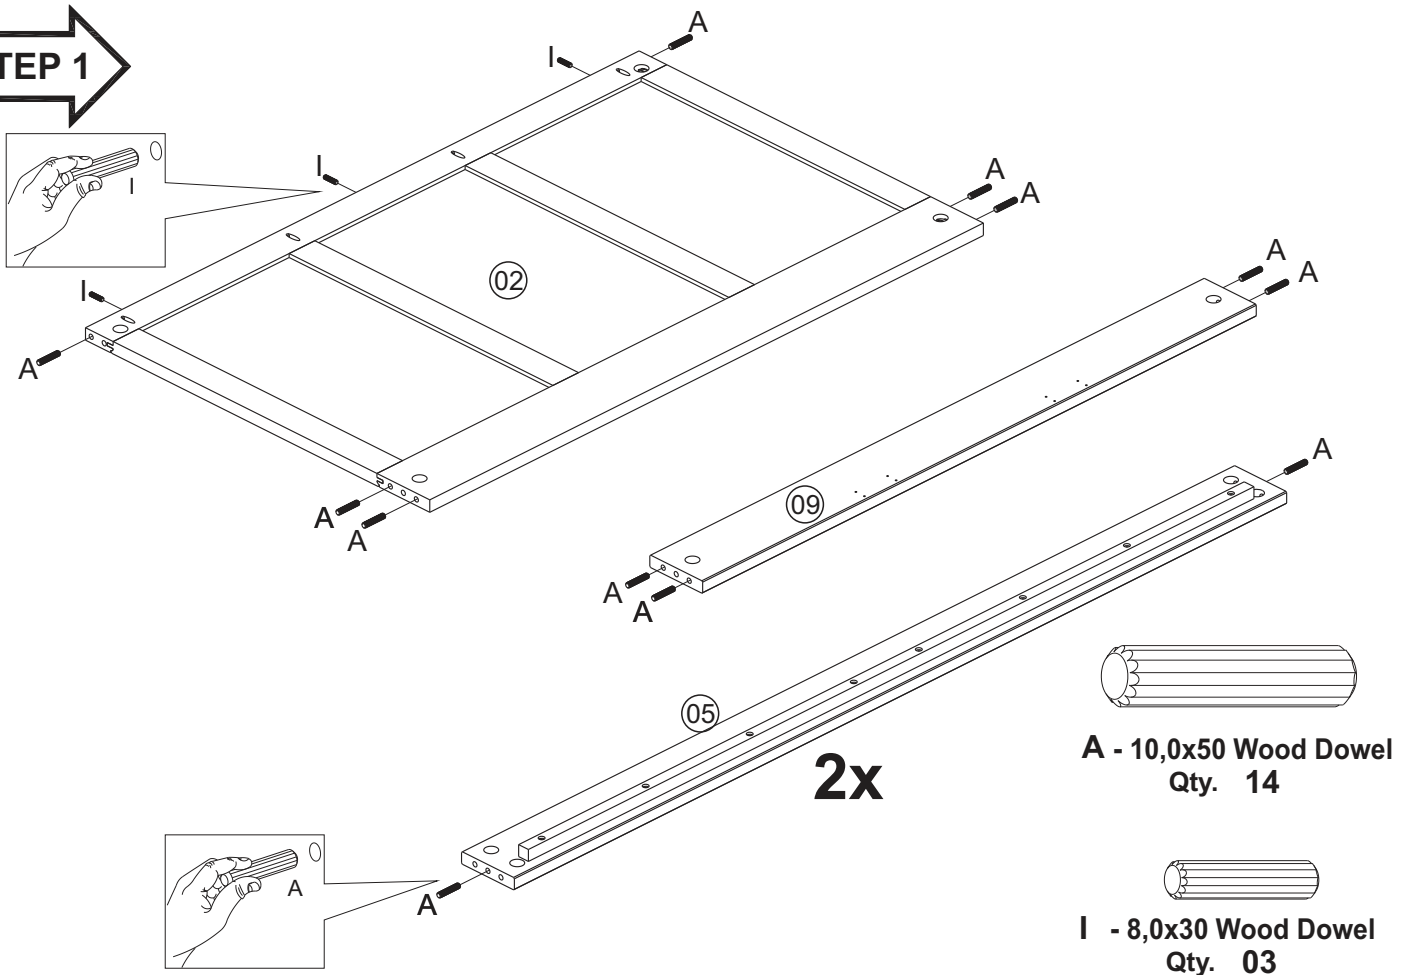

STEP 2

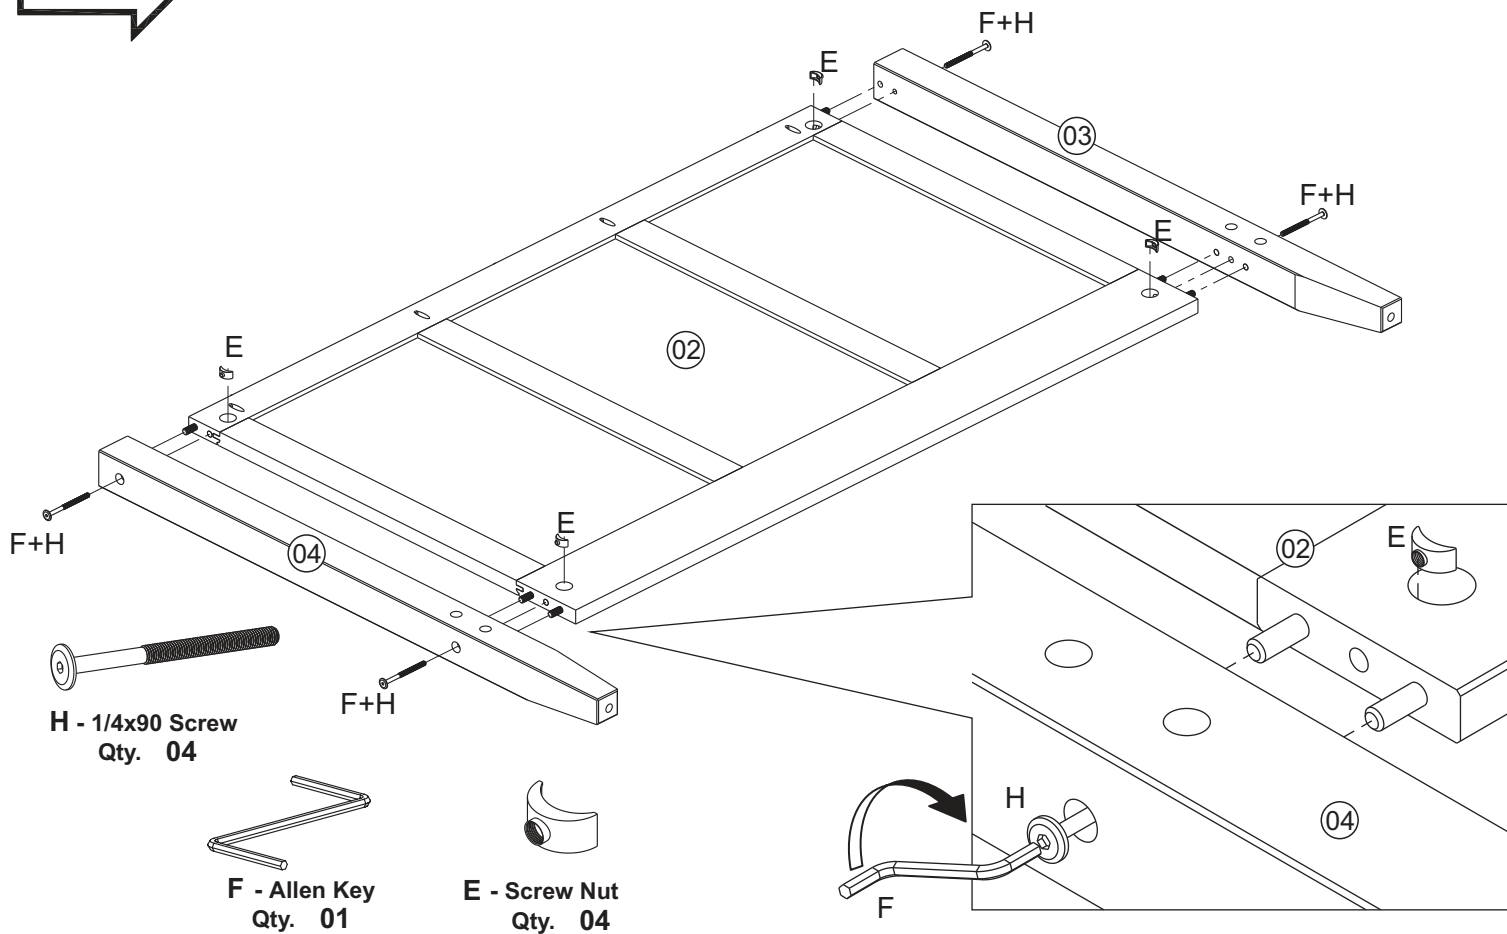


STEP 3

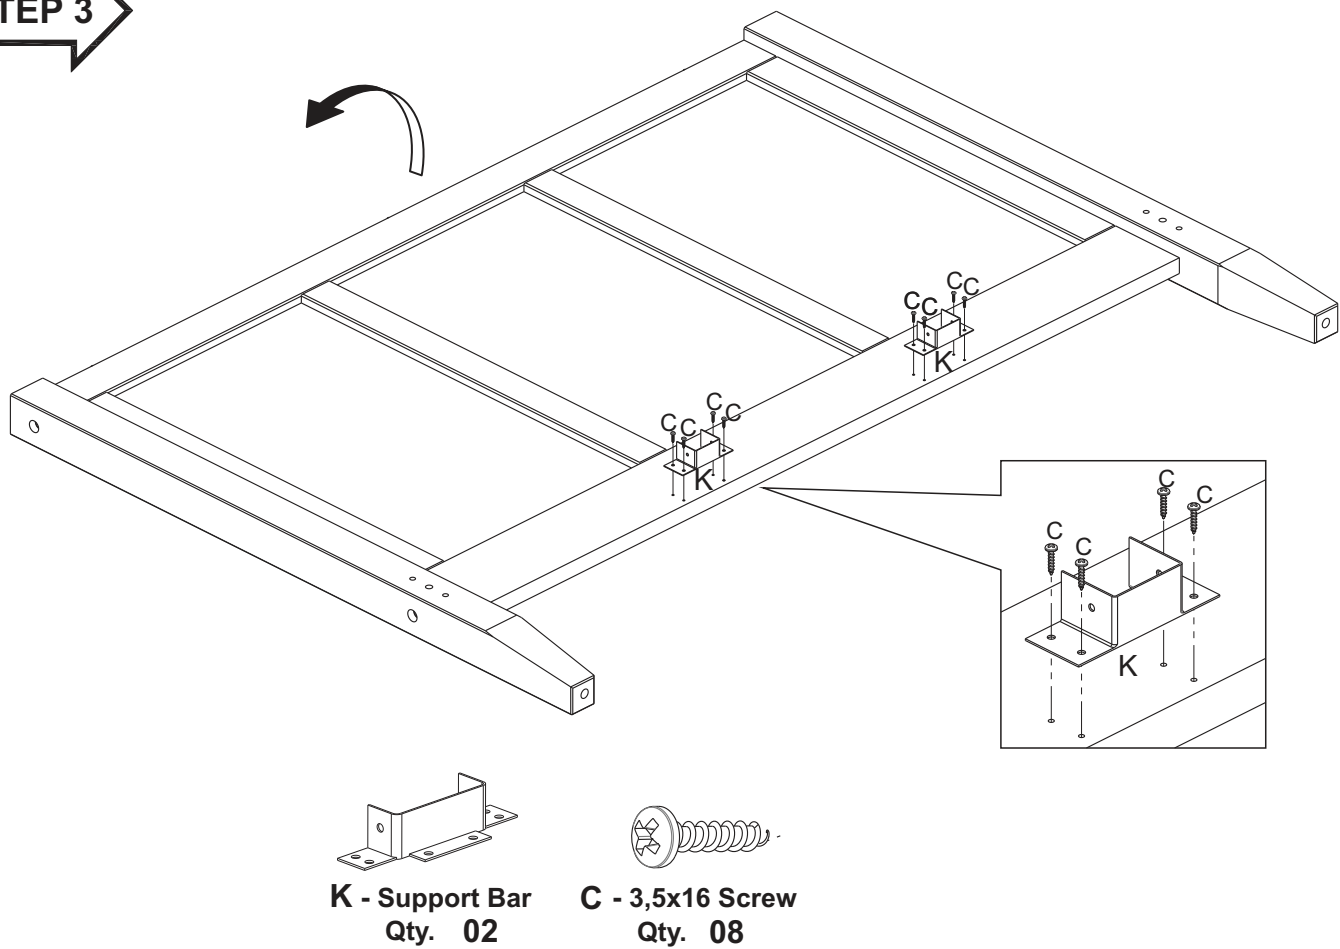

STEP 4




H - 1/4x90 Screw
Qty. 02





F - Allen Key
Qty. 01



E - Screw Nut
Qty. 02

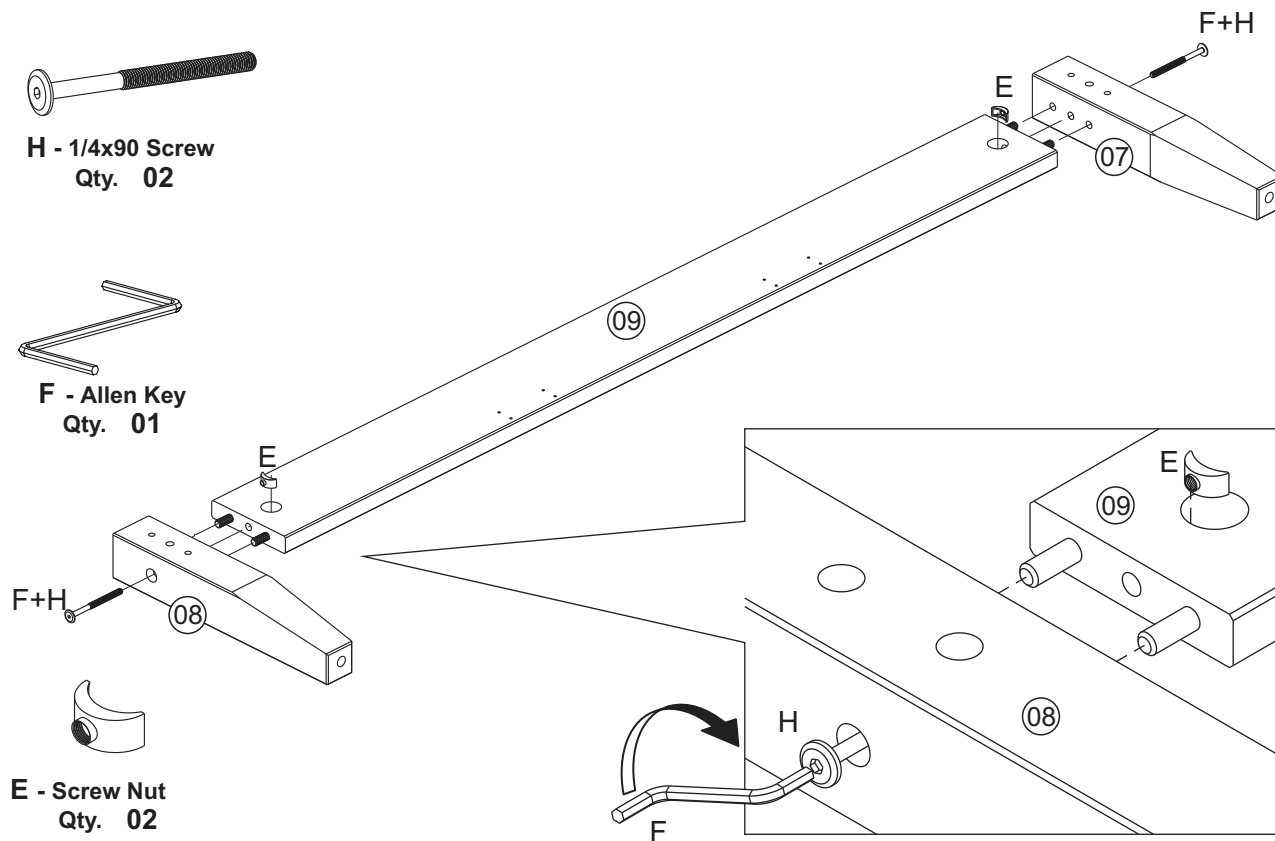

STEP 5

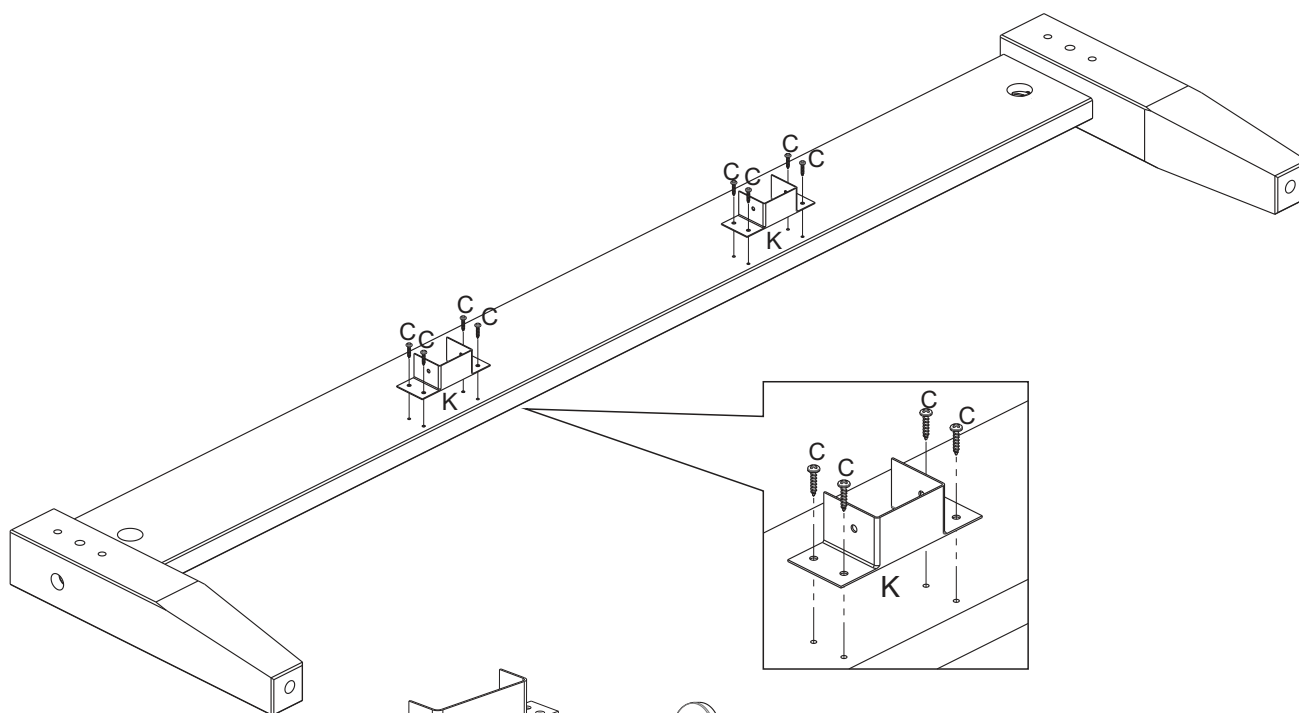


K - Support Bar
Qty. 02




C - 3,5x16 Screw
Qty. 08


STEP 6

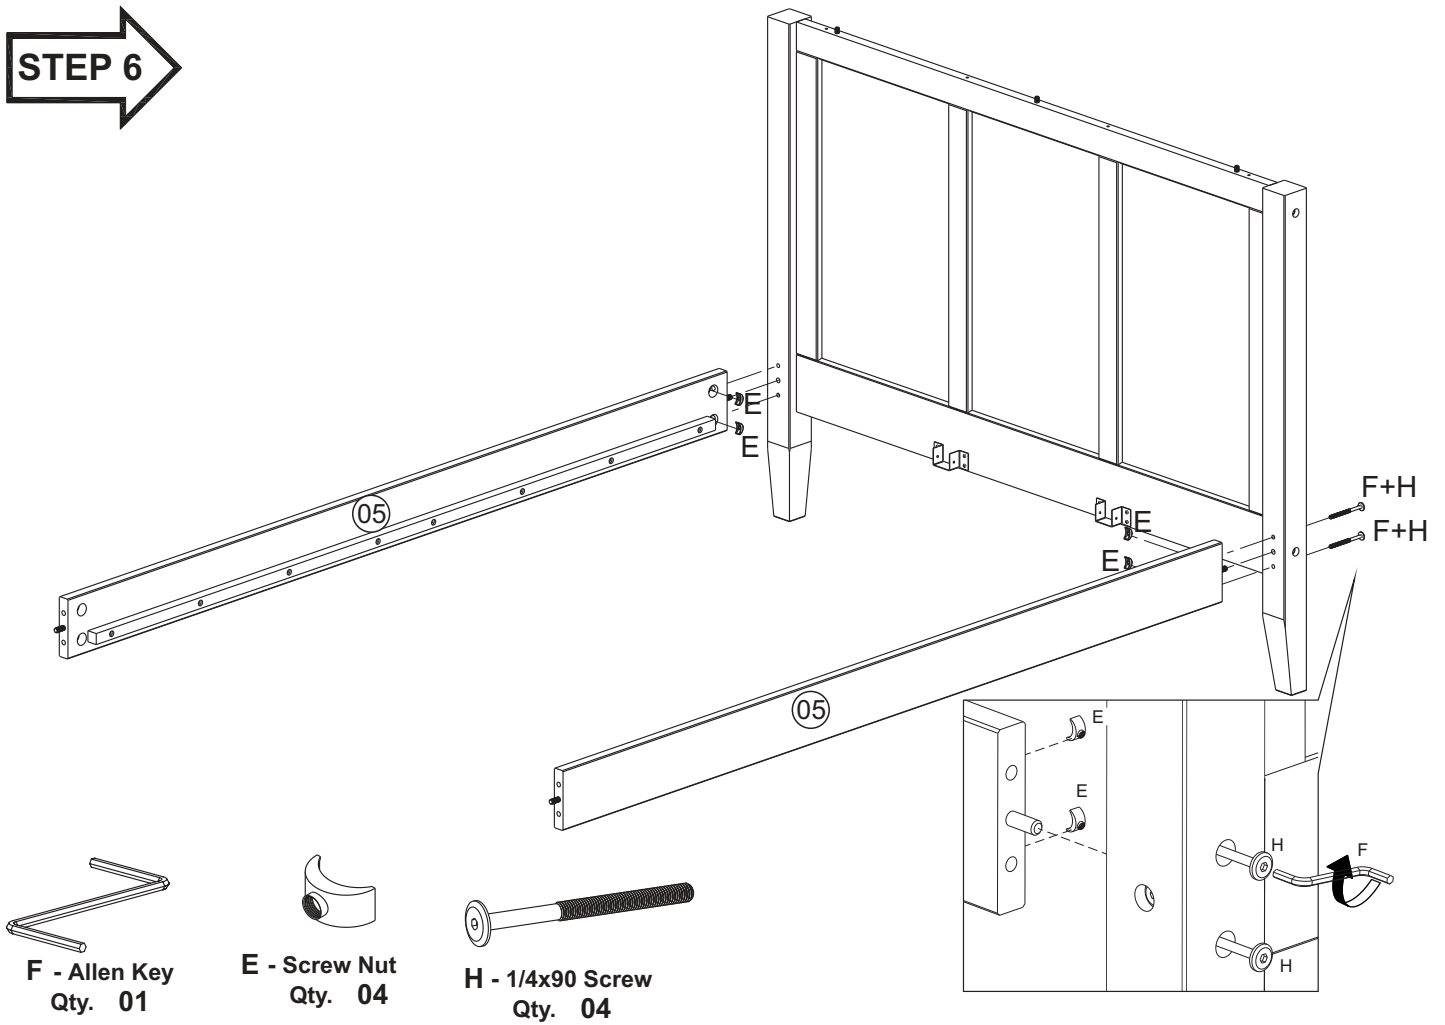

STEP 7

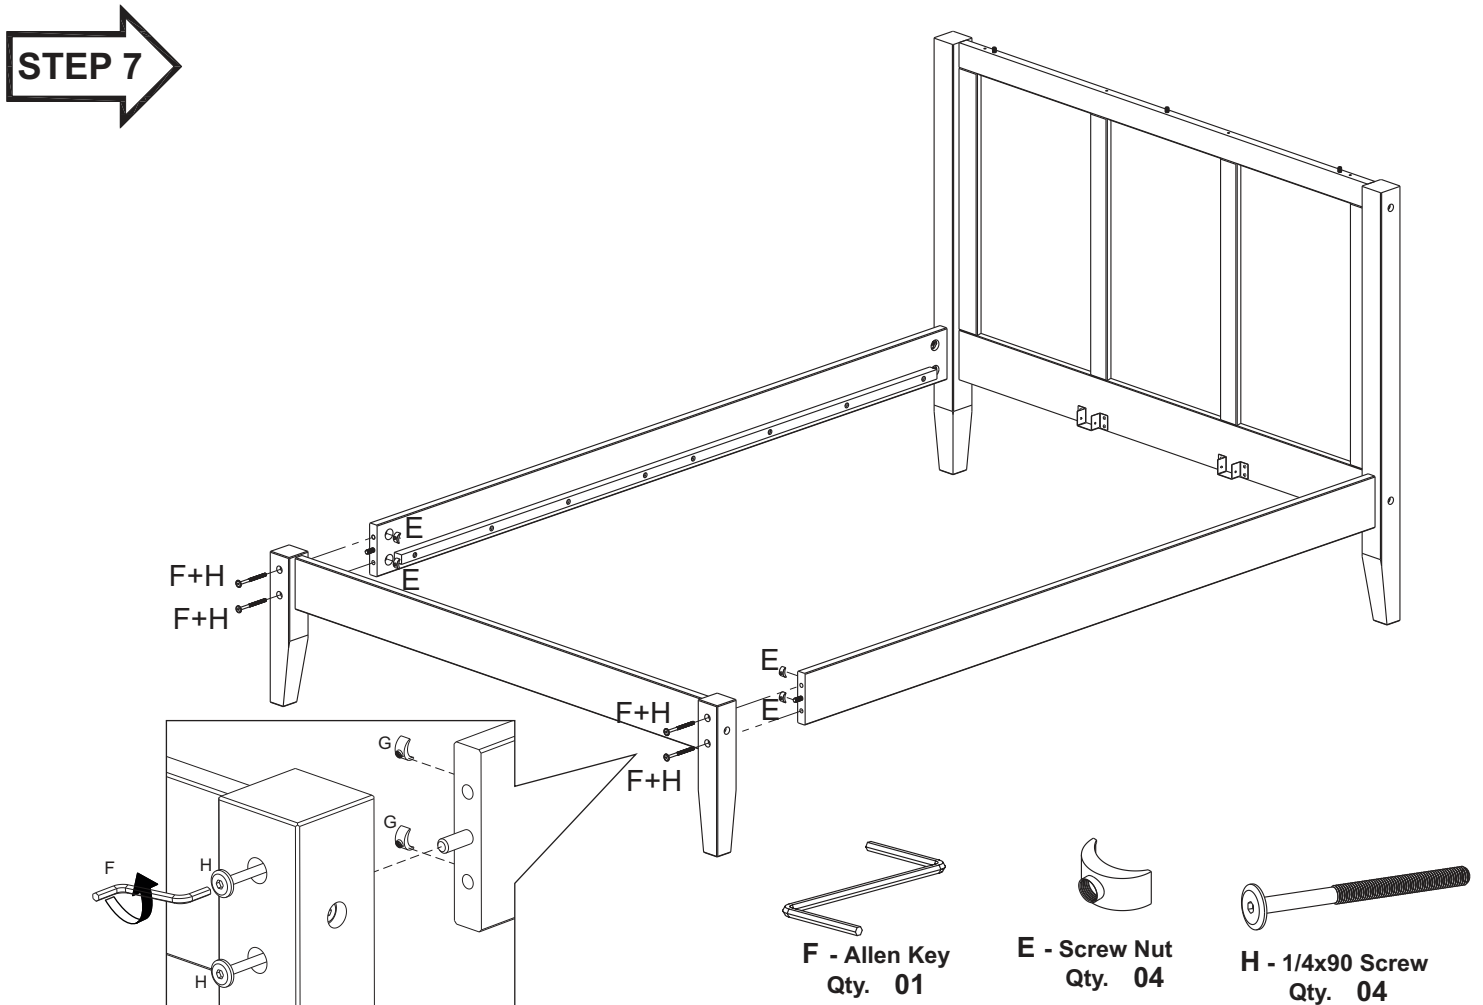


STEP 8

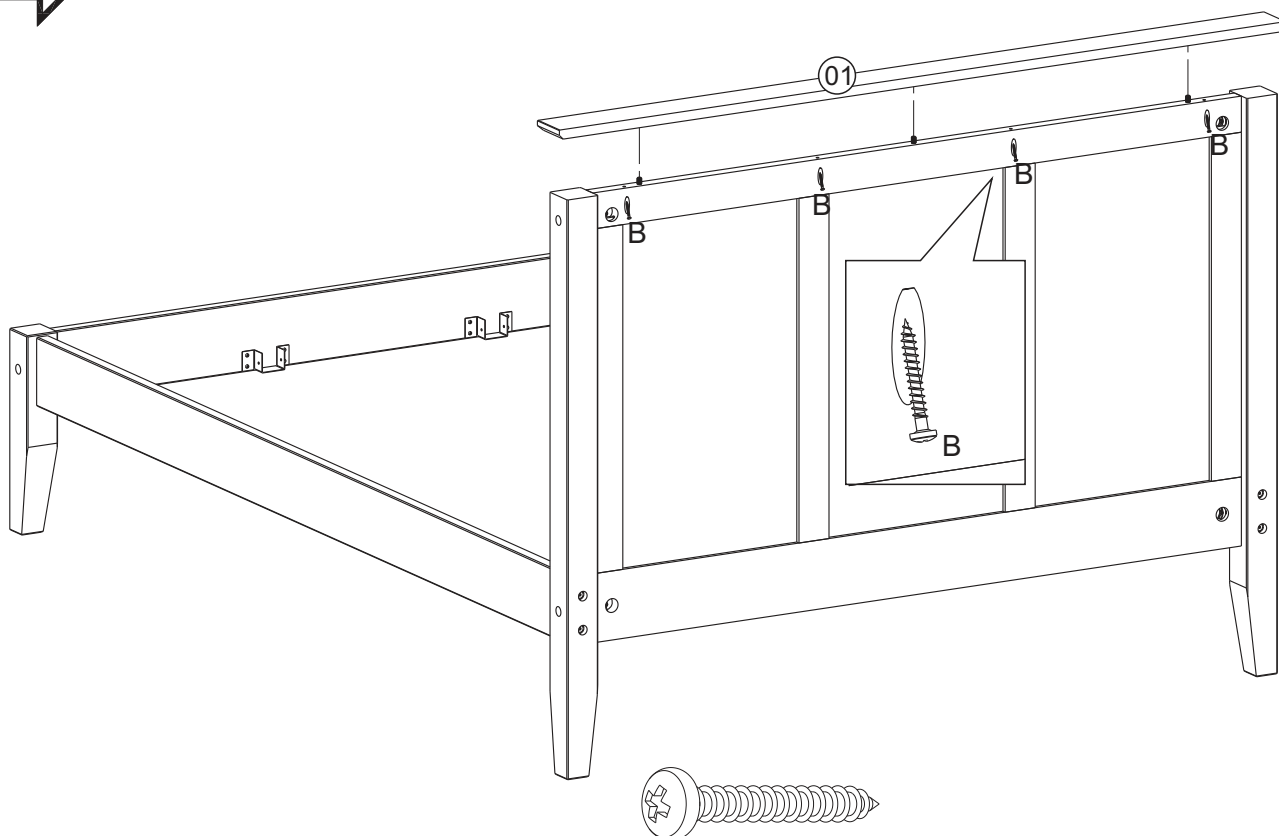


B - 4,0x30 Screw
Qty. 04

STEP 9

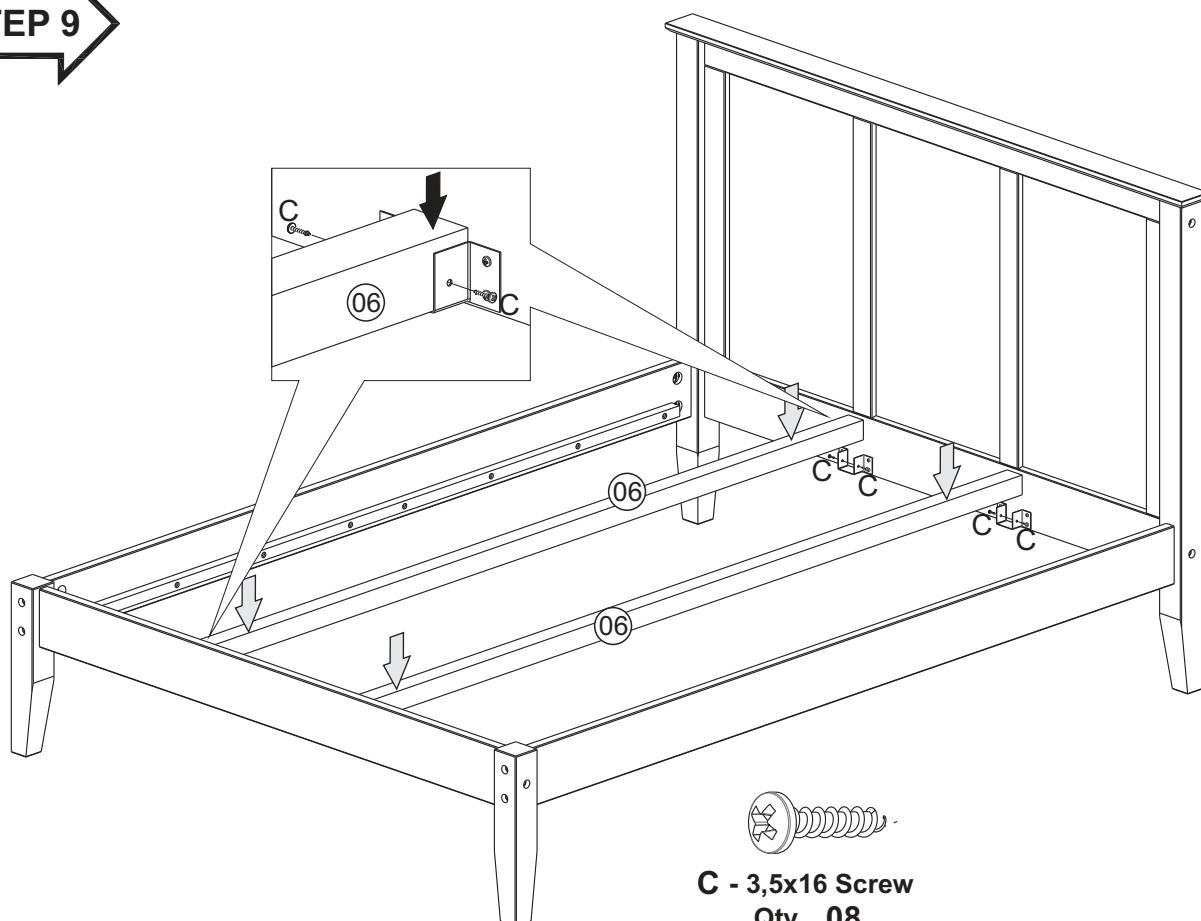

C - 3,5x16 Screw
Qty. 08

STEP 10

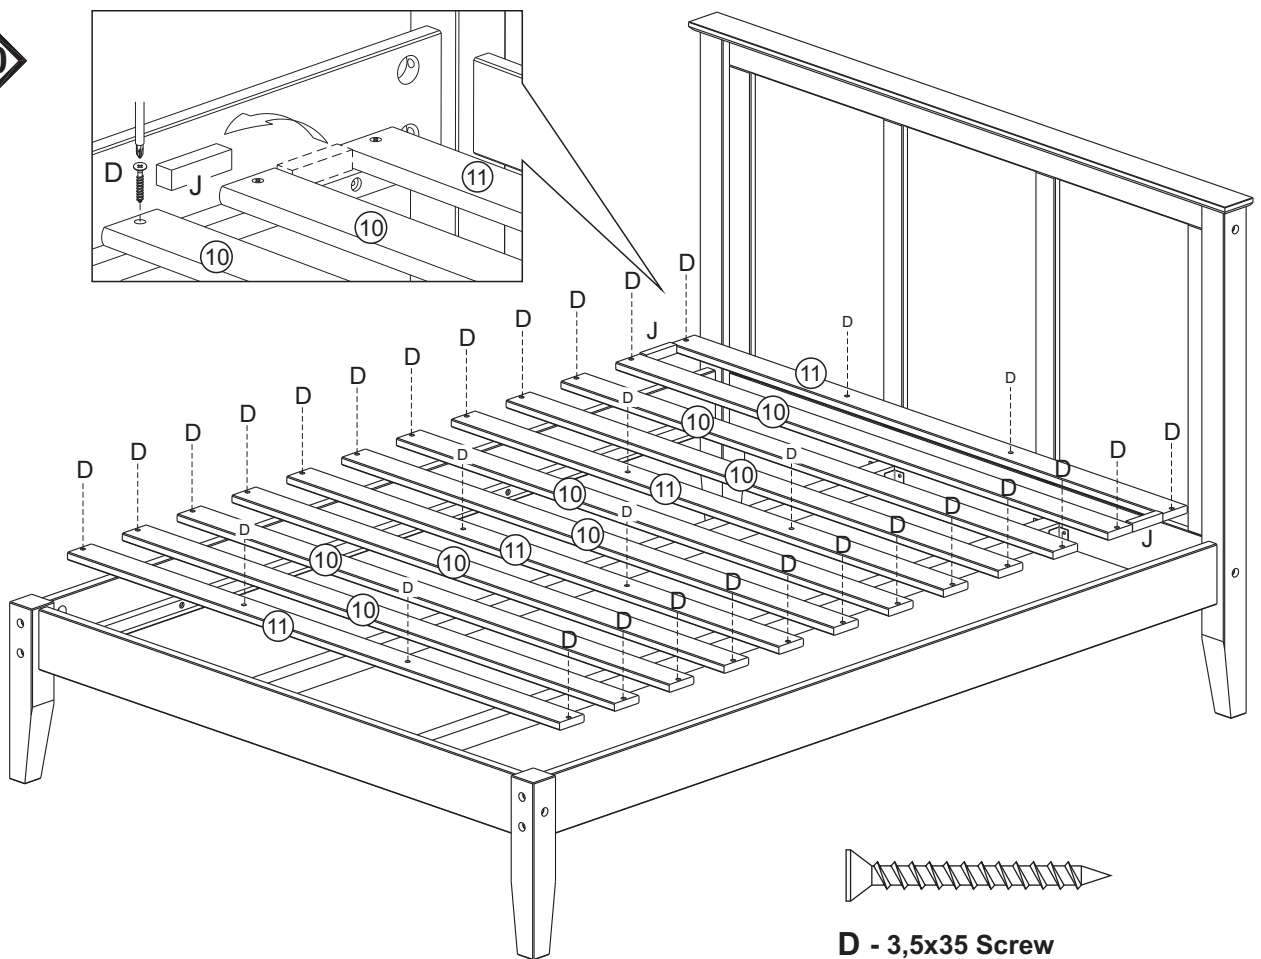

STEP 11

