
Install guide The Chelsea Collection Redefining Quality & Value We would like to take this opportunity to thank you for your purchase of the American Bath Factory Chelsea Slipper Bathtub! Should you have any questions or feedback about your new tub, please email us at customerservice@americanbathfactory.com or call at 800-454-BATH (2284) Mon - Fri 7:15 am to 4:00 pm PT

Before You Begin

To ensure that no damage has occurred to your bathtub during shipping, it is important to check your bathtub for damage prior to the installation in your home! If damage is found, please contact American Bath Factory as soon as possible.

DRAIN ASSEMBLY

Move your new bathtub to a location that will not be damaged by water runoff. A driveway or patio is suitable for testing your bathtub. We recommend that you install the waste & overflow pipes and union onto the bathtub at this time. This will help with water testing your new bathtub, these parts are highlighted in **Red**. American Bath Factory recommends having a certified plumbing technician install your bathtub.

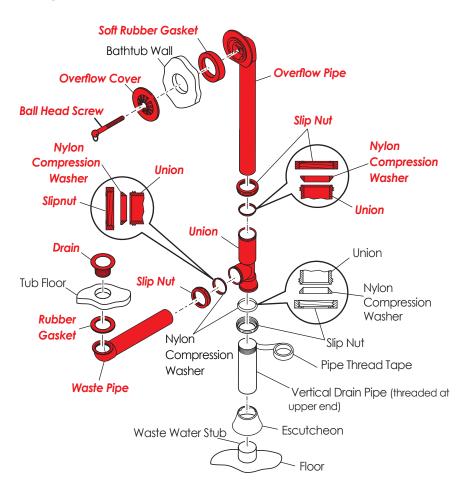

!! IMPORTANT!!

ABF 60 IN CHELSEA SLIPPER CLAWFOOT Rev C

Your bathtub is a DOUBLE WALL construction. The drain needs to be installed with SILICONE, not Plumber's Putty!

Apply a liberal amount of "kitchen & bath" silicone (available in most home improvement or hardware stores) to the drain threads and a bead on the underside of the Drain Flange (See Fig. 1). Insert the Drain through the drain hole, screw into the Waste Pipe and verify that the rubber gasket is seated properly between the bottom of the tub and the waste pipe. The handles of a pair of pliers can help you screw the Drain securely into the Waste Pipe (See Fig. 2) Wipe off any excess silicone around the drain with a clean, dry cloth.

Allow 24 hours for the Silicone to cure completely before adding water to the bathtub.

If everything is sealed and dry, fill your bathtub ¾ of the way and check for leaks. After the water test is complete and there are no leaks, proceed with installing your bathtub.

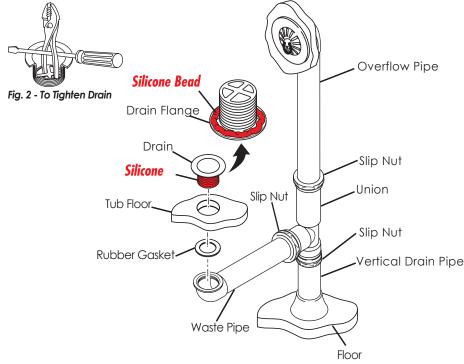


Fig. 1 - Securing Your Drain

ALIGN & SECURE YOUR BATHTUB

Now that the water test is complete, pay careful attention when transporting your clawfoot bathtub through a narrow doorway. Tilt your bathtub on its nose, on to a soft surface (folded towel, sheet, etc.), and spin it through the doorway. We recommend doing this instead of disassembling the feet.

Carefully align your bathtub over the water supply stubs and drain. For deck faucets, it may be helpful to temporarily attach your faucet and water supply lines to the bathtub, to aid in aligning the bathtub directly

Aligning your Bathtub


SECURING YOUR BATHTUB

over the water supply stubs.


Failure to secure your bathtub will void your warranty!


It is very important to secure your bathtub to the floor. This avoids bending or straining the water supply connections and drain, if the bathtub is bumped or moved, possibly causing leaks.

The easiest way to secure your tub is to use a small amount of glue or epoxy directly on the floor under each foot. You may do this with the leveling adjuster attached or without. Please see drawings below.



WARNING - Failure to secure your bathtub may cause leaks if the bathtub is moved.





INSTALLATION SPECIFICATIONS

60" Chelsea Slipper **Overall Dimensions:** 60" L x 321/2" W x 291/2" H Capacity: 40 Gallons Weight: Dry wt. = 100 lbs. Full wt. = 434 lbs. Dimensions shown have a tolerance of ±1/2". 291/2 $\Gamma^{2\frac{1}{2}}$ 41/2 60' Floor mount locations for tub drain and 2" Dia deck mount faucet supply lines Notes: Please measure your actual product for rough-in details. All product dimensions have a tolerance of ±1/2". Install this product according to the installation instructions American Bath Factory reserves the right to make revisions without notice to product specifications. For most current specs, visit our site: americanbathfactory.com

Water Supply From Floor Deck Mount A 21/2" Water Supply Stub Drain Stub Hot Water Supply Drain Stub Drain Stub

- \bigcirc The faucet holes (where the supply lines are placed) are located $2\frac{1}{2}$ " in from the edge.
- (B) The drain is located $3\frac{1}{2}$ " in from the edge of the bathtub.

Note: Do not use the measurements listed above if you ordered a Wall Mount or Floor Mount Faucet.

SAFETY INSTRUCTIONS

- DANGER! To reduce the risk of injury, do not permit children to use bathtubs unless they are closely supervised by an adult at all times.
- Use this bathtub only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Do not attempt to plug in or unplug the electrical devices while in or near a filled bathtub. Never use or handle electrical devices while in or near a filled tub.
- Never drop or insert any objects into any openings.
- Only healthy adults should use the bathtub when the water temperature is between 100° and 104°F (38°-40°C). Any temperature below 100°F is considered safe for longer durations (exceeding 10-15 mins) or for young children. The water temperature in a bathtub should never exceed 104°F (40°C).
- Excessive water temperatures have a high potential for causing fetal damage during the early months of pregnancy. Pregnant or possibly pregnant women should limit bathtub temperatures to 100° F (38°C).
- The use of alcohol, drugs, or medications before or during bathing may lead to unconsciousness and the possibility of drowning.
- Use of this bathtub may cause drowsiness and changes in heart rate and/or blood pressure. Persons suffering from obesity, who have a medical history of heart disease, low or high blood pressure, circulatory problems, or diabetes should consult a physician before using. Persons using medications should consult a physician before using this bathtub.

Information in this document is subject to change without notice. Copyright 2018, American Bath Factory. All rights reserved. Reproduction in any manner whatsoever without the written permission by American Bath Factory is strictly forbidden. Trademarks and trade names used in this document refer to either the entities claiming the marks and names or their products. American Bath Factory disclaims any proprietary interest in trademarks and trade names other than its own.

13405 Estelle St, Corona, CA 92879 (800) 454-BATH Fax (951) 734-1480 email: info@americanbathfactory.com www.americanbathfactory.com

CLEANING & MAINTAINING YOUR BATHTUB

Your bathtub's surface is very easy to clean. There are no pores for dirt to penetrate, so dirt will just rinse off with water. For sanitary purposes, you should occasionally clean your bathtub with non-abrasive soap and water when possible. Avoid harsh chemicals. Plain dish-washing detergent such as JOY®, PALMOLIVE®, IVORY®, etc., is all that is required. If you spill something on the bathtub and need a stronger cleaner, the following are SAFE to use: GEL GLOSS®, TACKLE®, TOP JOB®, FORMULA 409®, WINDEX®, CLOROX BLEACH®, GLASS PLUS®, LIQUID COMET®, SOFT SCRUB®, and SPIC & SPAN POWDER®.

IMPORTANT

DO NOT CLEAN YOUR BATHTUB WITH GOOF OFF®,
SCRUBBING BUBBLES®, LYSOL DISINFECTANT SPRAY®, DOW
DISINFECTANT BATHROOM CLEANER®, PINE-SOL®, WHITECAP®, LESTOIL®, PAINT THINNER, ACETONE, LACQUER
THINNER, M.E.K. or other chemicals that attack the structural integrity of plastic (including, but not limited to acetones).

Use of these chemicals will destroy the acrylic surface of your tub.

USE OF THESE CHEMICALS WILL VOID YOUR WARRANTY

If you should dull, scratch, or chip your bathtub, the appearance can be restored to its original look. Scratches and dulling can be removed with a liquid polish such as Gel-Gloss[®]. Deep scratches or burns can be removed by using very fine wet sandpaper (600 grit or higher) and finished with a liquid polish.

NOTES: