

For each panel installed, you will need (4) #8 1½" long stainless steel screws and screw covers (sold separately in matching colors).

1

In each corner there is an indentation showing the recommended fastener location. Using a ¼" drill bit to allow for expansion and contraction, pre-drill a hole in the center of each indentation (Fig. 1).




2

Place the panel in the desired location, mark the four corners on the mounting surface, and pre-drill using a ⅛" bit (Fig. 2).

NOTE:

Be sure to allow an ⅛" between sheets for expansion and contraction.

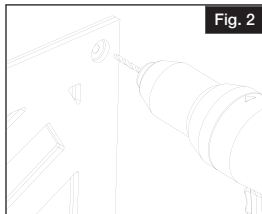

3

Place the screw cover over the screw shank. Line the screw up with the pre-drilled holes and secure the sheeting in place. Do not over-tighten the screw. Snap screw cover in place to hide the fastener (Fig. 3).

