


Assembly Instructions

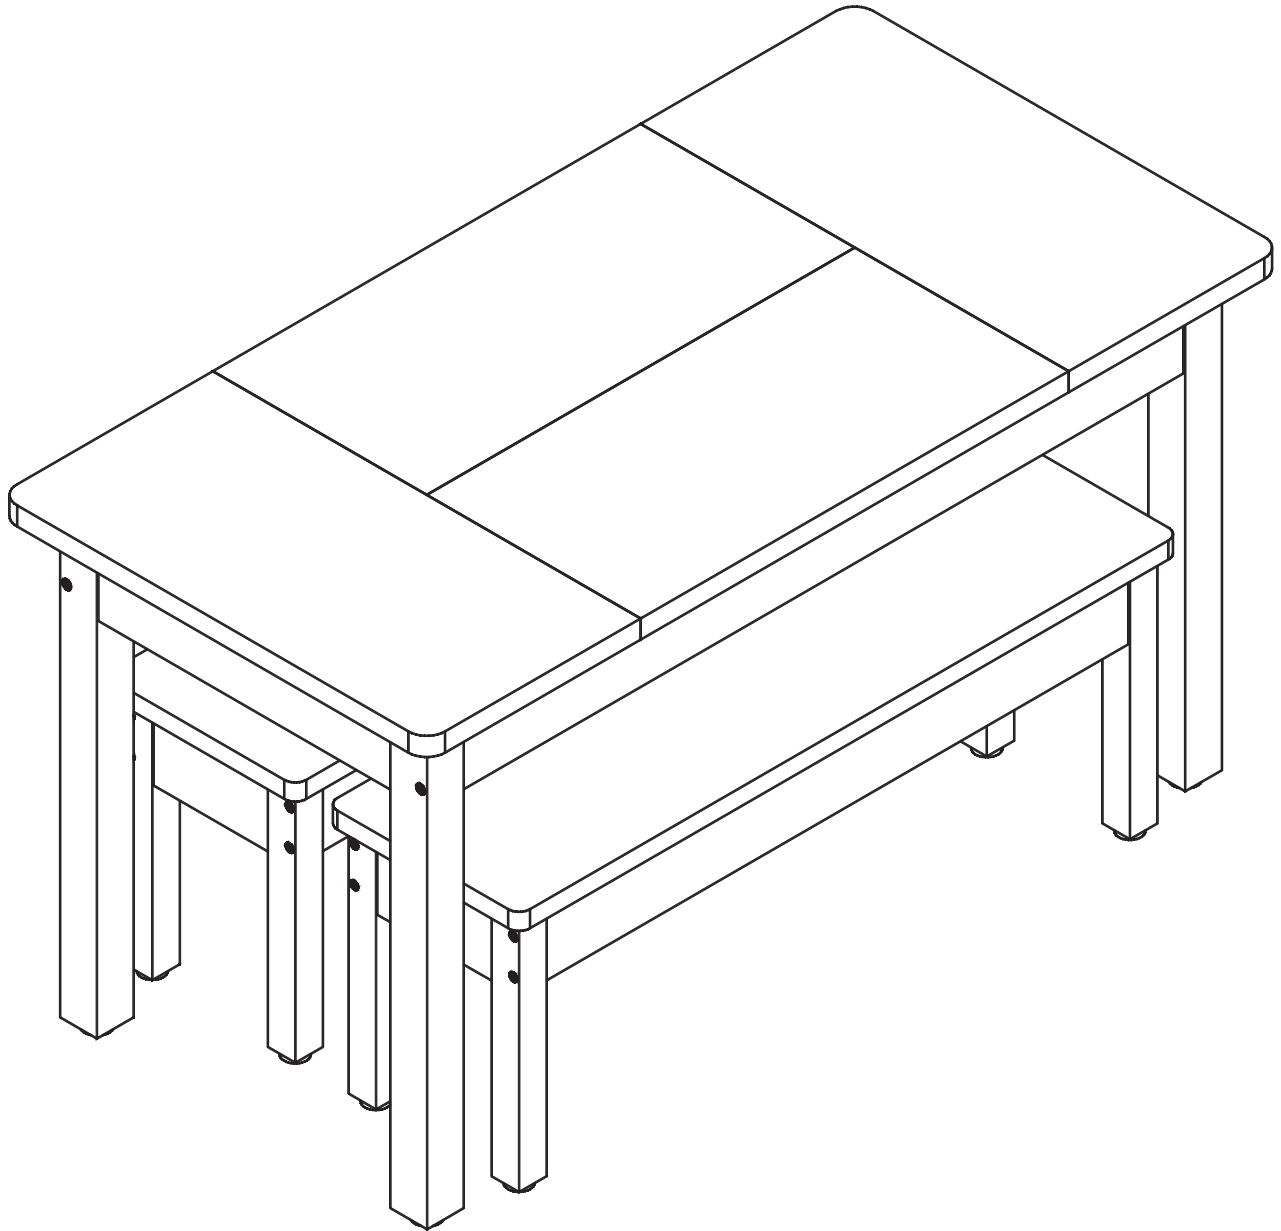


Dining Table Set

Model No. **HOGA-F1991X**
HOGA-F2131
HOGA-F2275

Contact Us




We're here to help you.

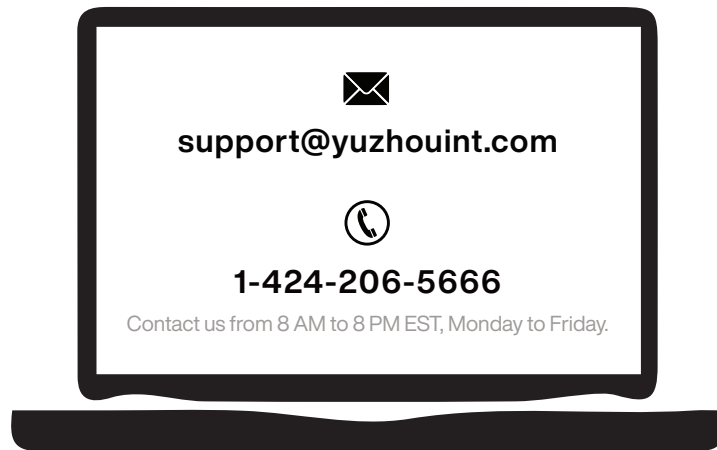

Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.


Warm Tips

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

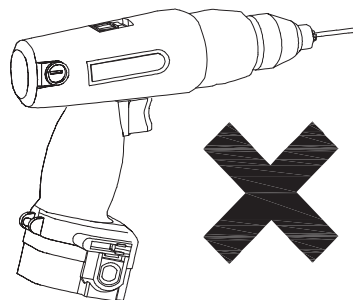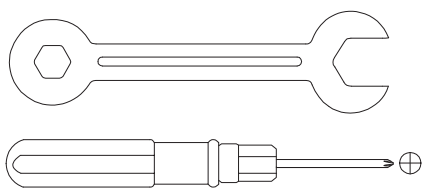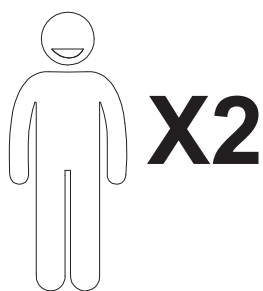



We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

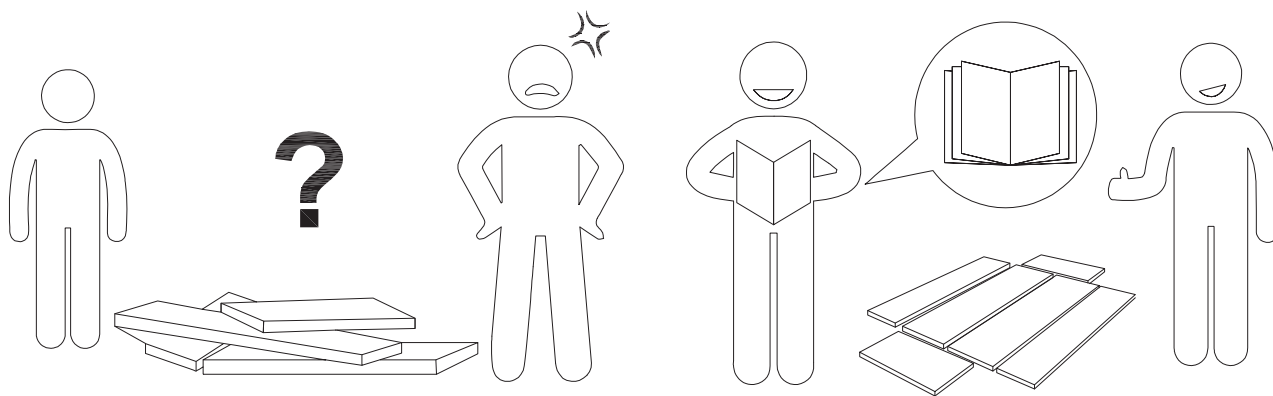

AVOID SCRATCHES

In order to avoid scratching, this furniture should be assembled on a soft surface, such as a rug.








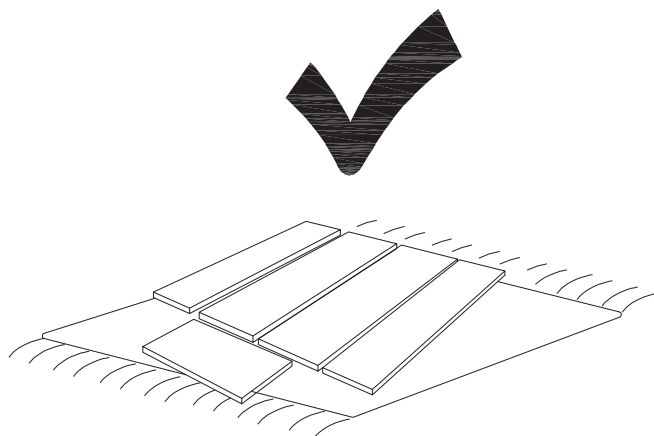
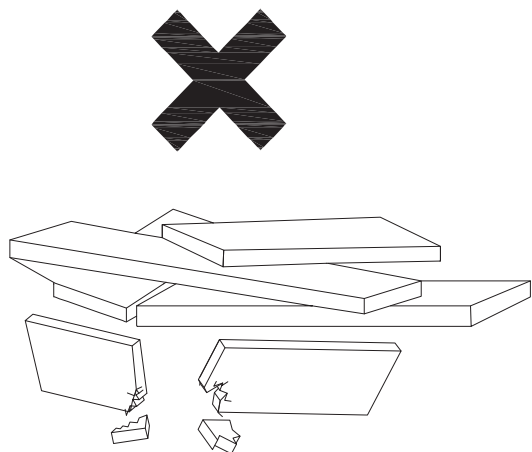


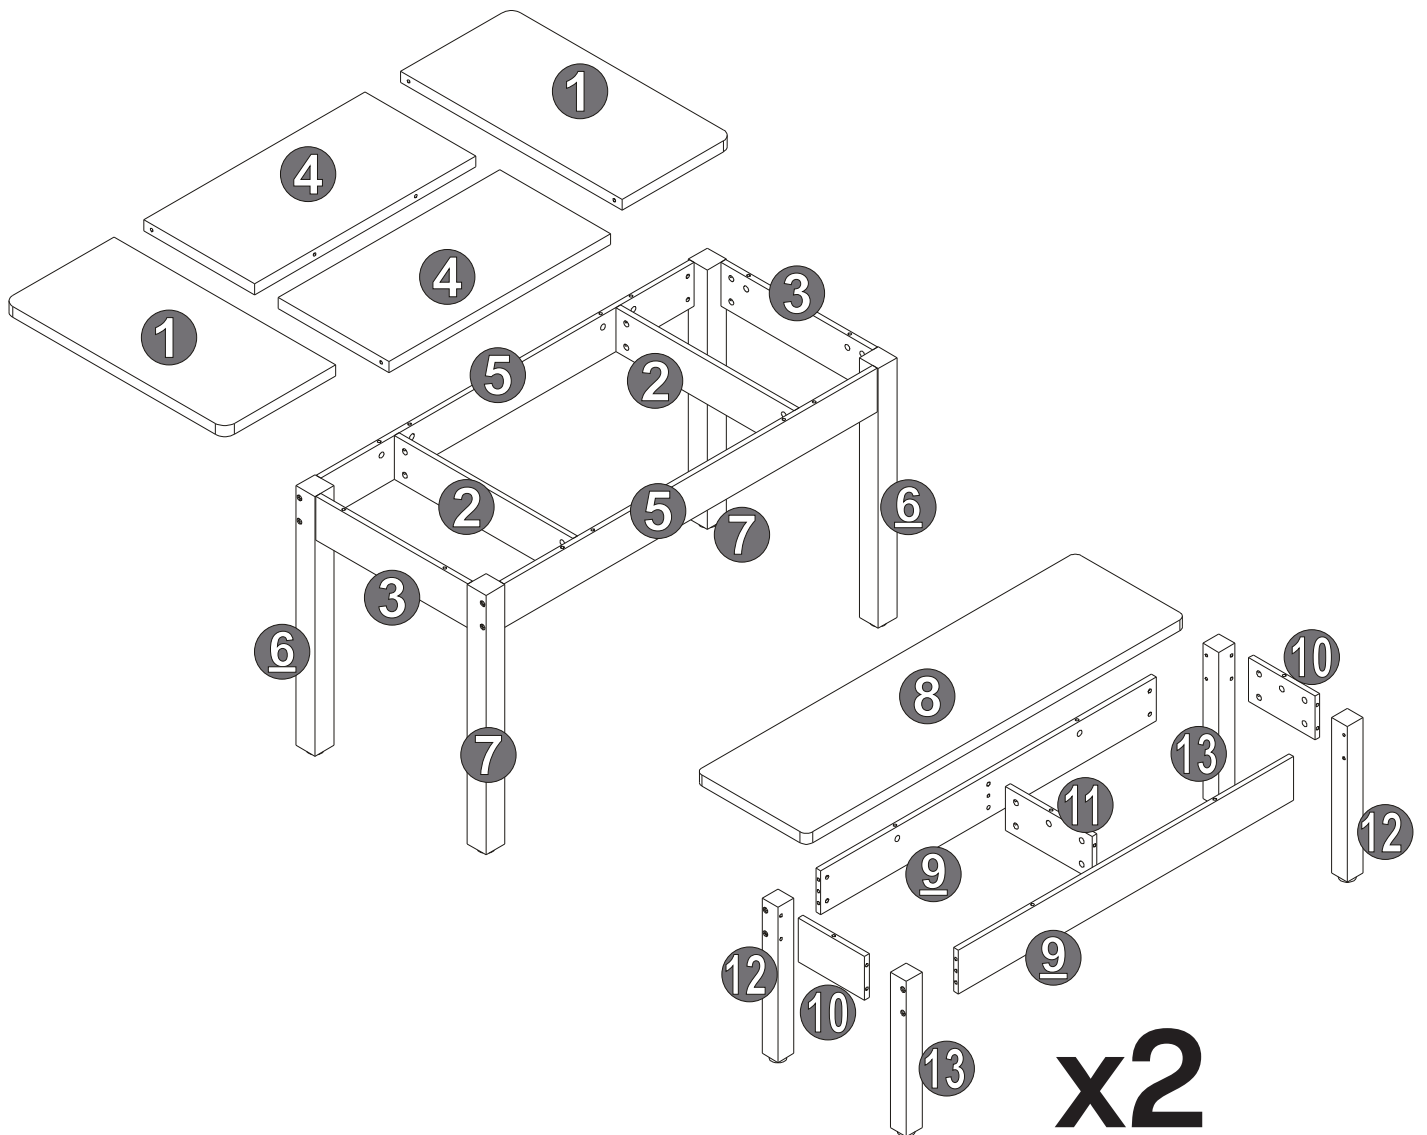




⚠ Caution


Make sure all parts are included. Most board parts are labeled or stamped on the raw edge.
Contact us for a free replacement if you encounter any damaged or missing parts.

Parts List

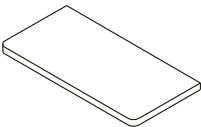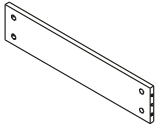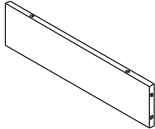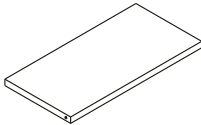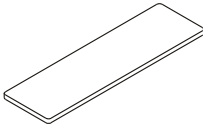1  2 pcs	2  2 pcs	3  2 pcs	4  2 pcs	5  2 pcs
6  2 pcs	7  2 pcs	8  2 pcs	9  4 pcs	10  4 pcs
11  2 pcs	12  4 pcs	13  4 pcs		



Hardware List

A	B	C	D	E	F
 M6x85mm 8 pcs	 M6x75mm 16 pcs	 M6x40mm 66 pcs	 66 pcs	 Ø8x30mm 22 pcs	 12 pcs


G	H
 1 pc	 Ø21mm 24 pcs

Installation of Cams and Pins



Read each step carefully before starting. Each step of instruction should be performed in the correct order. If these steps are not followed in sequence, assembly difficulties may occur.

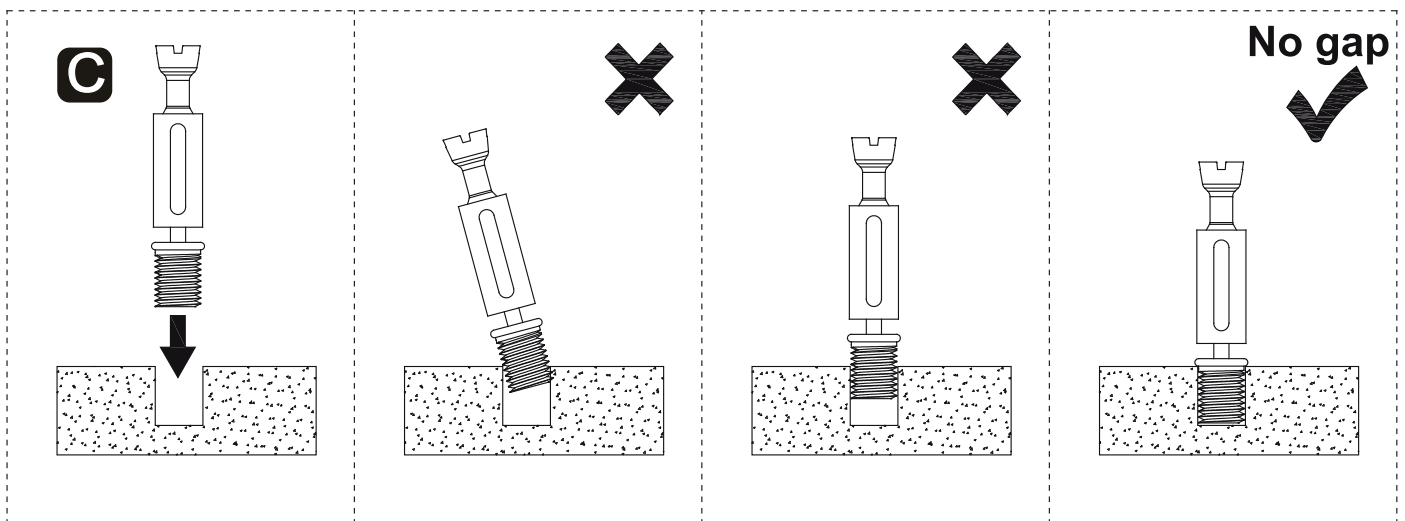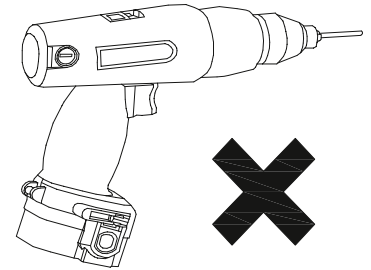

Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

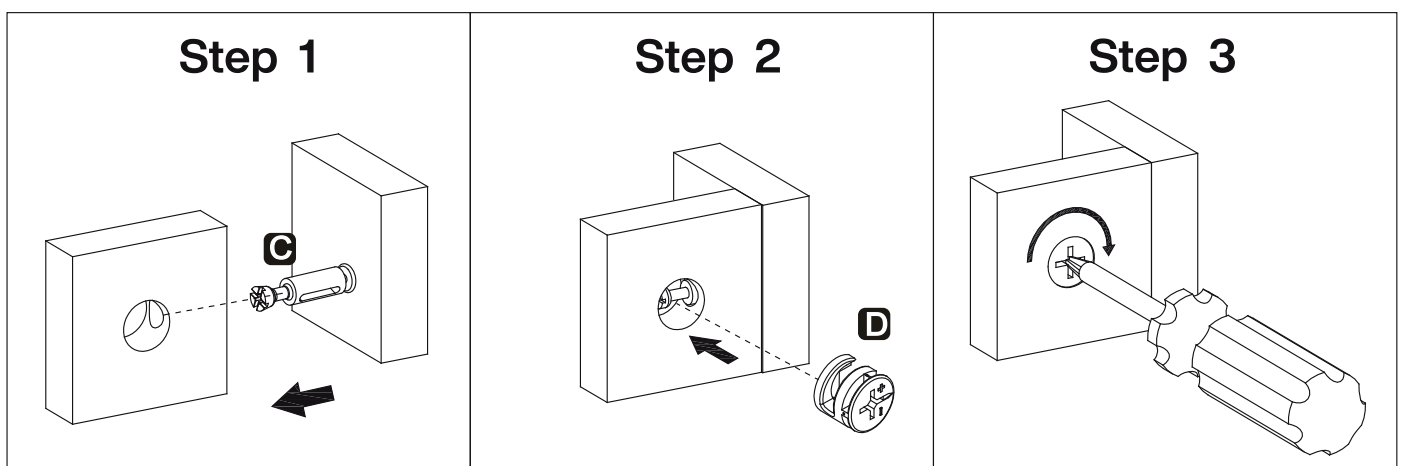


1

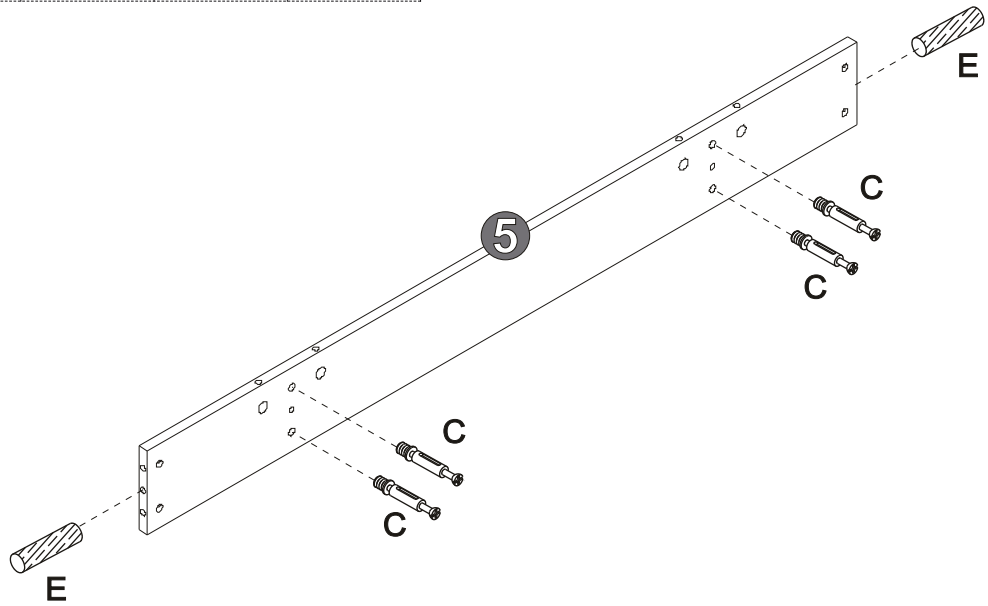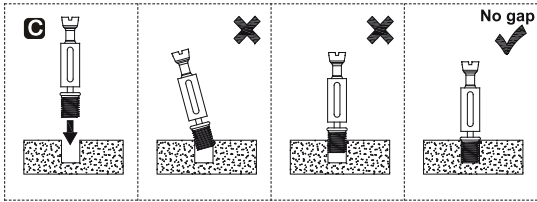

C	E
	
M6x40mm	Ø8x30mm
8 pcs	4 pcs

X2

2


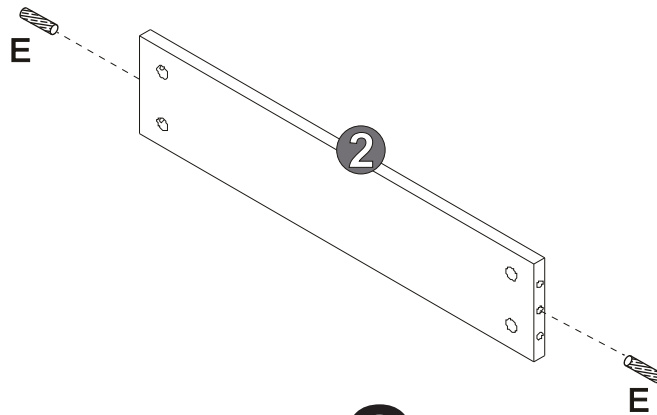


x2

E


Ø8x30mm
4 pcs

3

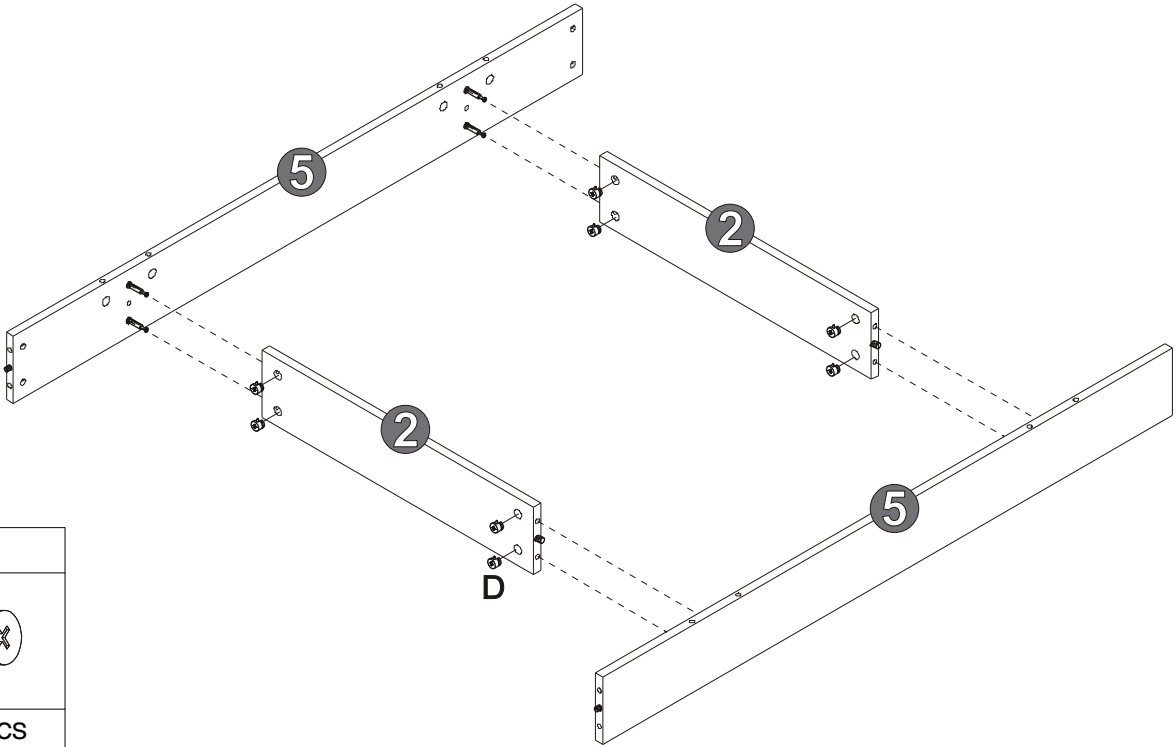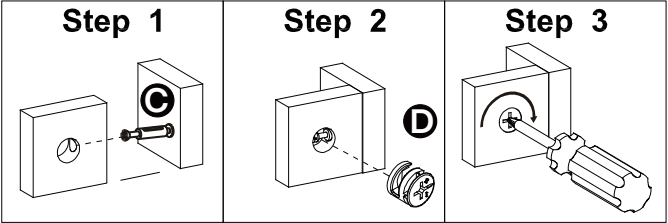

D
8 pcs



4

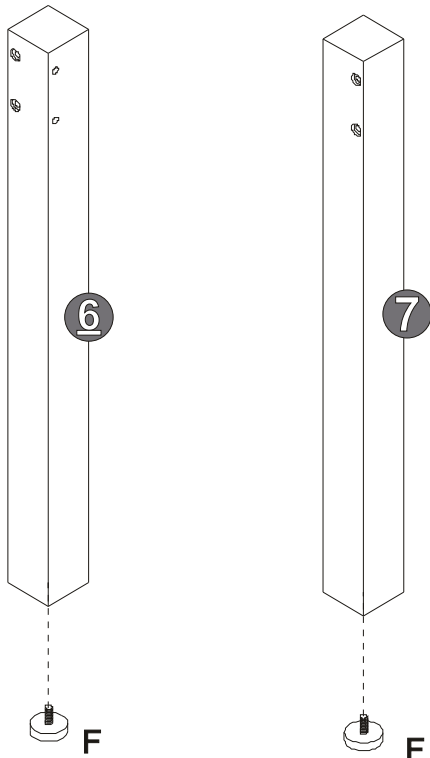

F
4 pcs

x2


5

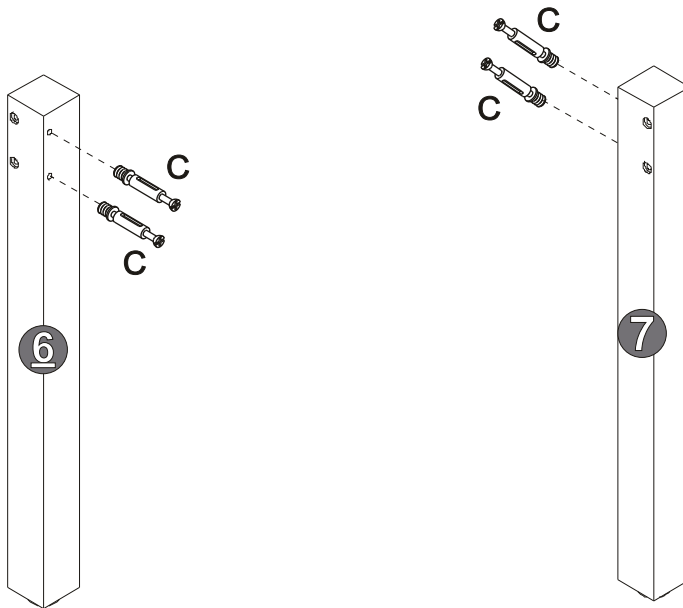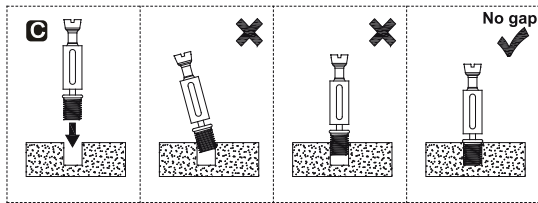


C
M6x40mm
8 pcs

x2

6

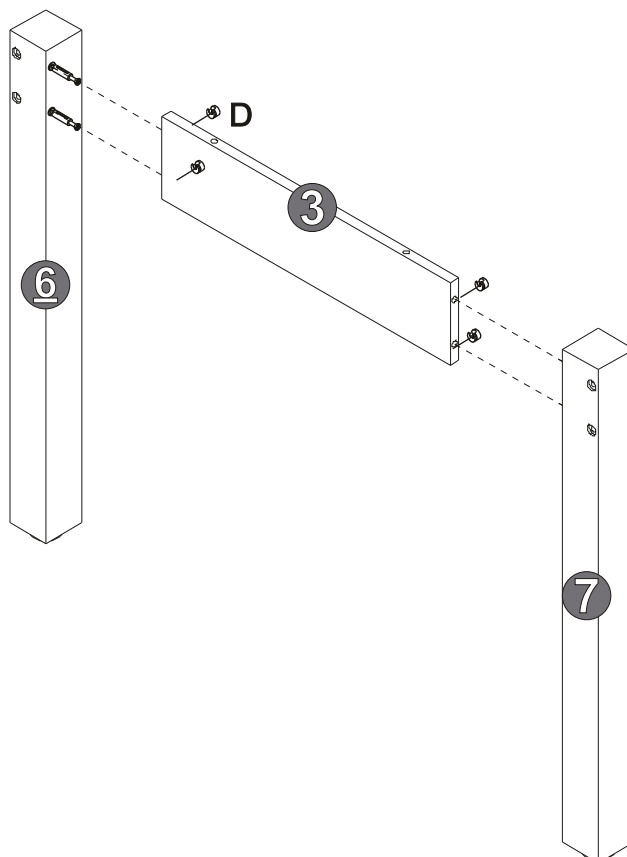



D
8 pcs

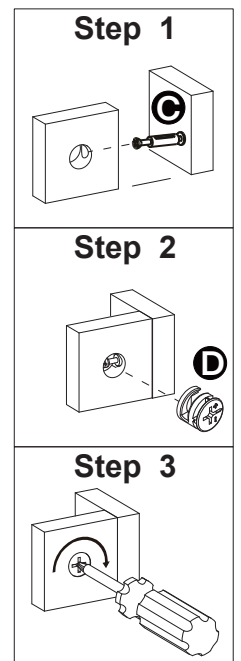


x2

7

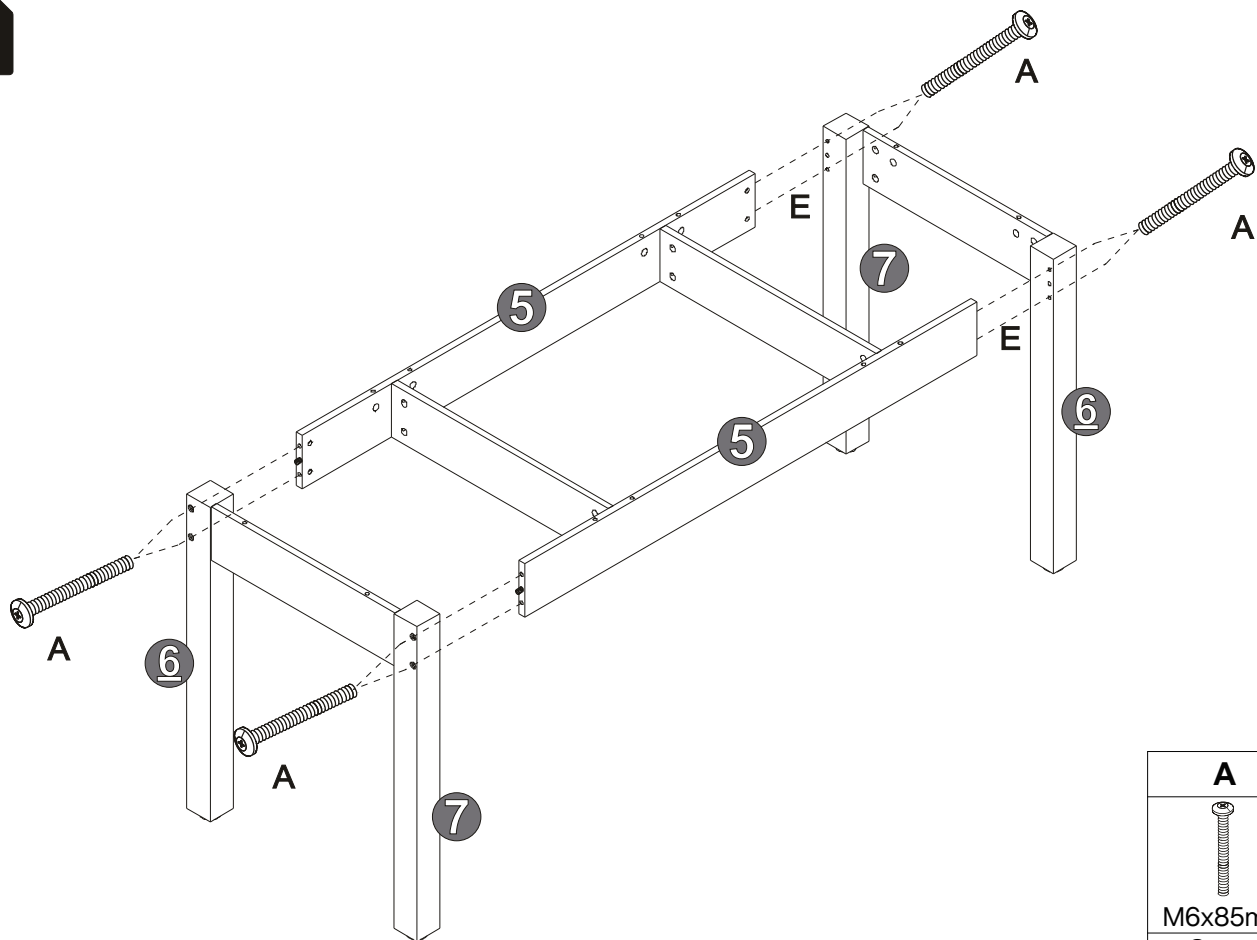

A

M6x85mm
8 pcs

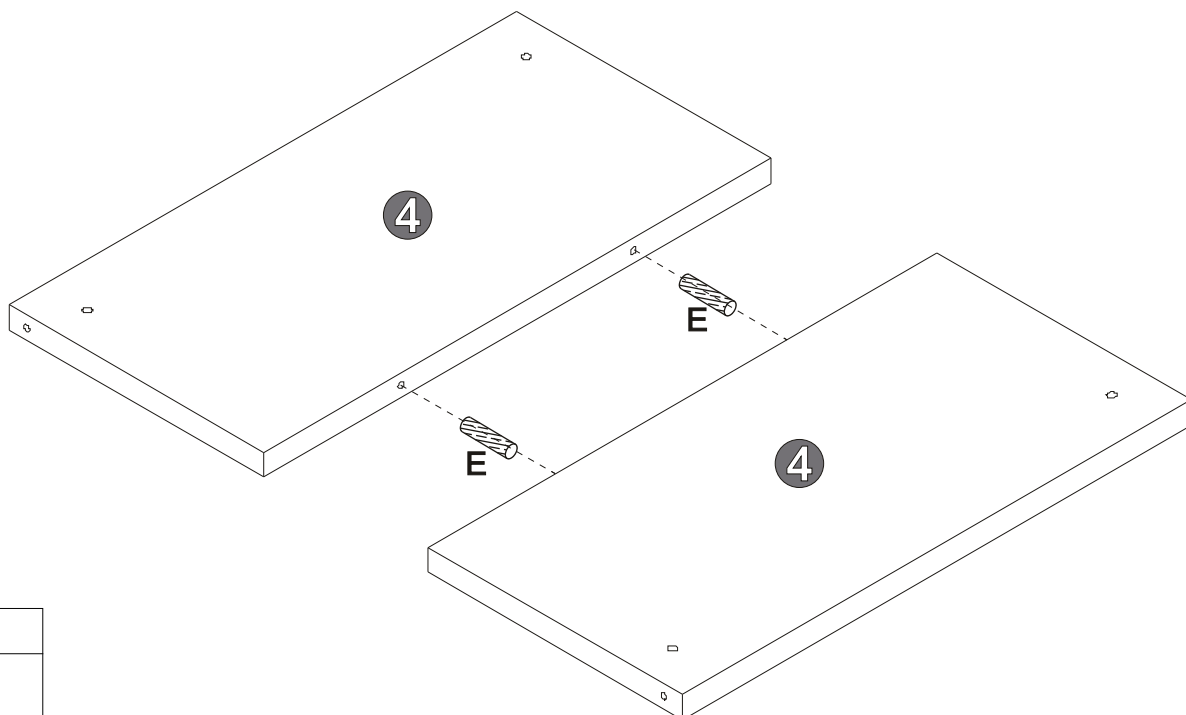
8



E

Ø8x30mm
2 pcs



9

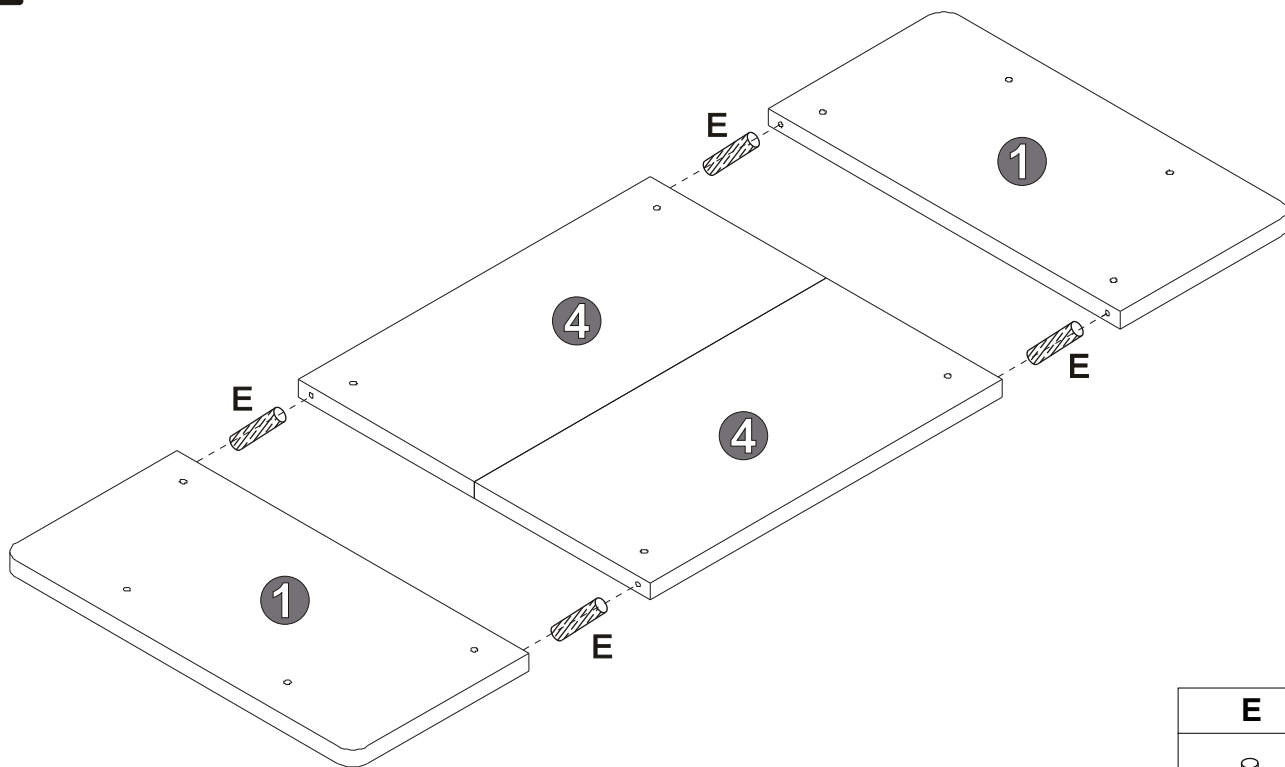

E

Ø8x30mm
4 pcs



10

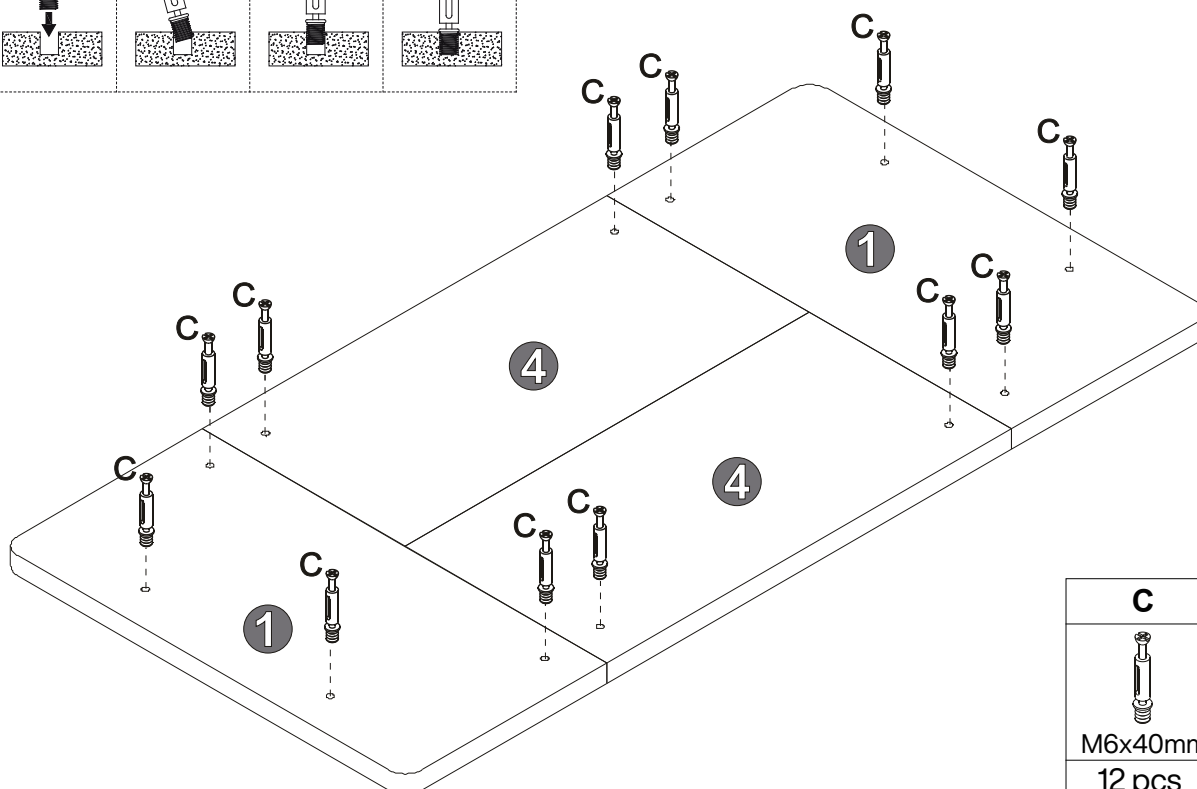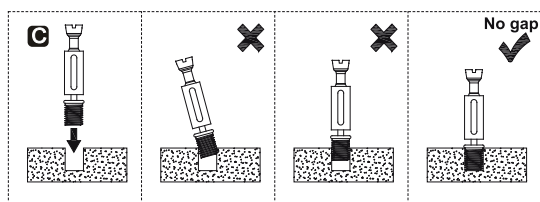

C


M6x40mm
12 pcs

11

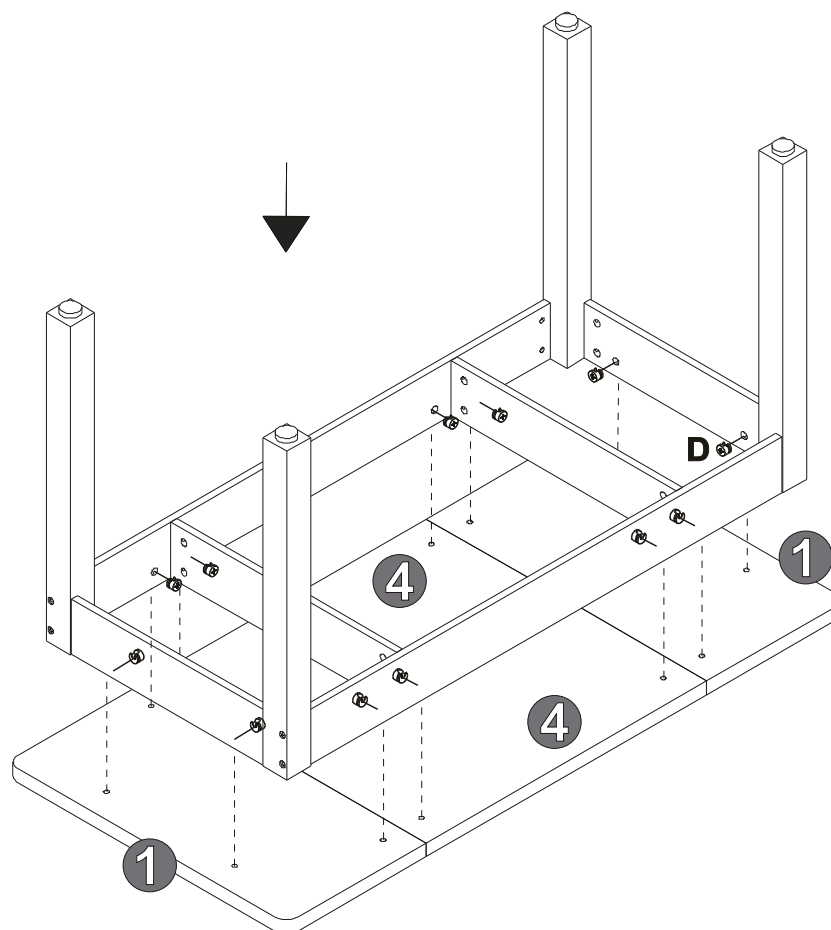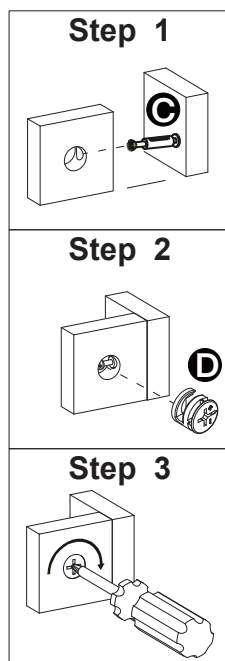


D
12 pcs

12


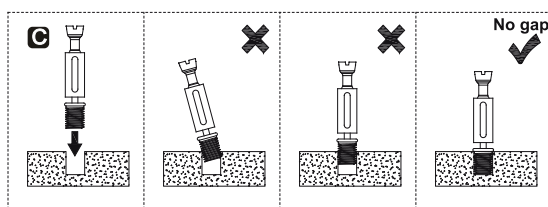


C	E
M6x40mm	Ø8x30mm
8 pcs	4 pcs

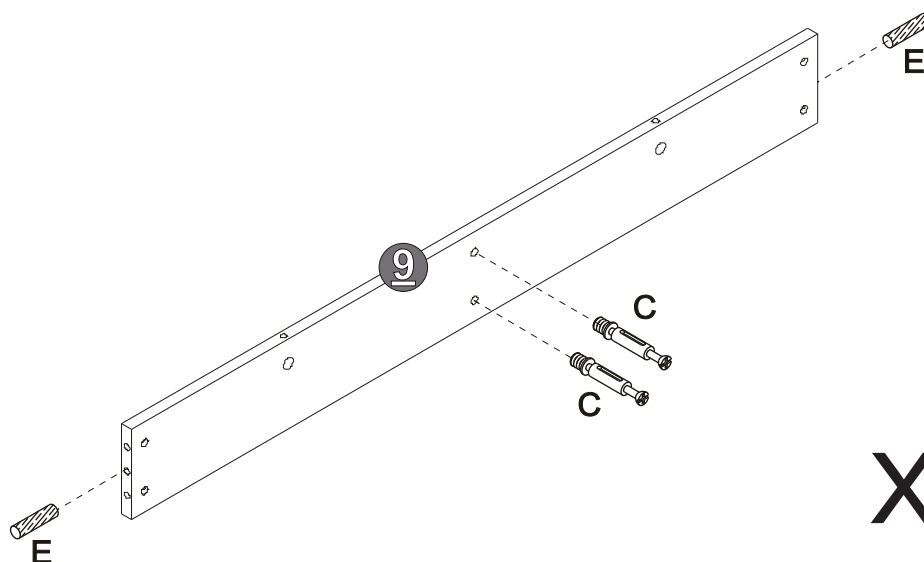


x4

13

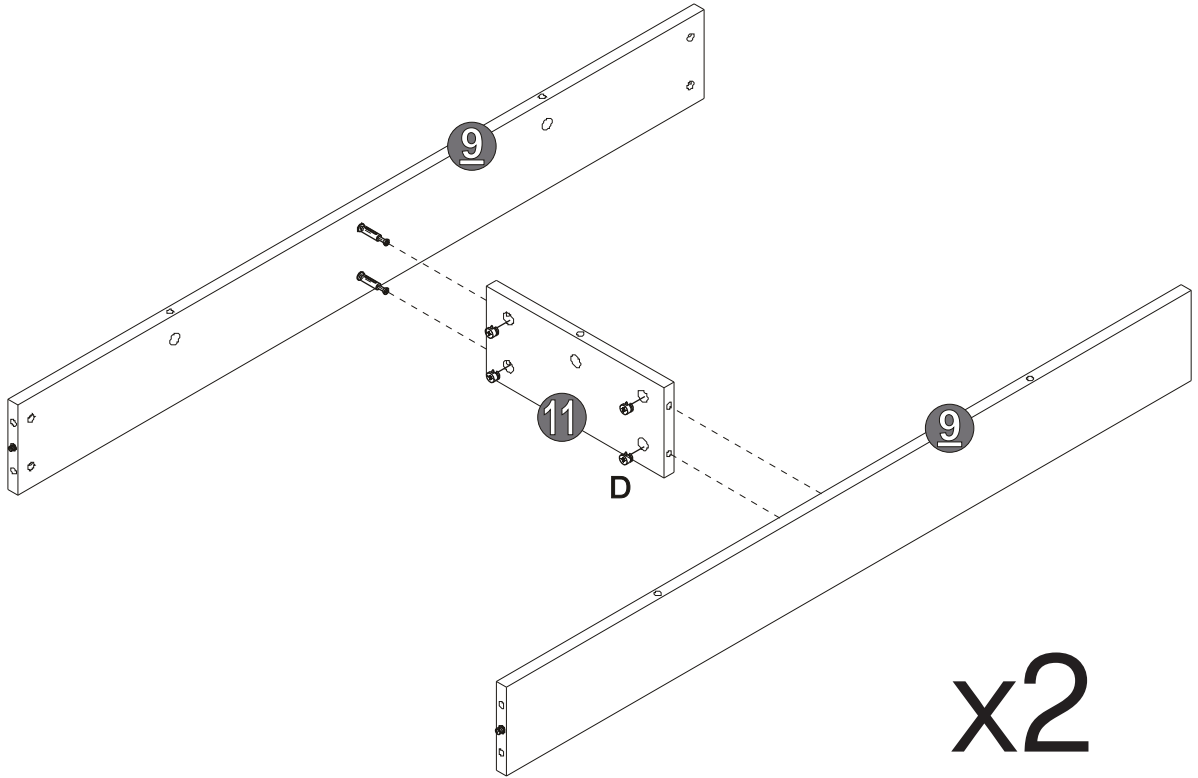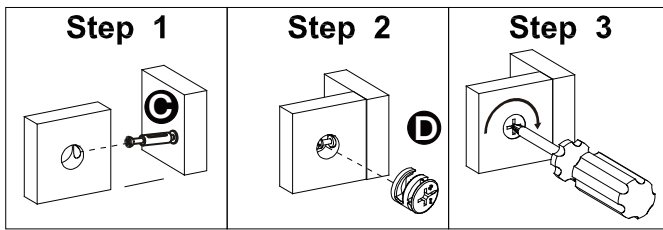

D
8 pcs


14

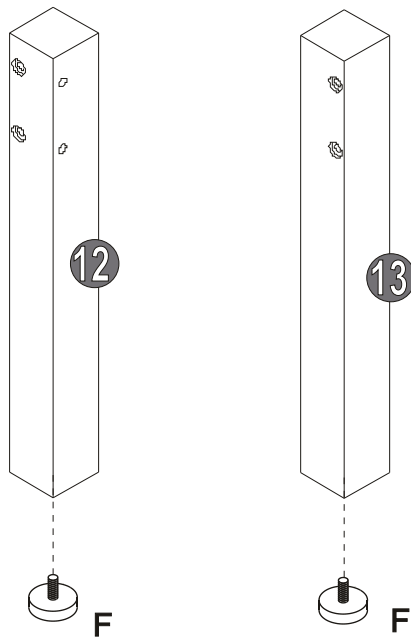

x4


F
8 pcs

15

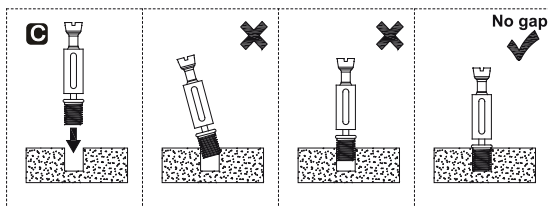



C

M6x40mm
16 pcs

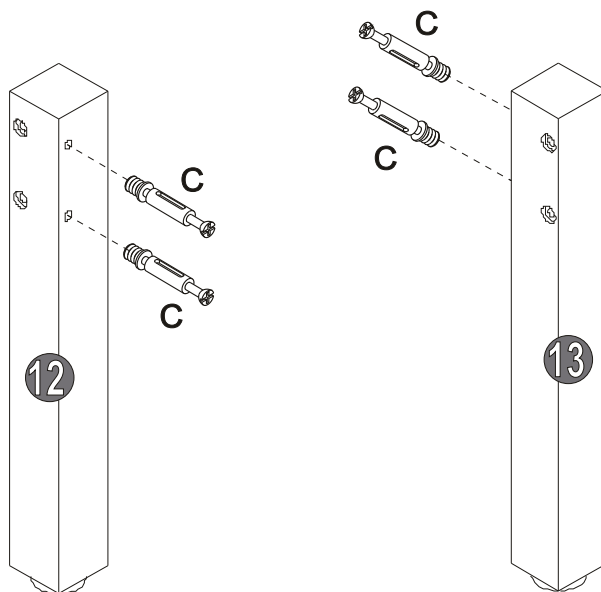

x4

16

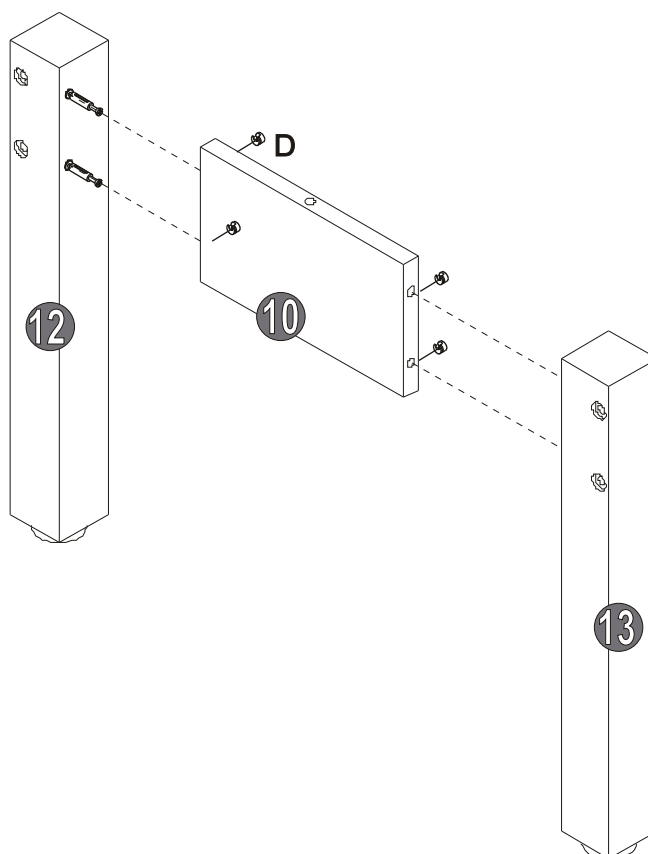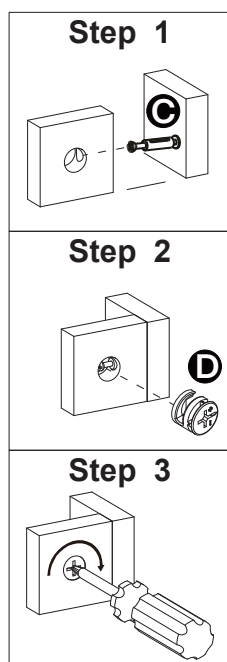


D


16 pcs

x4


17

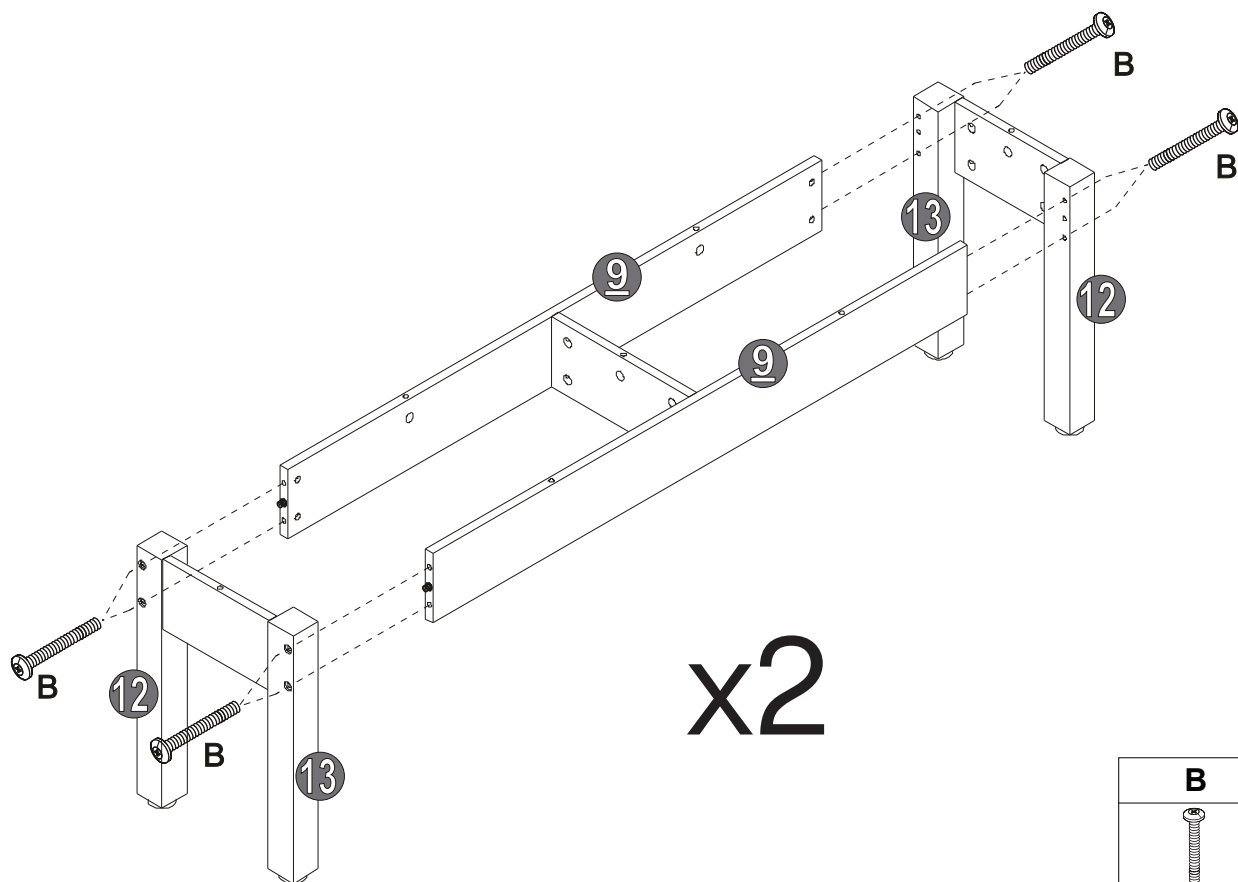

x2


B

M6x75mm
16 pcs

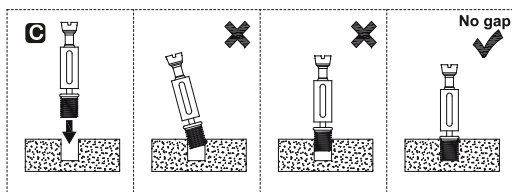18






C

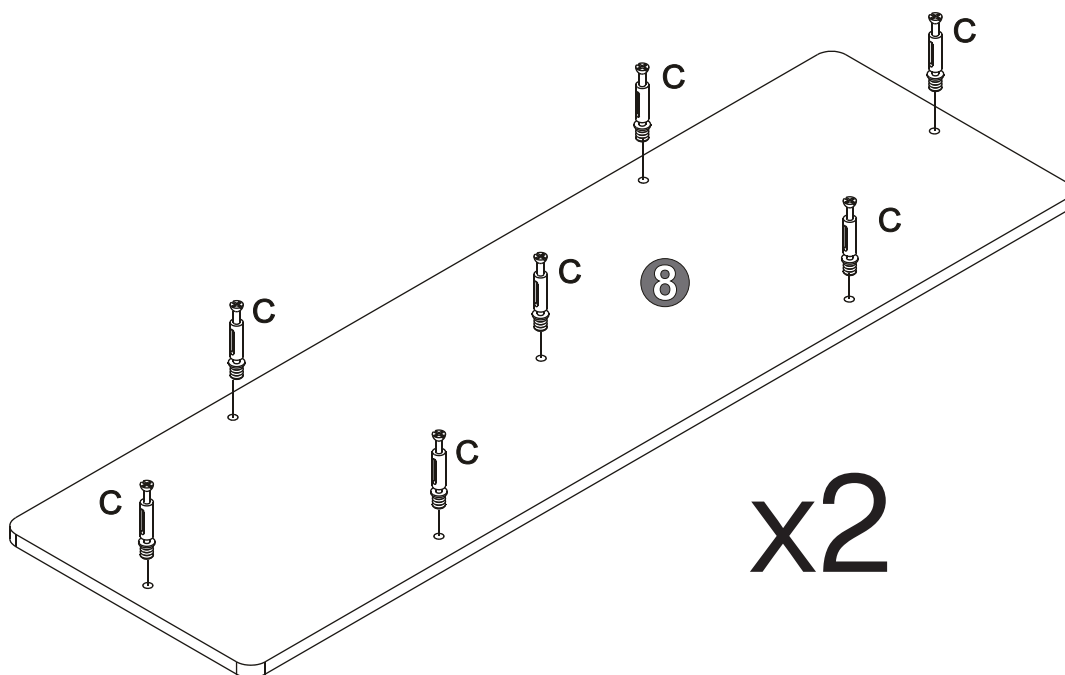M6x40mm
14 pcs






x2

19

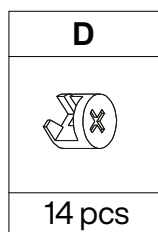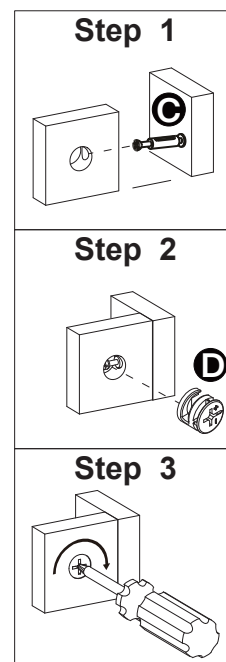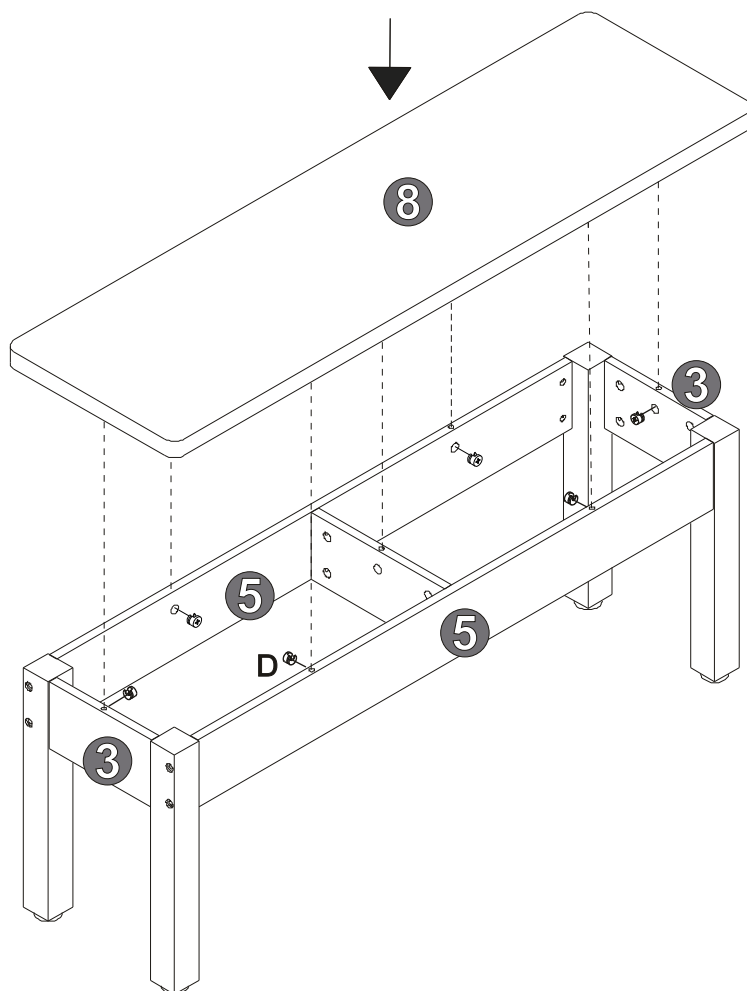

x2

20

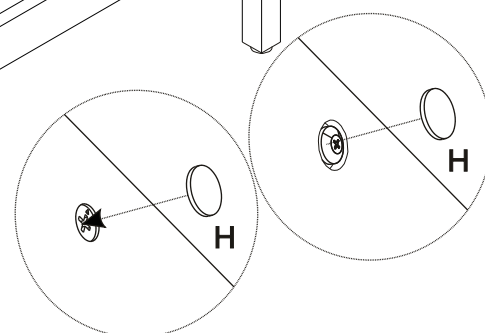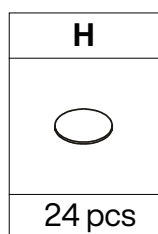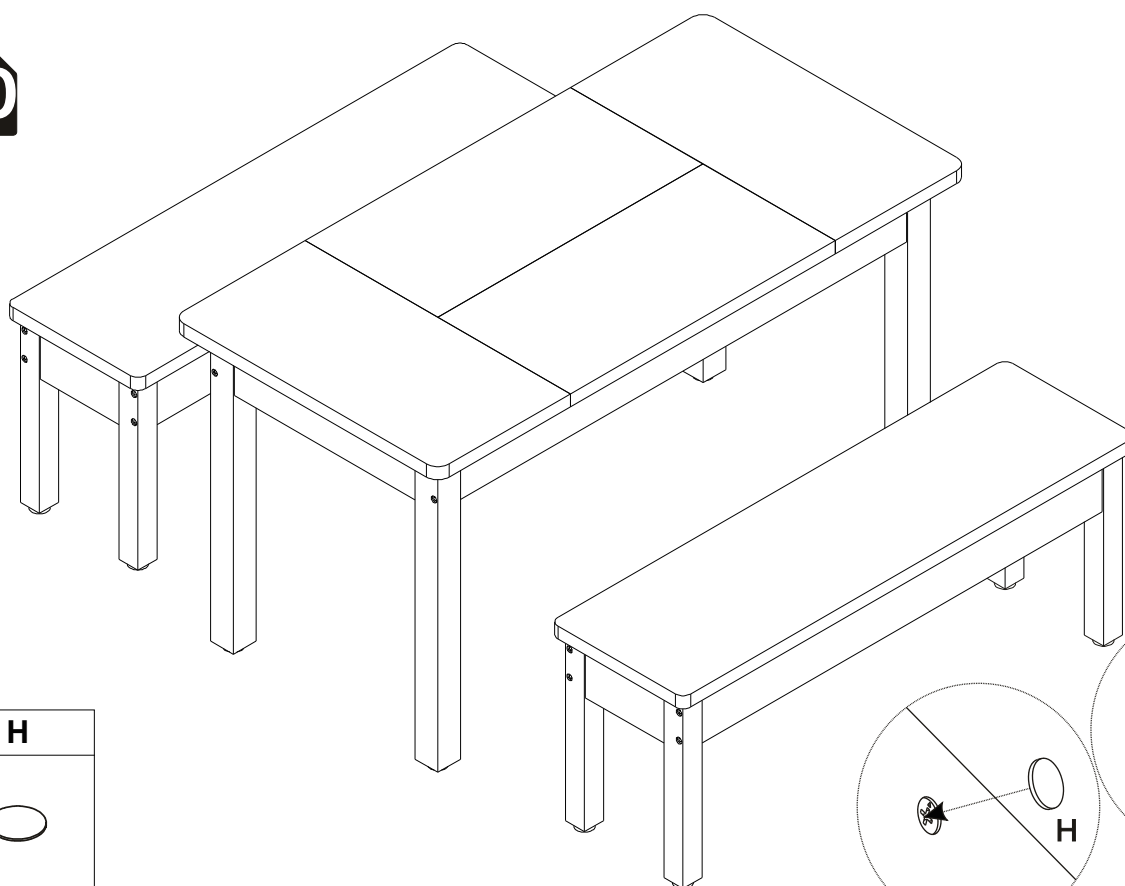

Thank you for your support!

