



ASSEMBLY INSTRUCTION

BATHROOM VANITY

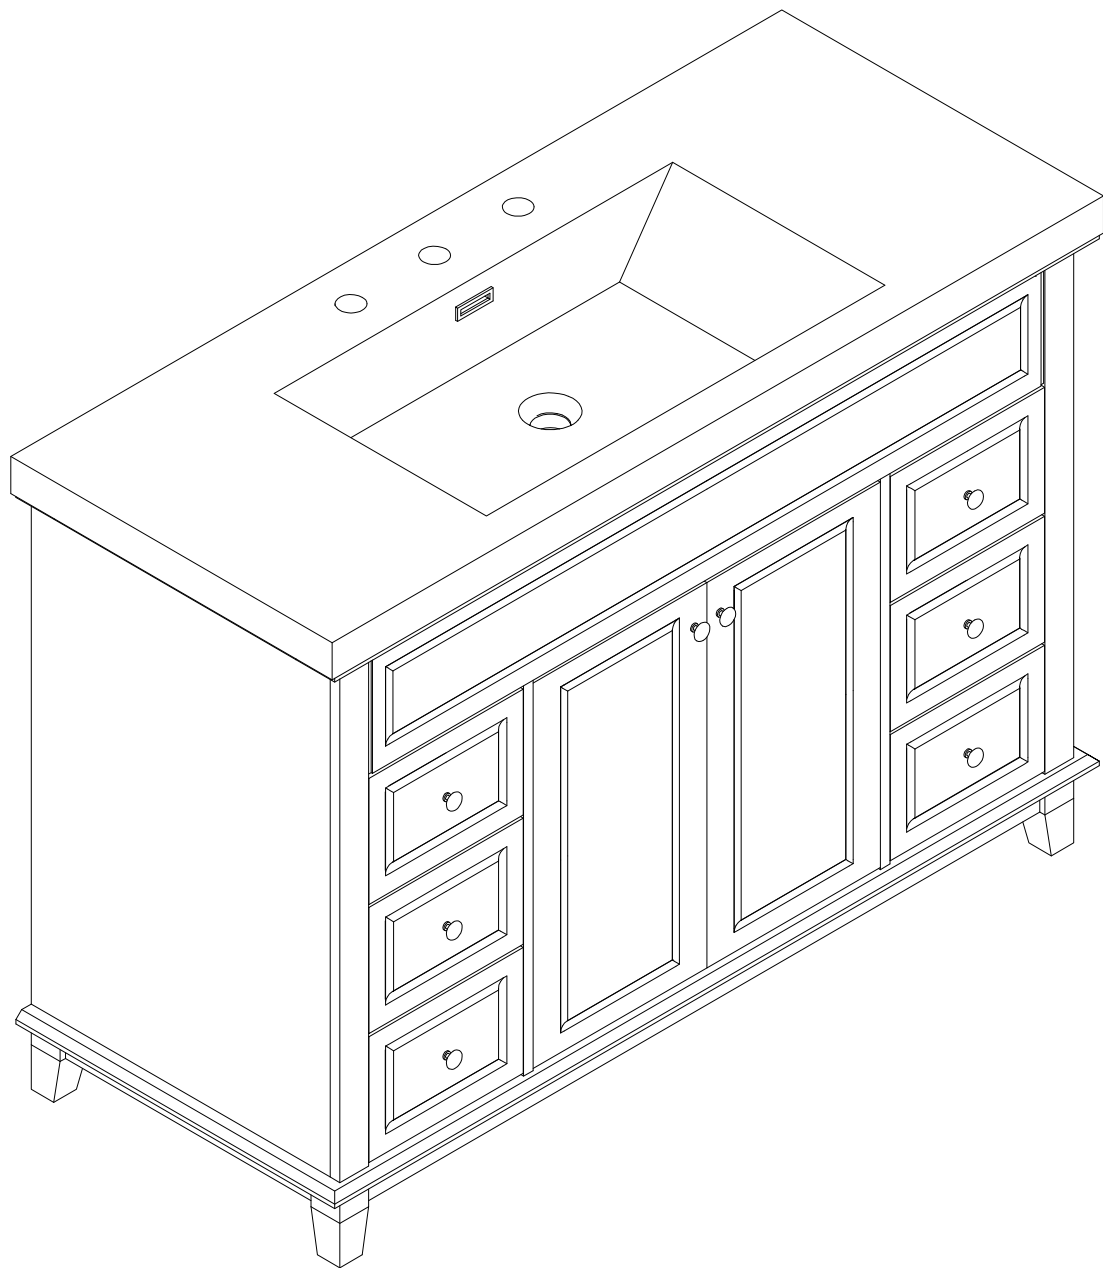

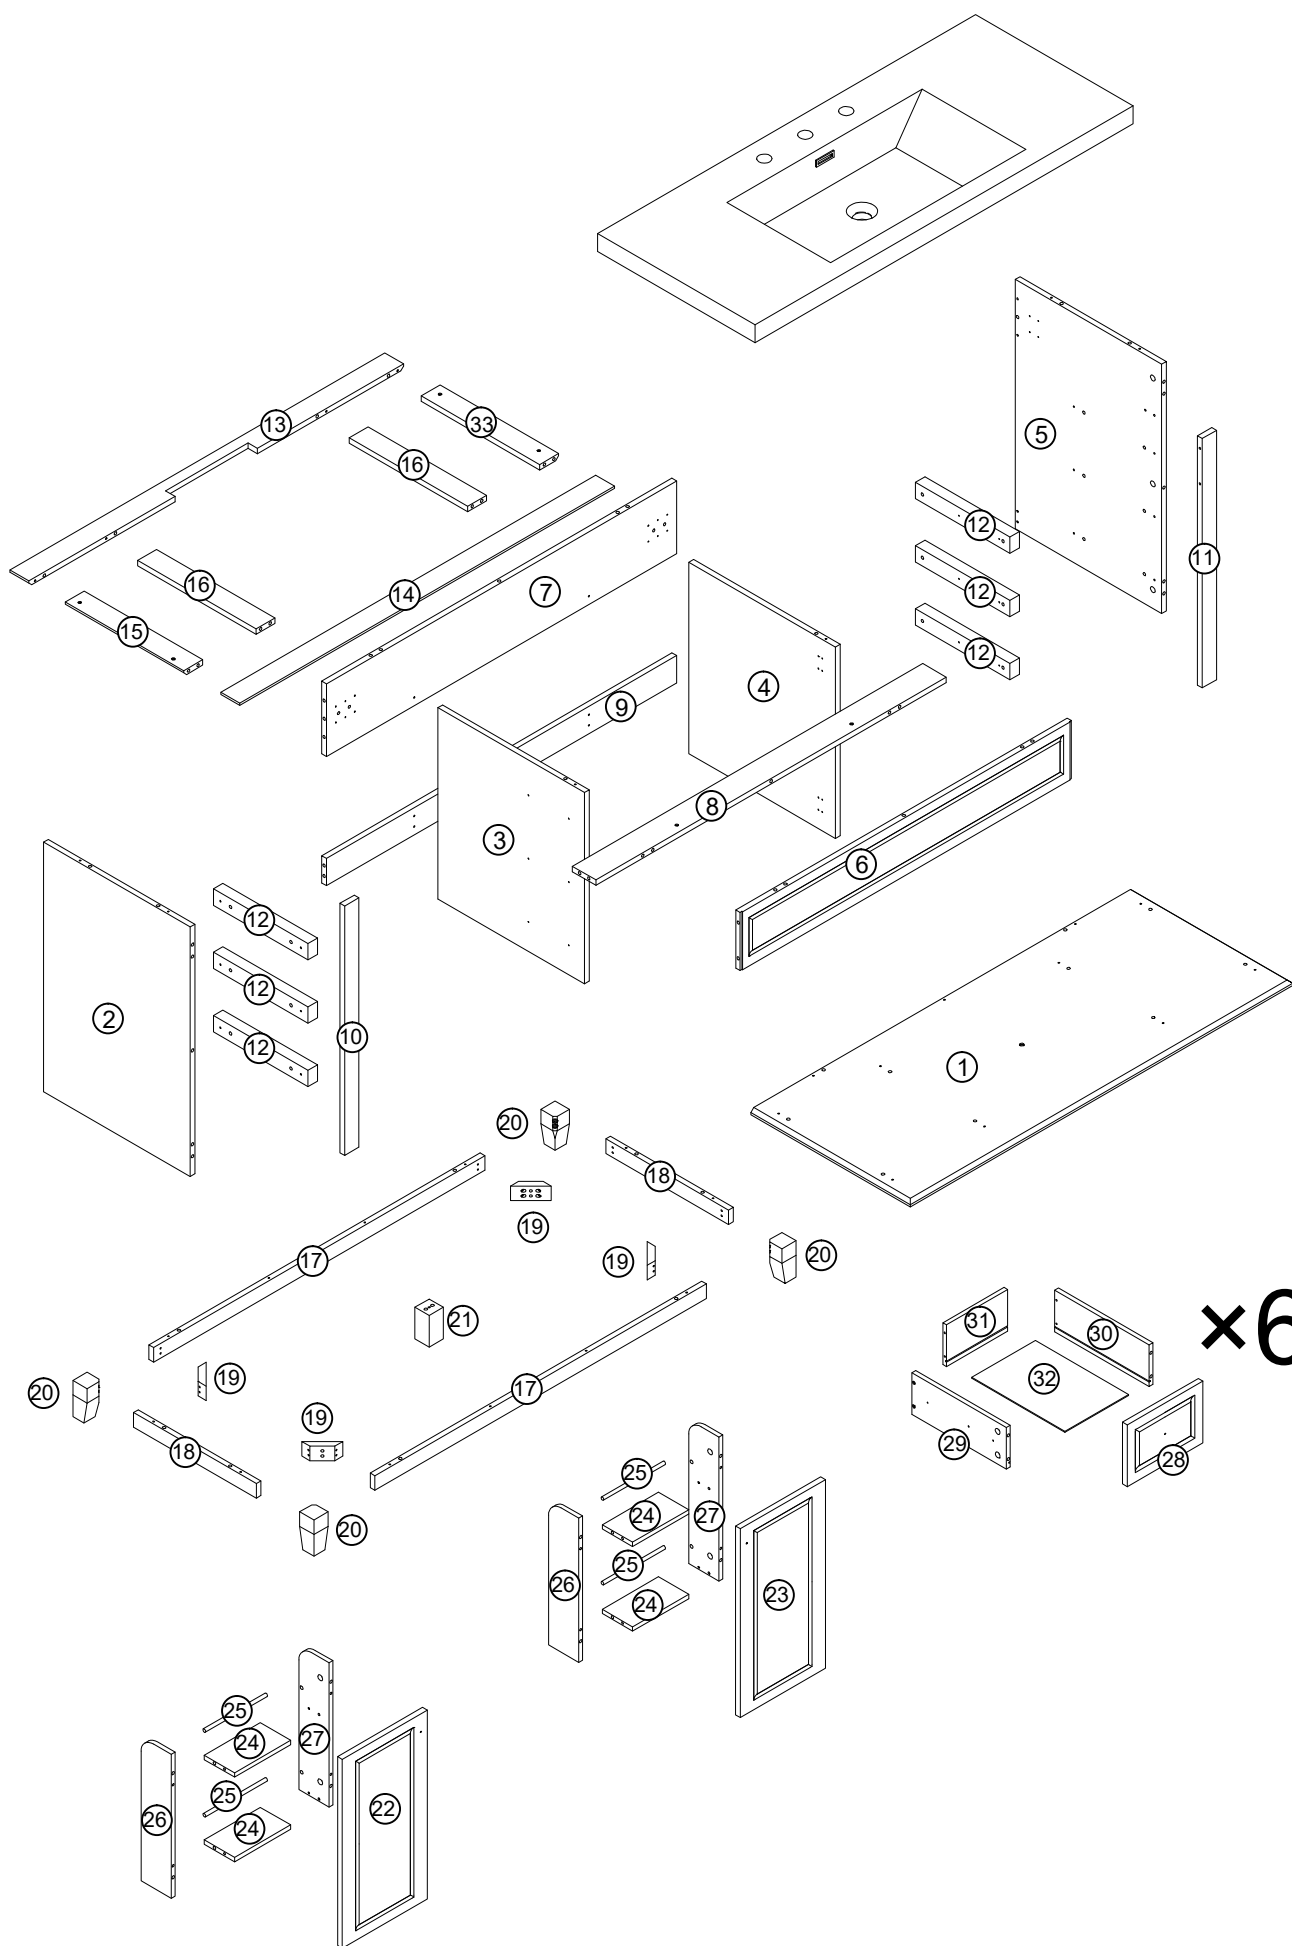

x6

Before Installation

Important-Please read these instructions fully before starting assembly


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.


Cam Lock Assembly Instructions

		Diagram A Insert Cam Bolt into hole as shown in diagram A.
		Diagram B Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.
		Diagram C Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.
		Connect the panels together.
		ARROW SIGN Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.
		To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. *Do not use an automatic screwdriver as it may bend or break if too much power is imposed.


Part list

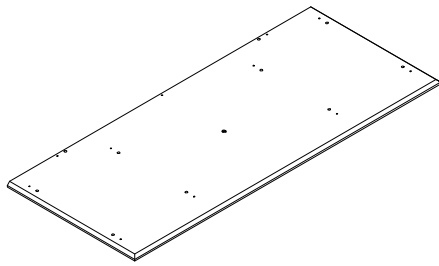


① × 1

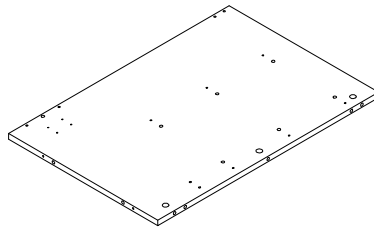


② × 1

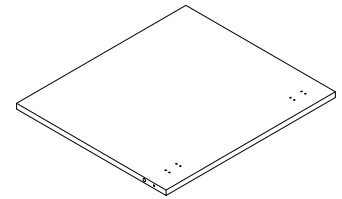


③ × 1

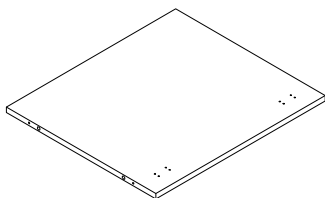


④ × 1

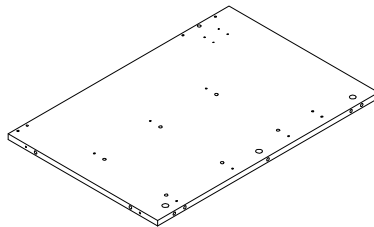


⑤ × 1

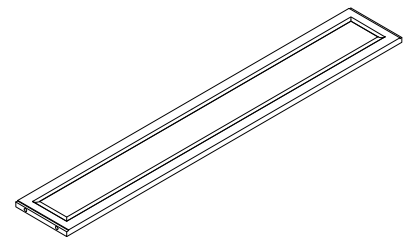


⑥ × 1

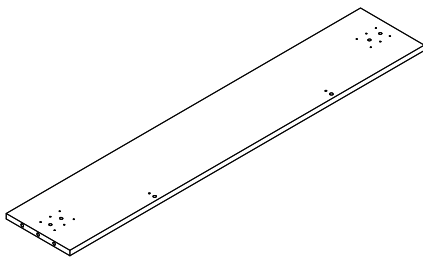


⑦ × 1

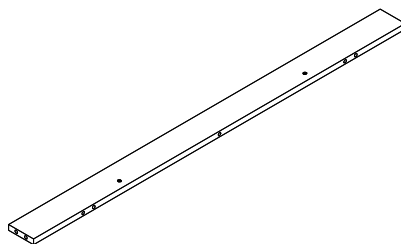


⑧ × 1

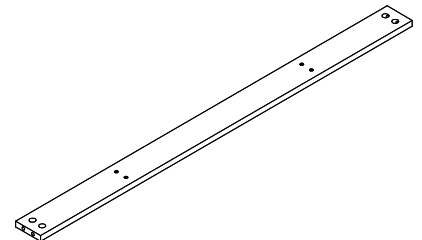


⑨ × 1

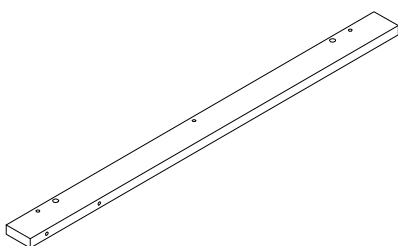













⑩ × 1

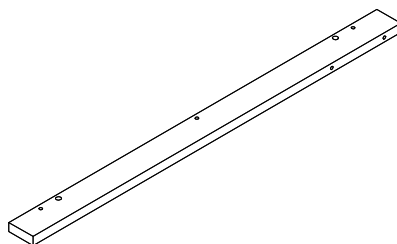


⑪ × 1

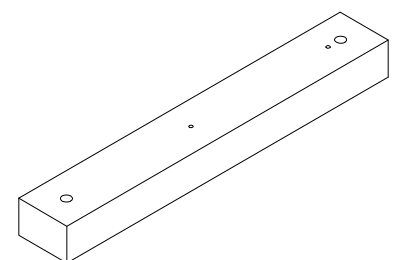


⑫ × 6

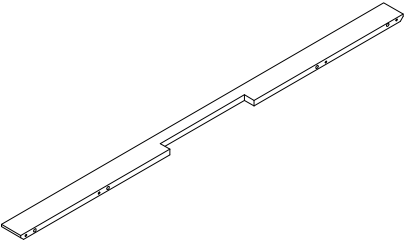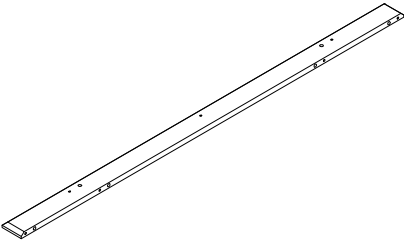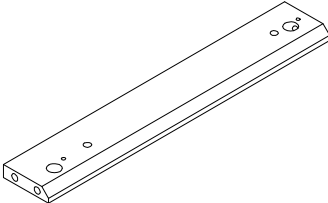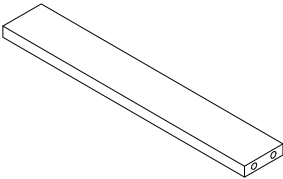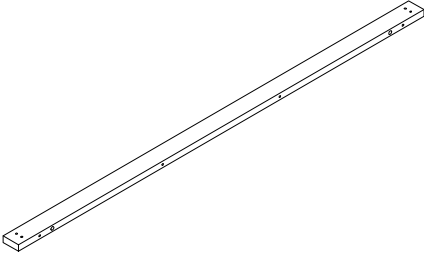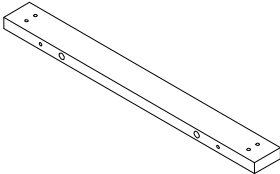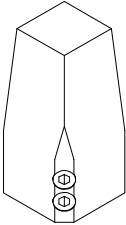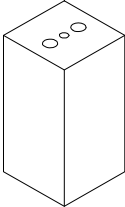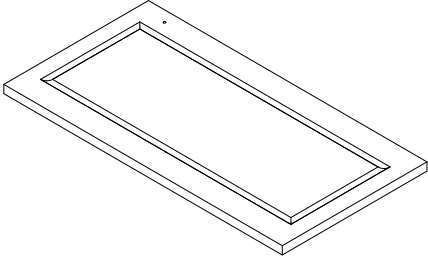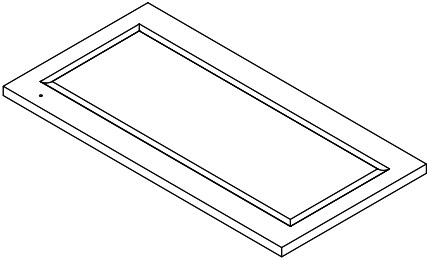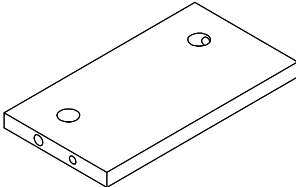
		
$\textcircled{13} \times 1$	$\textcircled{14} \times 1$	$\textcircled{15} \times 1$
		
$\textcircled{16} \times 2$	$\textcircled{17} \times 2$	$\textcircled{18} \times 2$
		
$\textcircled{19} \times 4$	$\textcircled{20} \times 4$	$\textcircled{21} \times 1$
		
$\textcircled{22} \times 1$	$\textcircled{23} \times 1$	$\textcircled{24} \times 4$

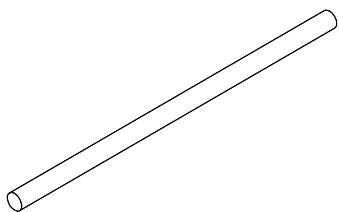


②⑤ × 4

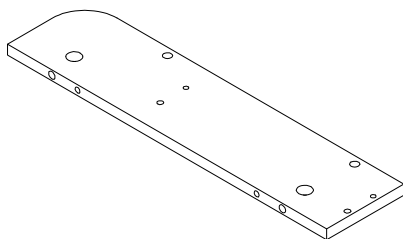


②⑥ × 2

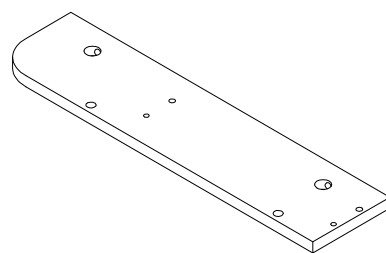


②⑦ × 2

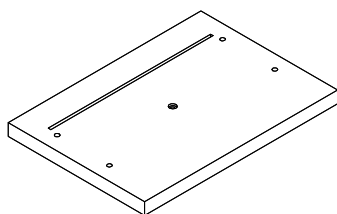


②⑧ × 6

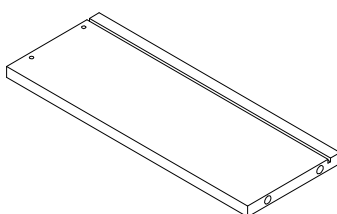


②⑨ × 6

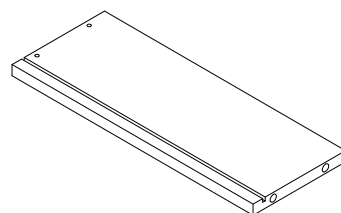


③① × 6

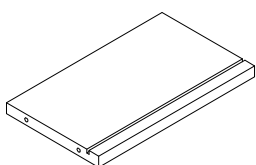


③② × 6

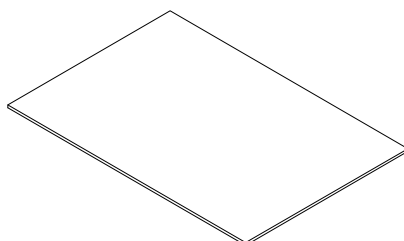












③③ × 6

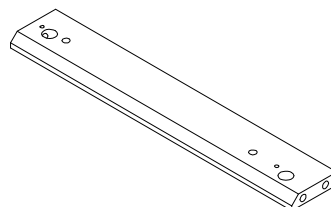




③④ × 1

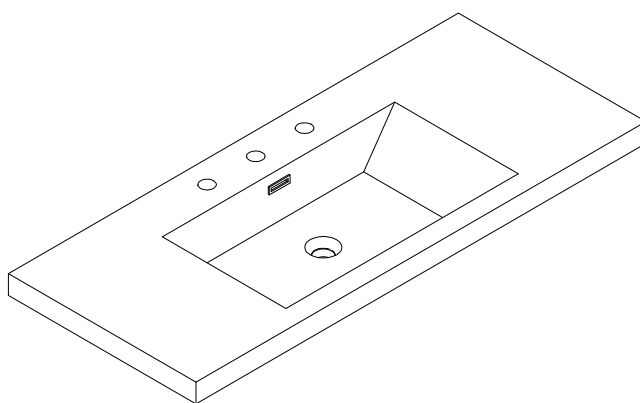





Hardware list

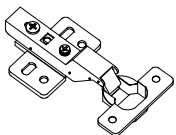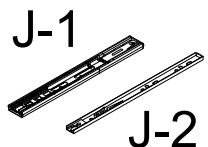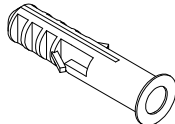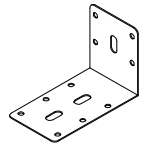					
M6×35mm A × 79	Φ15×10mm B × 79	Φ6×30mm C × 16	M3×12mm D × 62	M3.5×12mm E × 24	M4×25mm F × 16
					
M4×35mm G × 59	Φ8×30mm H × 58	I × 4	J × 12	K × 4	M4×16mm L × 8
					
M × 8	N × 1	O × 1	M6×60mm P × 4	Q × 2	M4×45mm R × 12
					
M7×50mm S × 1	T × 8	U × 8	M6×50mm V × 8	M4 W × 1	X × 4
					
M4×12mm Y × 20					



Step 1

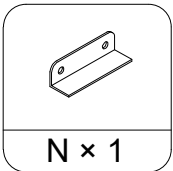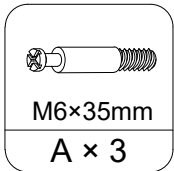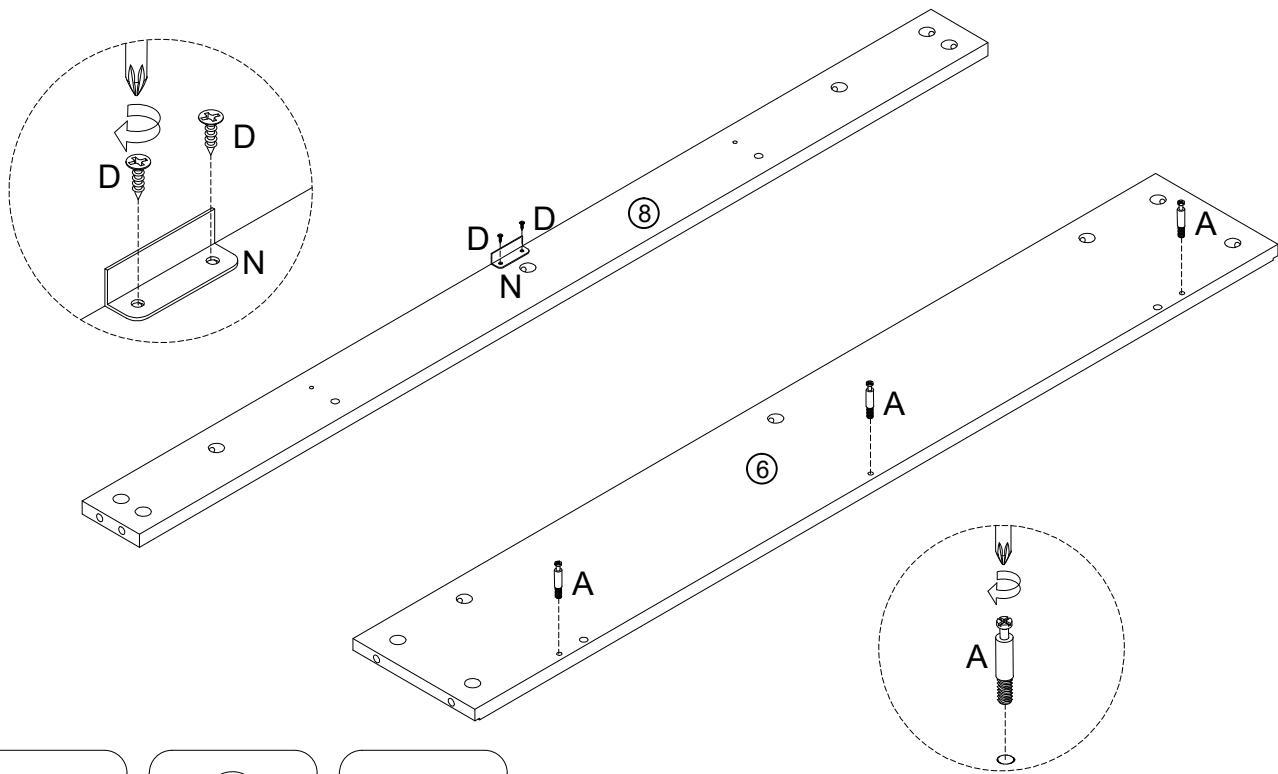





Step 2

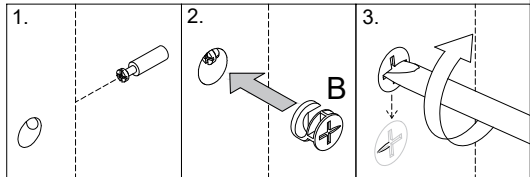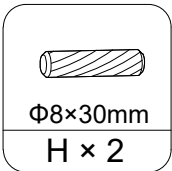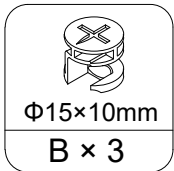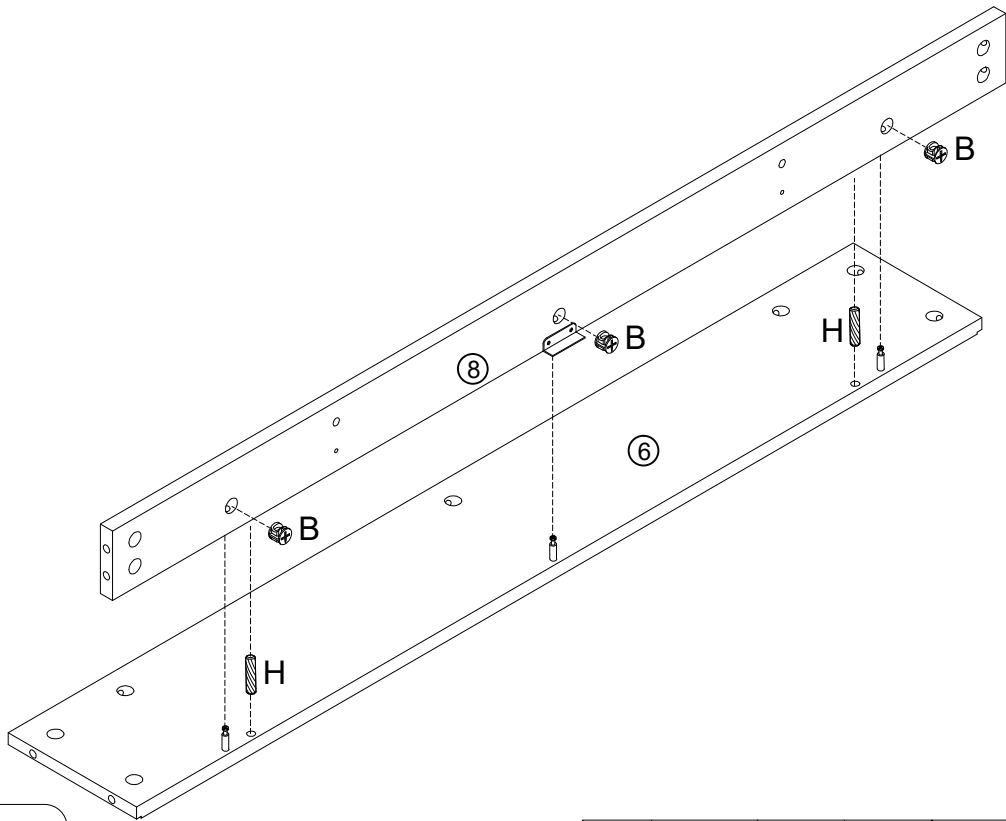


Step 3

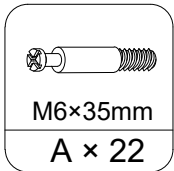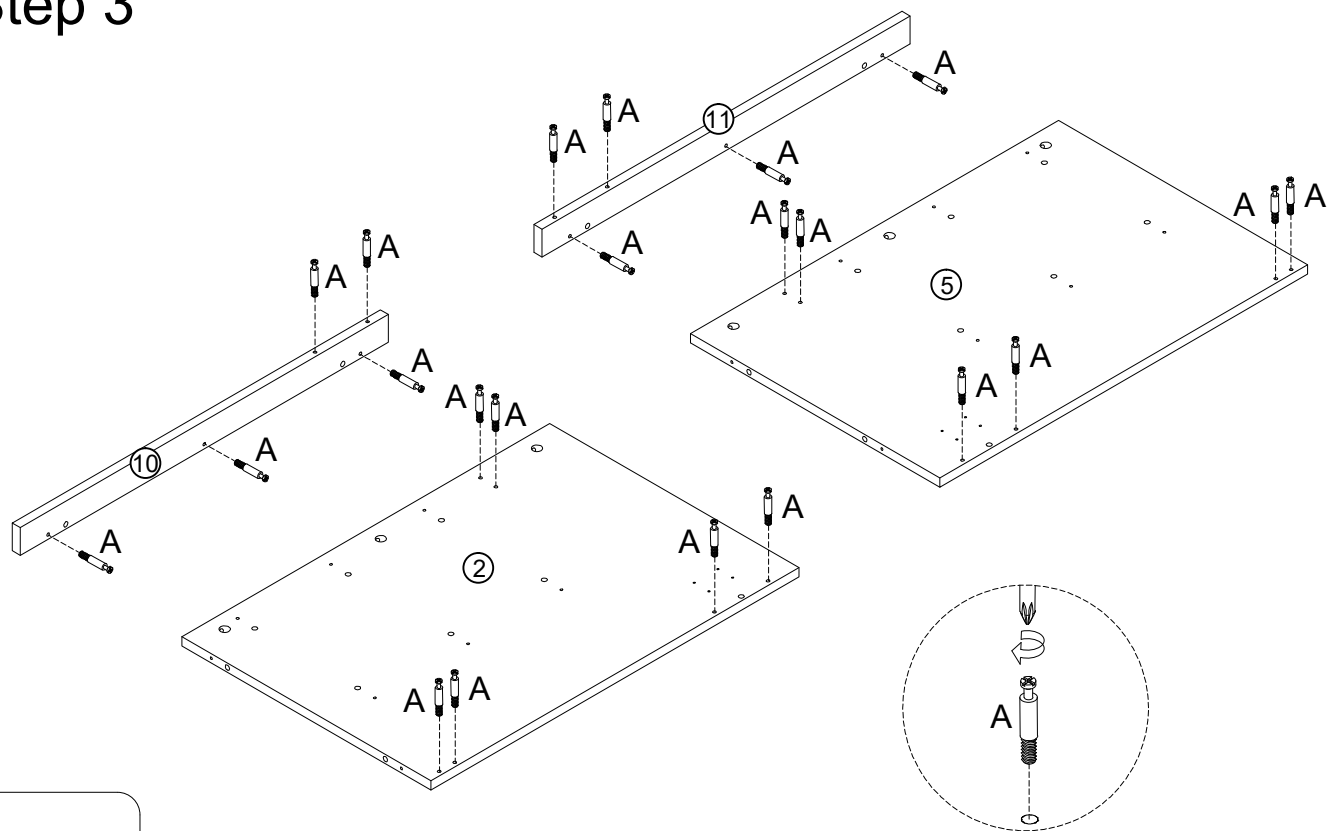


Step 4

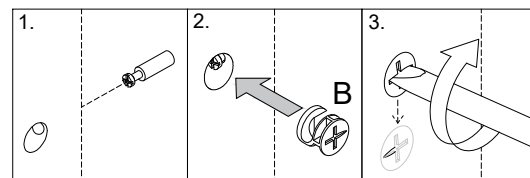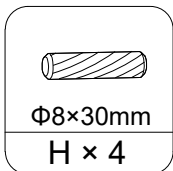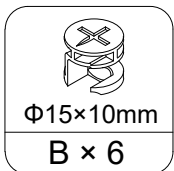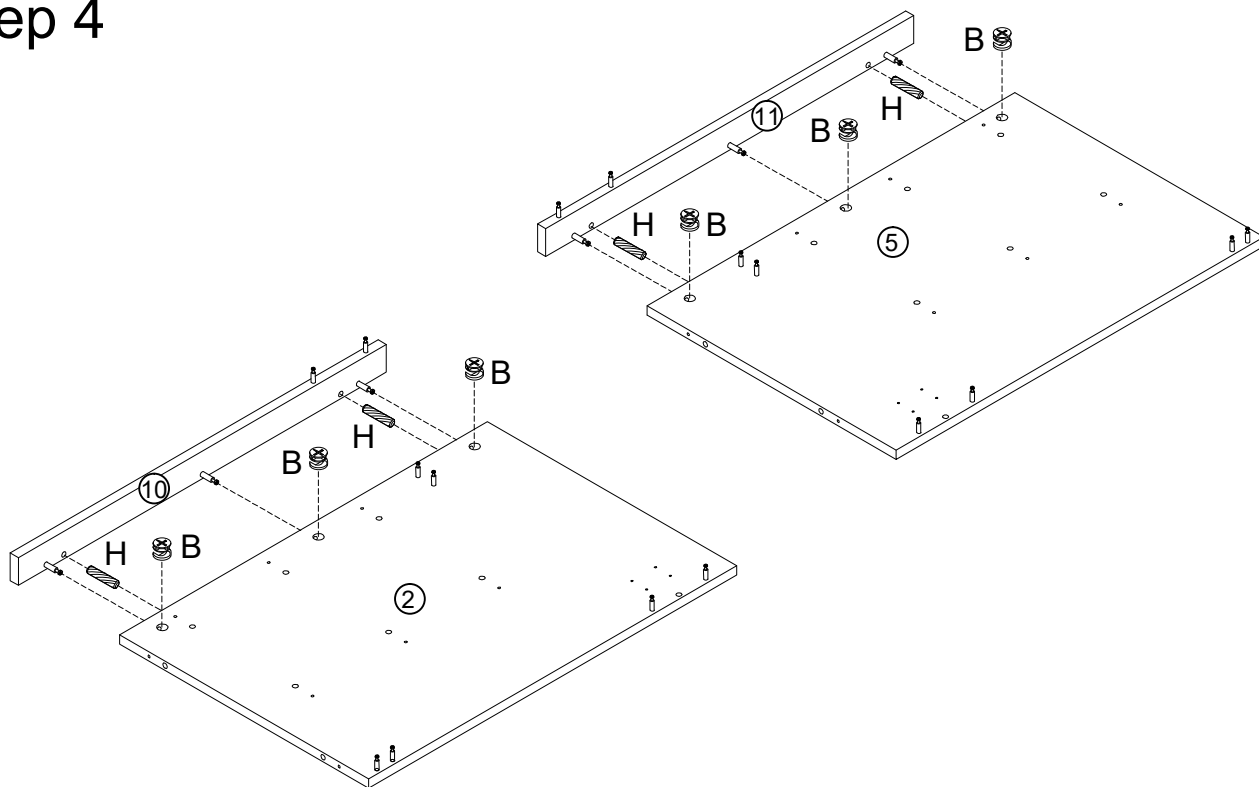


Step 5

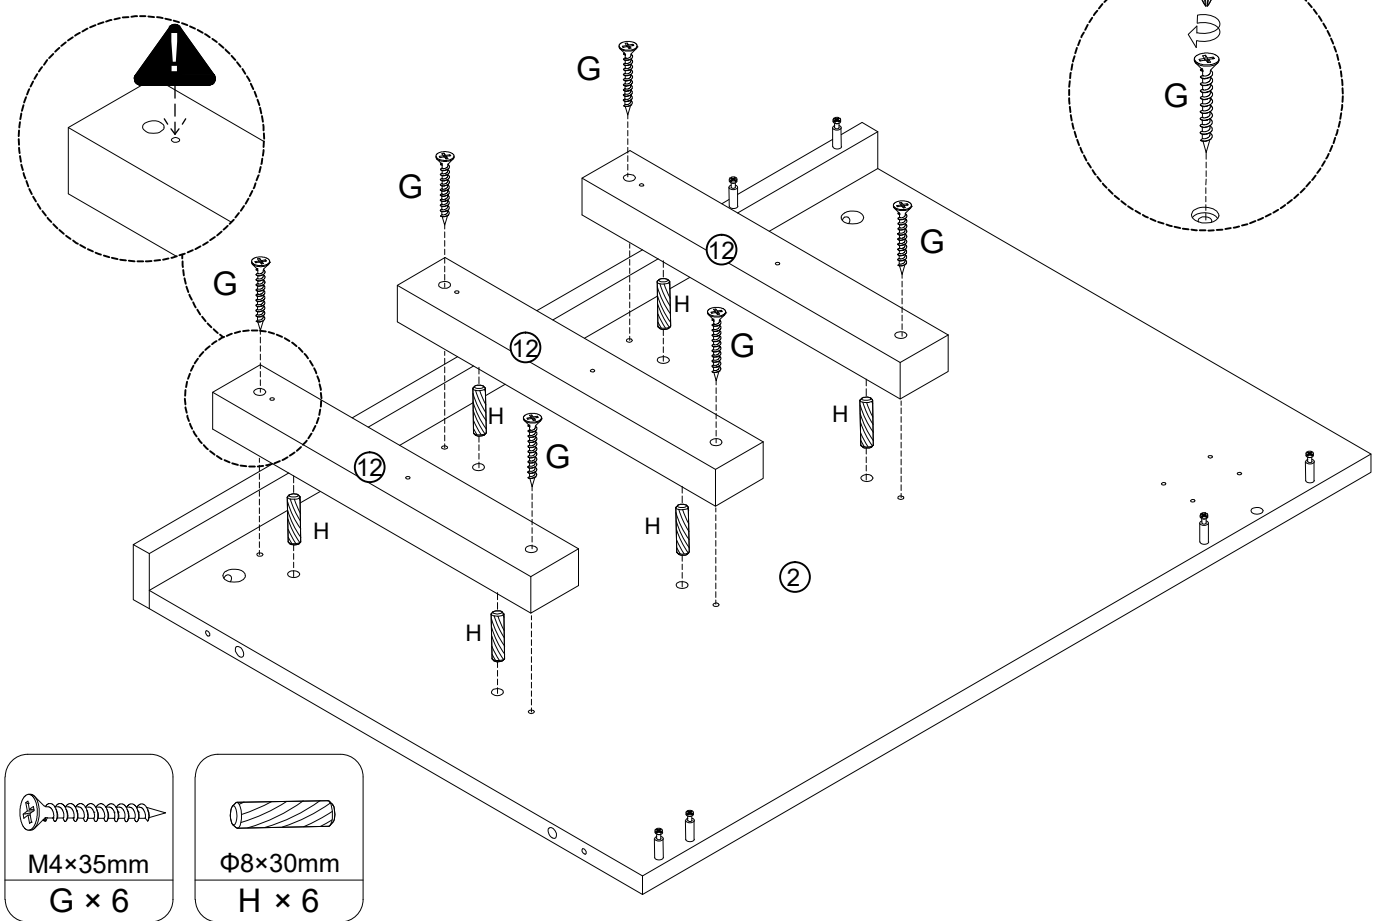






Step 6

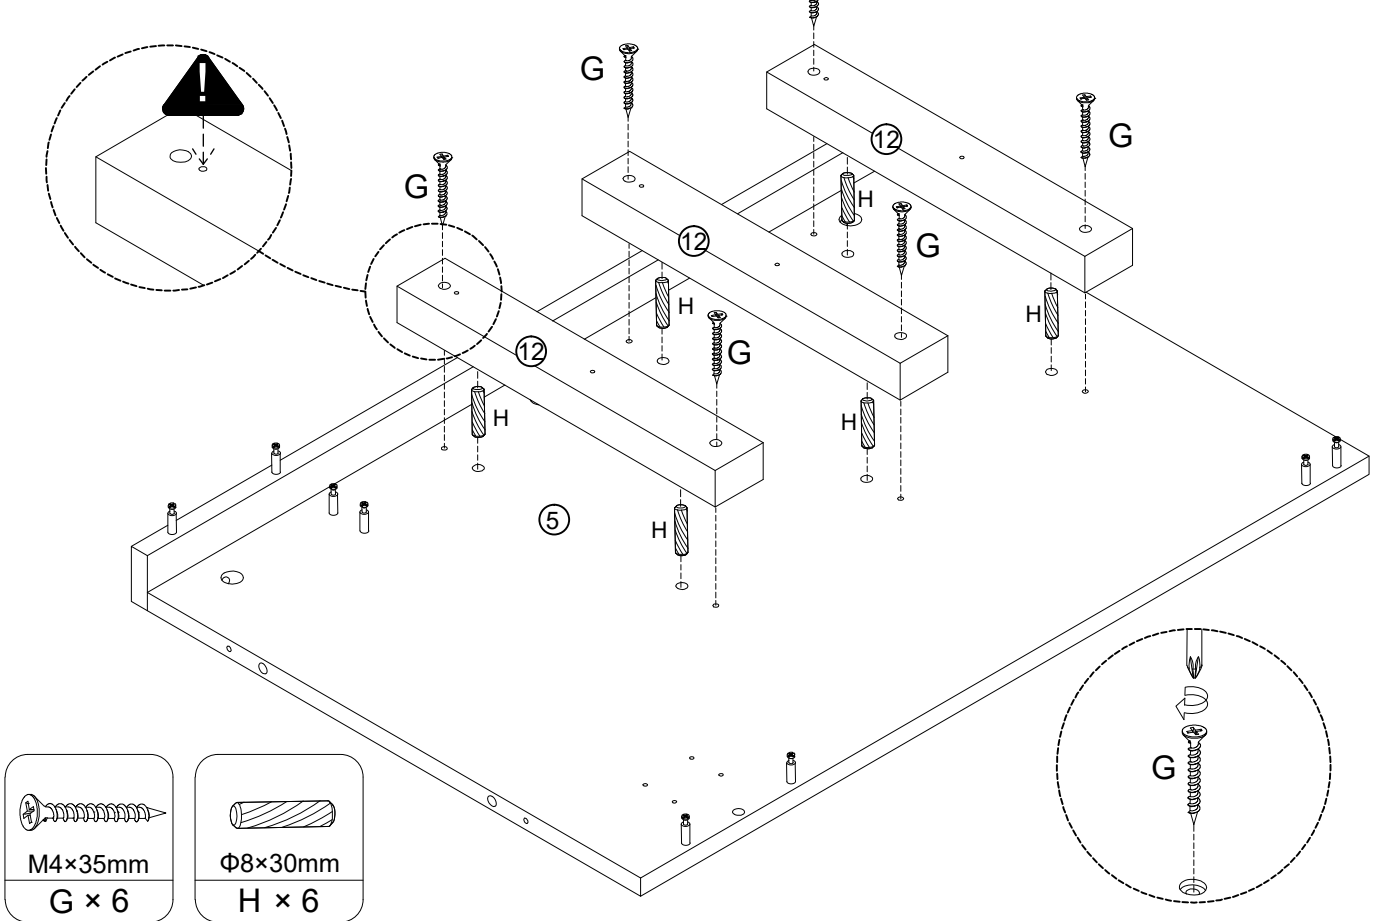







Step 7

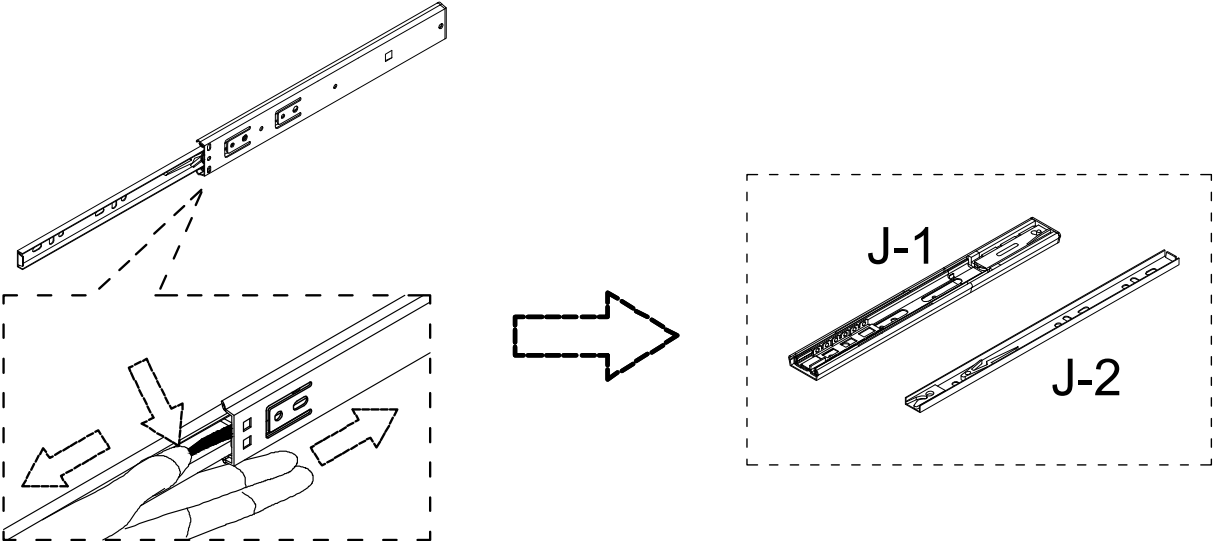



Step 8

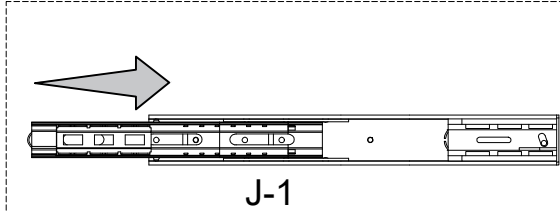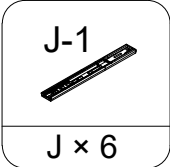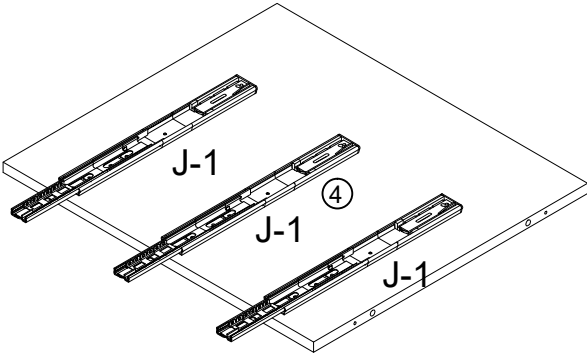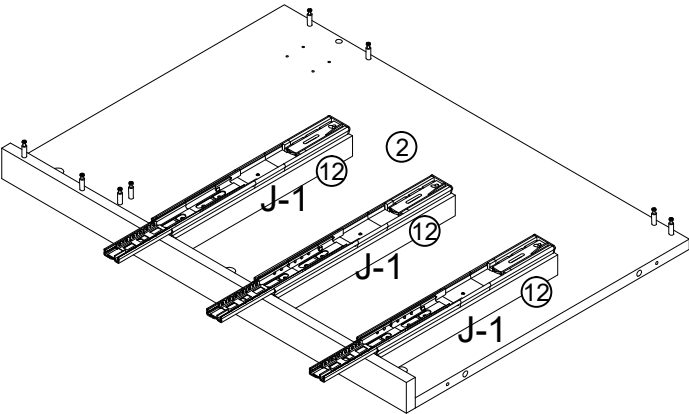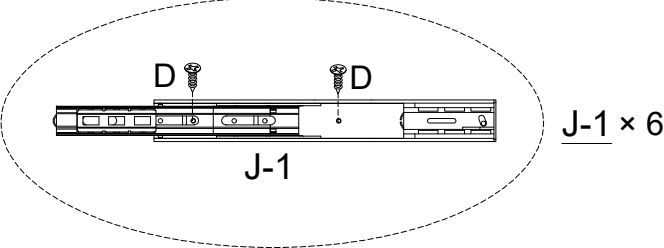




Step 9

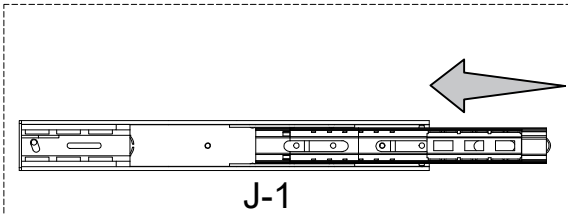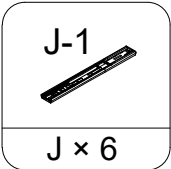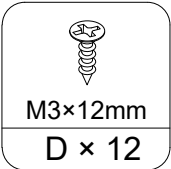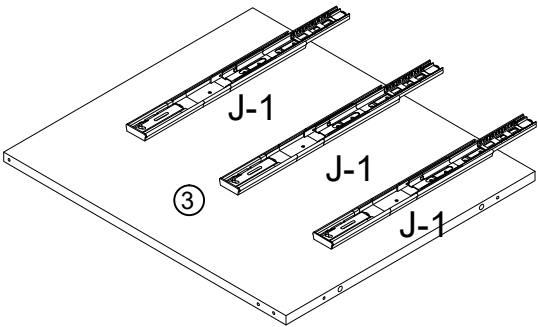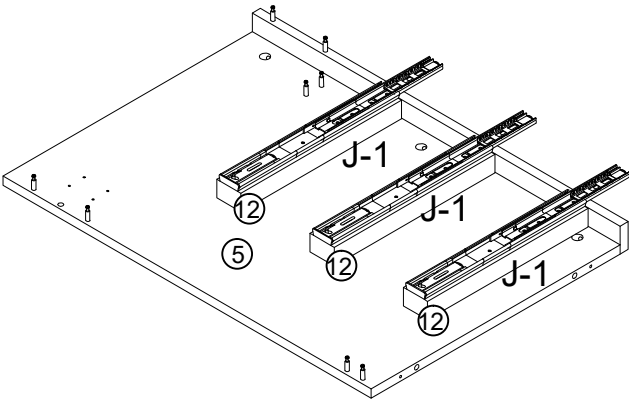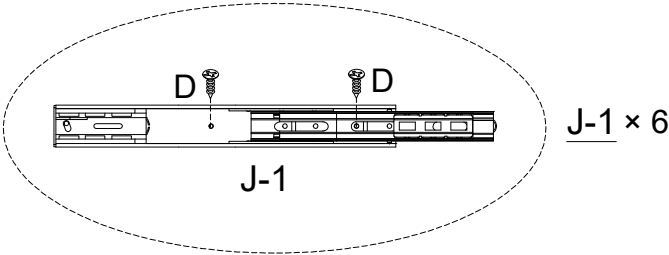



Step 10

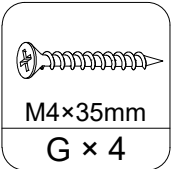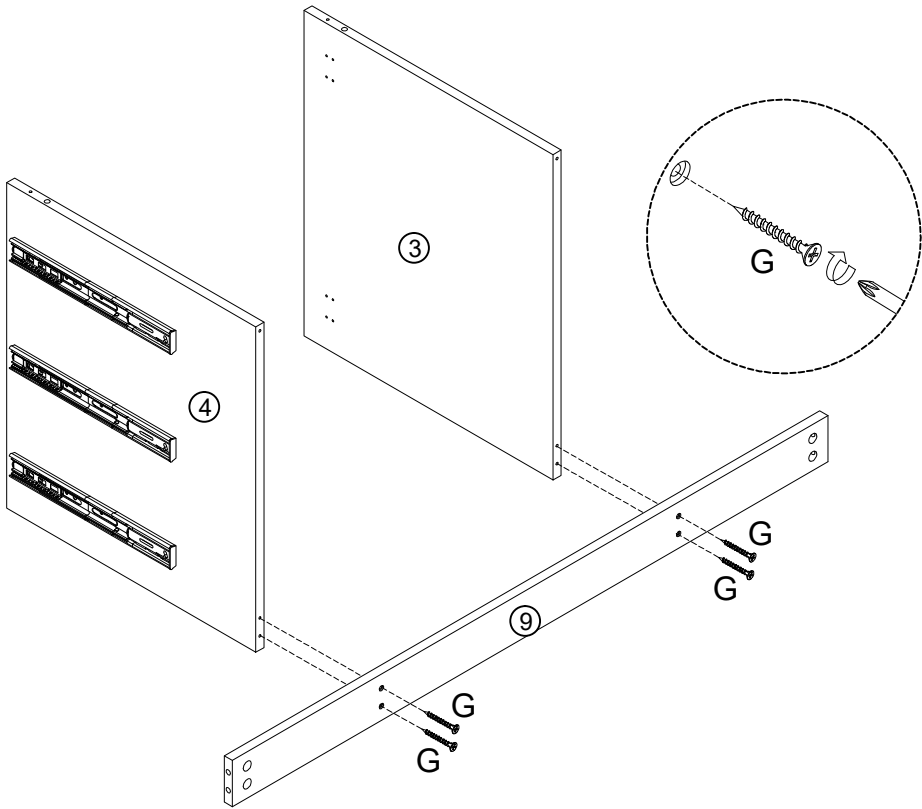





Step 11

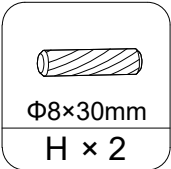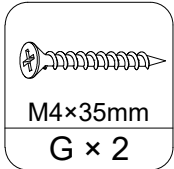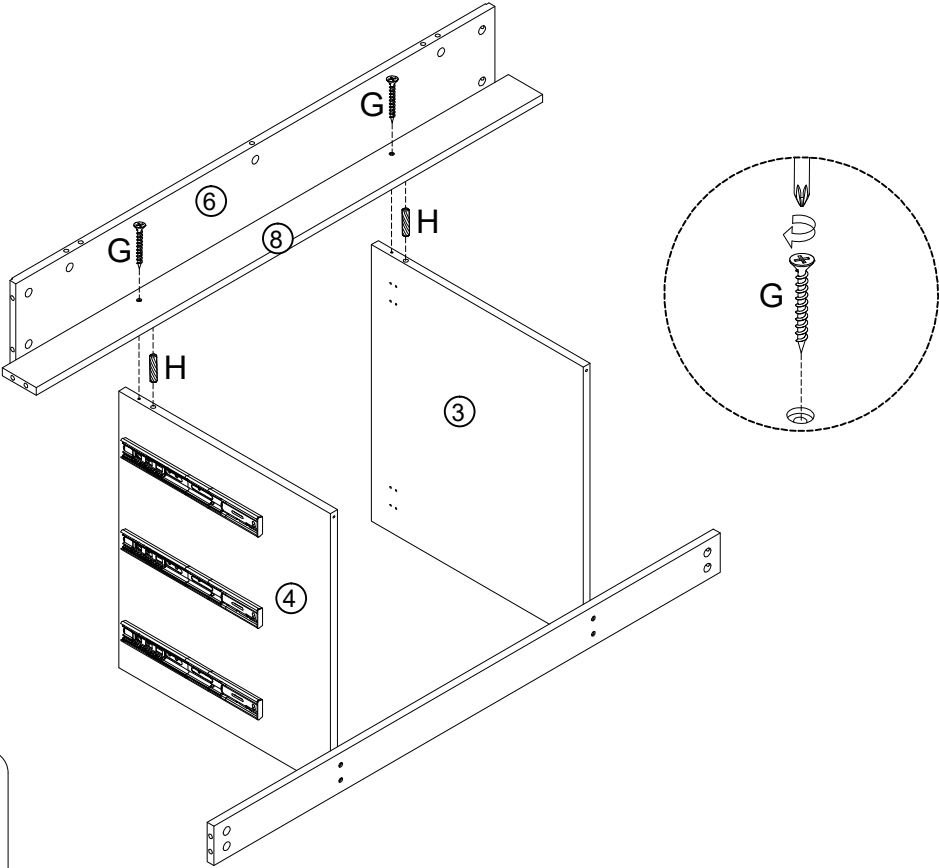





Step 12

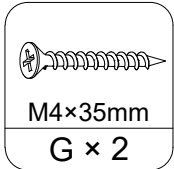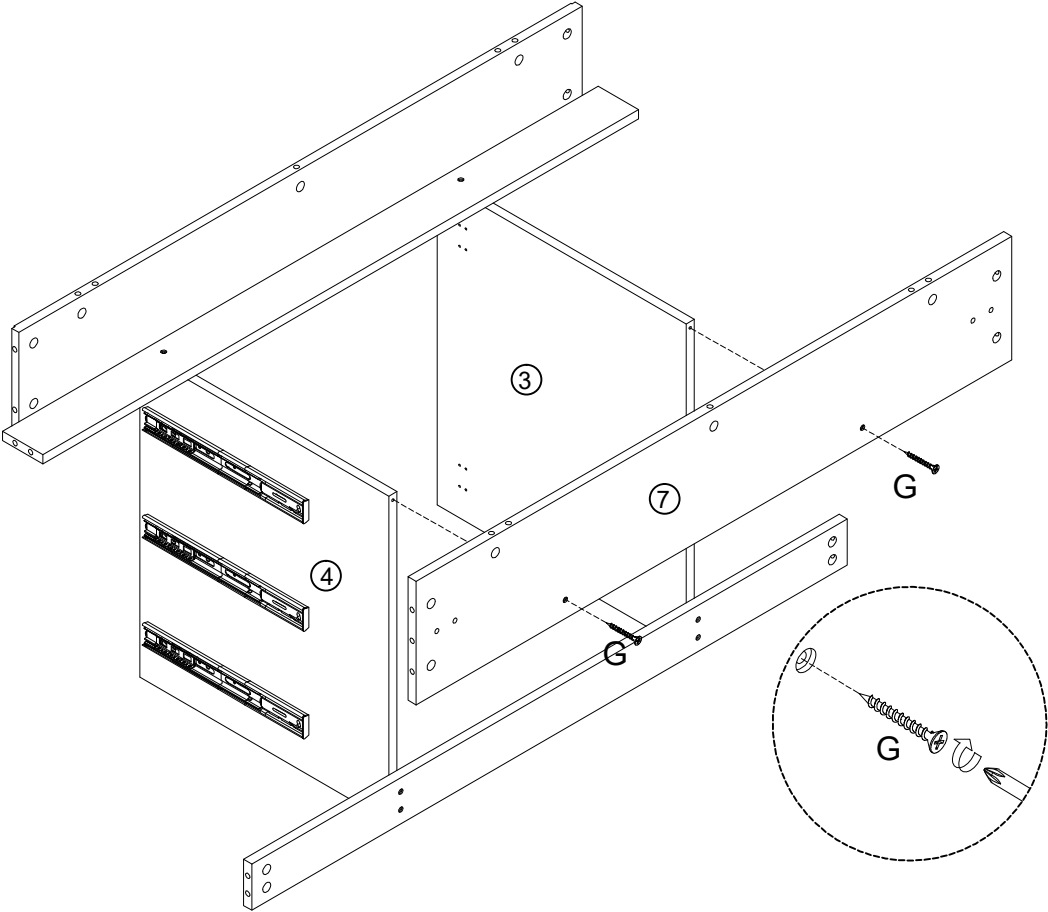


Step 13

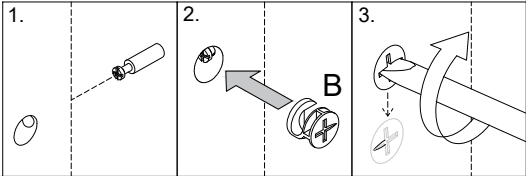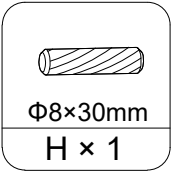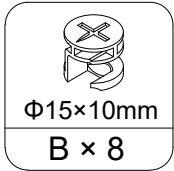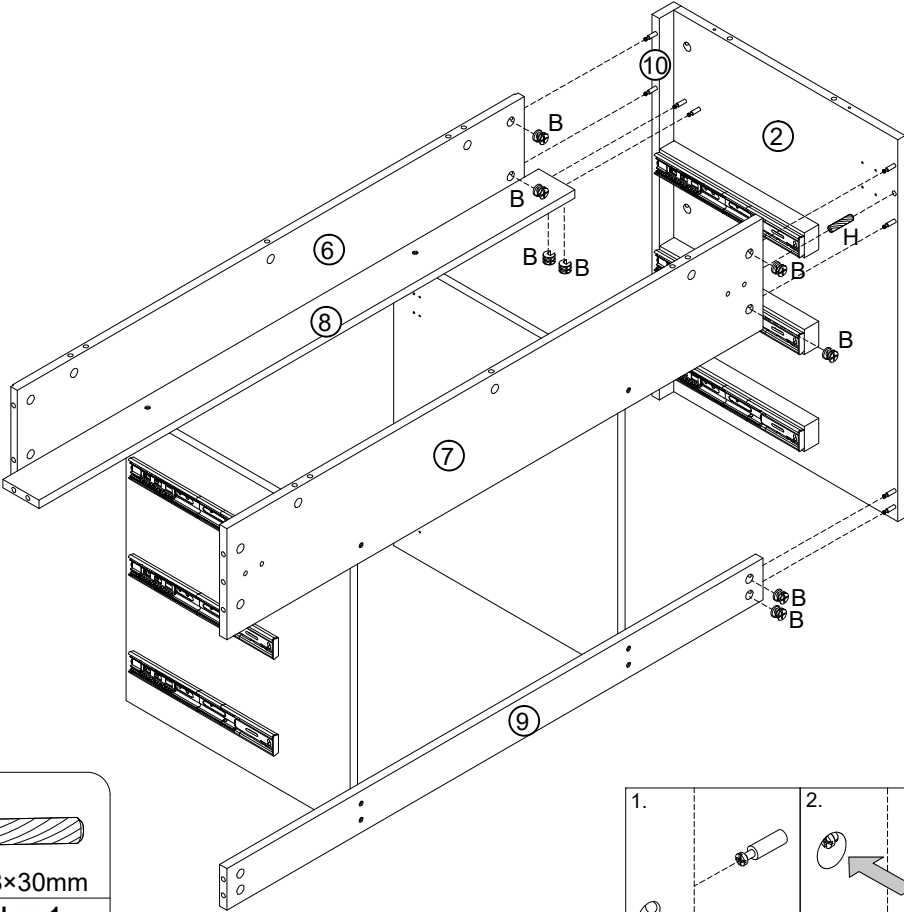



Step 14

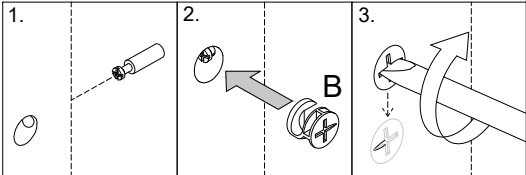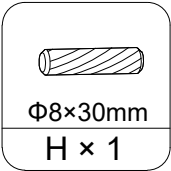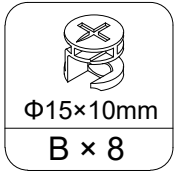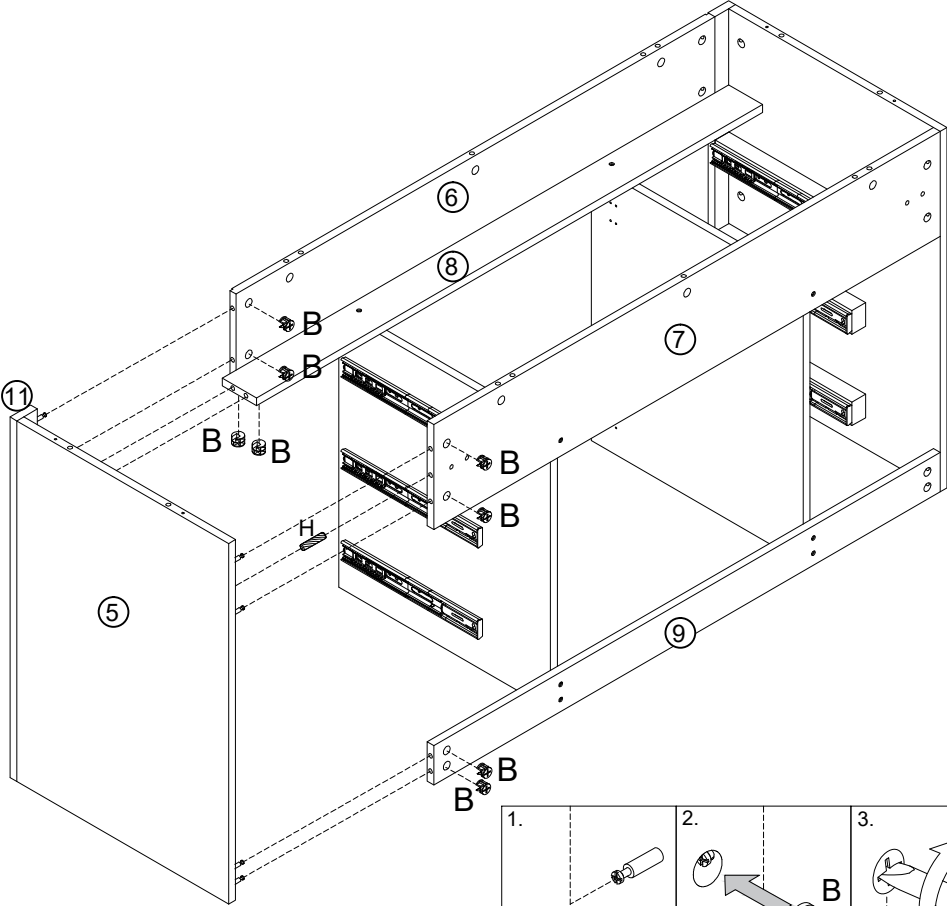





Step 15

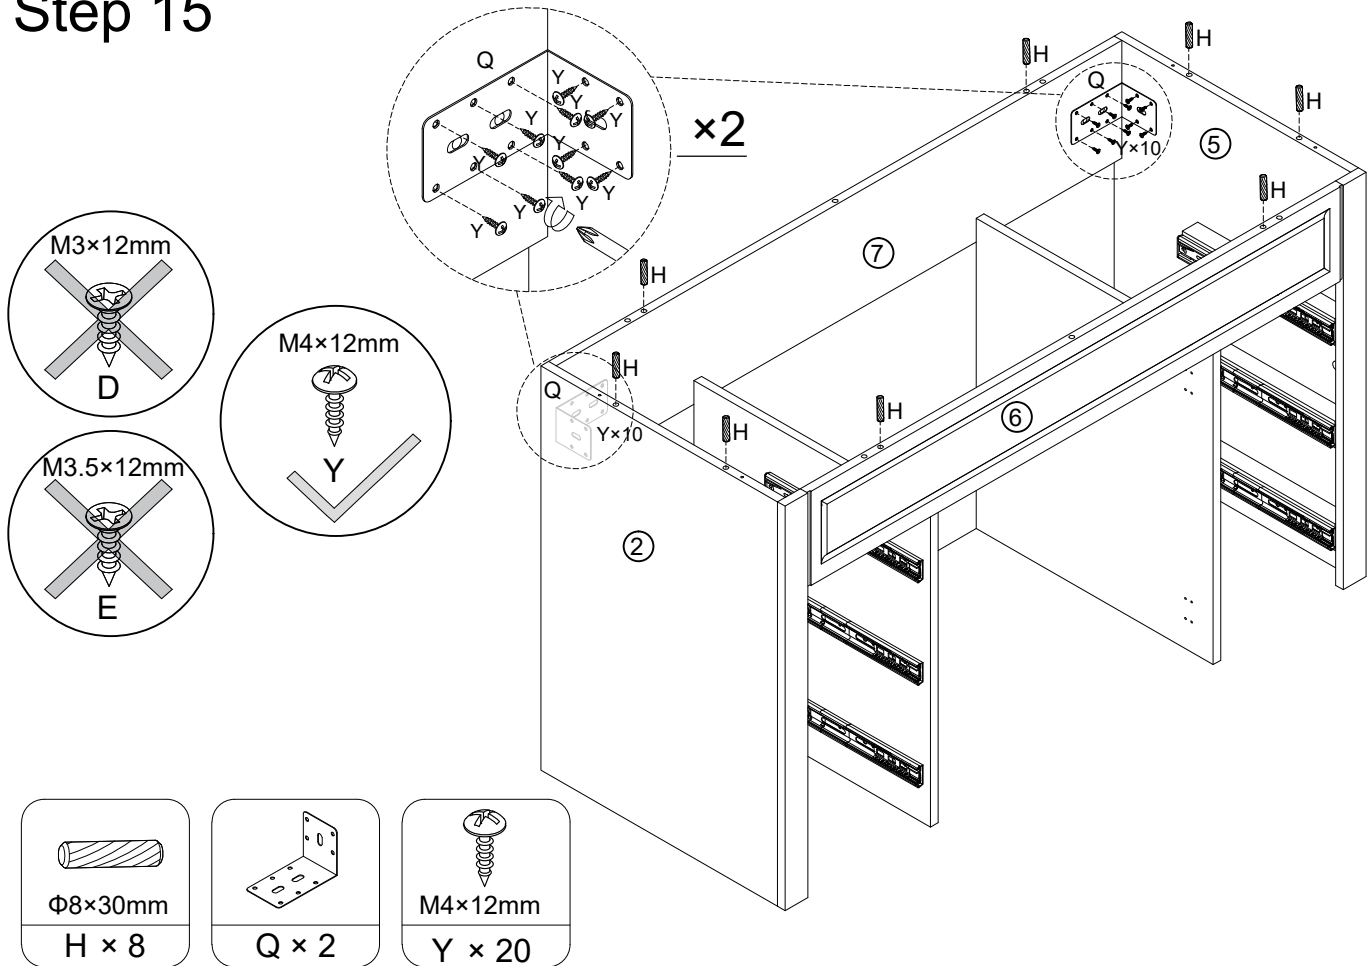





Step 16

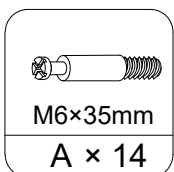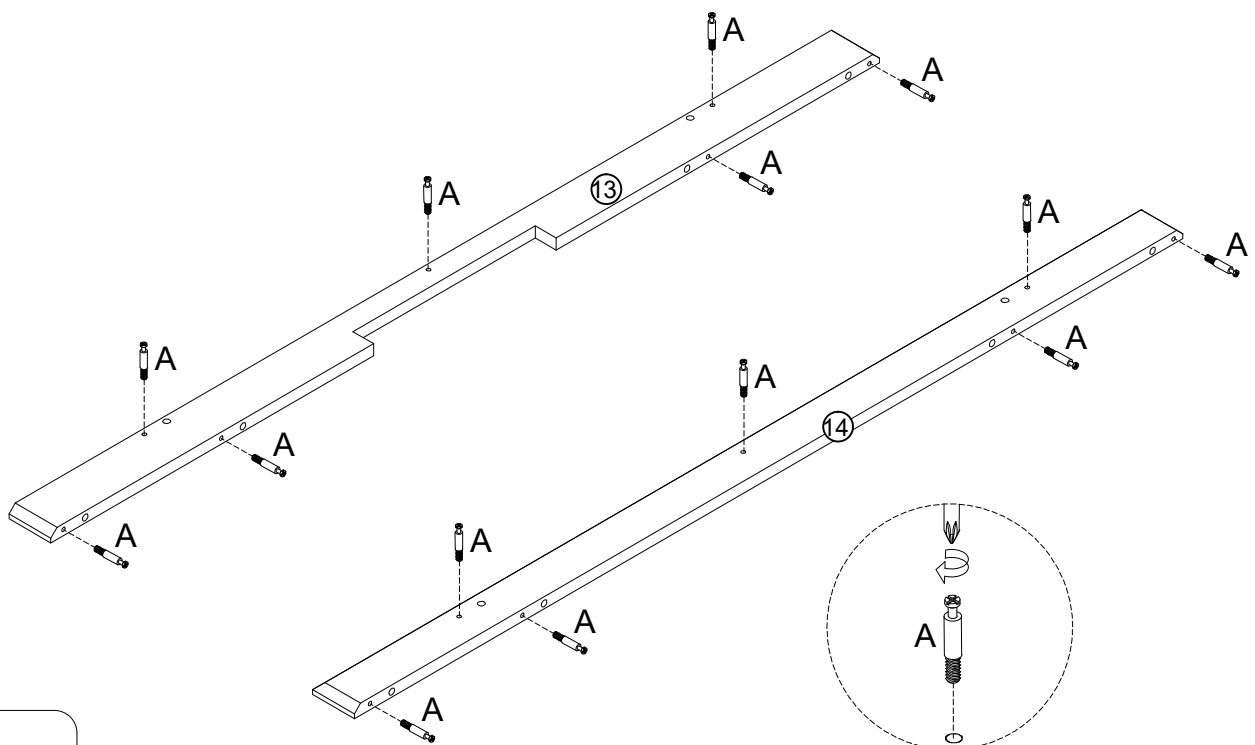


Step 17

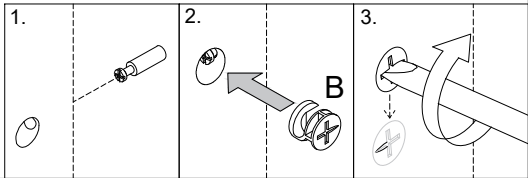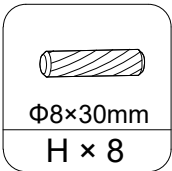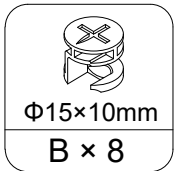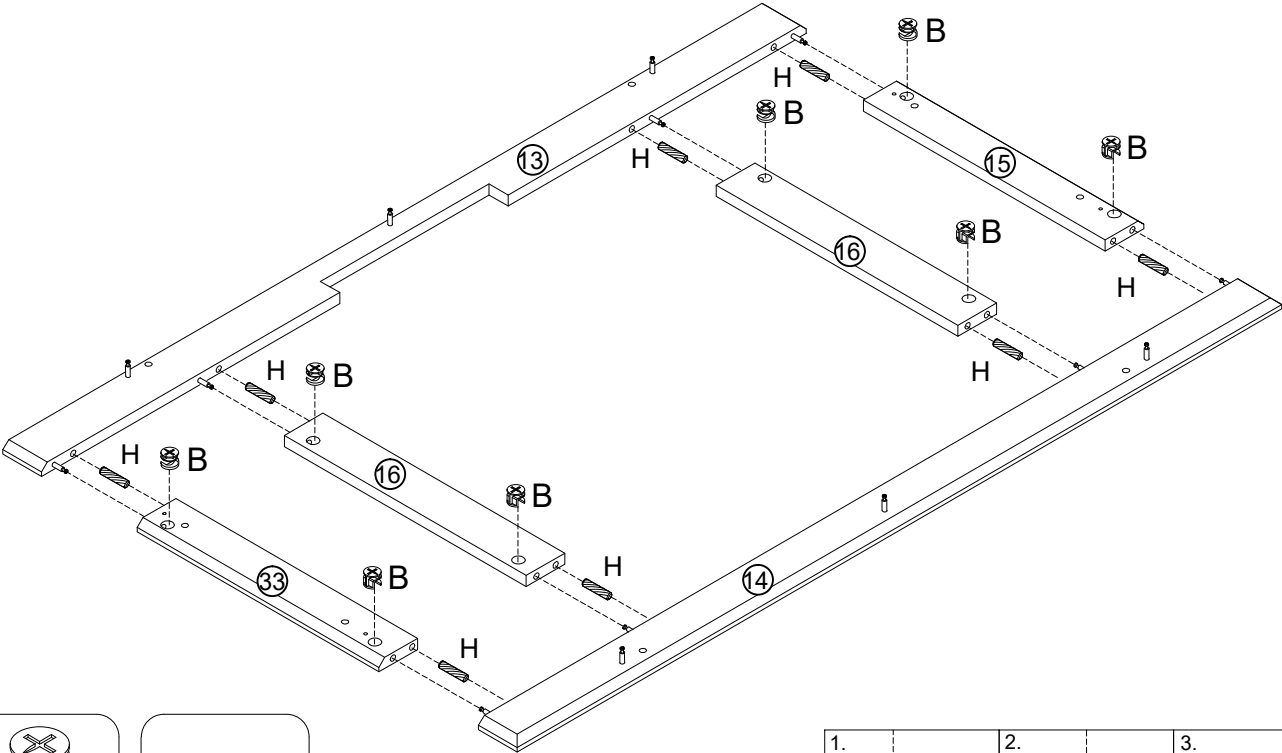


Step 18

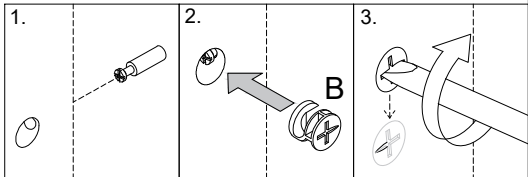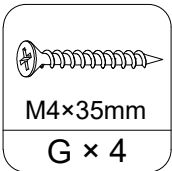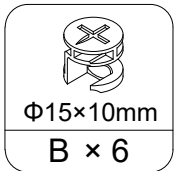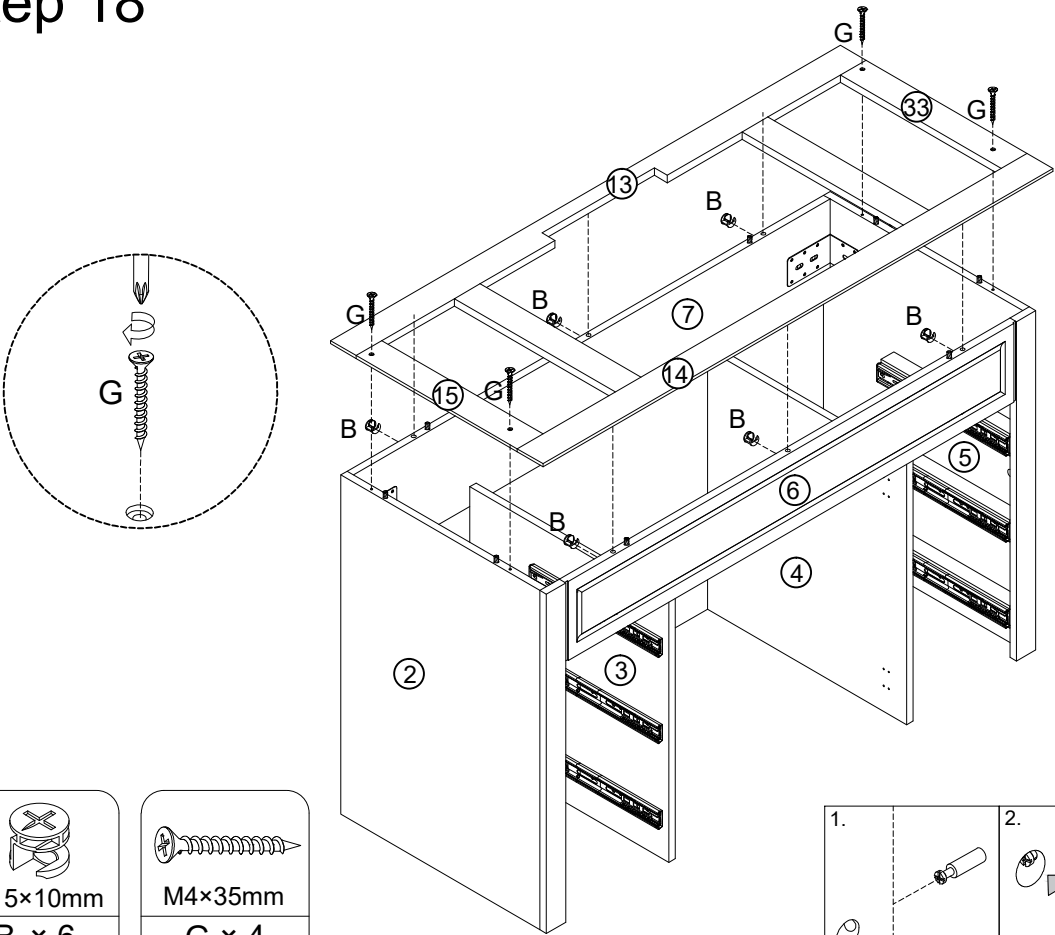



Step 19

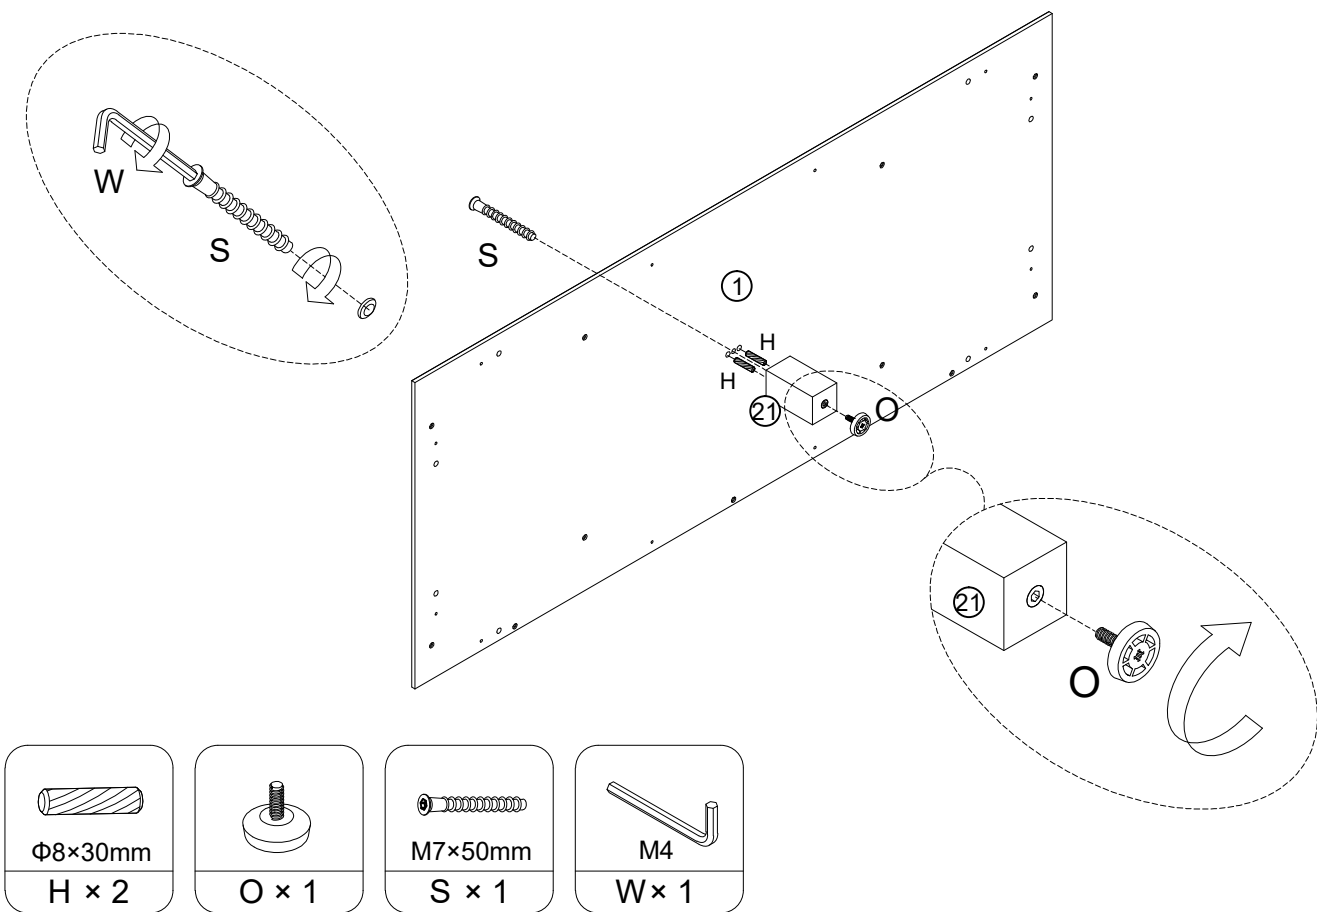



Step 20

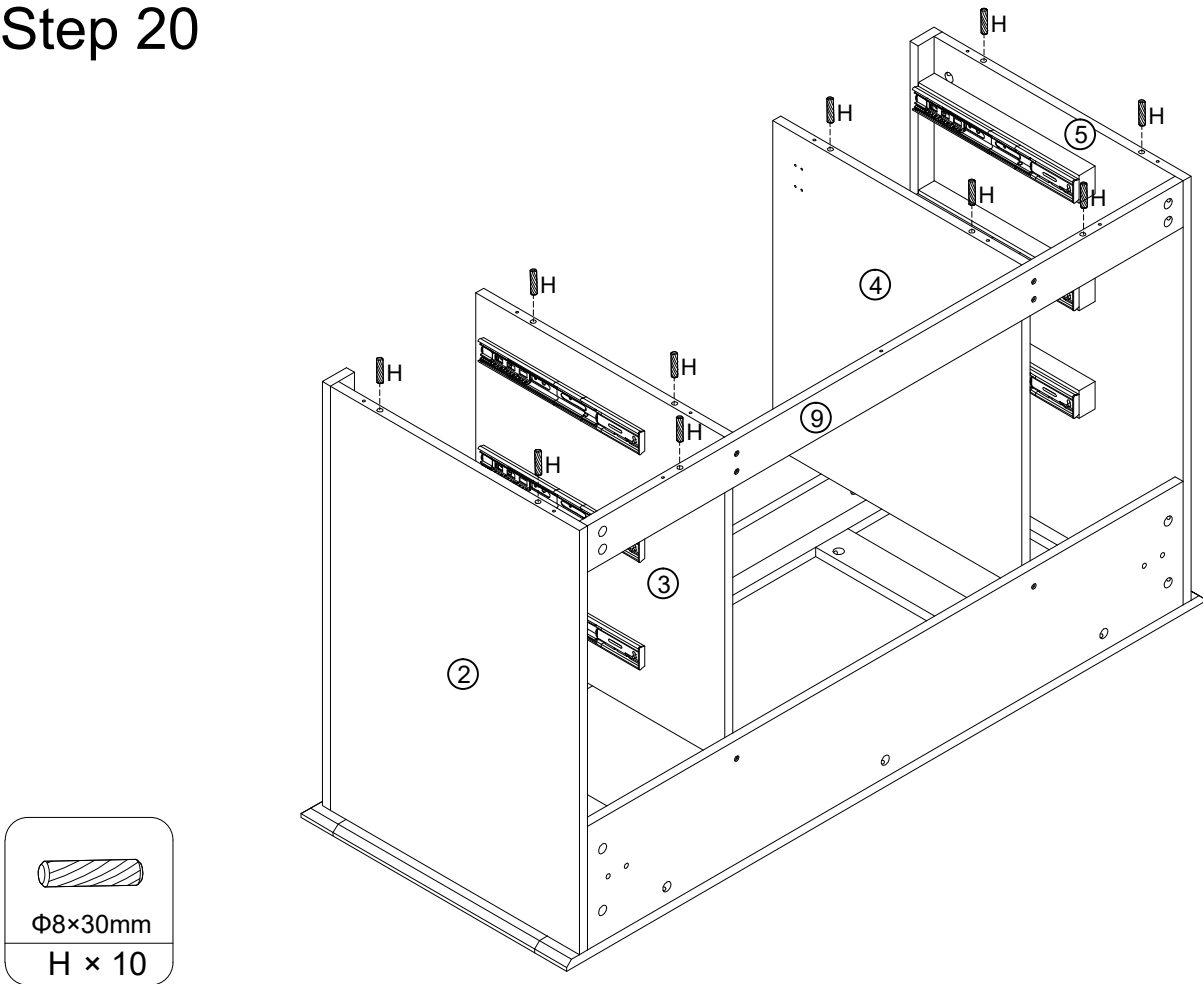



Step 21

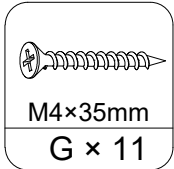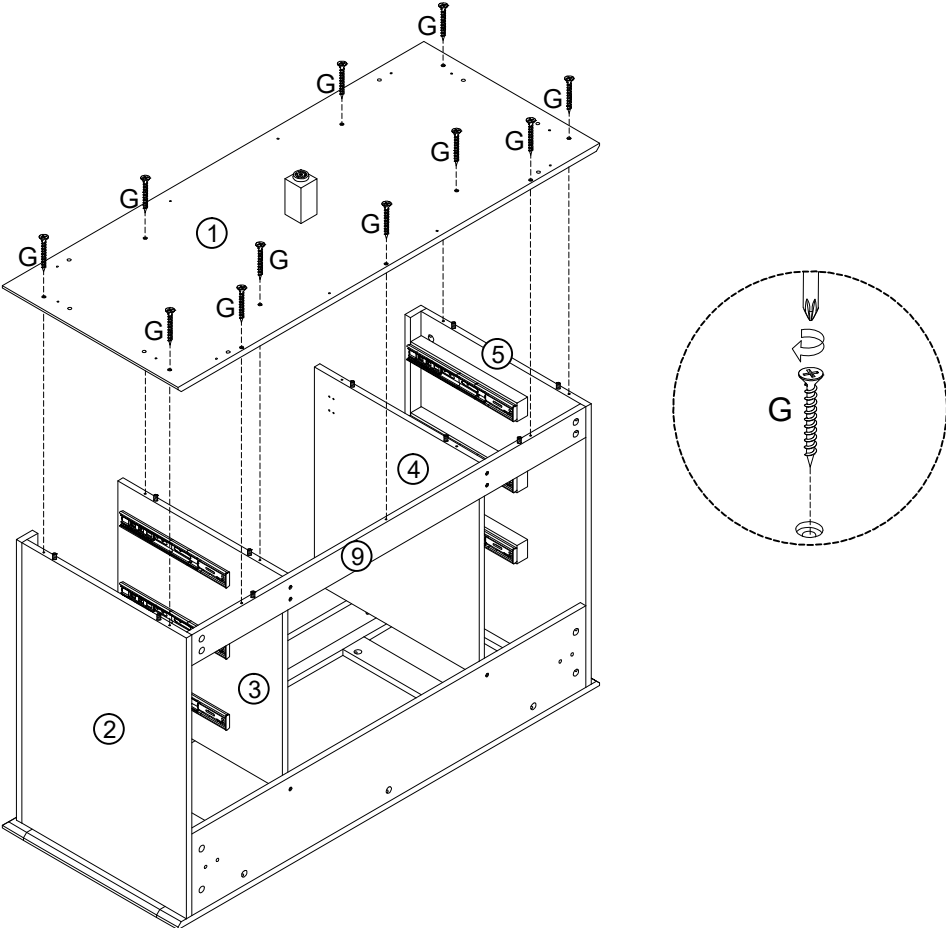




Step 22

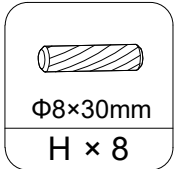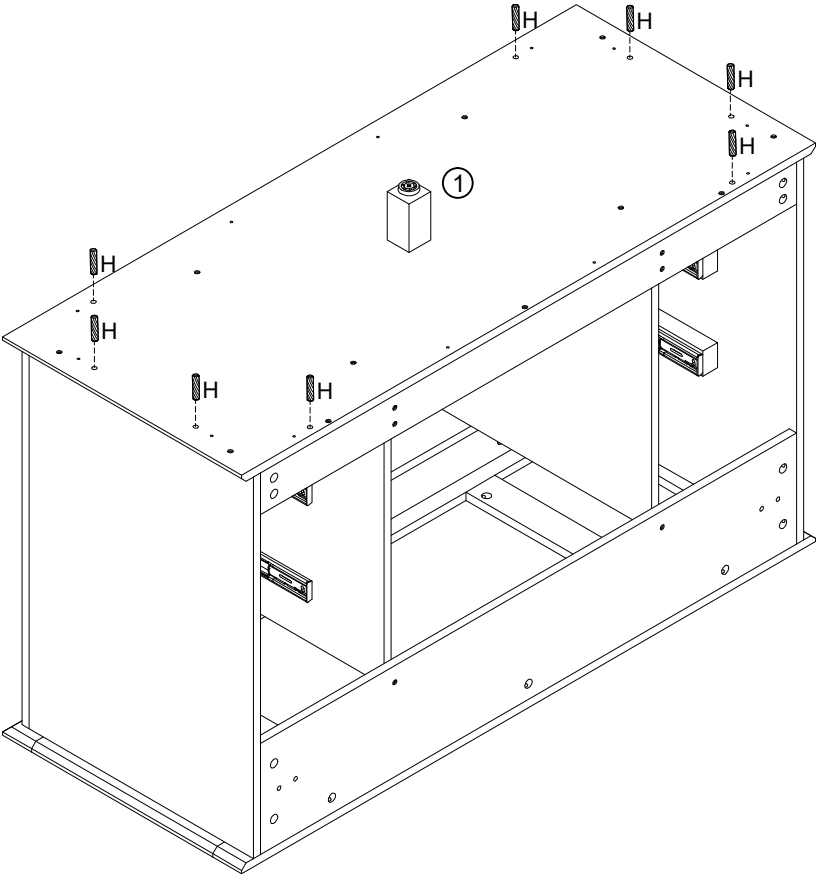


Step 23

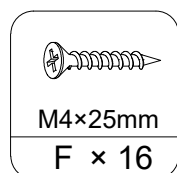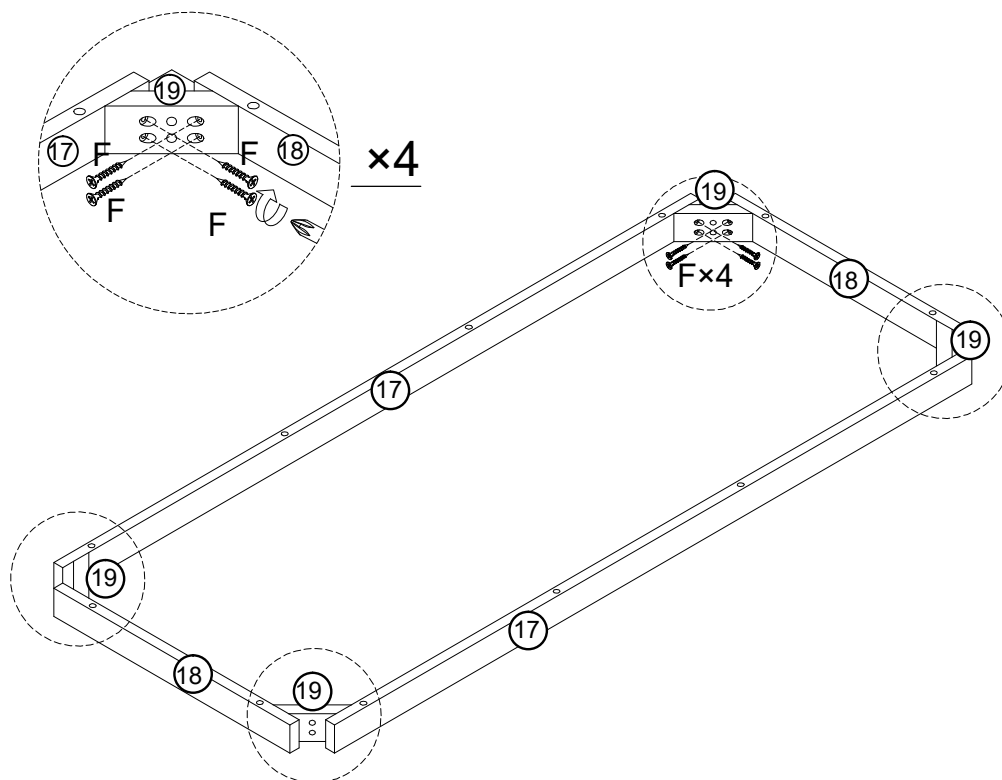


Step 24

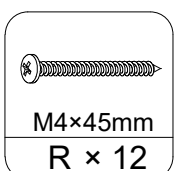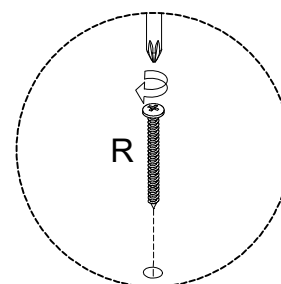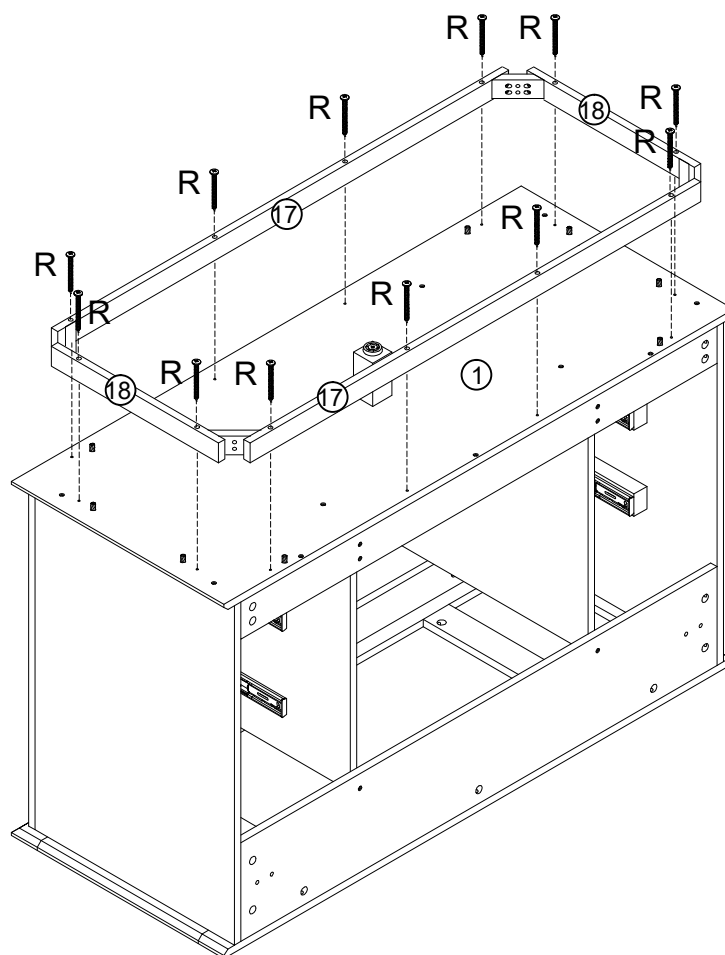



Step 25

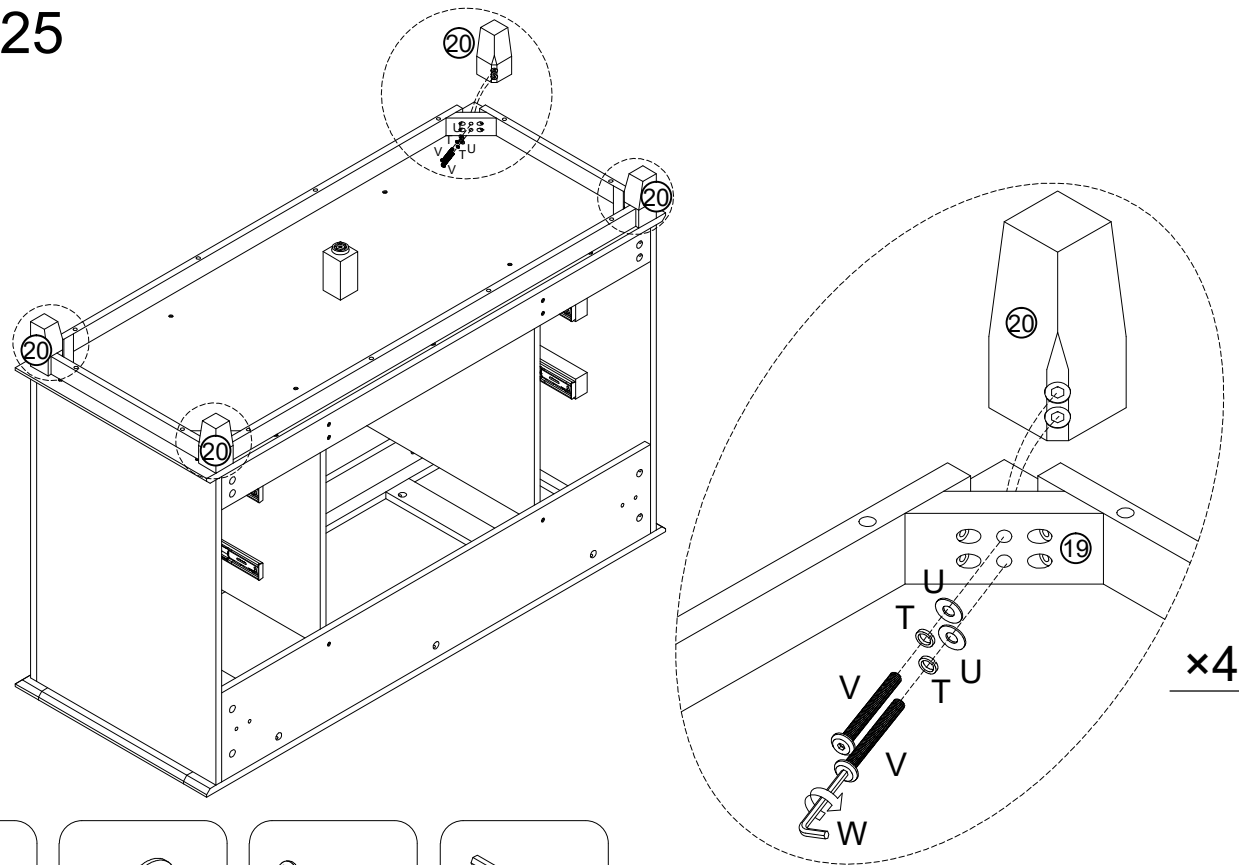


- | | | | |
|--|--|--|--|
|  |  |  |  |
| T × 8 | U × 8 | M6×50mm
V × 8 | M4
W × 1 |


Step 26

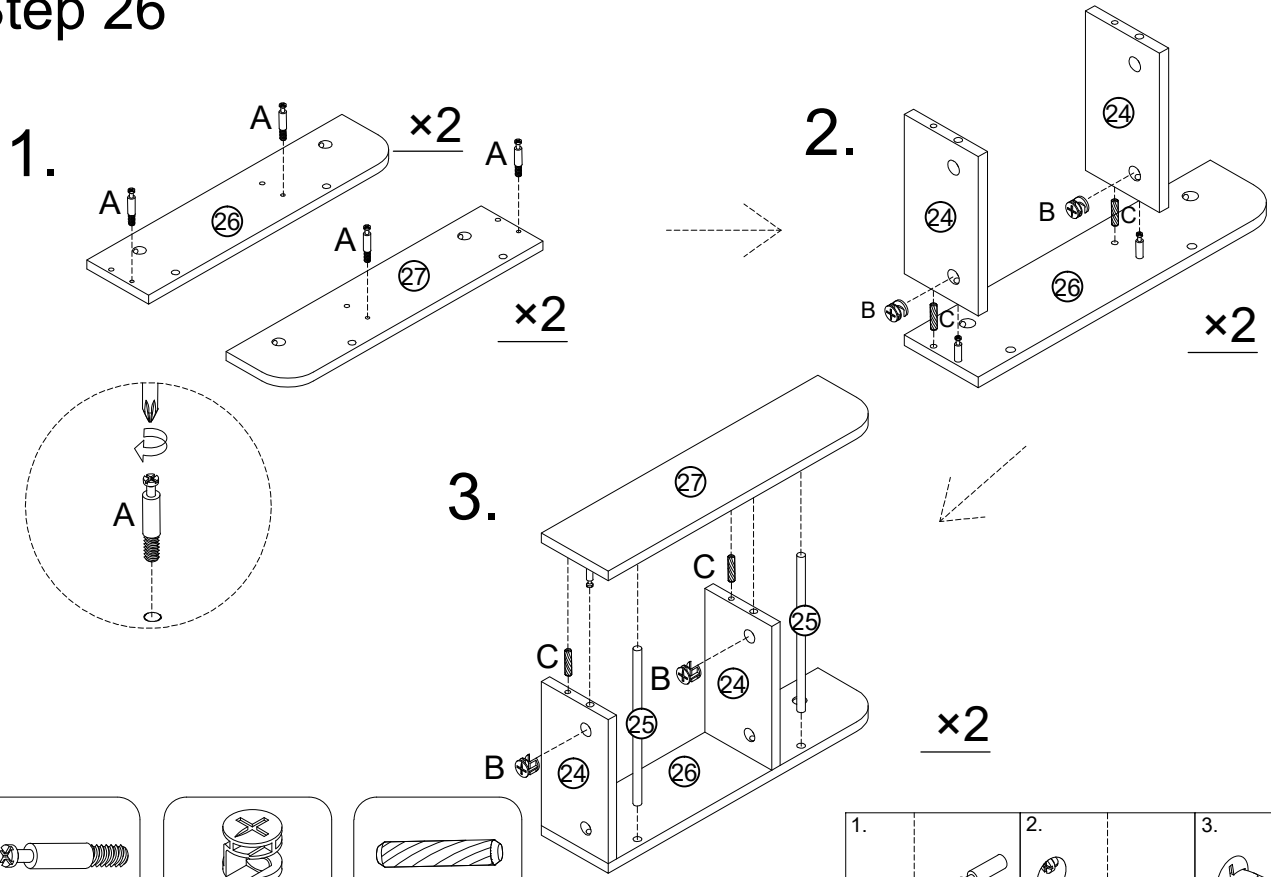


- | | | |
|---|---|---|
|  |  |  |
| M6×35mm
A × 8 | Φ15×10mm
B × 8 | Φ6×30mm
C × 8 |

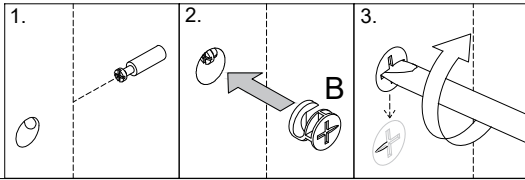


Step 27

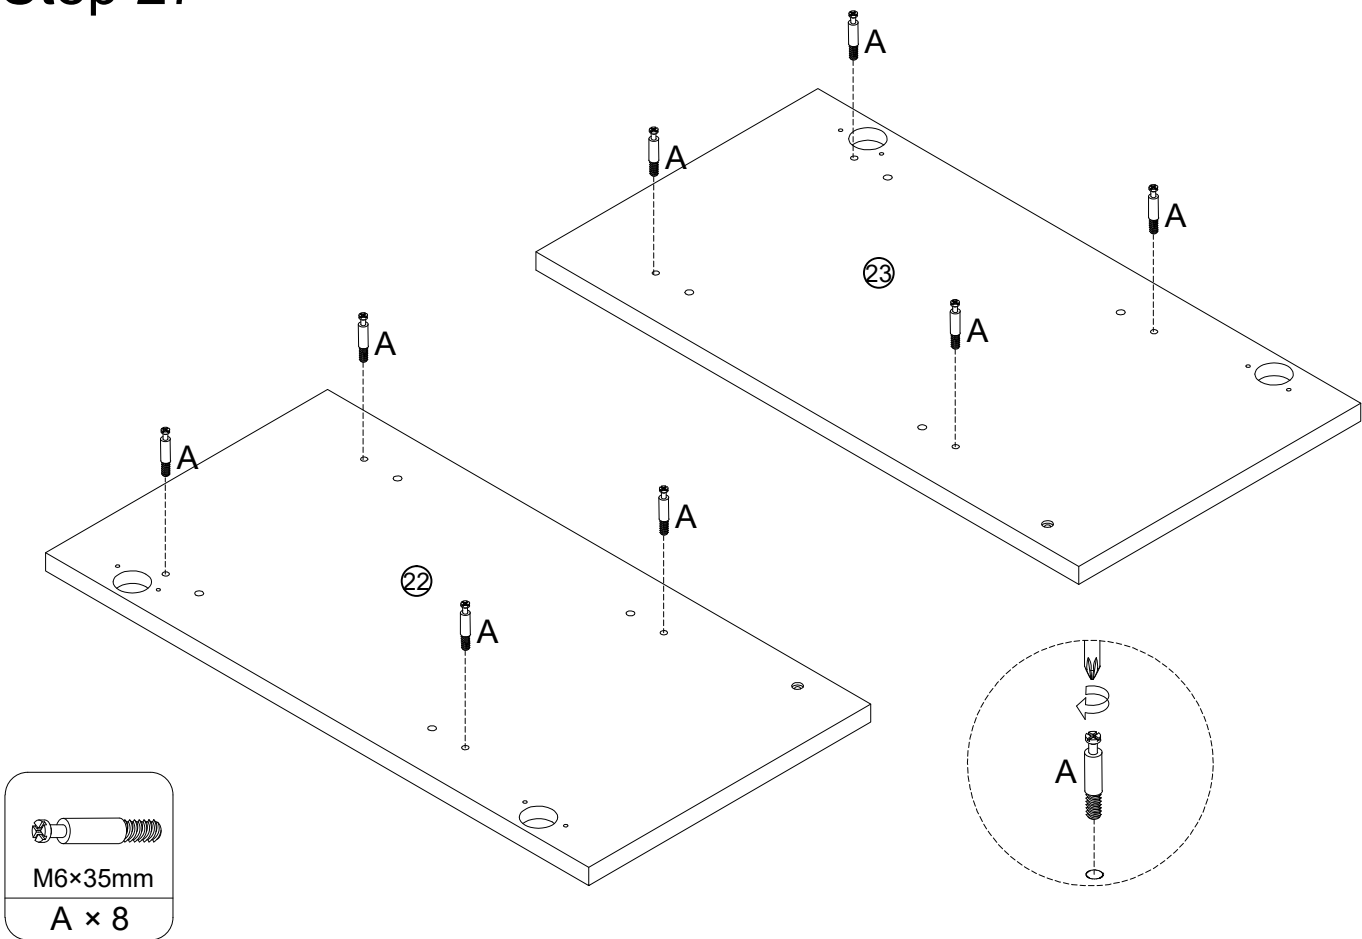


Step 28

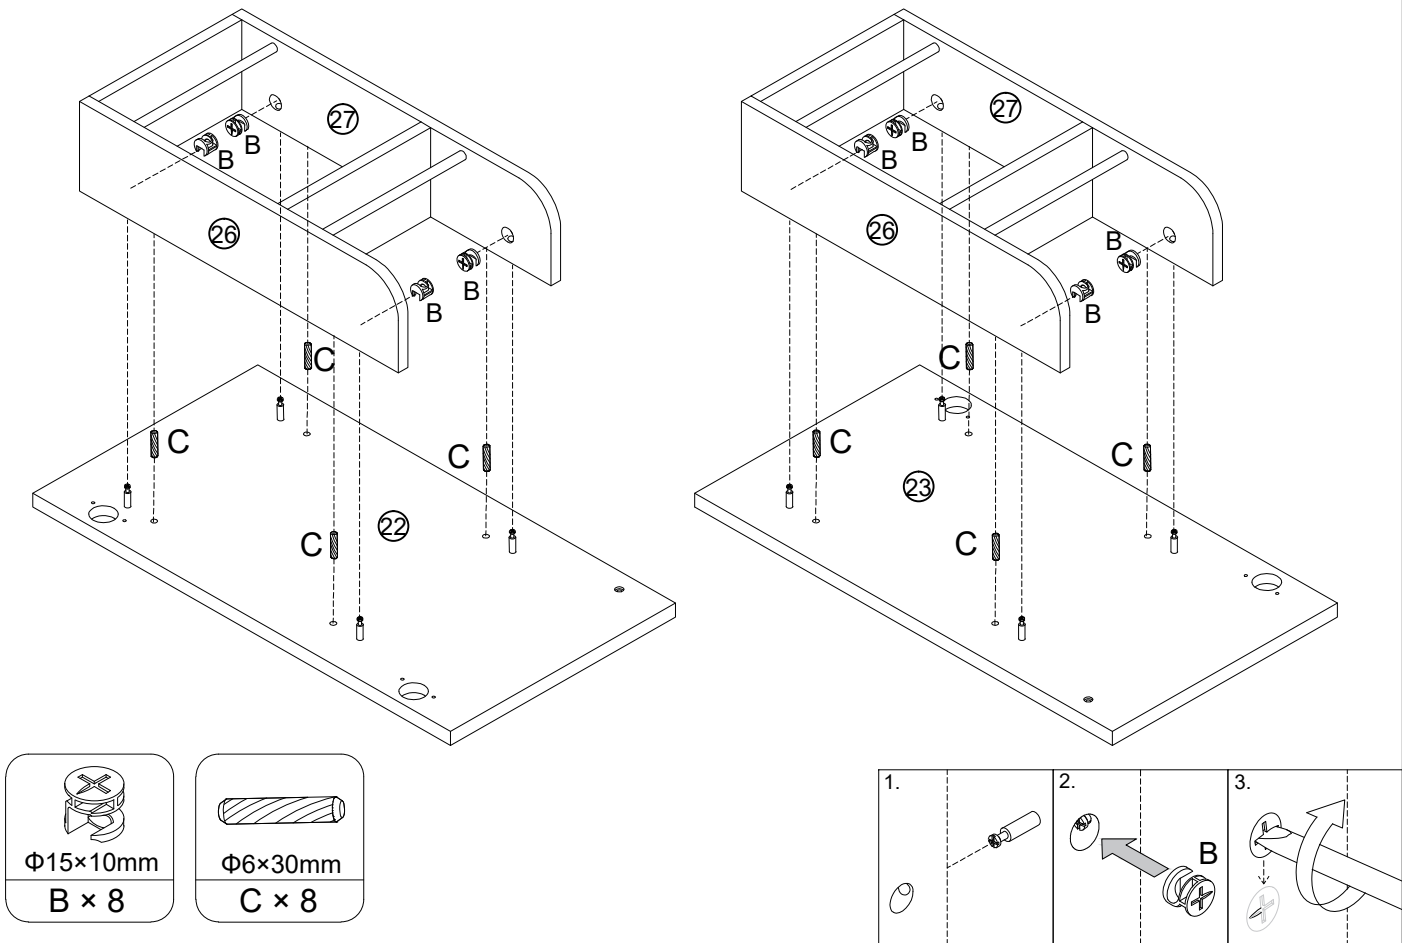


Step 29

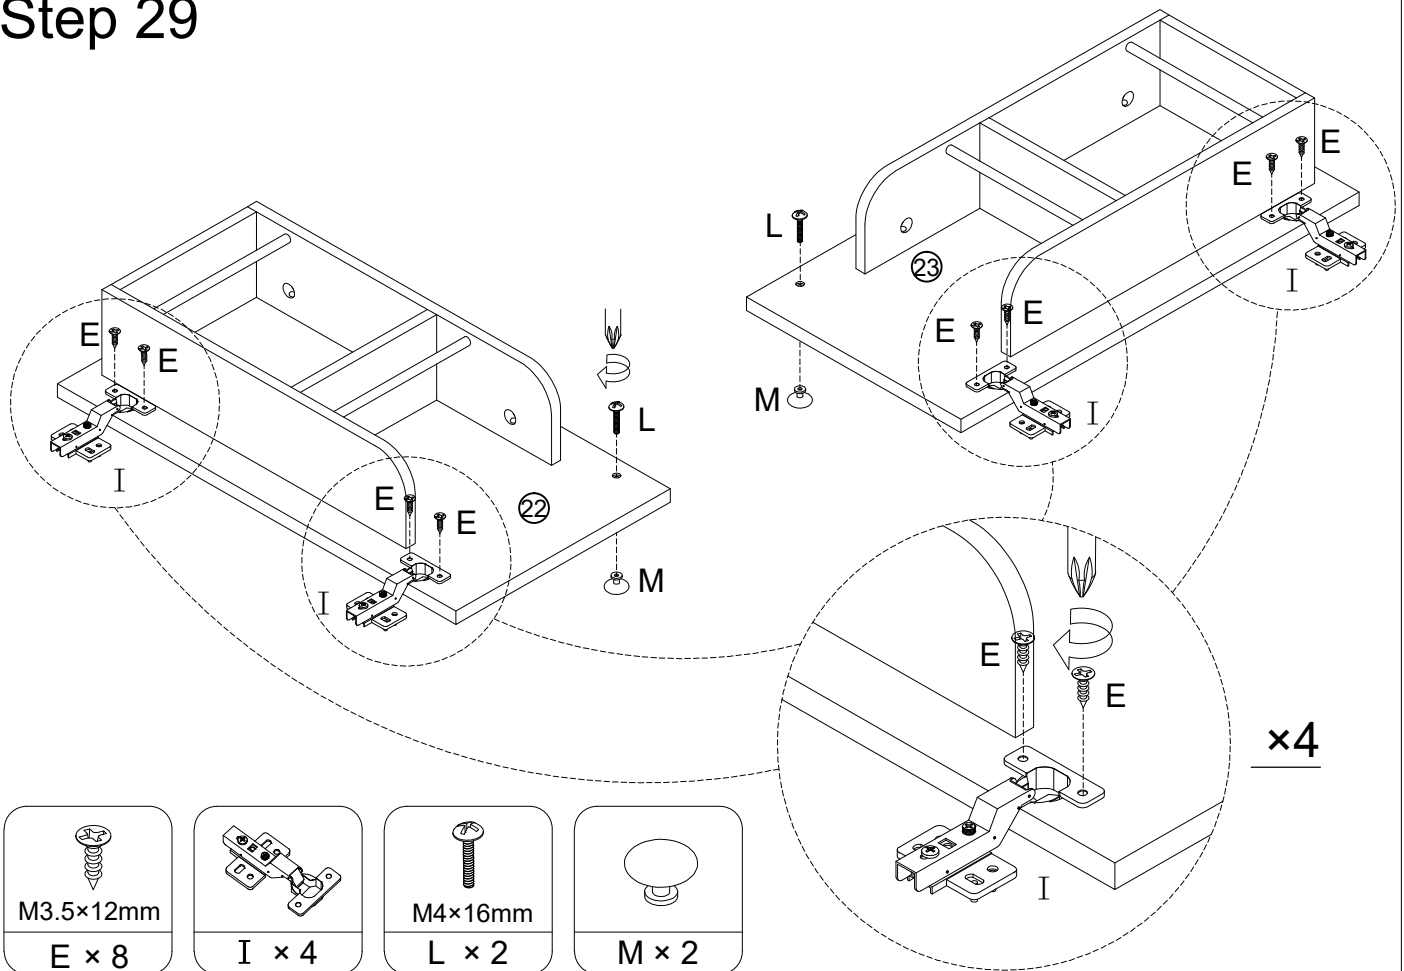


Step 30

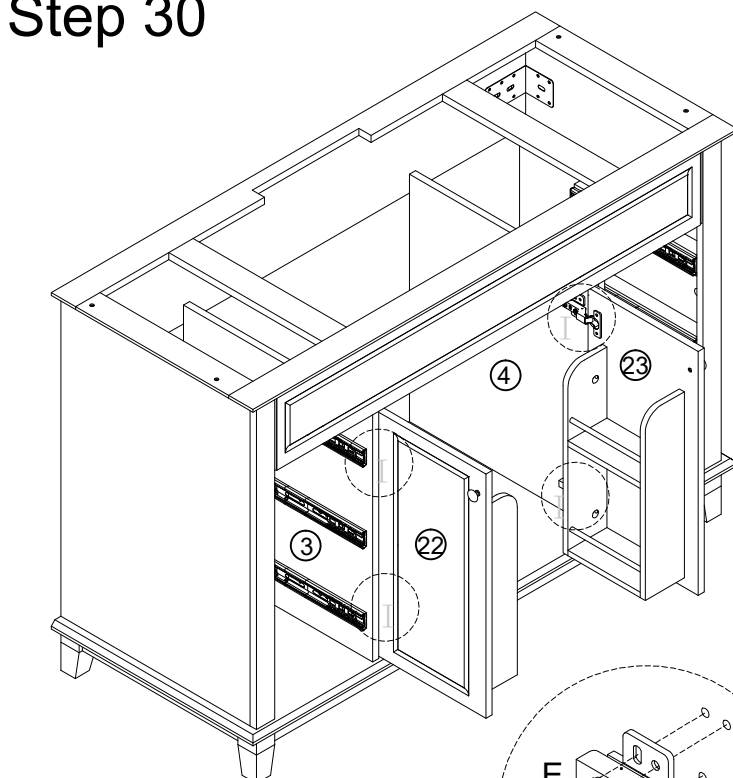



SETTING S DOORS

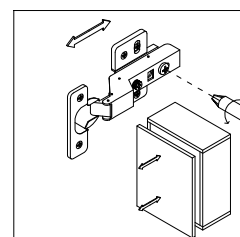


If the hinge holes are not aligned, you can try adjusting the front and rear hinges.


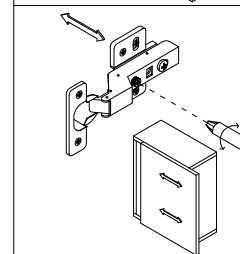


If the door gap is large, you can adjust the hinges left and right

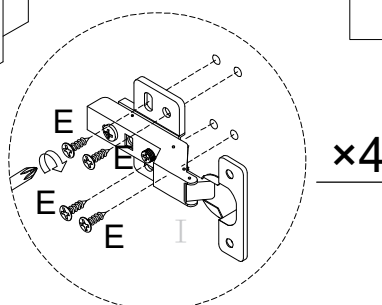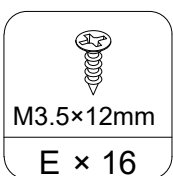


Step 31

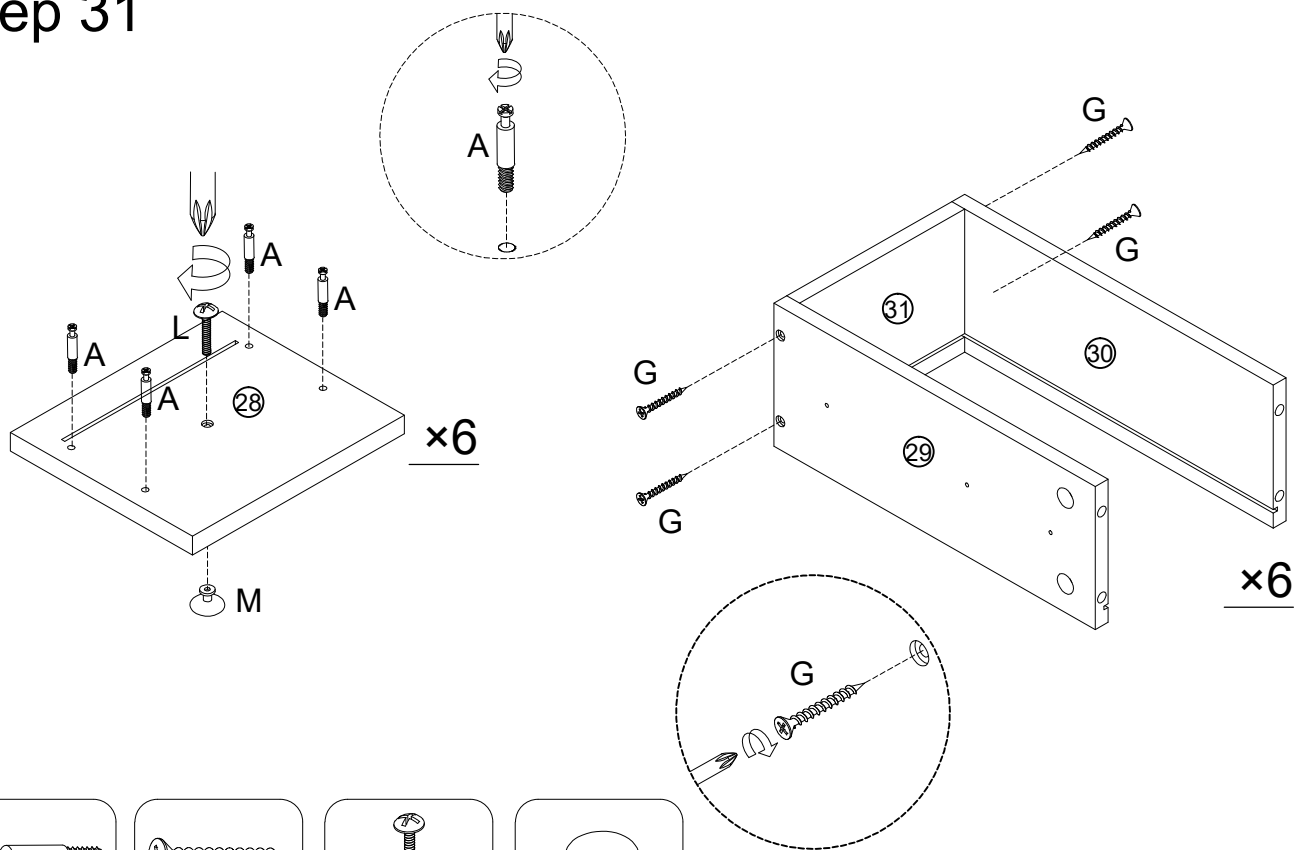


 M6×35mm A × 24	 M4×35mm G × 24	 M4×16mm L × 6	 M × 6
---	---	--	---



Step 32

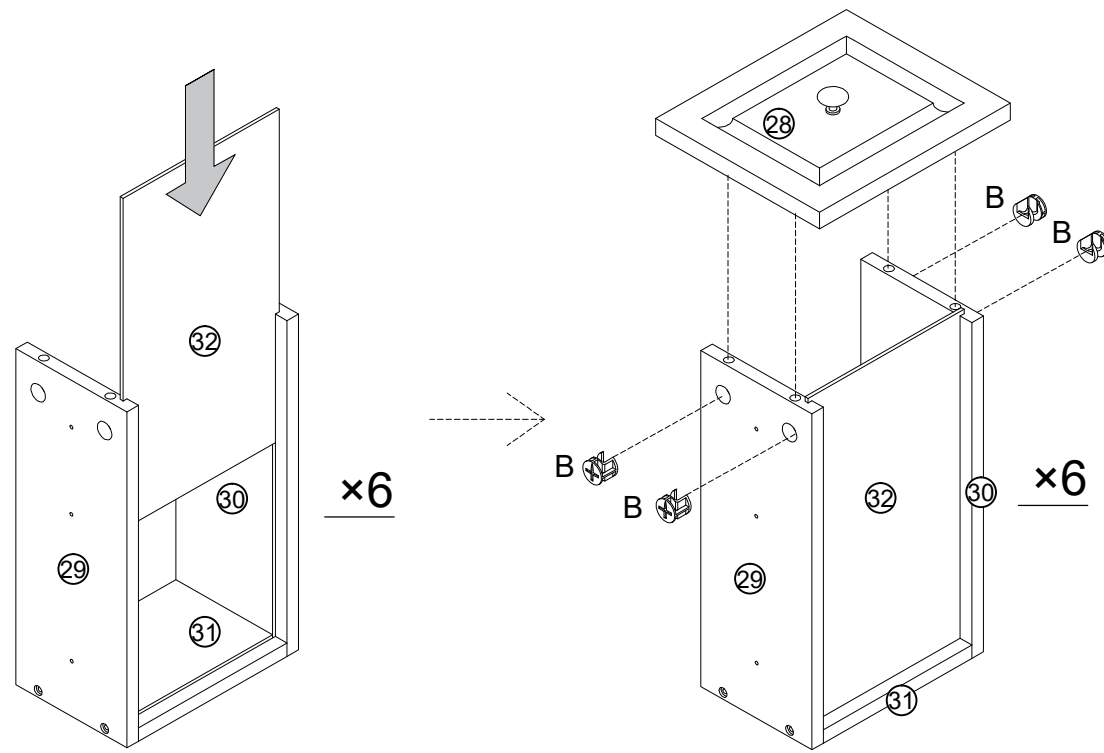



 Φ15×10mm B × 24

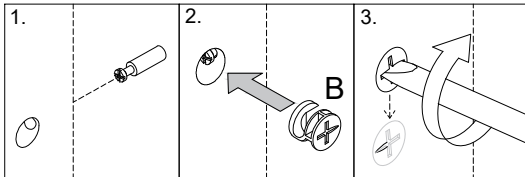



Step 33

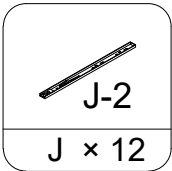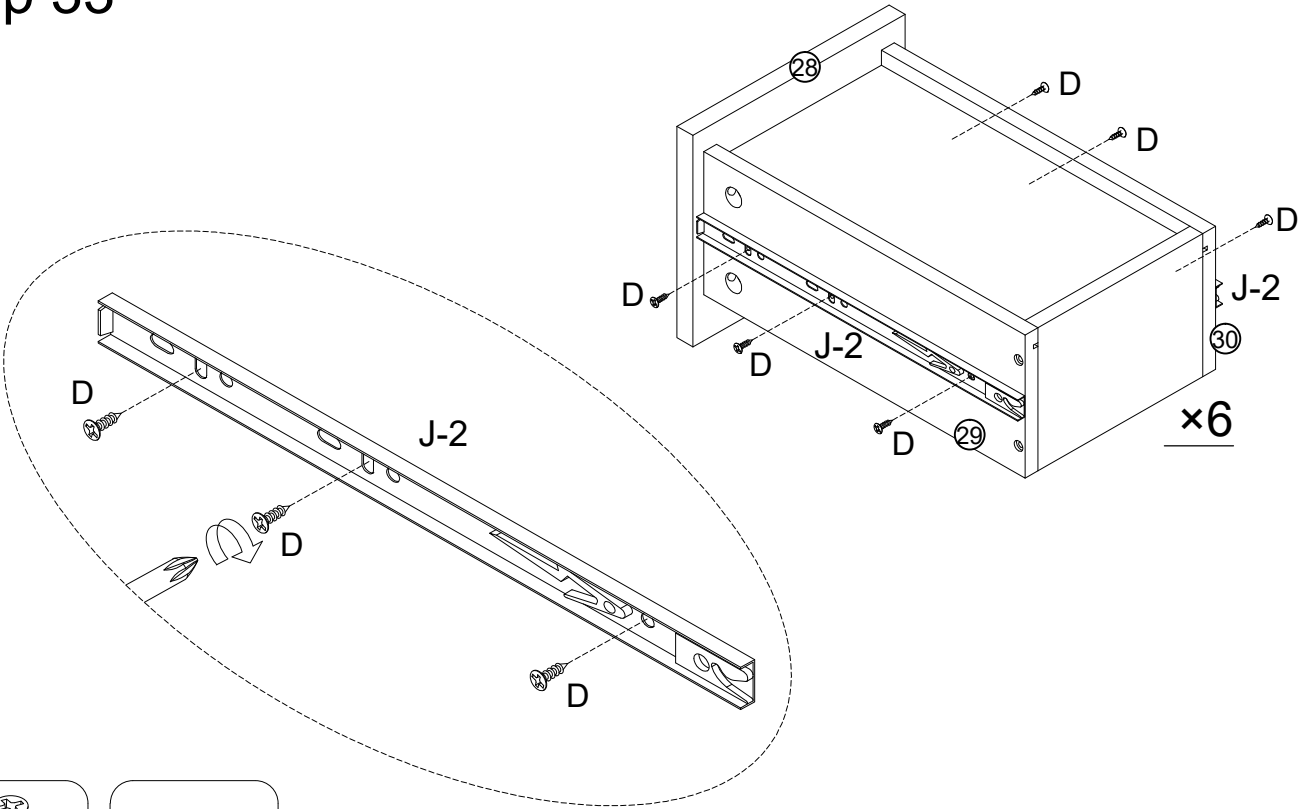



Step 34

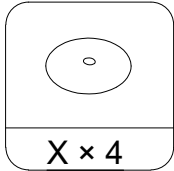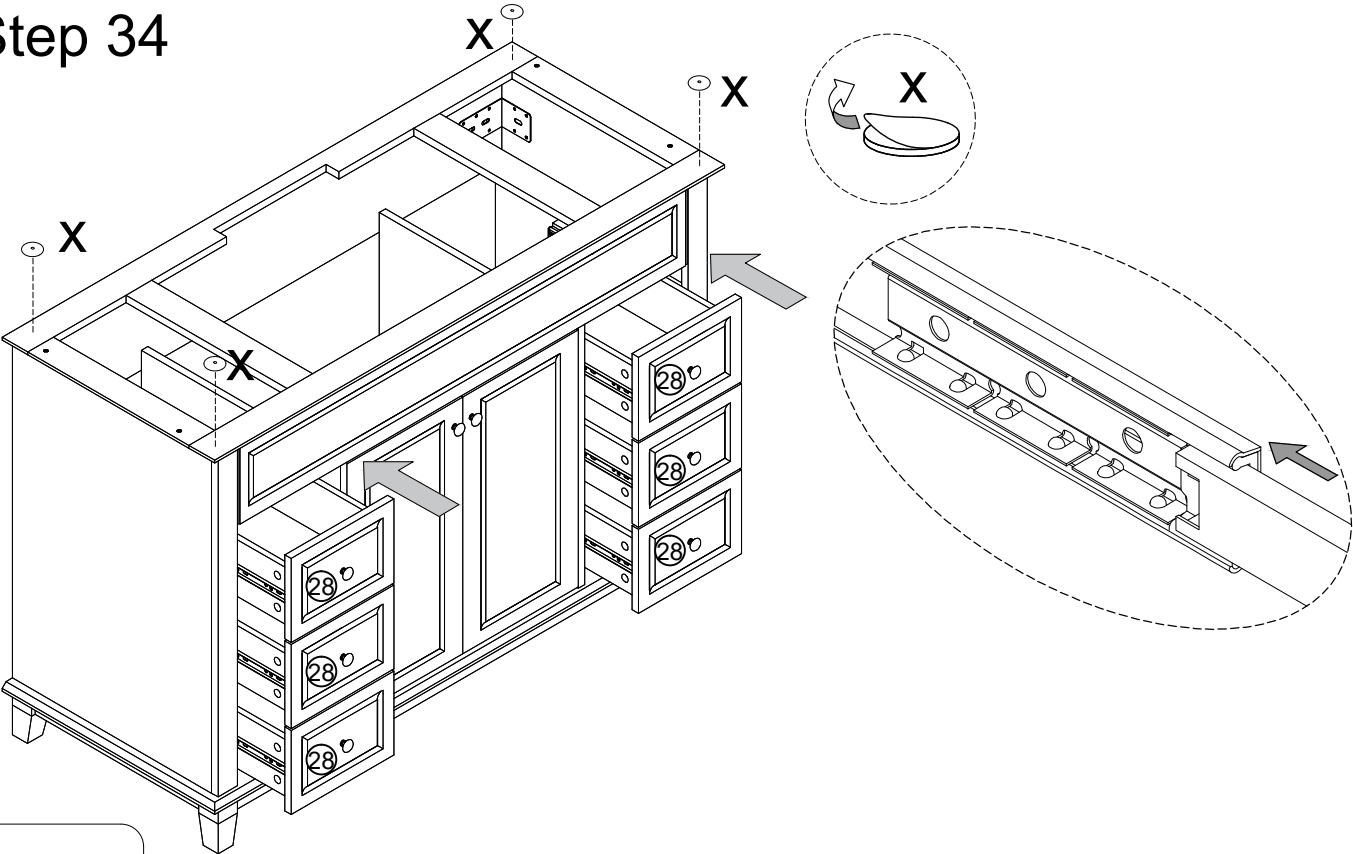



Step 35

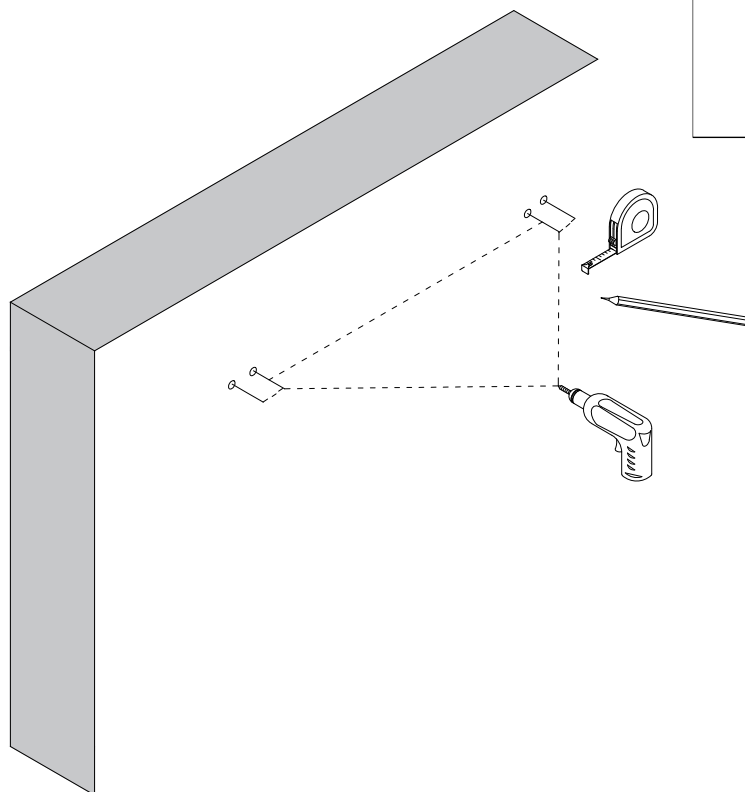


Step 36

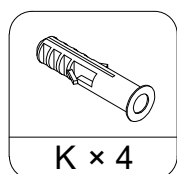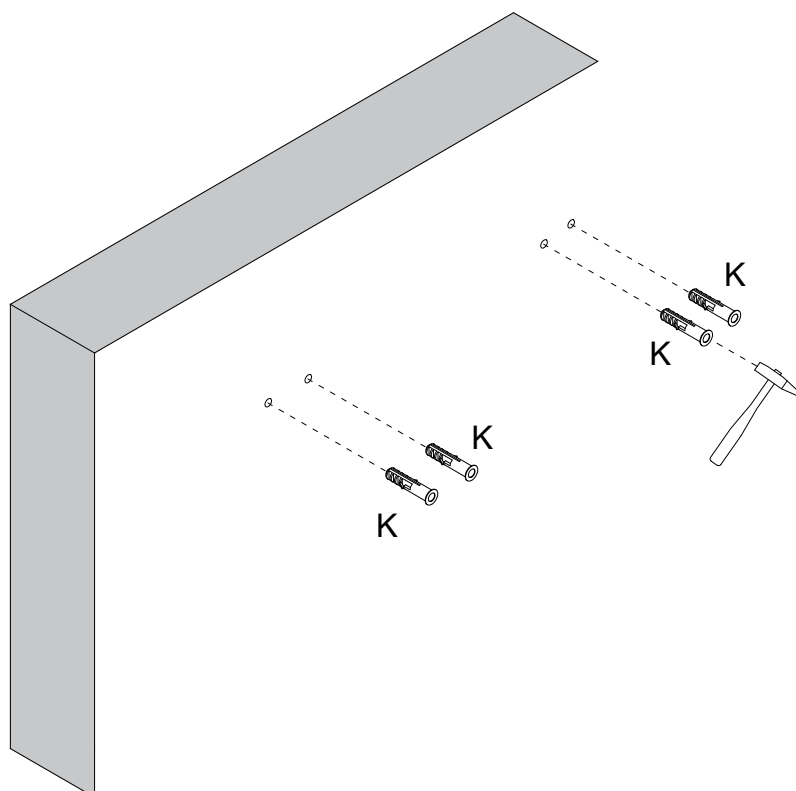

Step 37

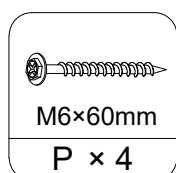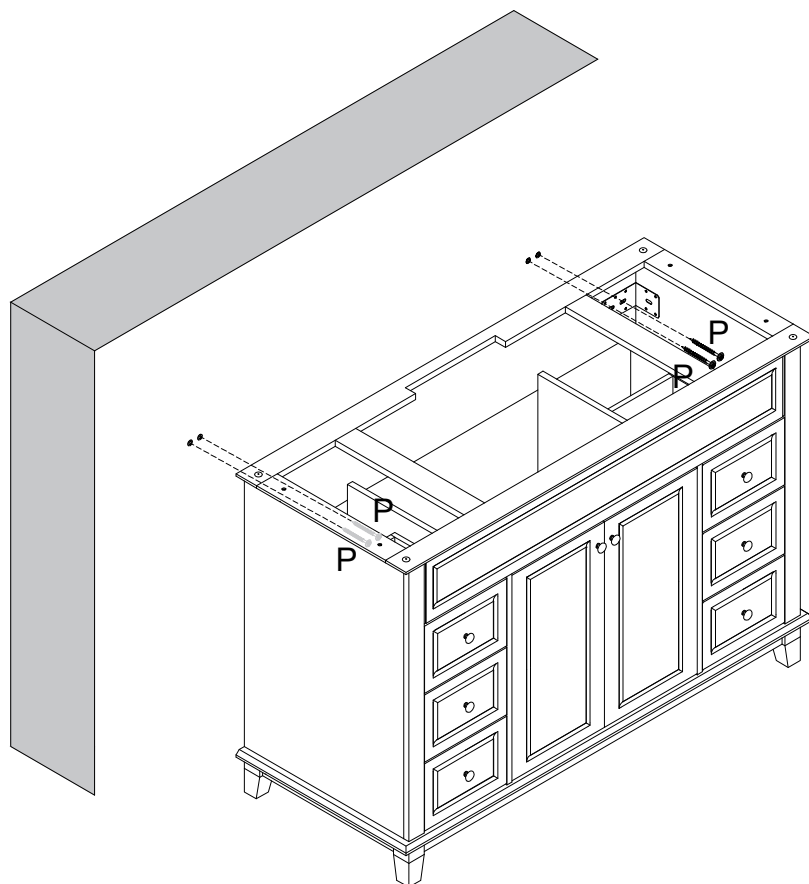

Step 38

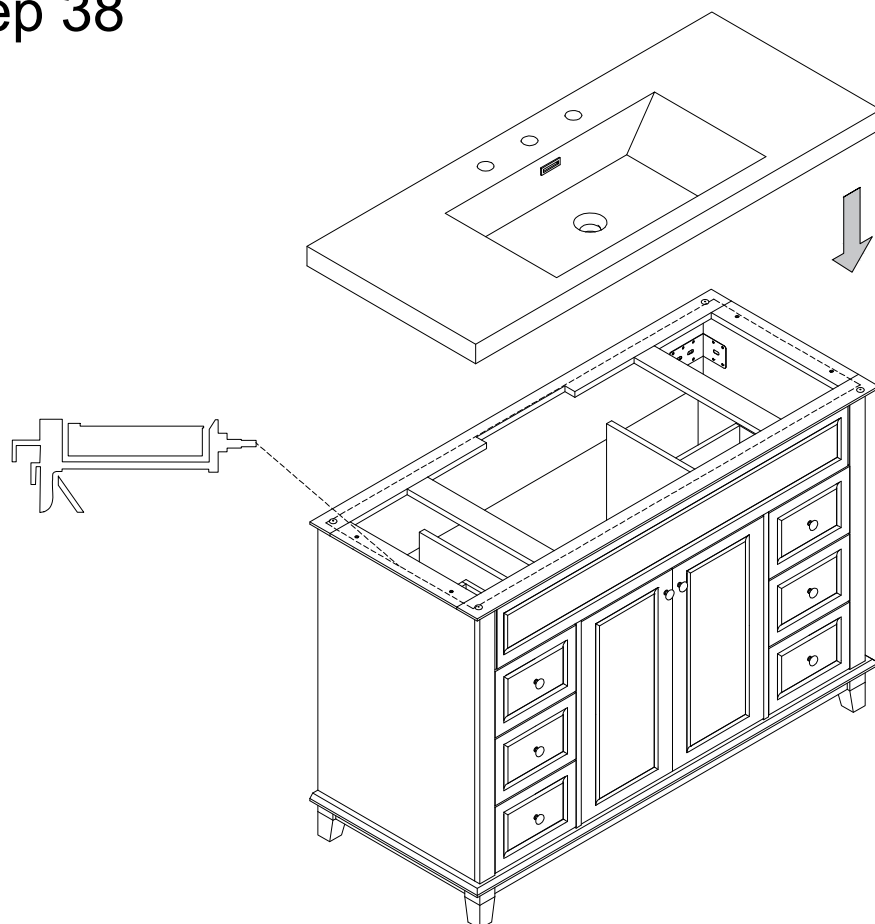

Step 39

