


CONVENIENCE CONCEPTS

SUMMIT HIGHBOY TV STND

Item No. 8066036

POSTED
7-7 (15)

TV
7-9

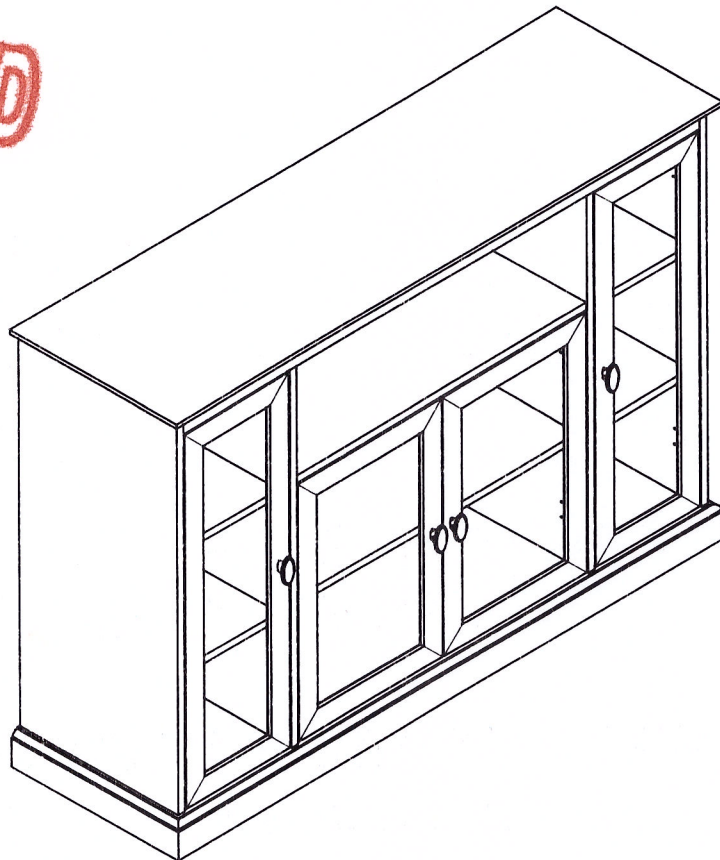


Please do not return to the store

. Broken or Missing Parts?





. Need help with Assembly?

If you have any questions just call 1-800-468-6447 or email us at
parts@convenience-concepts.com







HARDWARE LIST

CODE	NAME	FIGURE	Q'TY
A	CAM LOCK (Ø15*9mm)		20PCS
B	CAM BOLT (Ø6.5*35mm)		20PCS
C	WOOD DOWEL (Ø6*30mm)		24PCS
D	PLASTIC COVER		16PCS
E	KNOB		4PCS
F	KNOB SCREW (Ø4*22mm)		8PCS
G	WOOD SCREW (Ø7*25mm)		3PCS
H	ROUND HEAD SCREW(Ø3*15mm)		36PCS
I	MELAT PLATE		6PCS
J	SHELF PIN		20PCS
K	HINGE		8PCS
L	FLAT HEAD SCREW(Ø3*15mm)		32PC


PARTS LIST

CODE	NAME	FIGURE	Q'TY
①	TOP PANEL		1PC
②	BOTTOM PANEL		1PC
③	LEFT SIDE PANEL		1PC
④	RIGHT SIDE PANEL		1PC
⑤	FIXED PANEL		1PC
⑥	RIGHT DIVIDER		1PC

PARTS LIST

CODE	NAME	FIGURE	Q'TY
⑦	LEFT DIVIDER		1PC
⑧	SIDE ADJUSTABLE SHELF		4PCS
⑨	CENTER ADJUSTABLE SHELF		1PC
⑩	FRONT CROSS BAR		1PC
⑪	DOOR(1)		2PCS
⑫	DOOR(2)		2PCS
⑬	BACK PANEL(1)		2PCS
⑭	BACK PANEL(2)		1PC


HOW TO USE THE CAMLOCK SYSTEM

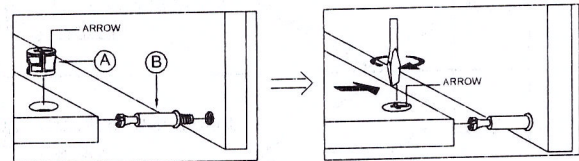

- NOTE: THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS

STEP 1


A x 2PCS
B x 2PCS
C x 2PCS

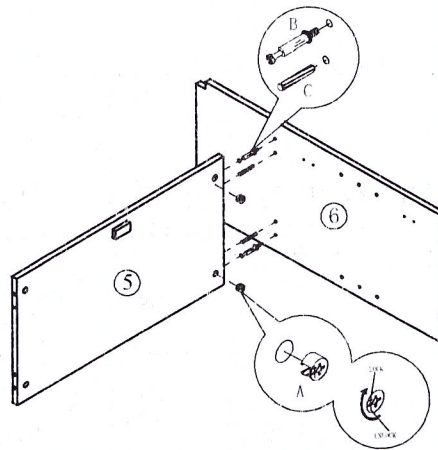

- (1) ATTACH CAMLOCKS AND HARDWARE AS SHOWN.
- (2) CONNECT PIECES.
- (3) GENTLY TIGHTEN CAMLOCKS.

STEP 2


A x 2PCS
B x 2PCS
C x 2PCS

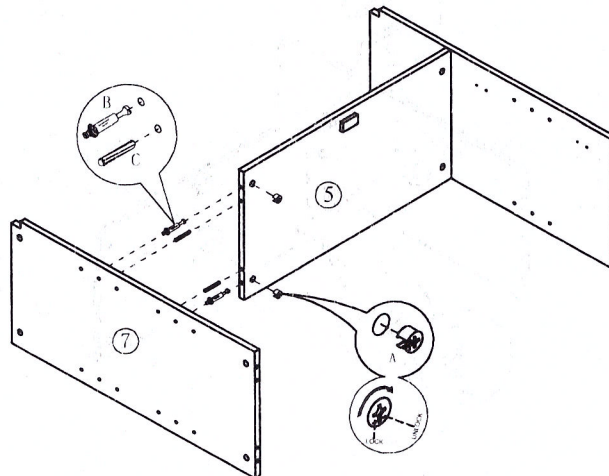

- (1) ATTACH CAMLOCKS AND HARDWARE AS SHOWN.
- (2) CONNECT PIECES.
- (3) GENTLY TIGHTEN CAMLOCKS.

STEP 3


C x 4PCS

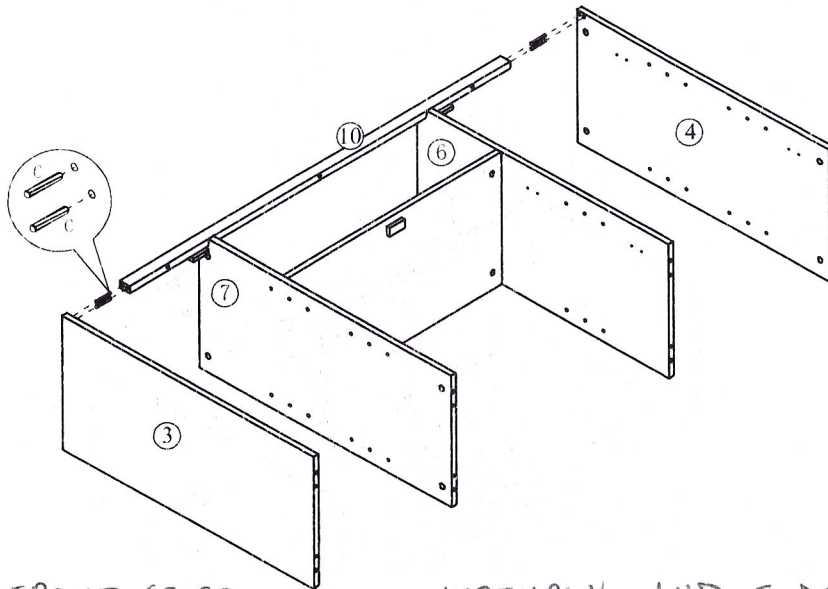

CONNECT FRONT CROSS BAR TO ASSEMBLY AND SIDE PANELS (3) AND (4) WITH DOWELS (C)

STEP 4

A x 8PCS
B x 8PCS
C x 8PCS
D x 8PCS

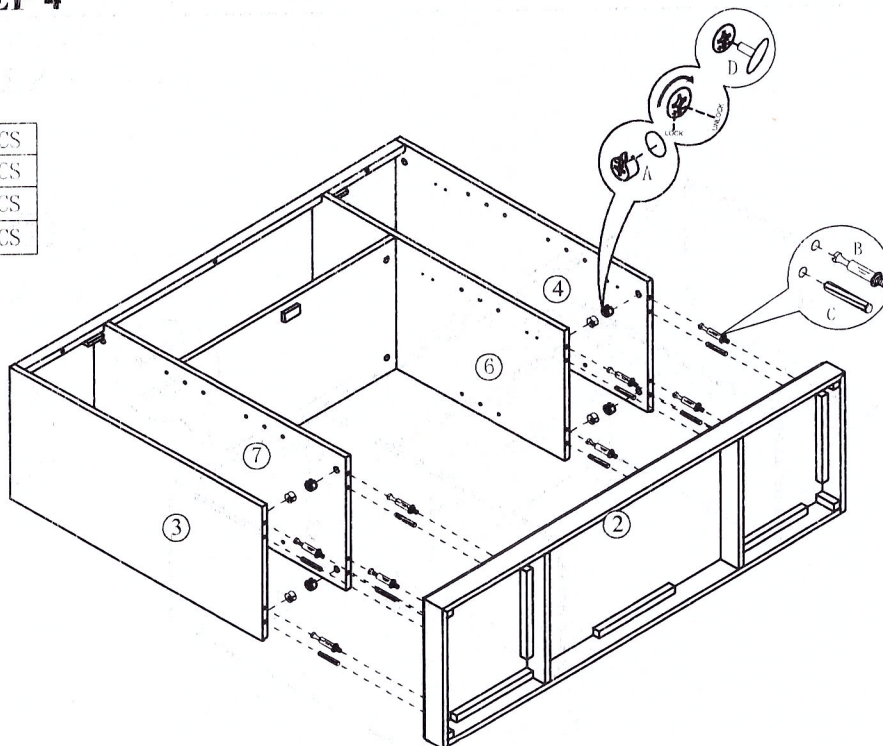


(1) ATTACH BOTTOM PANEL (2) TO UNIT USING CAMLOCK SYSTEM.

(2) GENTLY TIGHTEN CAMLOCKS

STEP 5


A	x	8PCS
B	x	8PCS
C	x	8PCS
D	x	8PCS

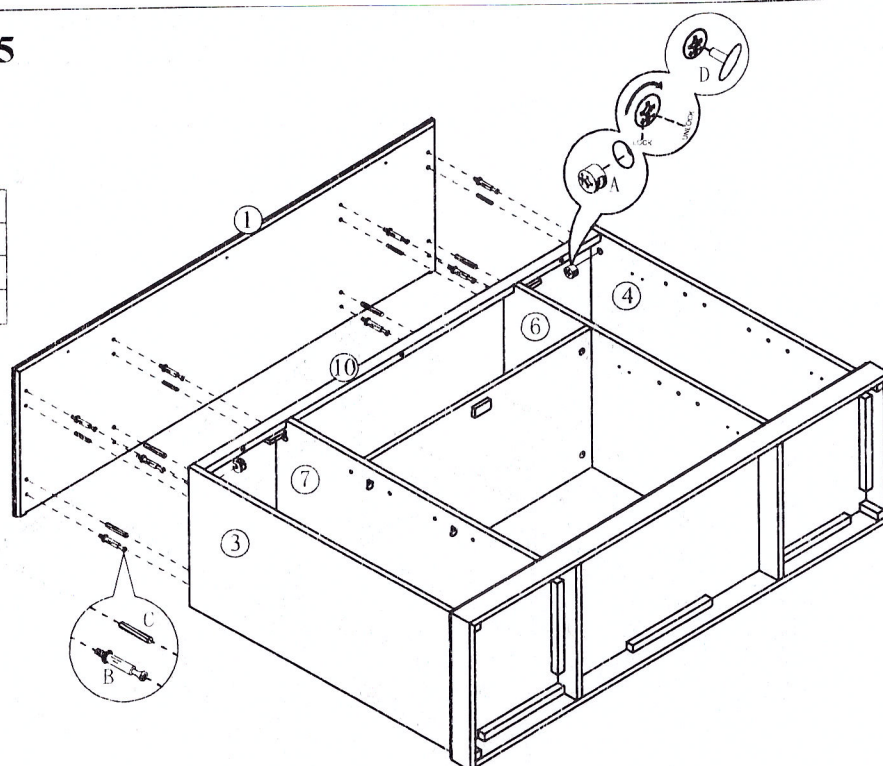

(1) CONNECT TOP PANEL (1) TO UNIT USING CAMLOCK SYSTEM.

STEP 6


G x 3PCS

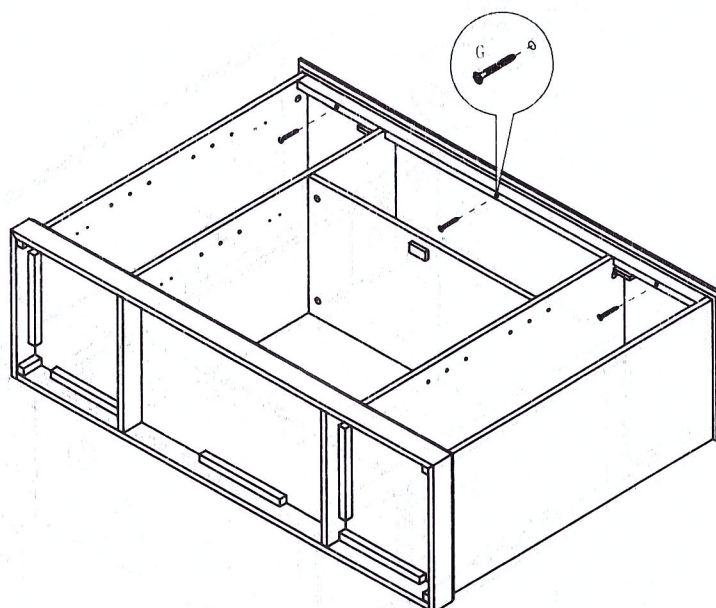

SECURE
(1) ~~ATTACH~~ FRONT CROSSBAR (10) TO UNIT USING WOOD SCREWS (G).

STEP 7


H x 36PCS
I x 6PCS

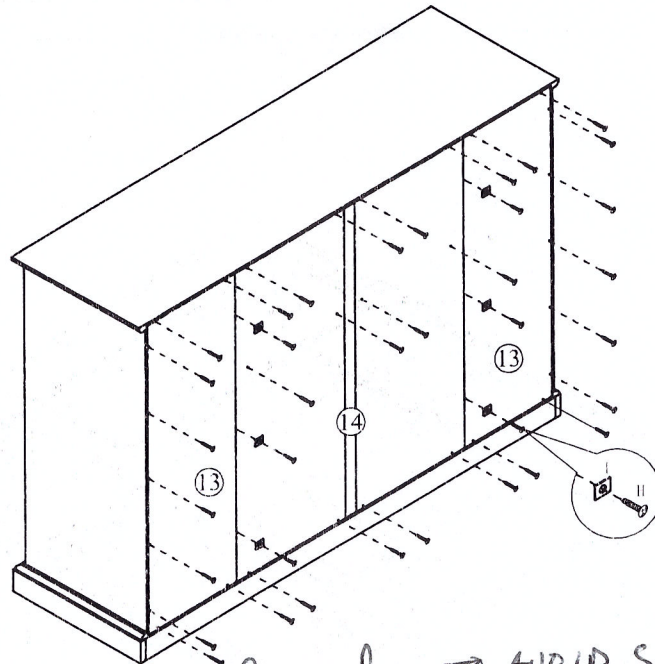


- CAREFULLY*
- ① SET UNIT FACE DOWN ON SOFT SURFACE TO AVOID SCRATCHING METAL
 - ② FASTEN BACK PANEL TO UNIT WITH ROUND HEAD SCREW (H) AND METAL PLATE (I).

STEP 8

K x 8PCS
L x 16PCS

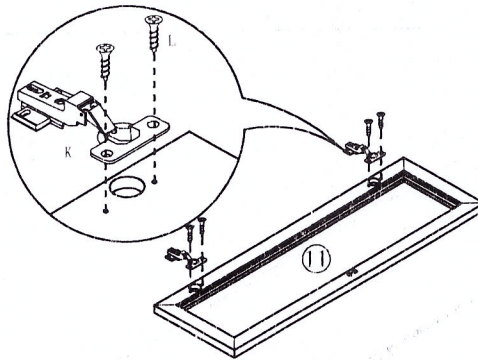

X 2

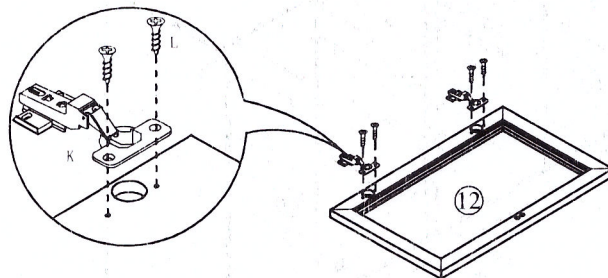


X 2

- ATTACH*
- (1) ~~TIGHTEN~~ ATTACH THE HINGE (K) ONTO THE DOOR (1) AND DOOR (2) BY USING THE 3*15MM FLAT HEAD SCREW (L).

STEP 9


L	x	8PCS
E	x	2PCS
F	x	4PCS

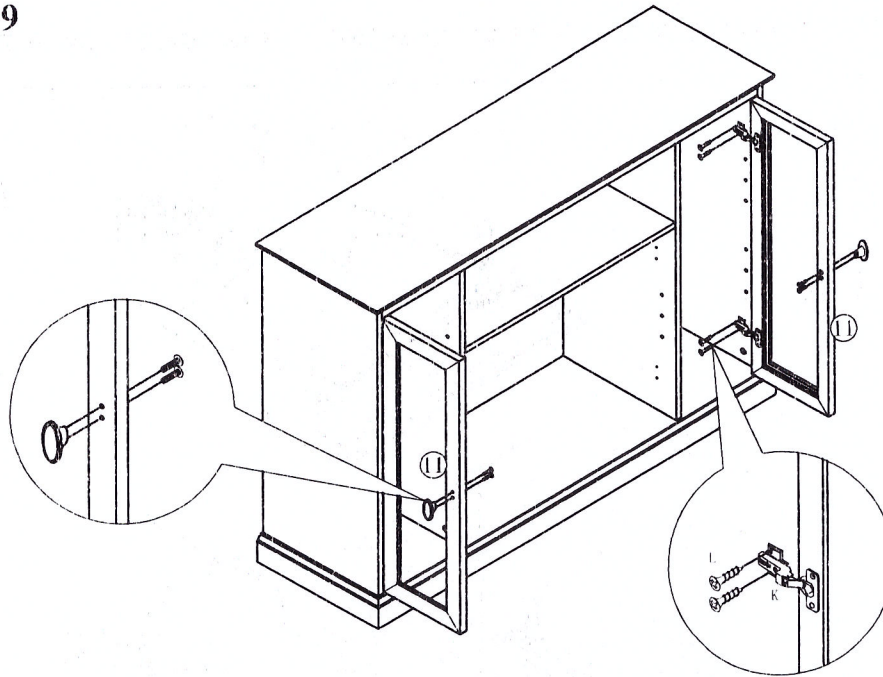

- OUTER (11)*
- (1) USING SCREWS(L), ATTACH DOOR TO UNIT.
 - (2) ATTACH KNOBS TO DOOR AS SHOWN.

STEP 10



L	x	8PCS
E	x	2PCS
F	x	4PCS

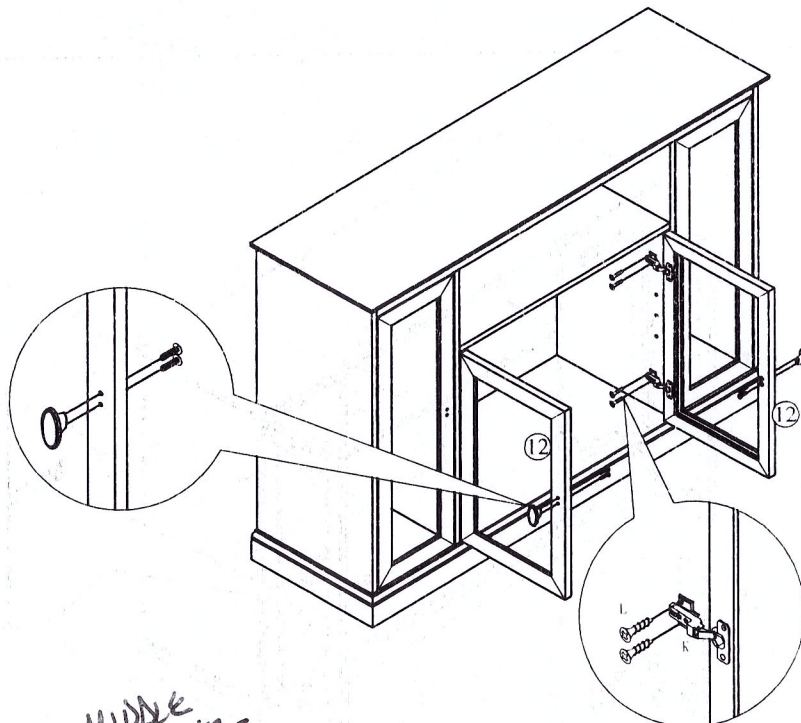

- MIDDLE 12*
- (1) USING SCREWS(L), ATTACH DOOR TO UNIT.
 - (2) ATTACH KNOBS TO DOOR AS SHOWN.

STEP 11

J x 20PCS

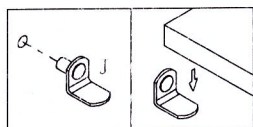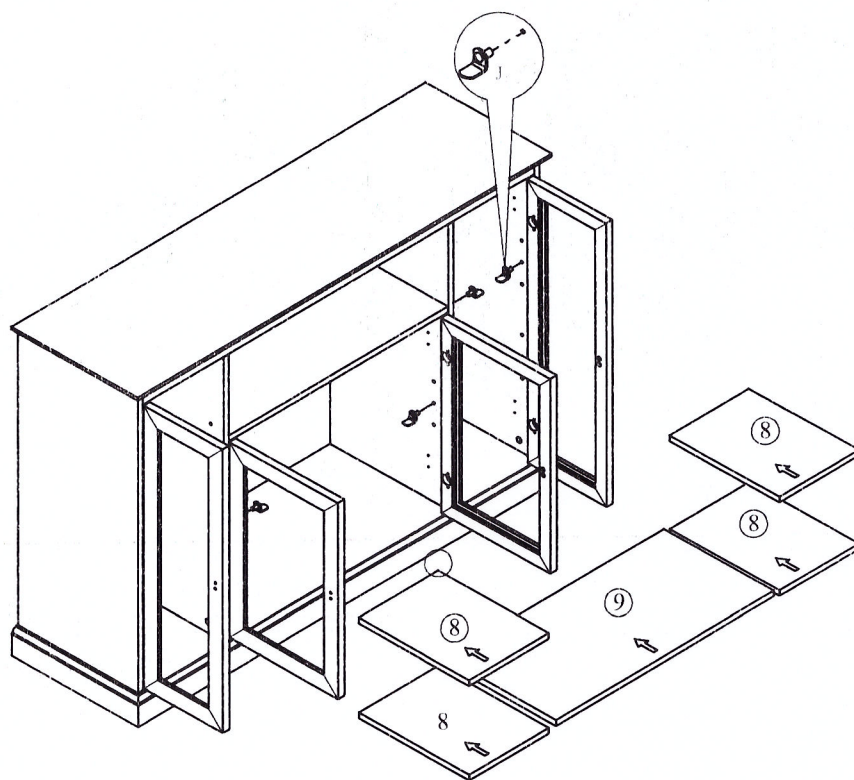

- (1) INSERT SHELF BRACKETS. INTO DESIRED LOCATION.
- (2) SLIDE IN SHELVES ⑧ & ⑨.