


Day Bed With Front Guard Rail

Twin Size - Panel - With Trundle

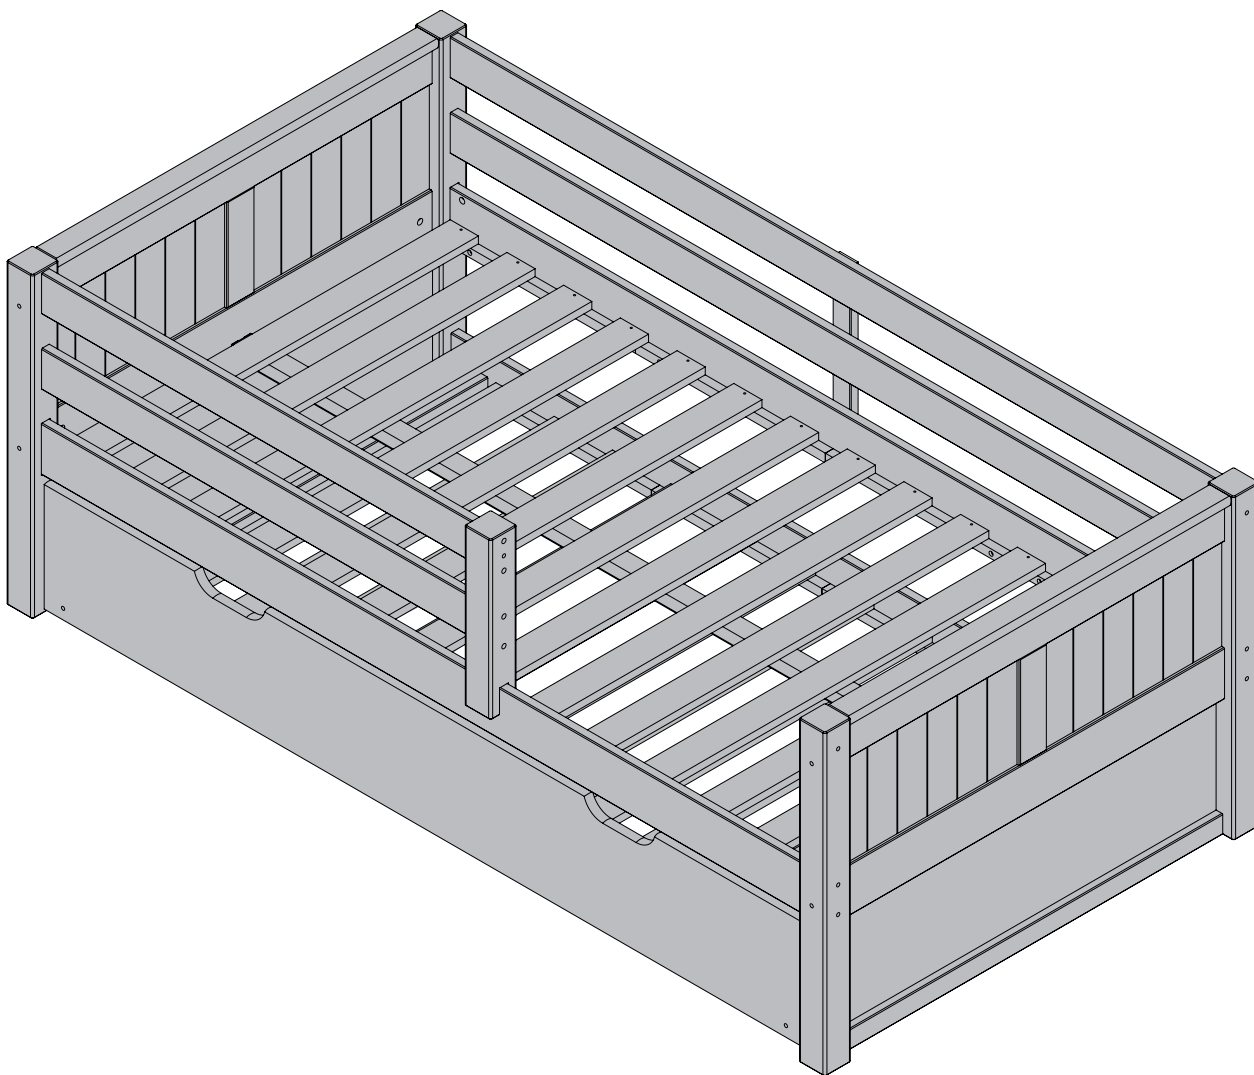

Assembly
02 people



Time
1:30 hours approximately




Tools
philips key, rubber hammer



Volume quantity
01 boxes





Parts list for assembly. Please confirm all parts available before assembly

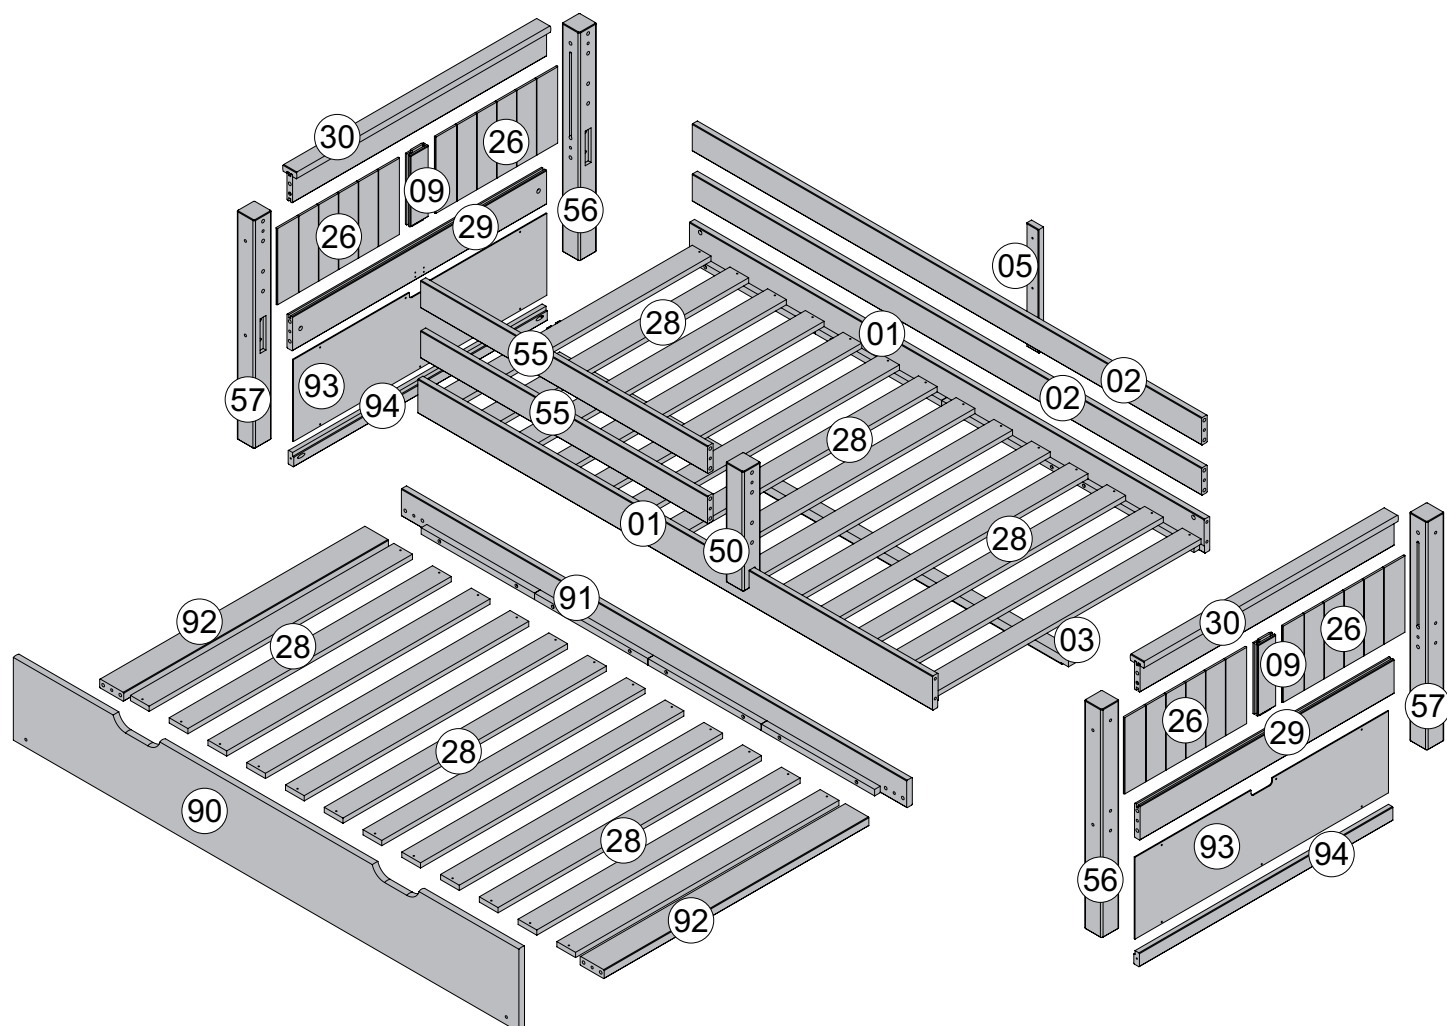


ATTENTION


- * Read and observe carefully all the assembly instructions before beginning assembly.
- * The assembly of the product must be done on a clean and flat surface. We suggest to use the packaging to cover the floor to avoid damages.
- * The screws must be tightened periodically.
- * Avoid contact with sharp objects.
- * Avoid banging pieces together.

Hardware list for assembly.
Please confirm all hardware available before assembly


			SPARE	
A	 $\varnothing 3/8" \times 1' 9/16"$	36x	+	02x
B	 $\varnothing 1/4" \times 4' 1/4"$	16x	+	01x
D	 $\varnothing 5/16"$	02x	+	01x
E	 $\varnothing 3/8"$	08x	+	01x
F		01x	+	01x
G	 $\varnothing 1/4" \times 3' 7/8"$	04x		
I	 $\varnothing 1/8" \times 1' 3/8"$	61x	+	04x
J		02x		
K	 $\varnothing 1/4" \times 3' 1/8"$	04x		01x
M	 $\varnothing 1/8" \times 3/4"$	40x	+	03x
Y	 $1' 15/16"$	04x		
AA	 $\varnothing 1/4" \times 7/16"$	16x	+	02x
BC	 $1/4"$	04x	+	01x
BH	 $2' 3/4"$	02x		


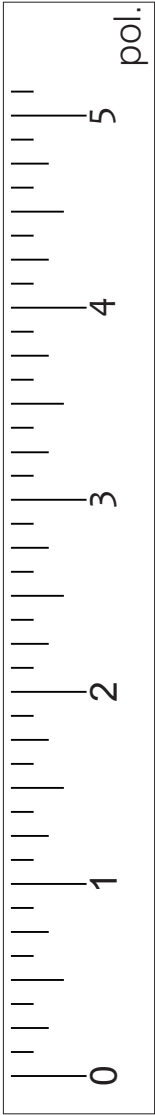


Step - 01

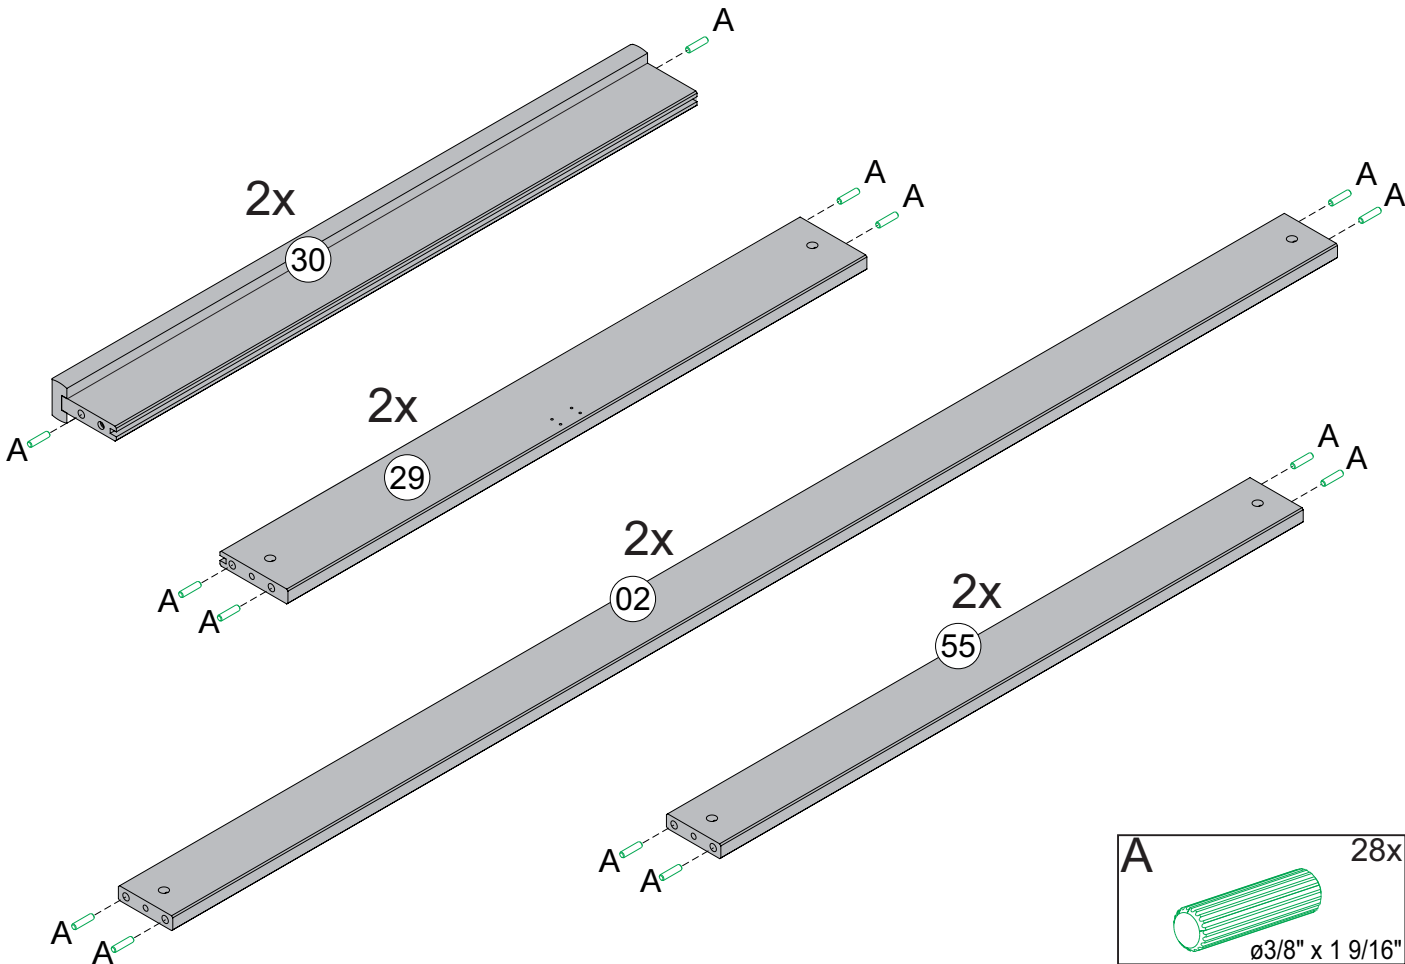


Step - 02

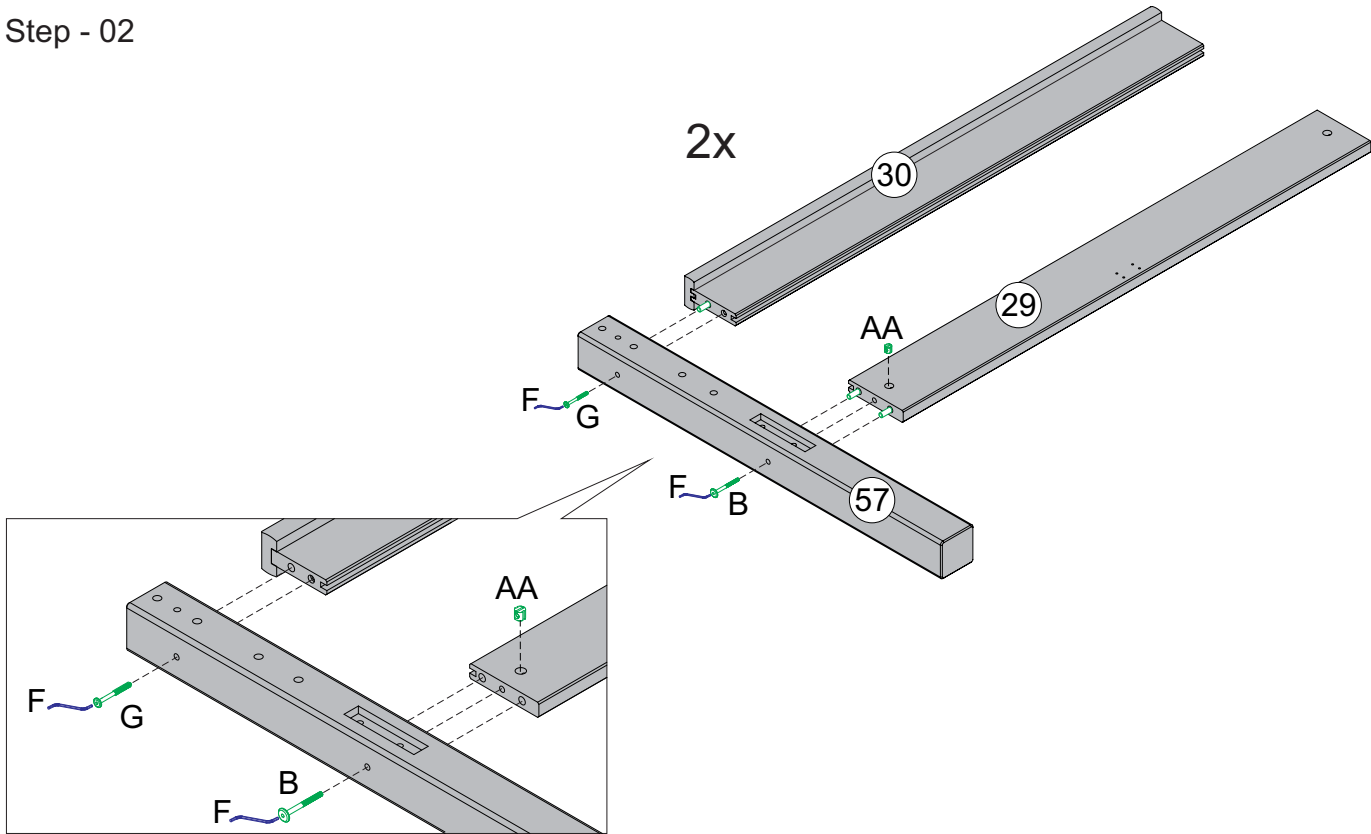




B  $\phi 1/4'' \times 4\ 1/4''$	F  01x	G  $\phi 1/4'' \times 3\ 7/8''$	AA  $\phi 1/4'' \times 7/16''$
---	--	---	--


Step - 03

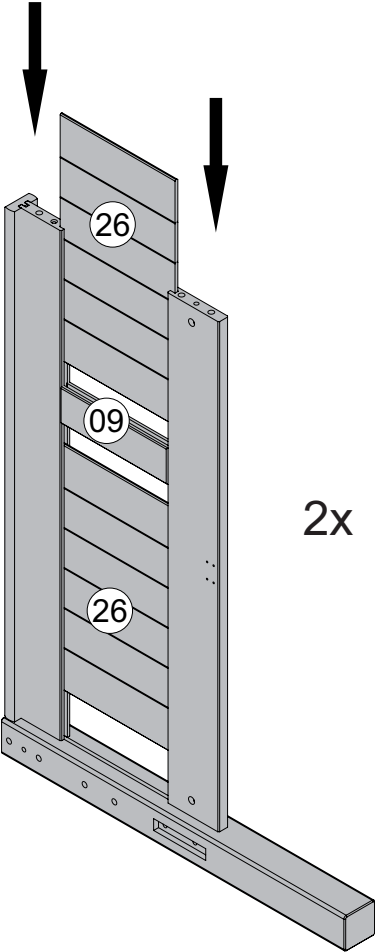


Step - 04

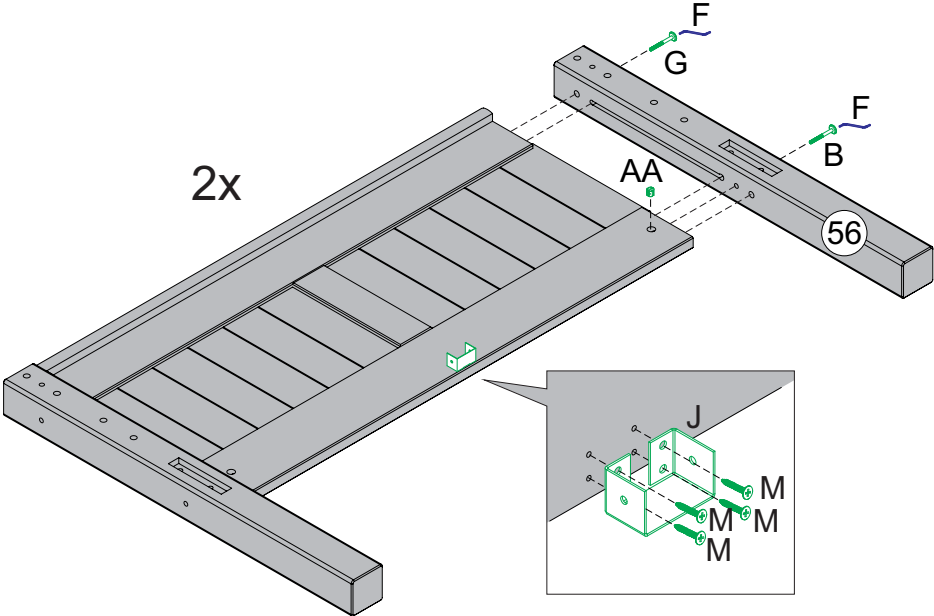


B  02x $\varnothing 1/4" \times 4 \frac{1}{4}"$	F  01x	G  02x $\varnothing 1/4" \times 3' \frac{7}{8}"$
J  02x	M  08x $\varnothing 1/8" \times 3/4"$	AA  02x $\varnothing 1/4" \times 7/16"$

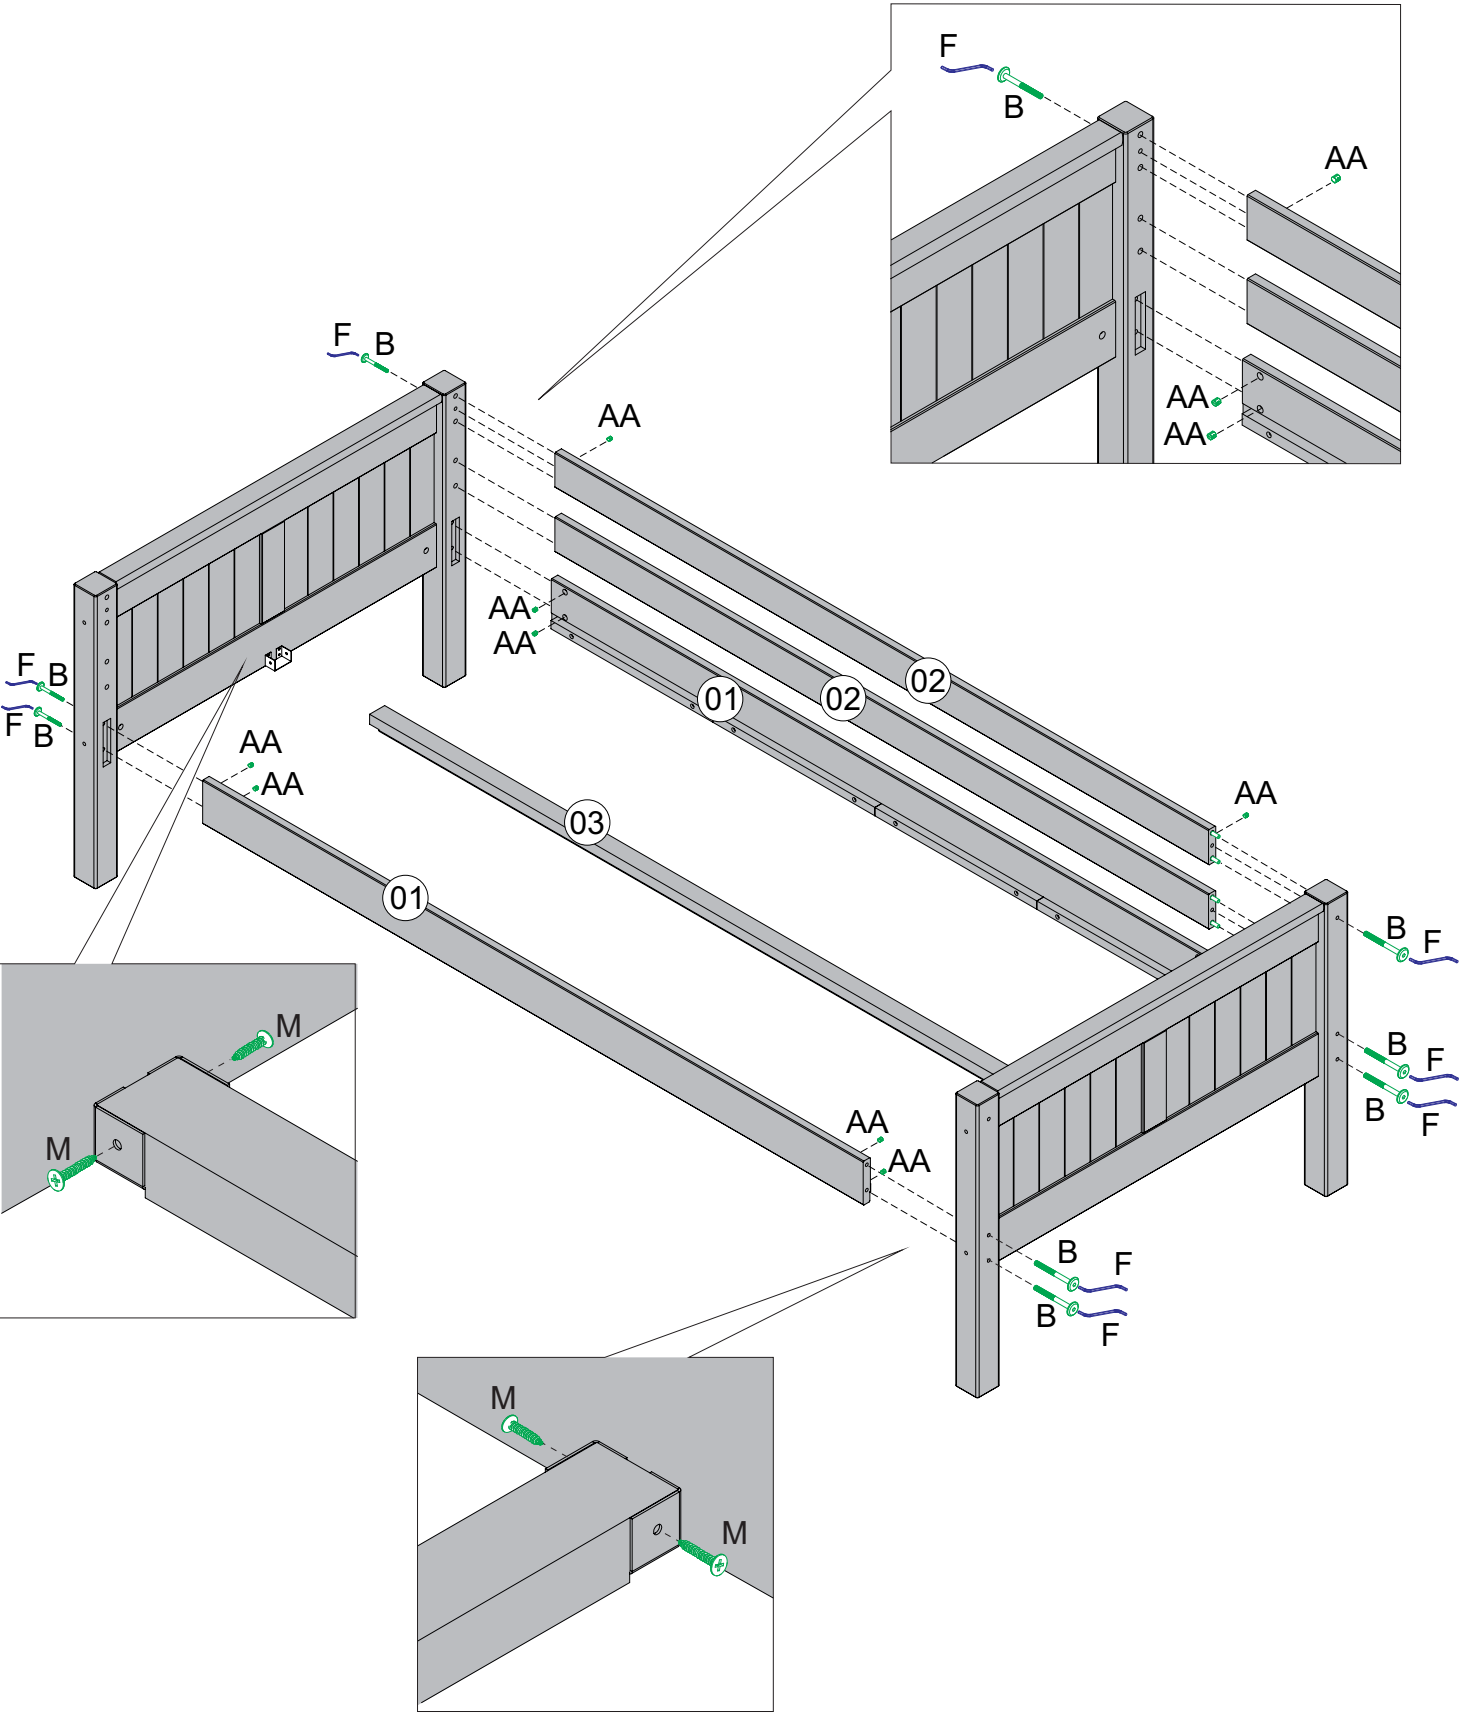

B	10x	F	01x	M	04x	AA	10x
							
ø1/4" x 4 1/4"				ø1/8" x 3/4"		ø1/4" x 7/16"	

Step - 06

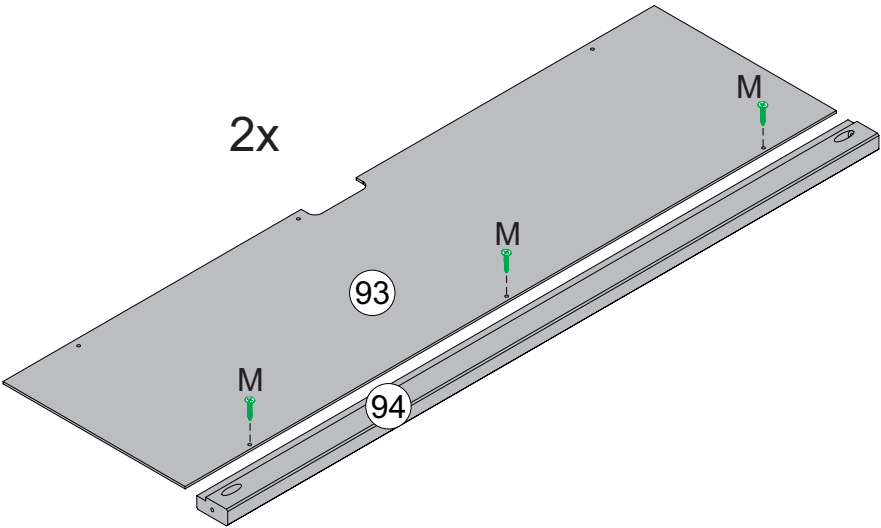


M06x




ø1/8" x 3/4"

Step - 07

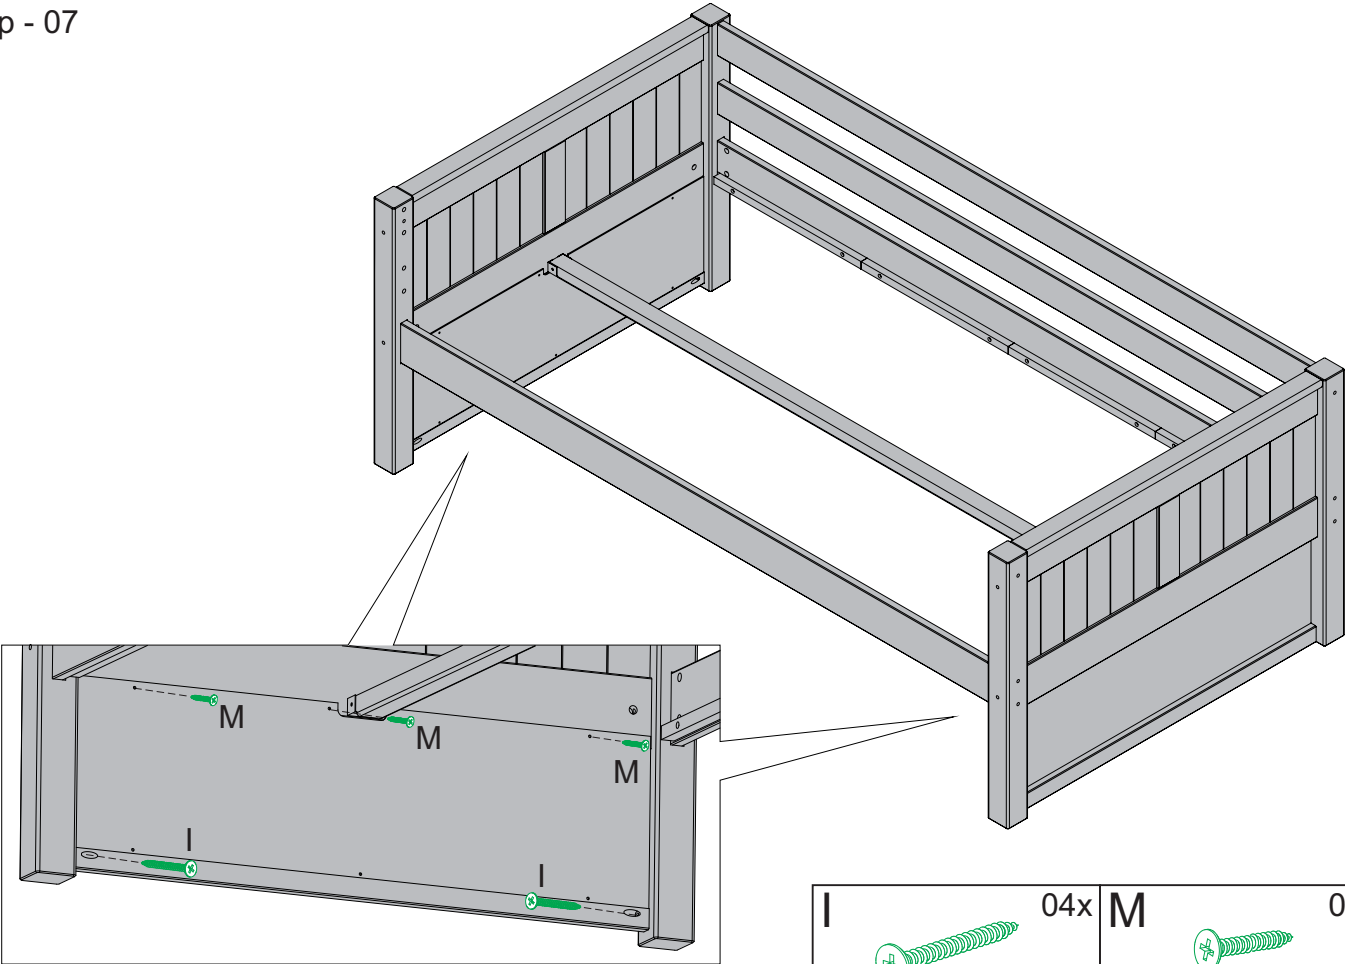

I04x




ø1/8" x 1' 3/8"

M06x




ø1/8" x 3/4"


Step - 08

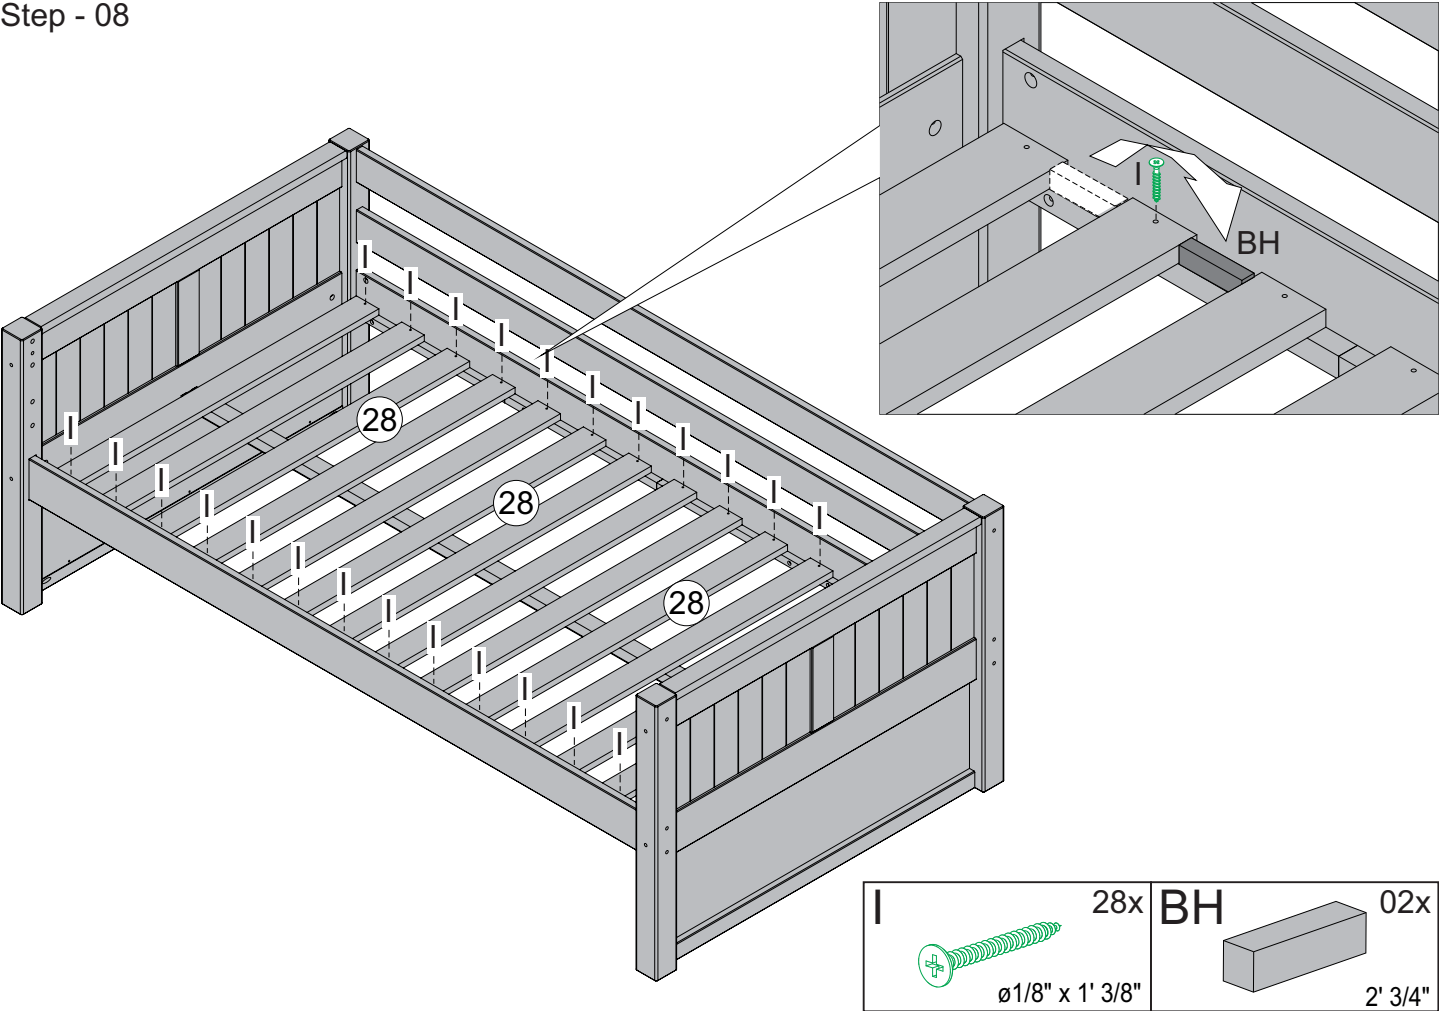


Step - 09

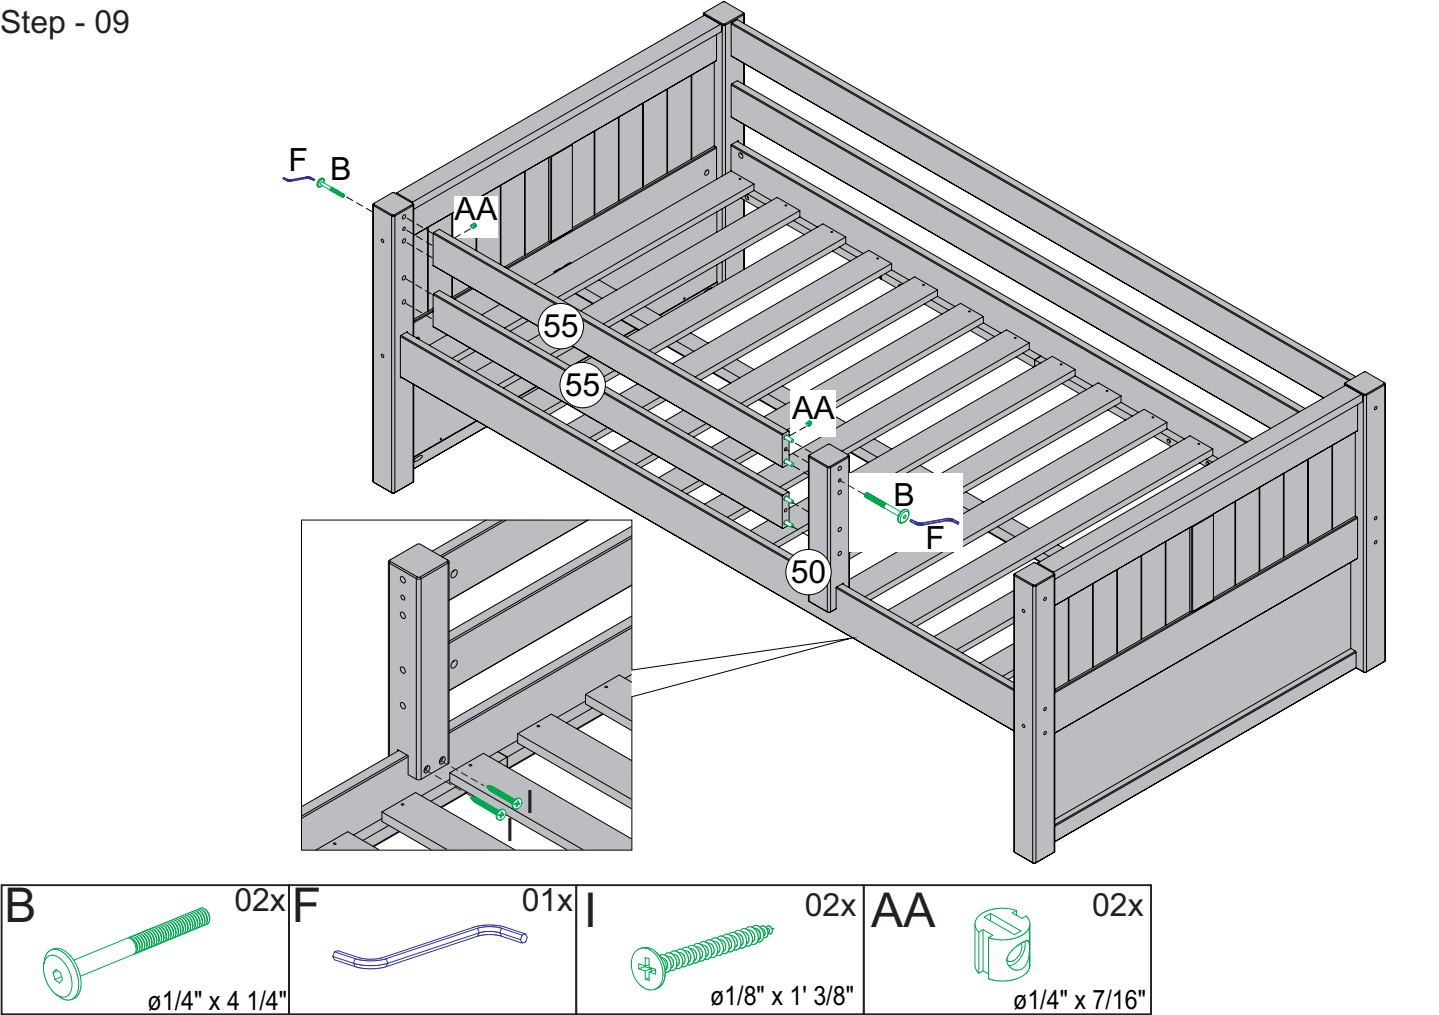


Step - 10

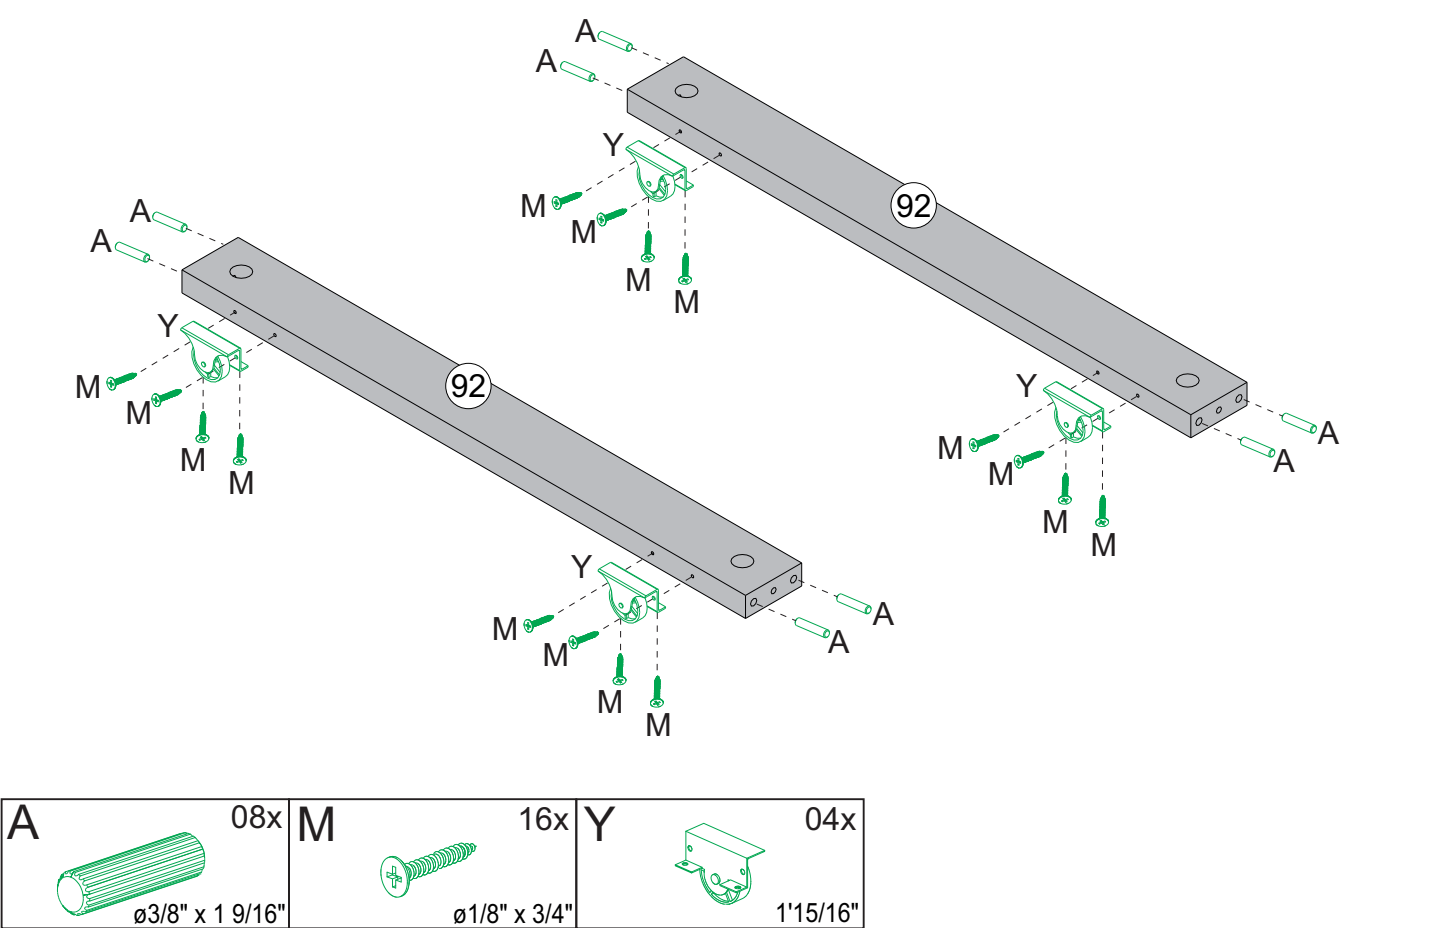

Step - 11

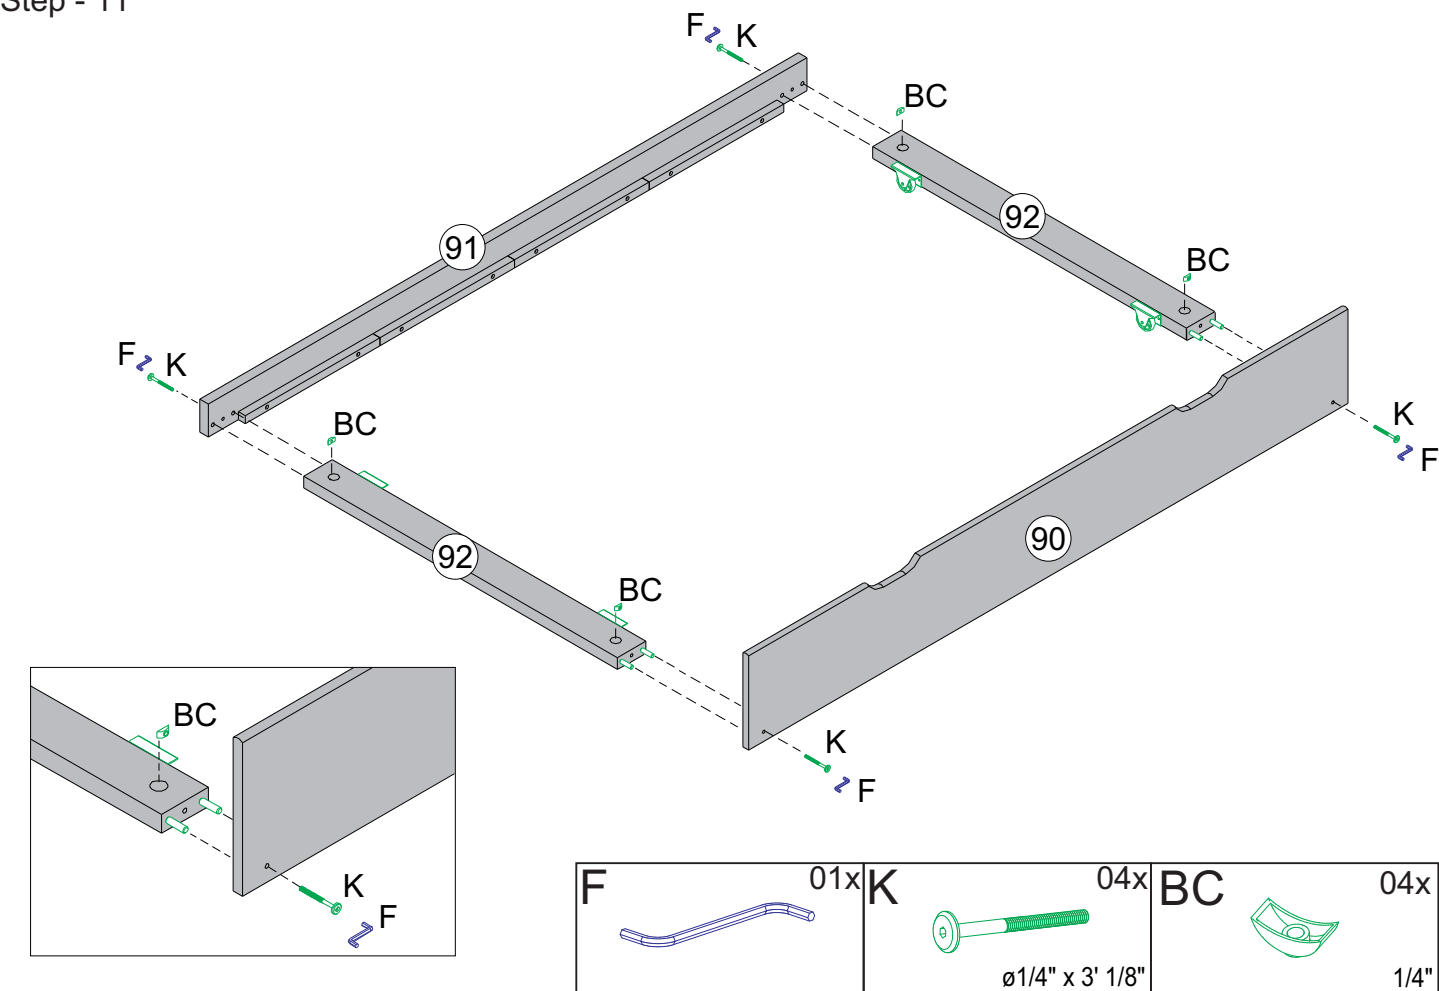

Step - 12

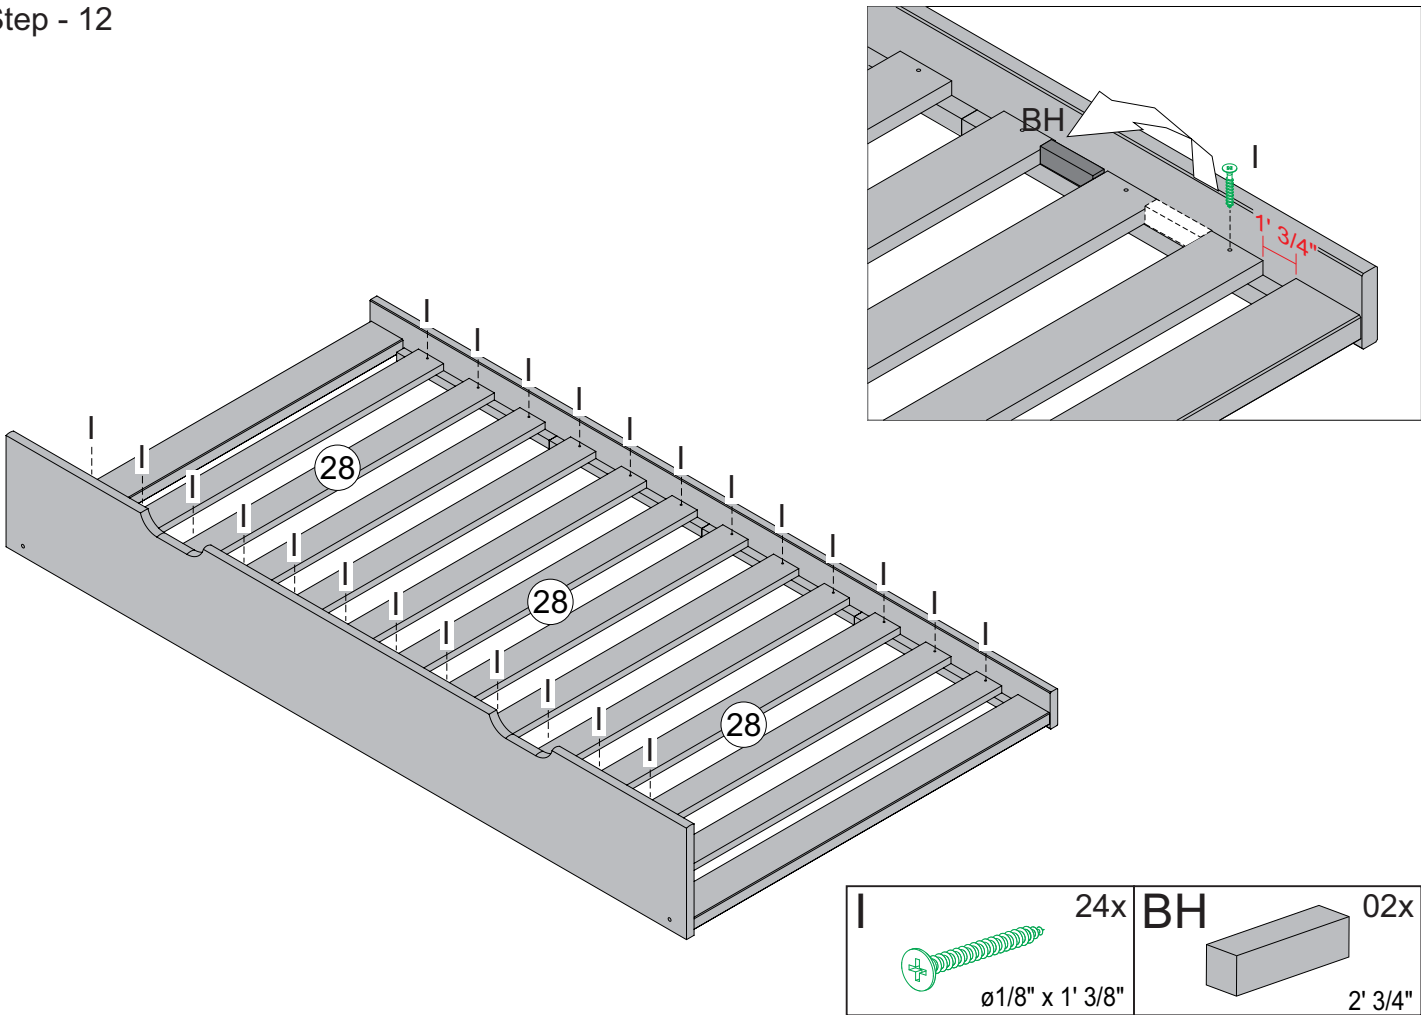

Step - 13

