


ASSEMBLY INSTRUCTIONS

ITEM:LDXST30


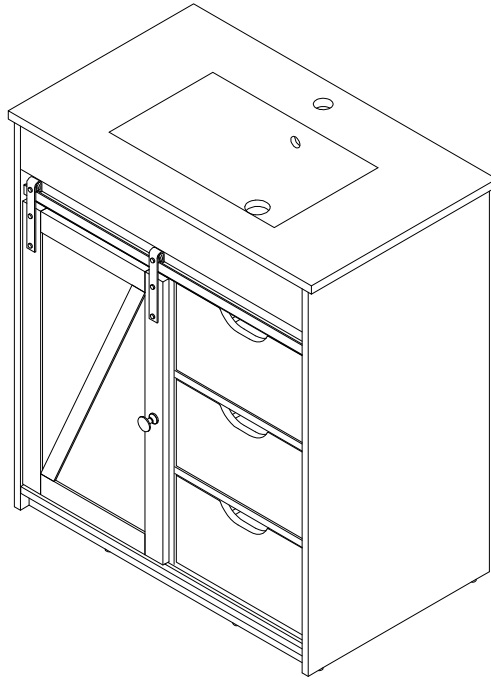


Please scan this QR code and contact us if you have any questions! If your products has damages, missing parts, problems with installation and use, or you are not 100% satisfied with our products, please scan the QR code and contact us!

Email:vimitty-service@outlook.com













SUPPORT: +18882062161

PACKAGE INCLUDE

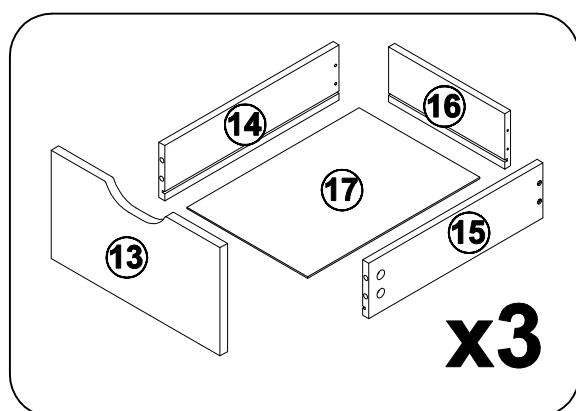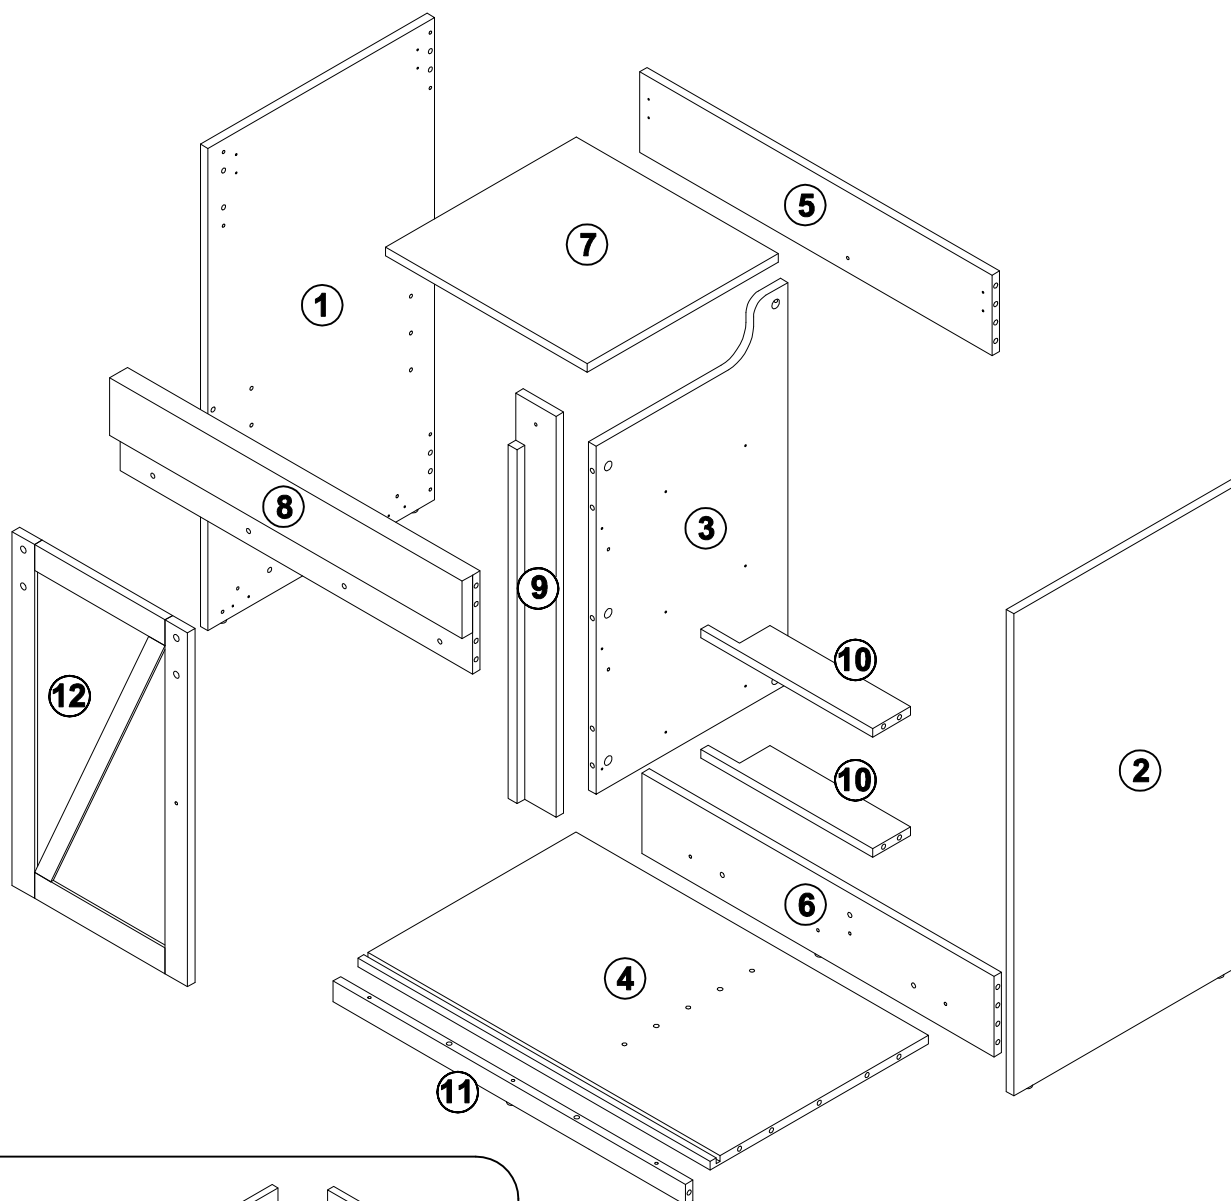

SUPPORT: +18882062161


PACKAGE CONTENT

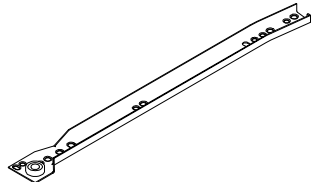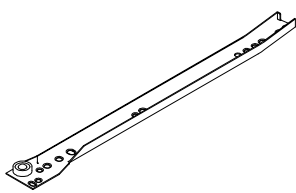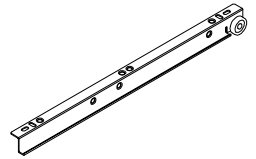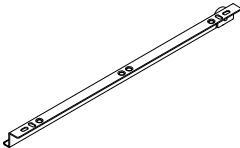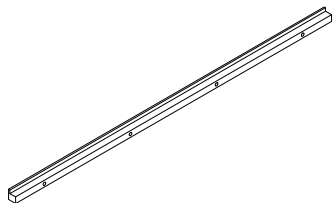Ø6x35MM  (A) 44x+2	Ø15x11MM  (B) 32x+2	Ø8x30MM  (C) 27x+2	Ø3.5x12MM  (D) 32x+2
 (E) 8x	 (F) 3x	 (G) 3x	 (H) 3x
 (J) 3x	Ø3.5x12MM  (K) 36x+2	 (L) 1x	1/4"x25MM  (M) 4x
4MM  (N) 1x	Ø4x38MM  (O) 15x+1	Ø6x50MM  (P) 3x	 (Q) 4x
Ø15x9MM  (R) 12x+1	 (S) 2x	 (T) 2x	1/4"x12MM  (U) 4x

SUPPORT: +18882062161

PACKAGE CONTENT

Ø4x12MM



(V)

4x



(W)

1x


5/32"*22MM



(X)

1x

Ø4x25MM



(Y)


1x

Ø5xØ13x9MM



(Z)

1x

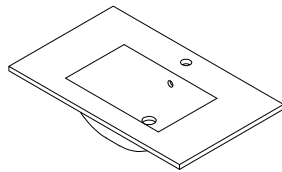


(AA)


1x

SUPPORT: +18882062161


How to use the cam lock system

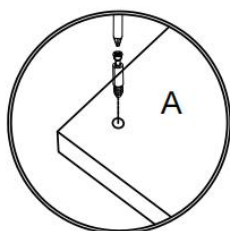


1. Screw cam bolt into panel

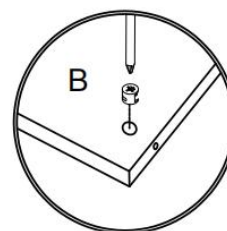


2. Push cam into panel - arrow feature on cam top points to panel edge

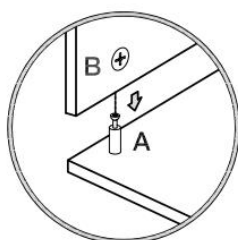

3. Align cam bolt(s) with cam(s) and insert all the way into cross-bored hole(s)




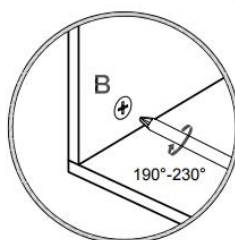


4. Rotate cam(s) clockwise 190°-230° to lock panels together

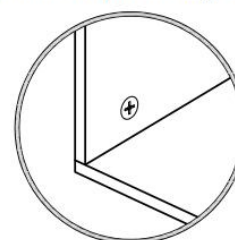

5. Panels should be tight against each other and connection should be rigid

Insert the wood dowel (C) at least half way by tapping lightly with a rubber mallet, IT NECESSARY.

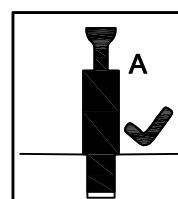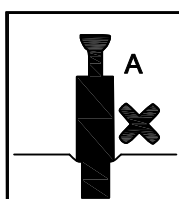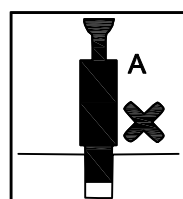
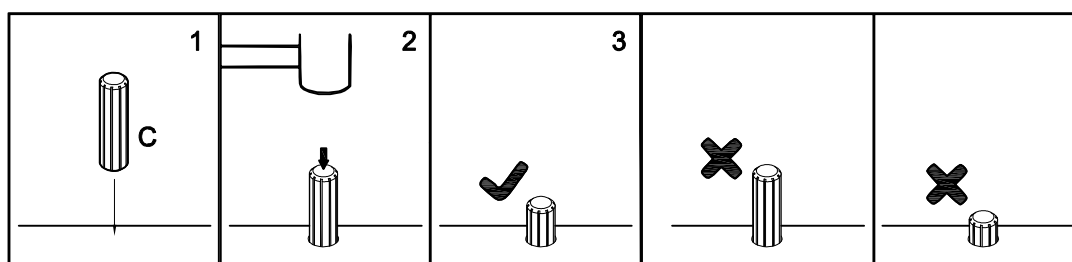


WARNING

- Unit must be placed on a level surface or leveled with included hardware (when applicable).
- Do not sit or stand on or allow children to climb, sit or stand on the assembled product.
- For safety reasons, it is imperative that this unit be mounted to the wall.
- Do not use without installing the tip restraint.
- Unit can tip over causing severe injury or death.
- Do not exceed the recommended weight limits.
- Evenly distribute the weight on each level and always keep the heavier loads on the bottom.
- Before cutting, drilling or hammering into any wall or floor surface, verify the location of electrical, plumbing and gas lines. Cutting may cause serious injury.



SUPPORT: +18882062161

STEP 1

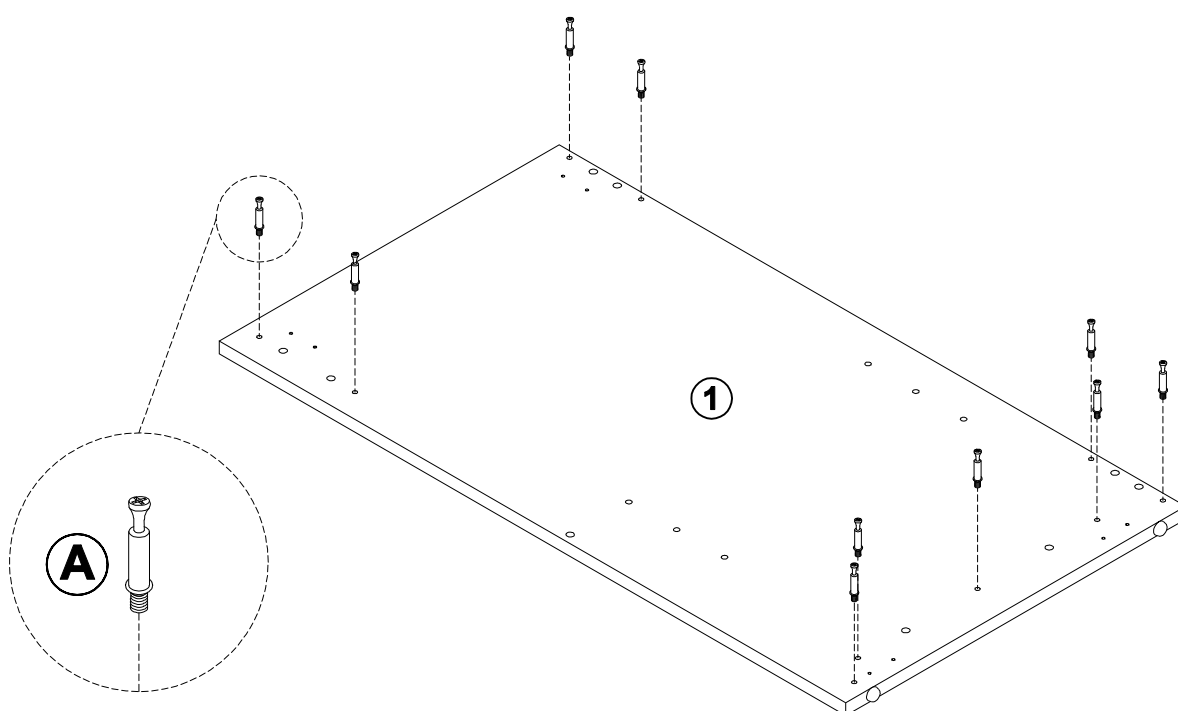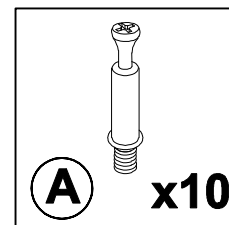




SUPPORT: +18882062161

STEP 2

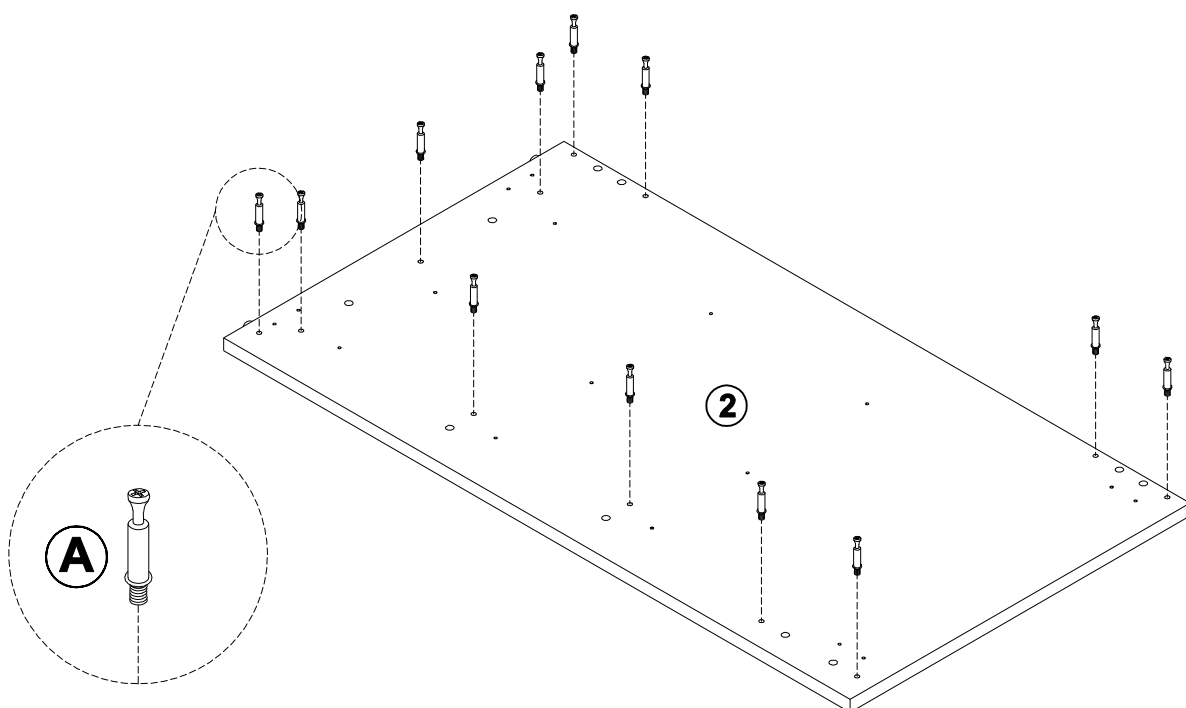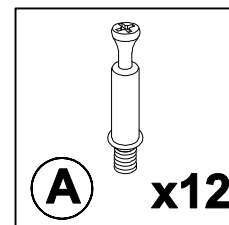





SUPPORT: +18882062161

STEP 3

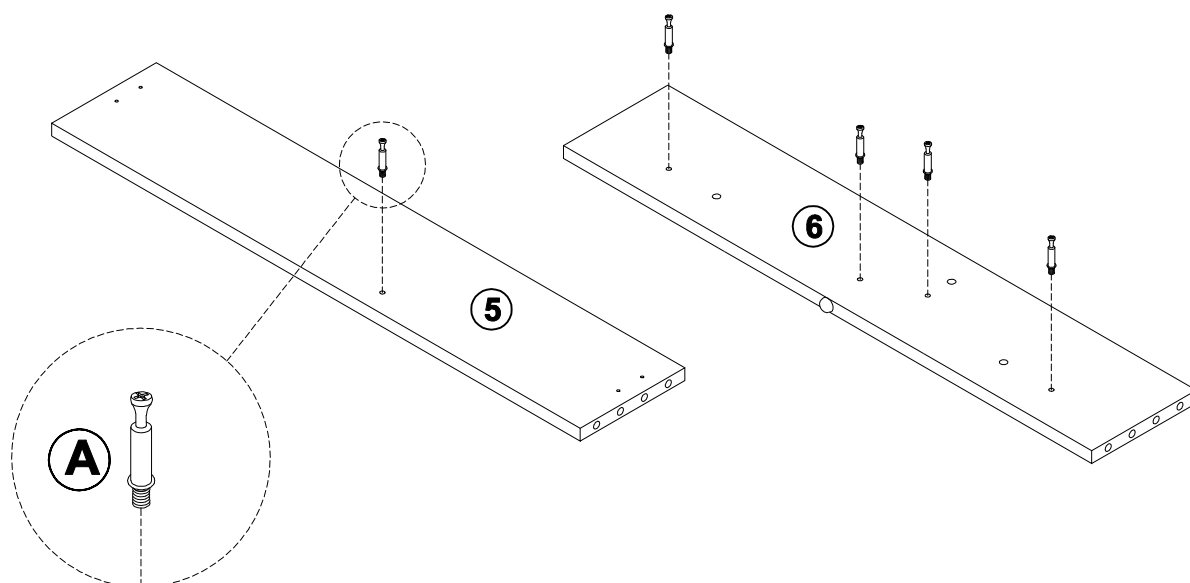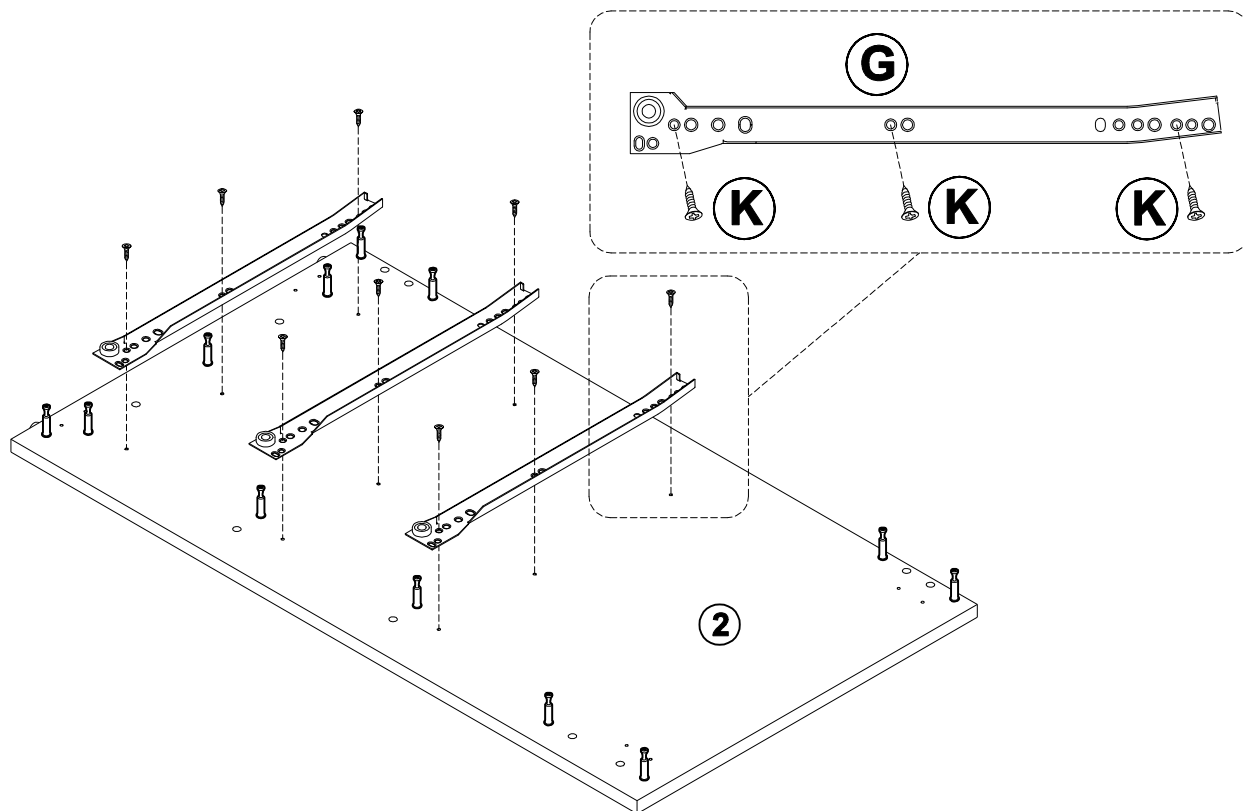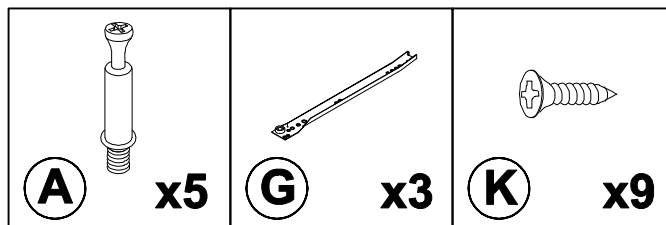



SUPPORT: +18882062161

STEP 4

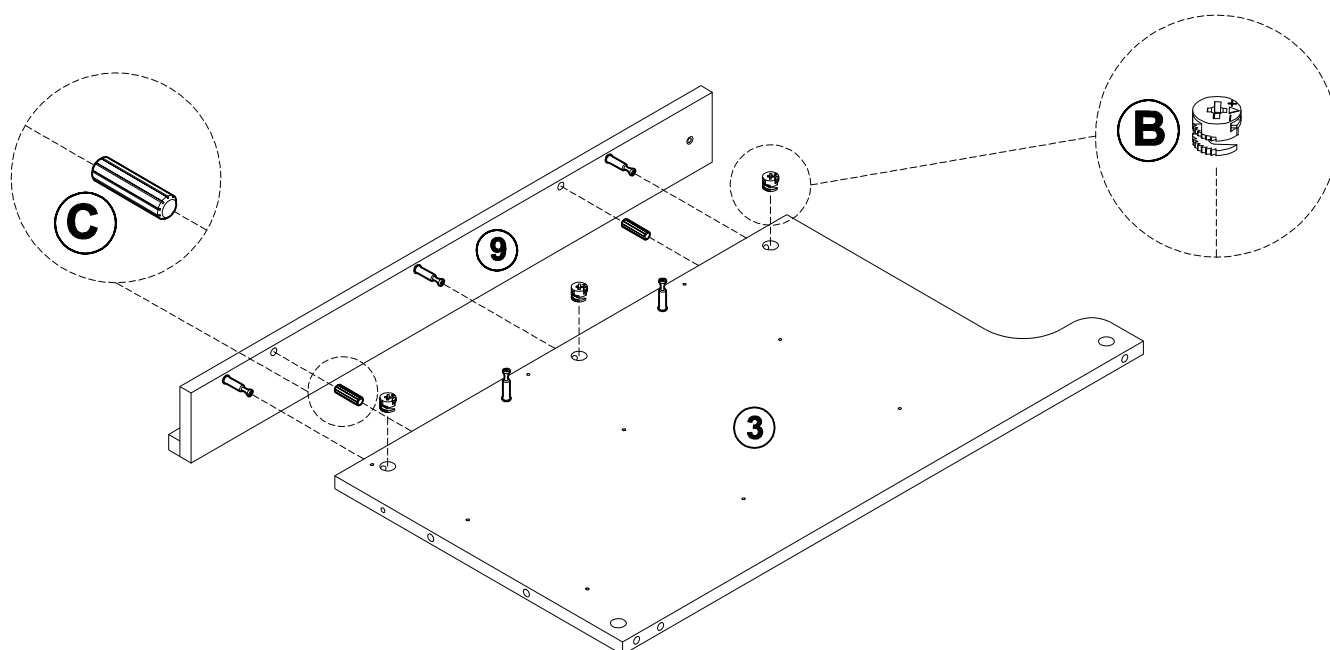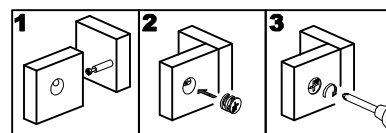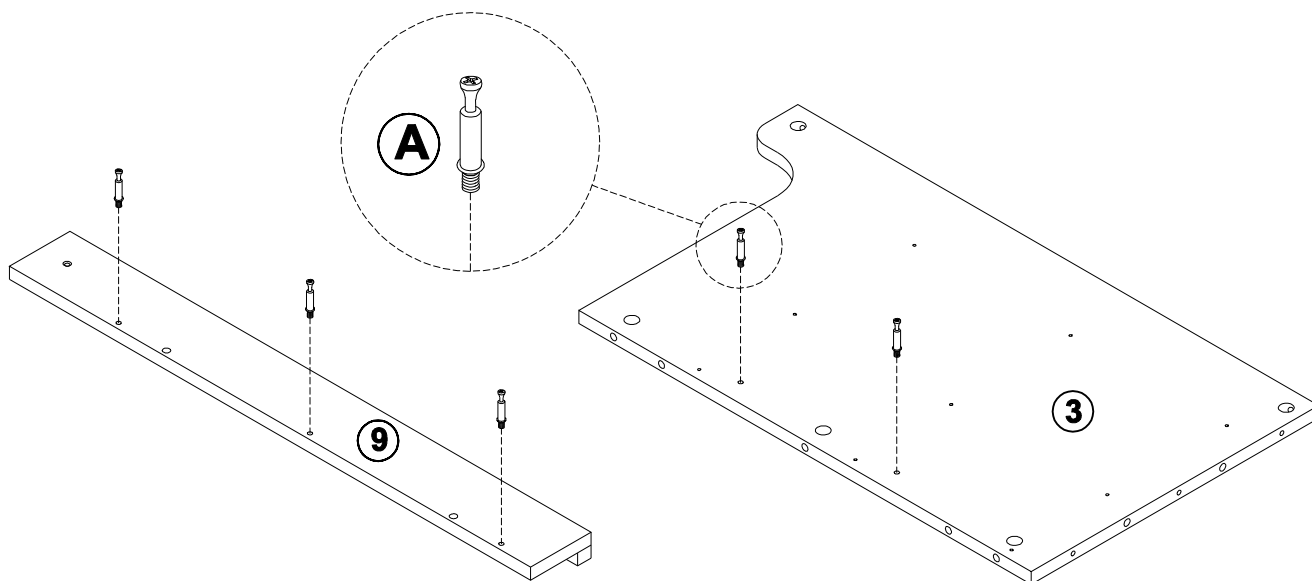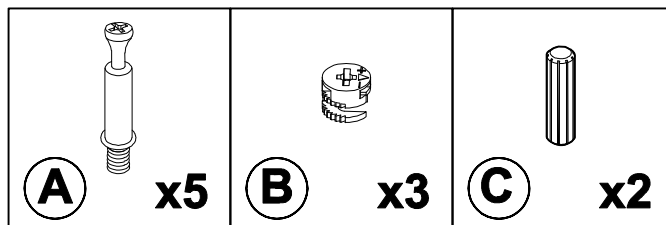



SUPPORT: +18882062161


STEP 5

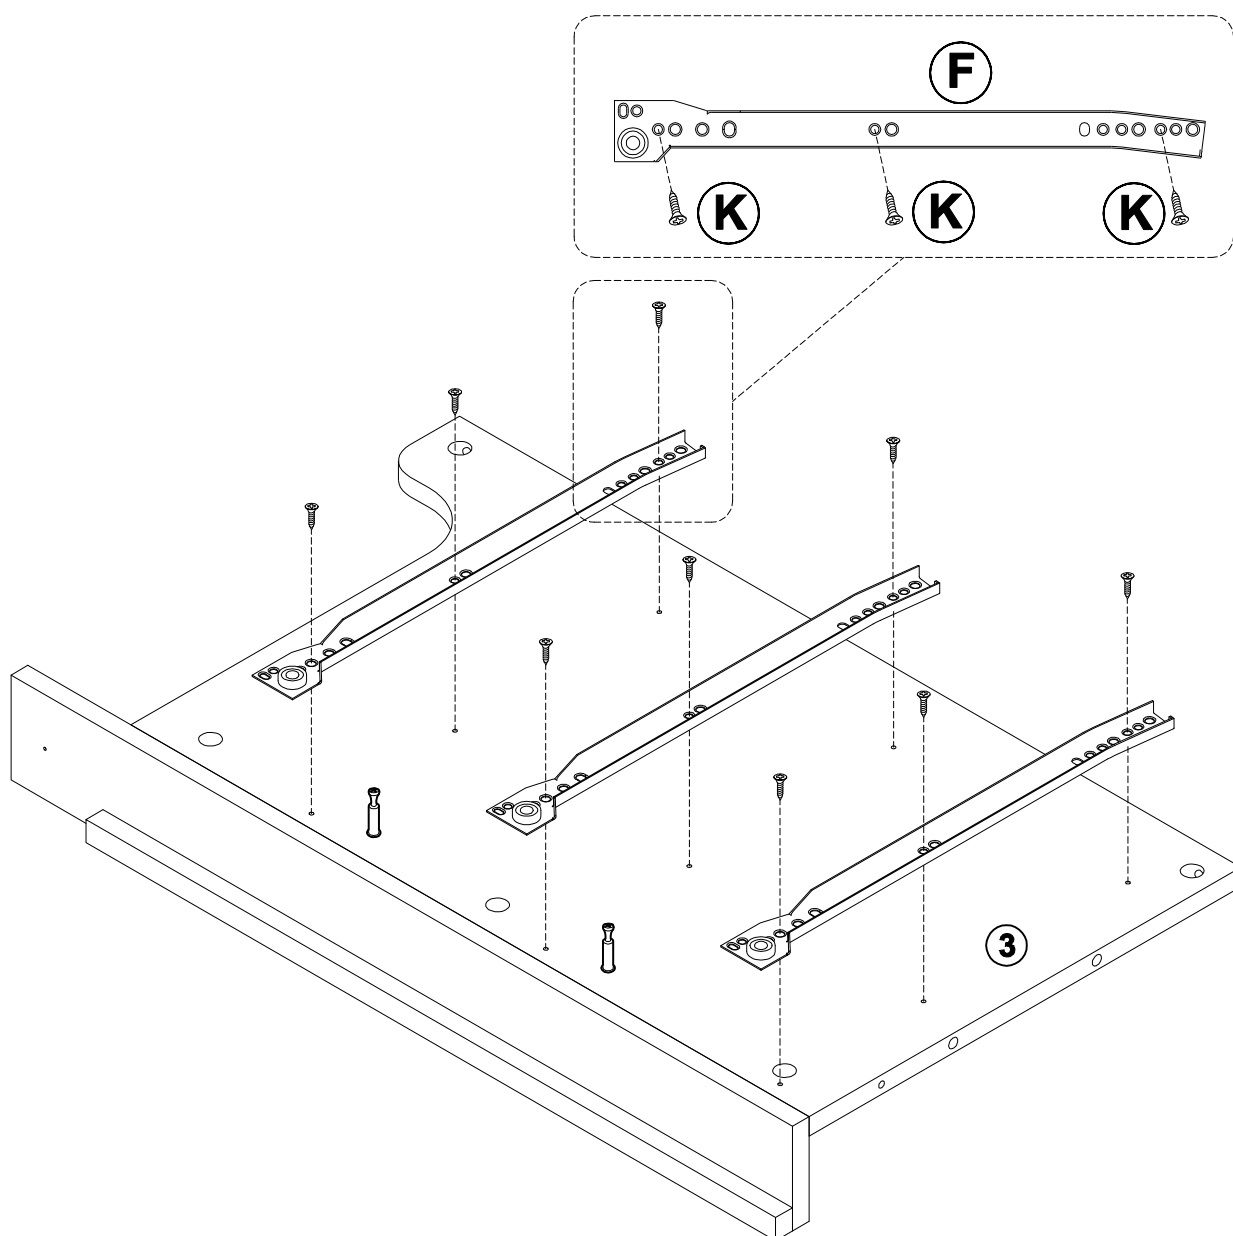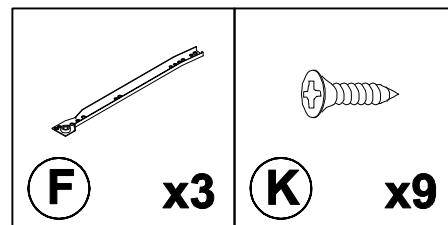

SUPPORT: +18882062161



STEP 6

			
(C) x2	(L) x1	(M) x4	(O) x3

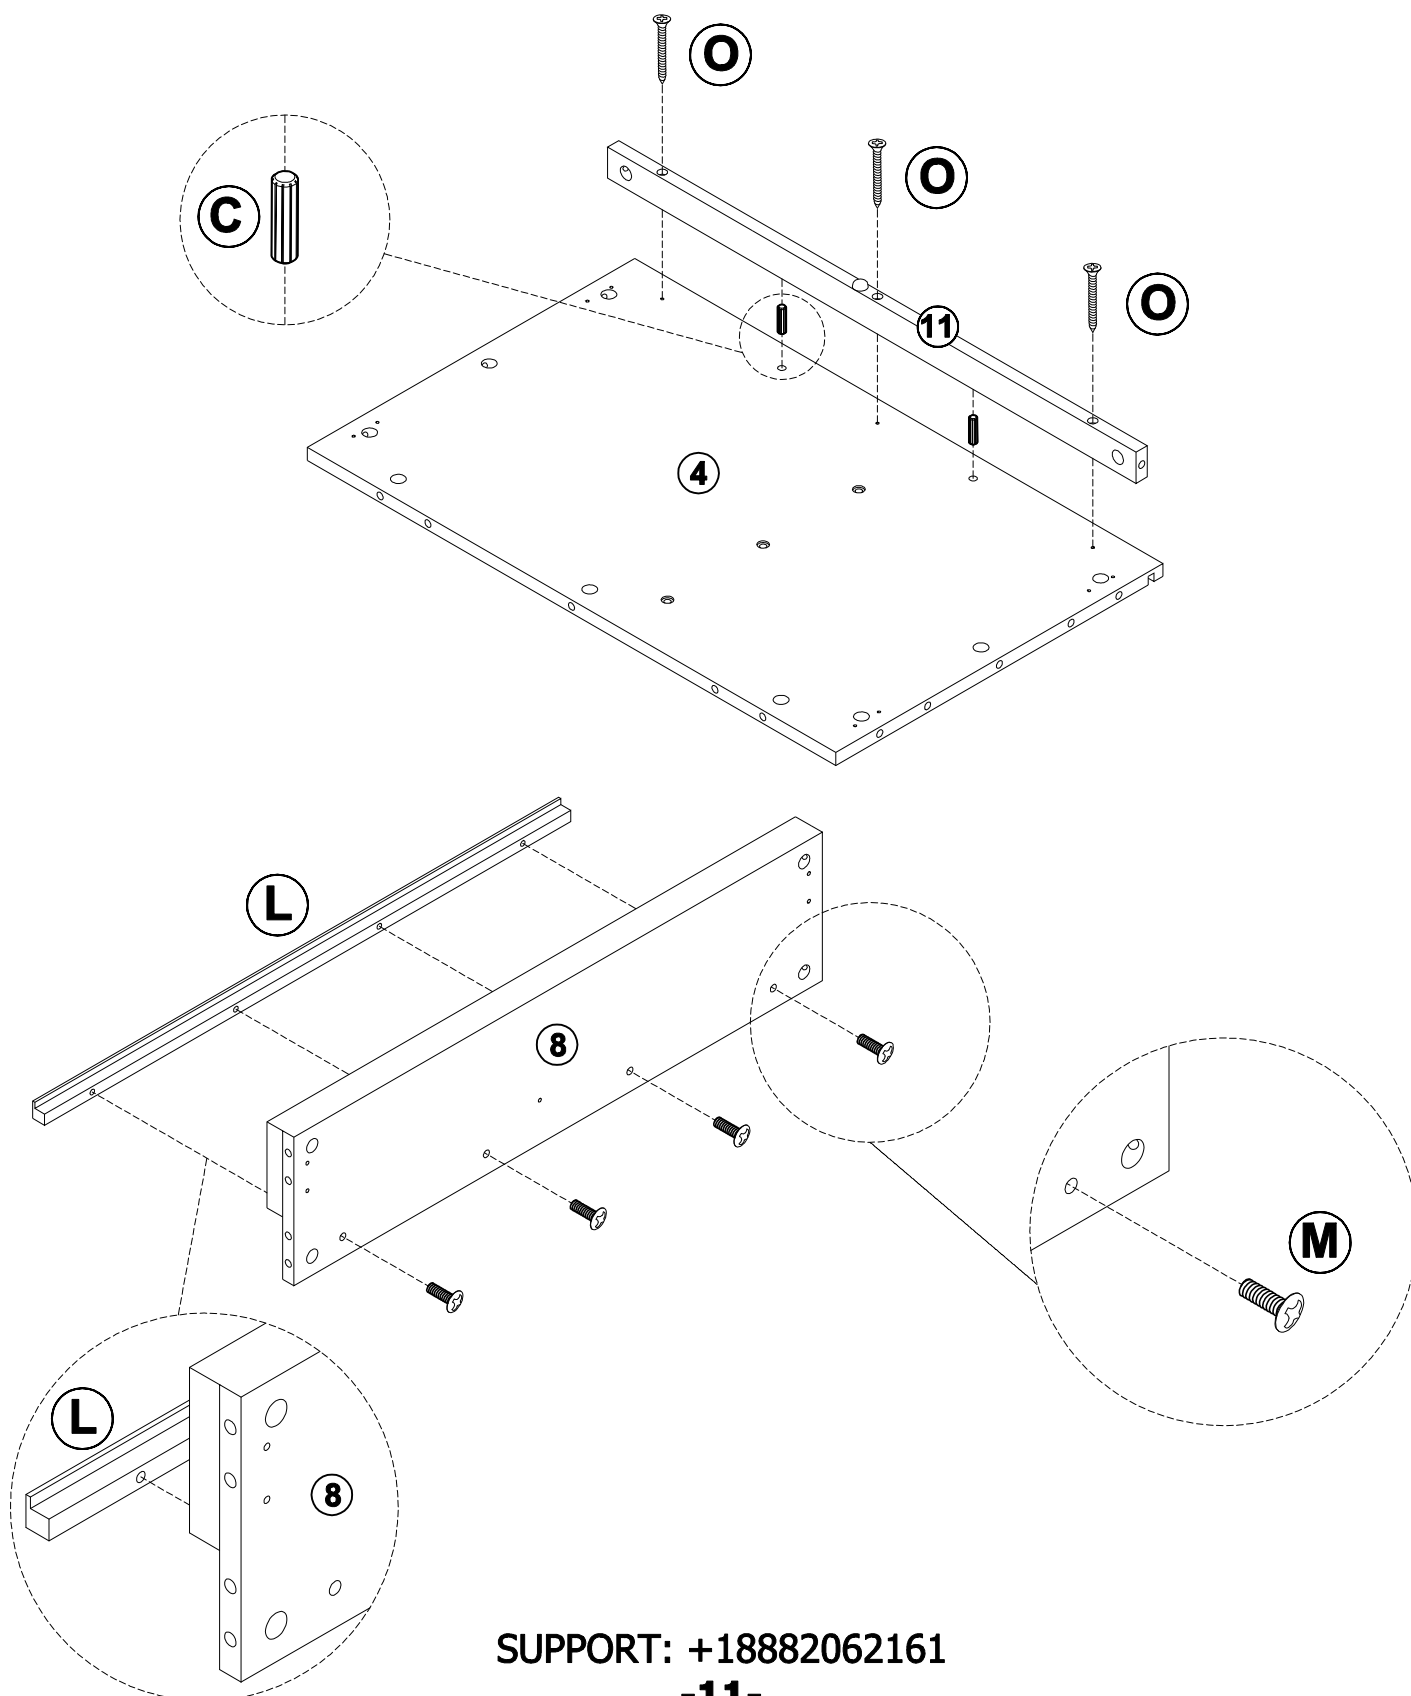




SUPPORT: +18882062161

STEP 7

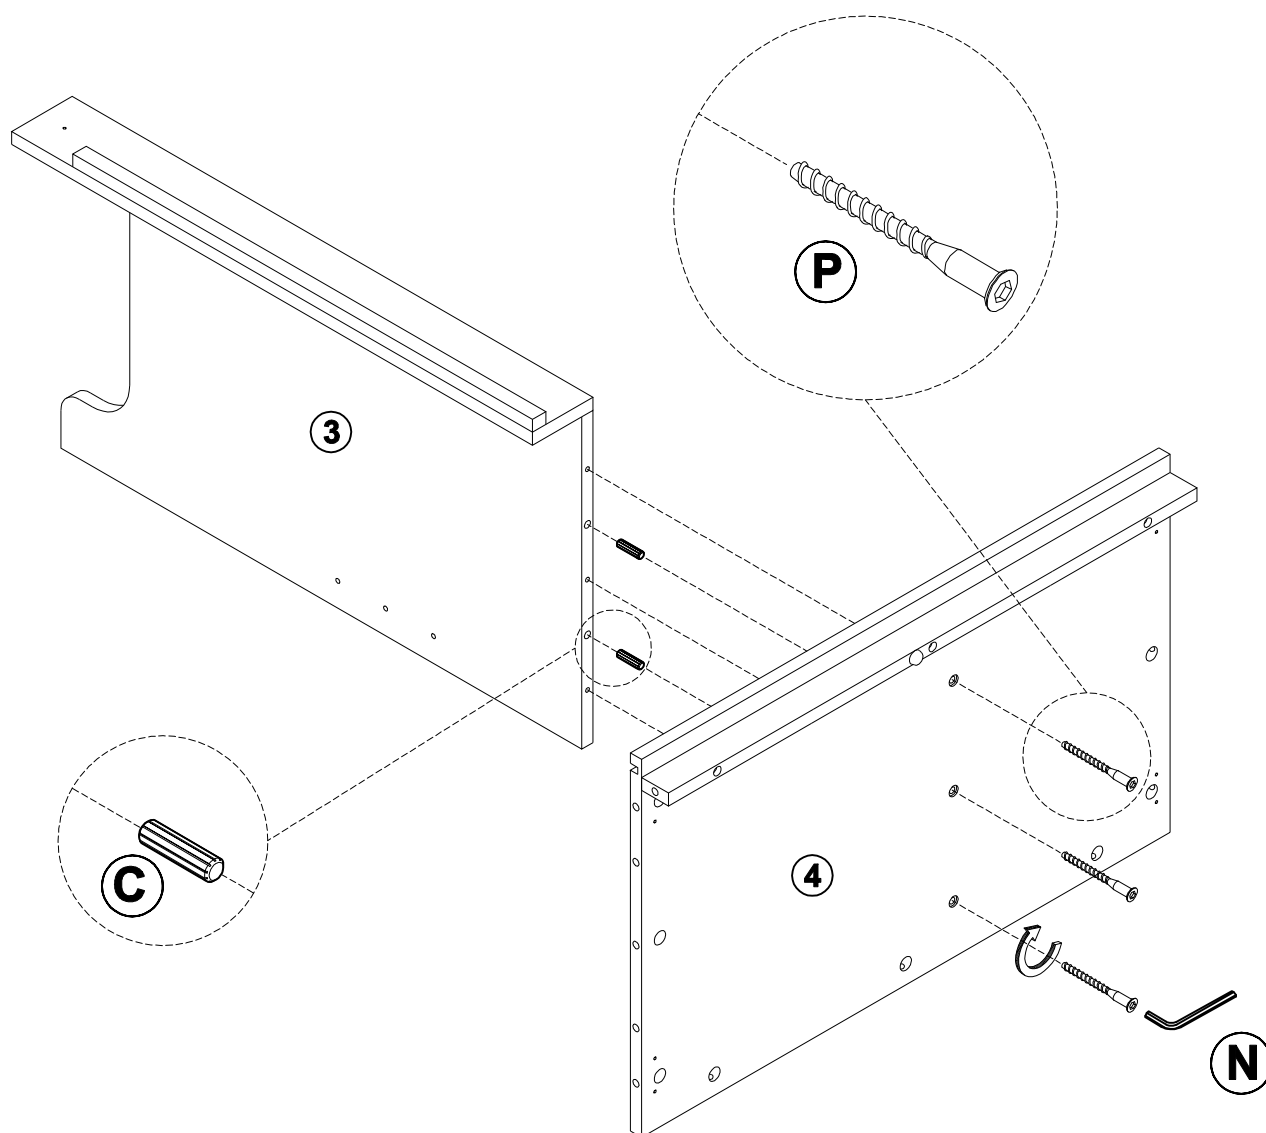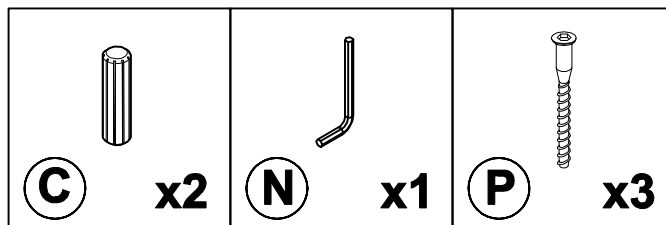




SUPPORT: +18882062161

STEP 8

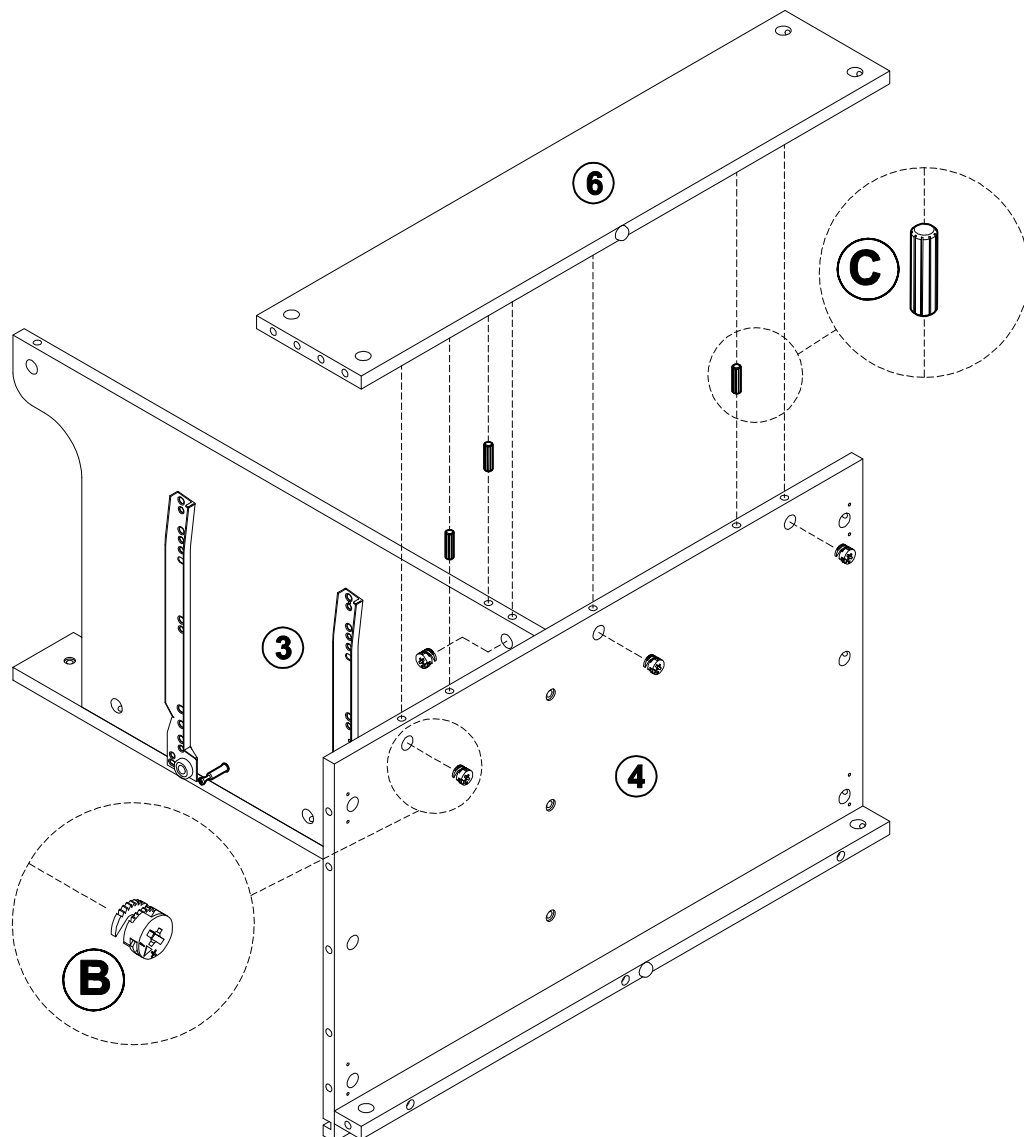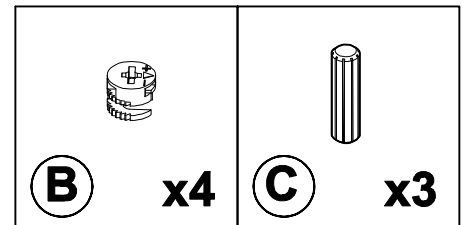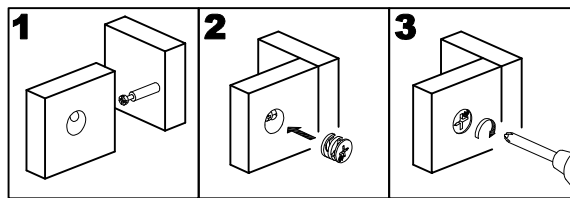




SUPPORT: +18882062161

STEP 9

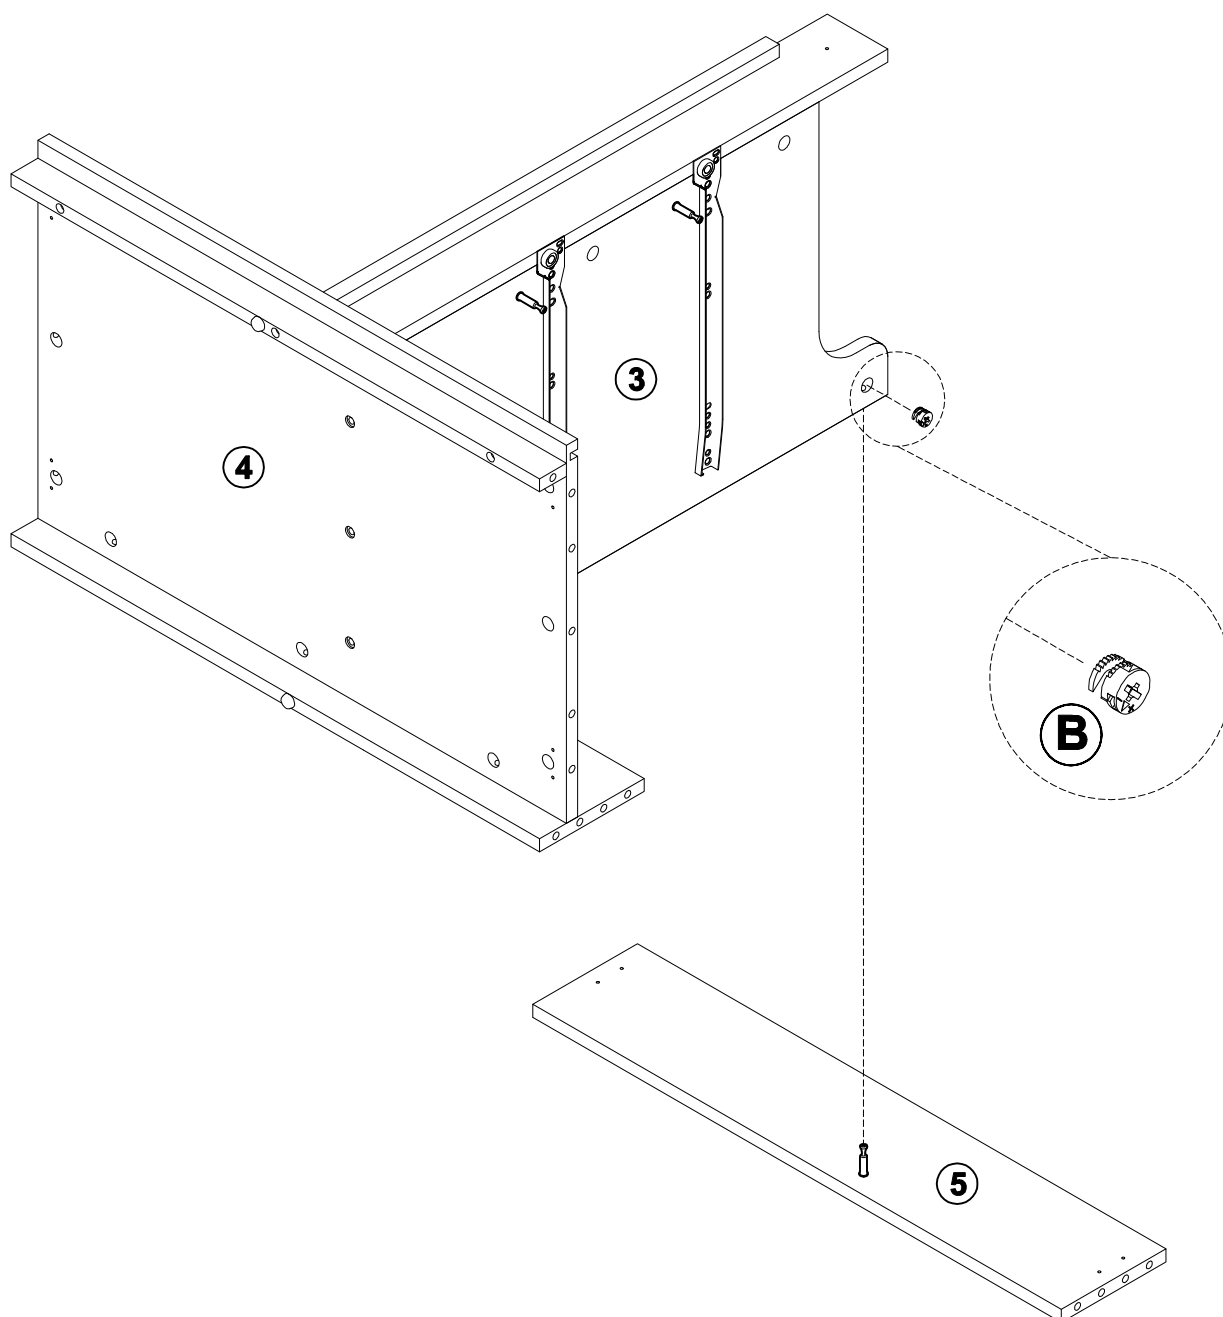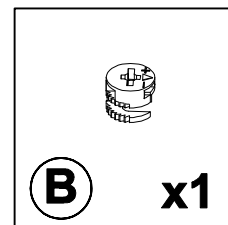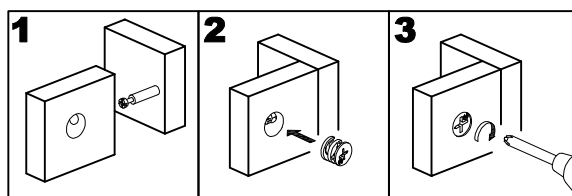




SUPPORT: +18882062161

STEP 10

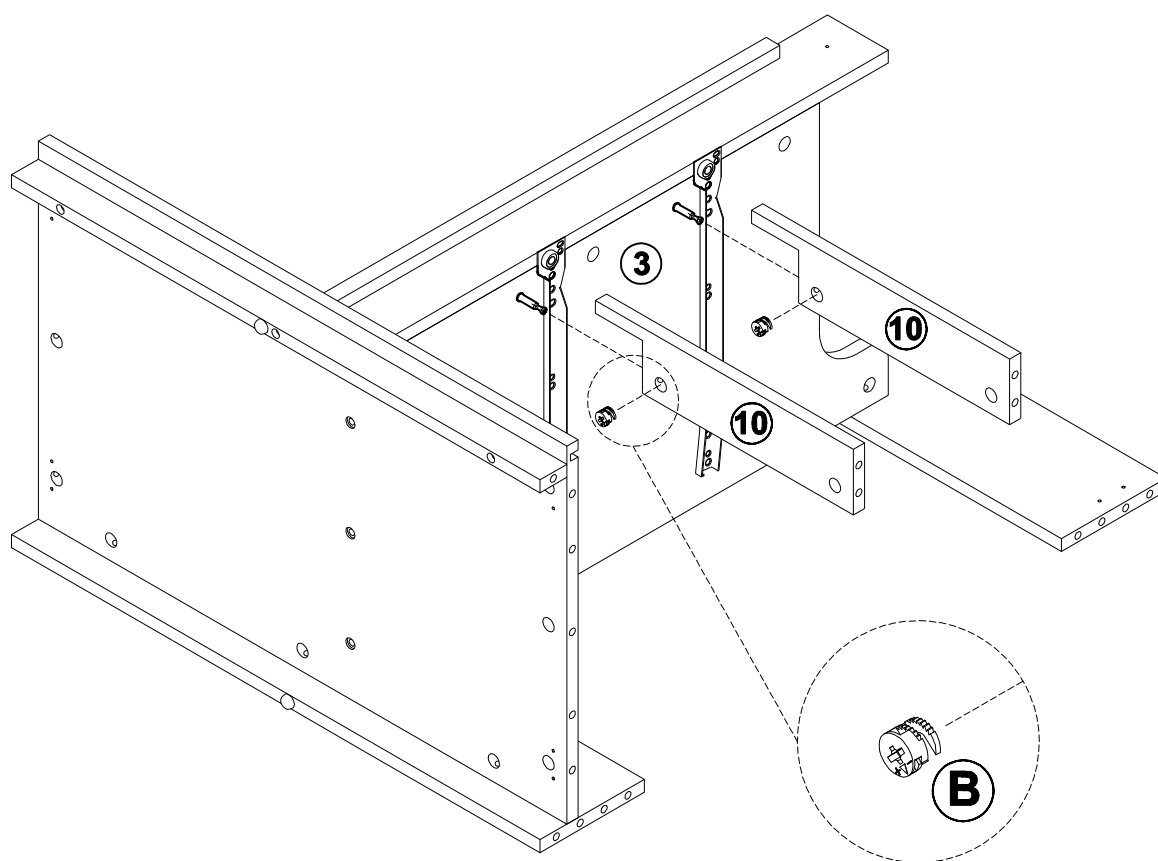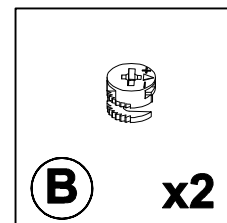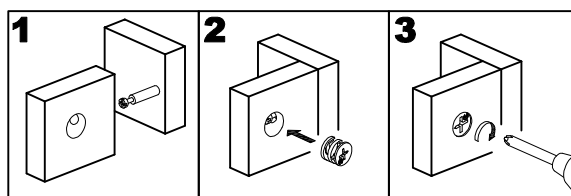




SUPPORT: +1882062161

STEP 11

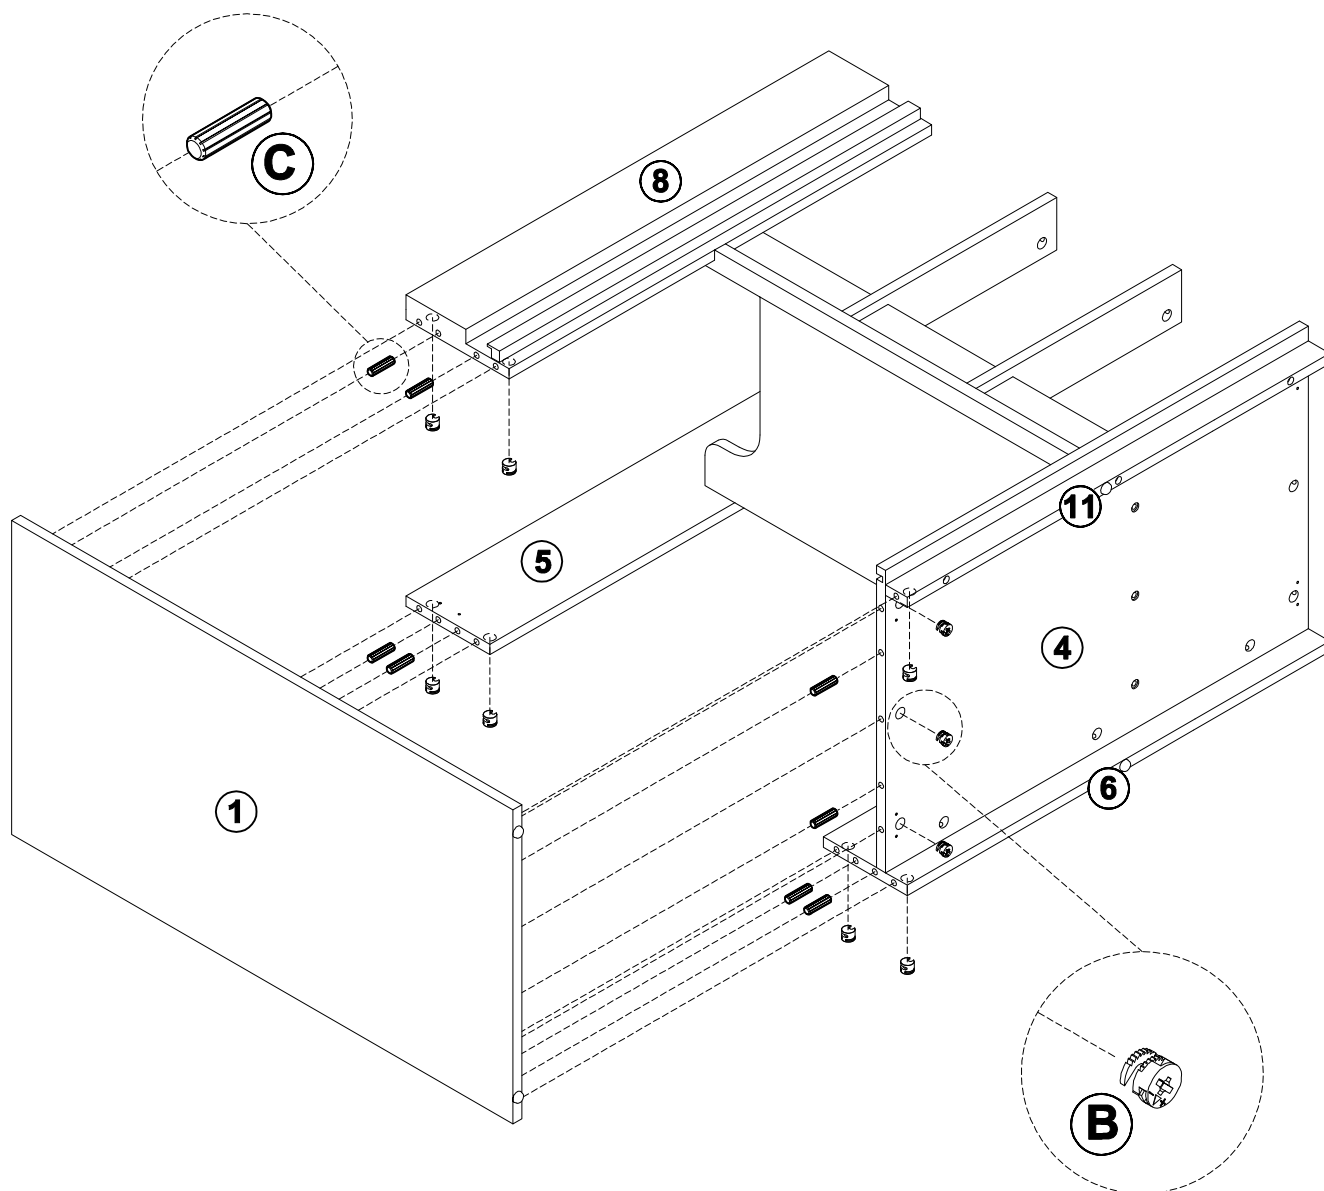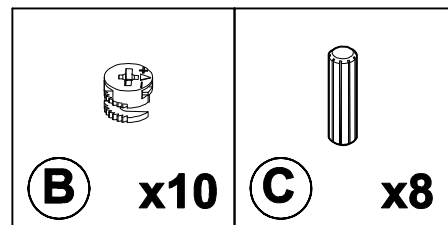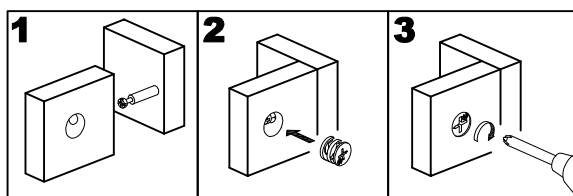



SUPPORT: +18882062161

STEP 12

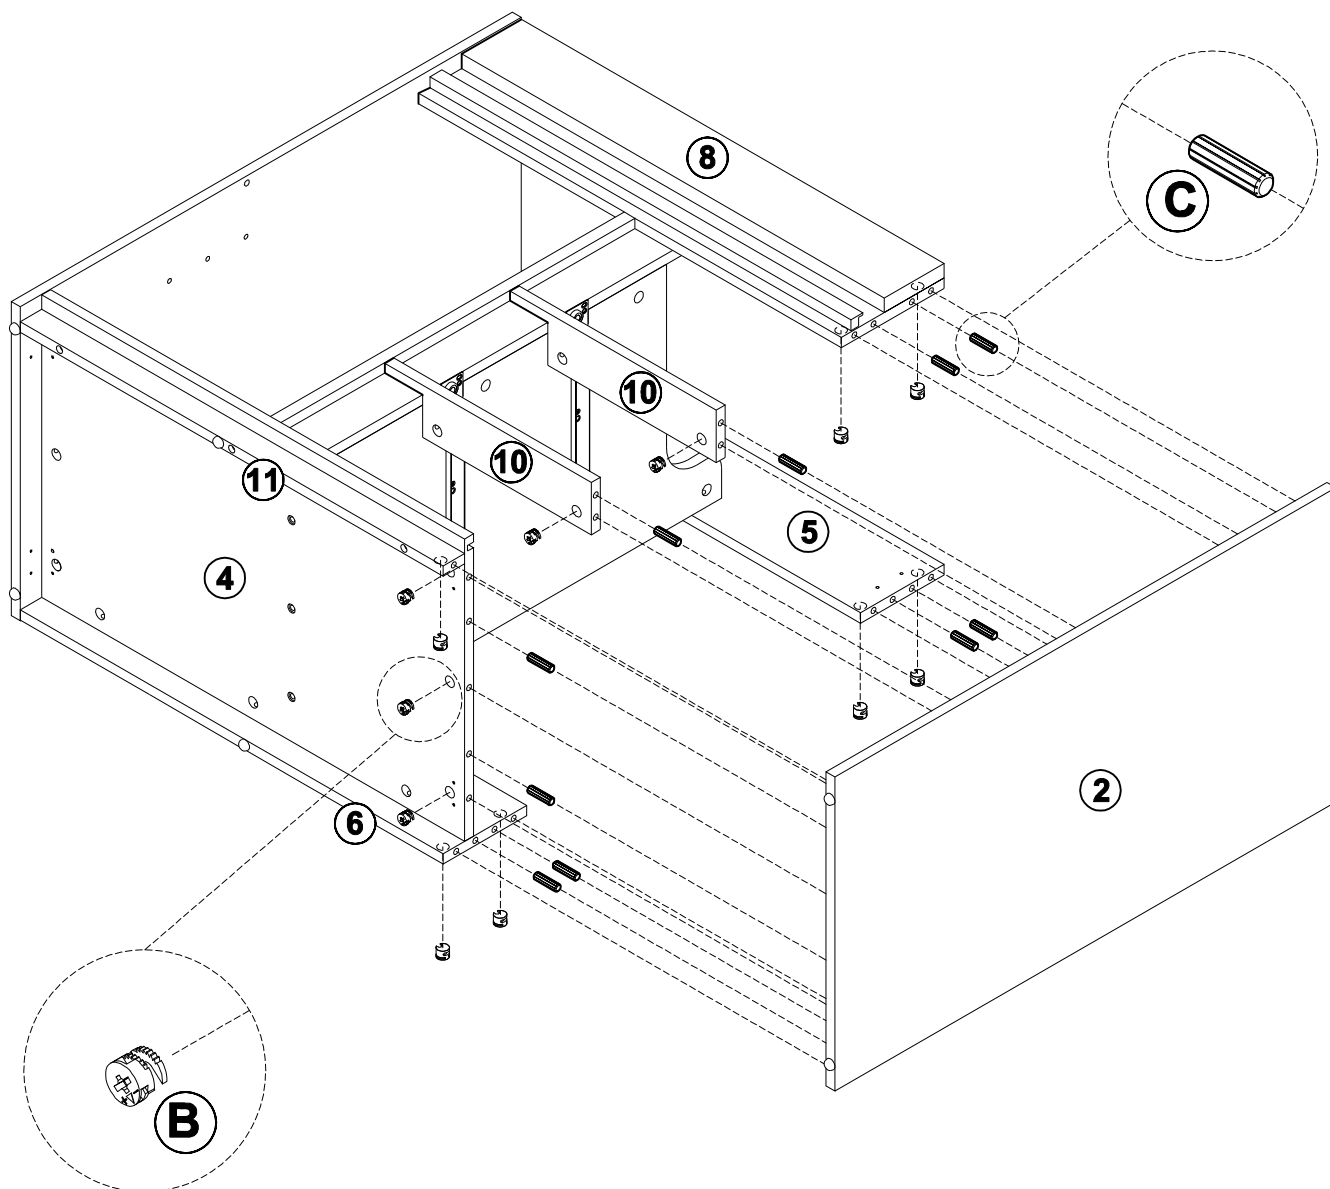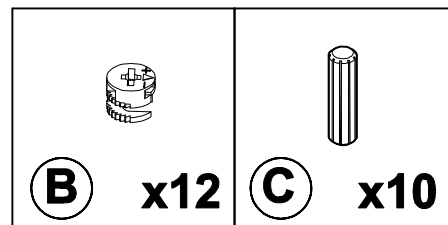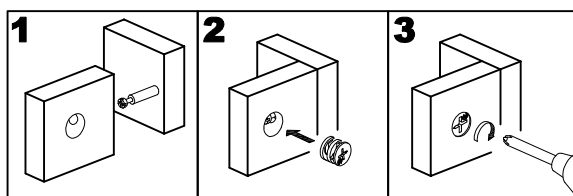



SUPPORT: +18882062161

STEP 13

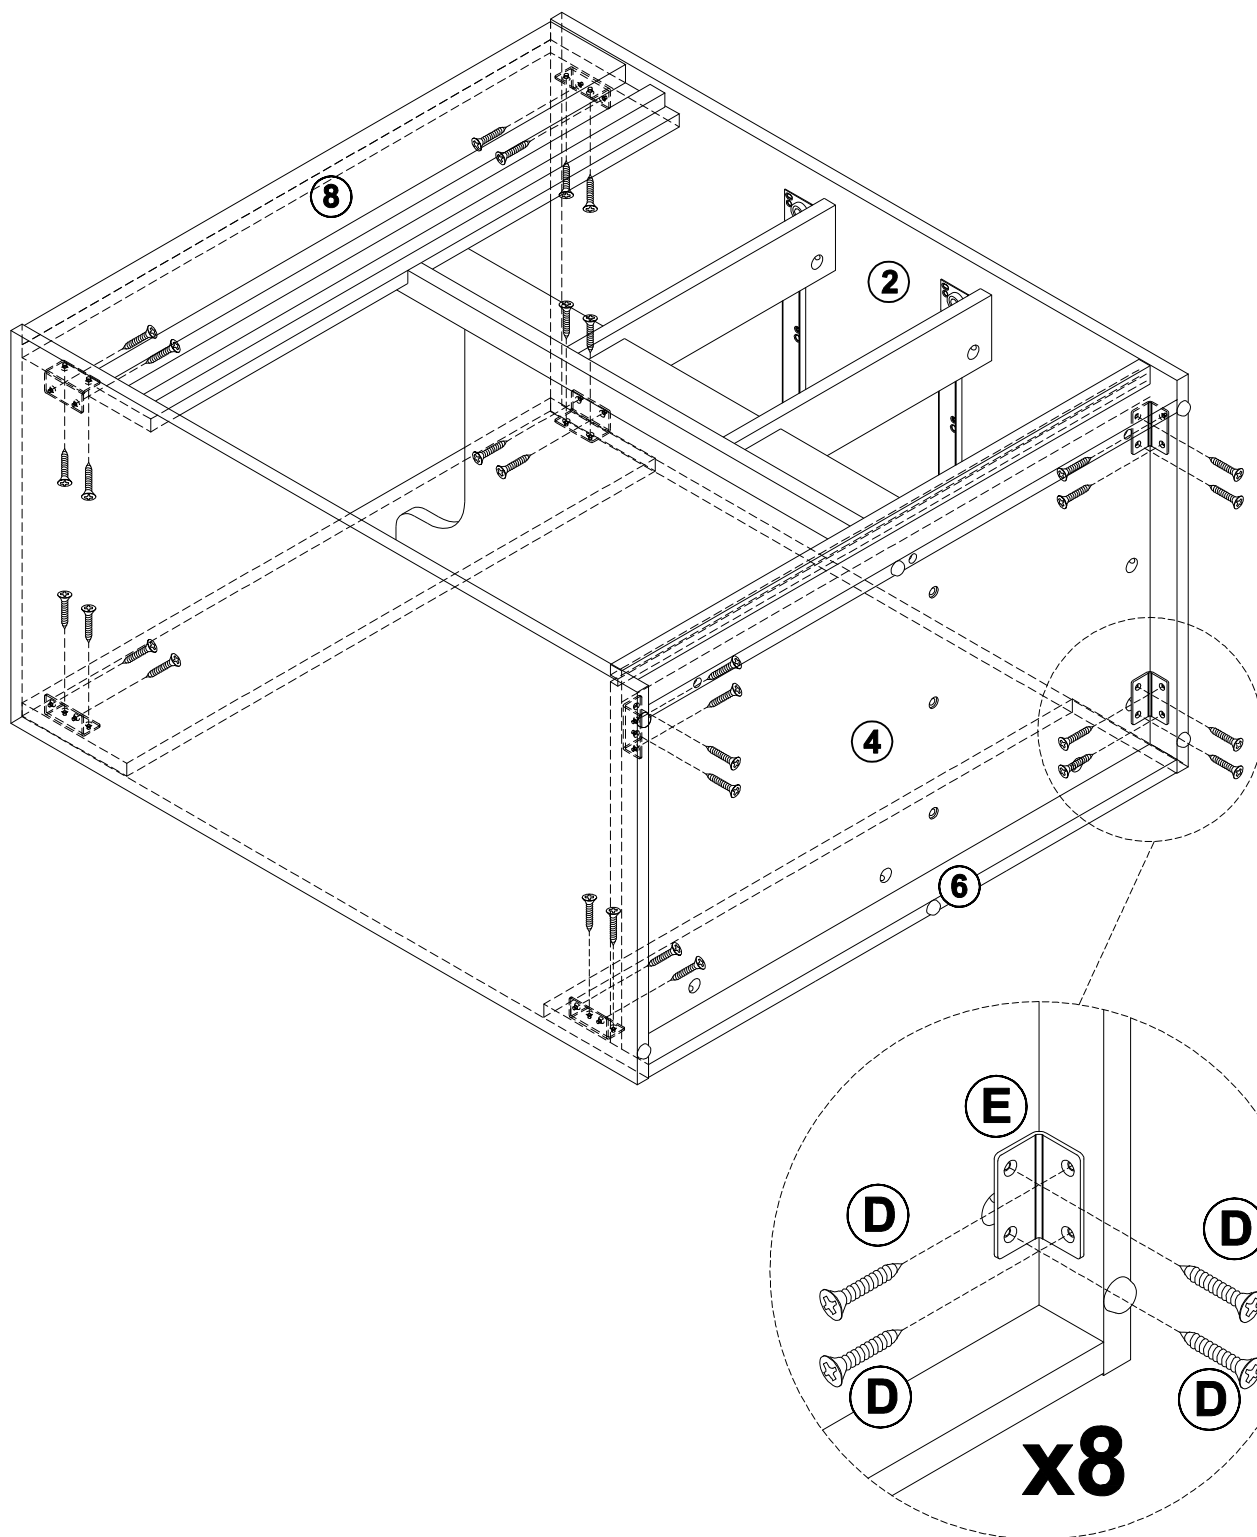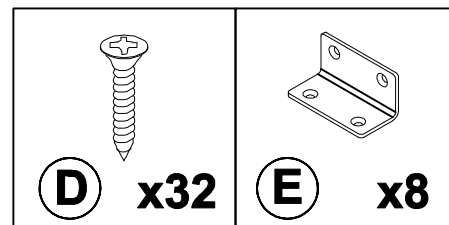




SUPPORT: +18882062161

STEP 14

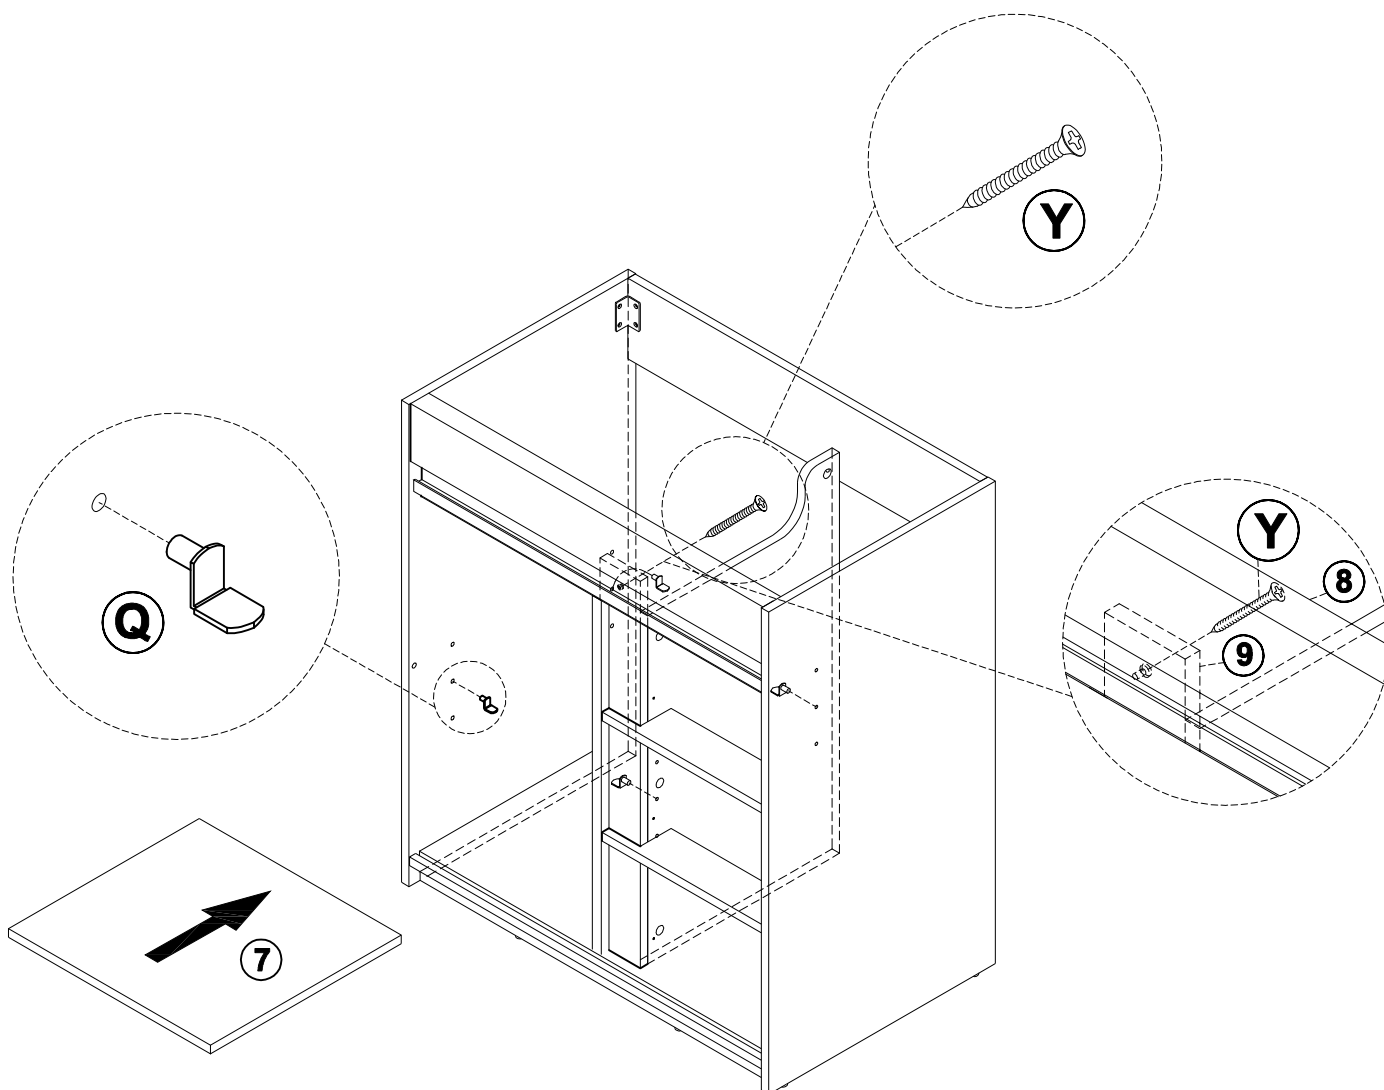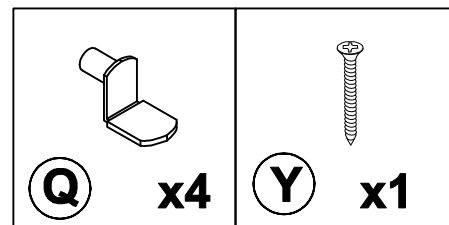



SUPPORT: +18882062161

STEP 15

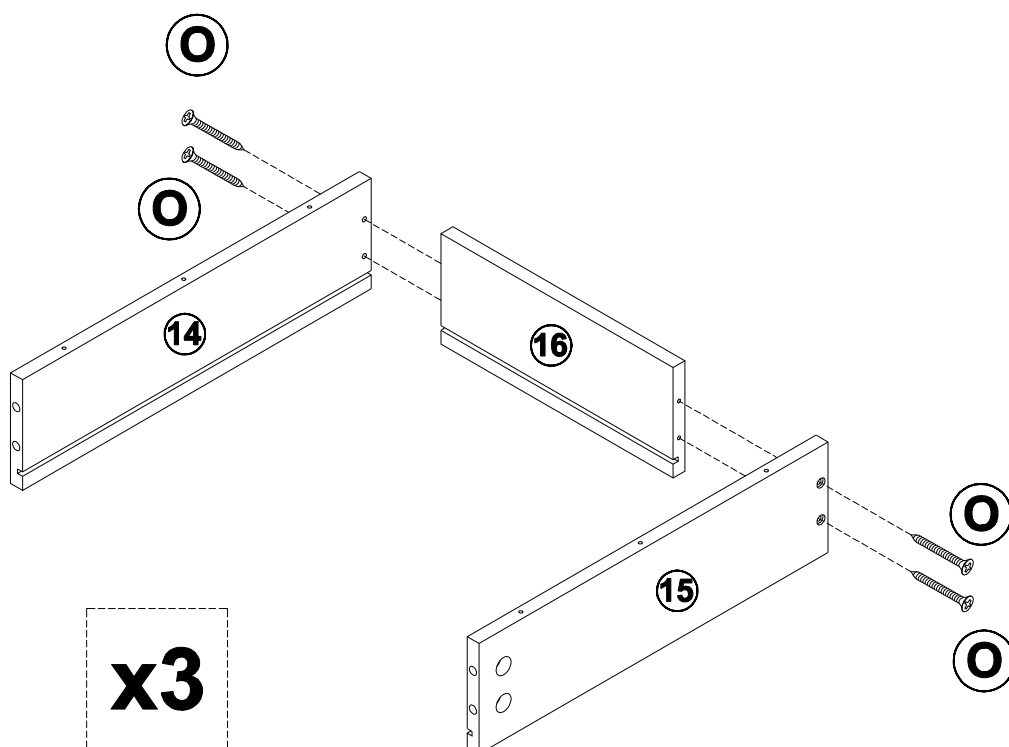
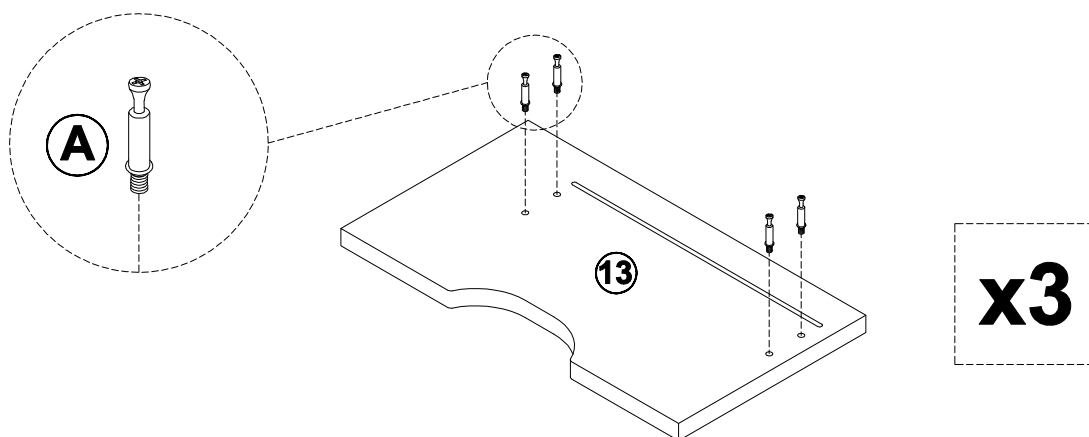
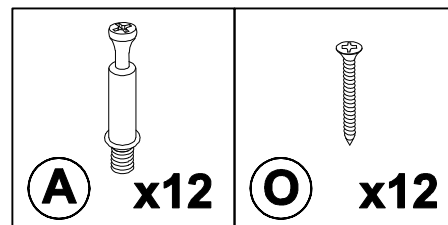


SUPPORT: +18882062161

STEP 16

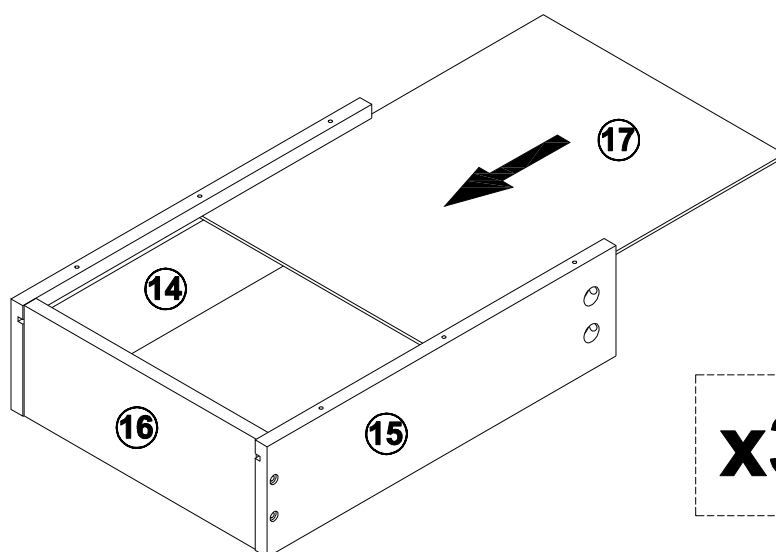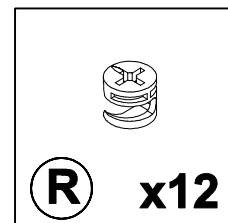



x3

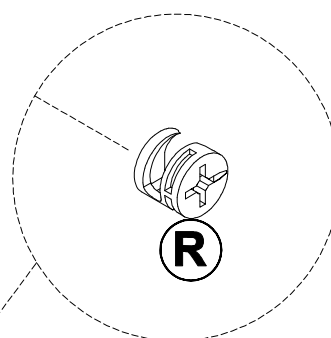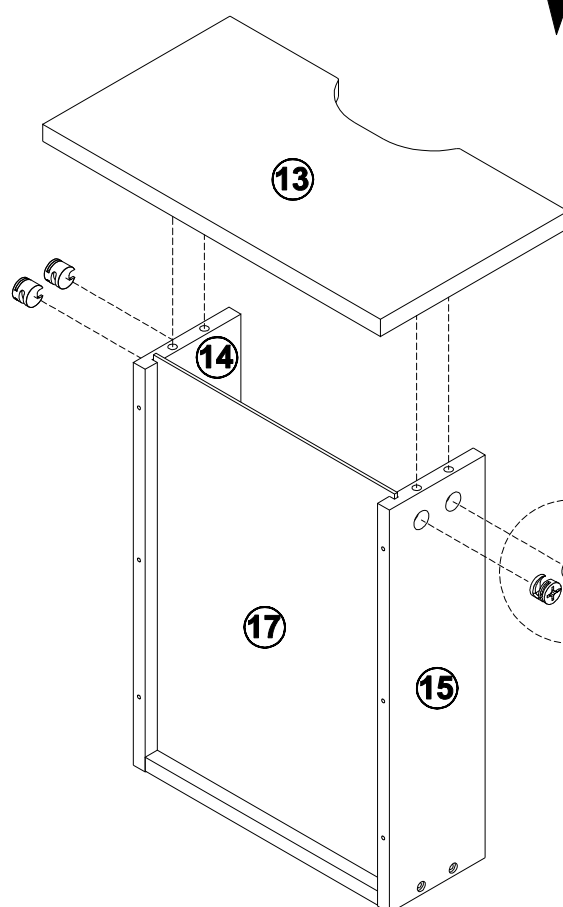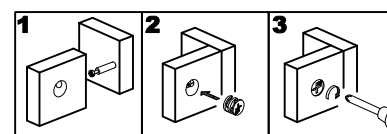

x3


SUPPORT: +18882062161

STEP 17

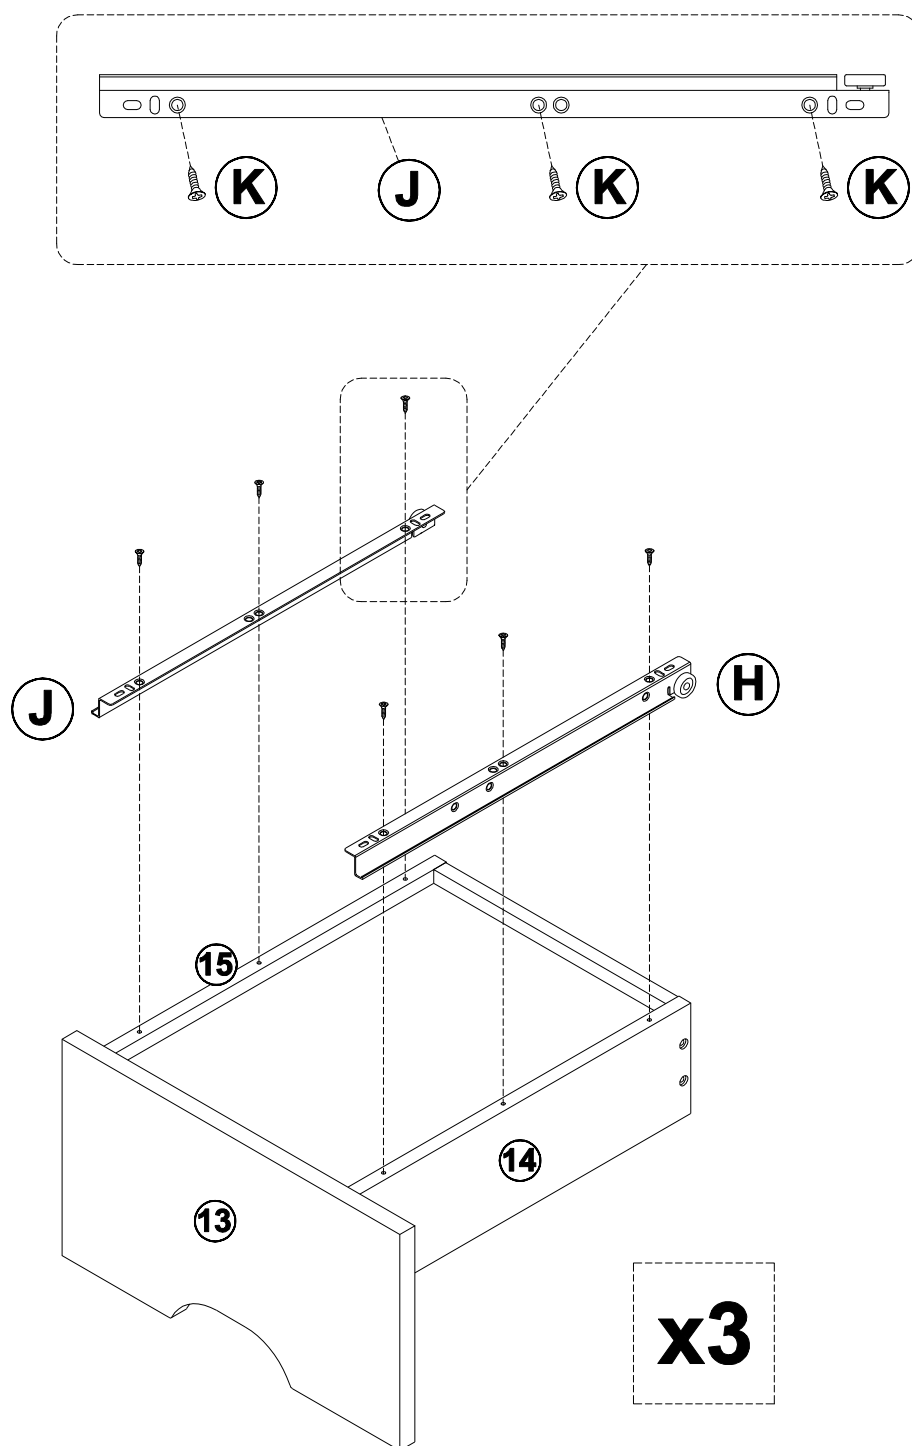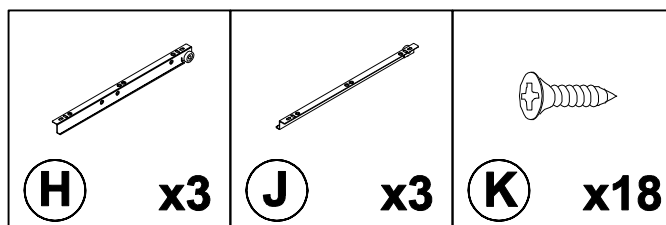




SUPPORT: +18882062161


STEP 18

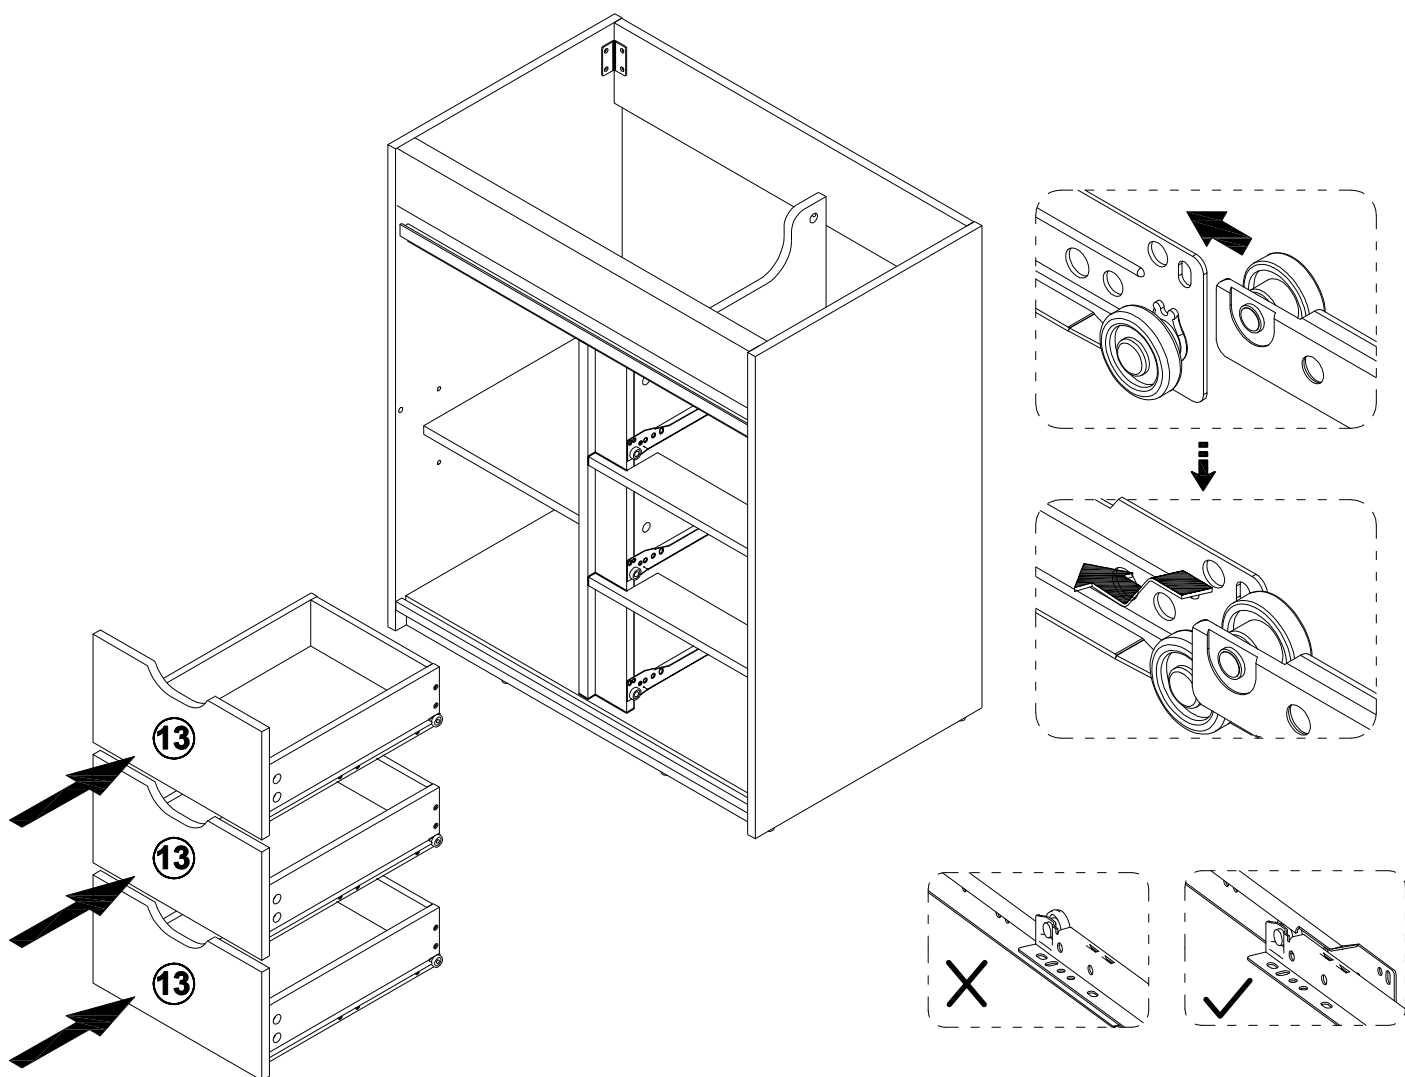

SUPPORT: +18882062161


STEP 19

			
(S) x2	(T) x2	(U) x4	(V) x4
			
(W) x1	(X) x1	(Z) x1	

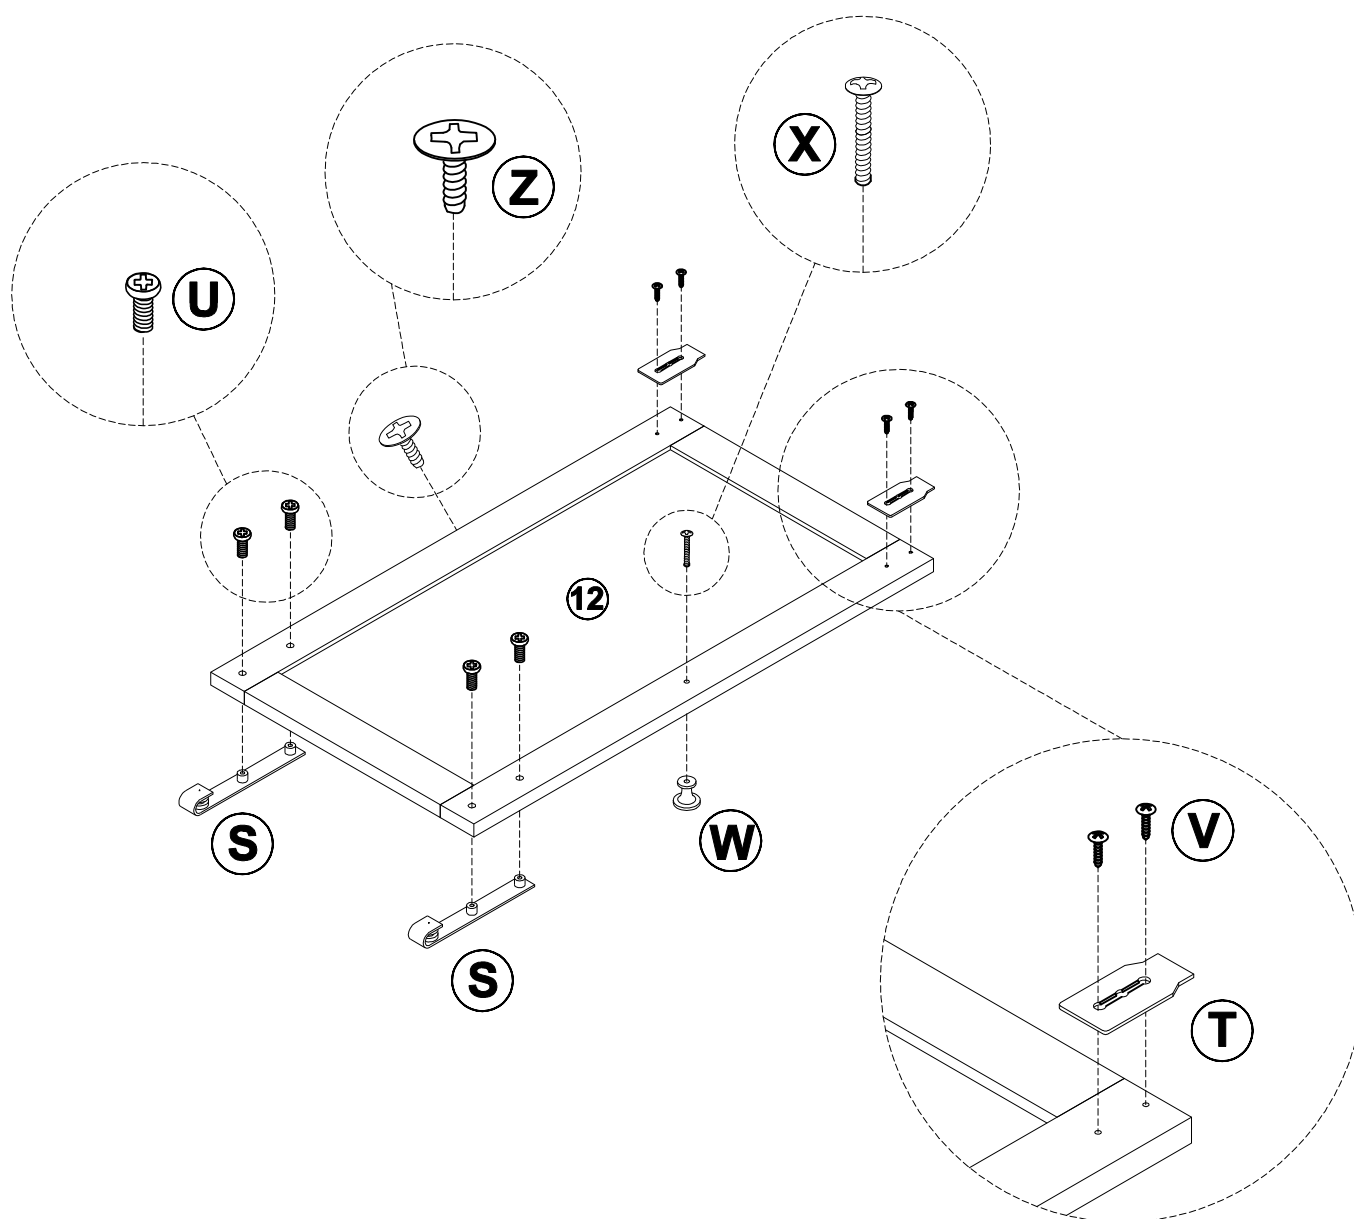

SUPPORT: +18882062161


STEP 20

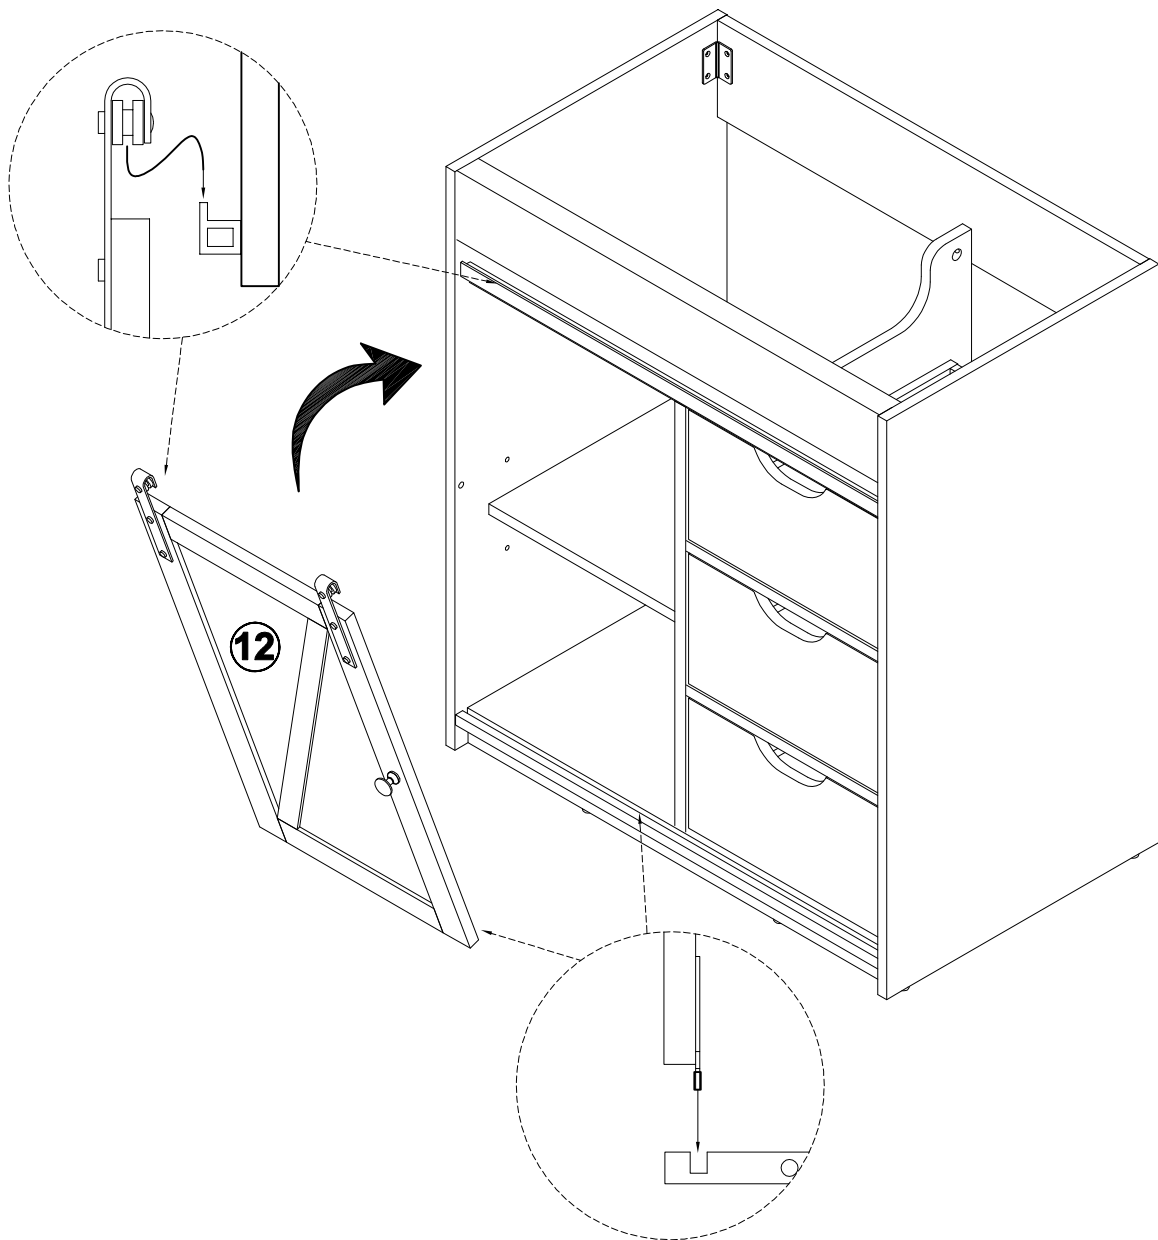

SUPPORT: +18882062161

STEP 21

Tear the 3M adhesive paper during installation.
The cabinet should be sealed with glass glue and basin.

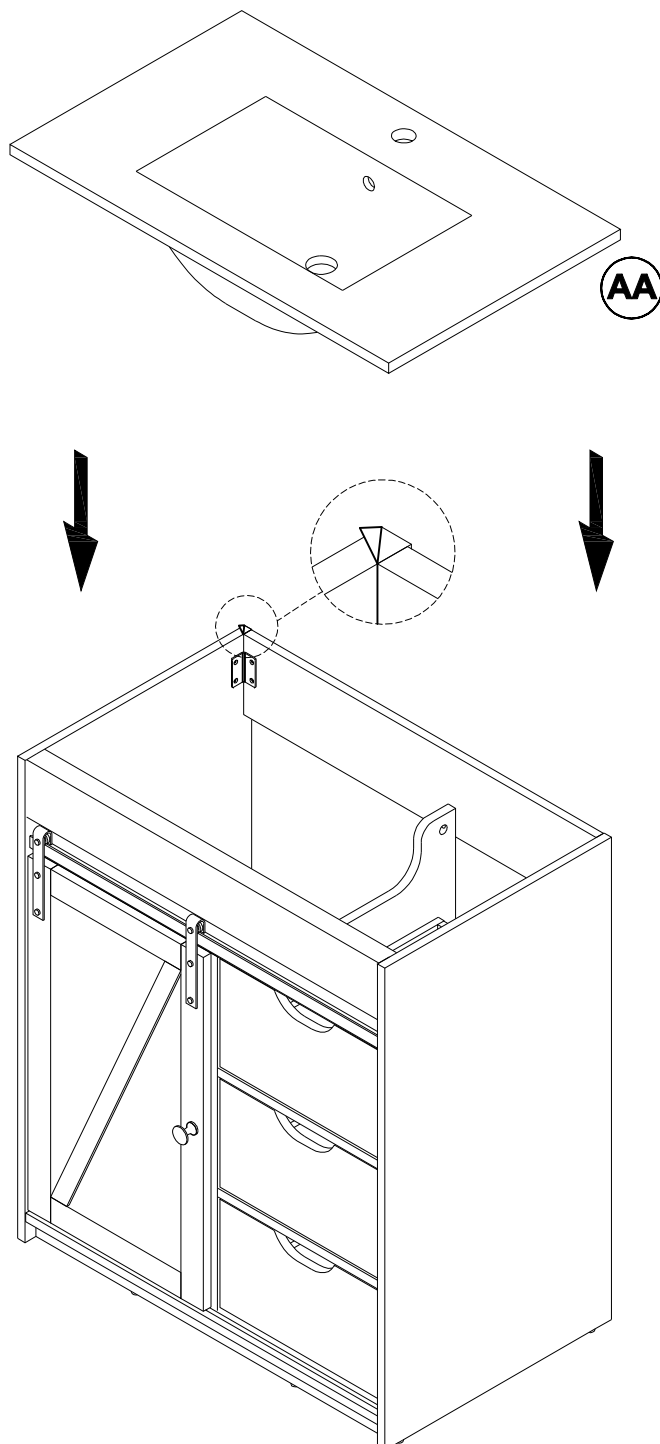

SUPPORT: +18882062161