



Sequoia Professional Counter Height Muskoka Chair

Assembly Guide

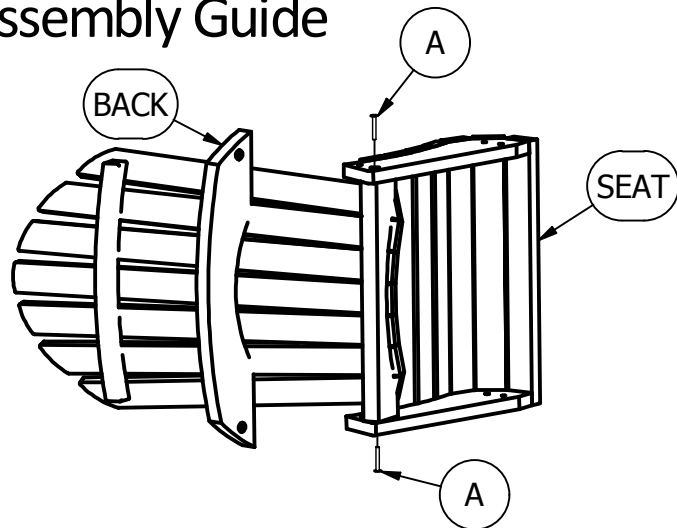


- 1)** Insert (1) "A" Bolt into Lower Hole on Each Side to Attach Seat to Back. Make Sure the Back is Fully Upright. Make Bolts Snug, but Do Not Overtighten.

NOTE: Arm Goes on Top of Back Support

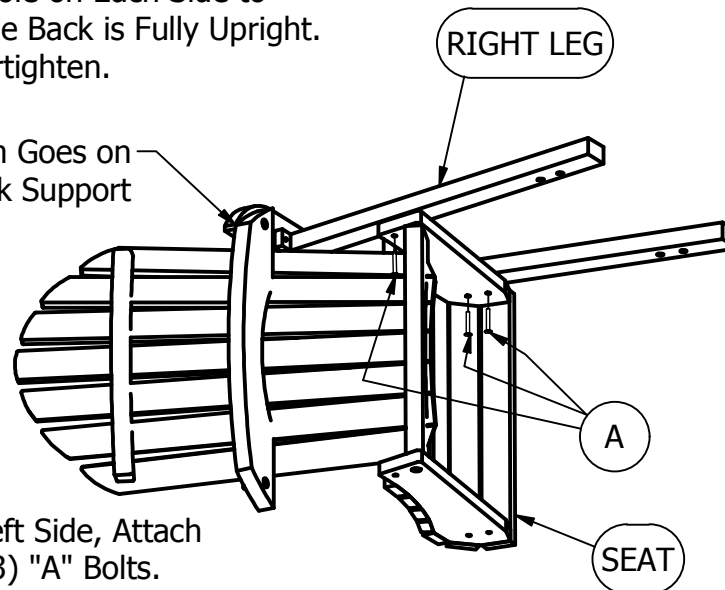

- 2)** With the Chair Laying on its Left Side, Attach the Right Leg to the Seat Using (3) "A" Bolts.

HARDWARE

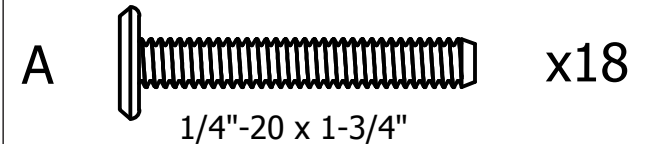


IMPORTANT!

DO NOT fully tighten the bolts until all bolts are started. Once all bolts are inserted, go back & tighten all the bolts.

Retain these instructions for future reference

INCLUDED TOOLS

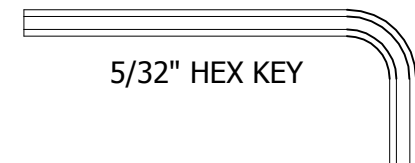

SEQUOIA
PROFESSIONAL
by **highwood**®


For information on Care and Cleaning or to register your SEQUOIA PROFESSIONAL product by *highwood*®, please visit www.highwood-usa.com.

CM-CHRSQC2
03.05.19

PAGE 1 OF 2

Sequoia Professional Counter Height Muskoka Chair

Assembly Guide

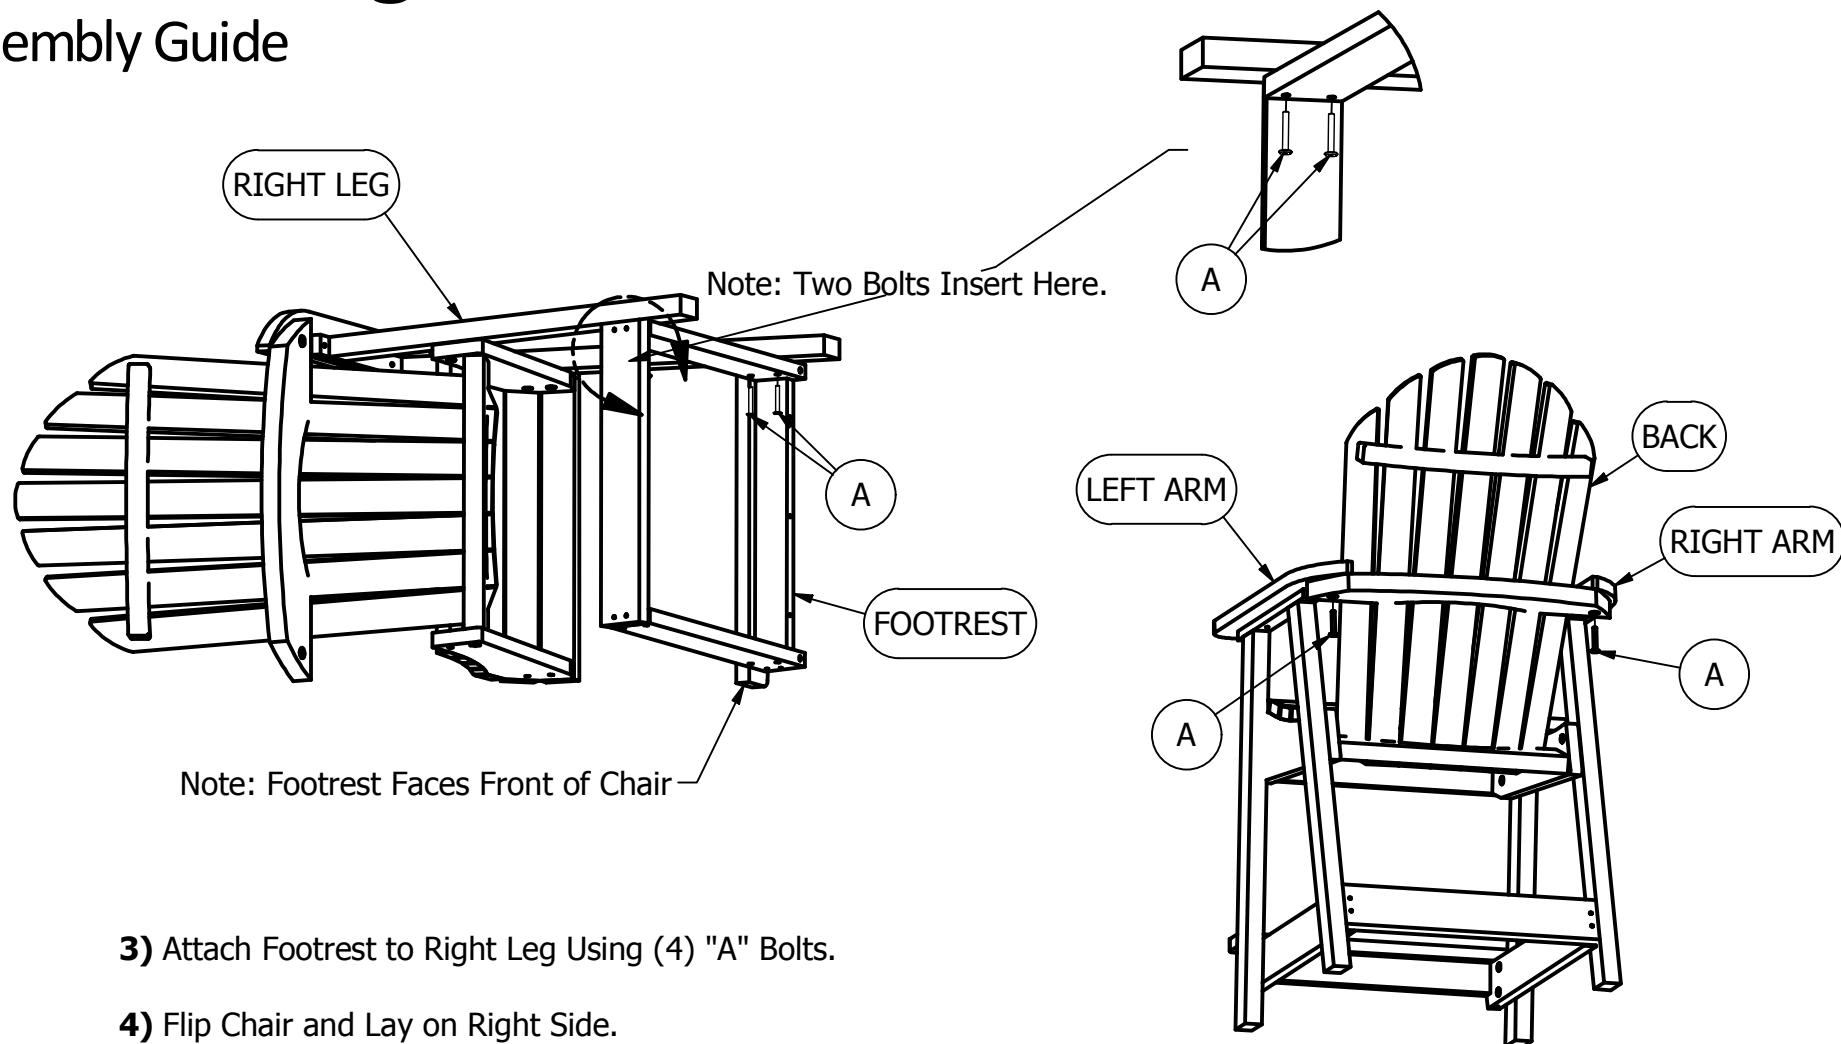

3) Attach Footrest to Right Leg Using (4) "A" Bolts.

4) Flip Chair and Lay on Right Side.
Repeat Steps 2 and 3 for Left Leg.

5) Attach Arms to the Back Using (2) "A" Bolts.

6) Tighten all Bolts.



SEQUOIA
PROFESSIONAL
by **highwood**®

For information on Care and Cleaning or to register your SEQUOIA PROFESSIONAL product by *highwood*®, please visit www.highwood-usa.com.

CM-CHRSQC2
03.05.19

PAGE 2 OF 2