
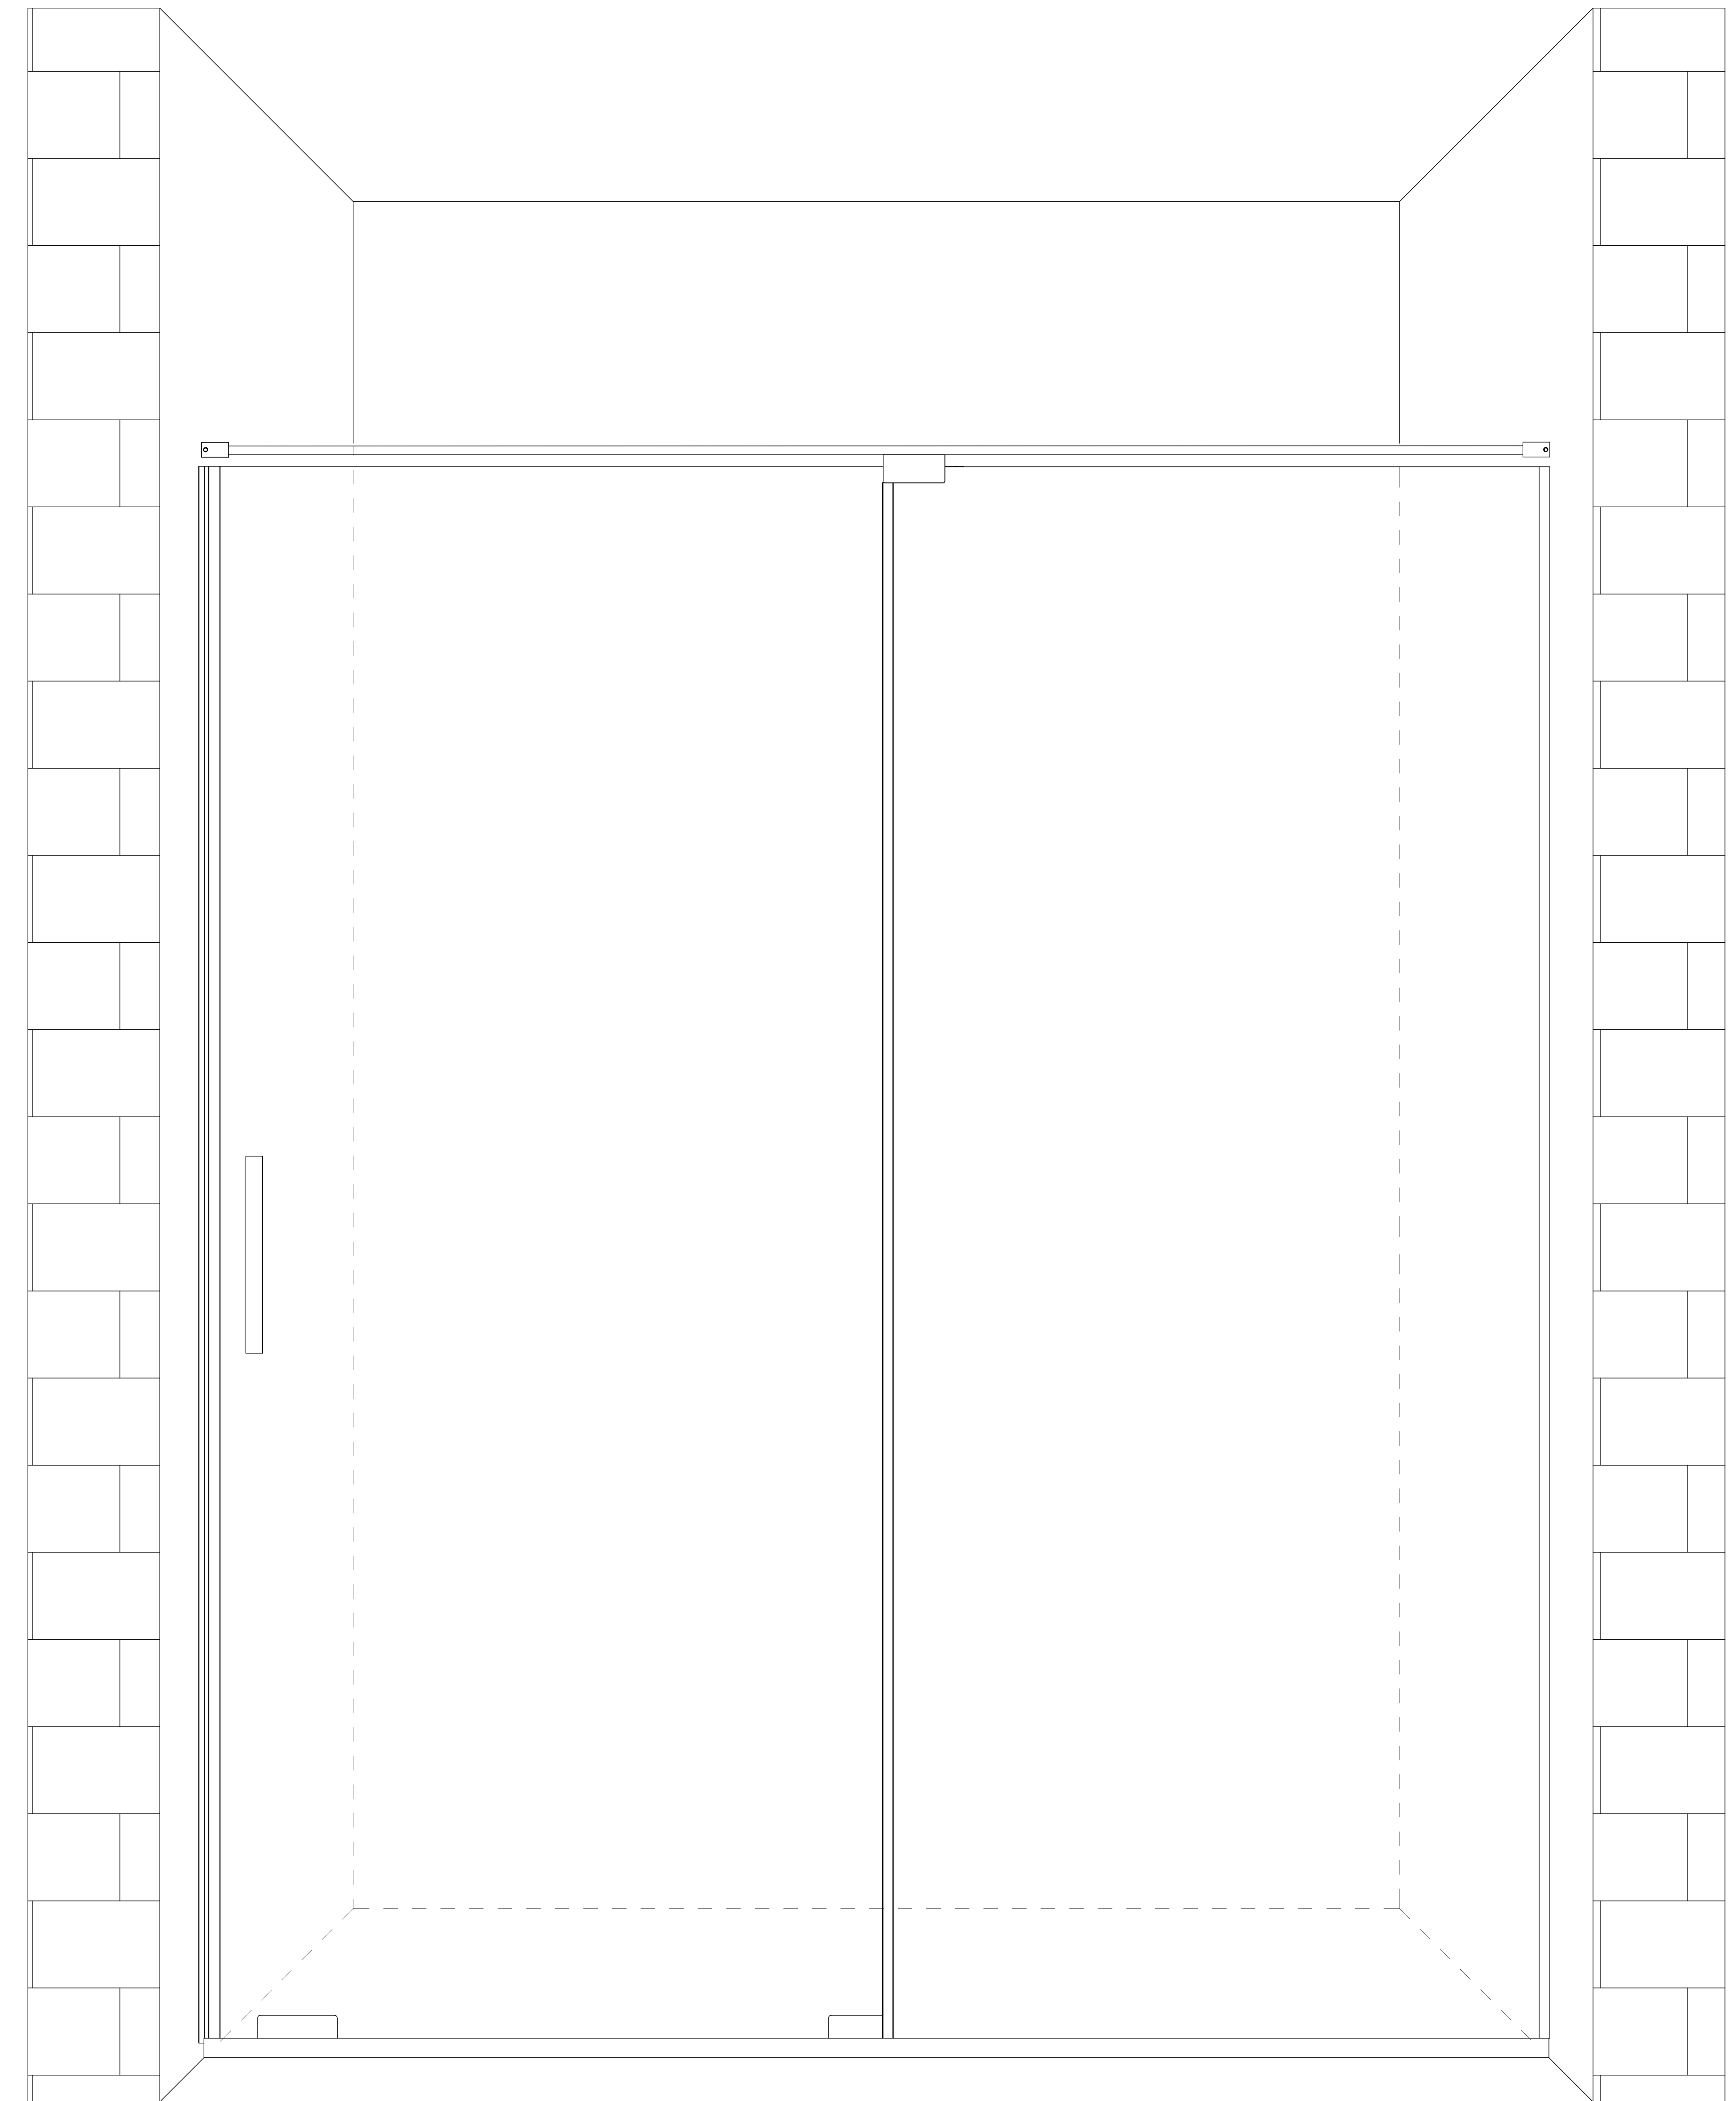
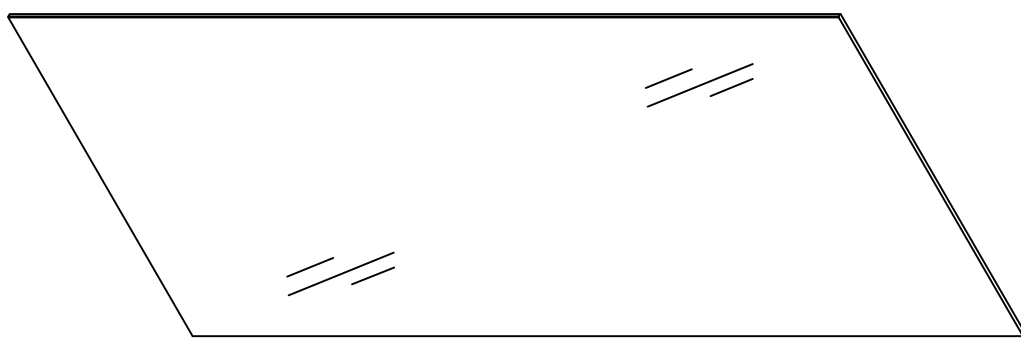
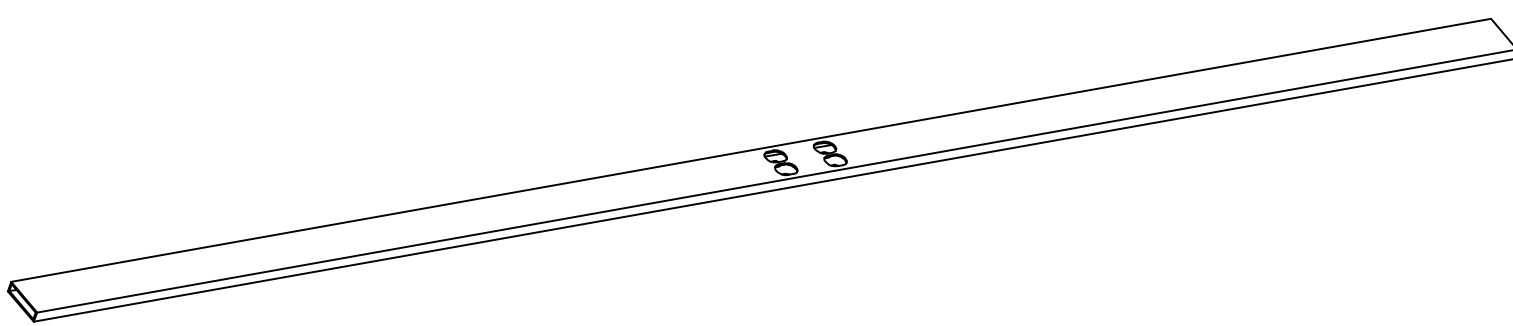
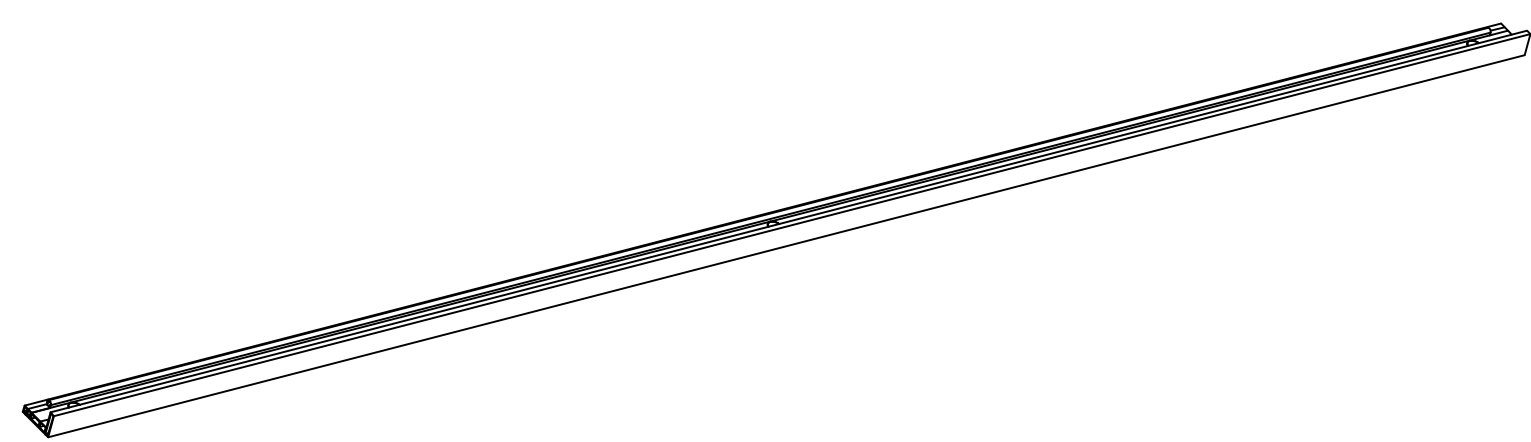
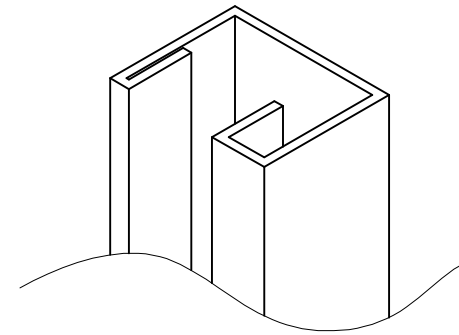
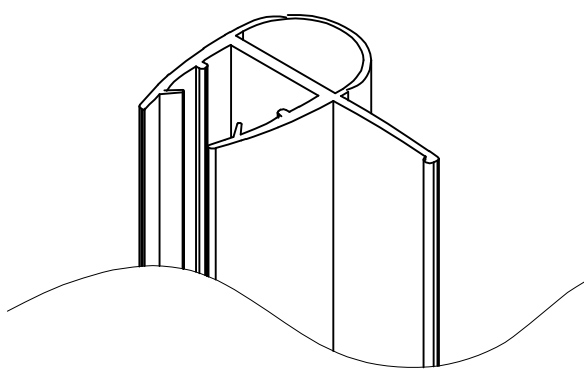
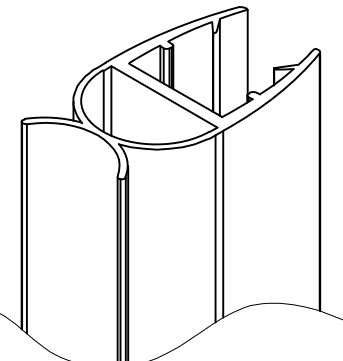
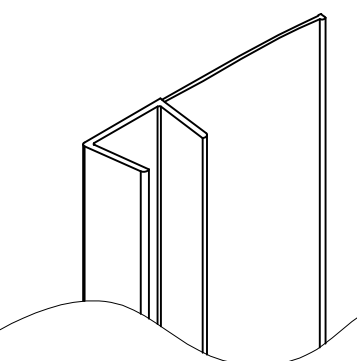
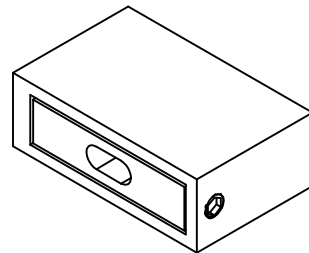
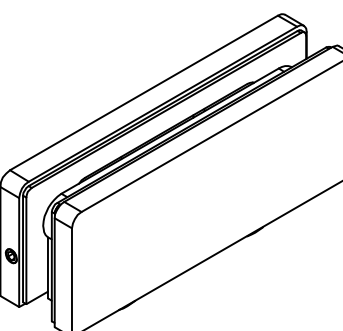
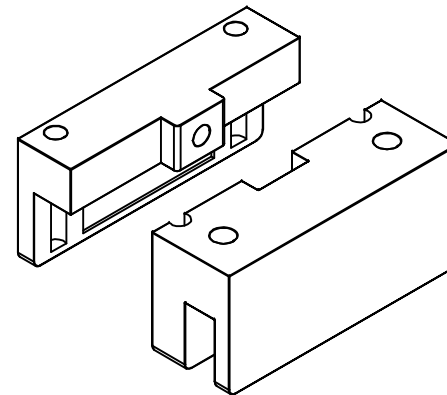
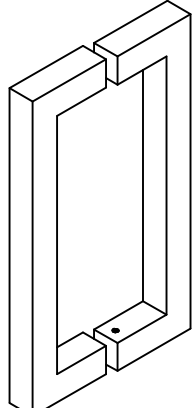
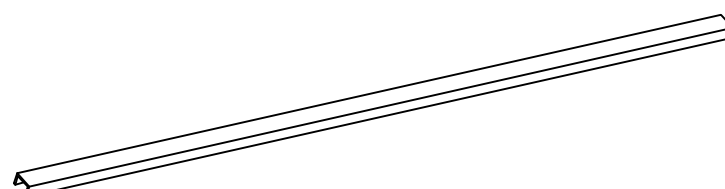


Installation Manual


KL-YC5611212-6072MB-8

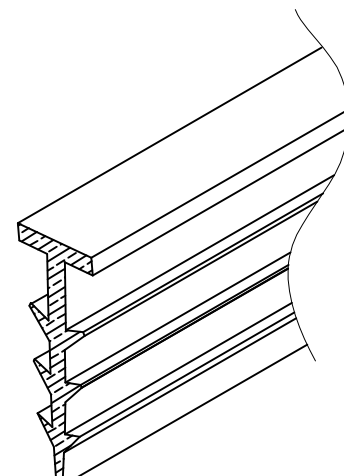


PARTS AND HARDWARE LISTING

ITEM	NAME	QTY	PICTURE
A	Tempered glass	2	
B	Top tie rod	1	
C	Lower rail	1	
D	Waterproof tape	1	
E	Movable glass side waterproof strip	1	
F	Movable glass insert waterproof tape	1	
G	Side water baffle strip	1	
H	Wall seat	2	
I	Track pulley	2	
J	Guide support key	1	
K	Handle	1	
L	Lower rail trim cover	1	
M	Rubber strip	1	


PARTS AND HARDWARE LISTING

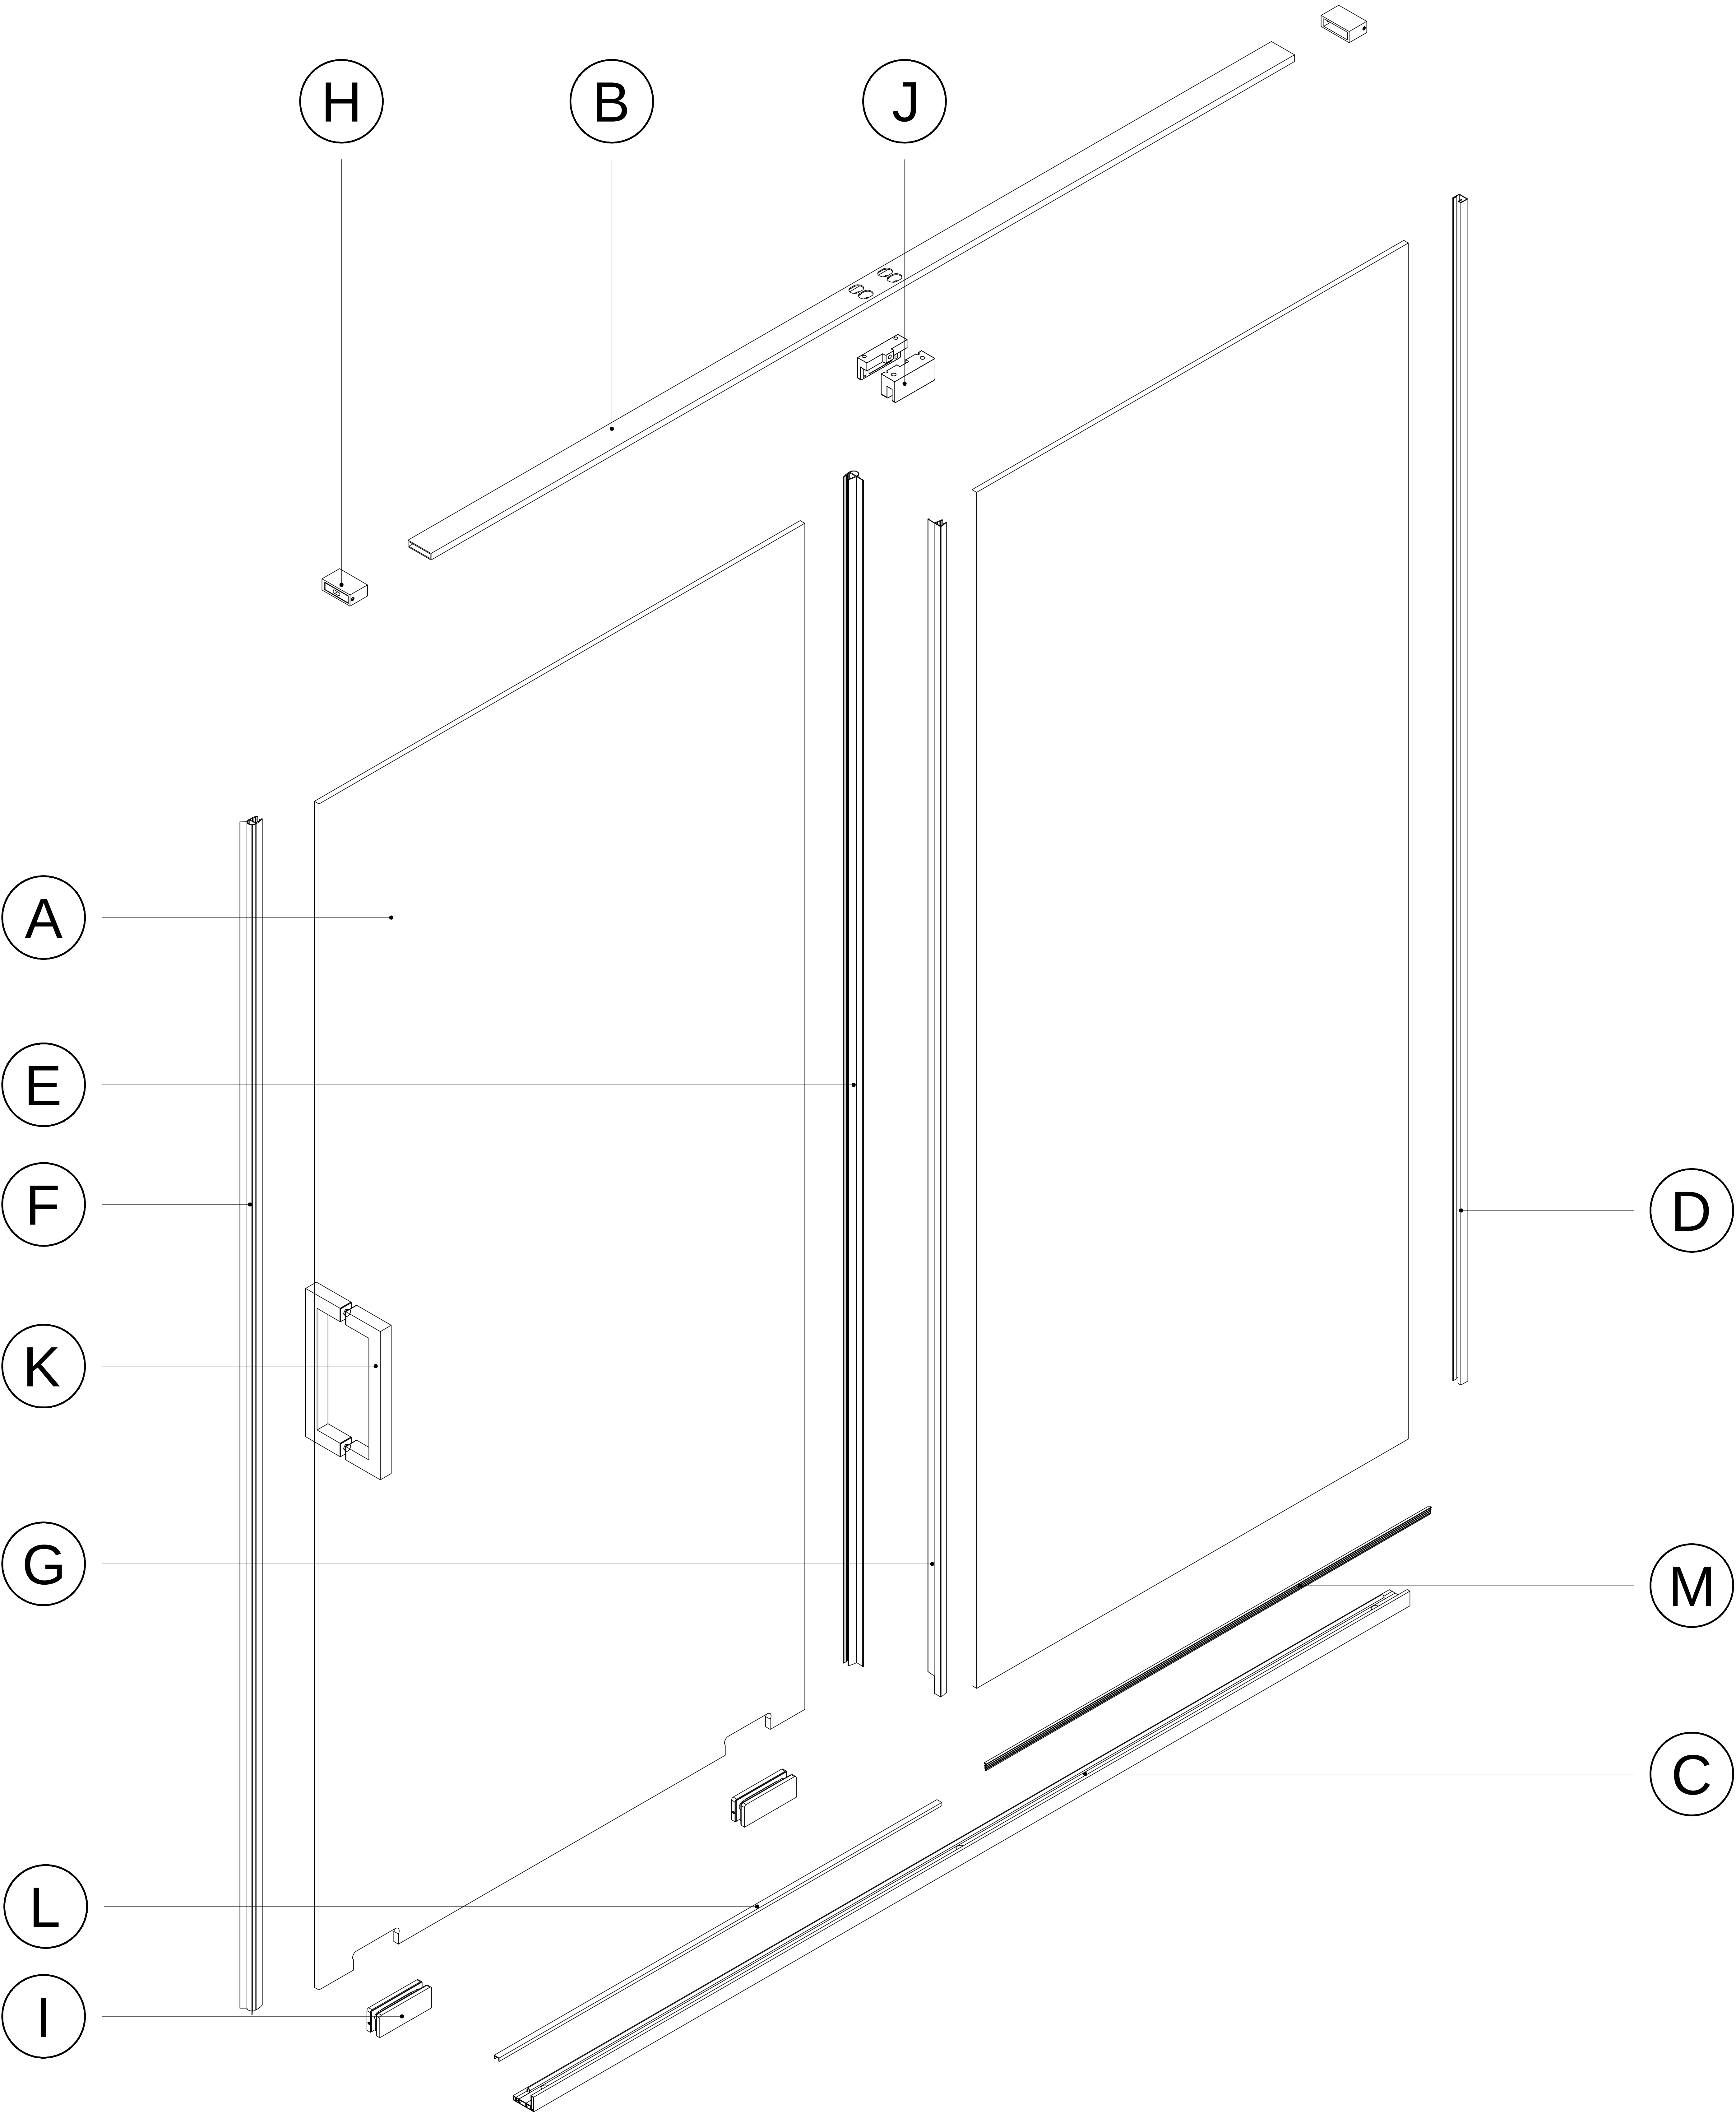


REQUIRED TOOLS

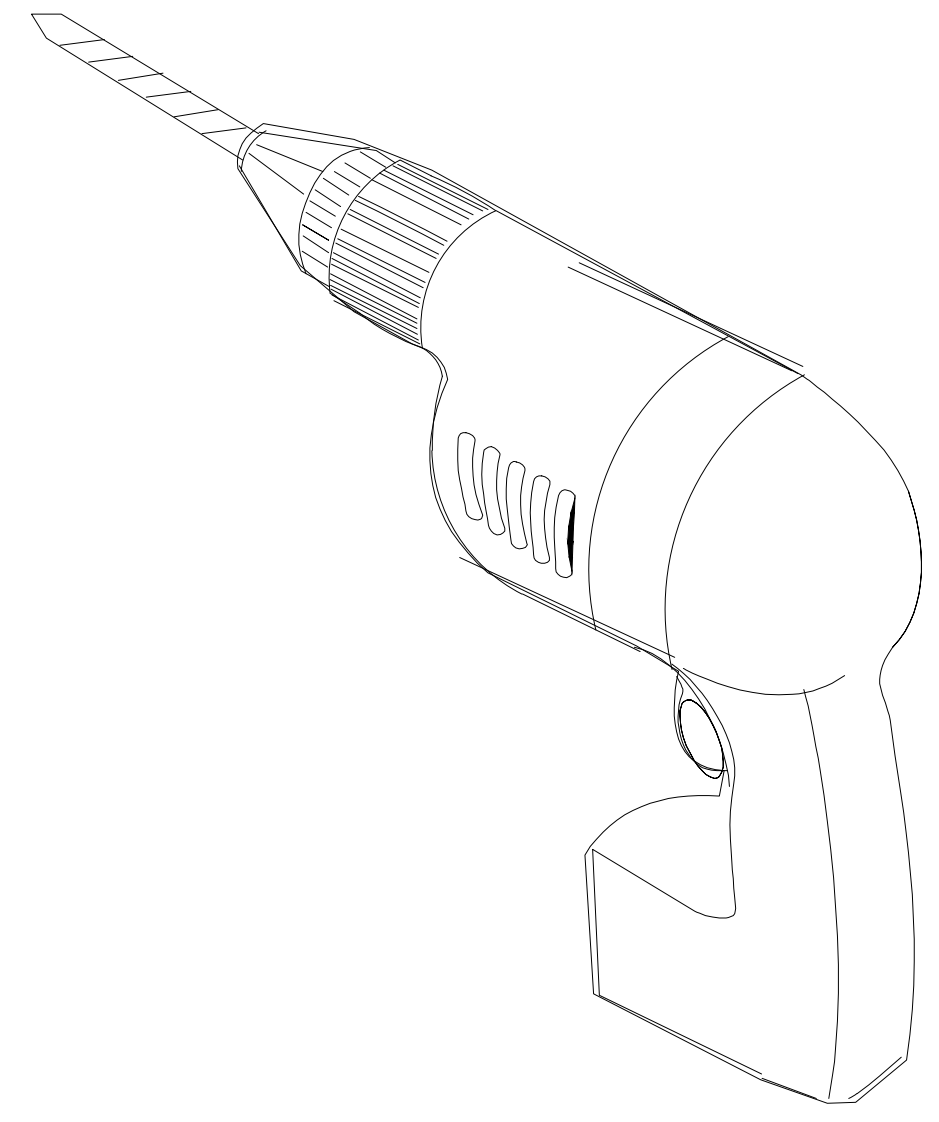


1# DRILL

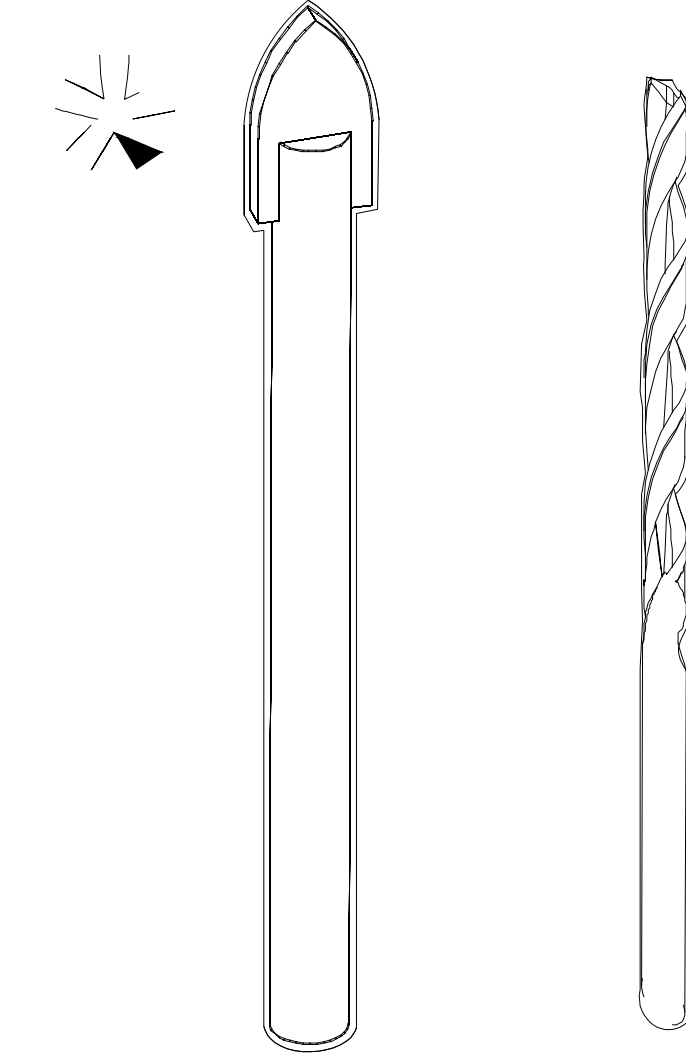


2# DRILL BITS
64mm & 32mm

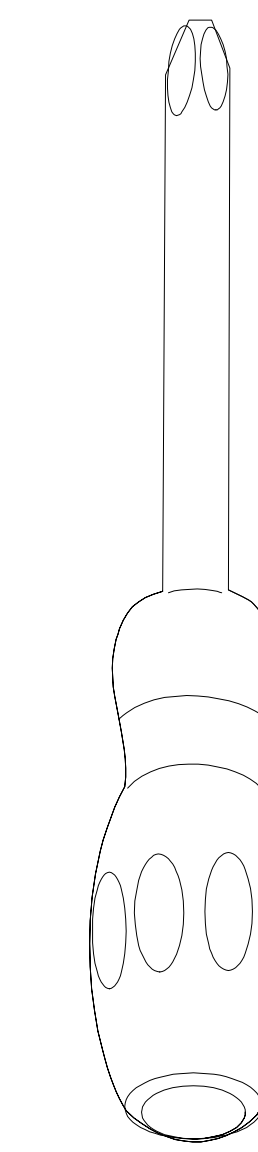


3# SCREWDRIVER

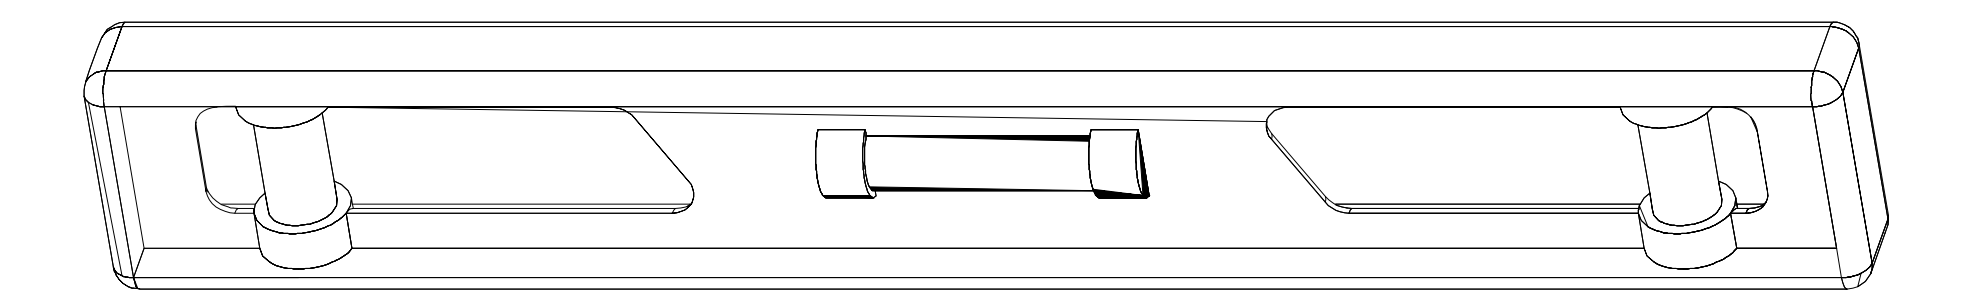


4# LEVEL

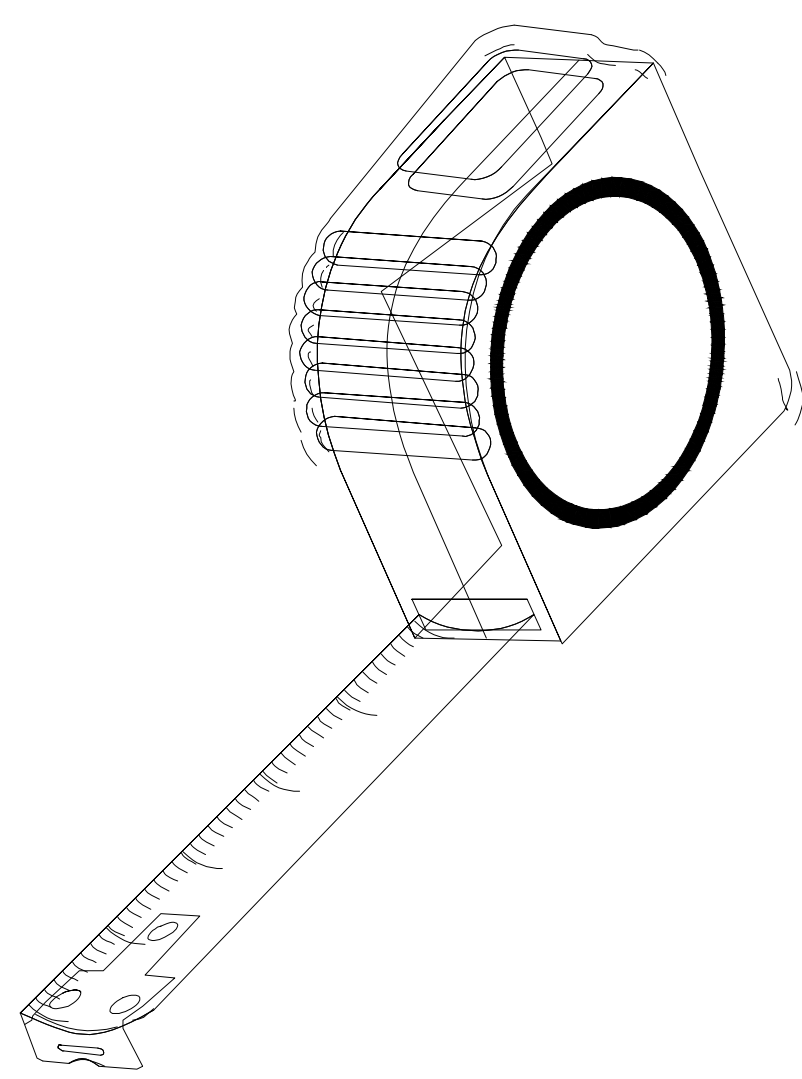


5# TAPE MEASURE

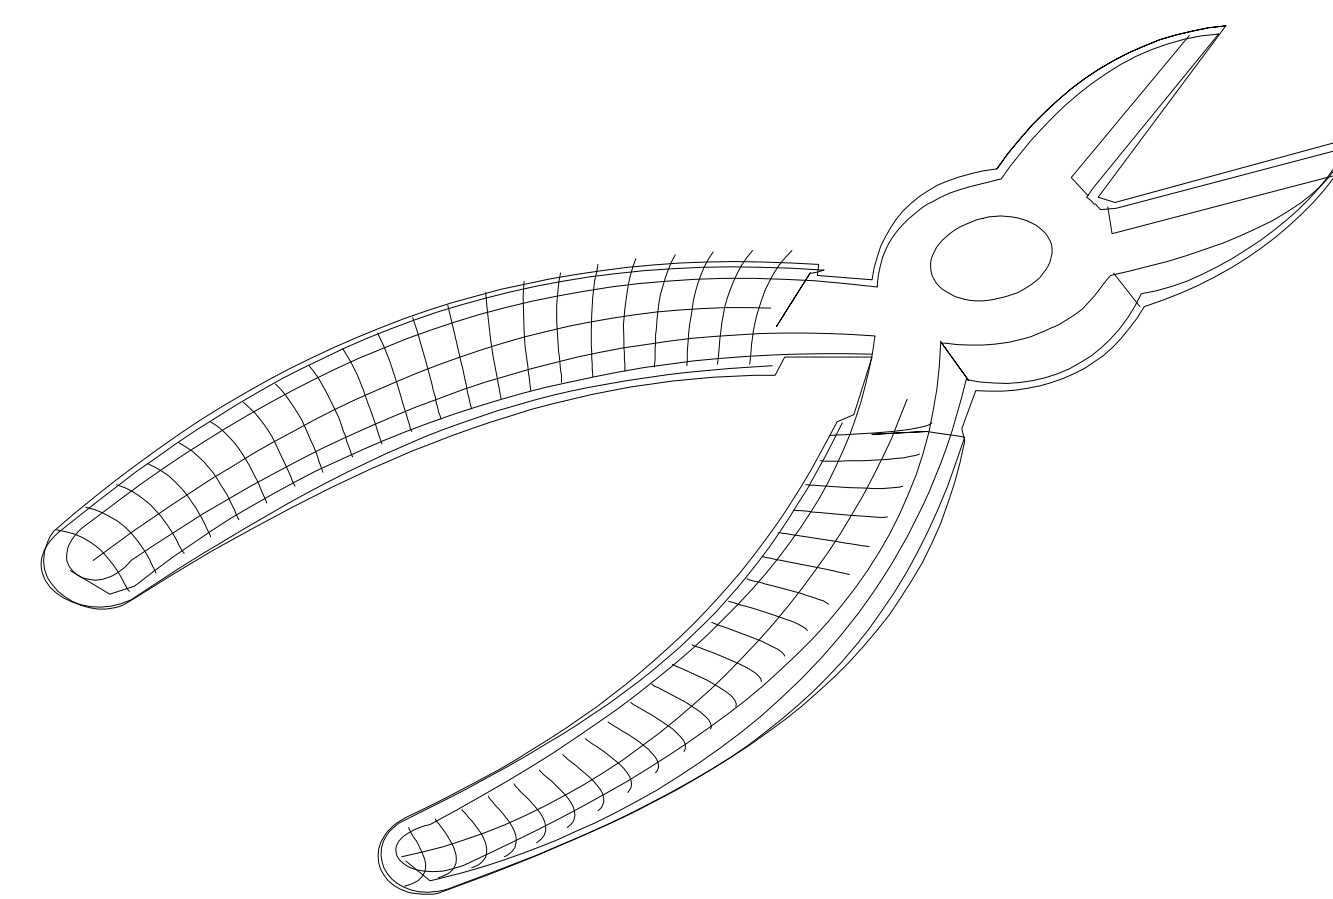


6# CUTTING PLIER

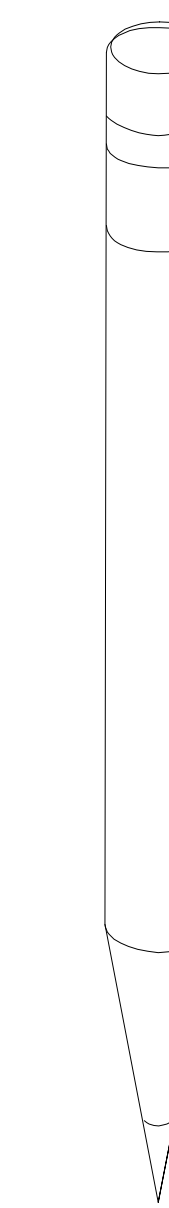


7# PENCIL

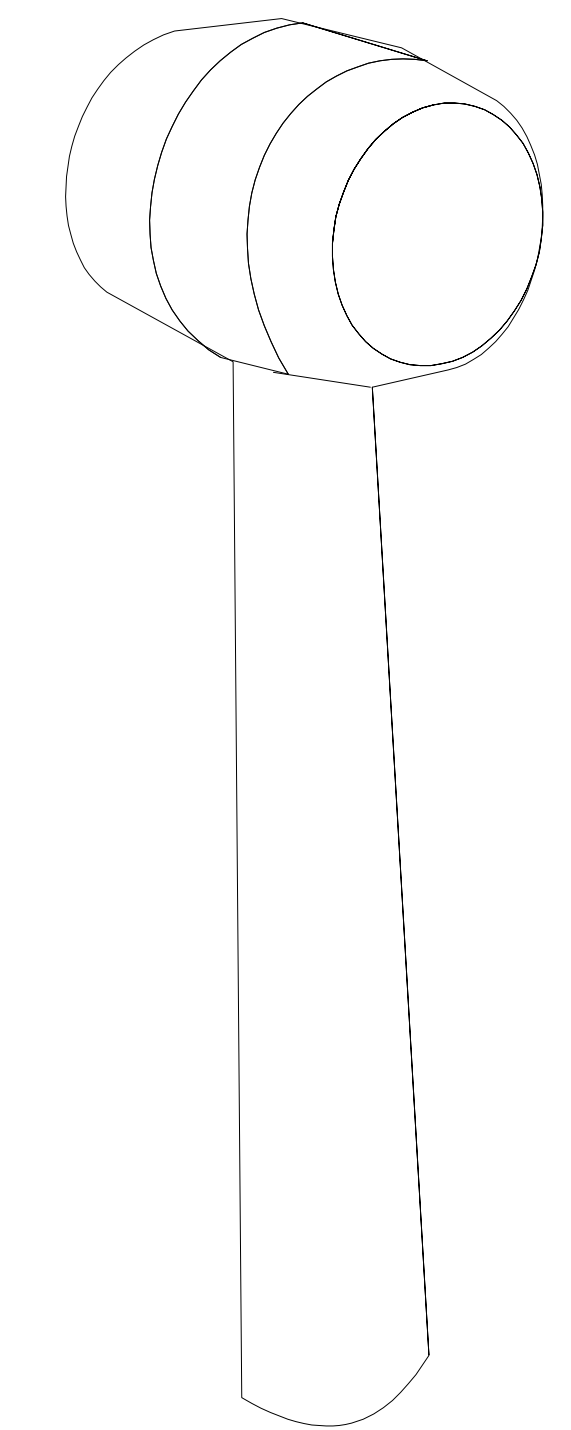


8# Mallet

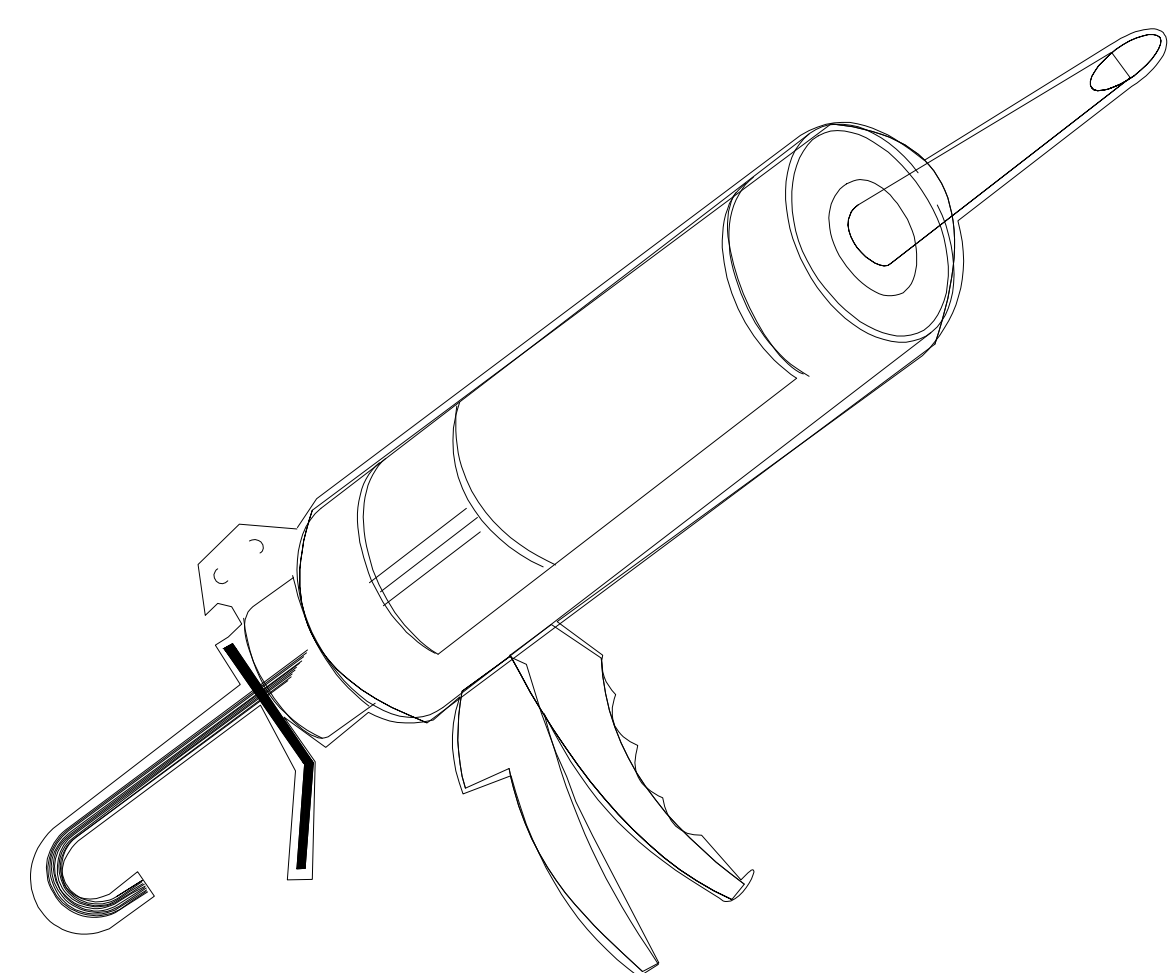


9# SILICONE

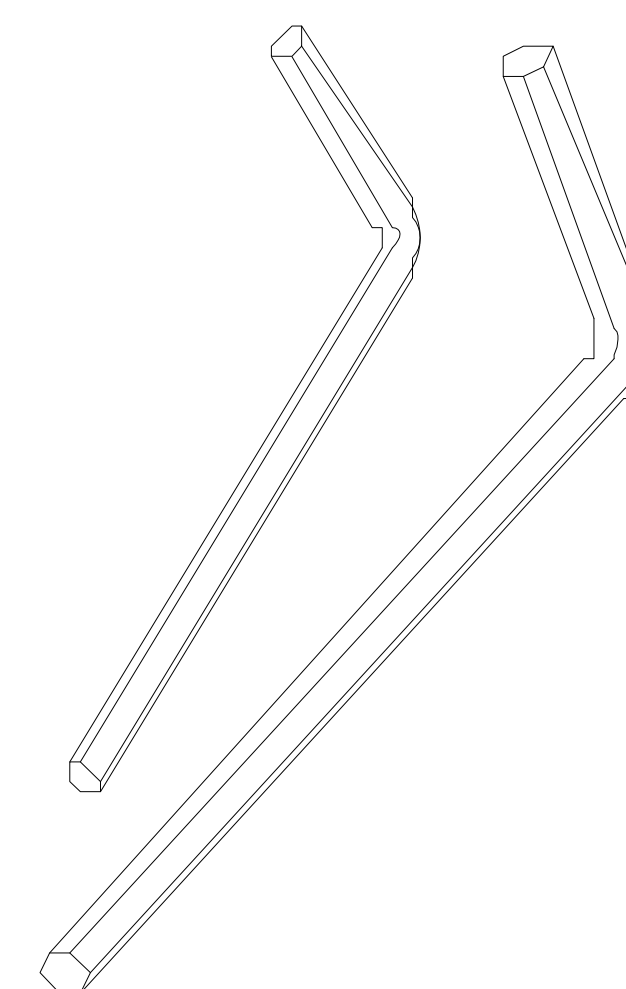

10# ALLEN KEY
2mm&2.5mm&4mm&5mm

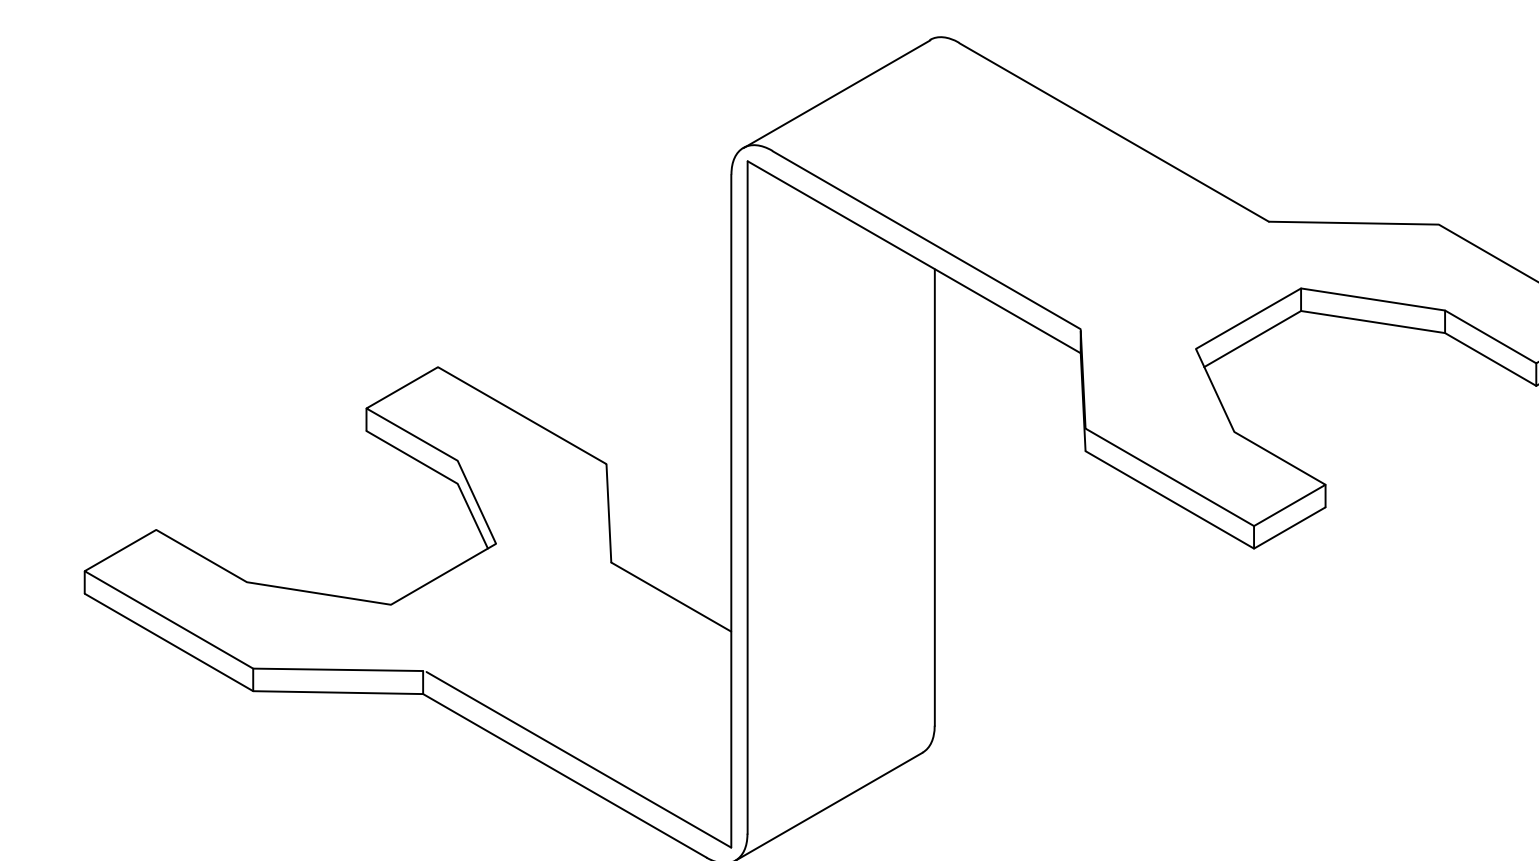



11# Open Allen wrench

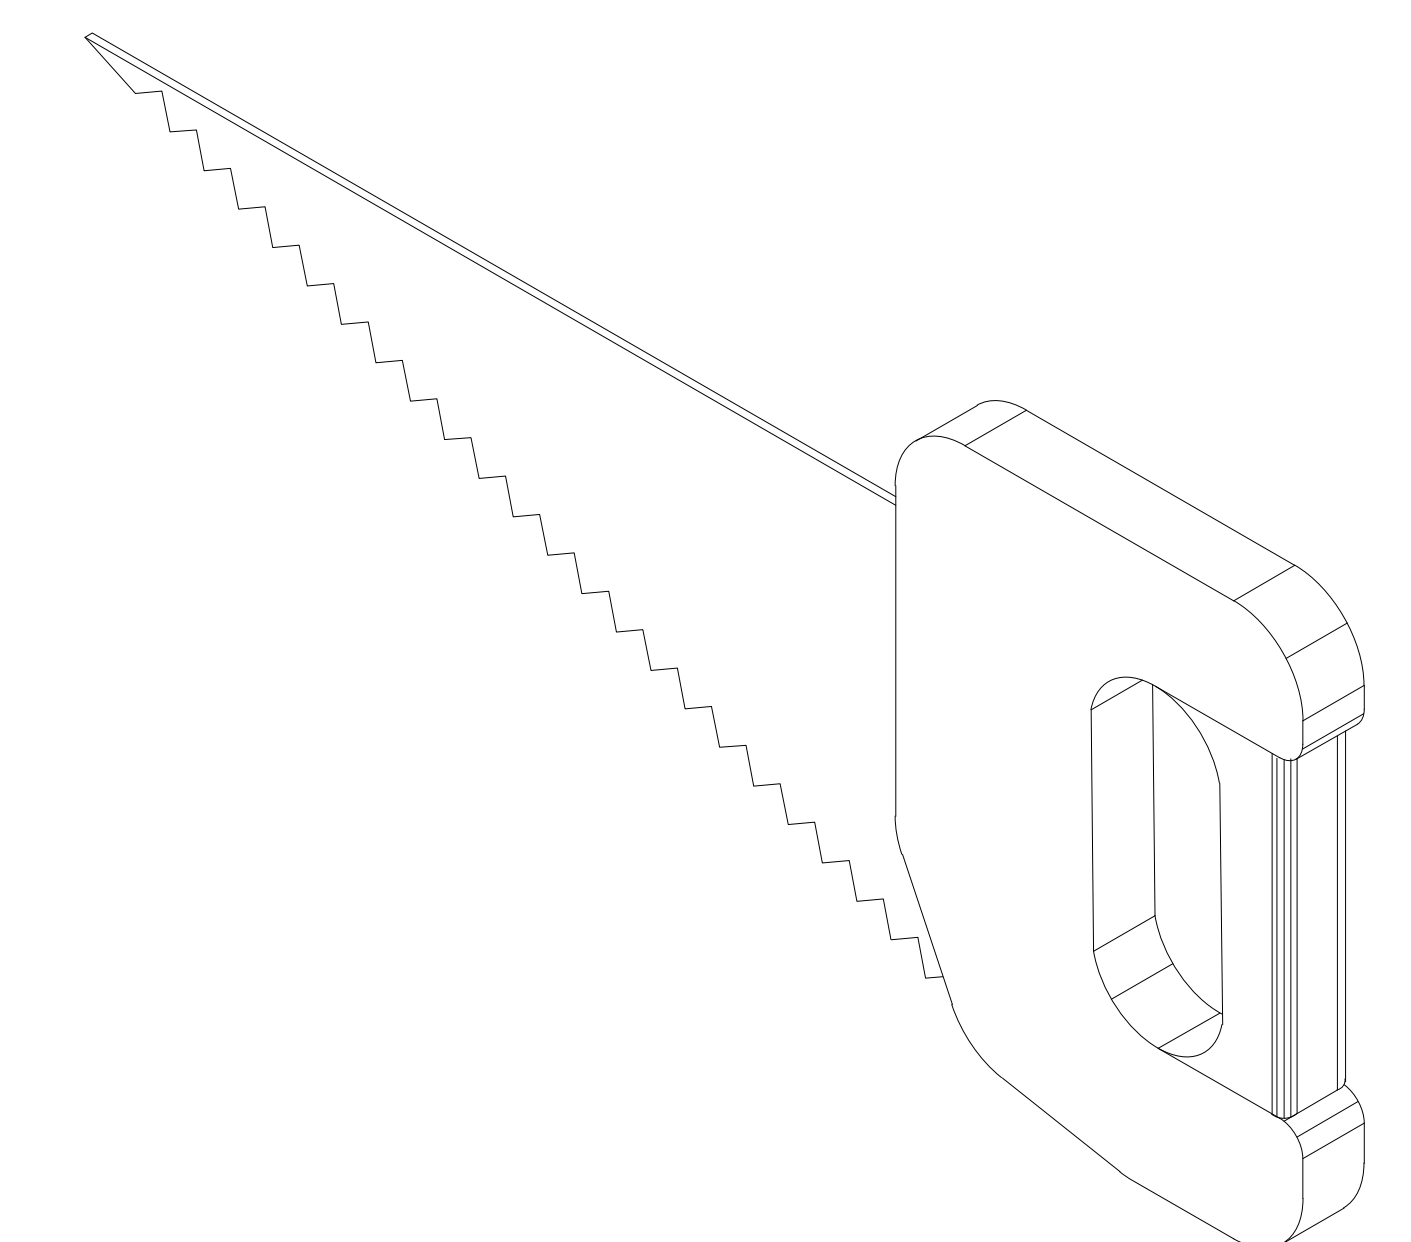

12# SAW

*** Use a 1/4" drill bit for ceramic when drilling into ceramic tiles**




Overall Installation displaying

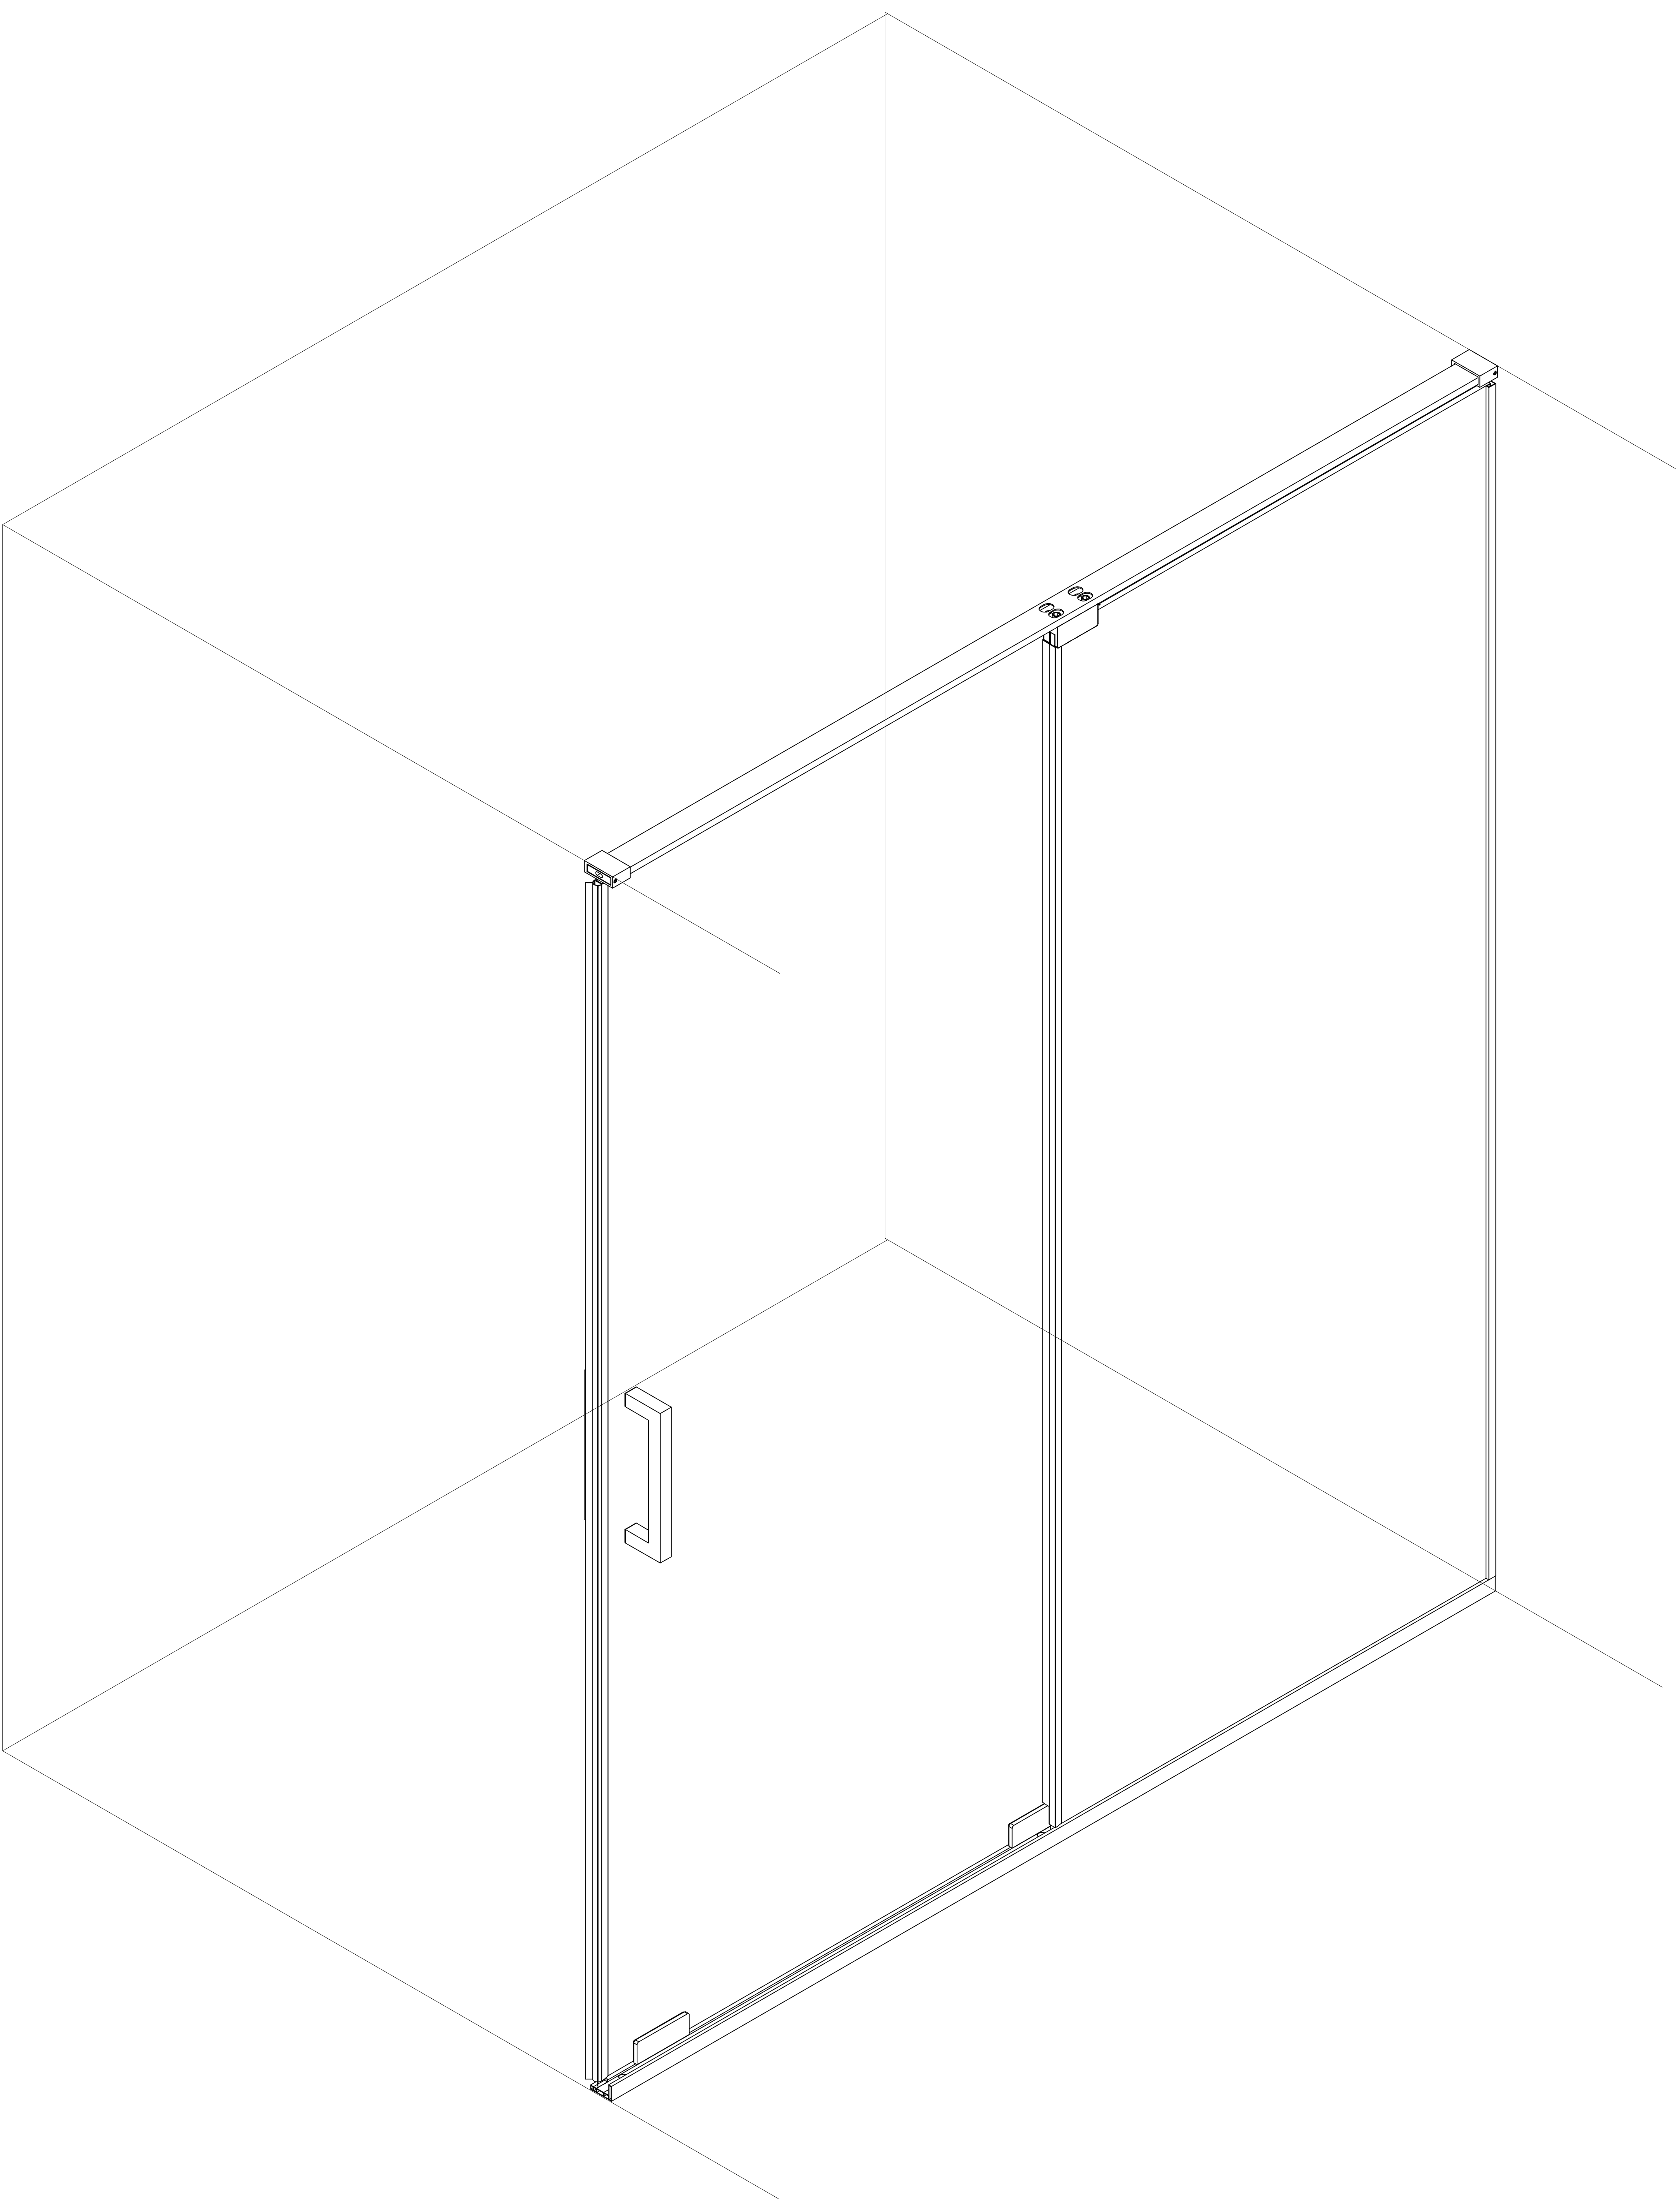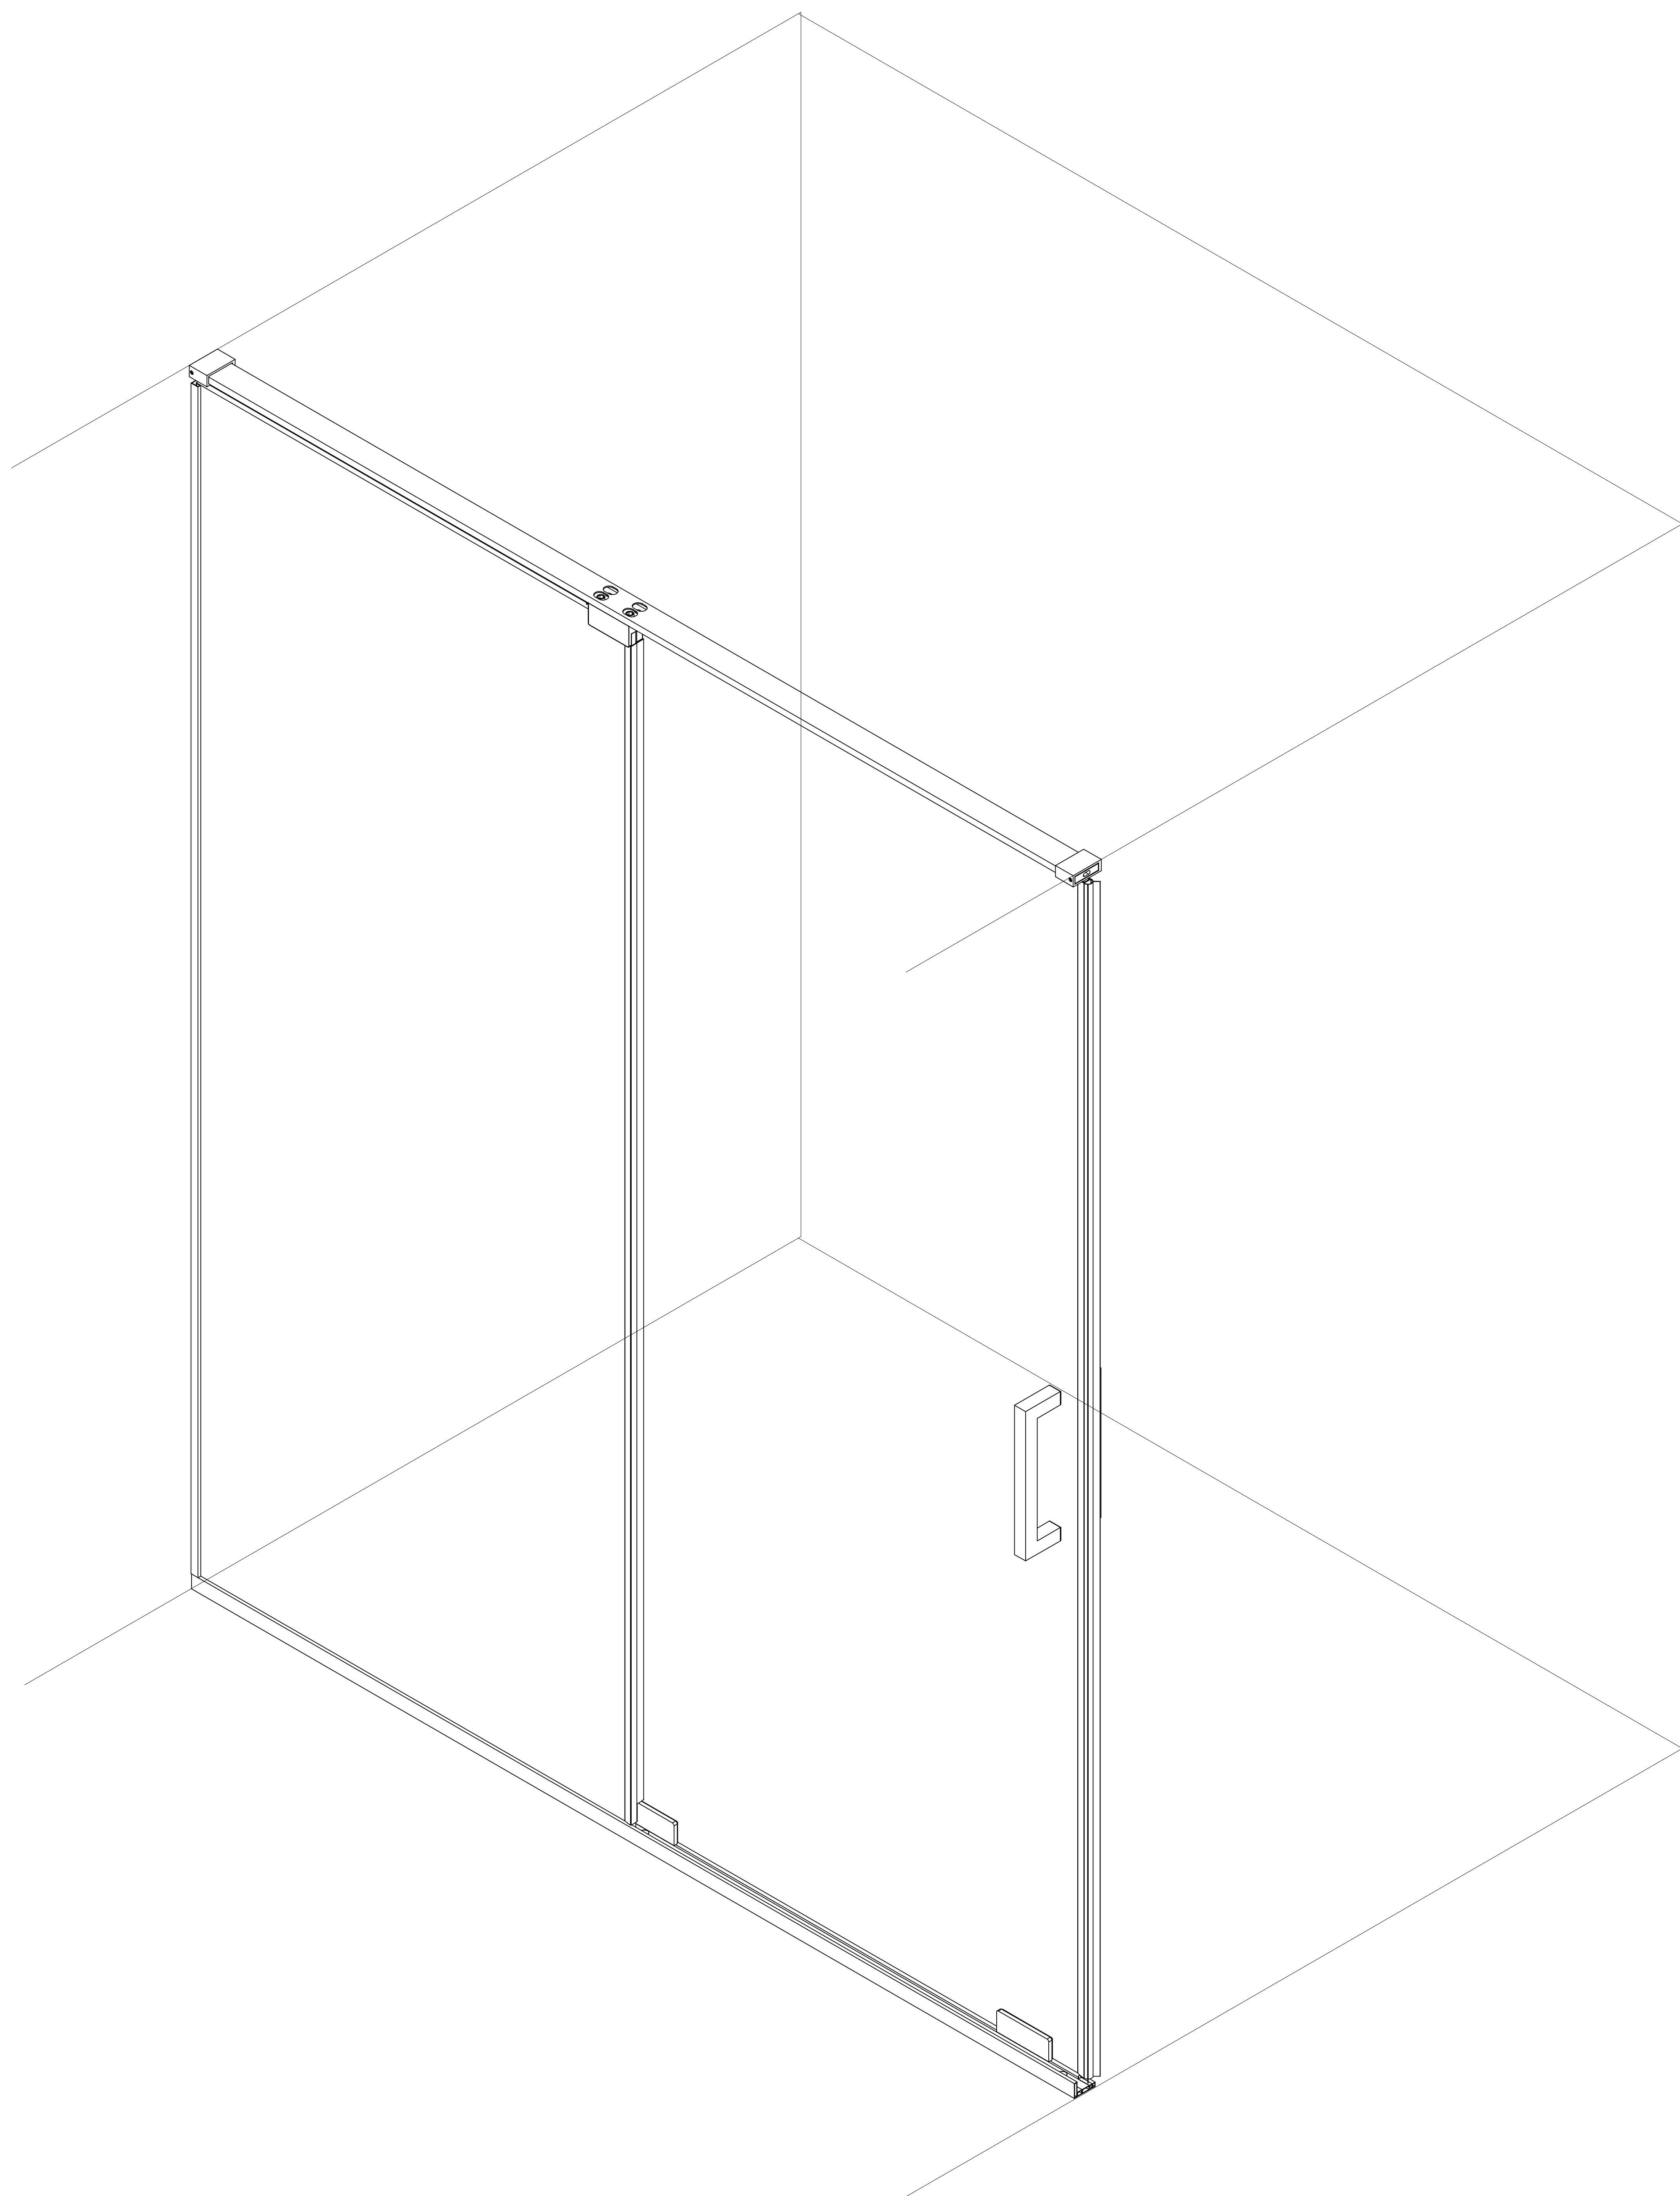


Installation effect diagram of shower enclosure

Wall to wall measurement, cutting the guide rail

Measure site wall to wall dimensions.

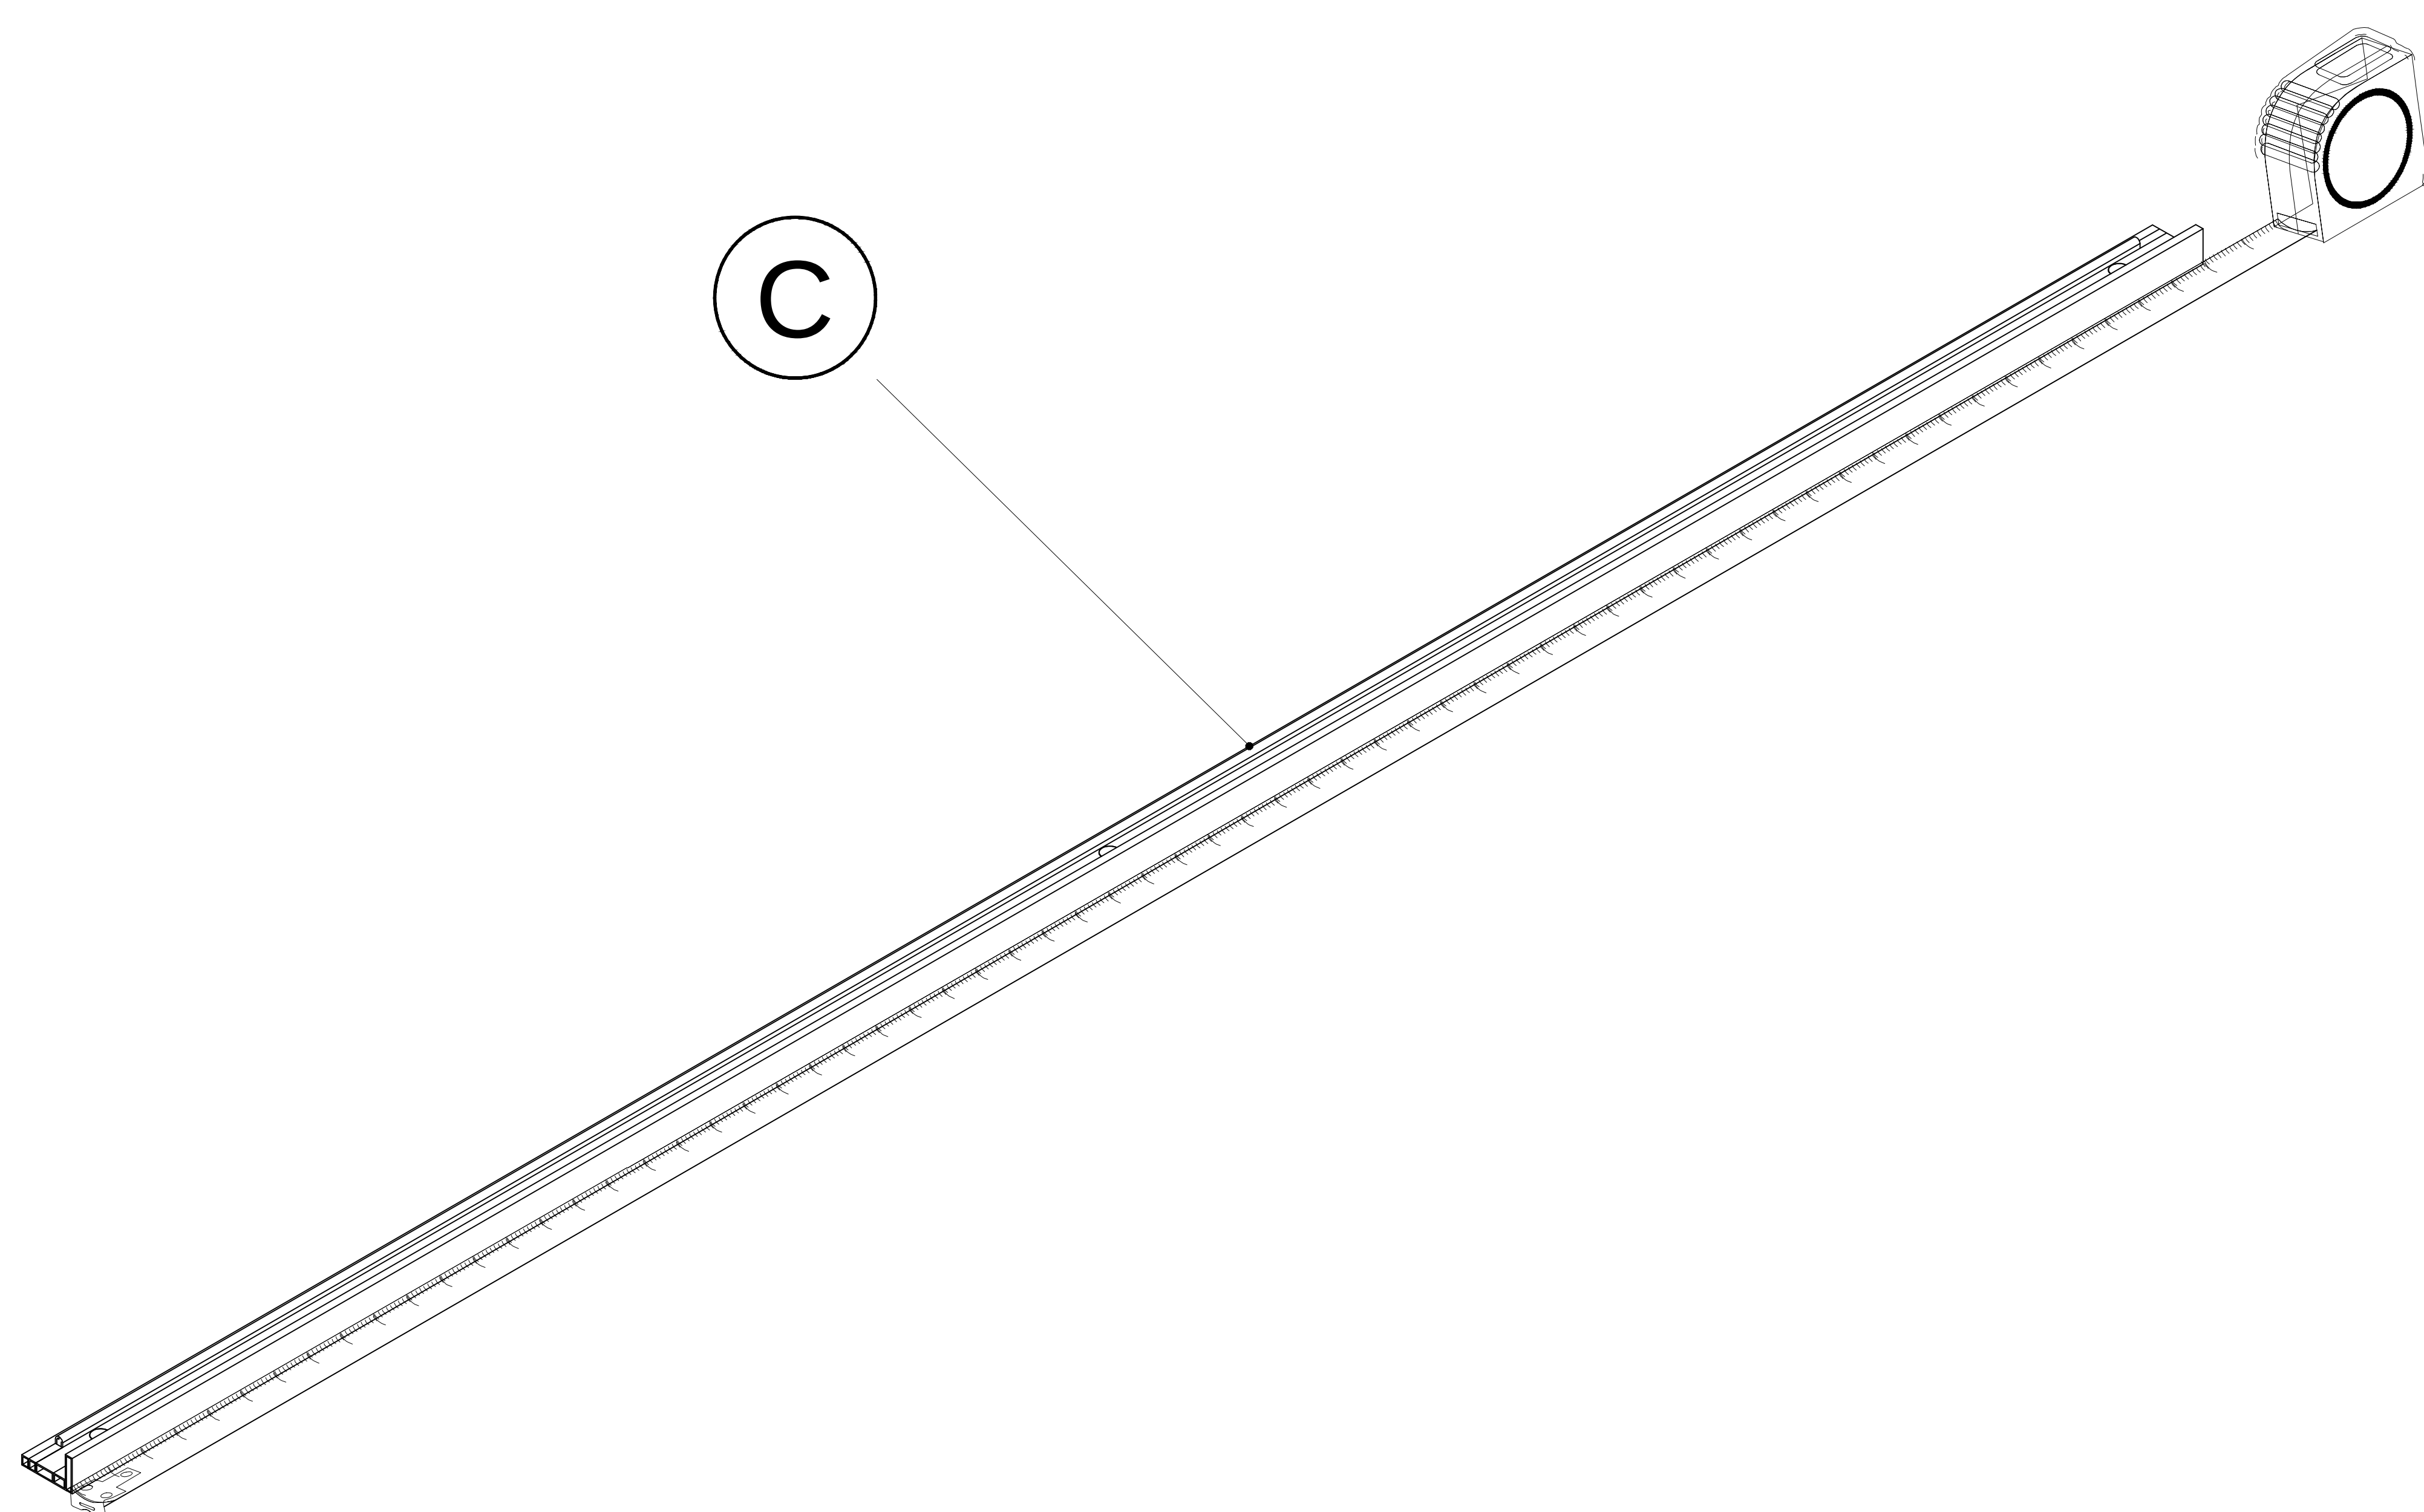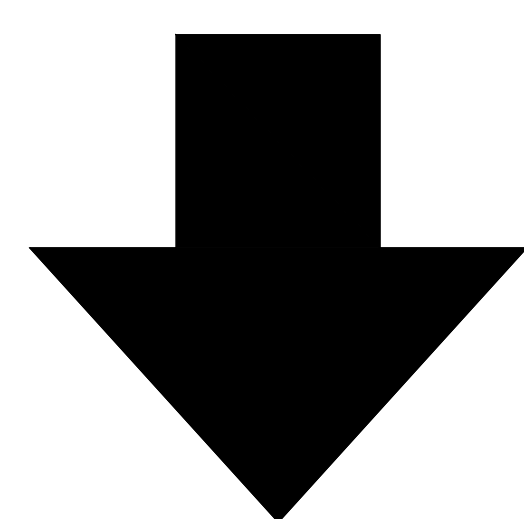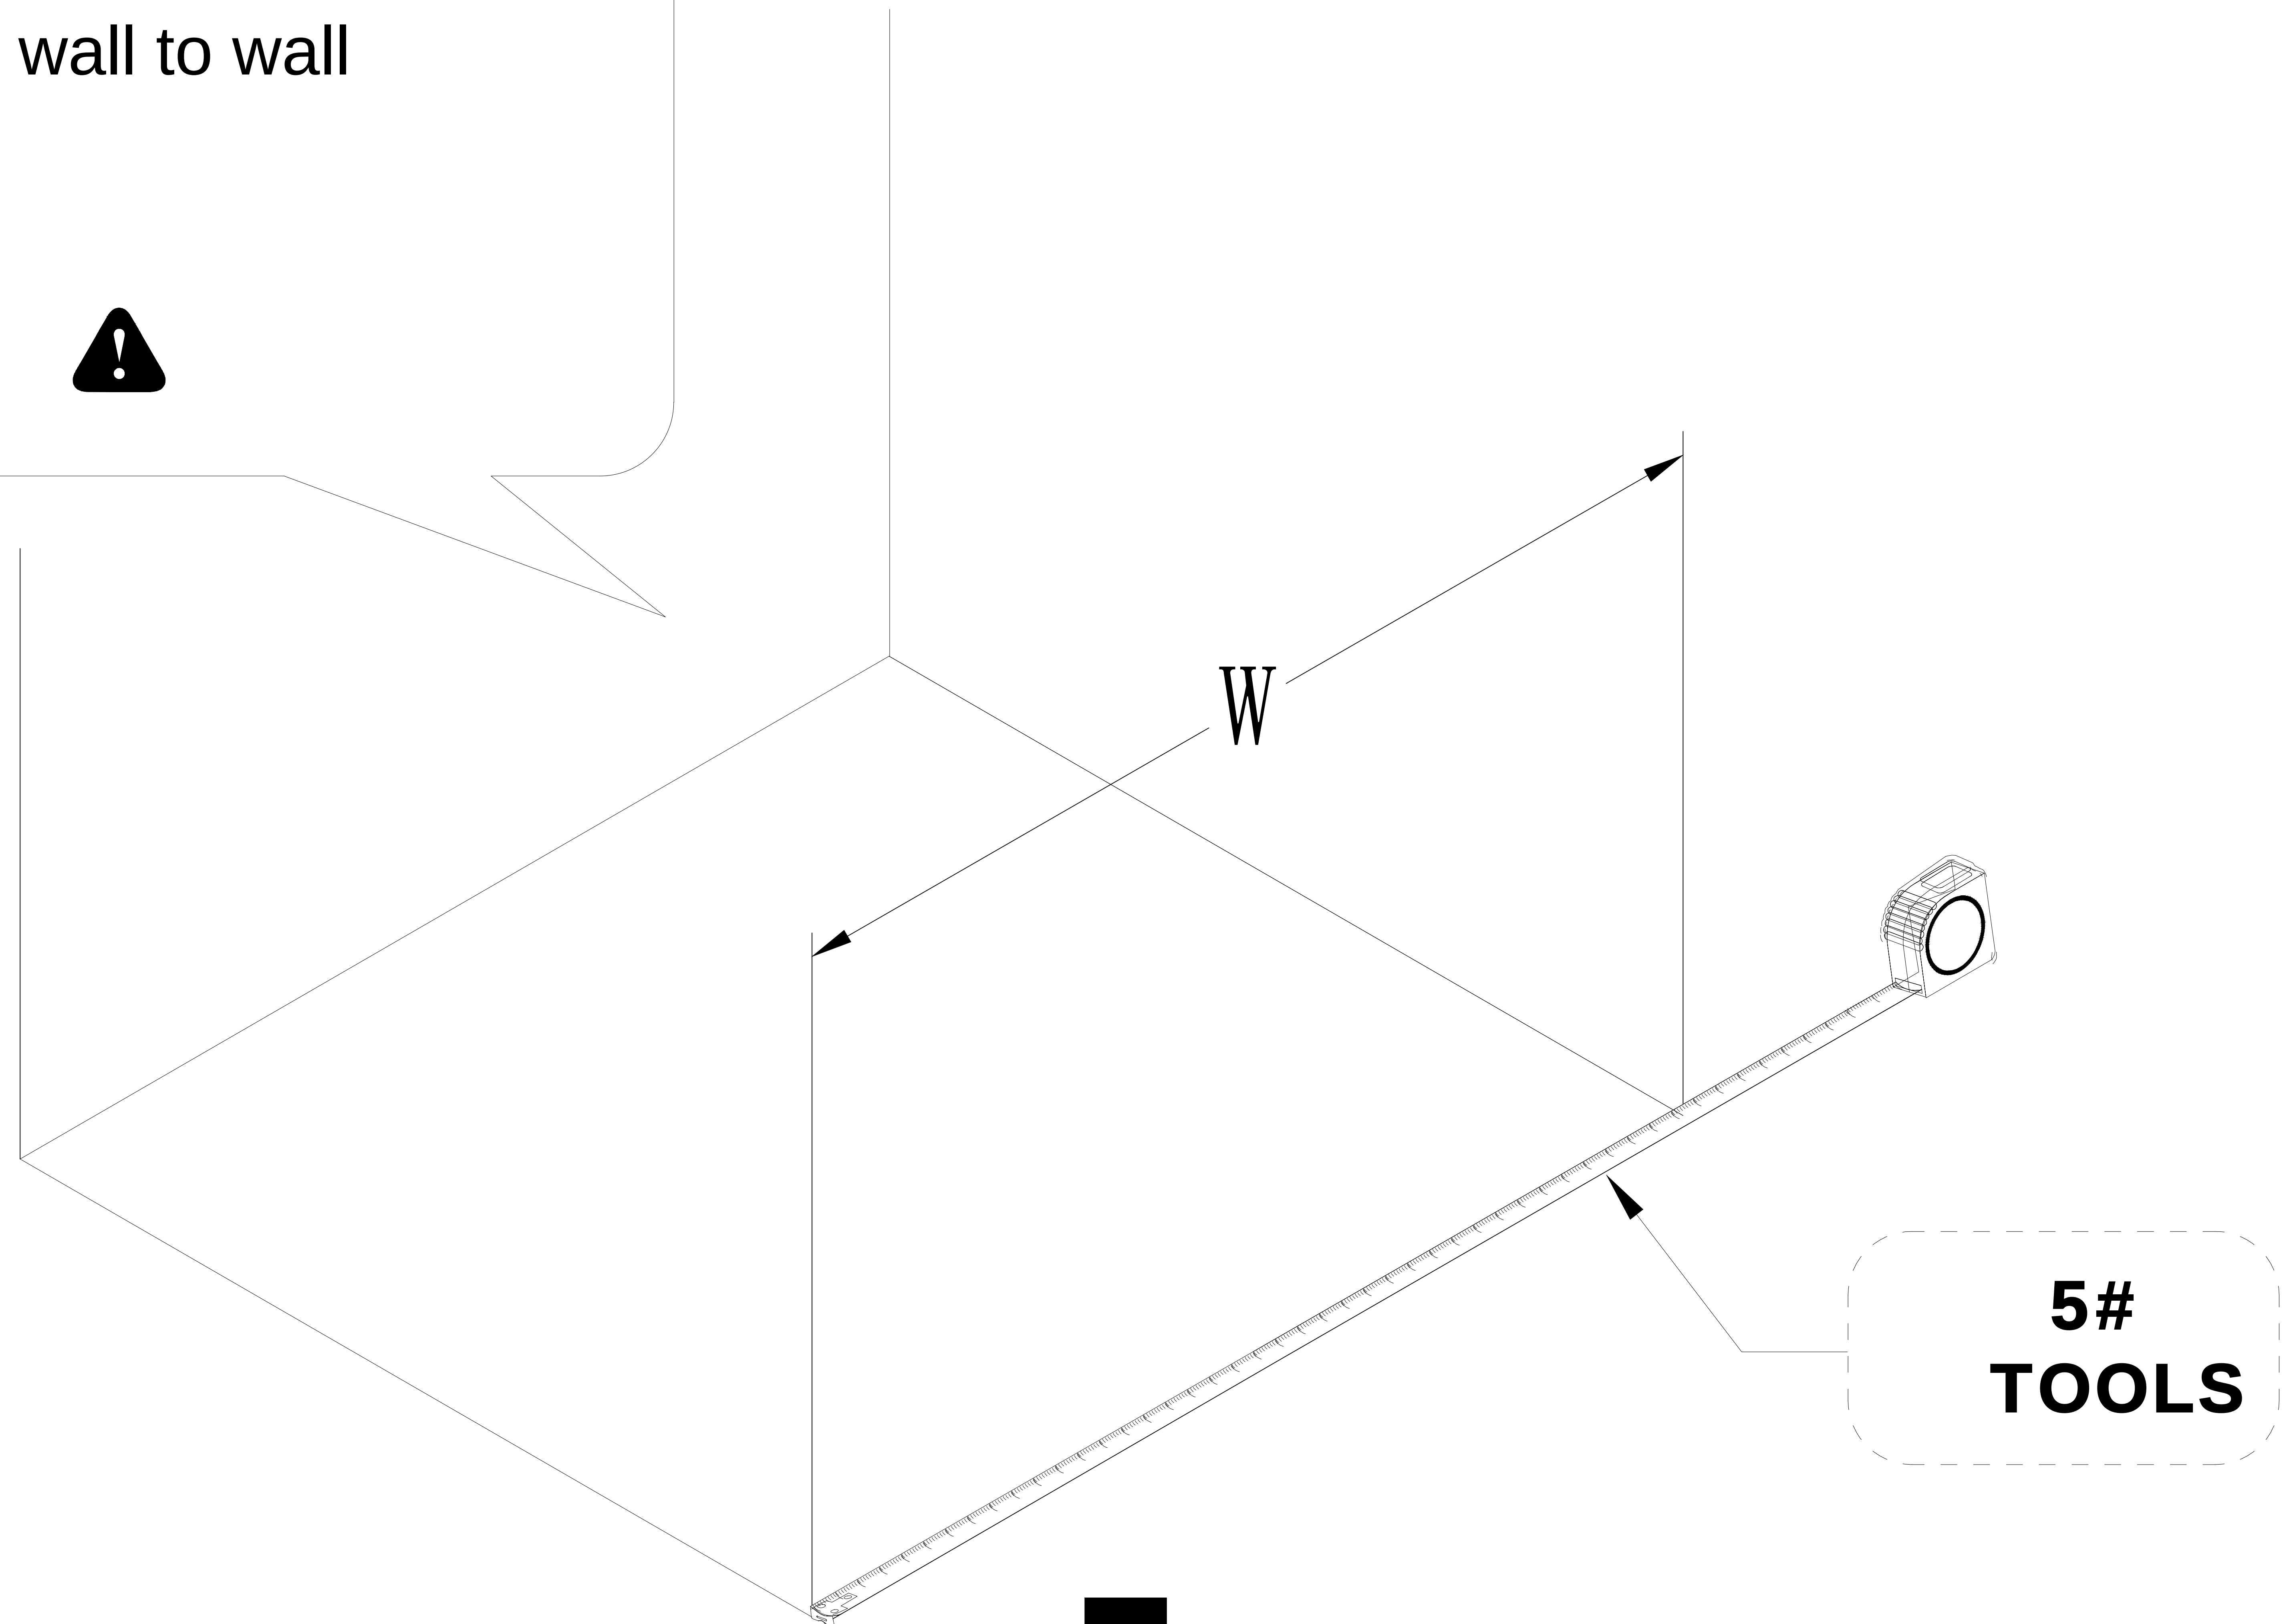


Cut off the same length on both sides

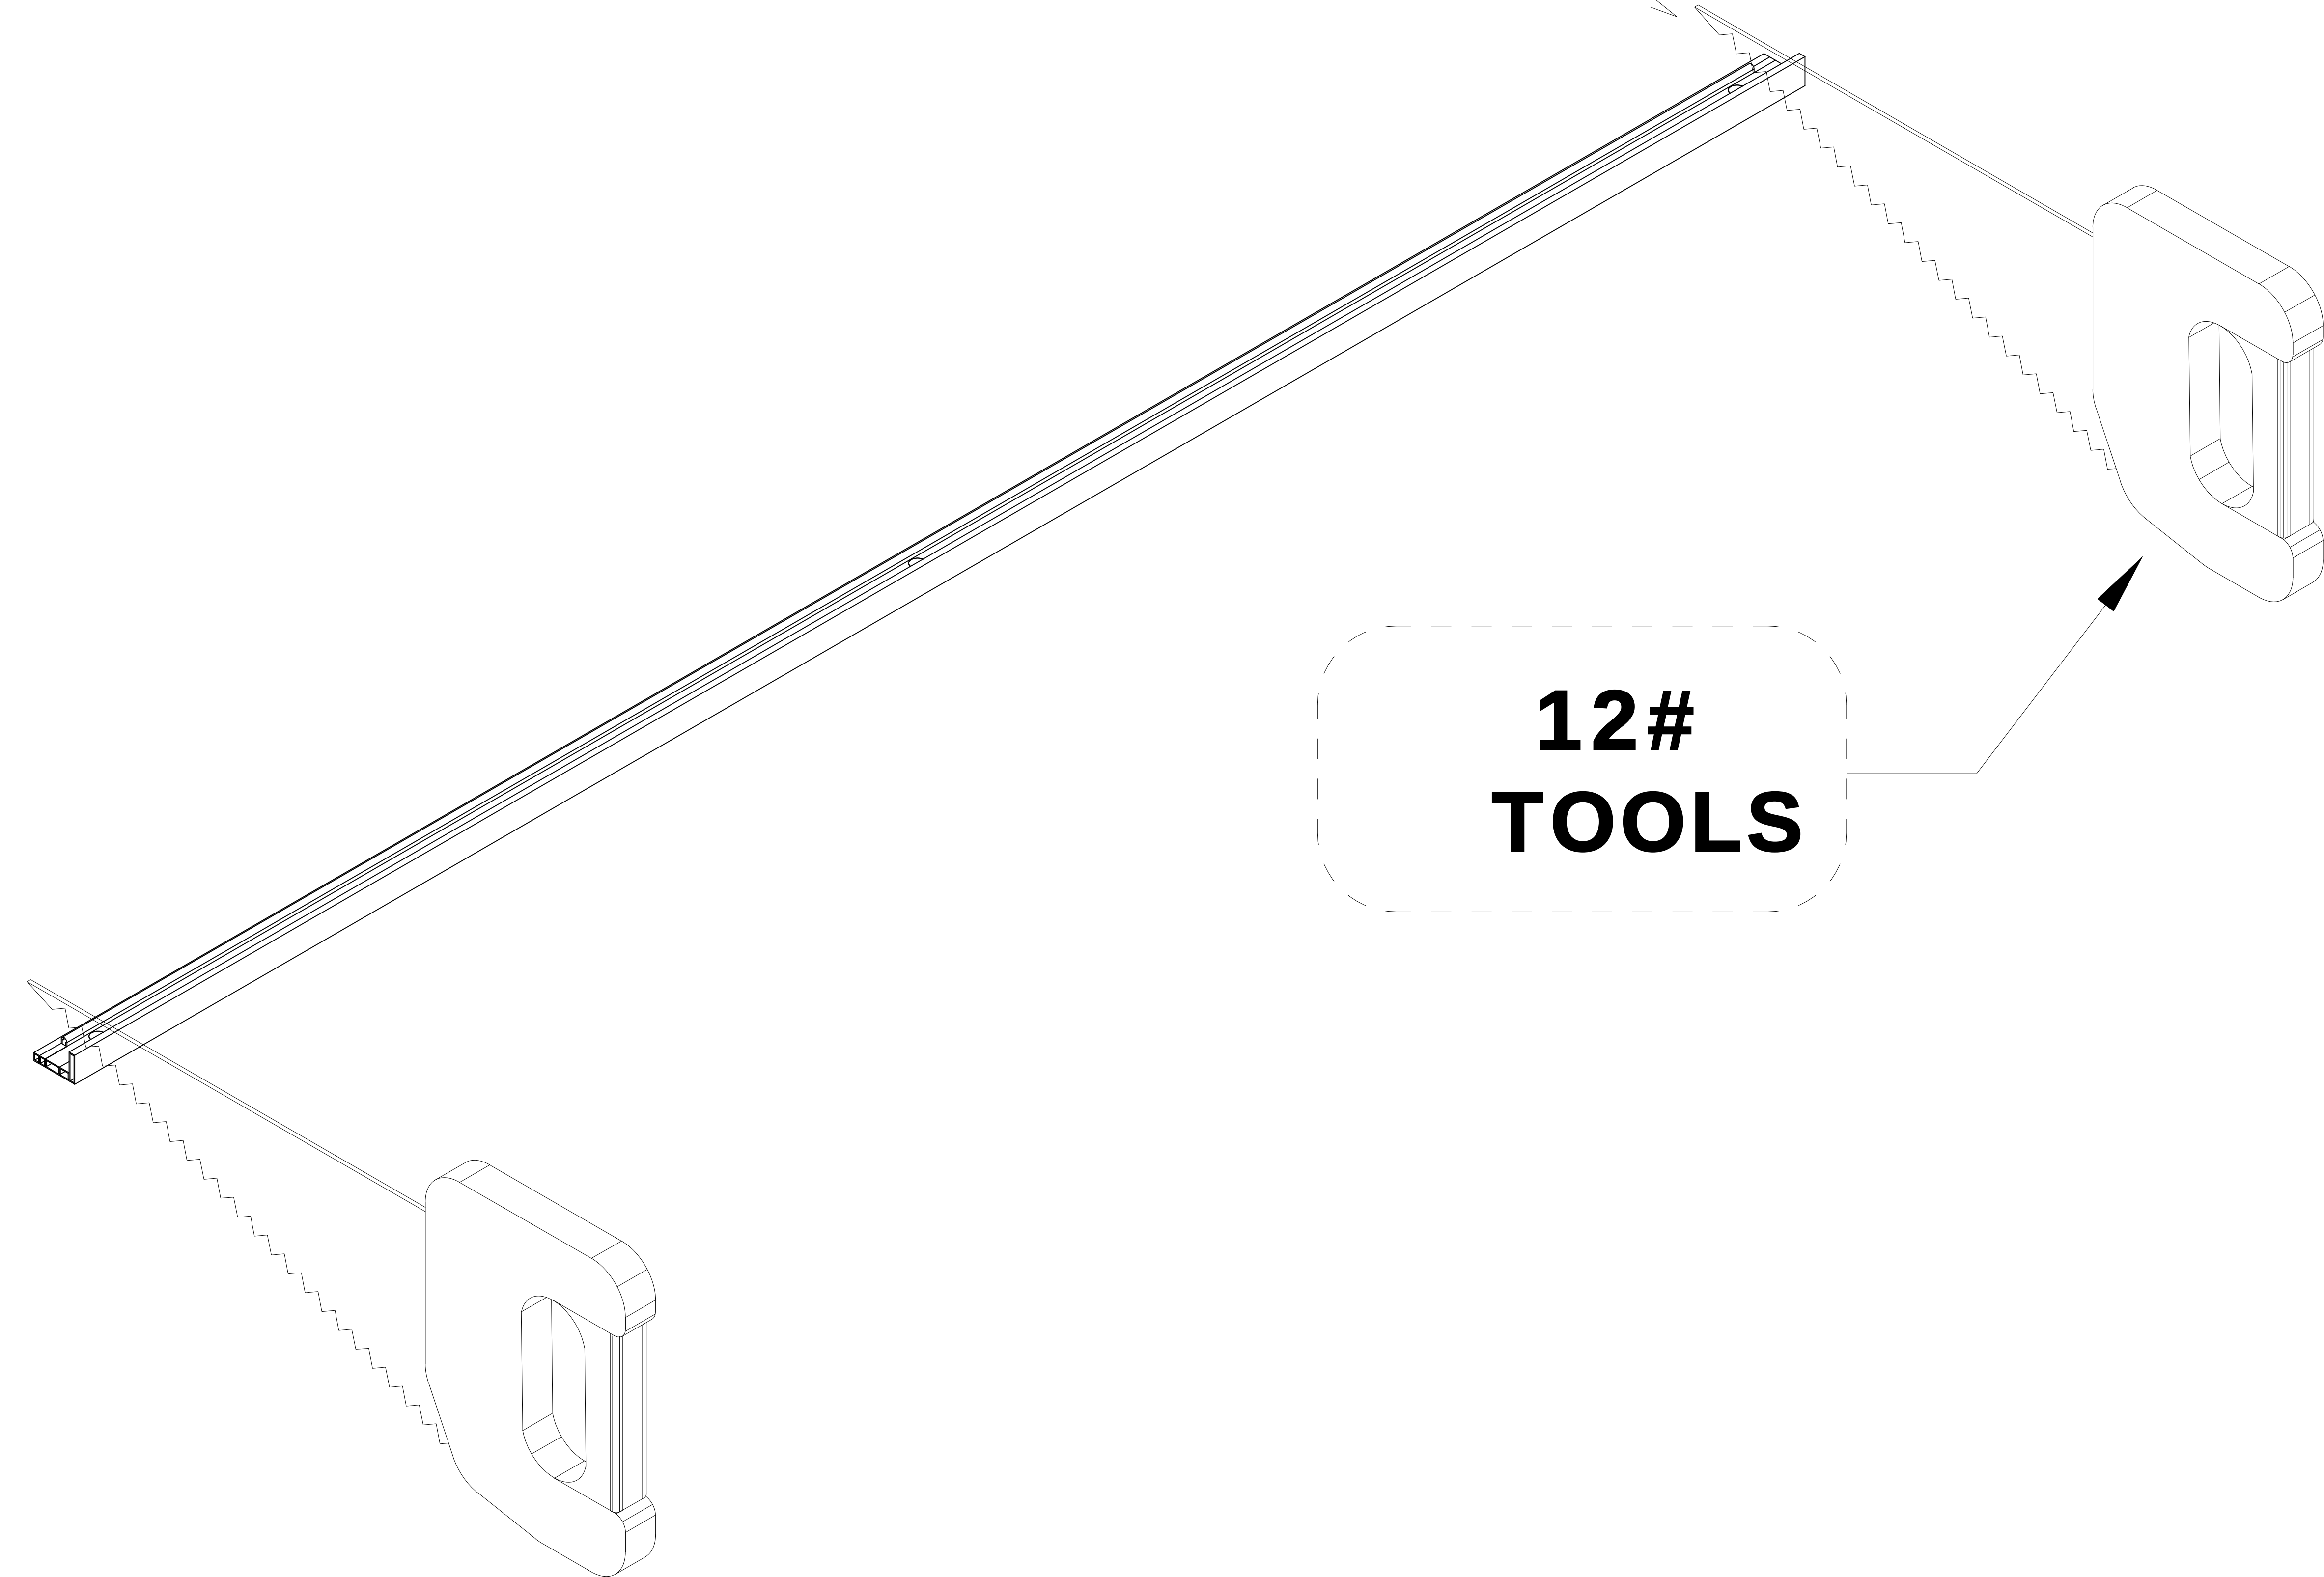

STEP- 1


mark the hole location.

**7#
TOOLS**

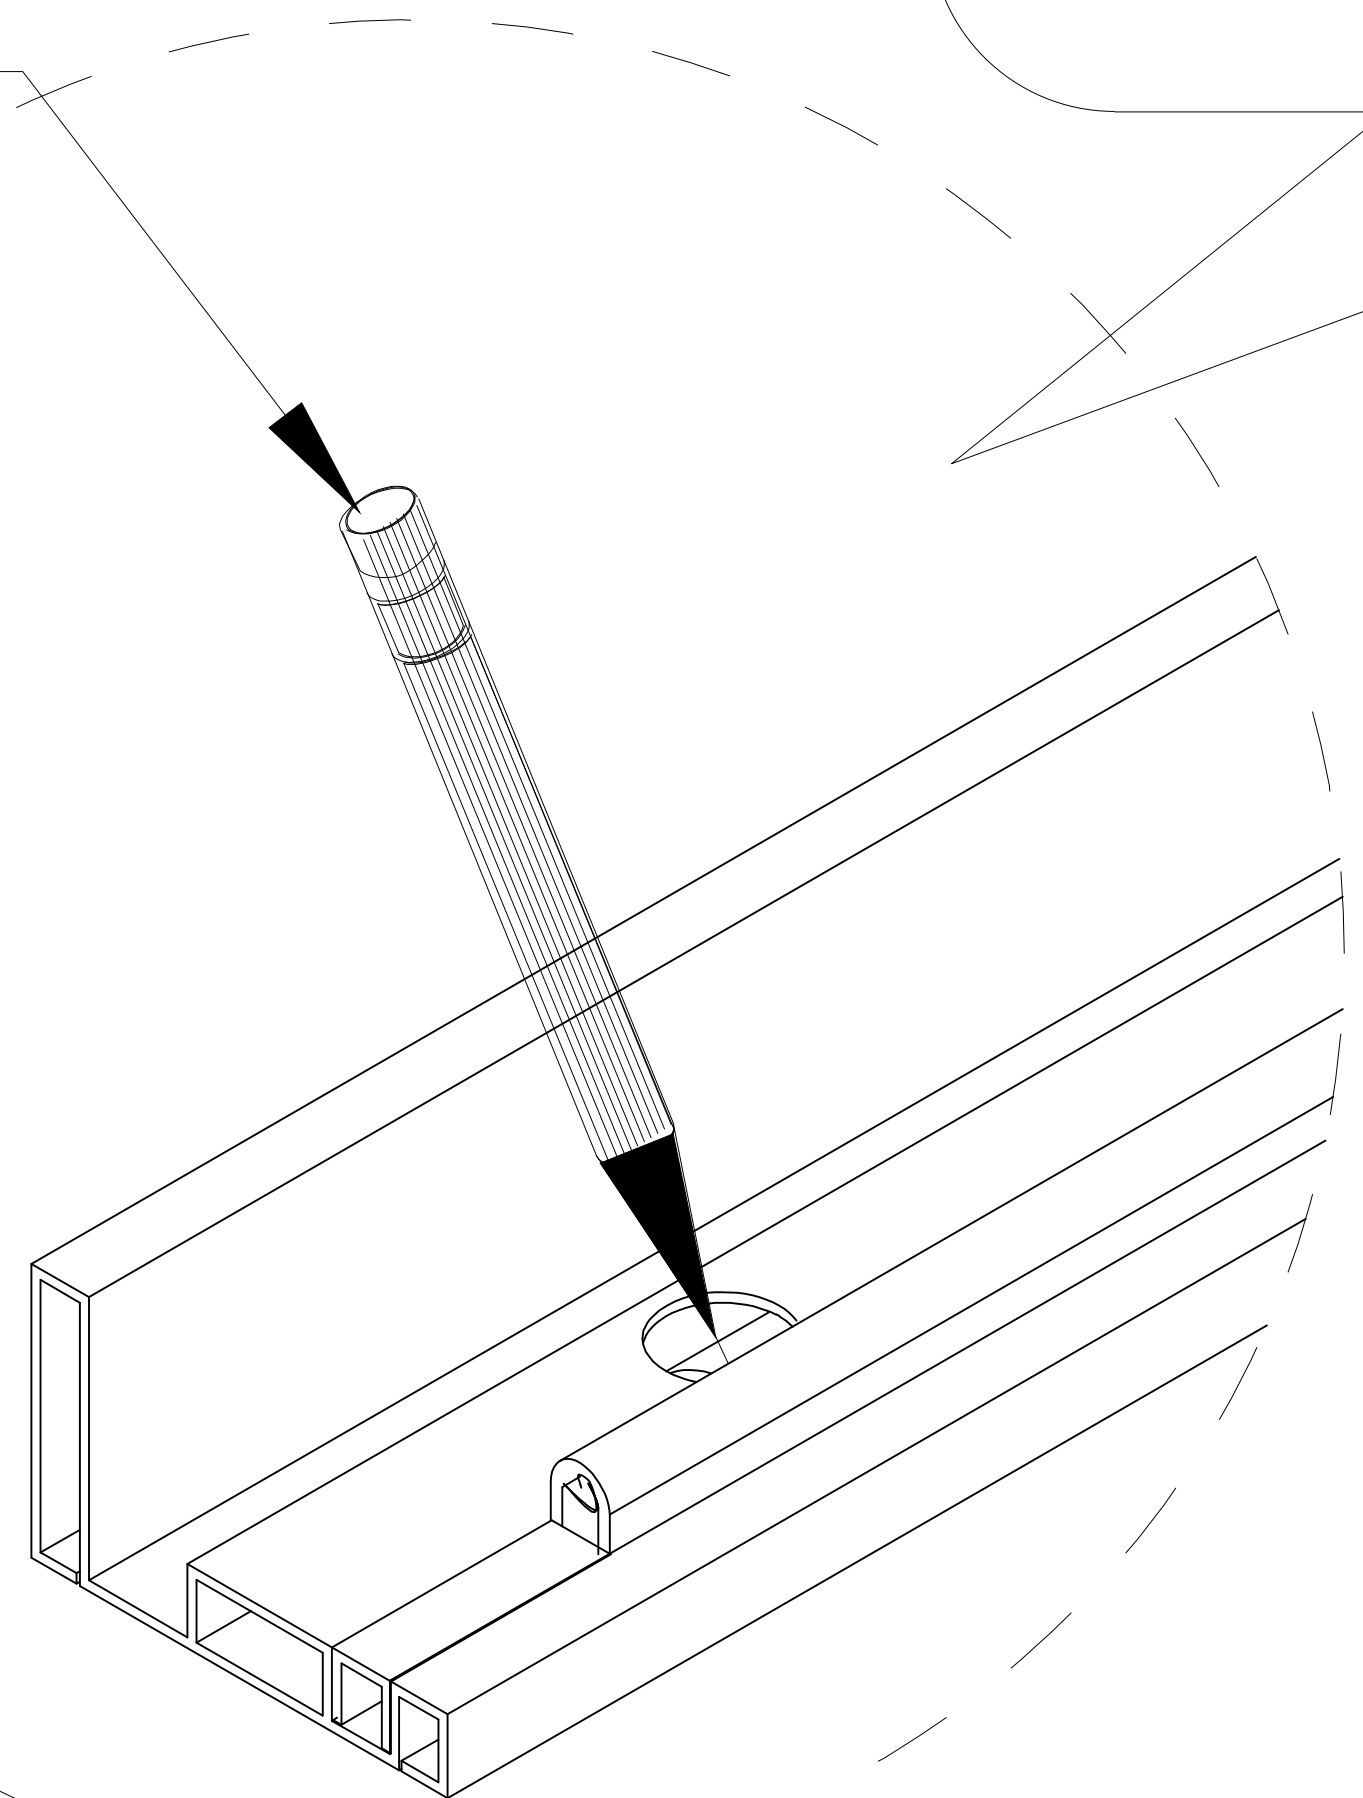


1

**8#
TOOLS**

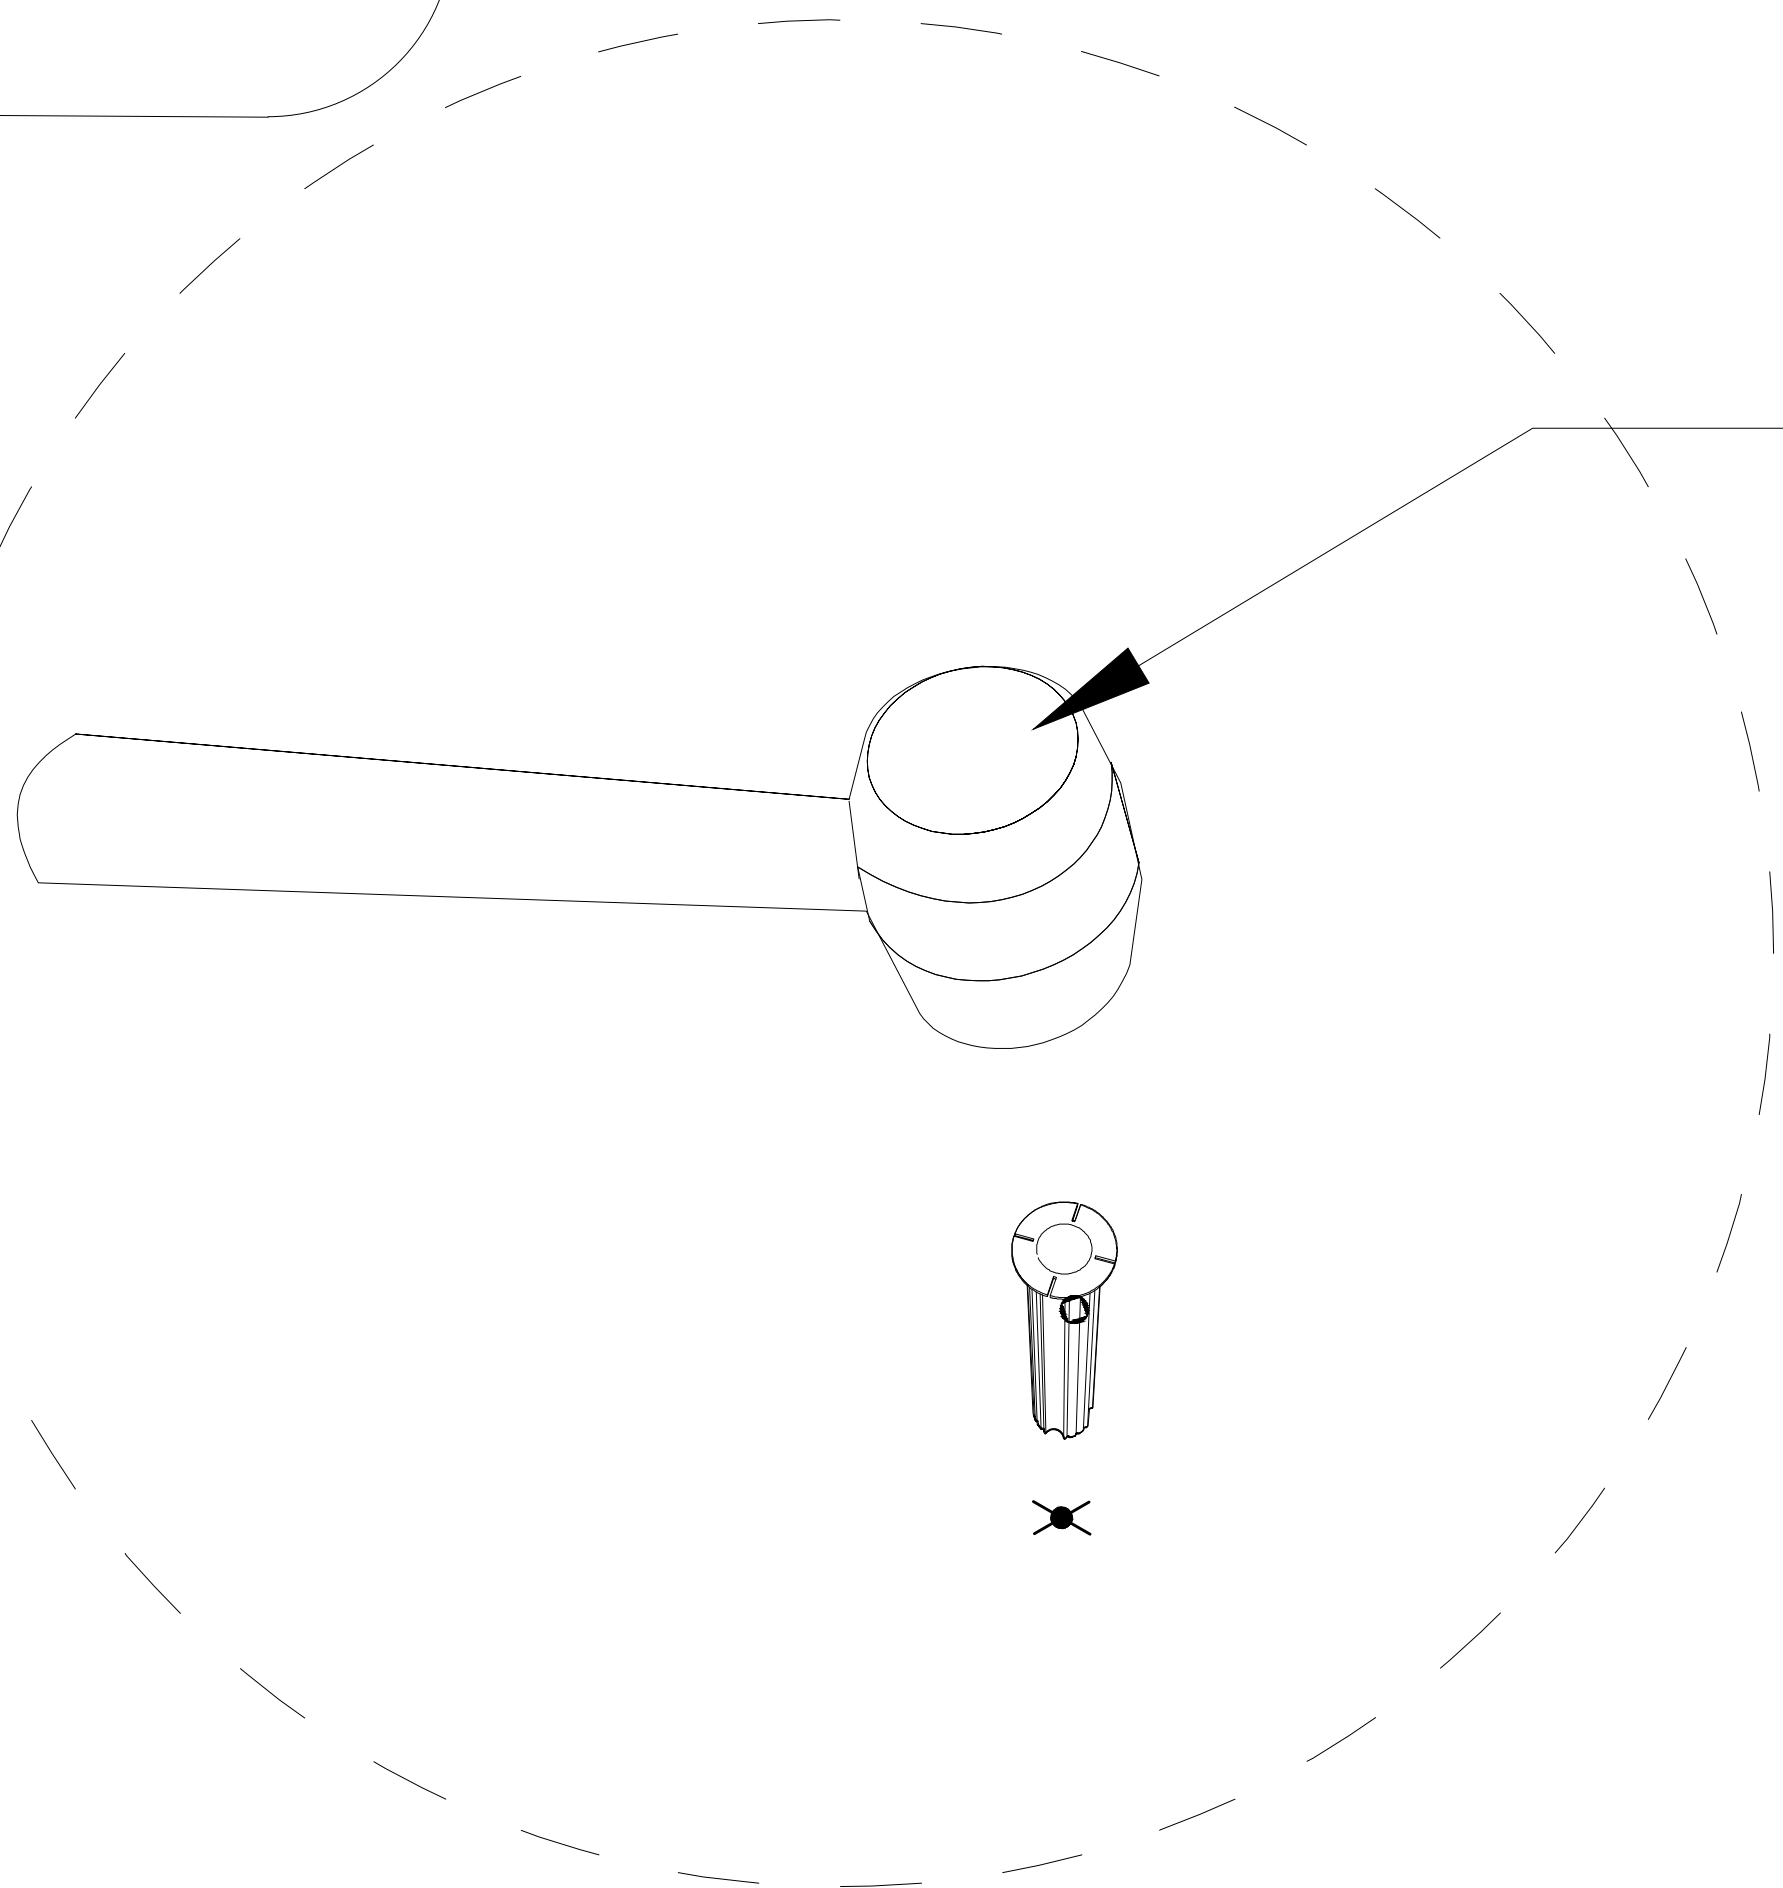


4

**3#
TOOLS**

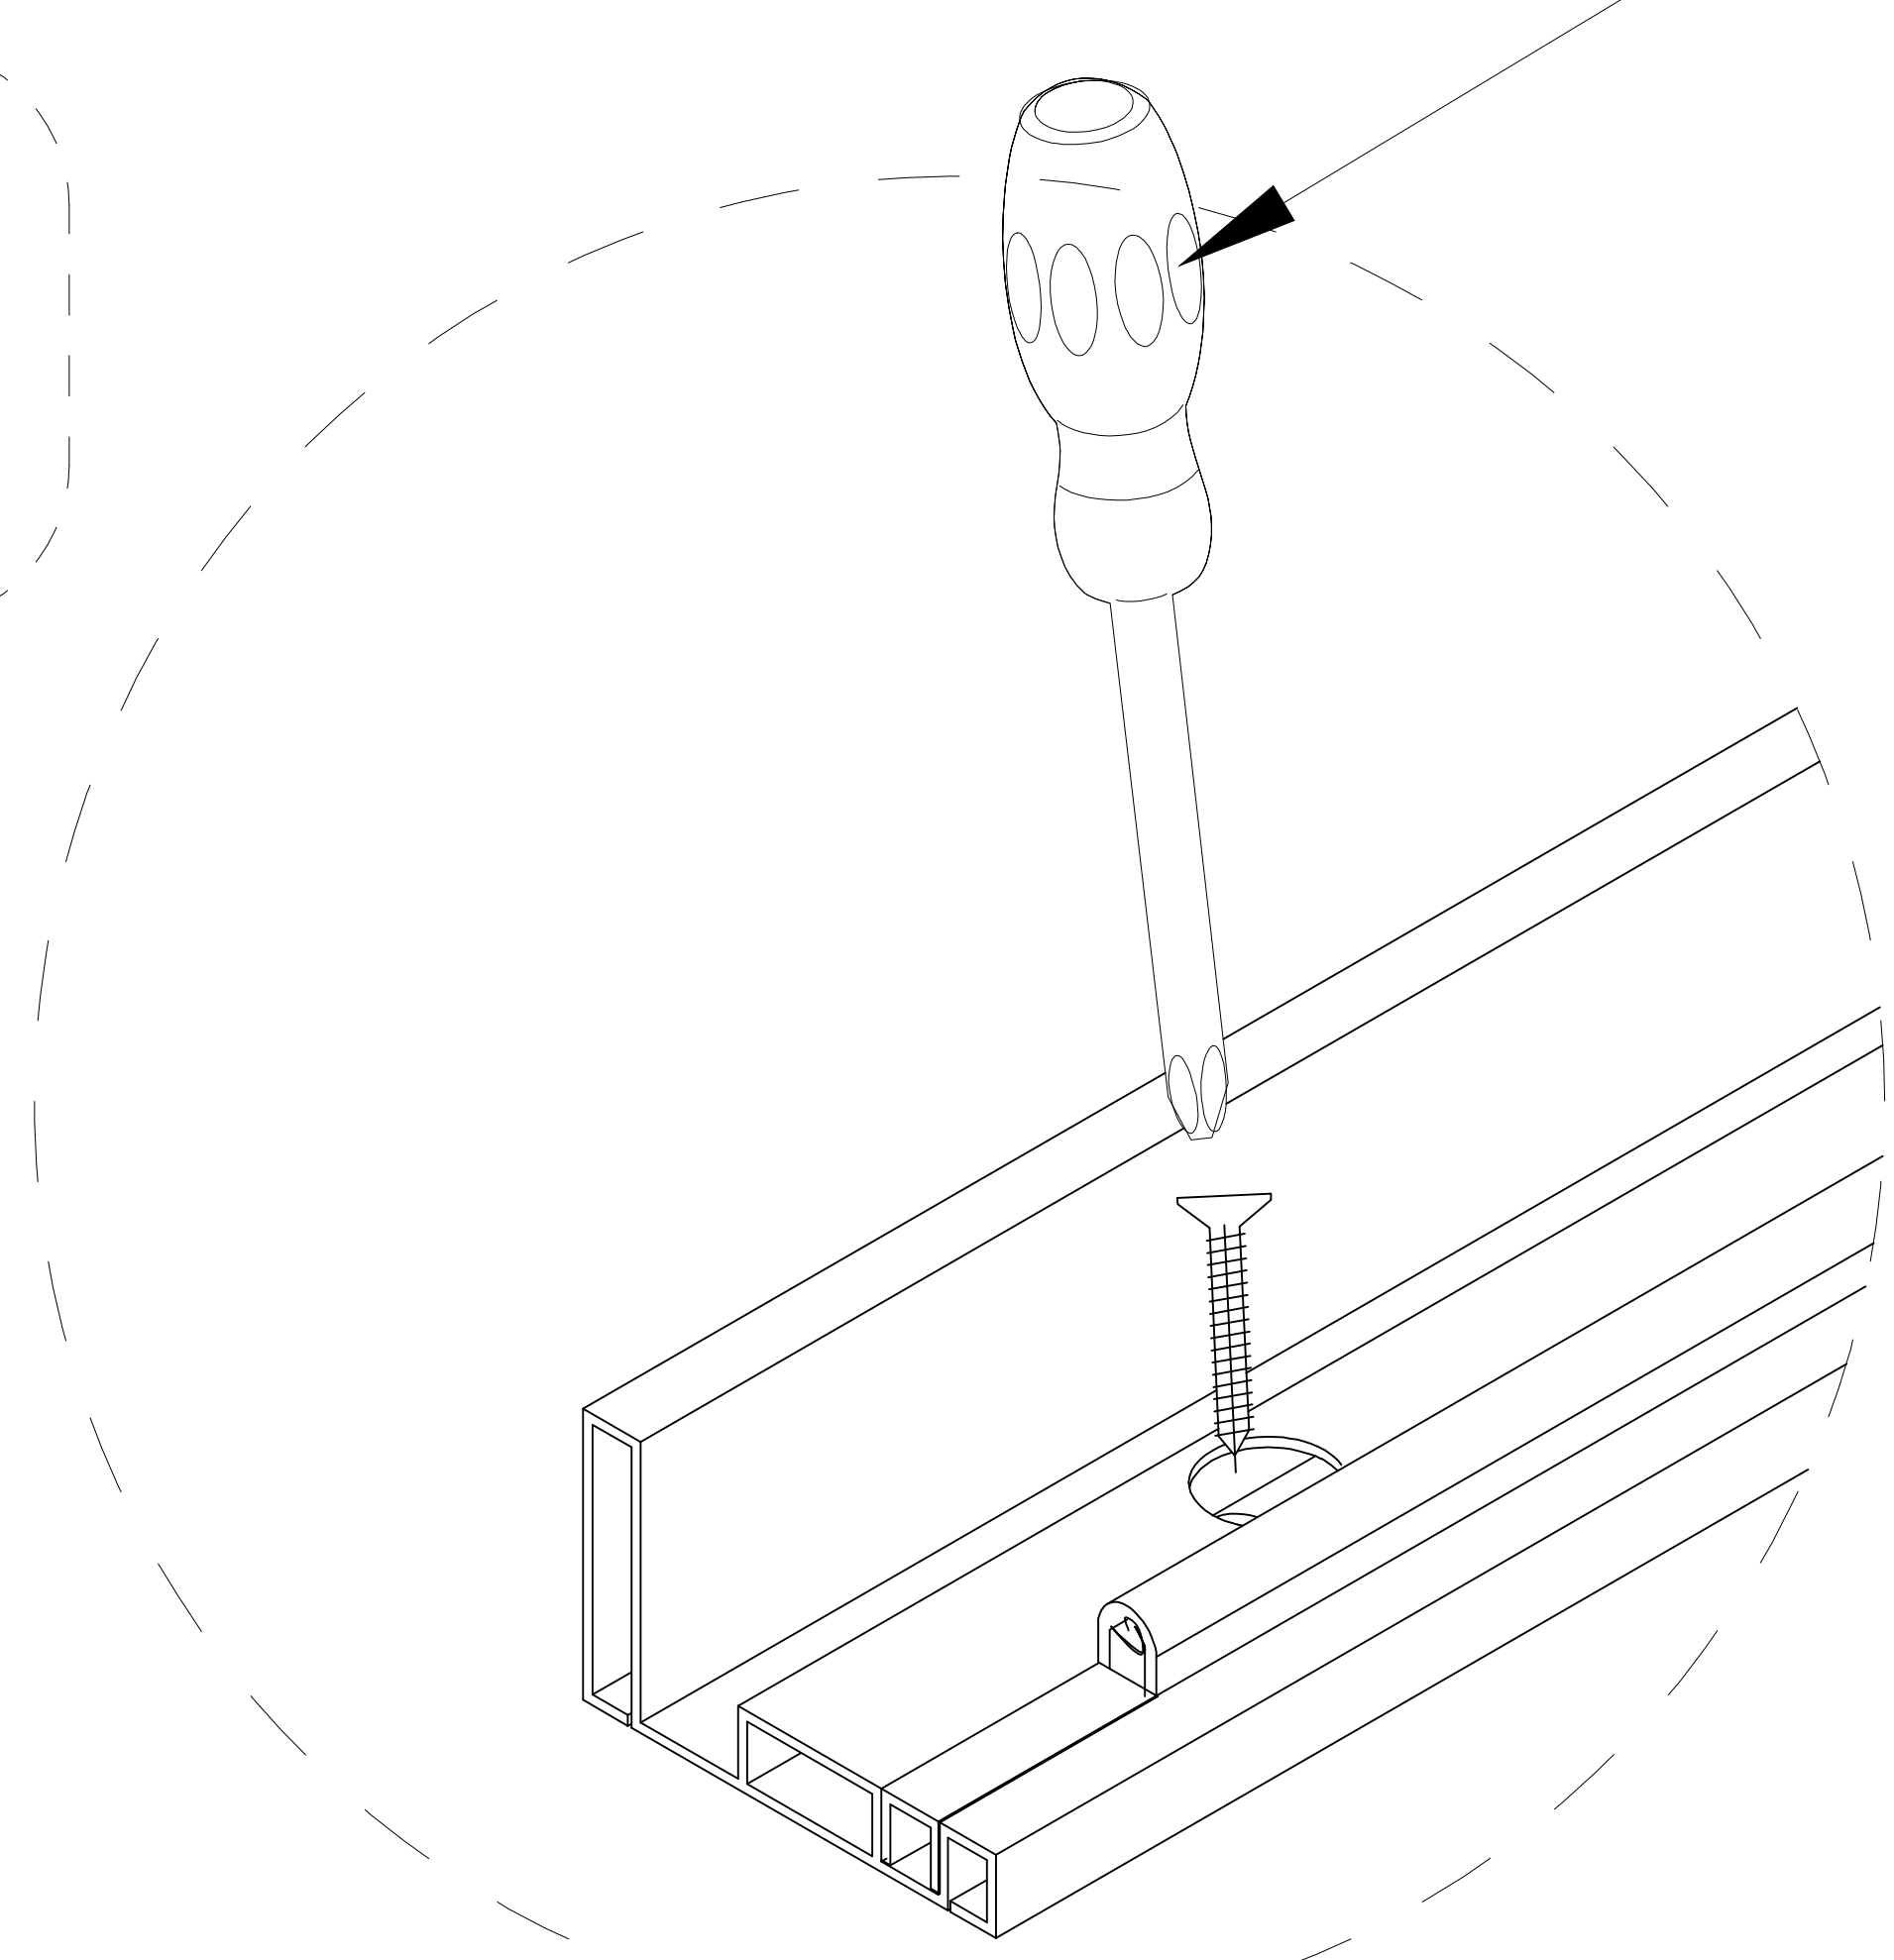


5

**1#
TOOLS**

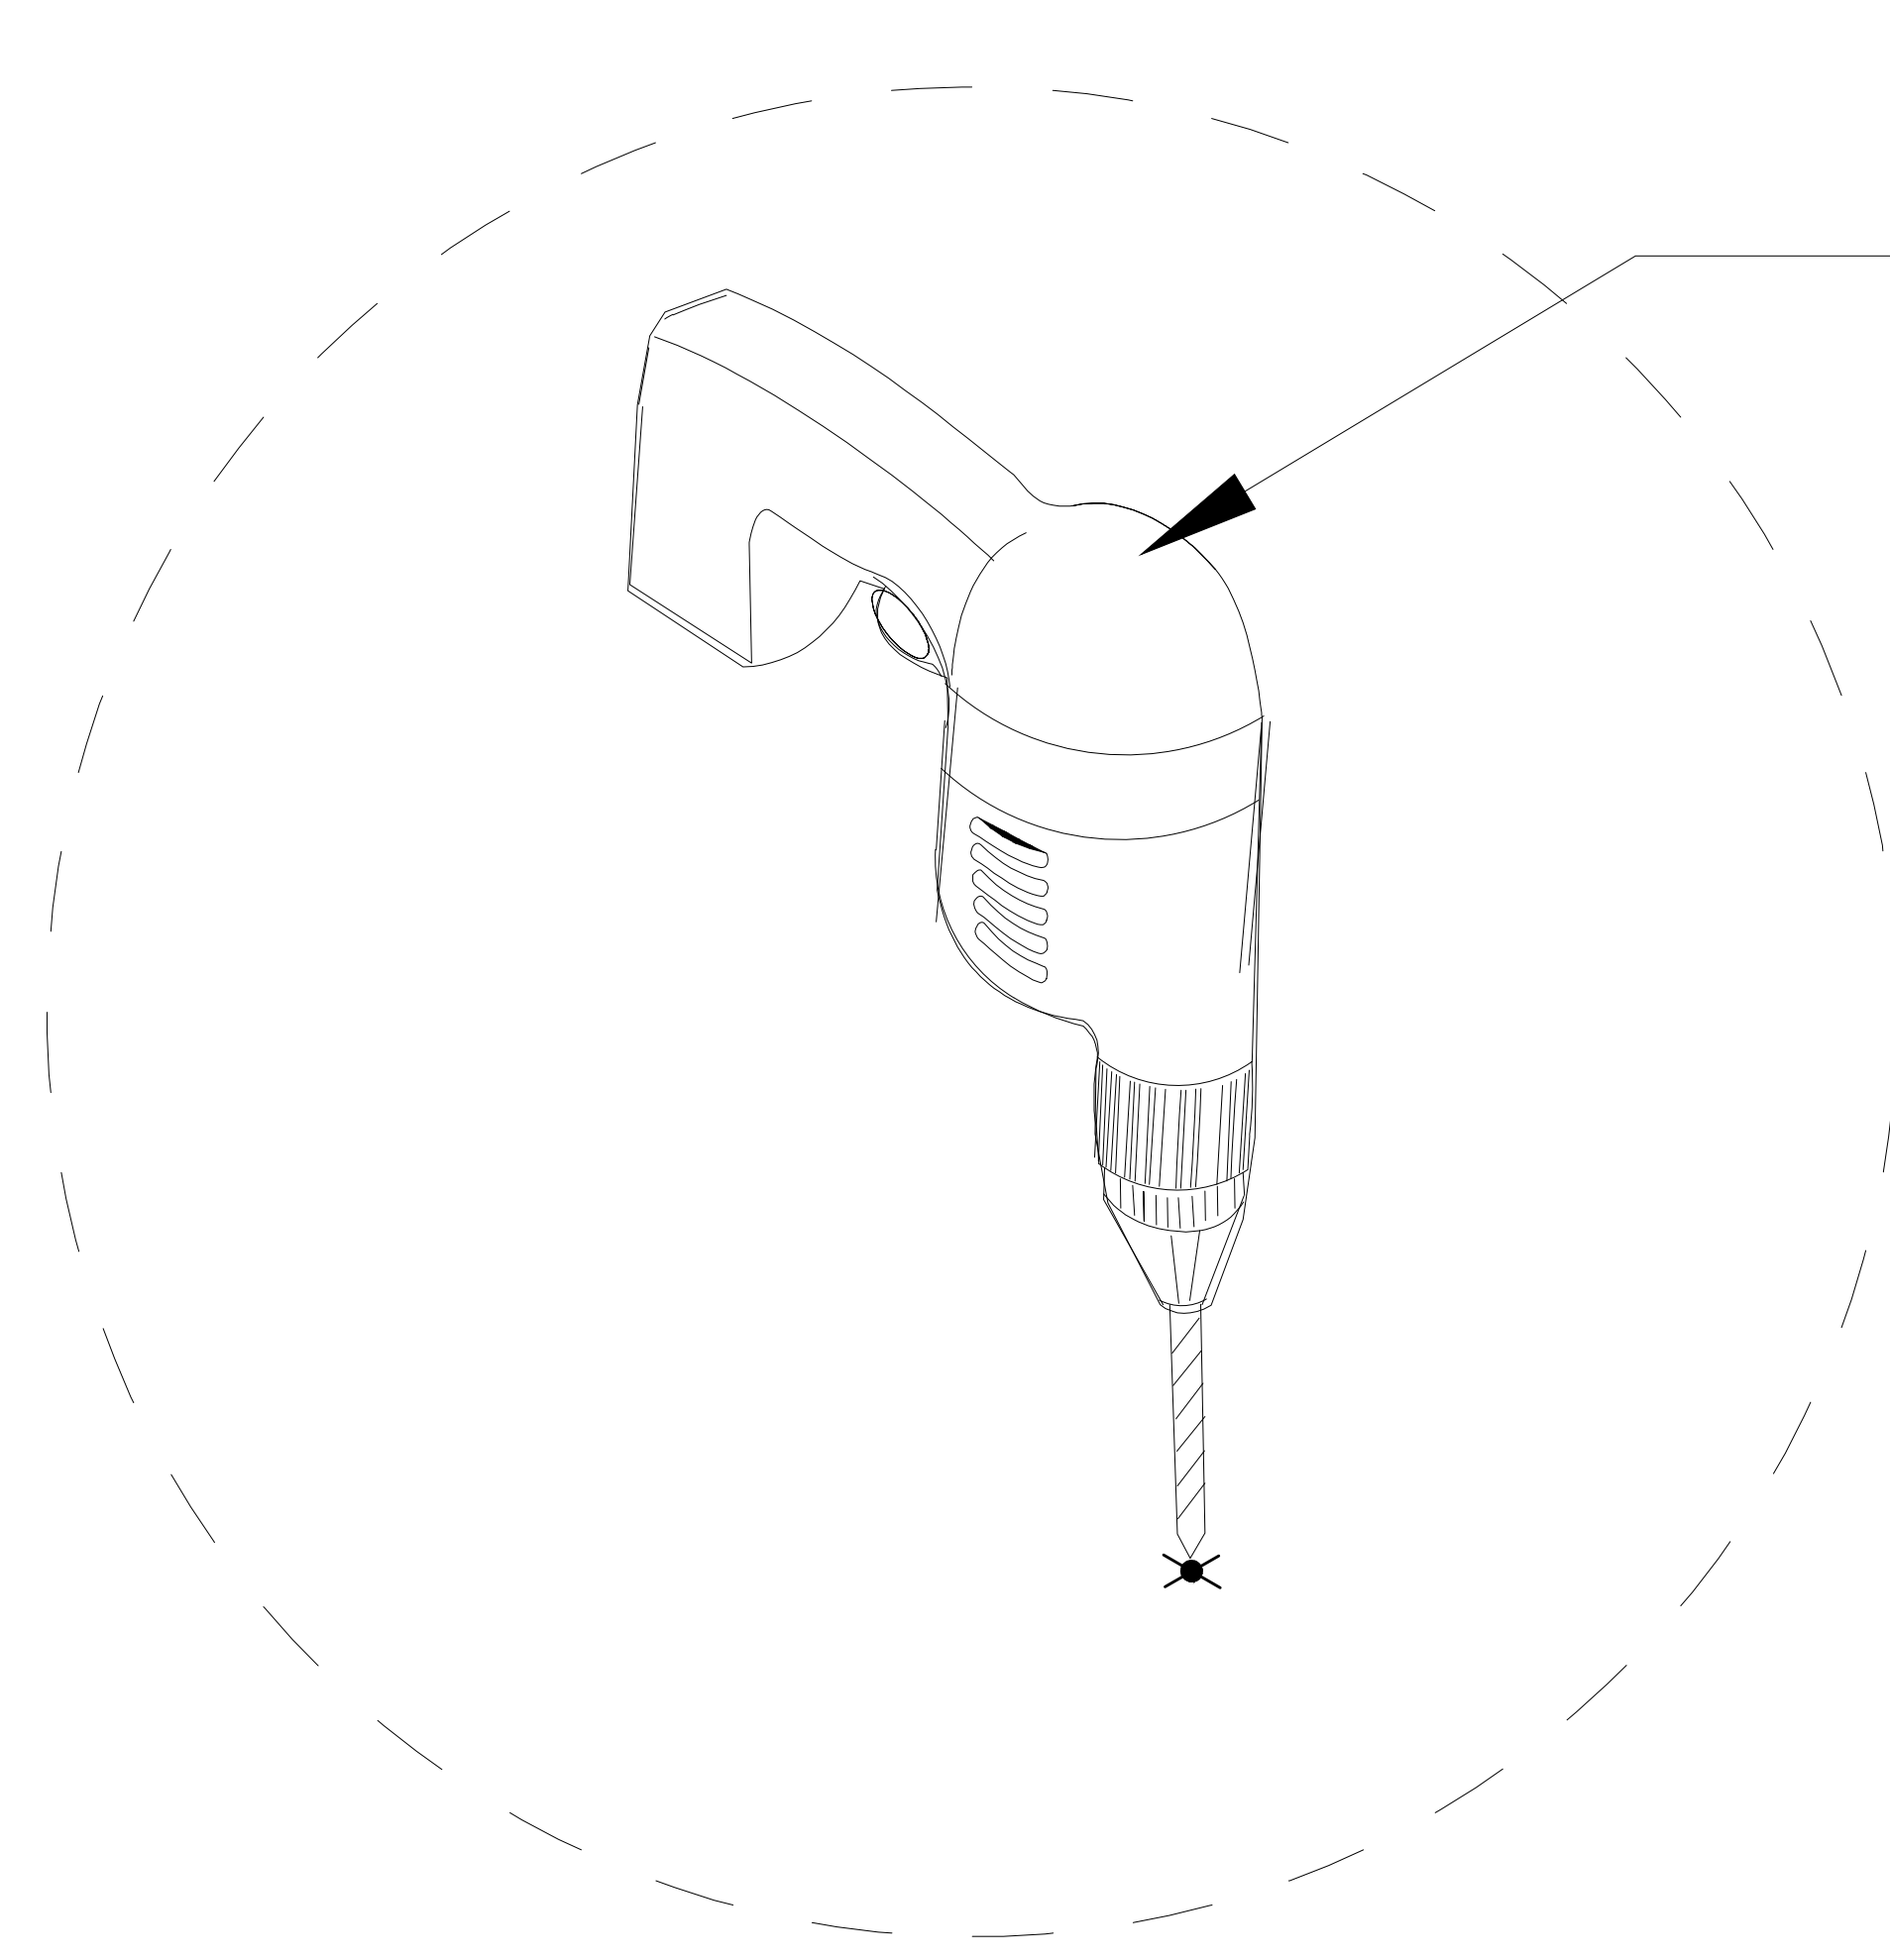


2


**9#
TOOLS**

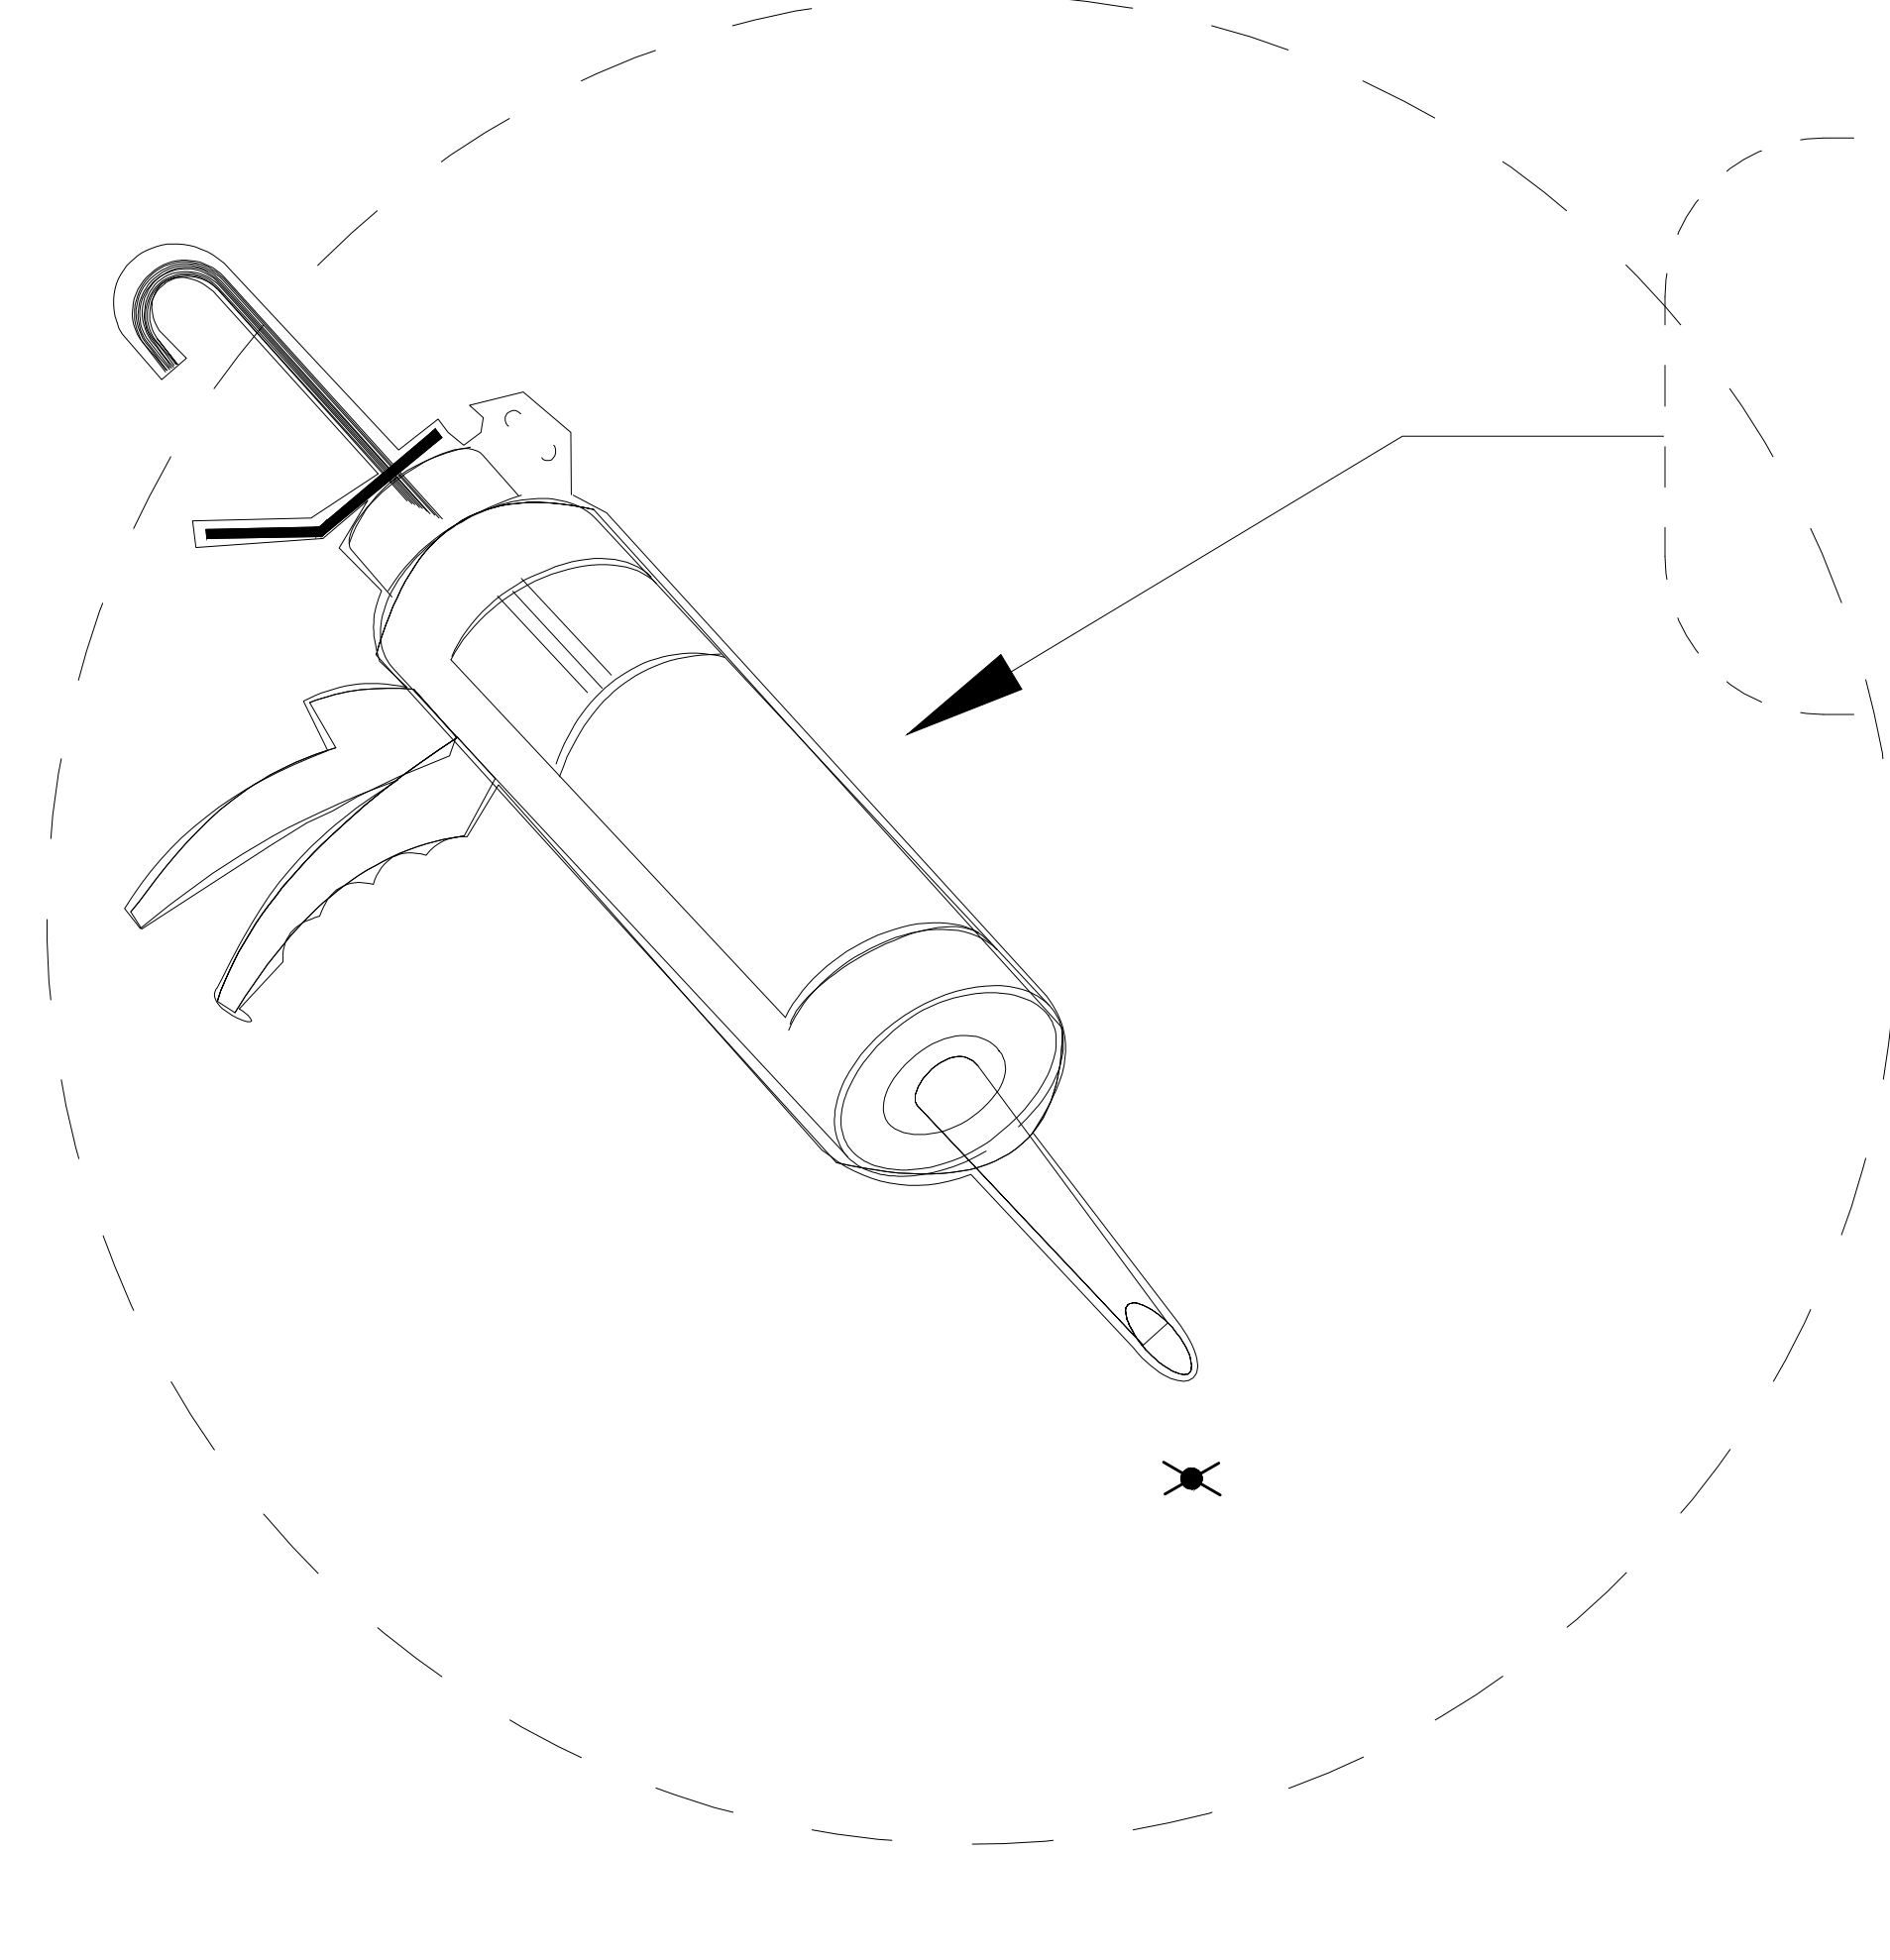


3

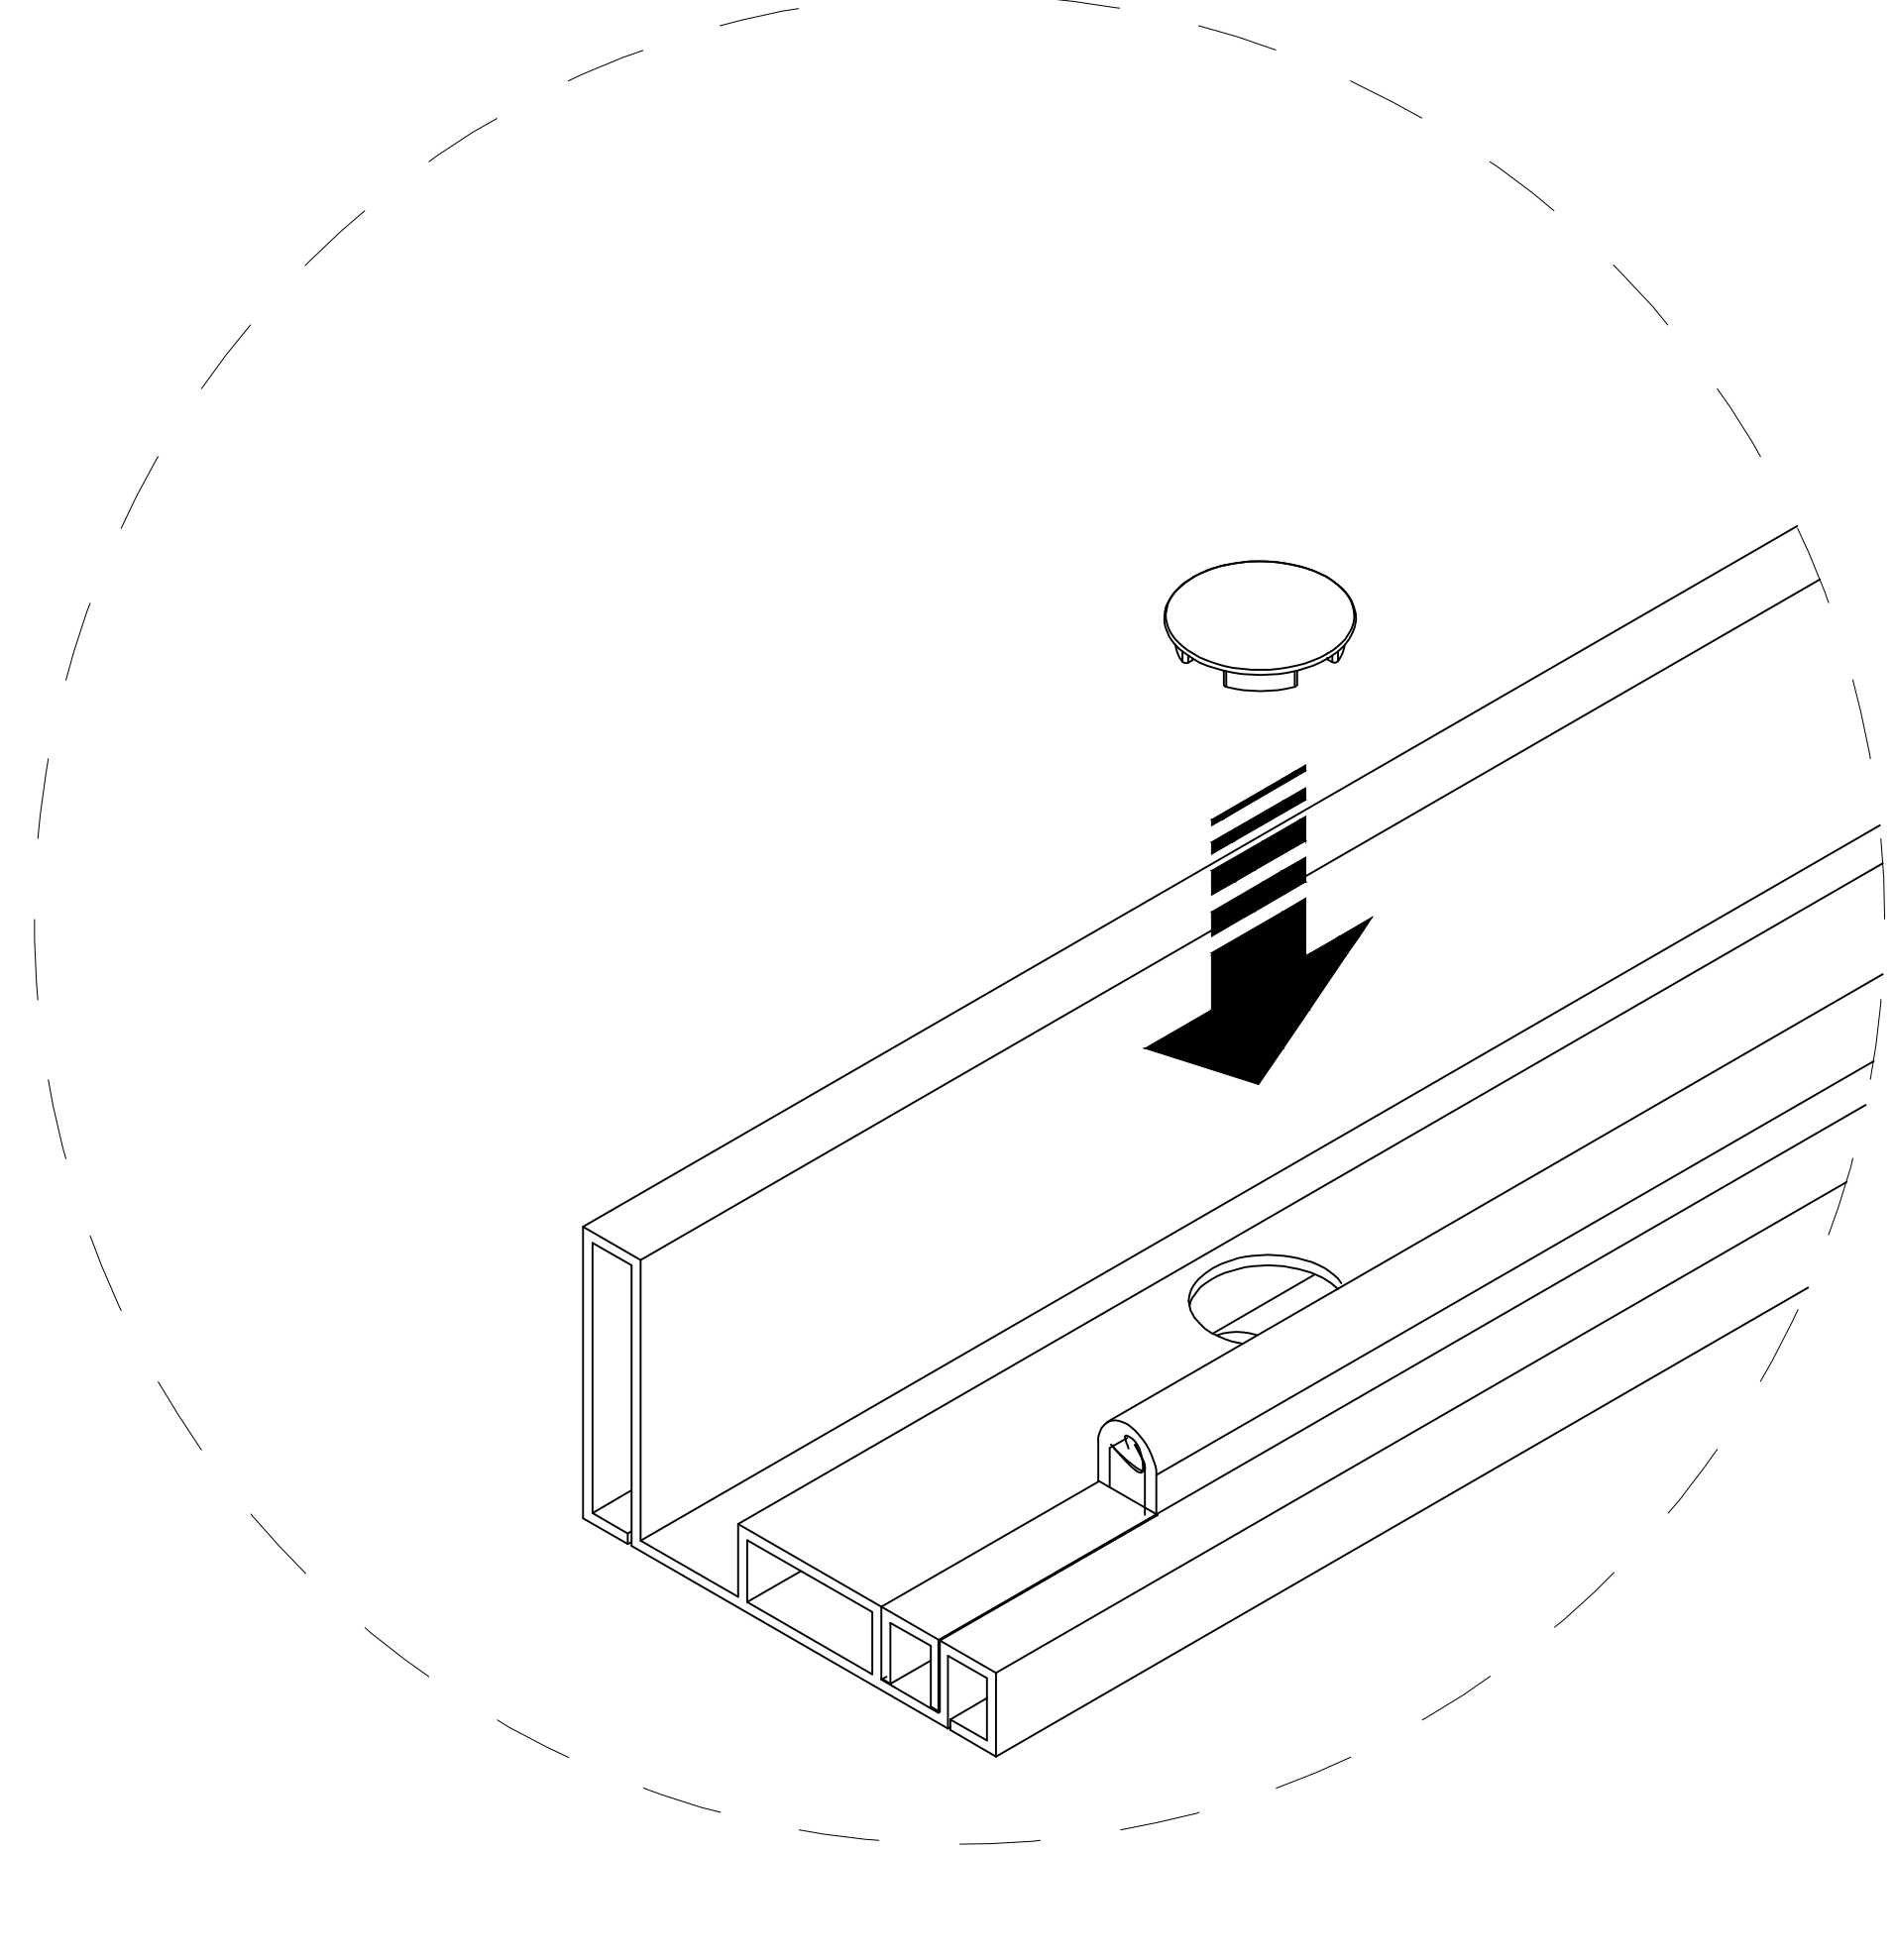

6

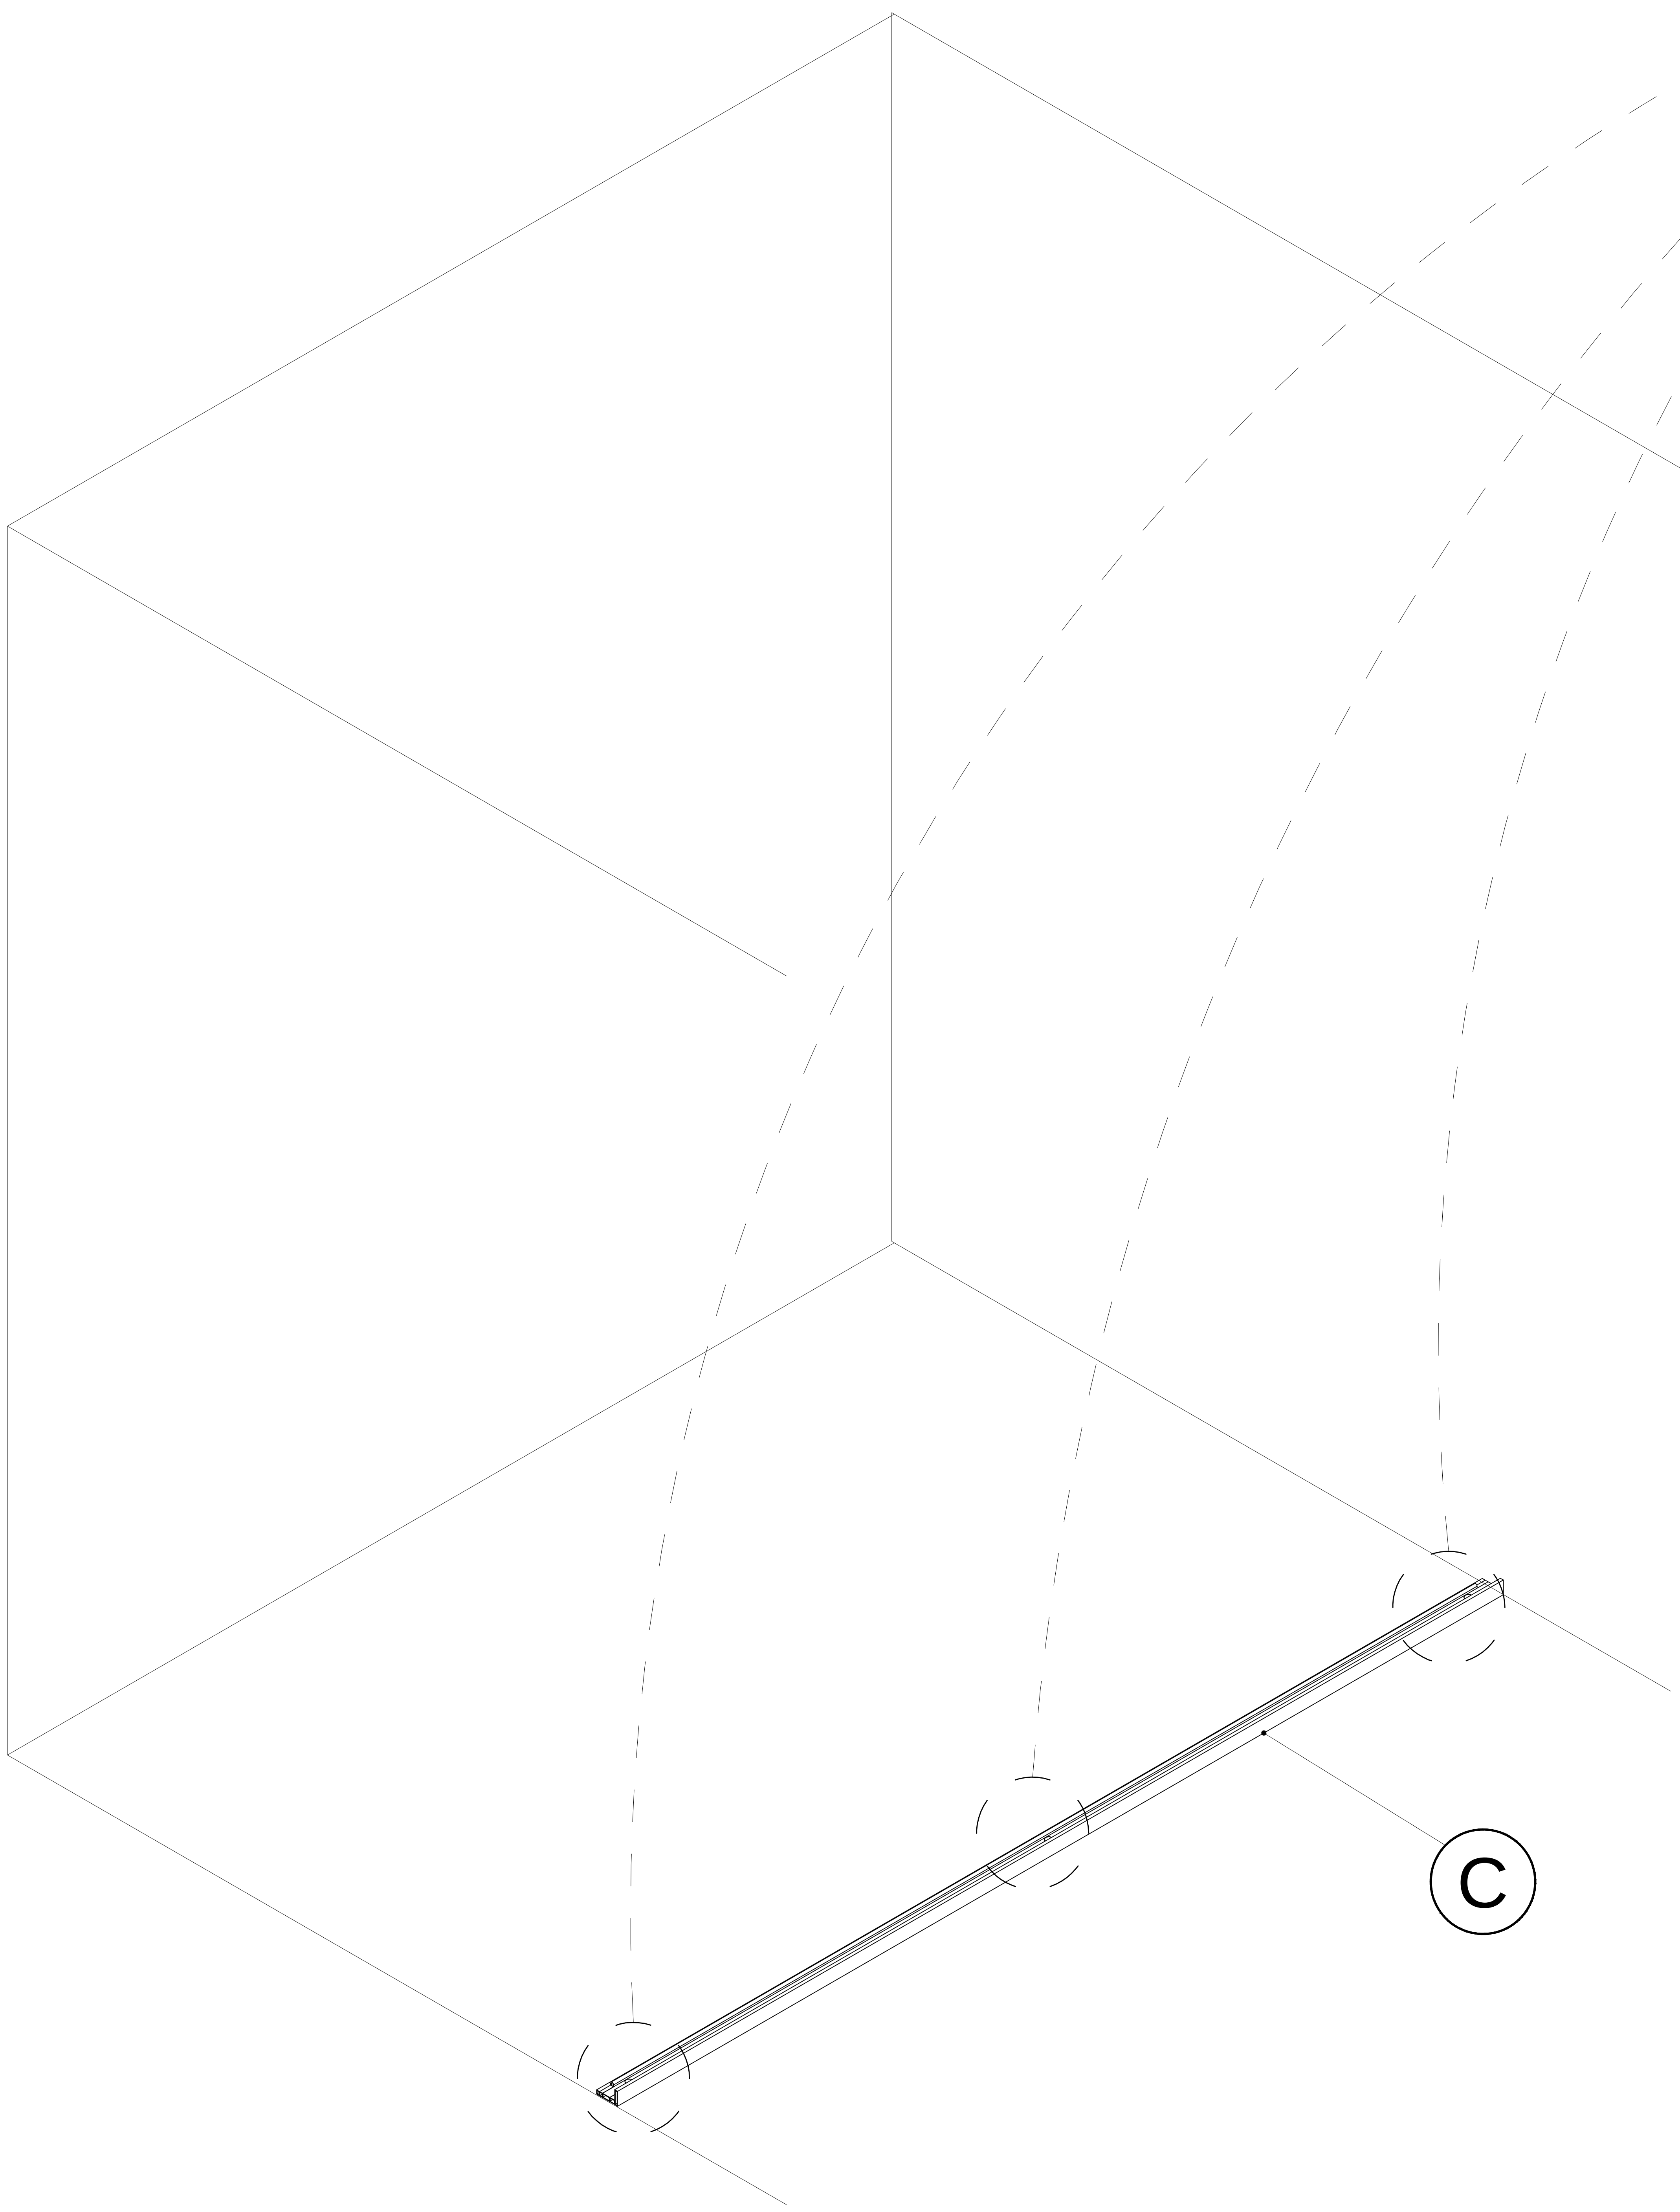


STEP- 2

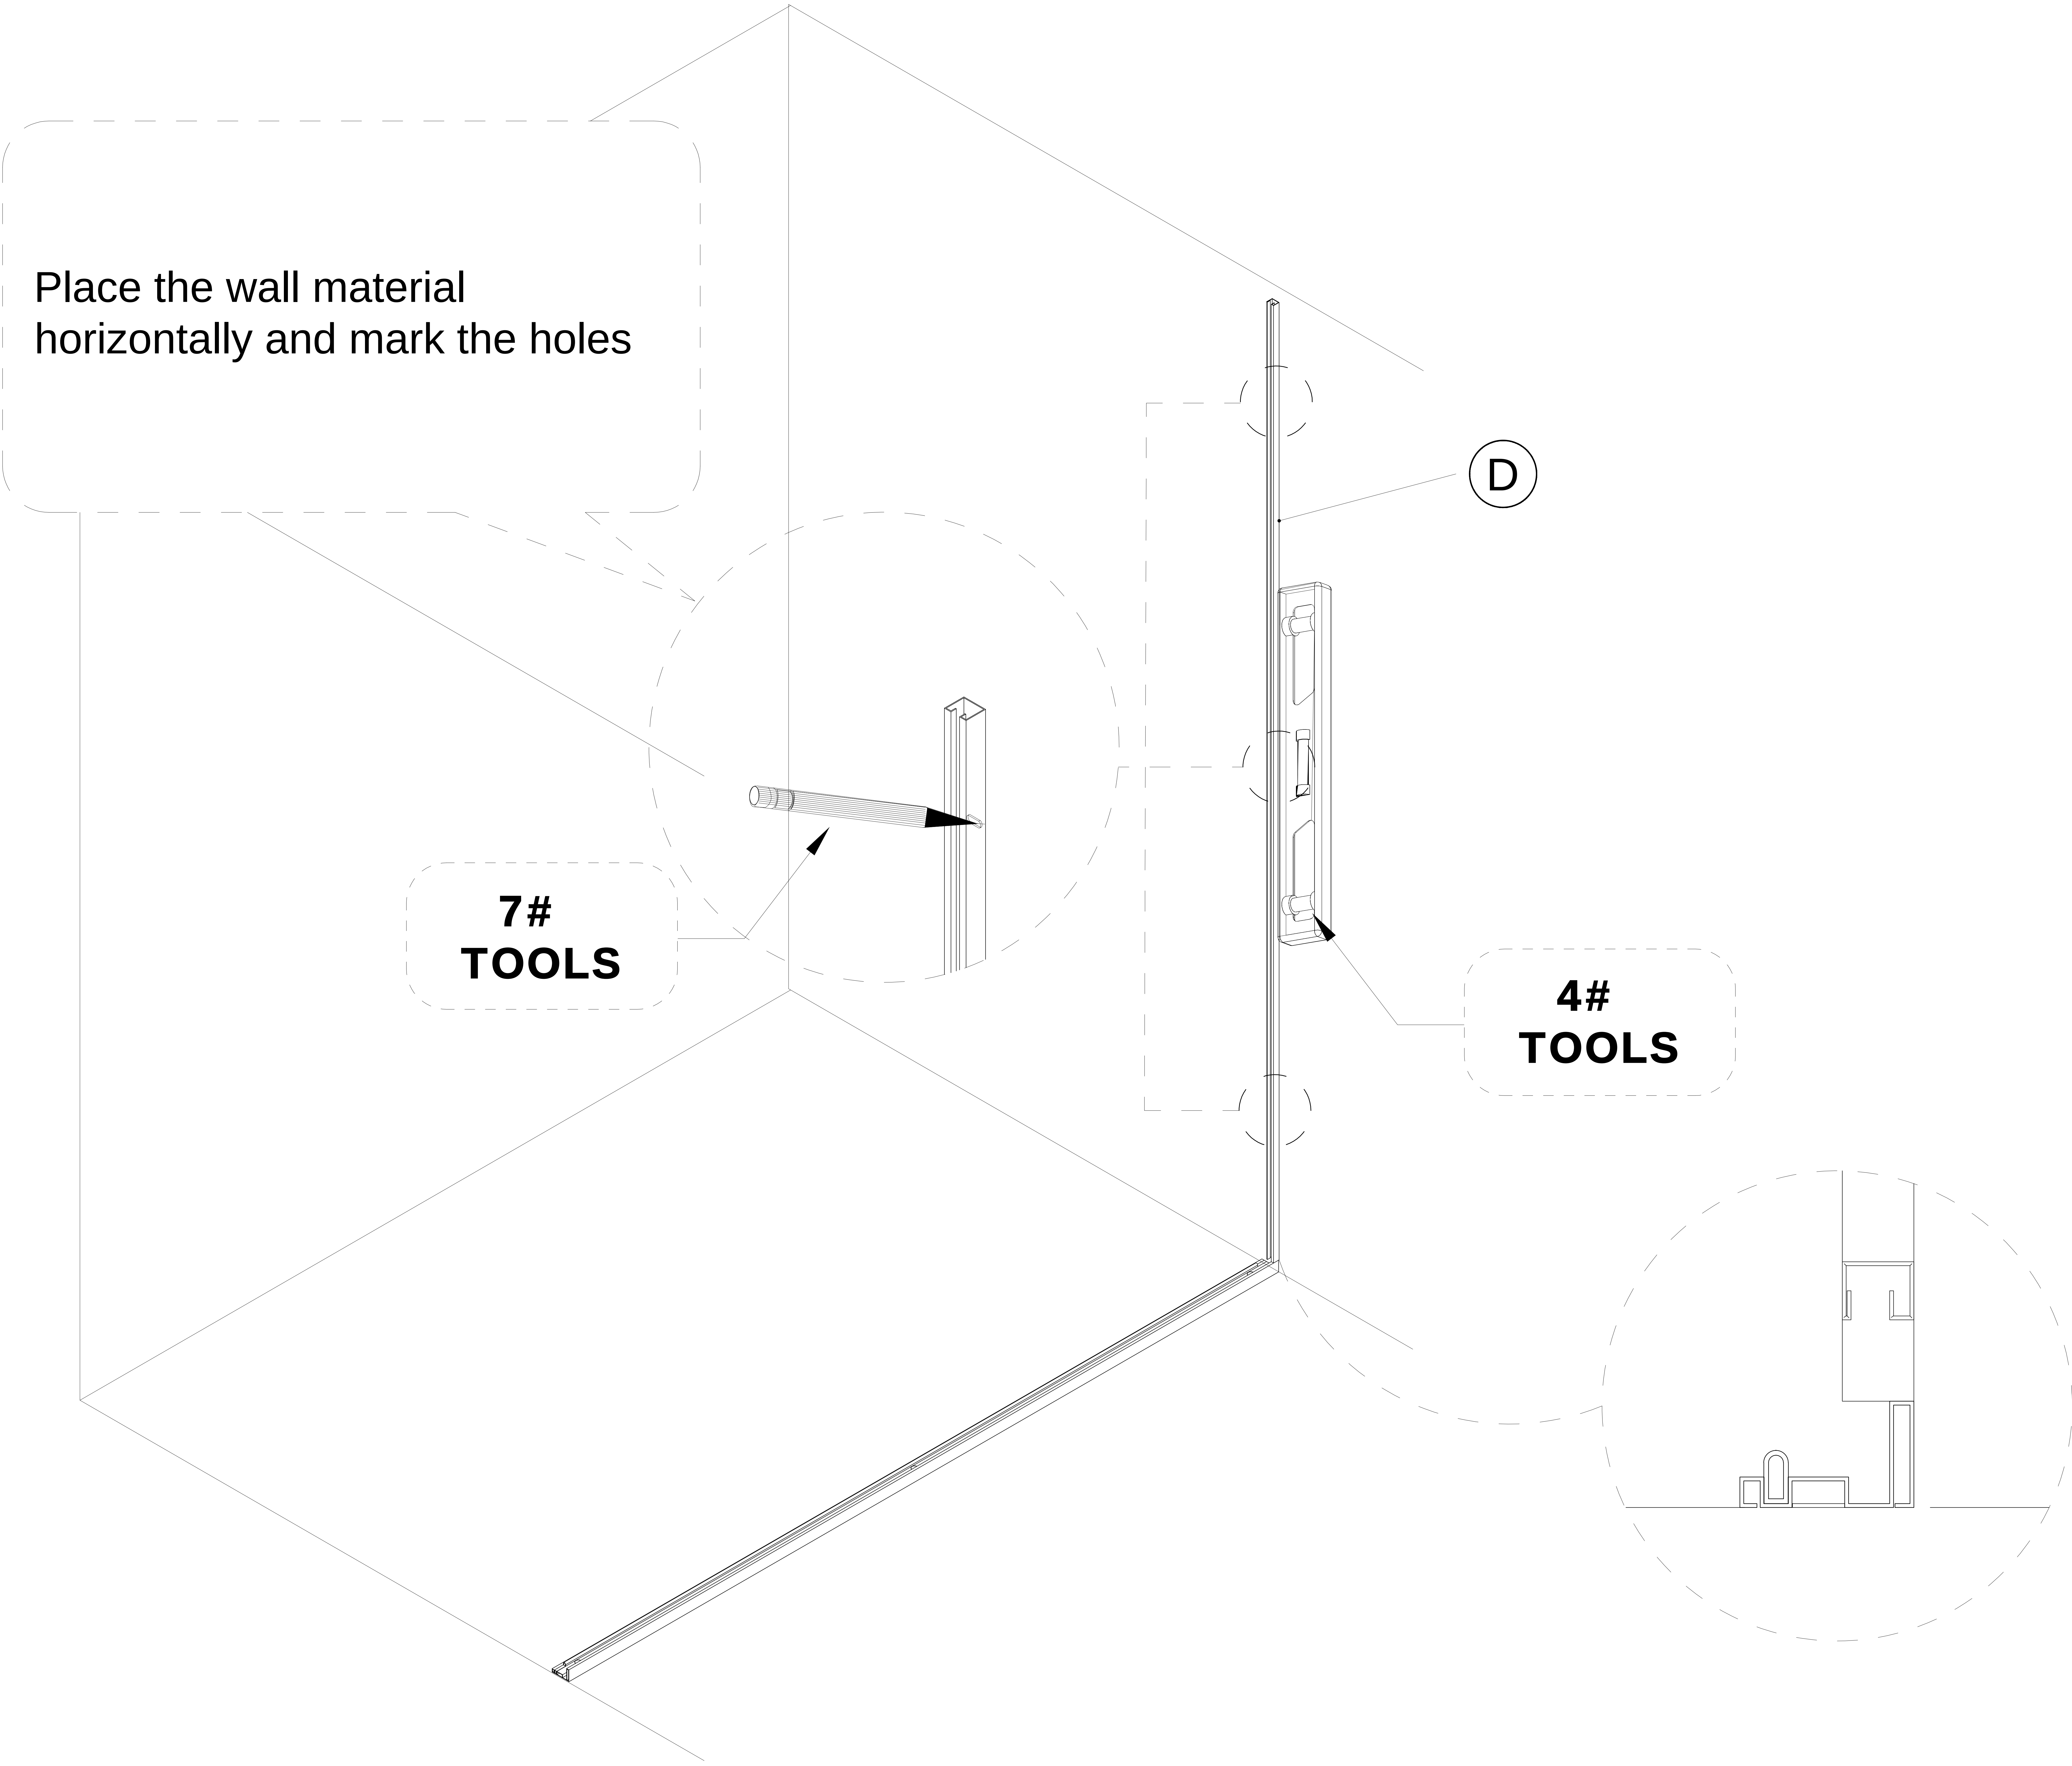


STEP- 3

Drill holes in the marked locations and insert expansion pellets

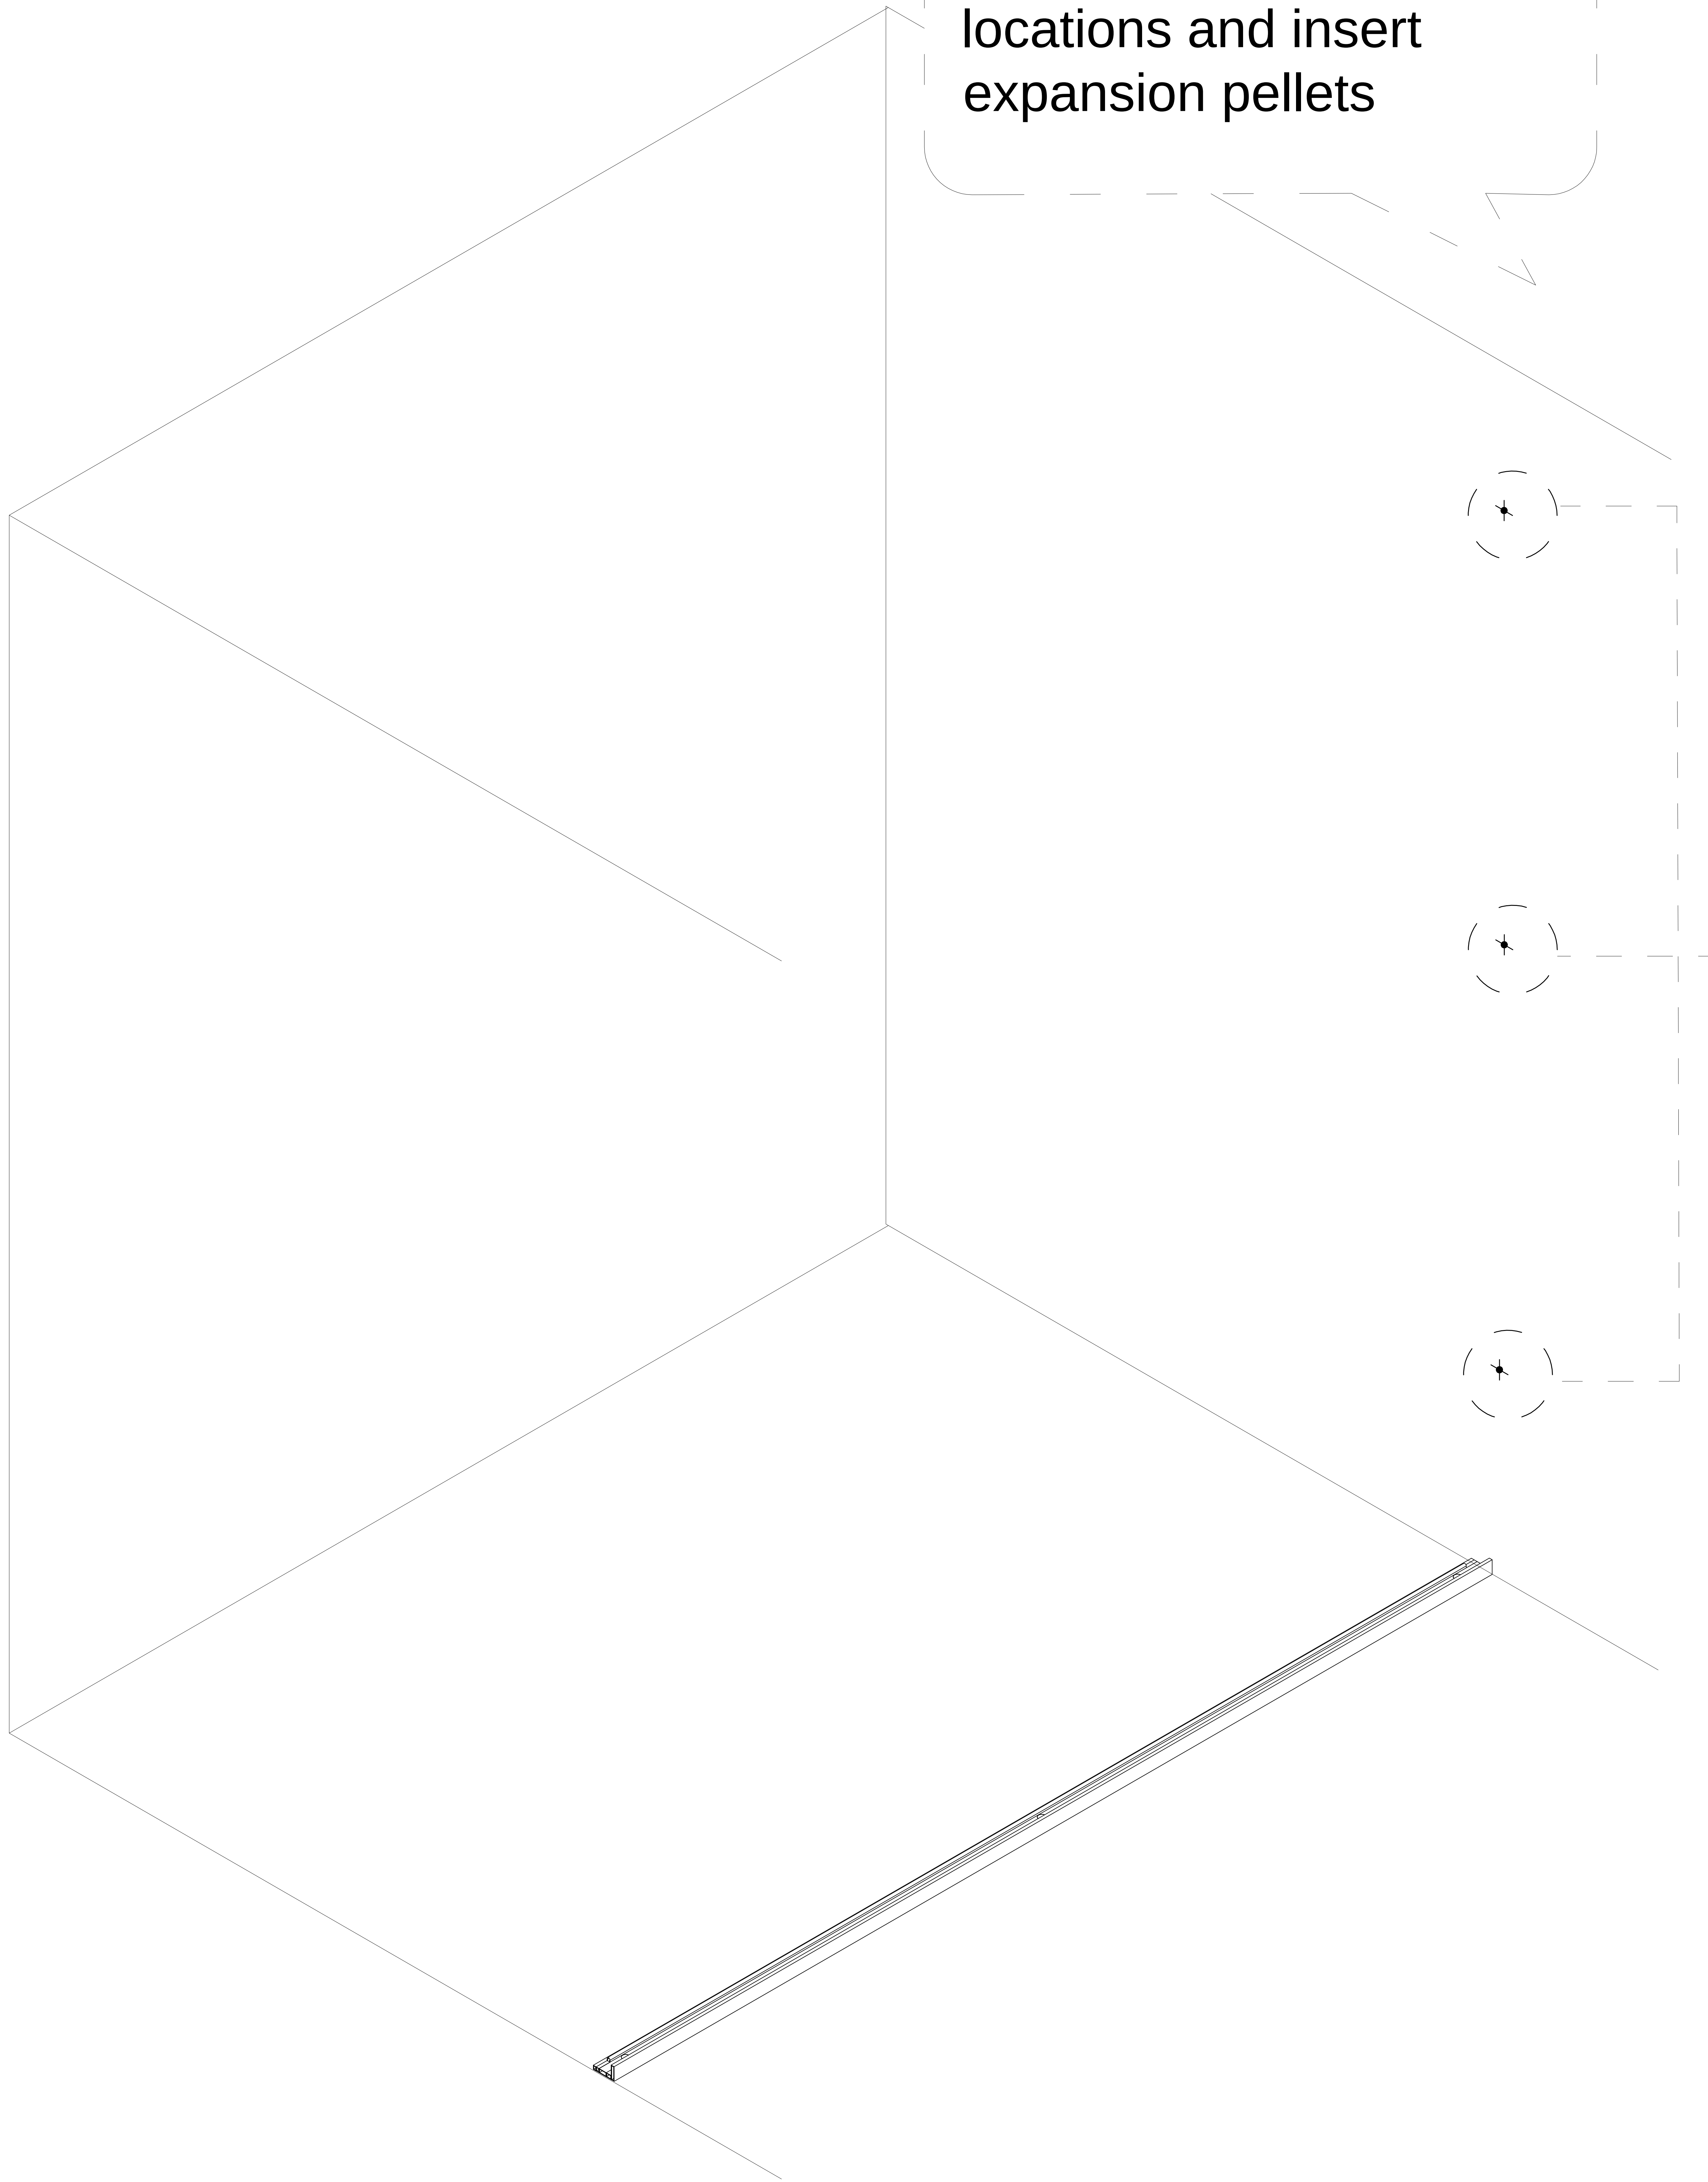


**1#
TOOLS**

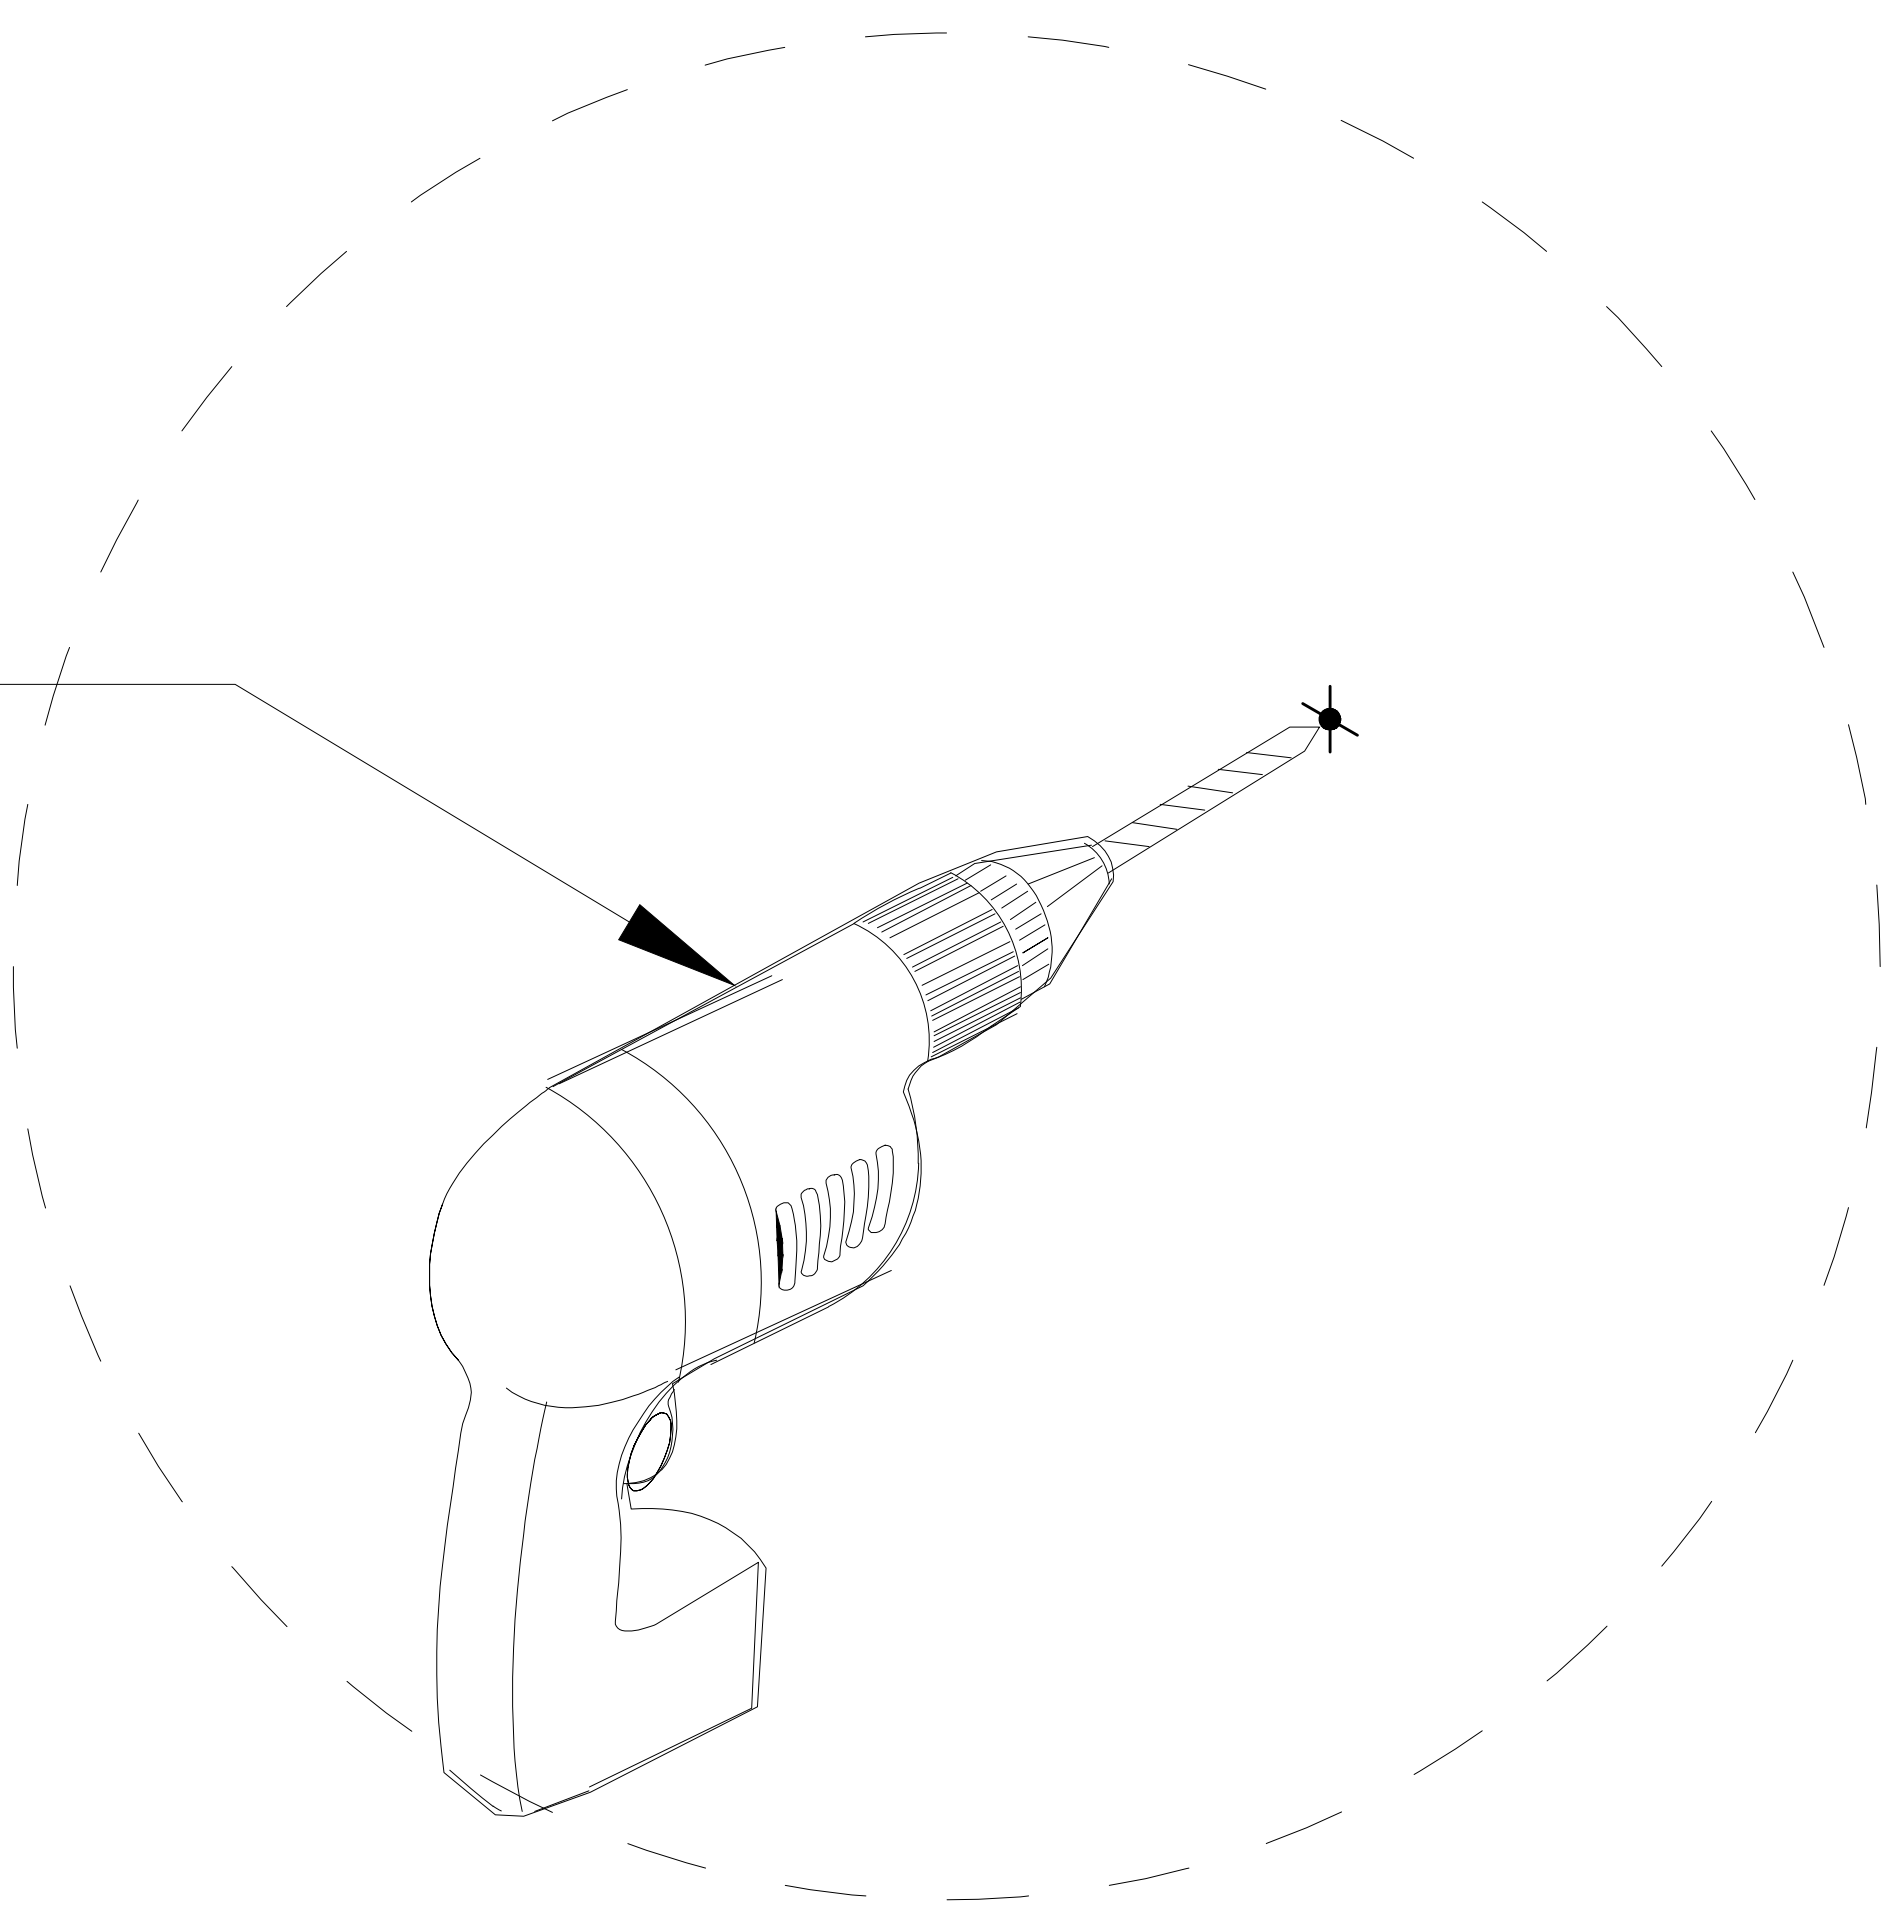


1

**9#
TOOLS**

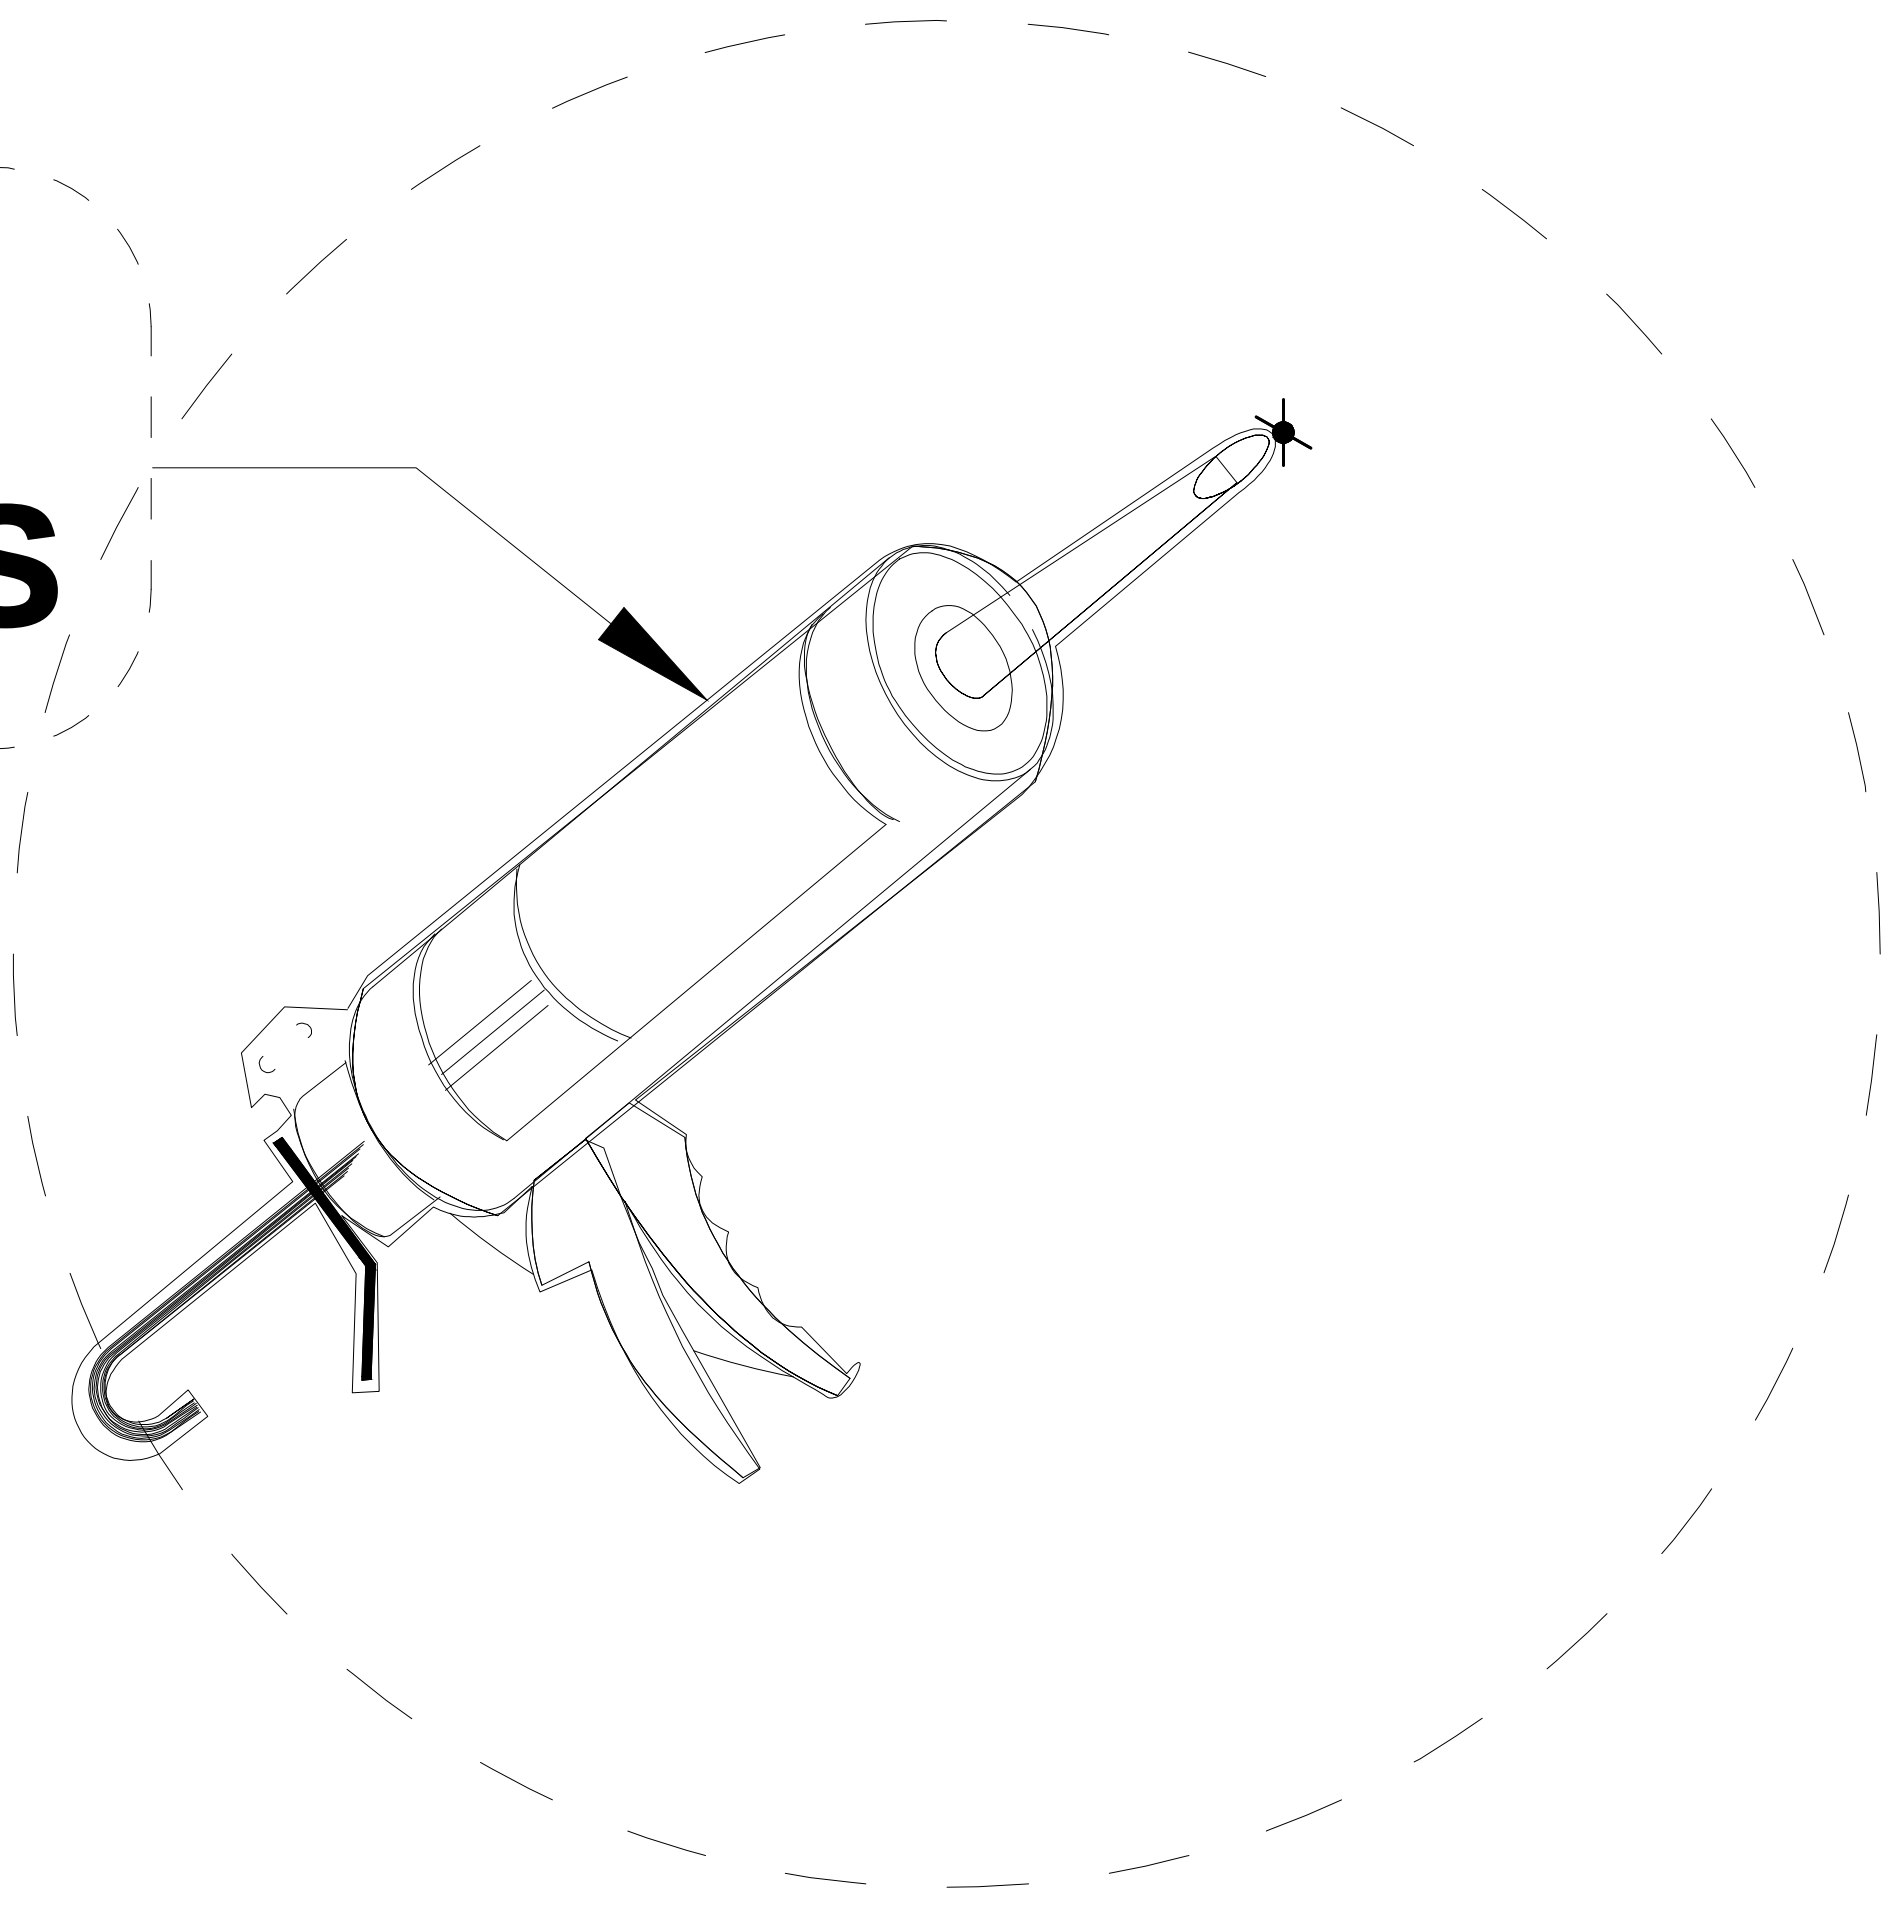

2

**8#
TOOLS**

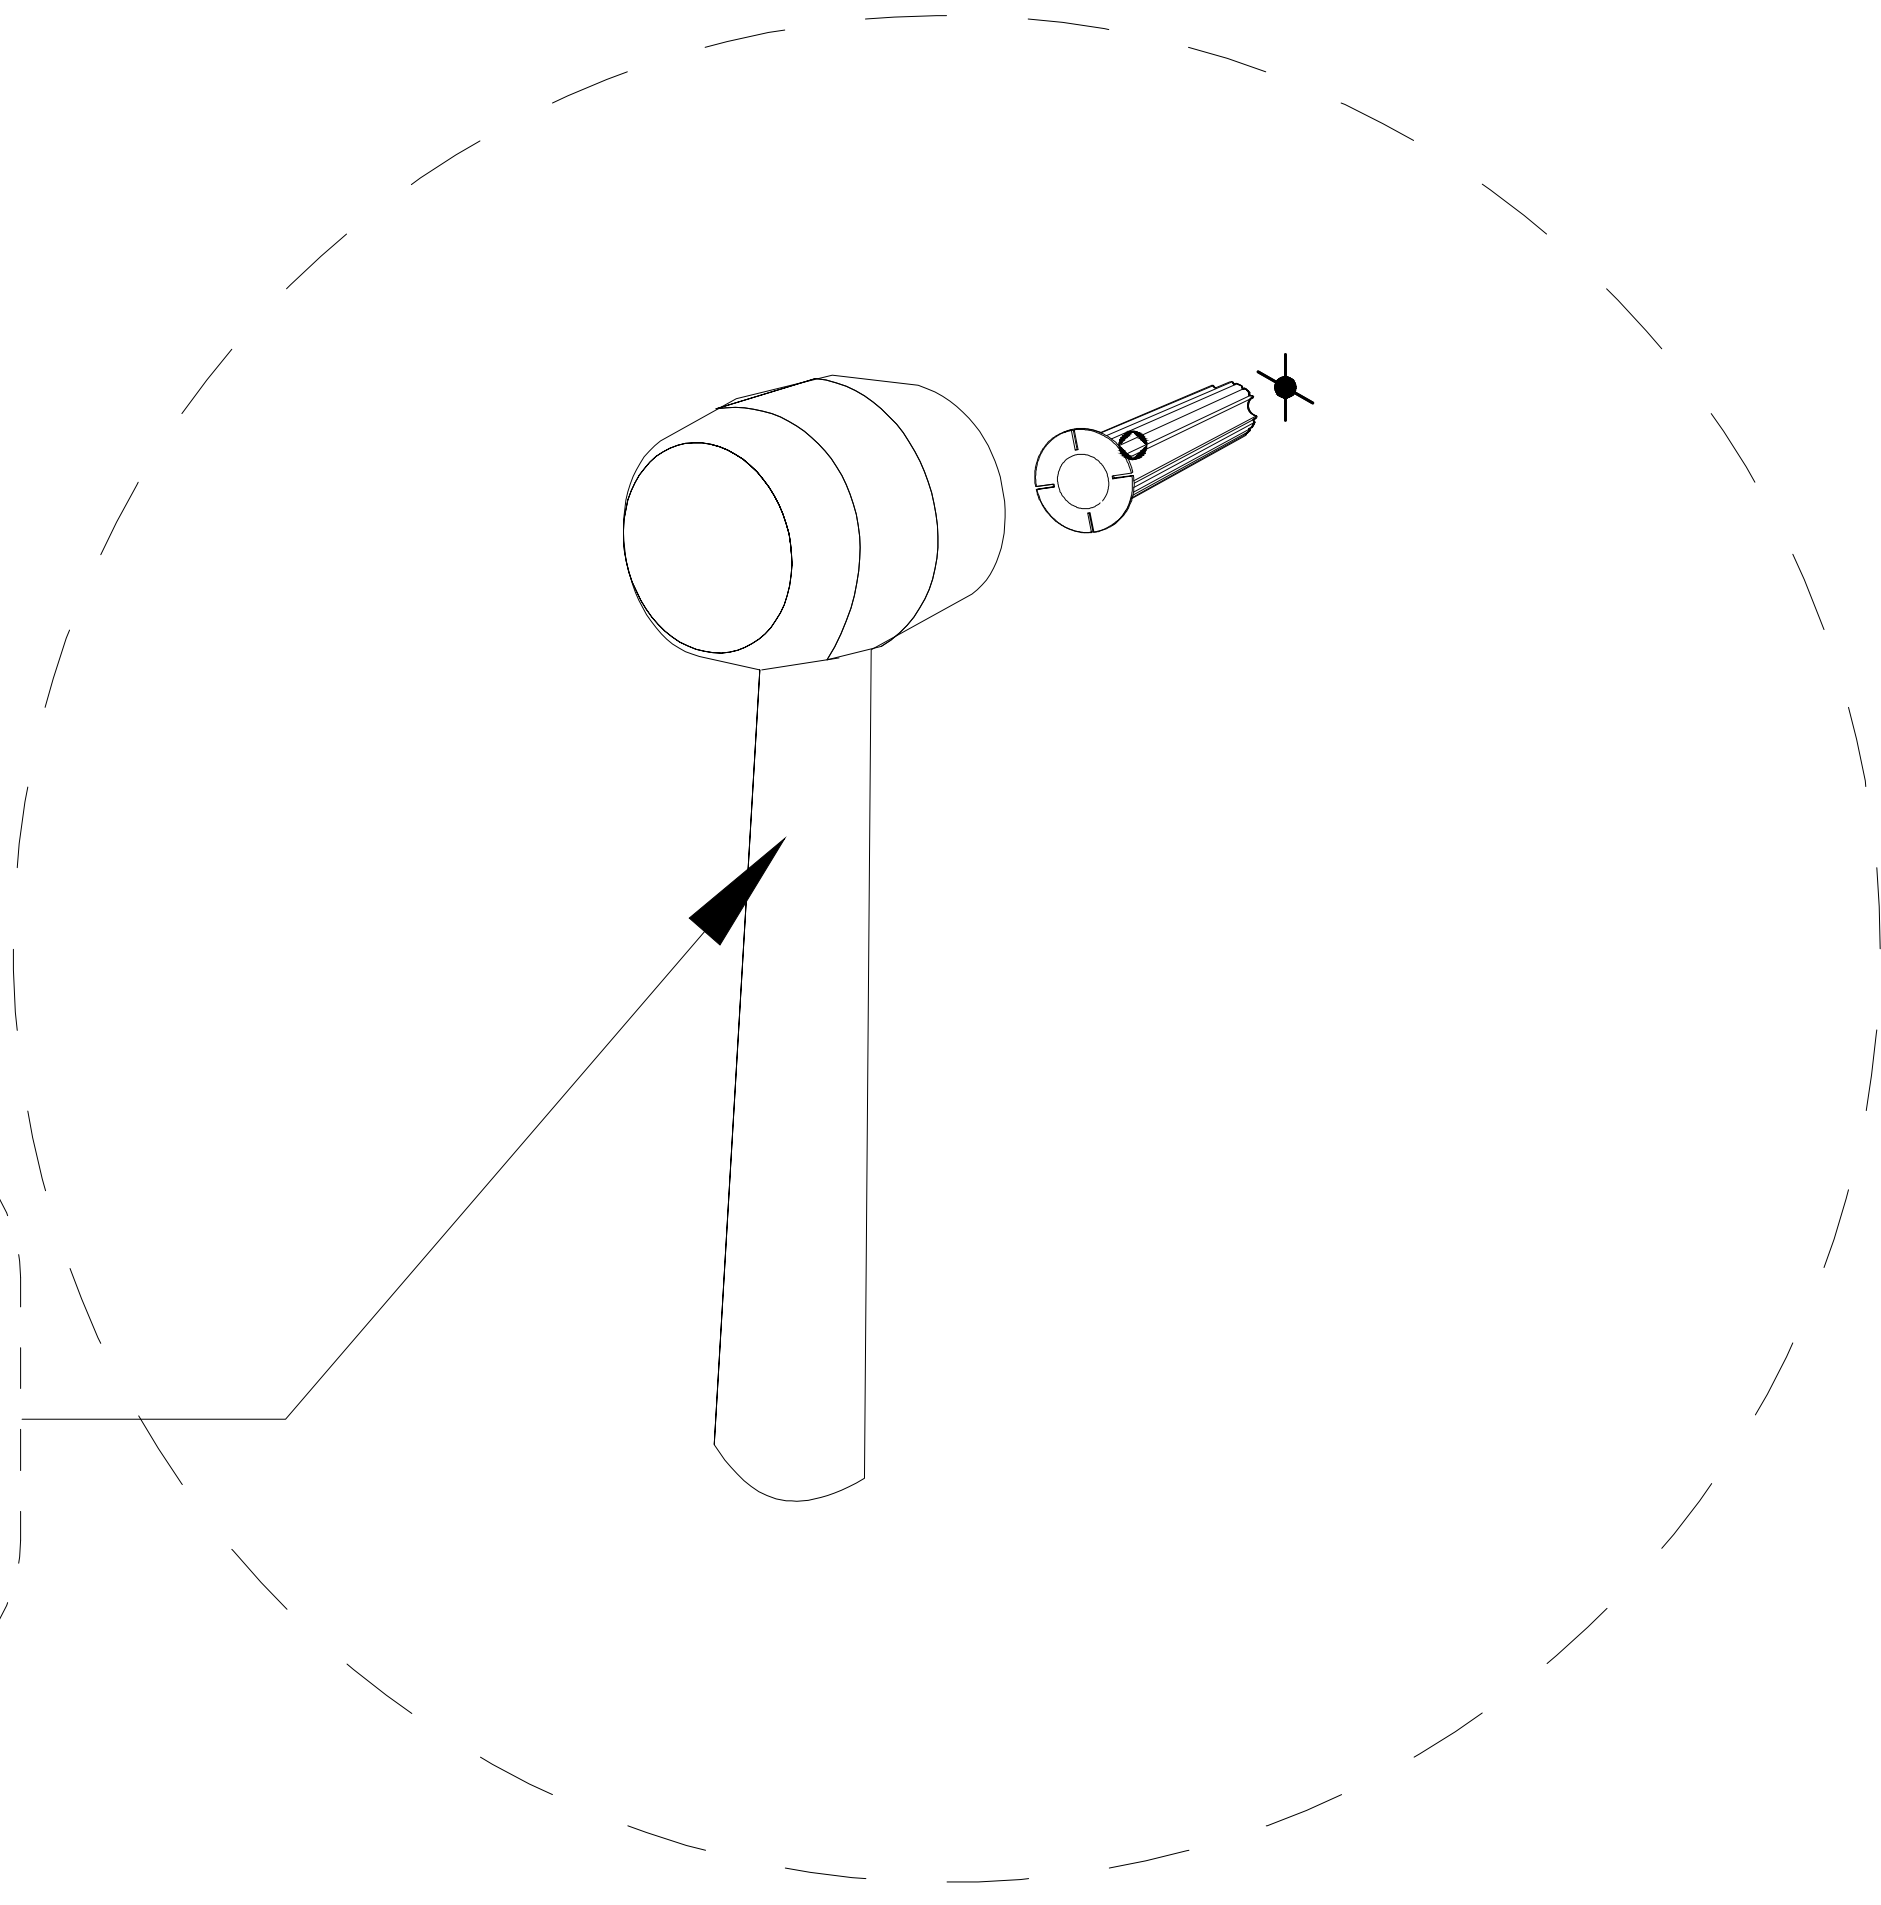


3

STEP- 4


1. Apply glass glue to the back of the wall
2. Use ST-4*35 stainless steel self-tapping screws to lock the side panel to the wall.

**9#
TOOLS**

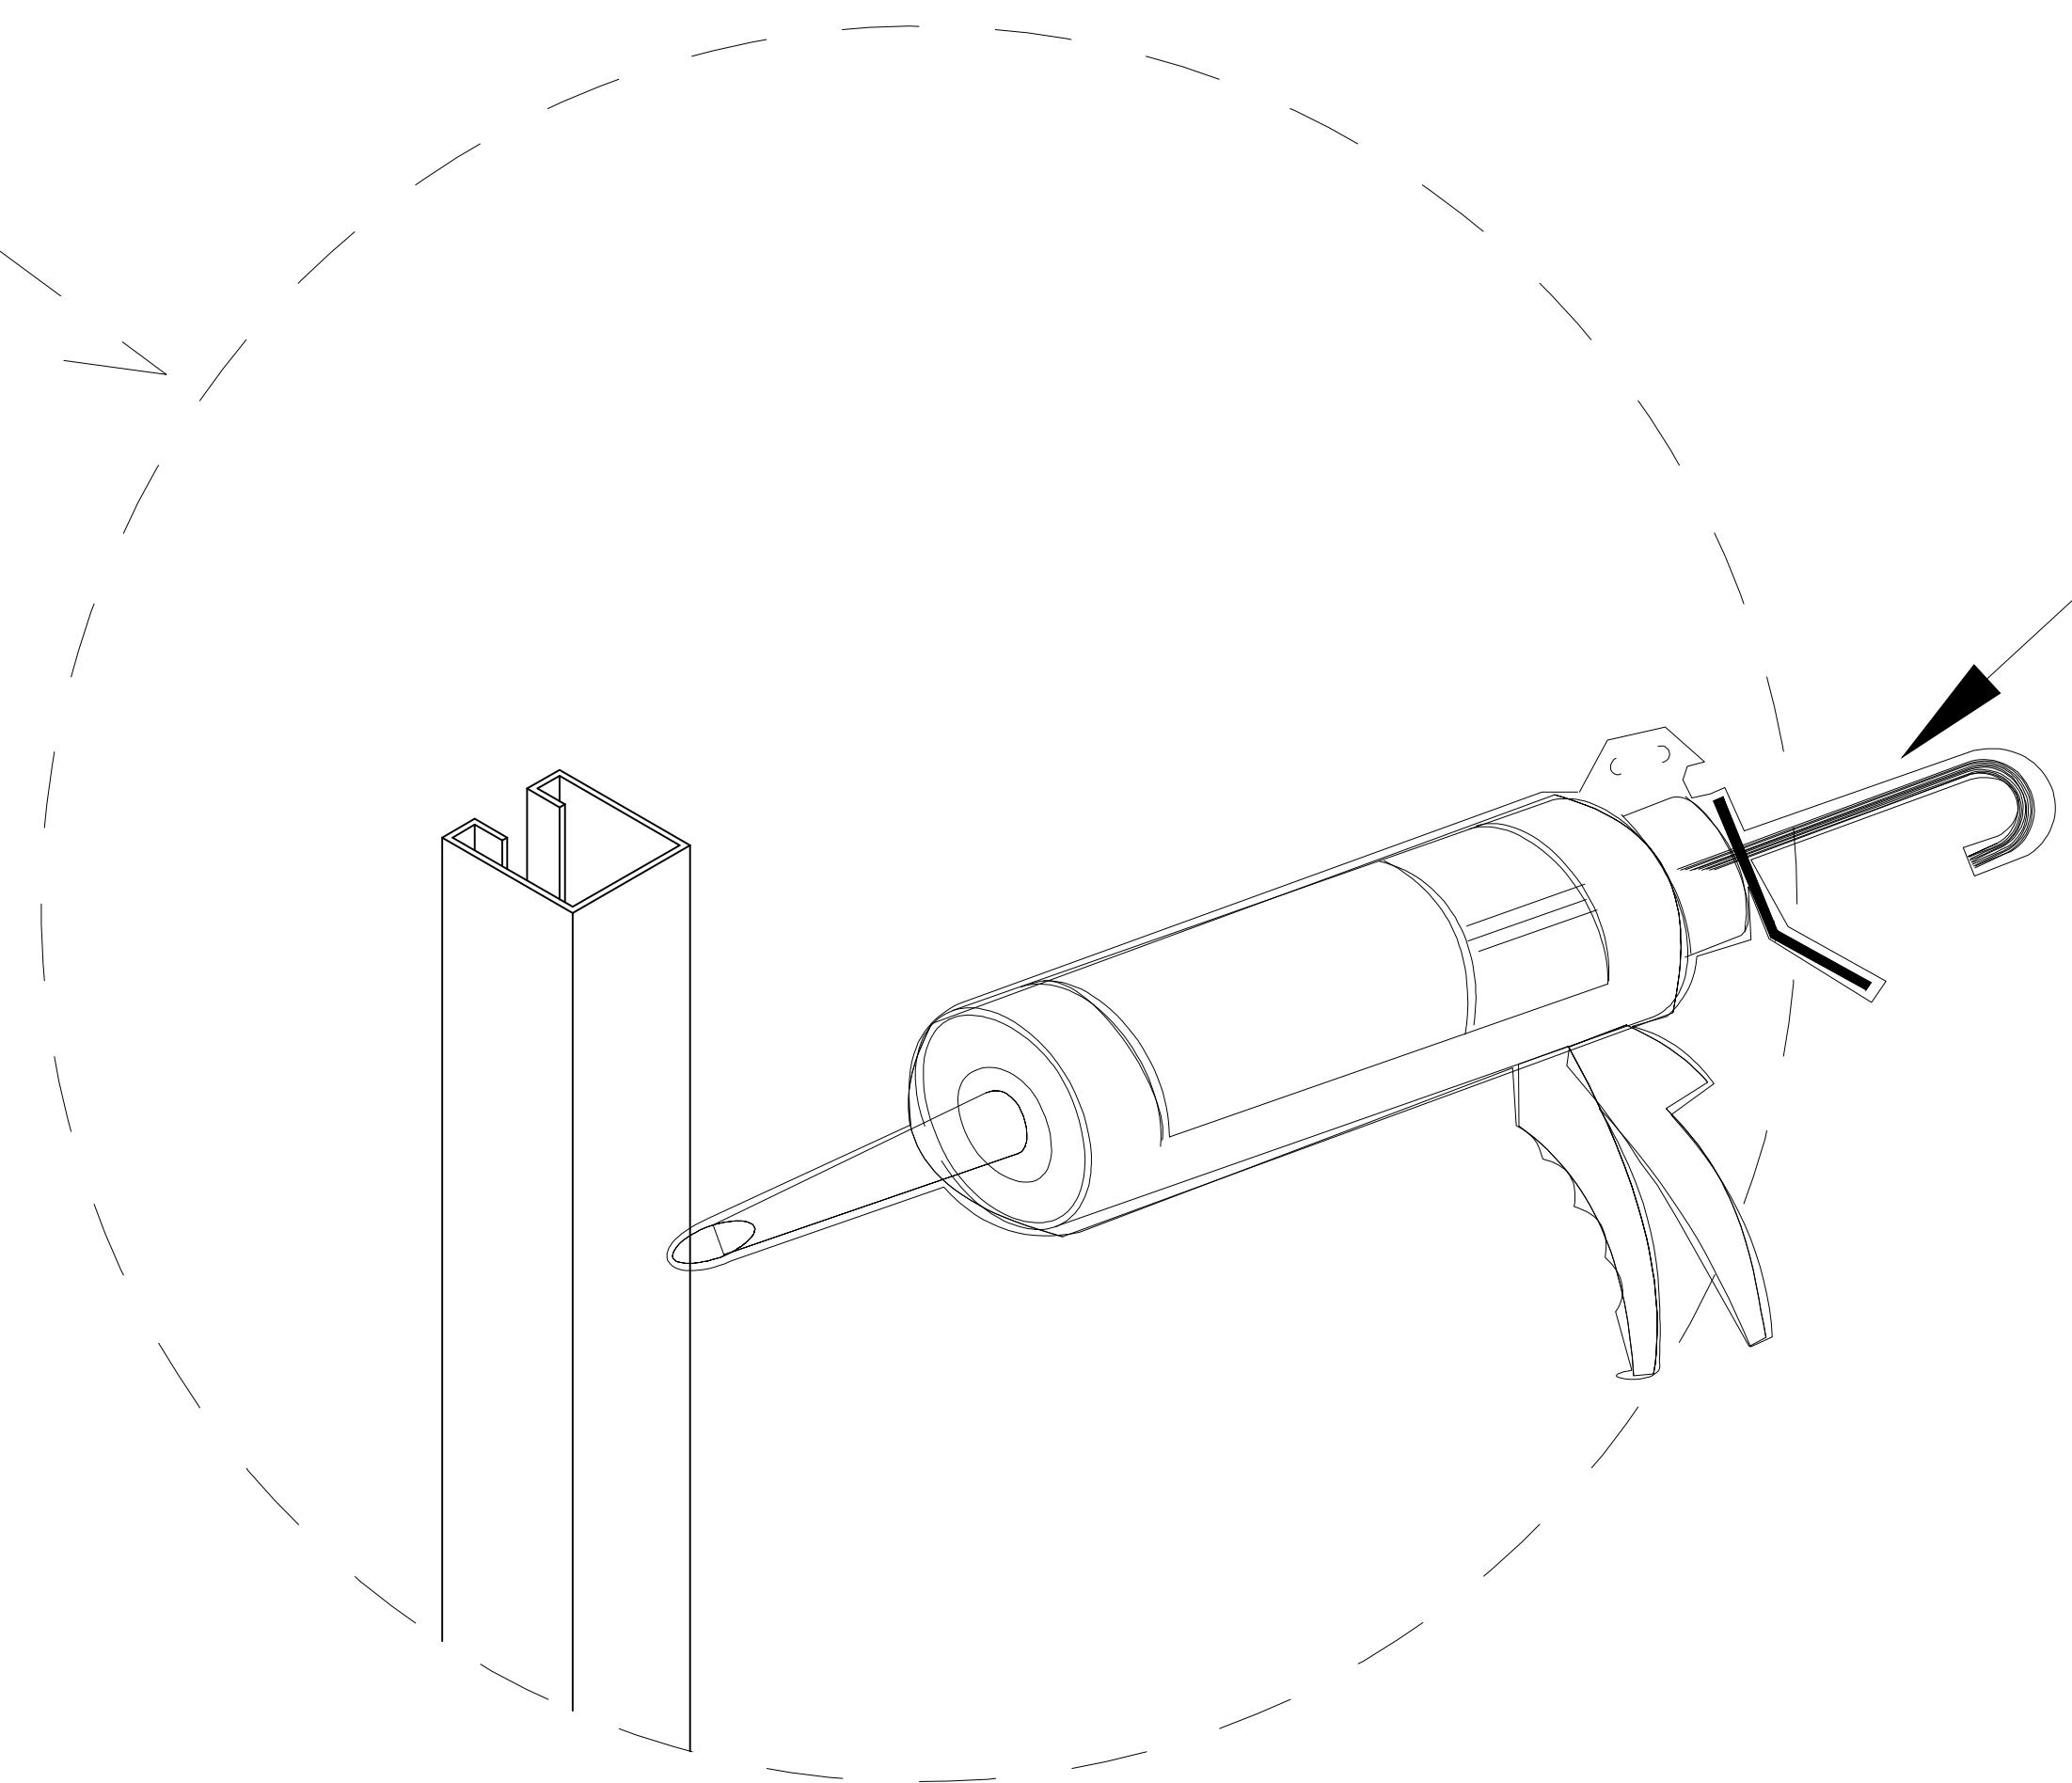

1

**3#
TOOLS**





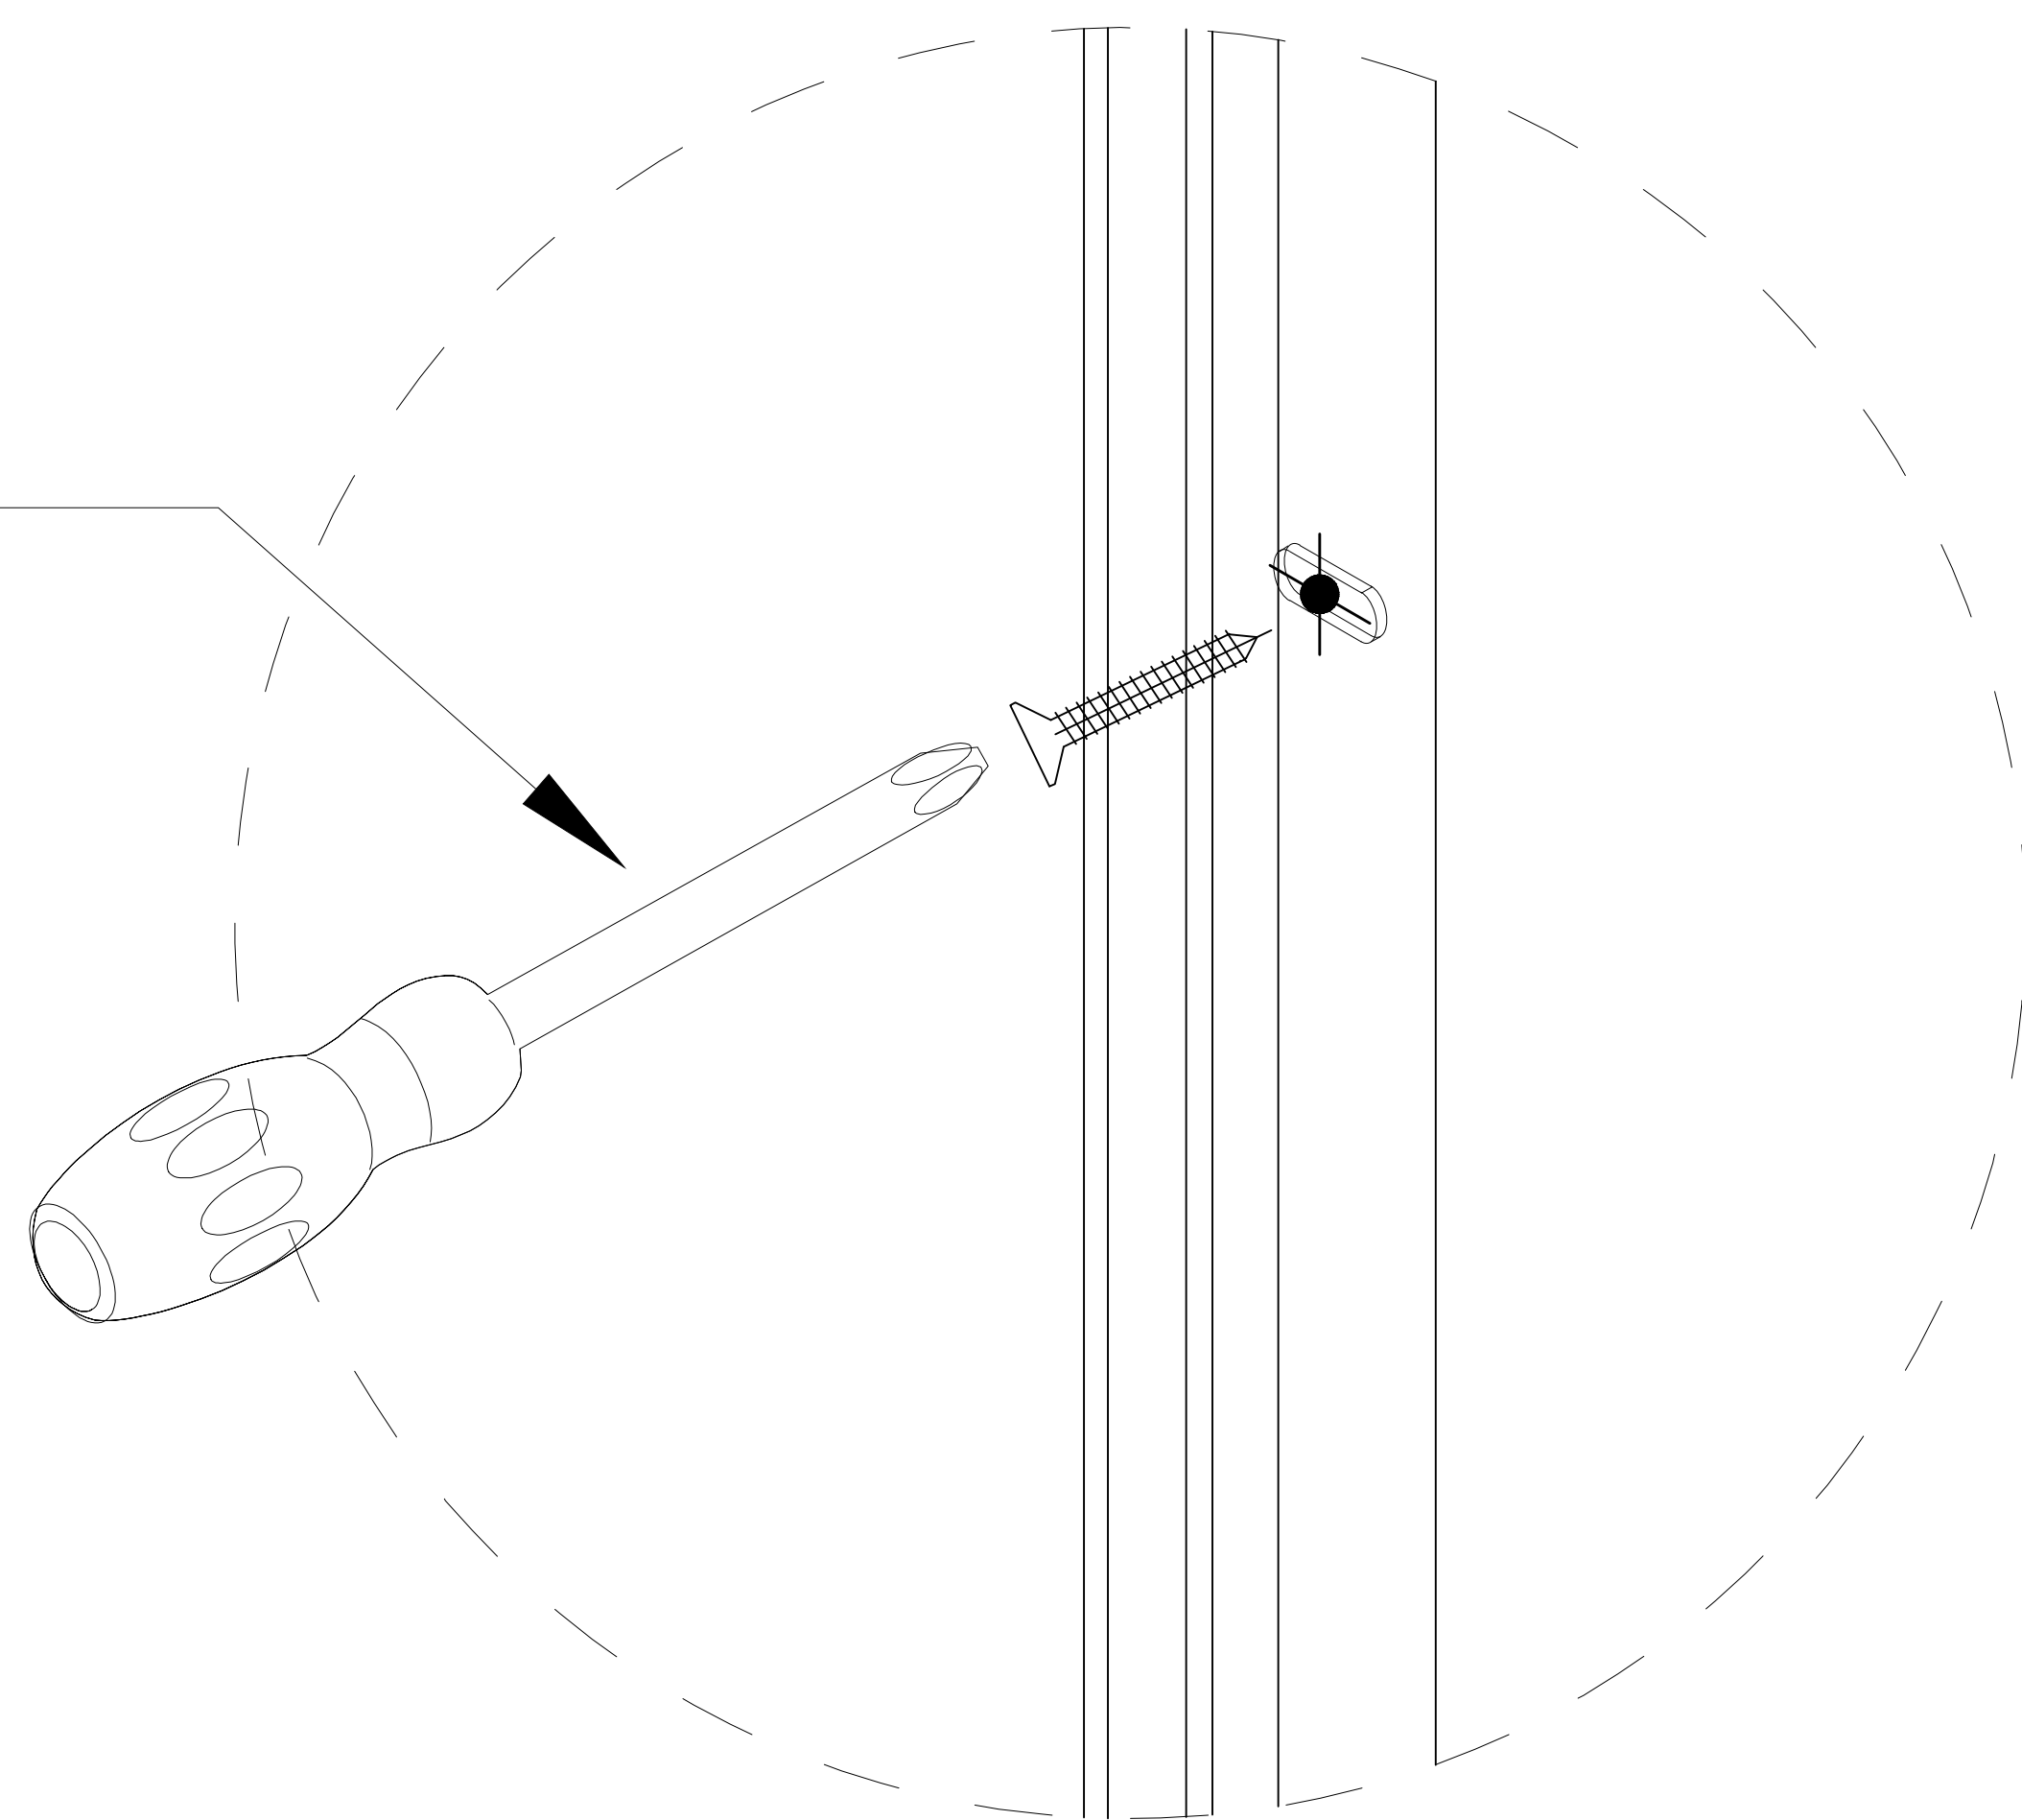


2

D

STEP- 5


Install fixed glass as shown

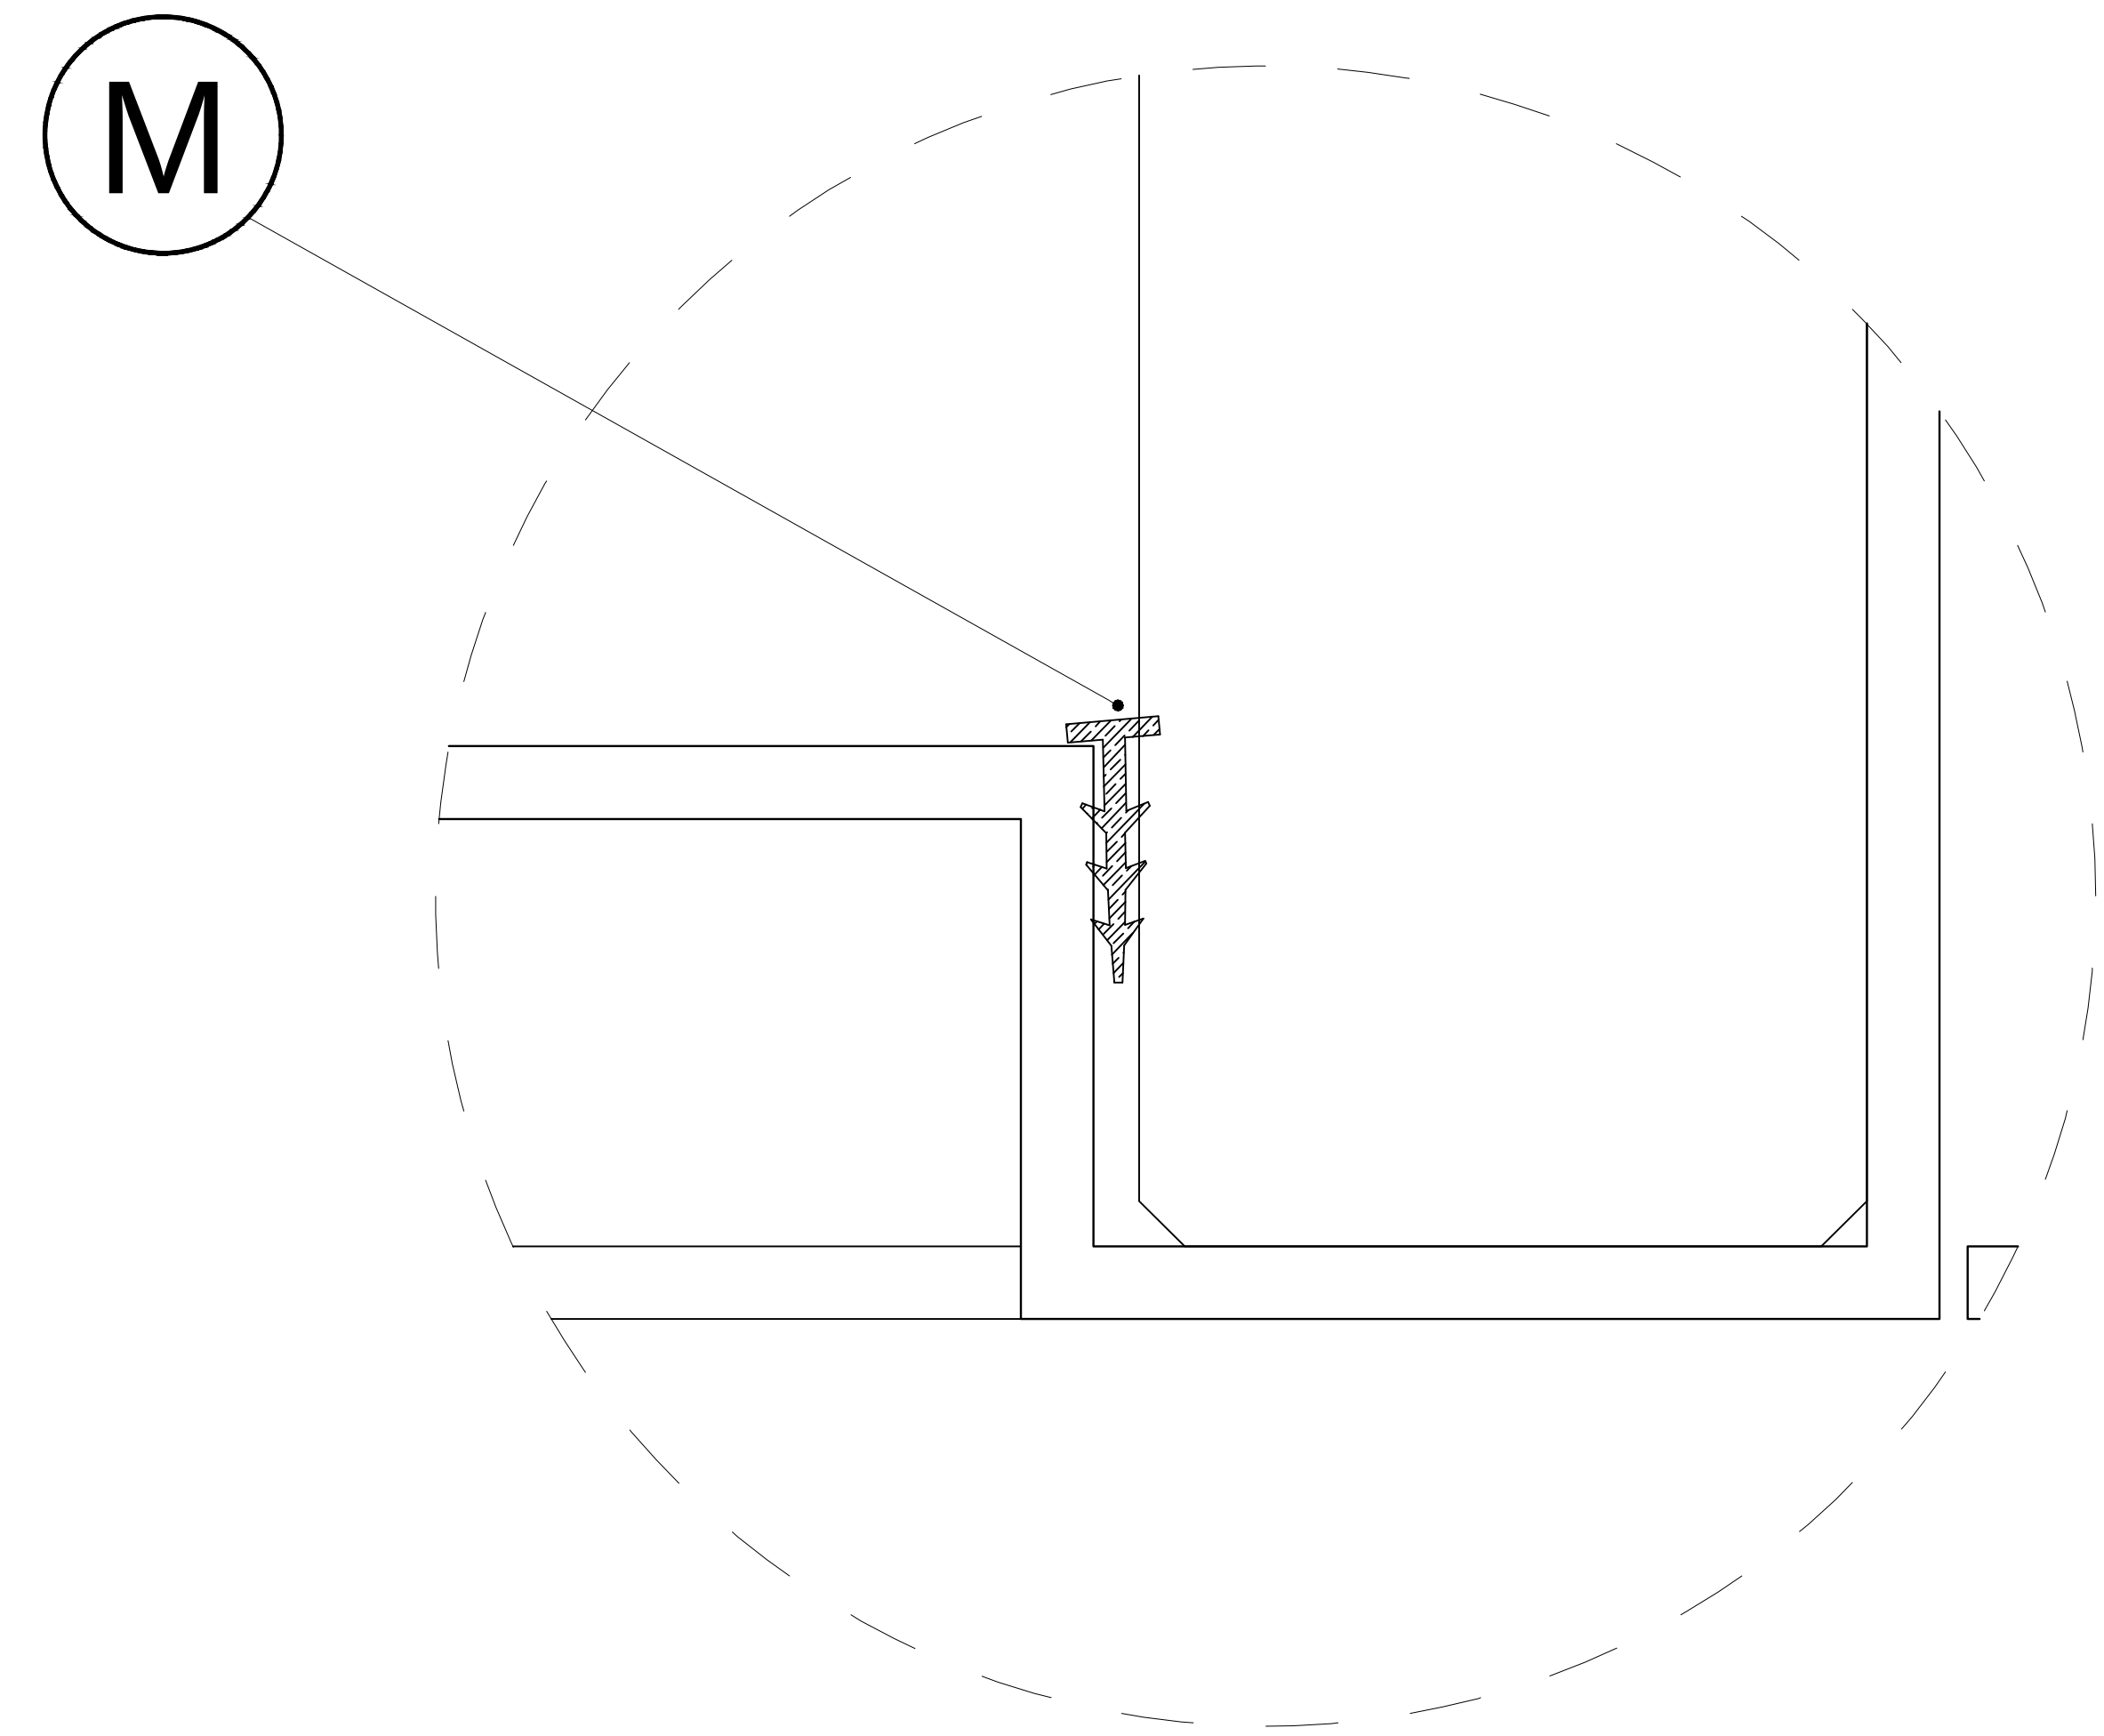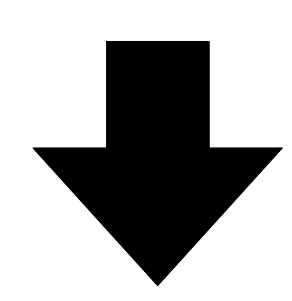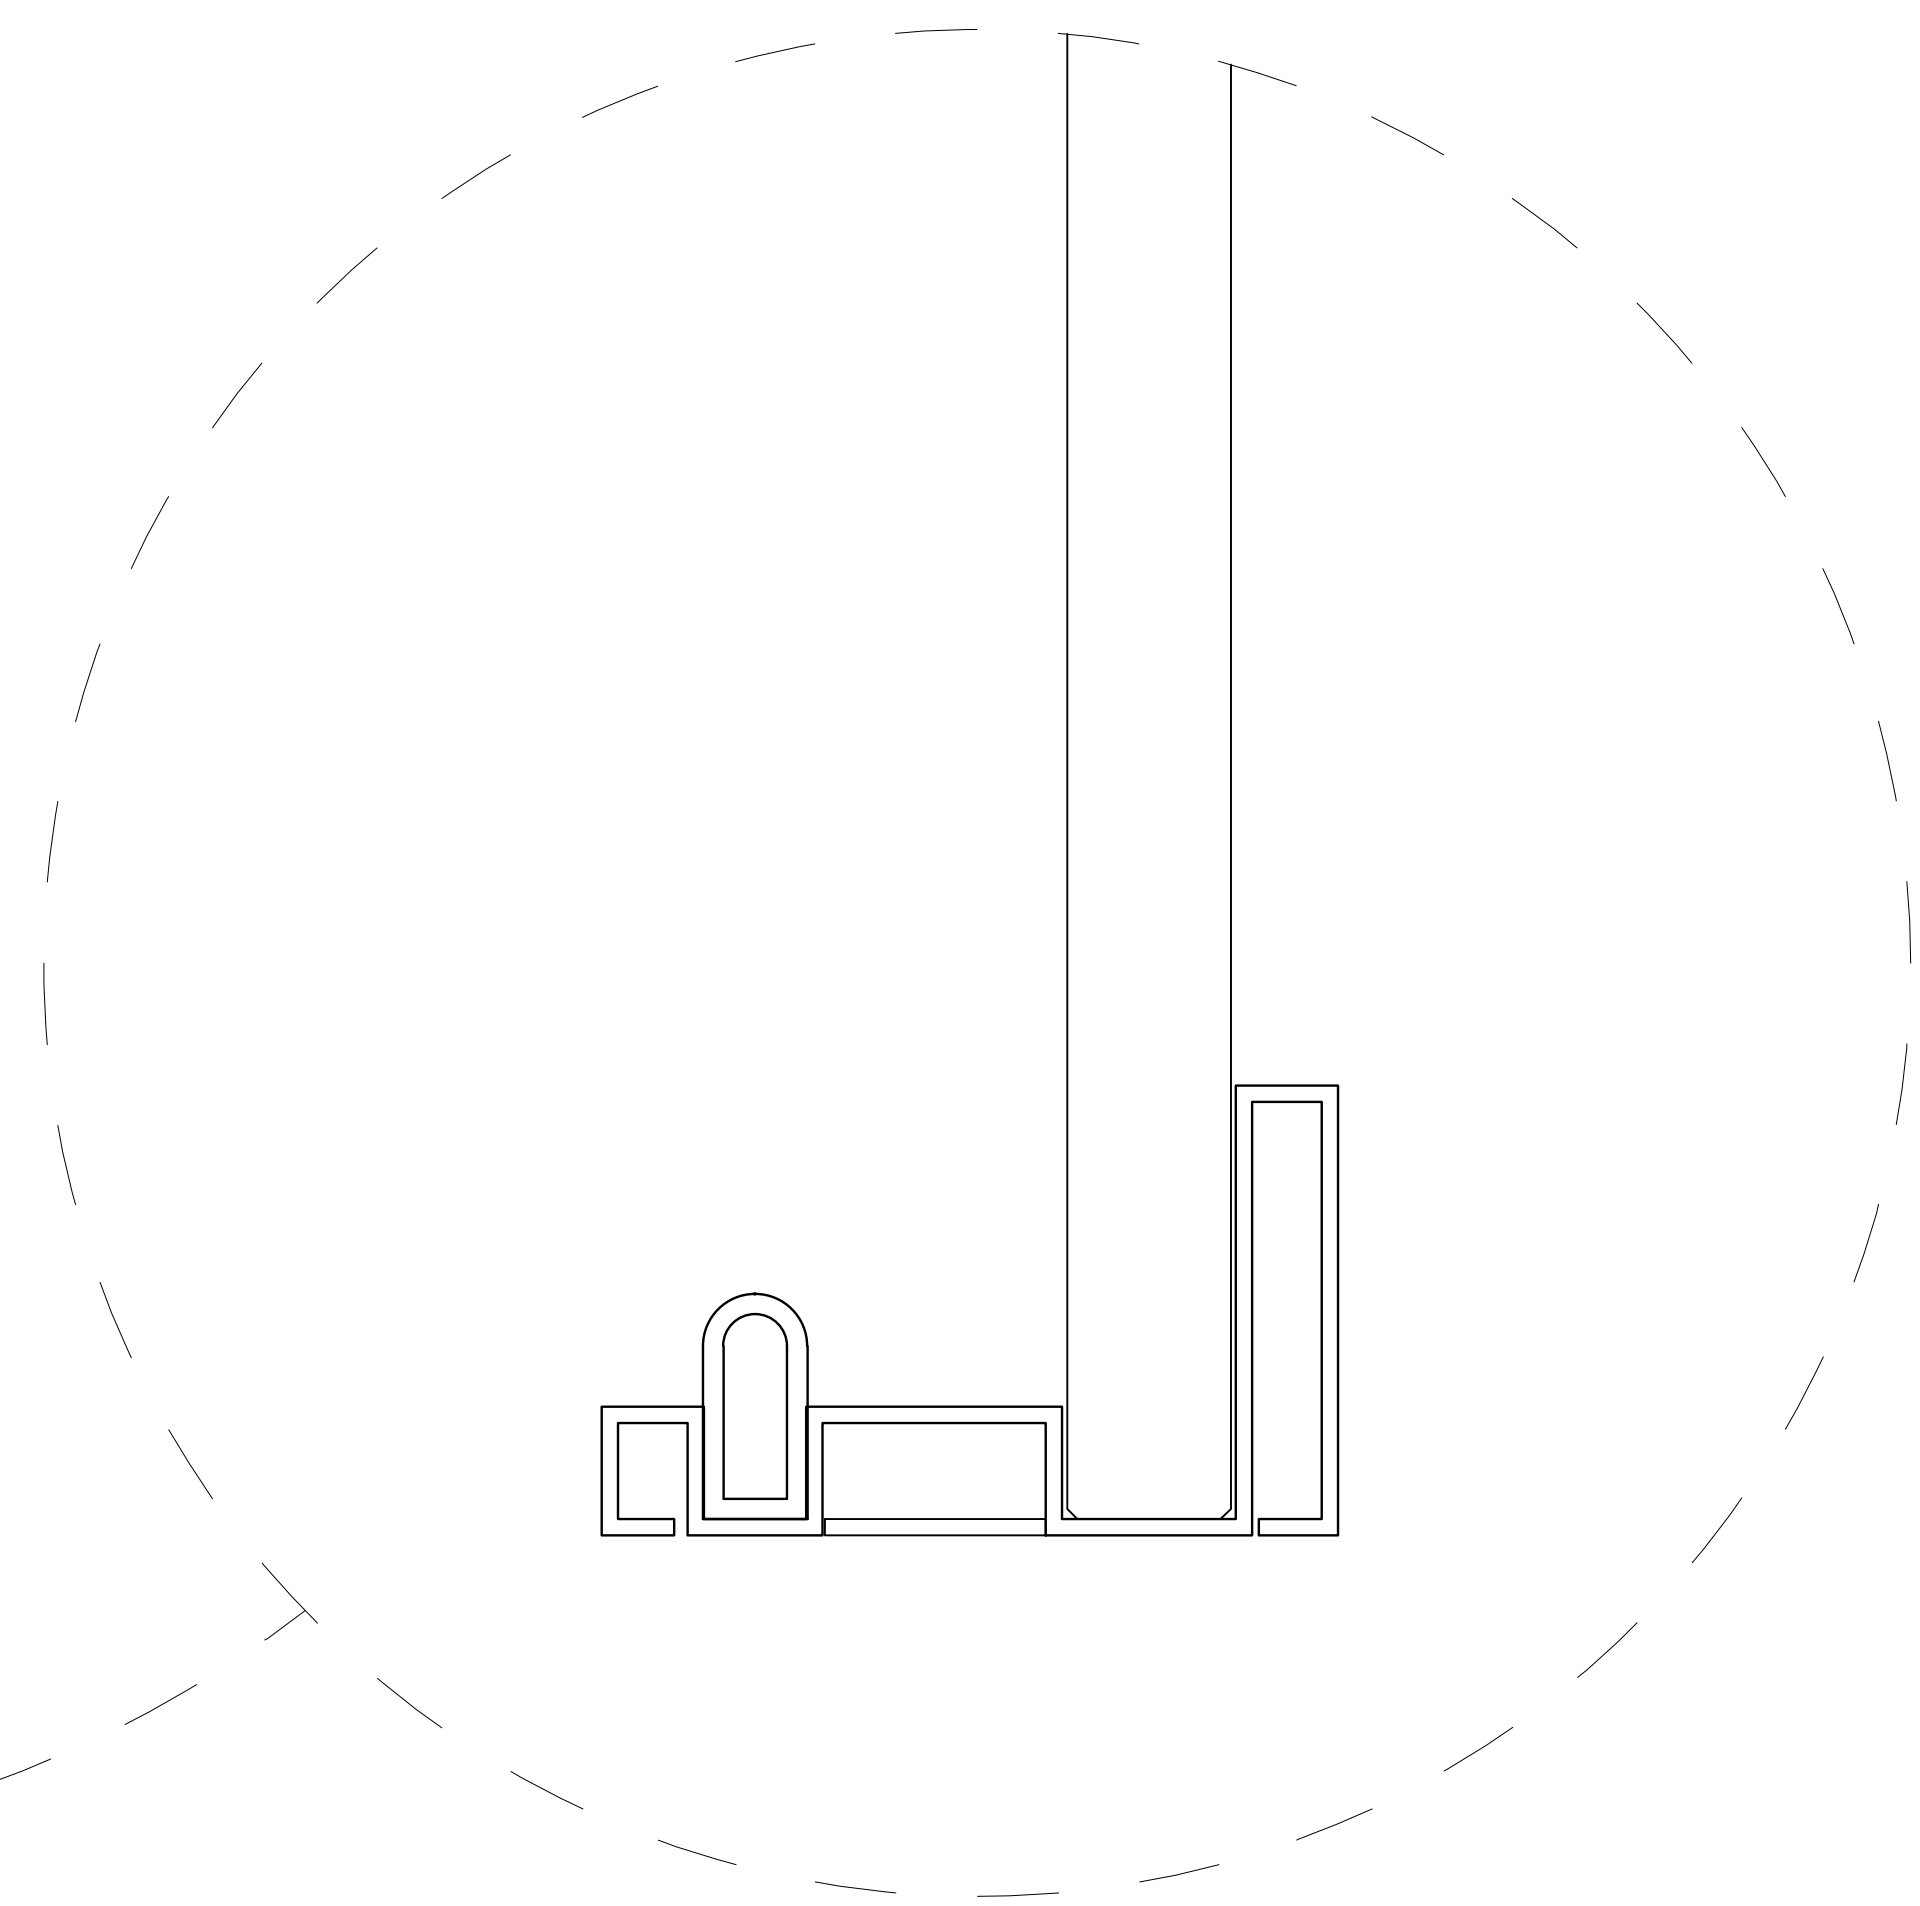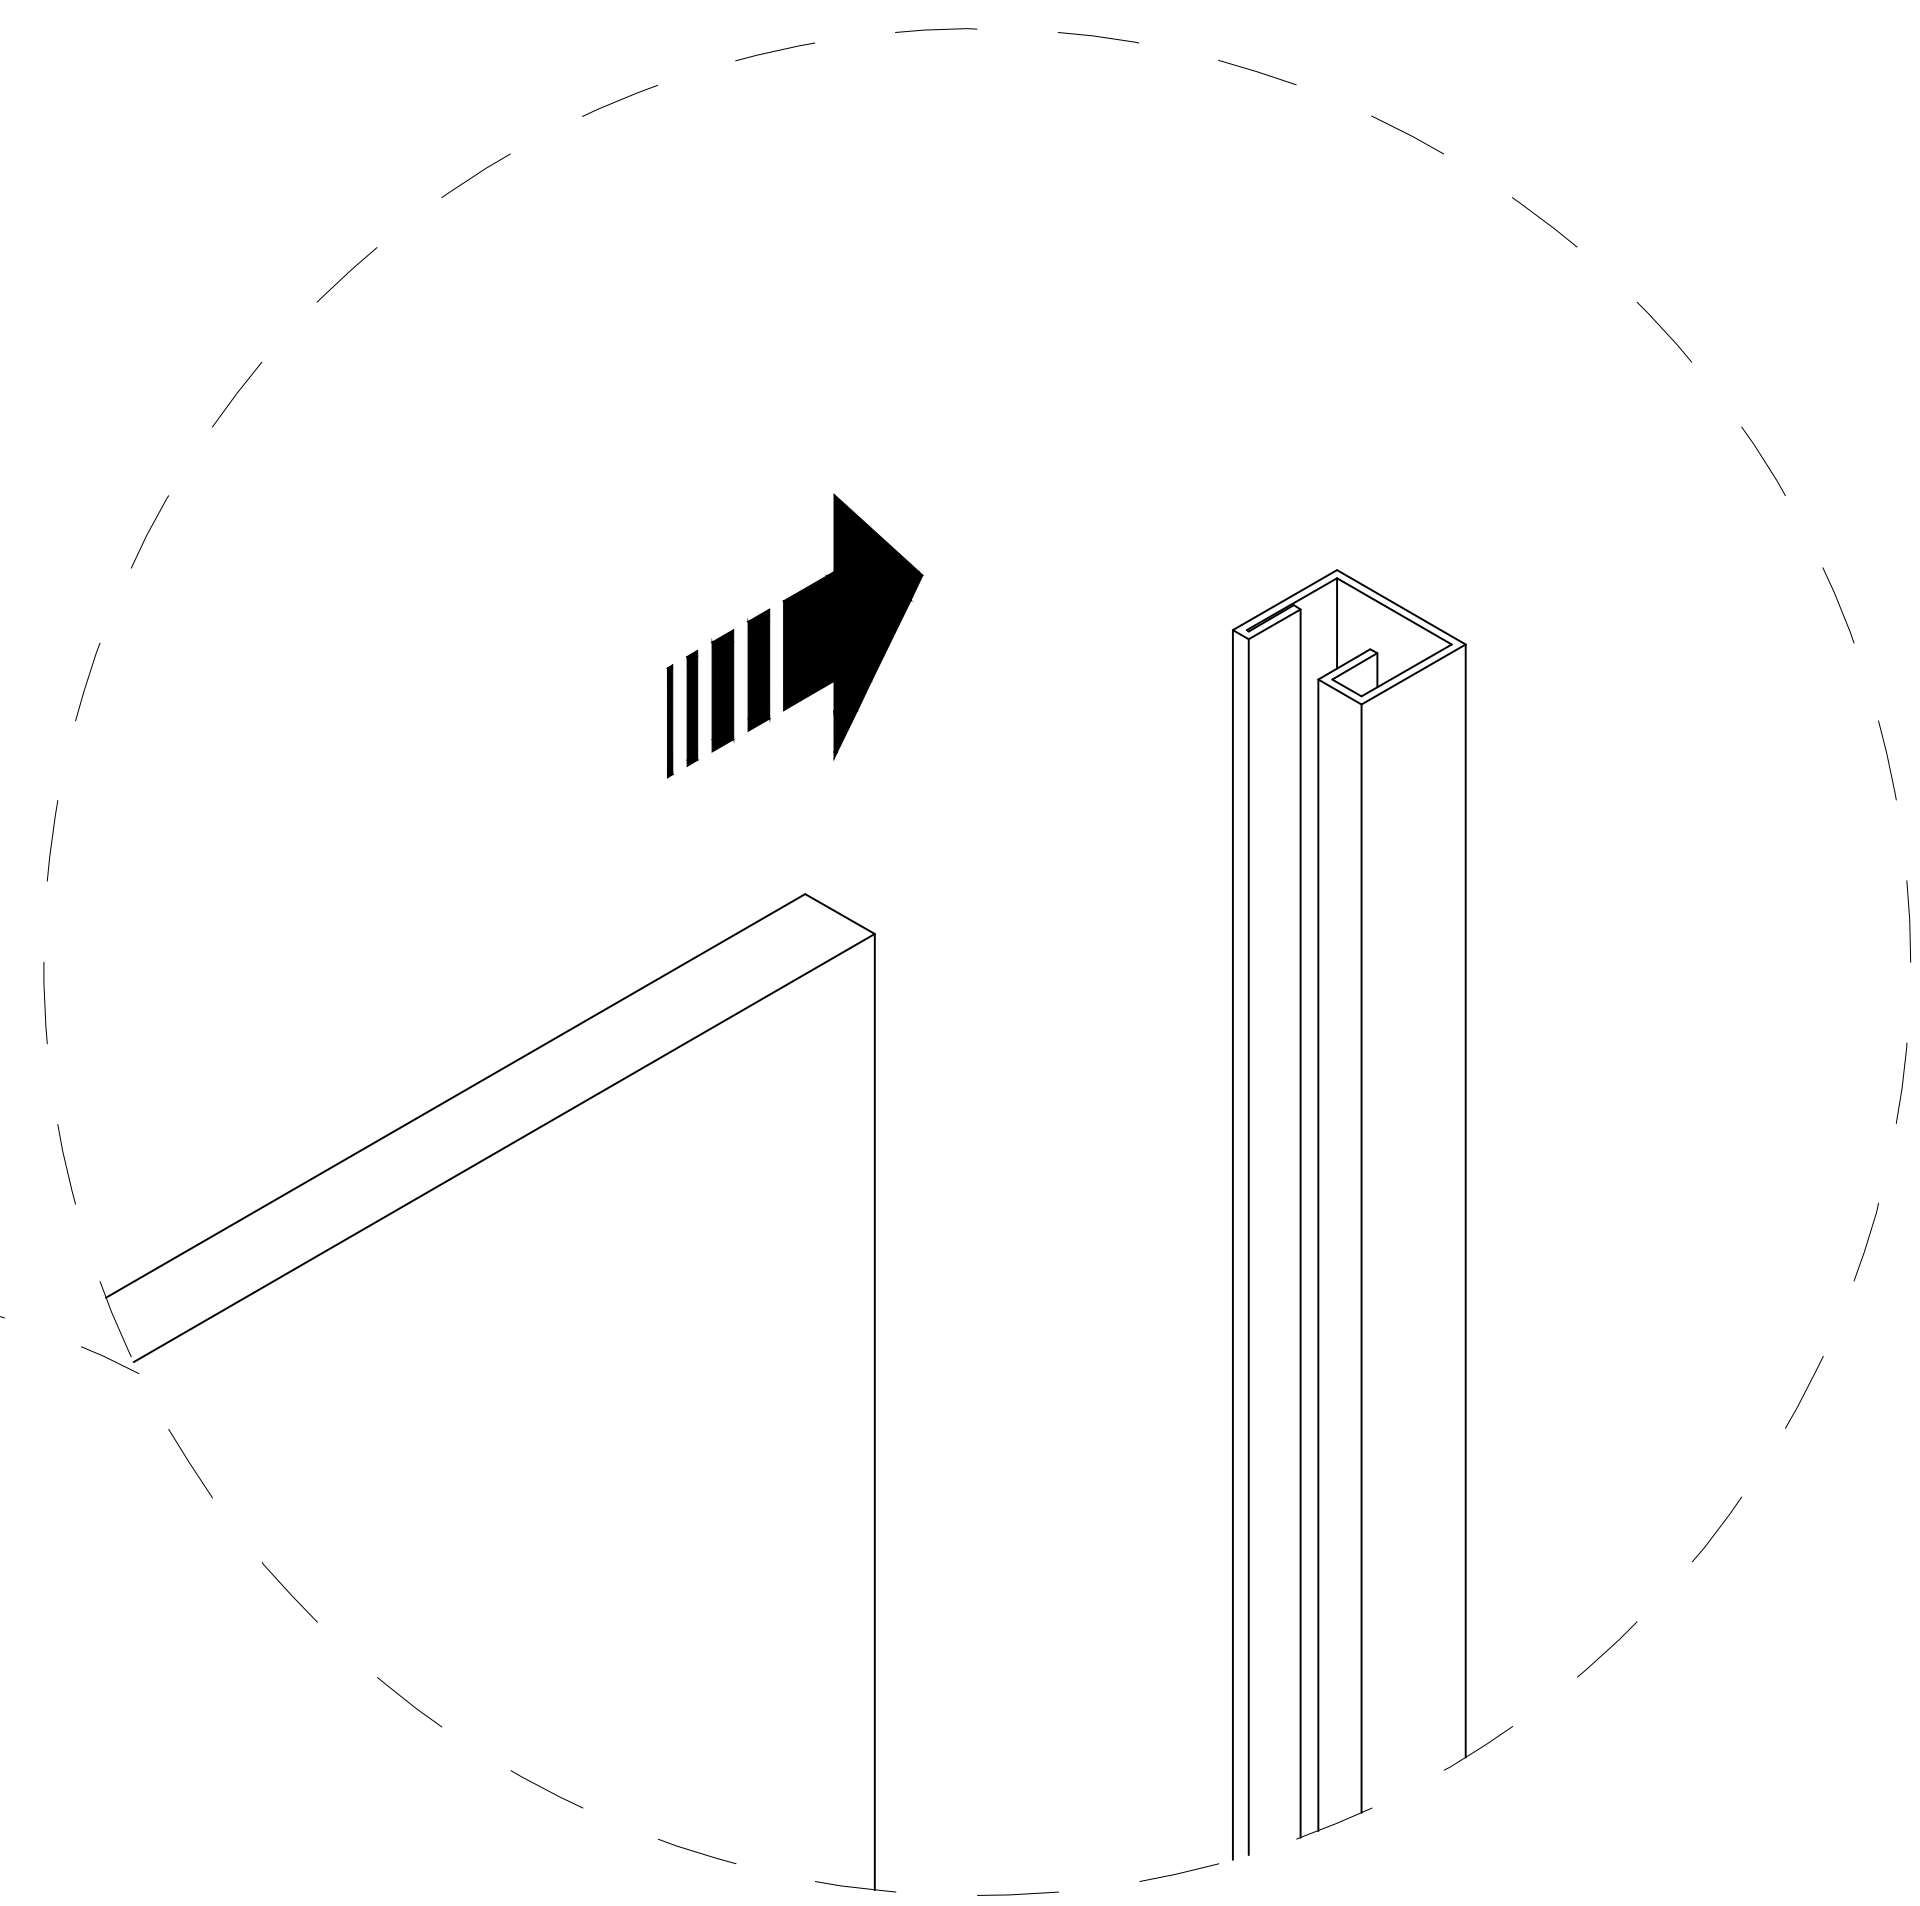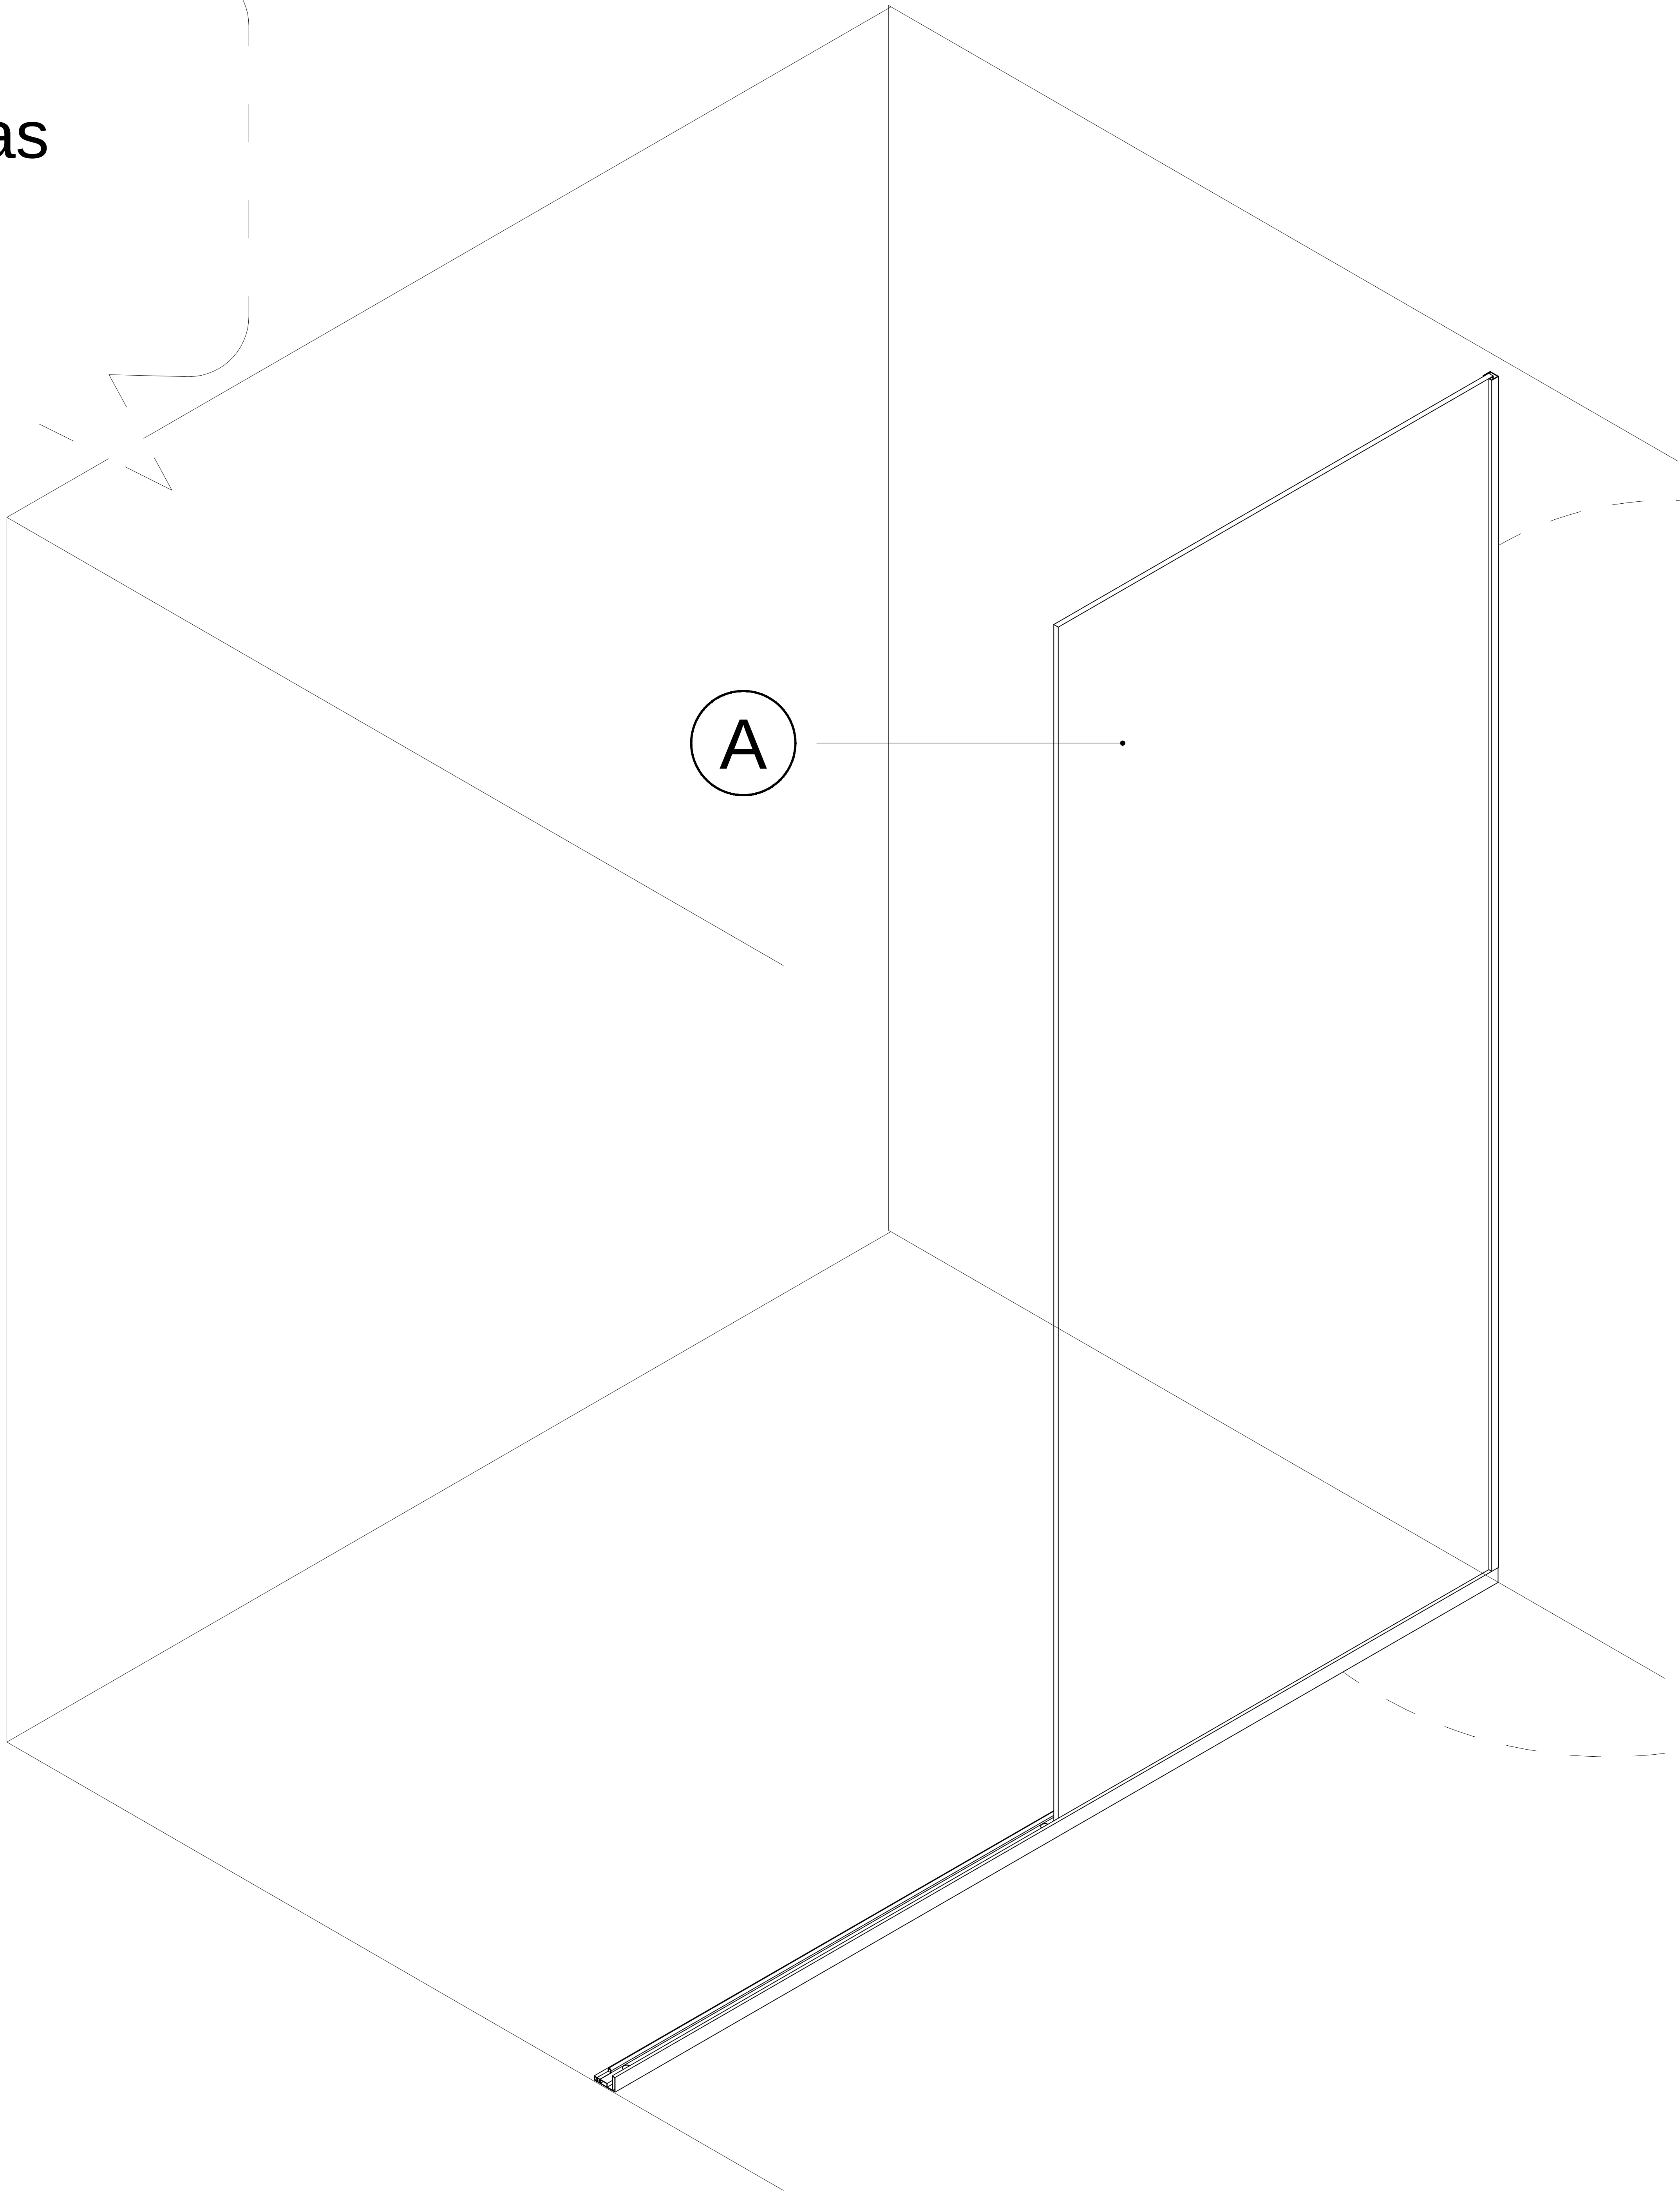



STEP- 6

Measure the distance and
cut the guide decorative
cover to size


L

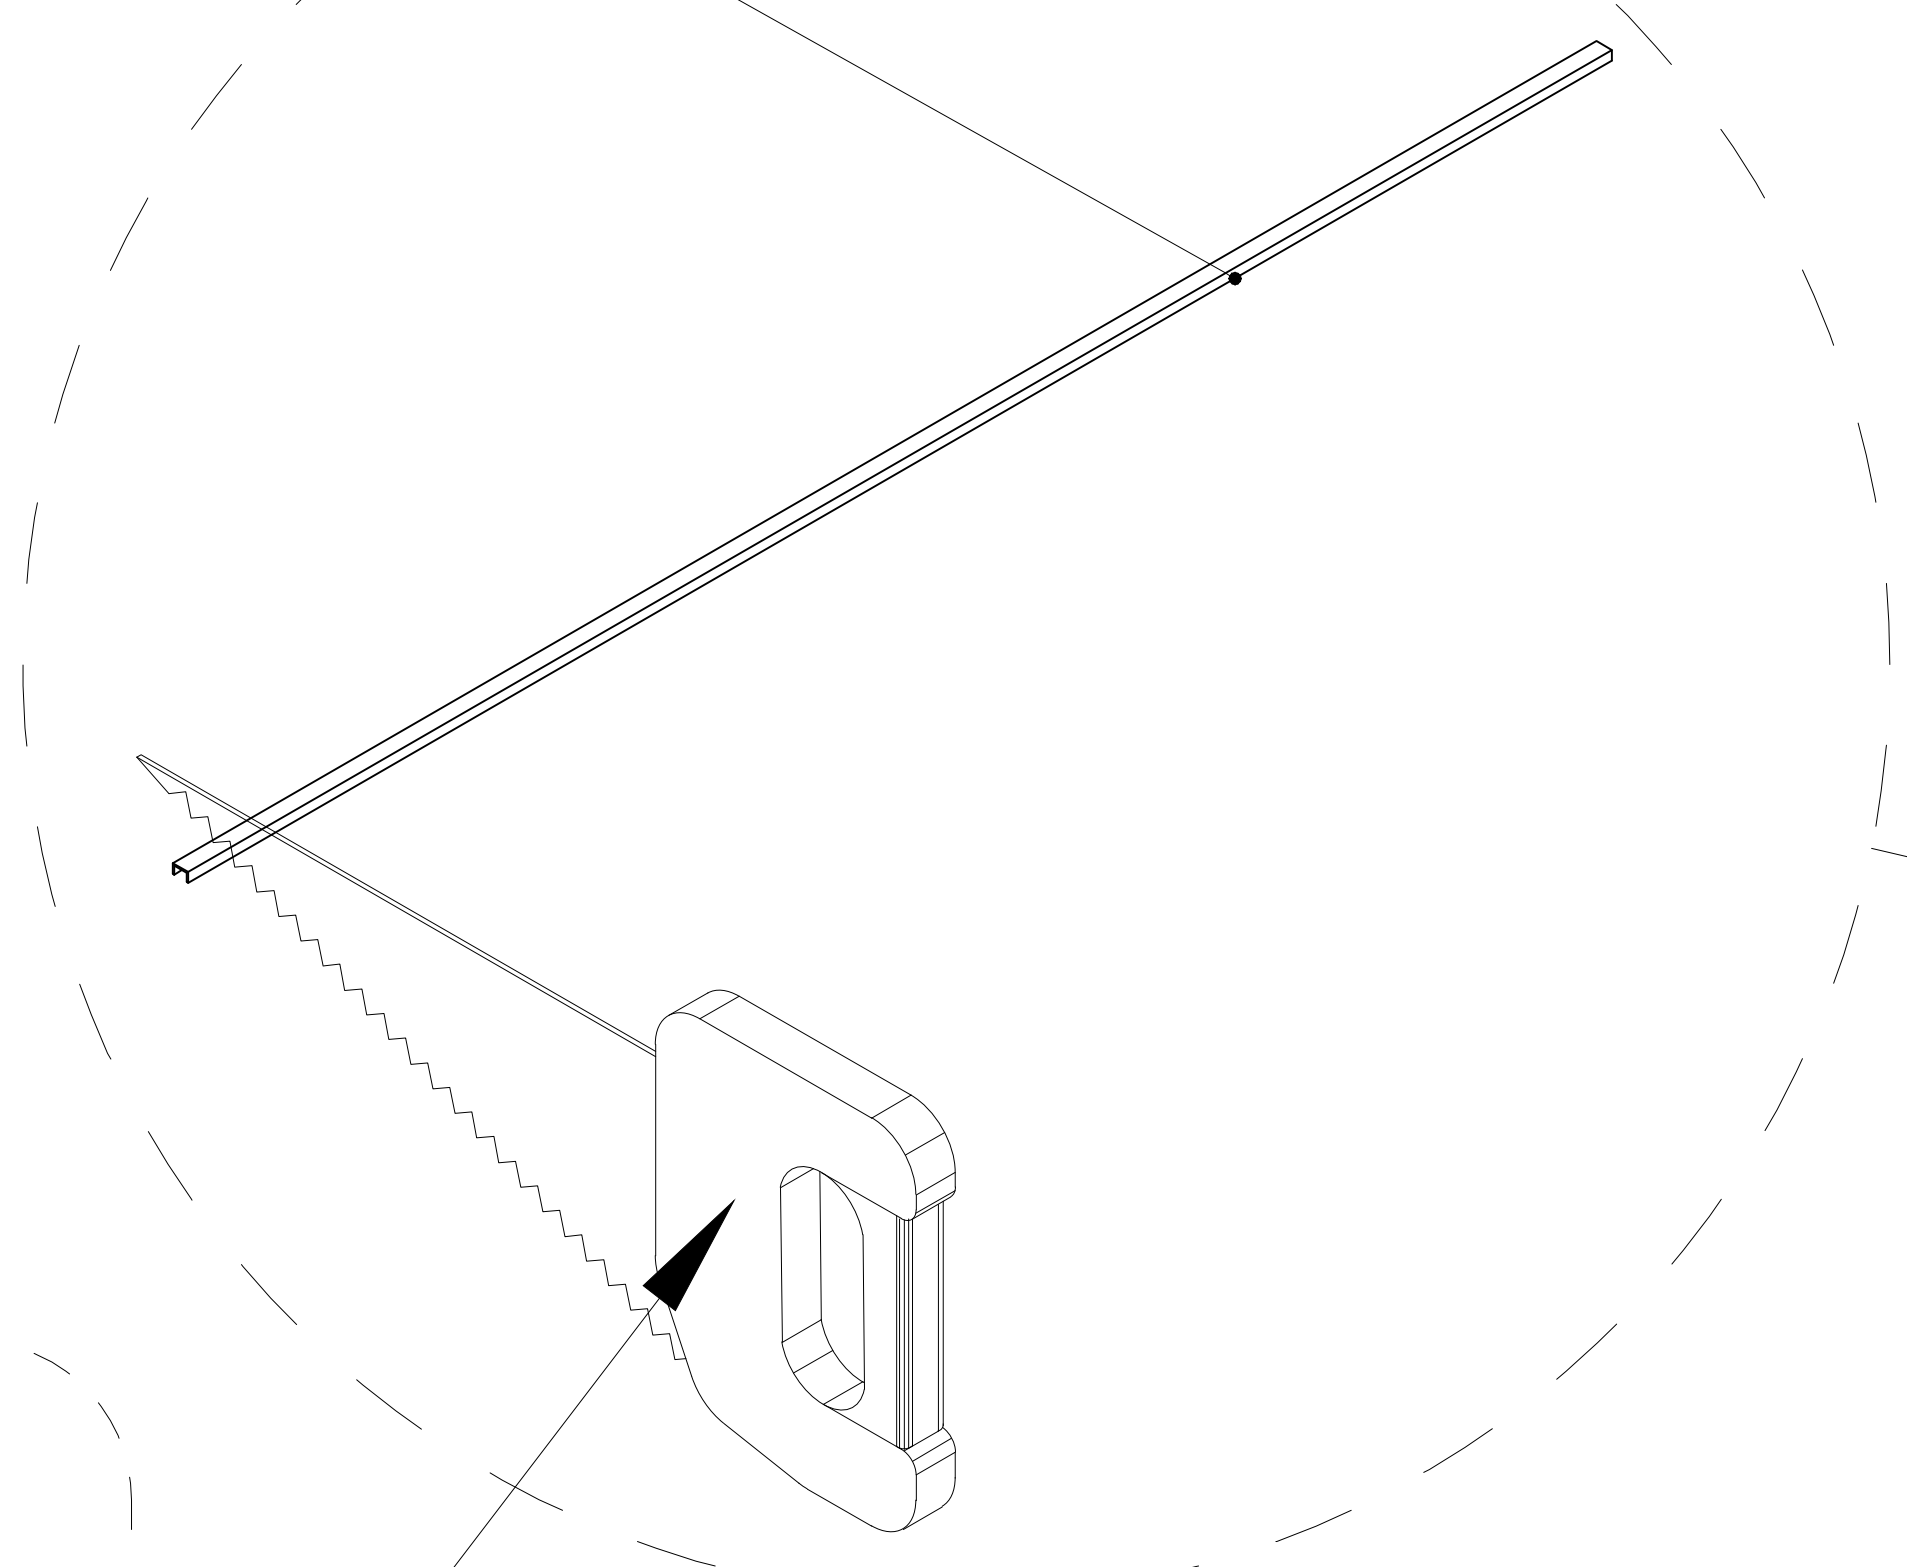

**12#
TOOLS**

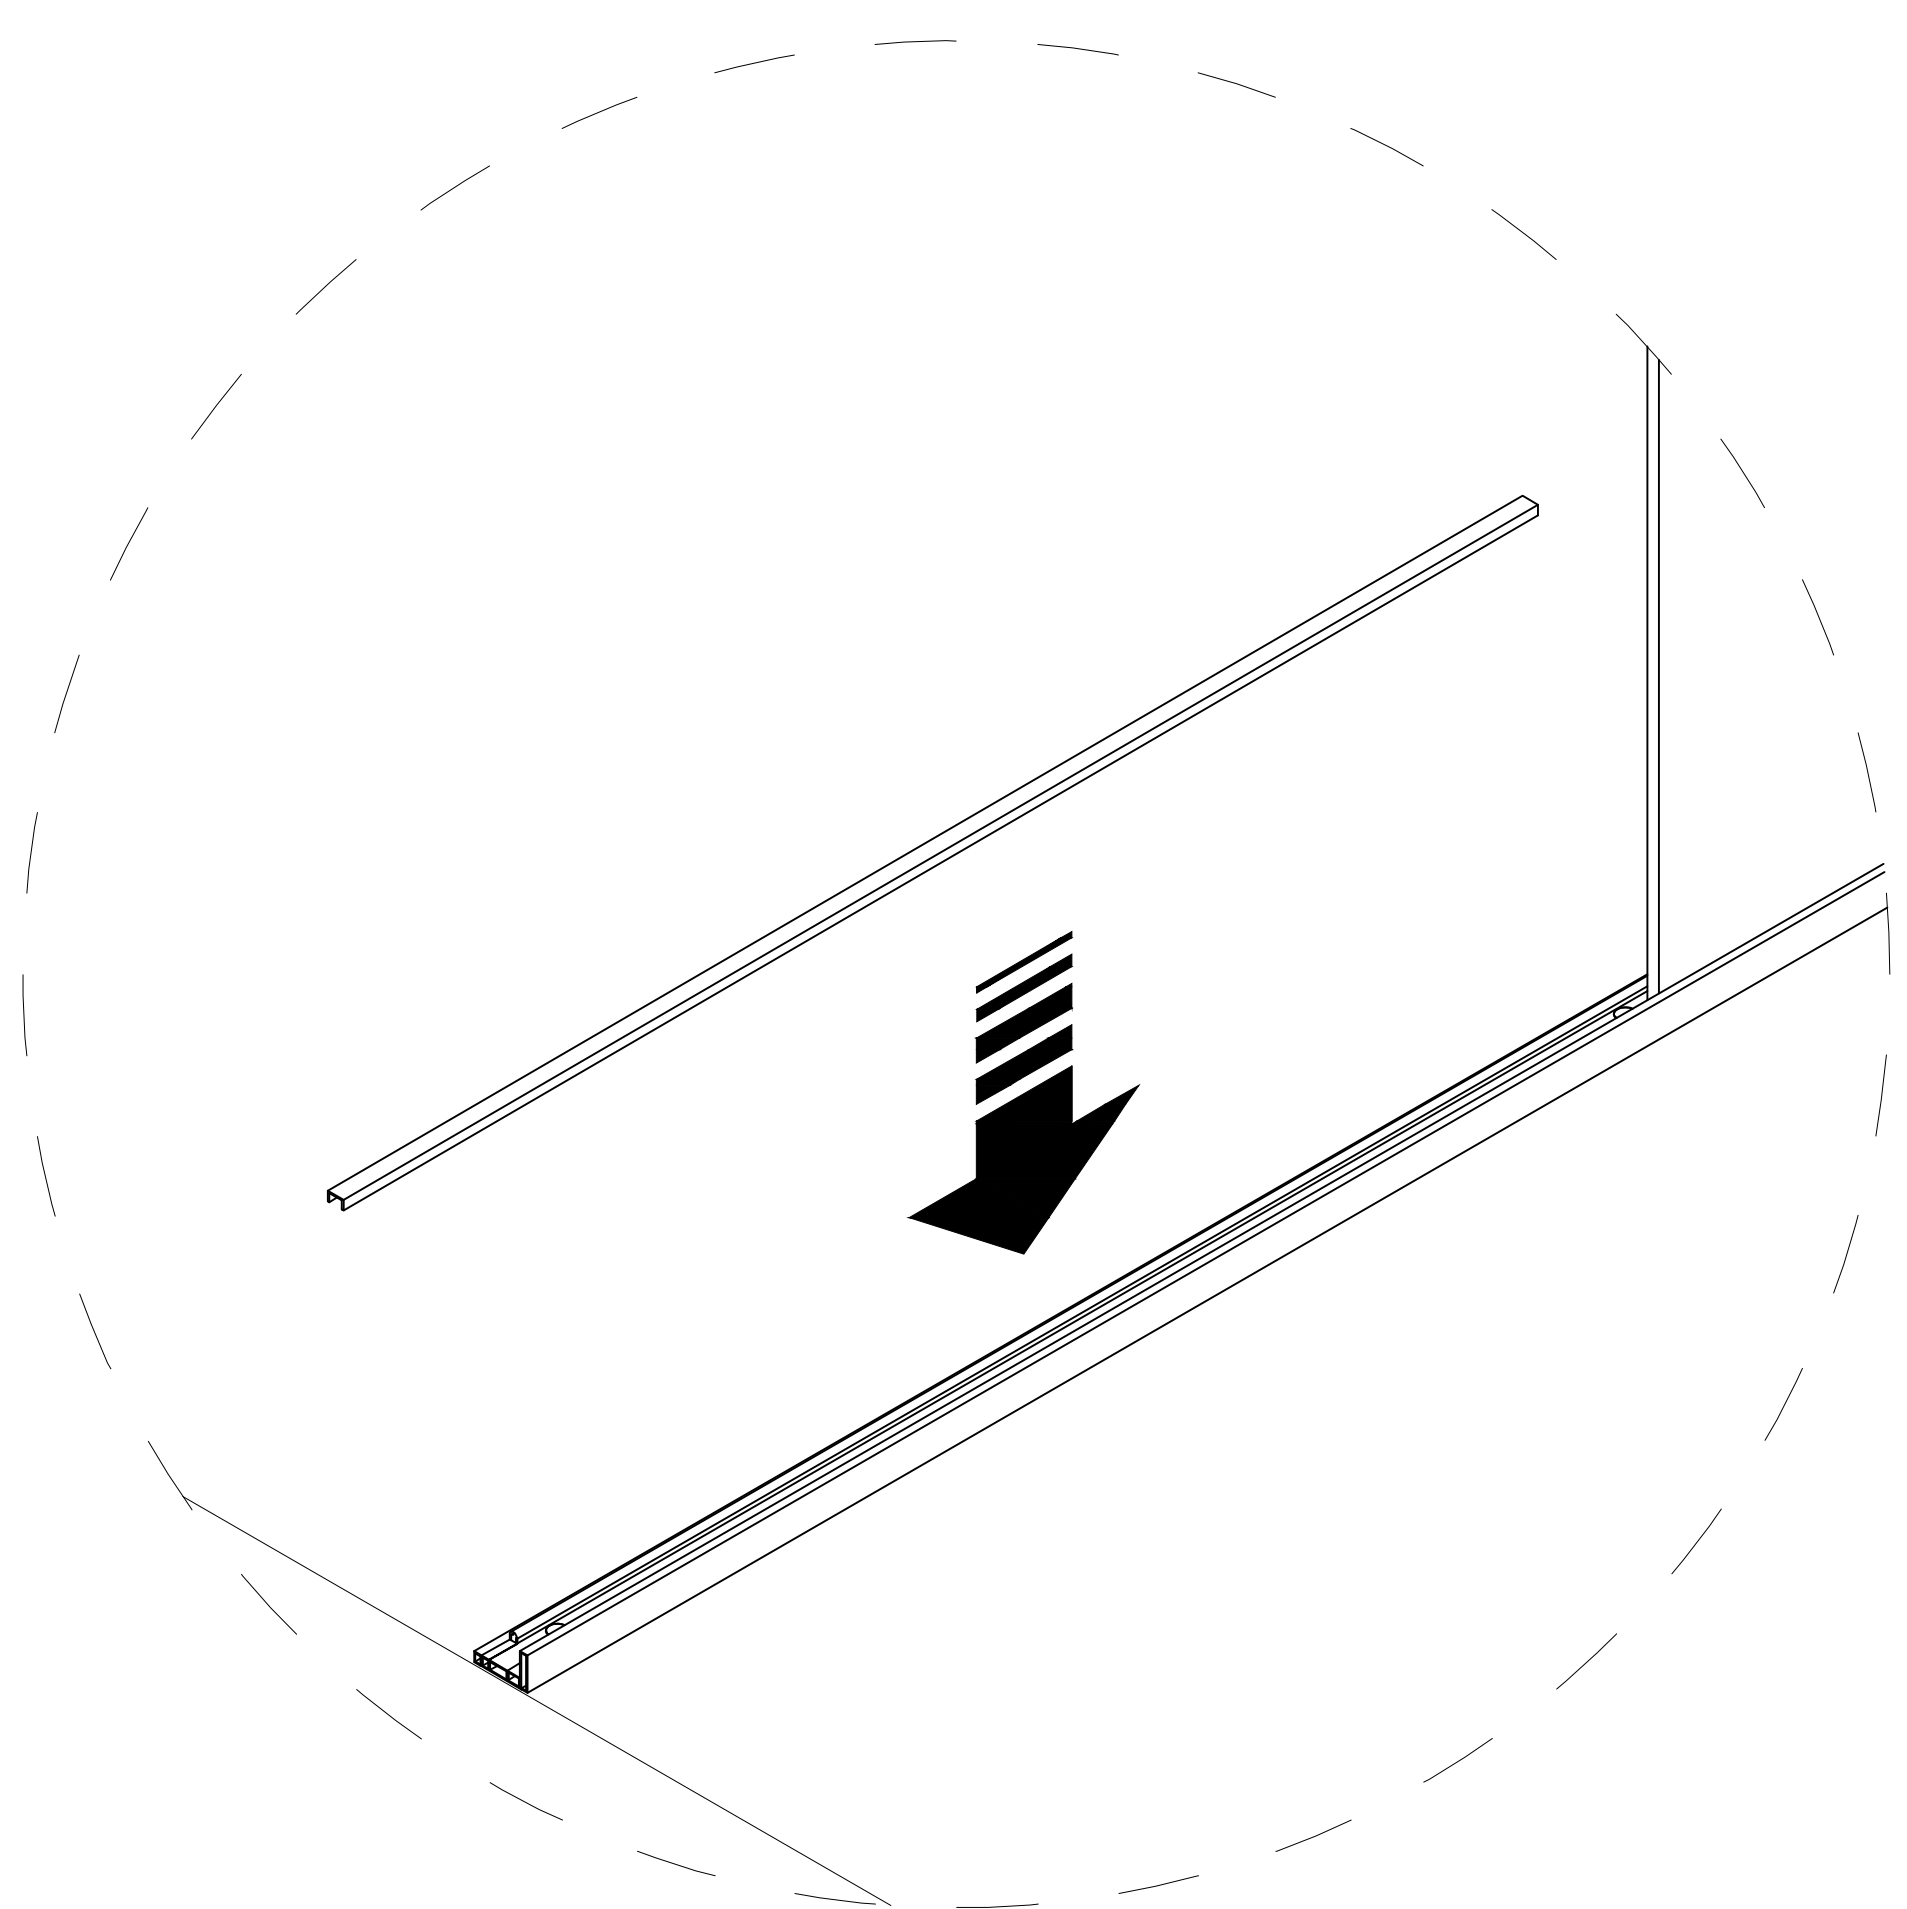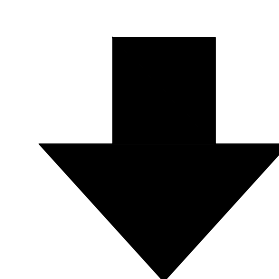


A

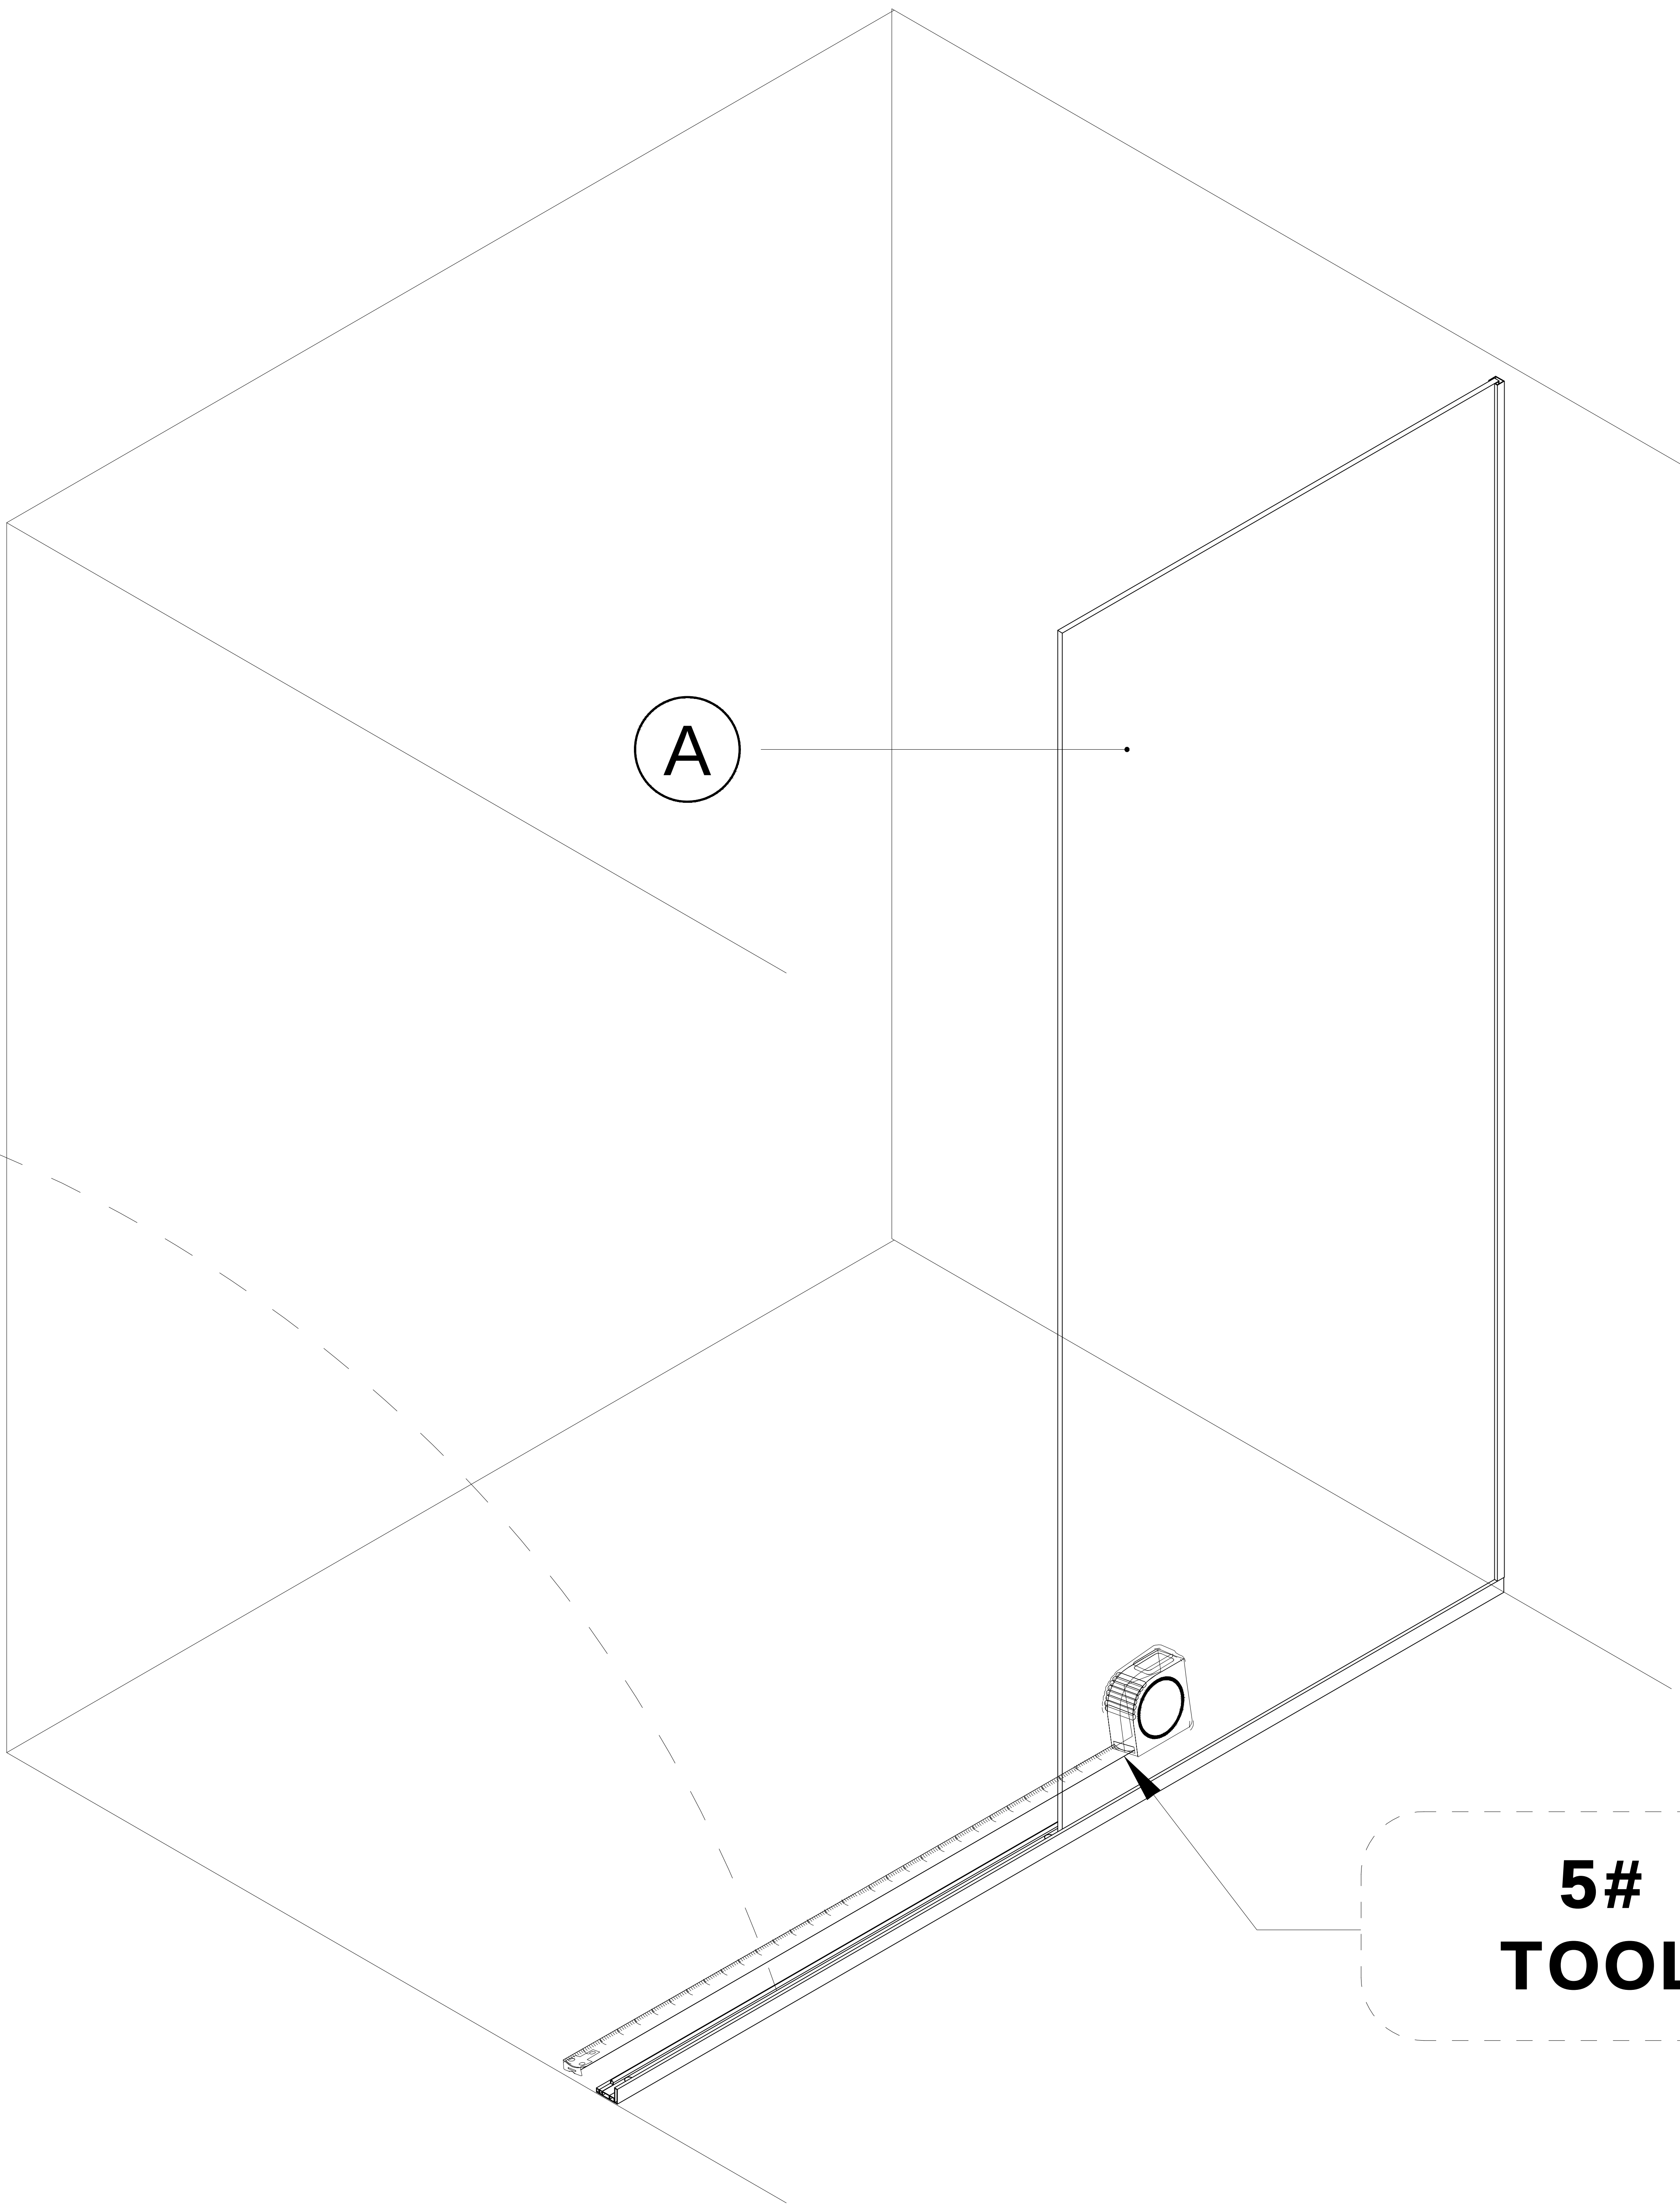

**5#
TOOLS**


STEP- 7

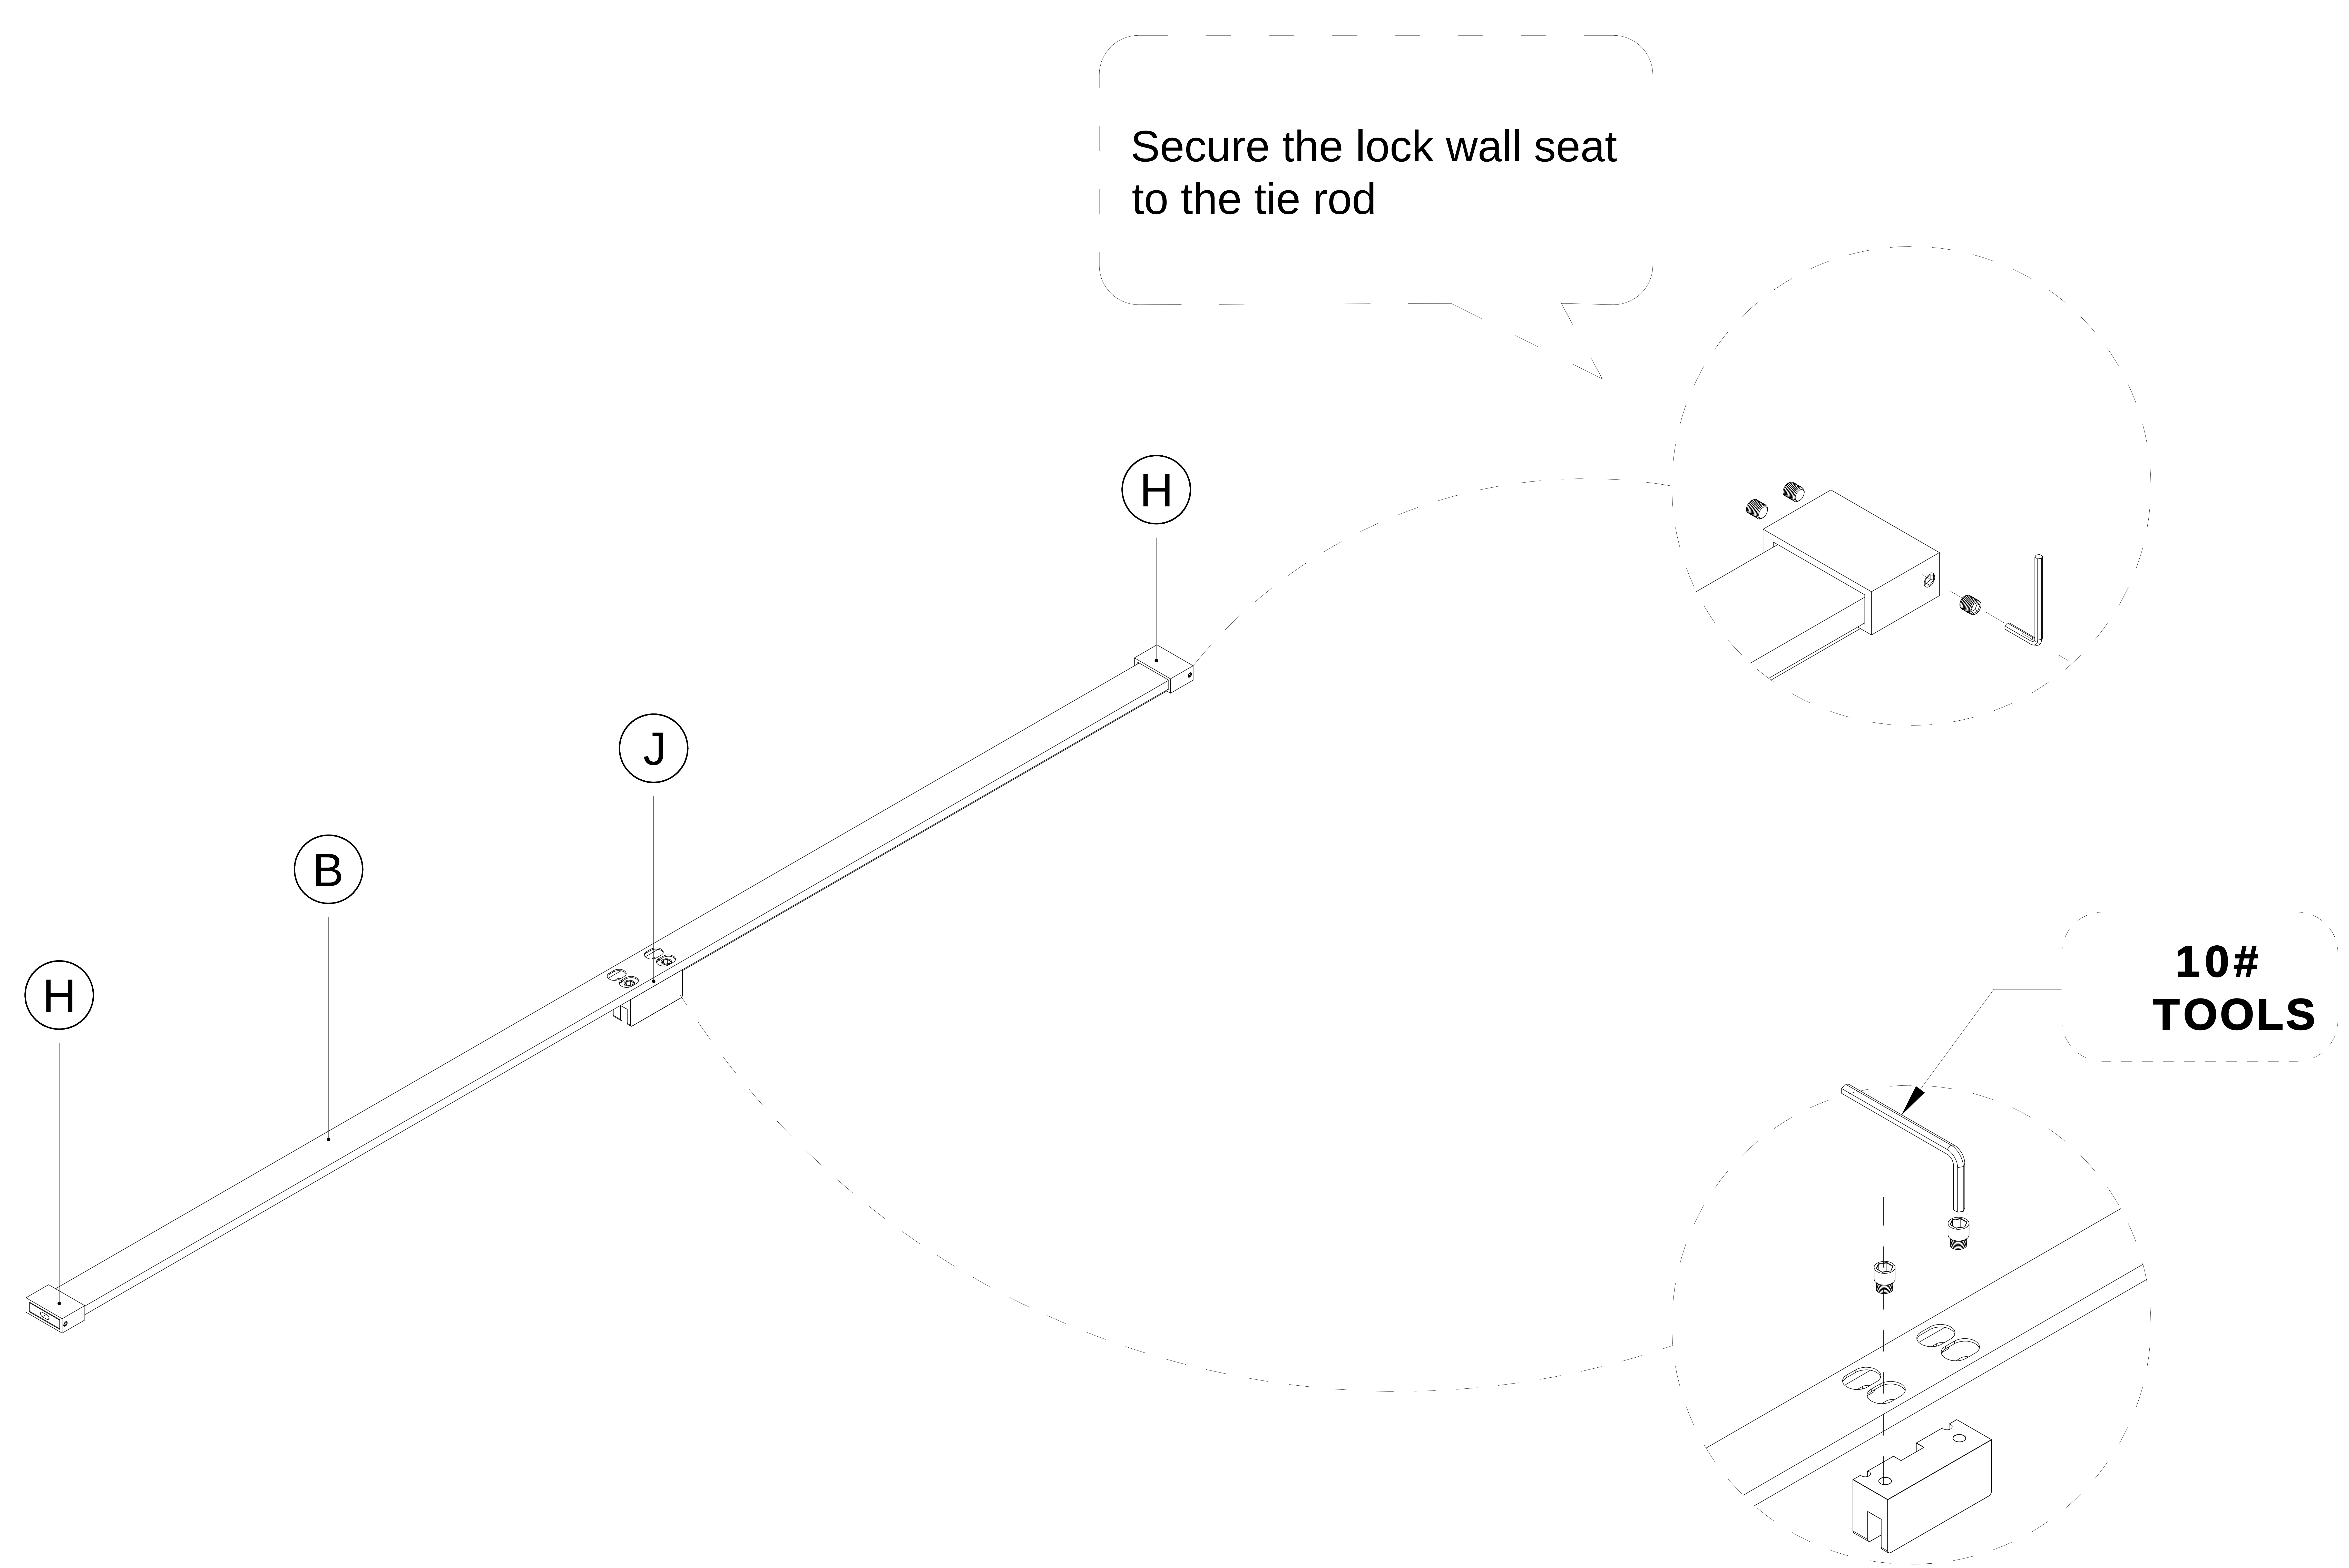

STEP- 8


Place the tie rod horizontally on the fixed glass to mark the location of the lock wall seat

**7#
TOOLS**

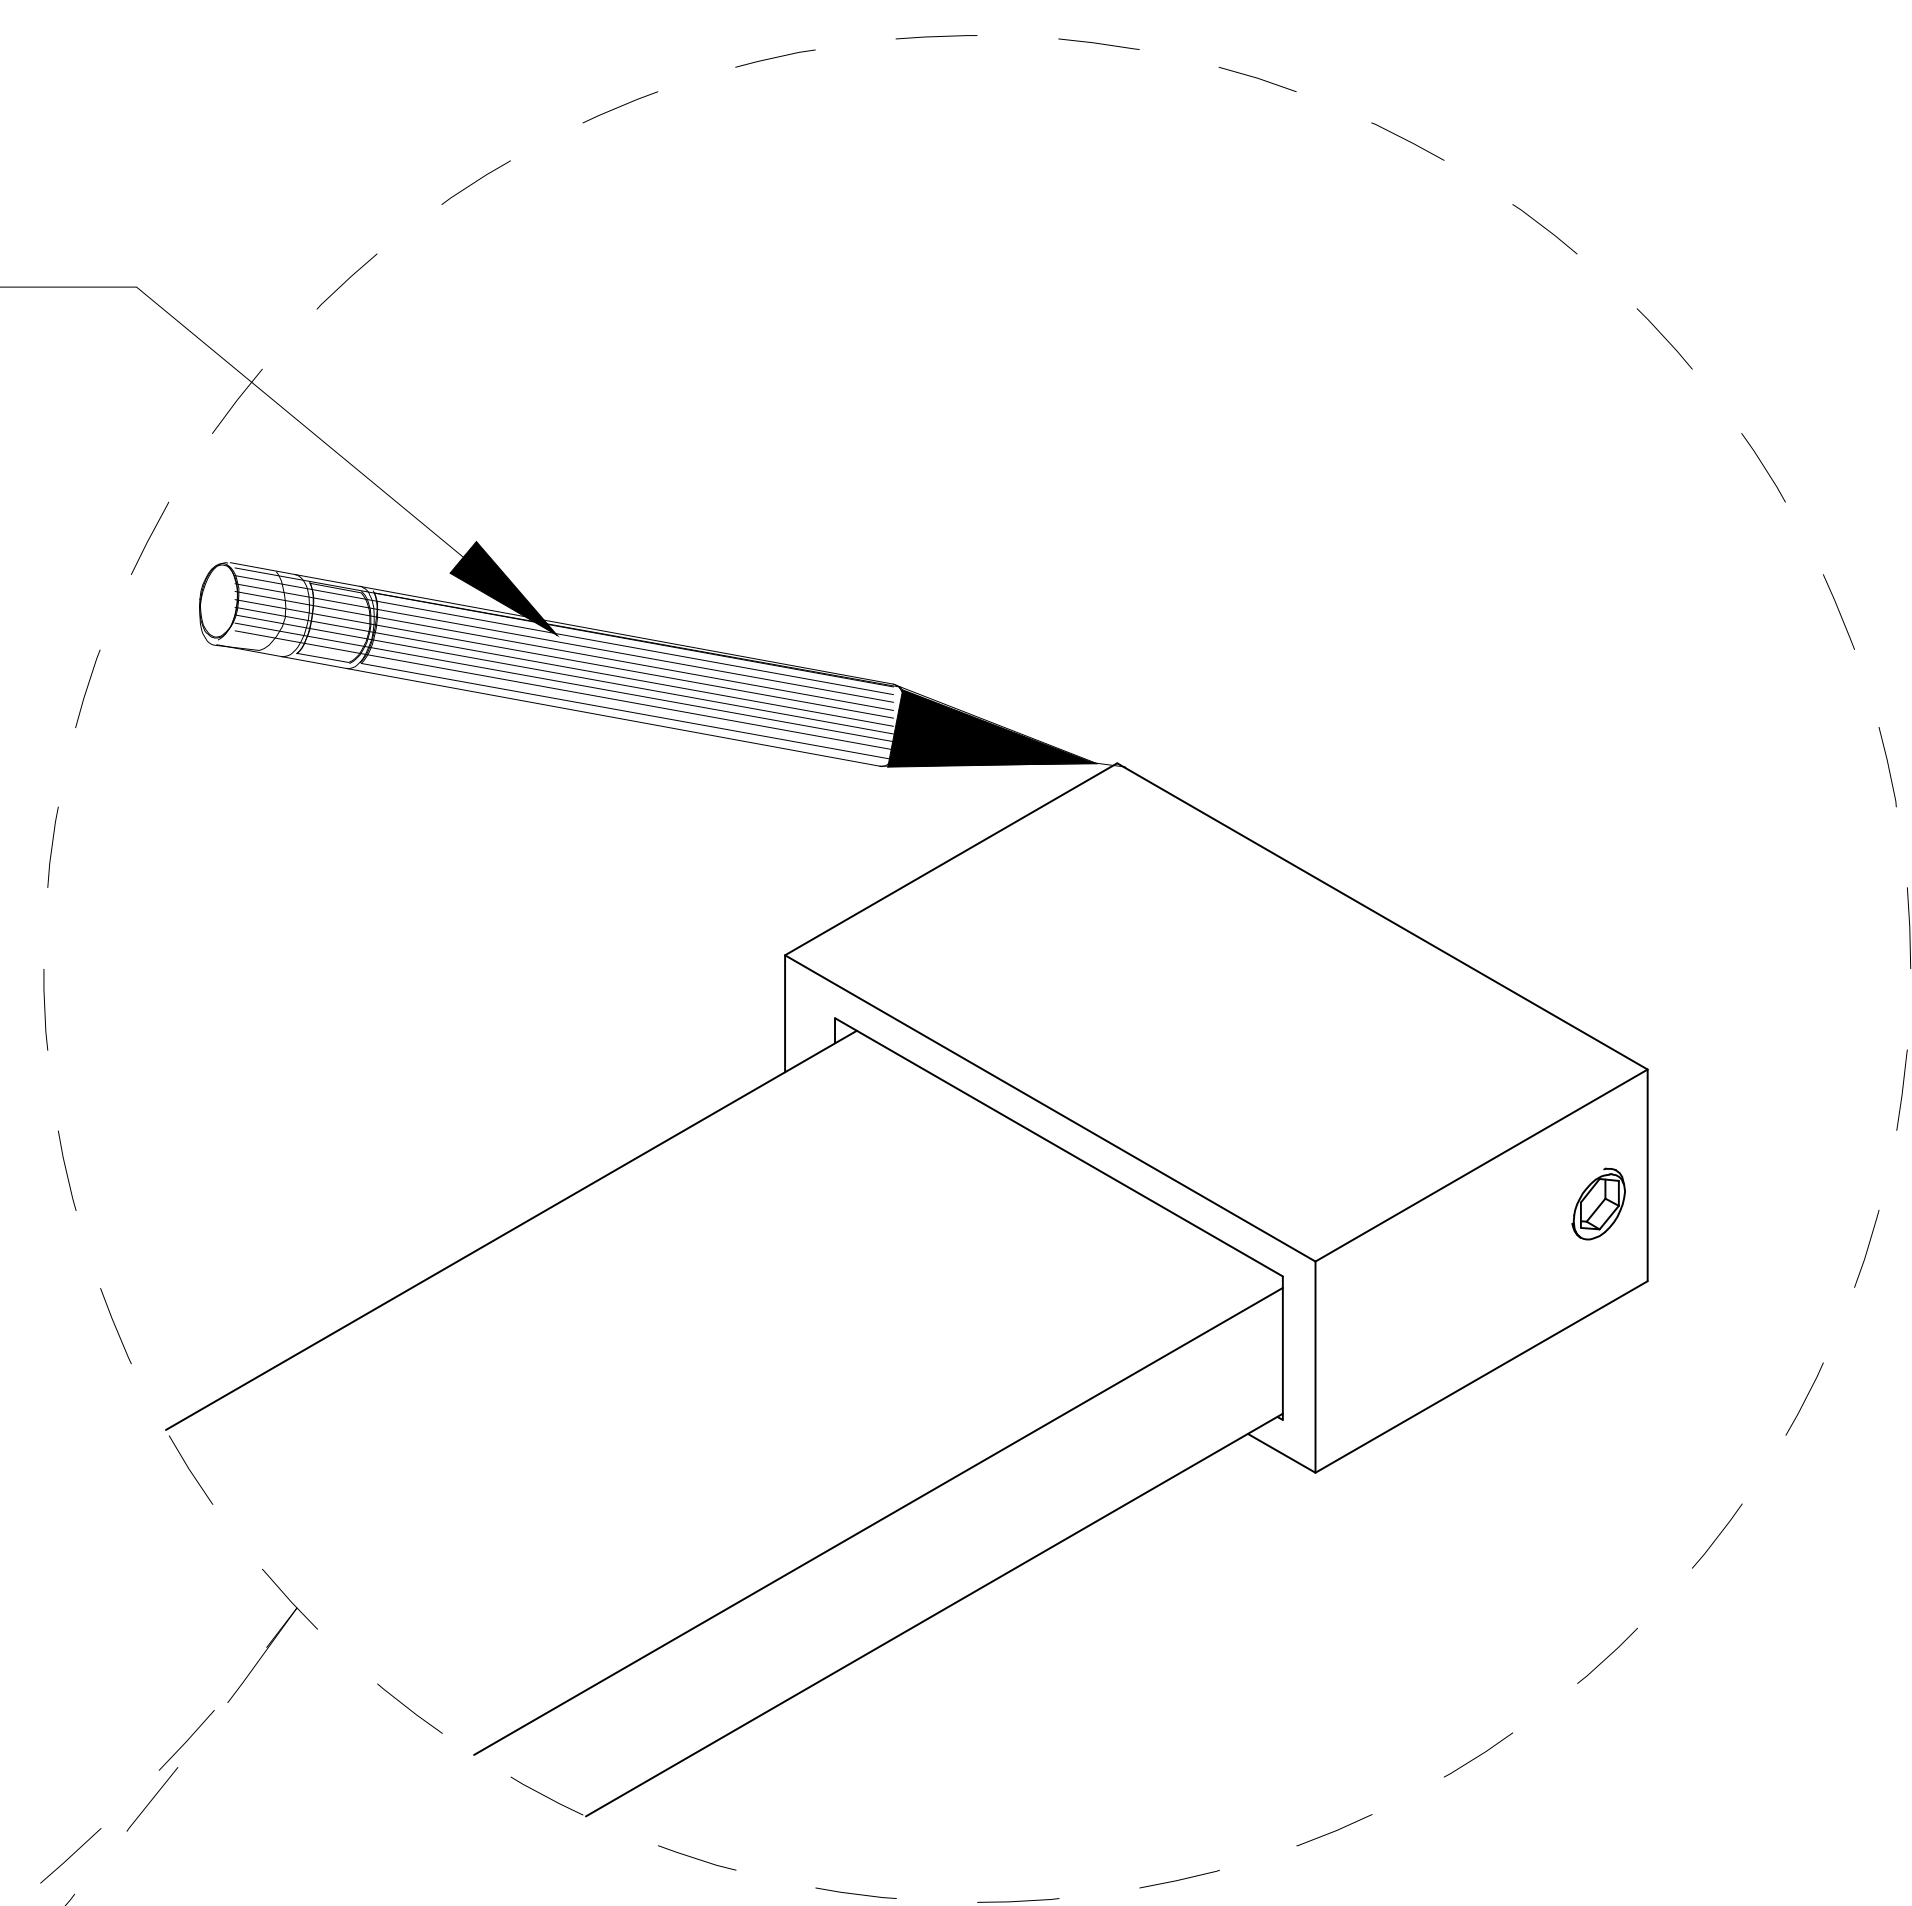


1

**4#
TOOLS**

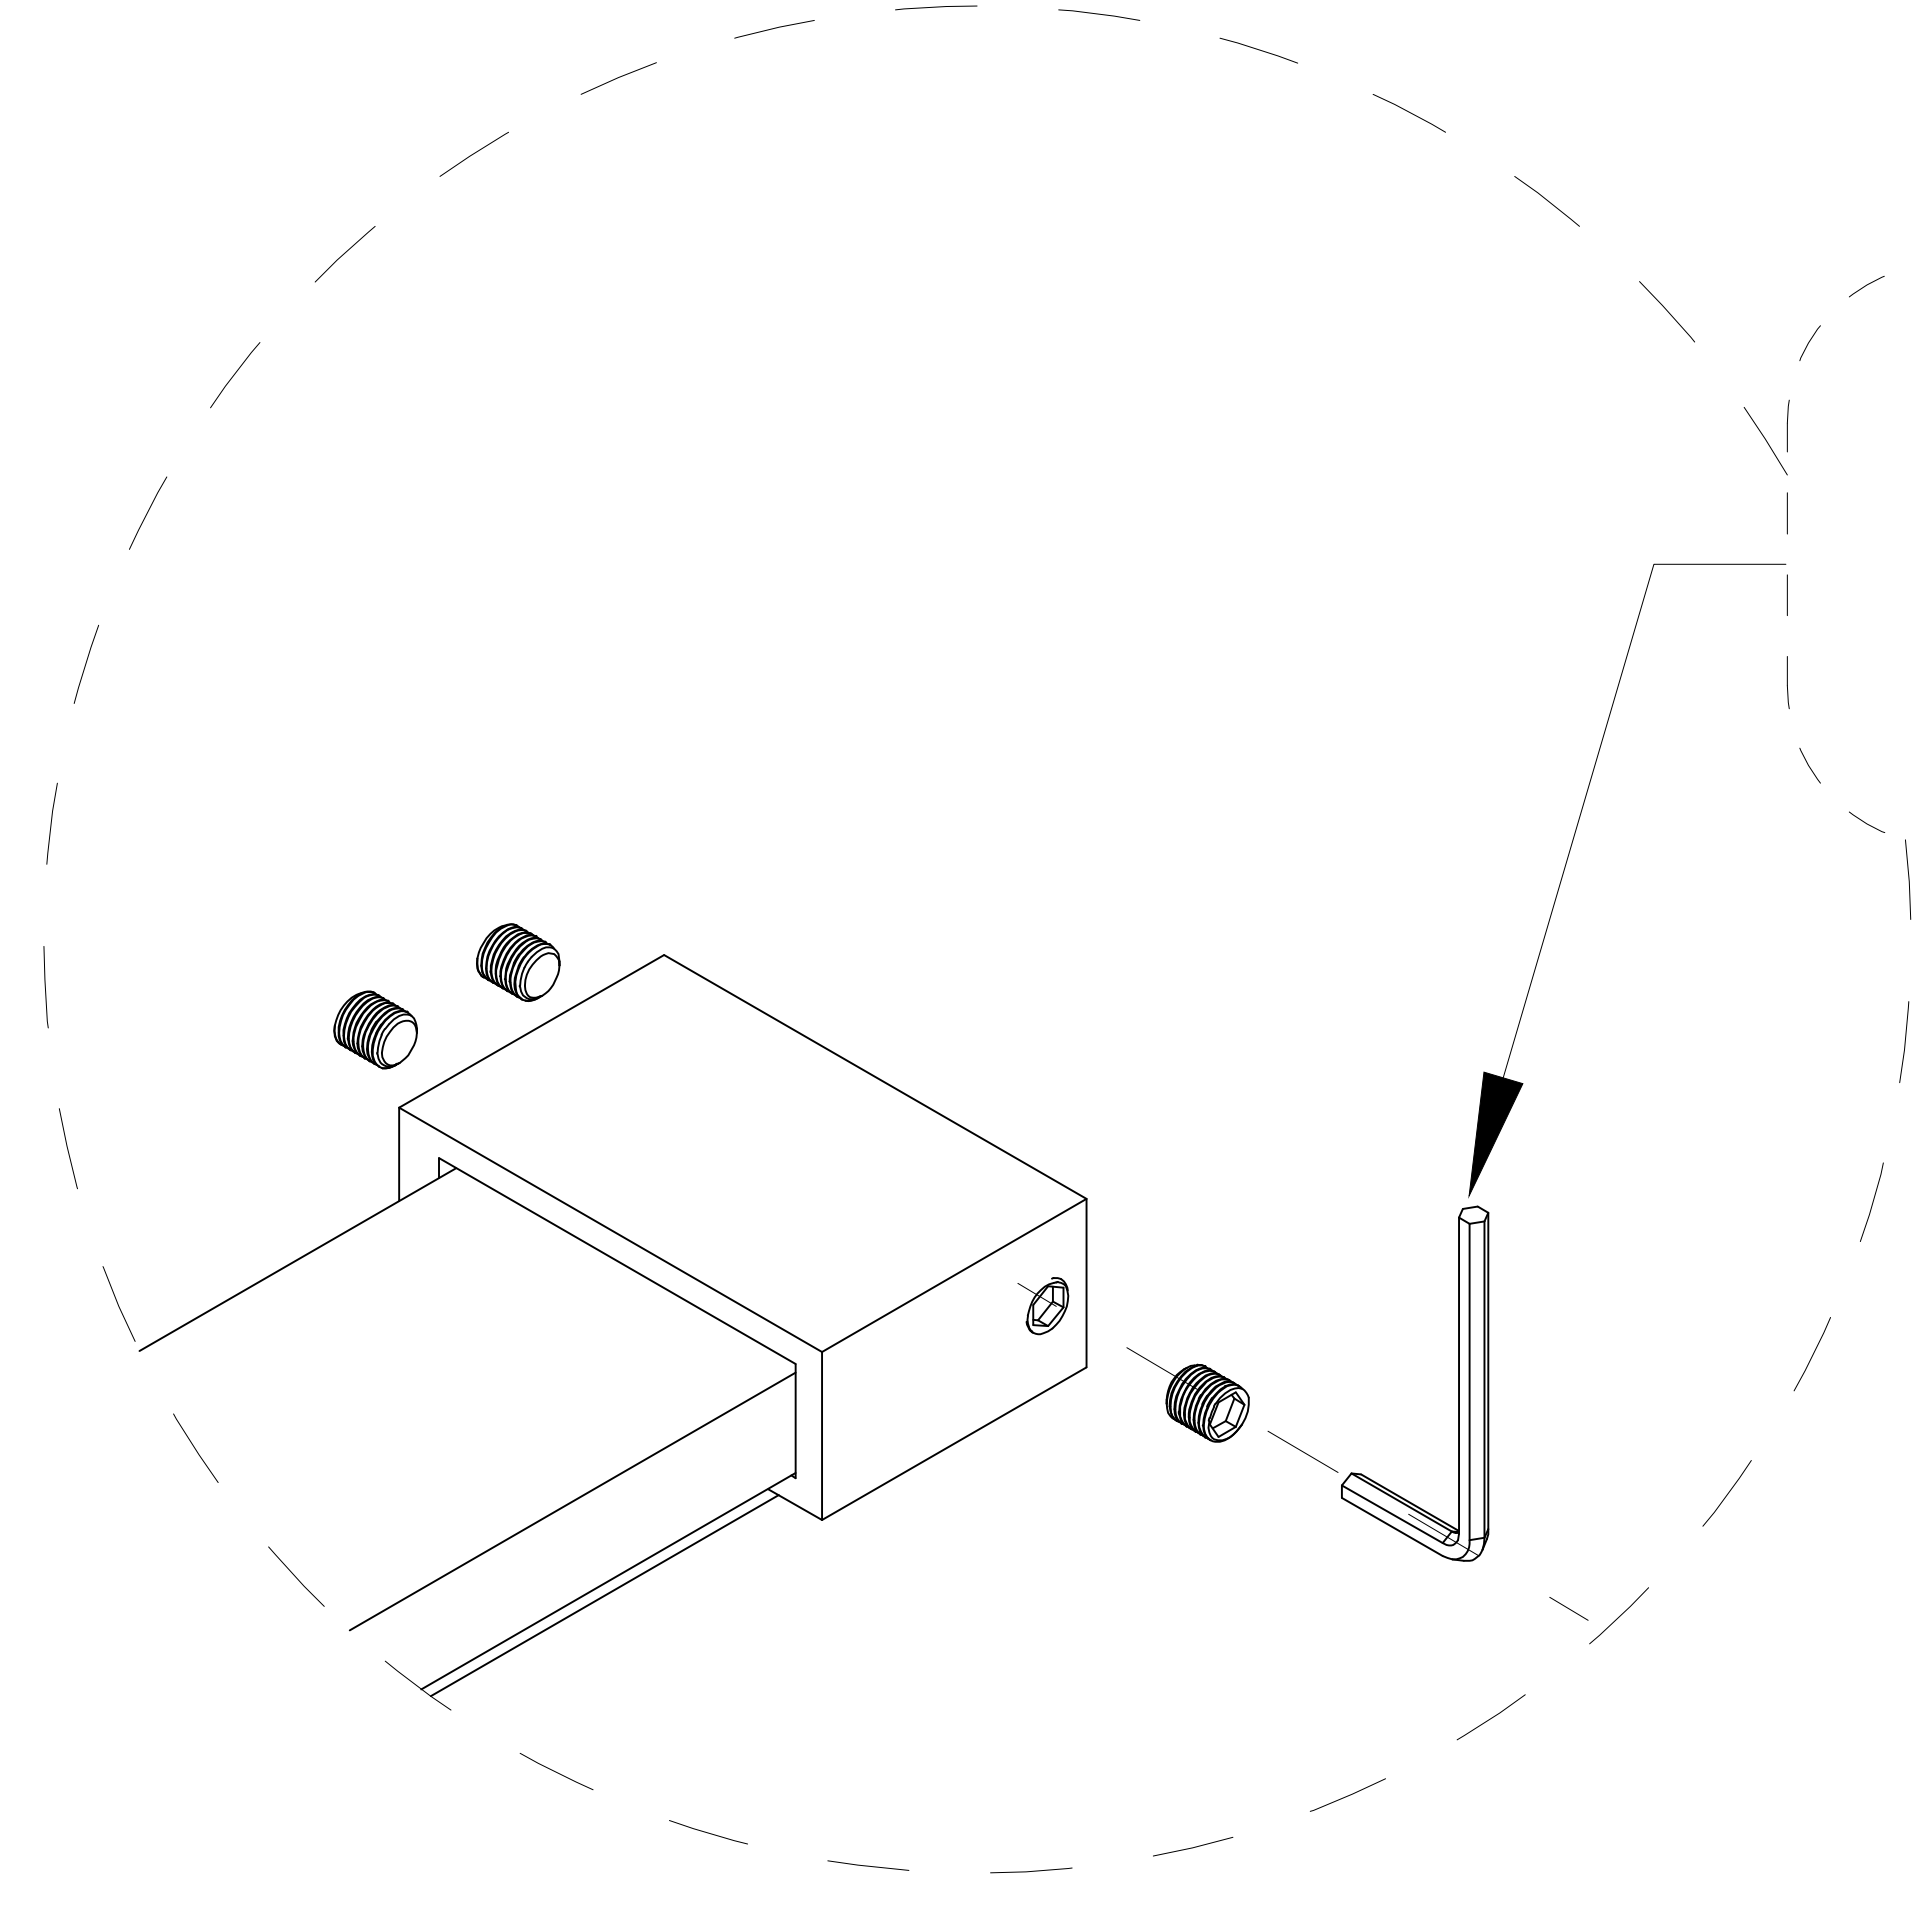


2


**10#
TOOLS**

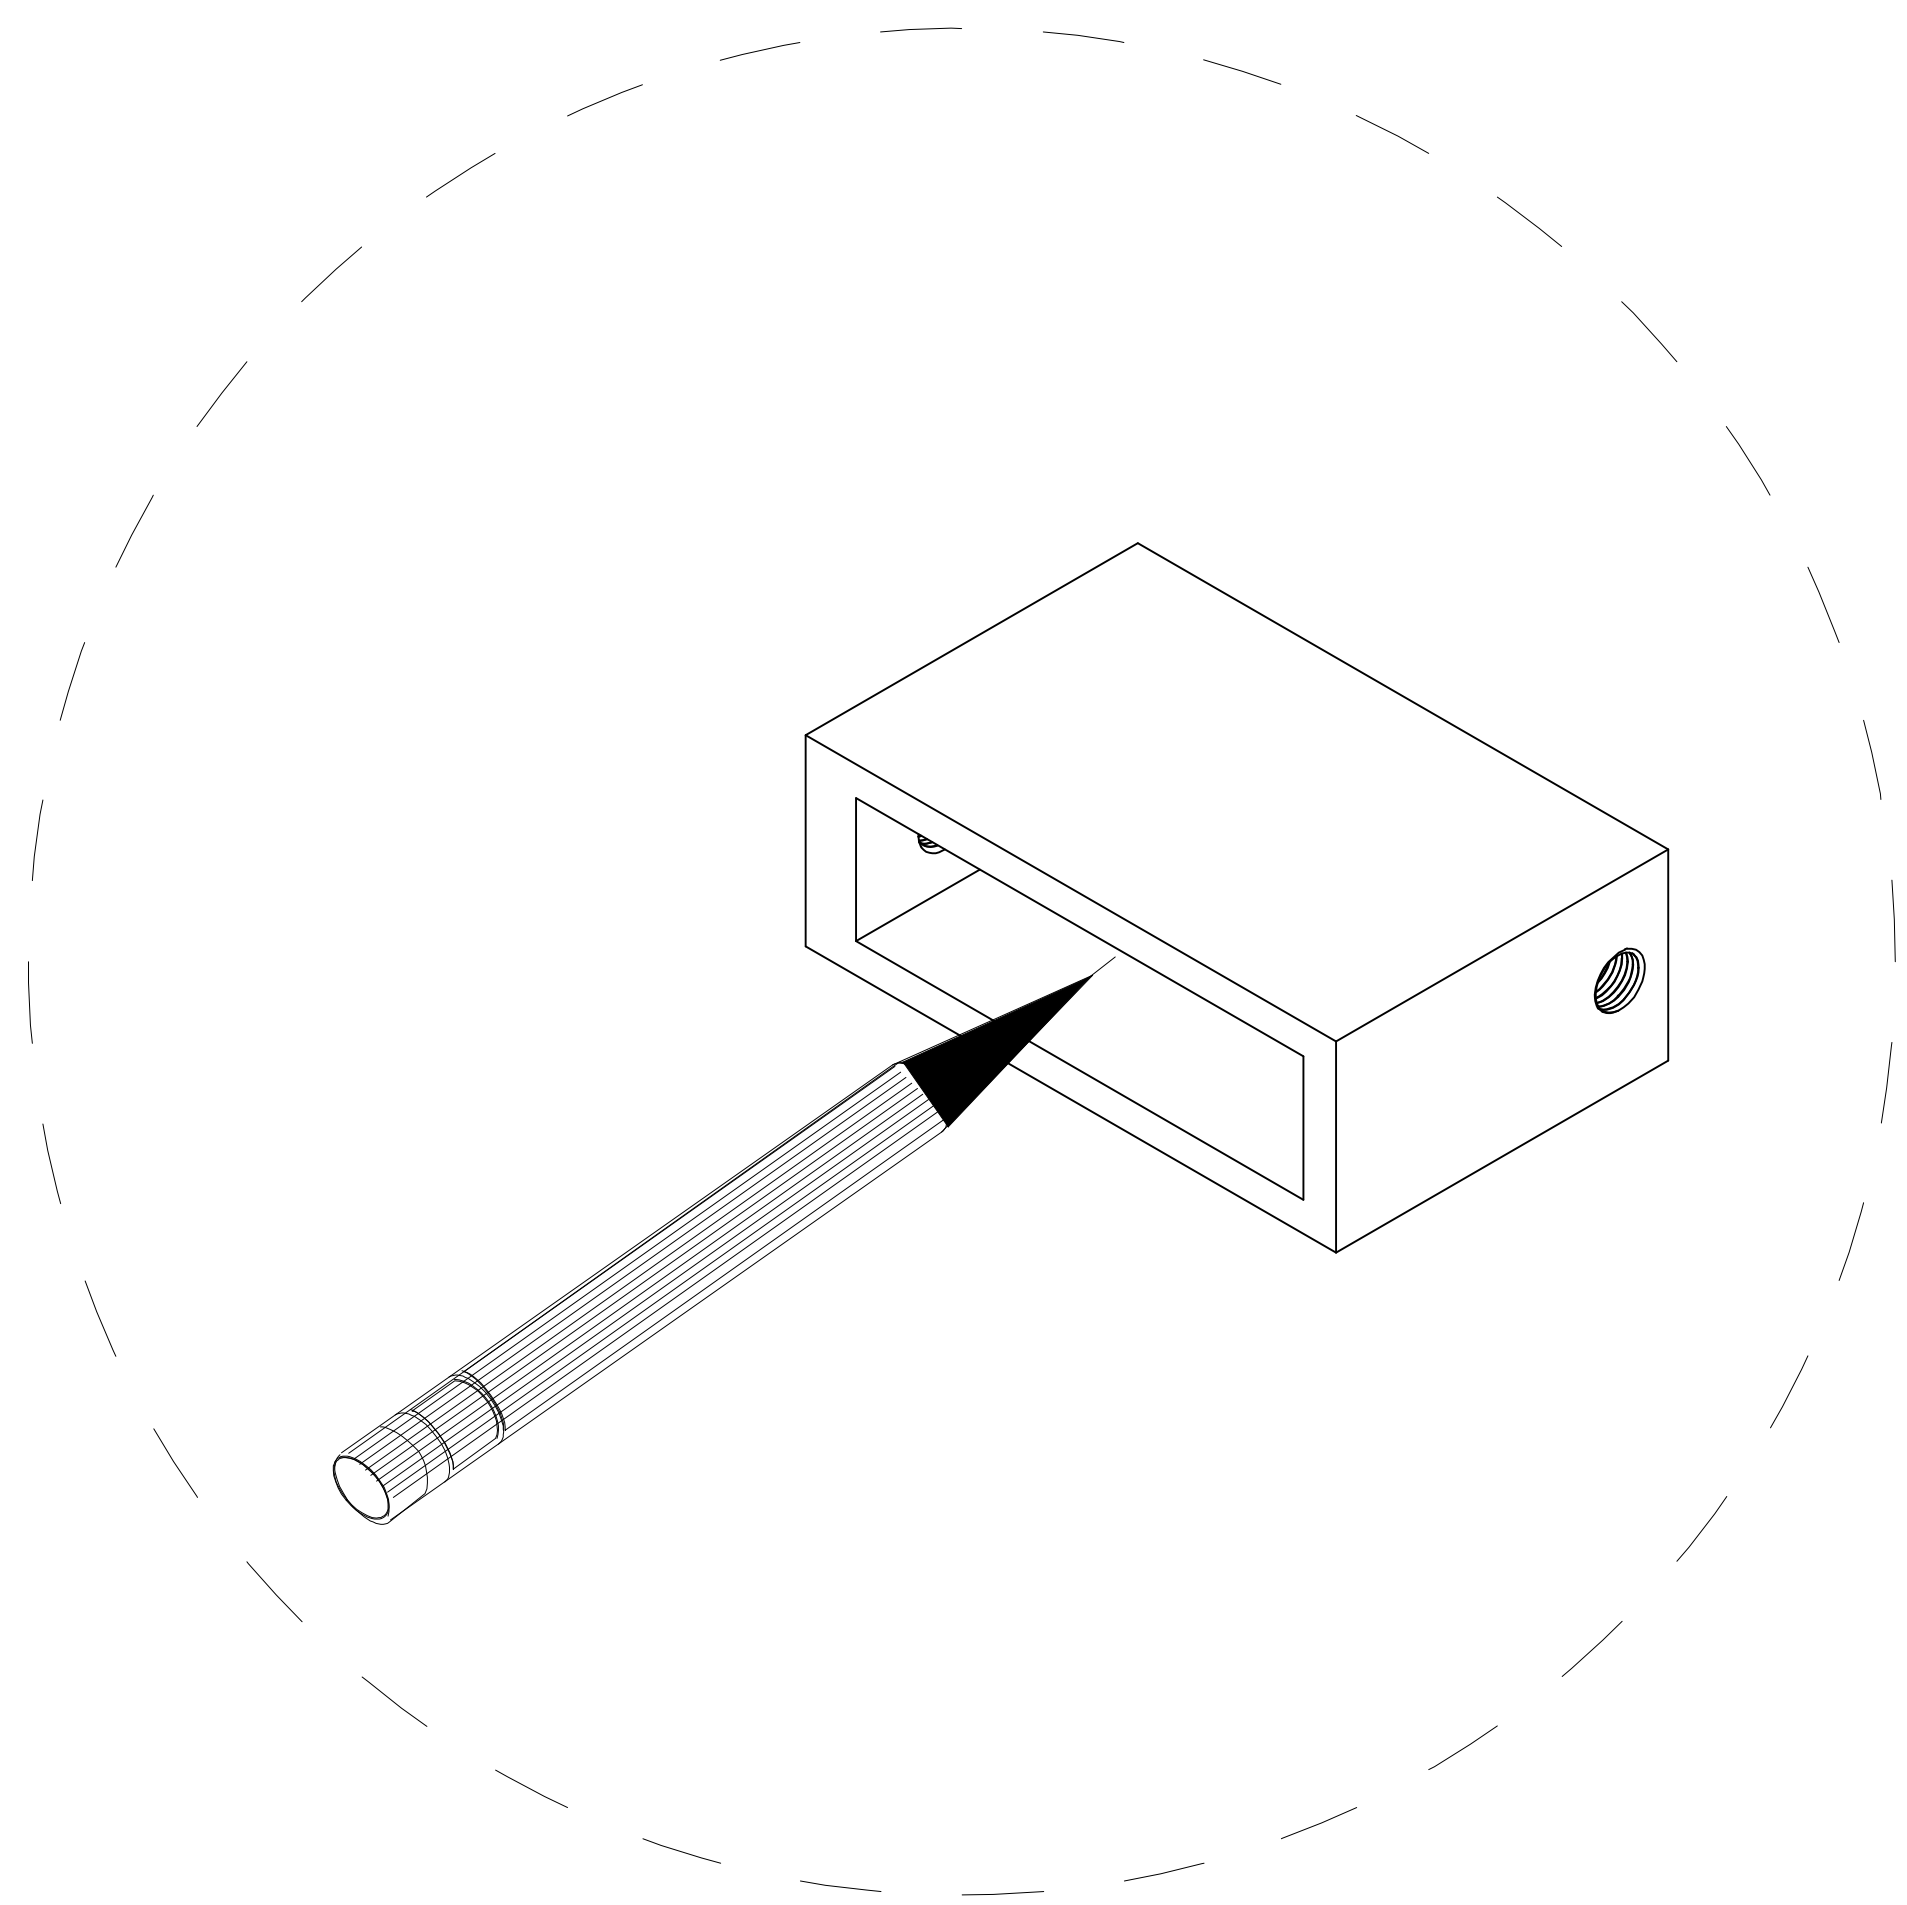

5

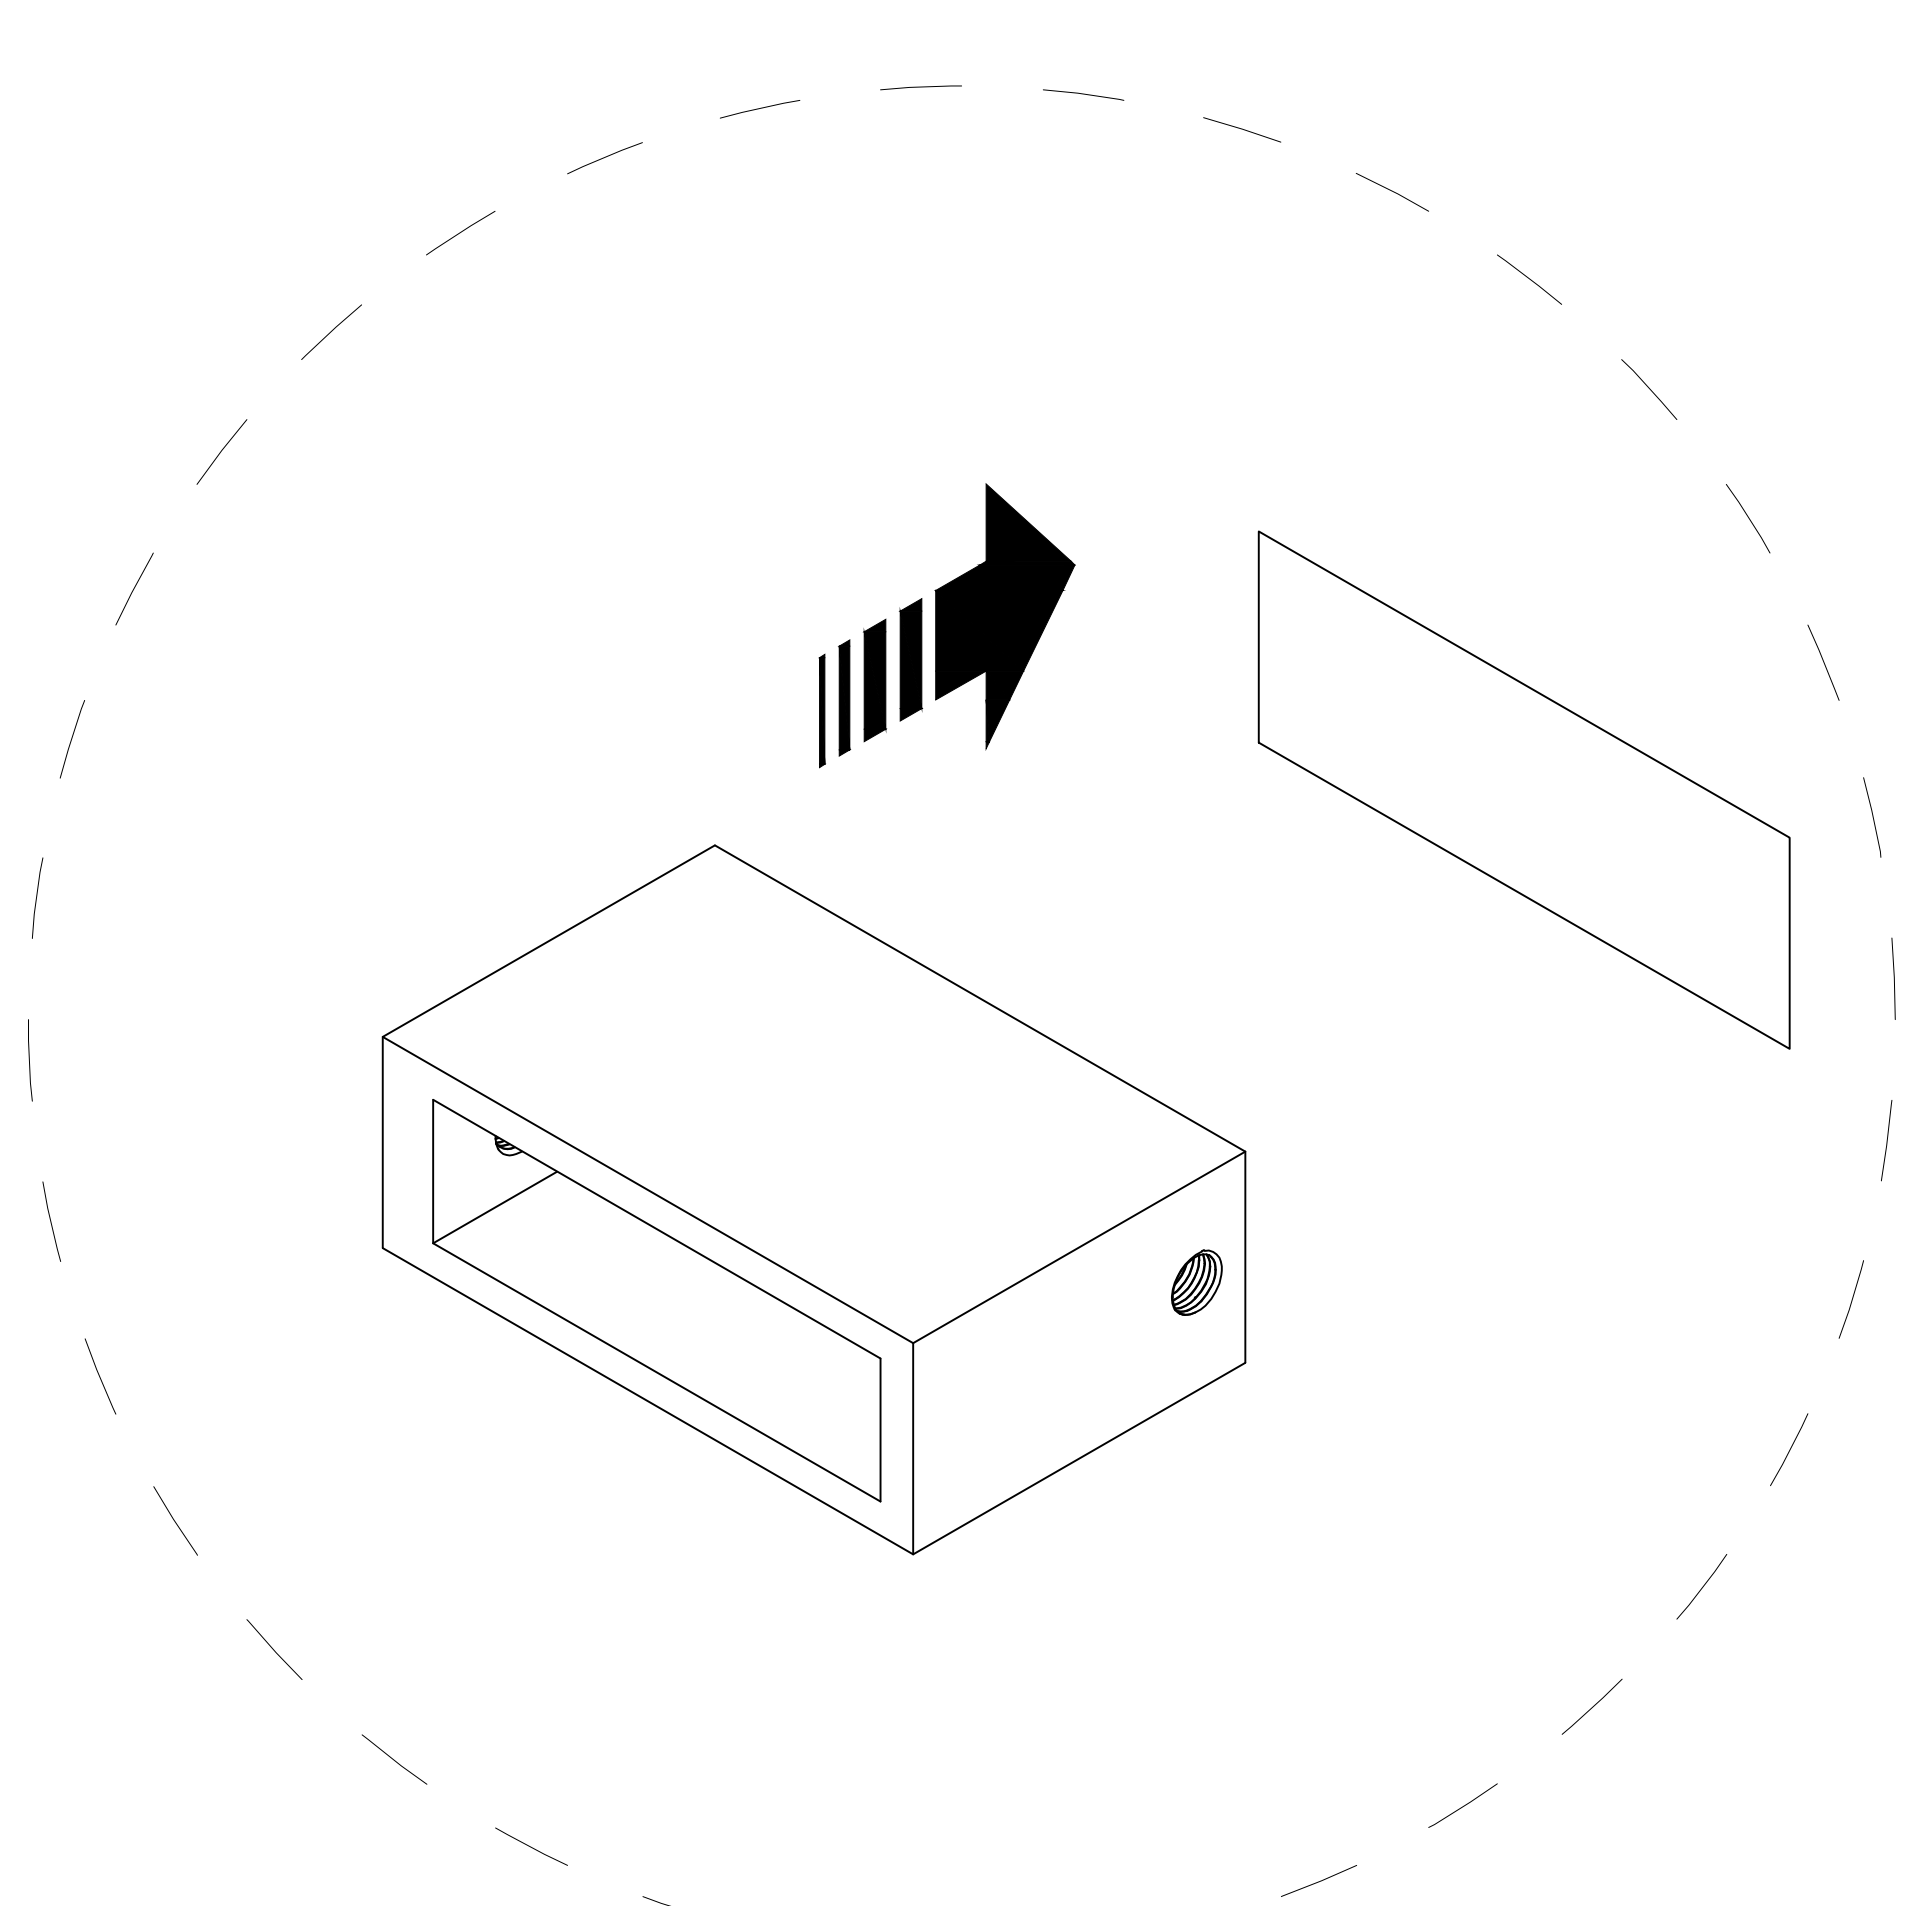


4

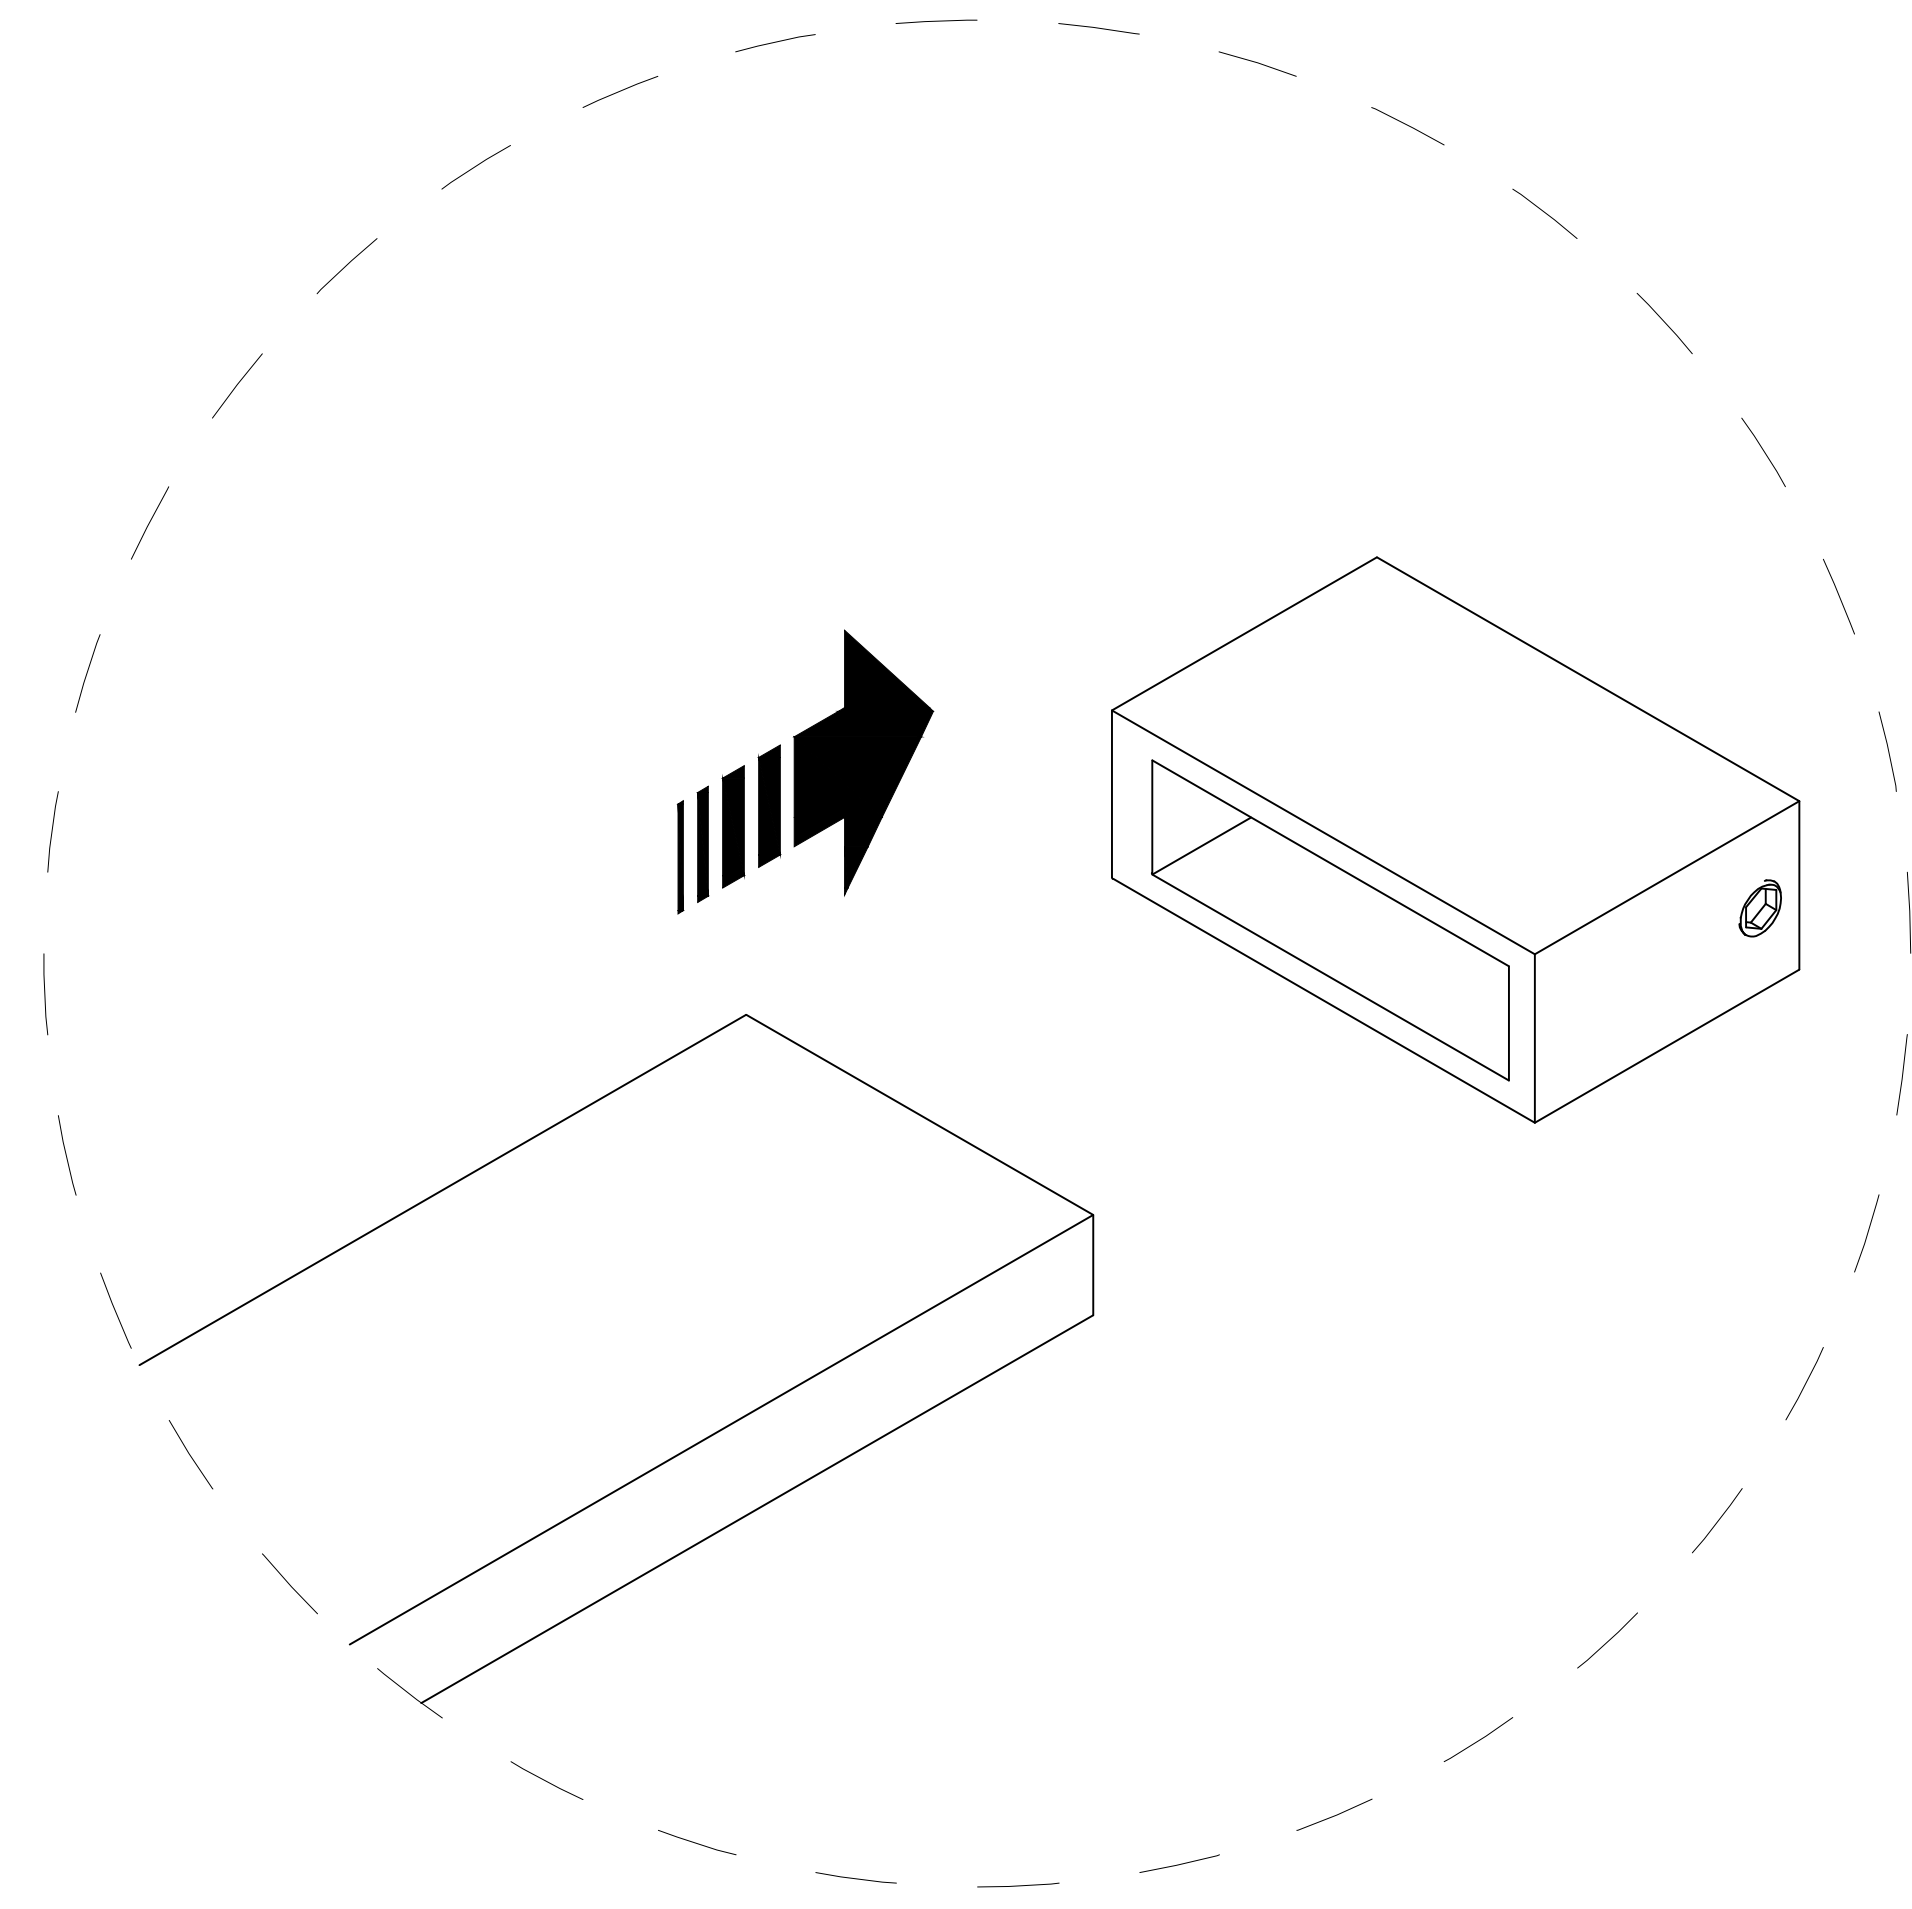


3

STEP- 9

Drill holes in the marked holes,
insert the expansion particles,
and install the fixing gasket for
the lock wall seat

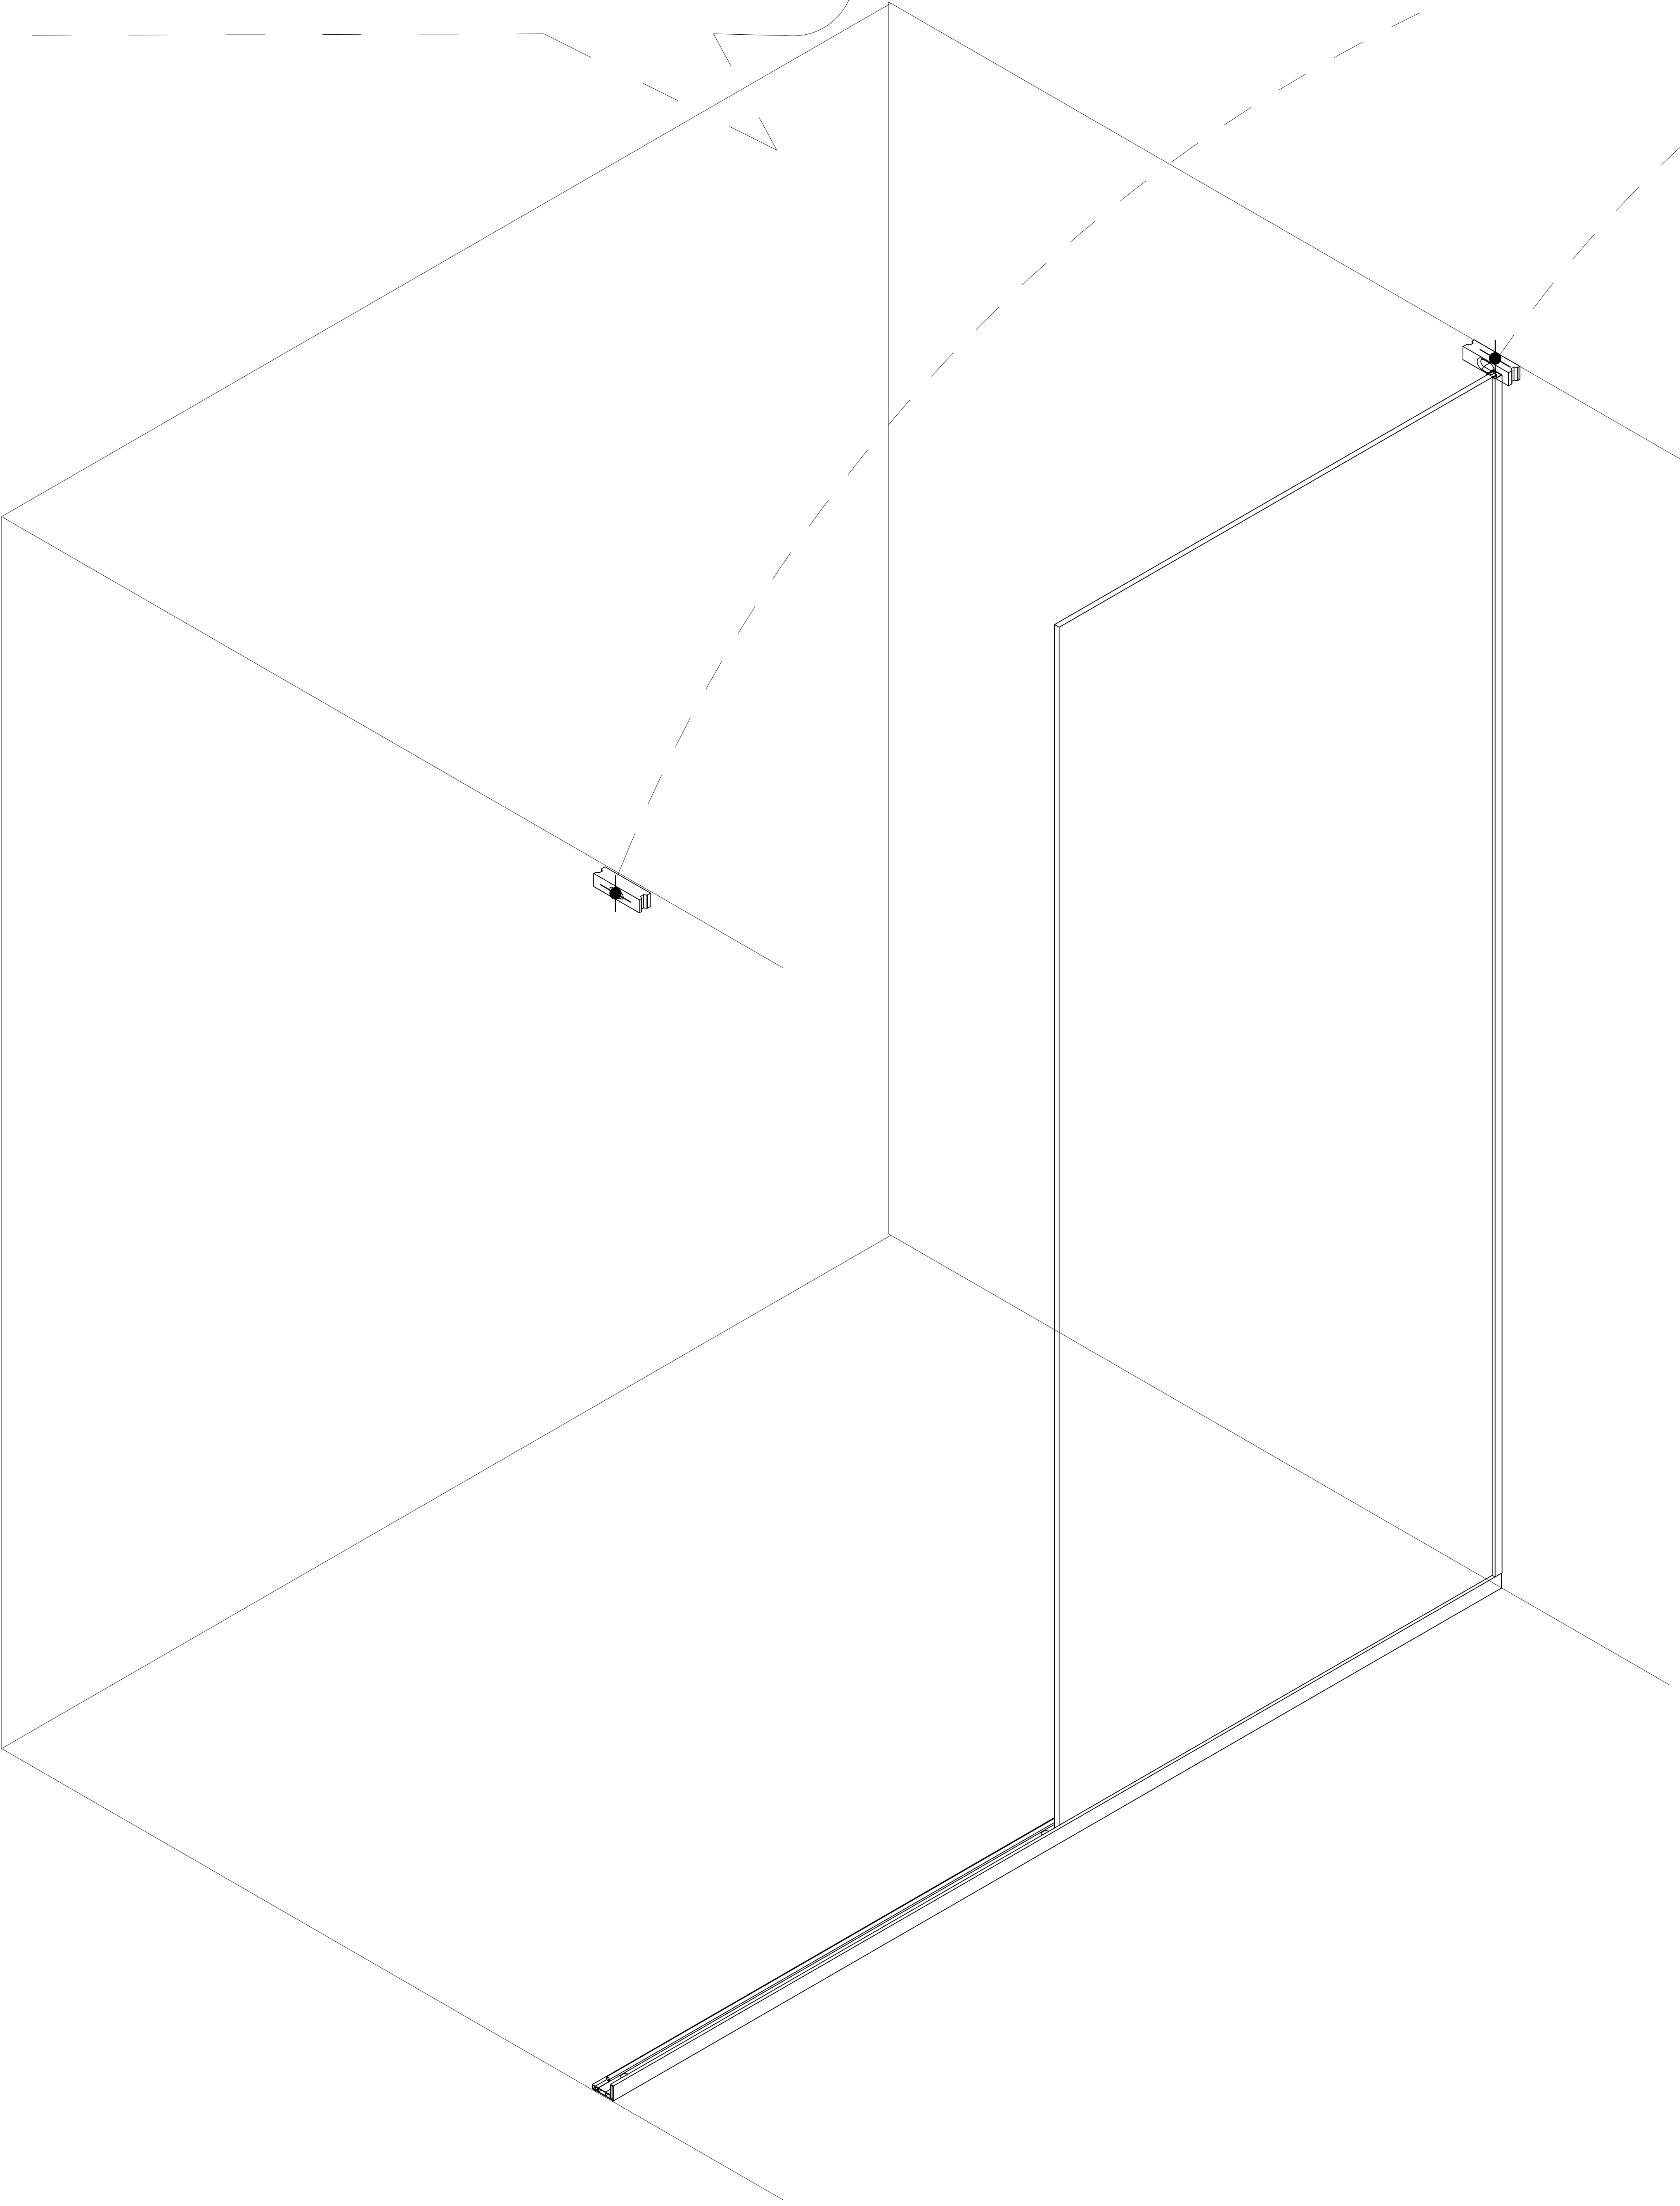


1#
TOOLS

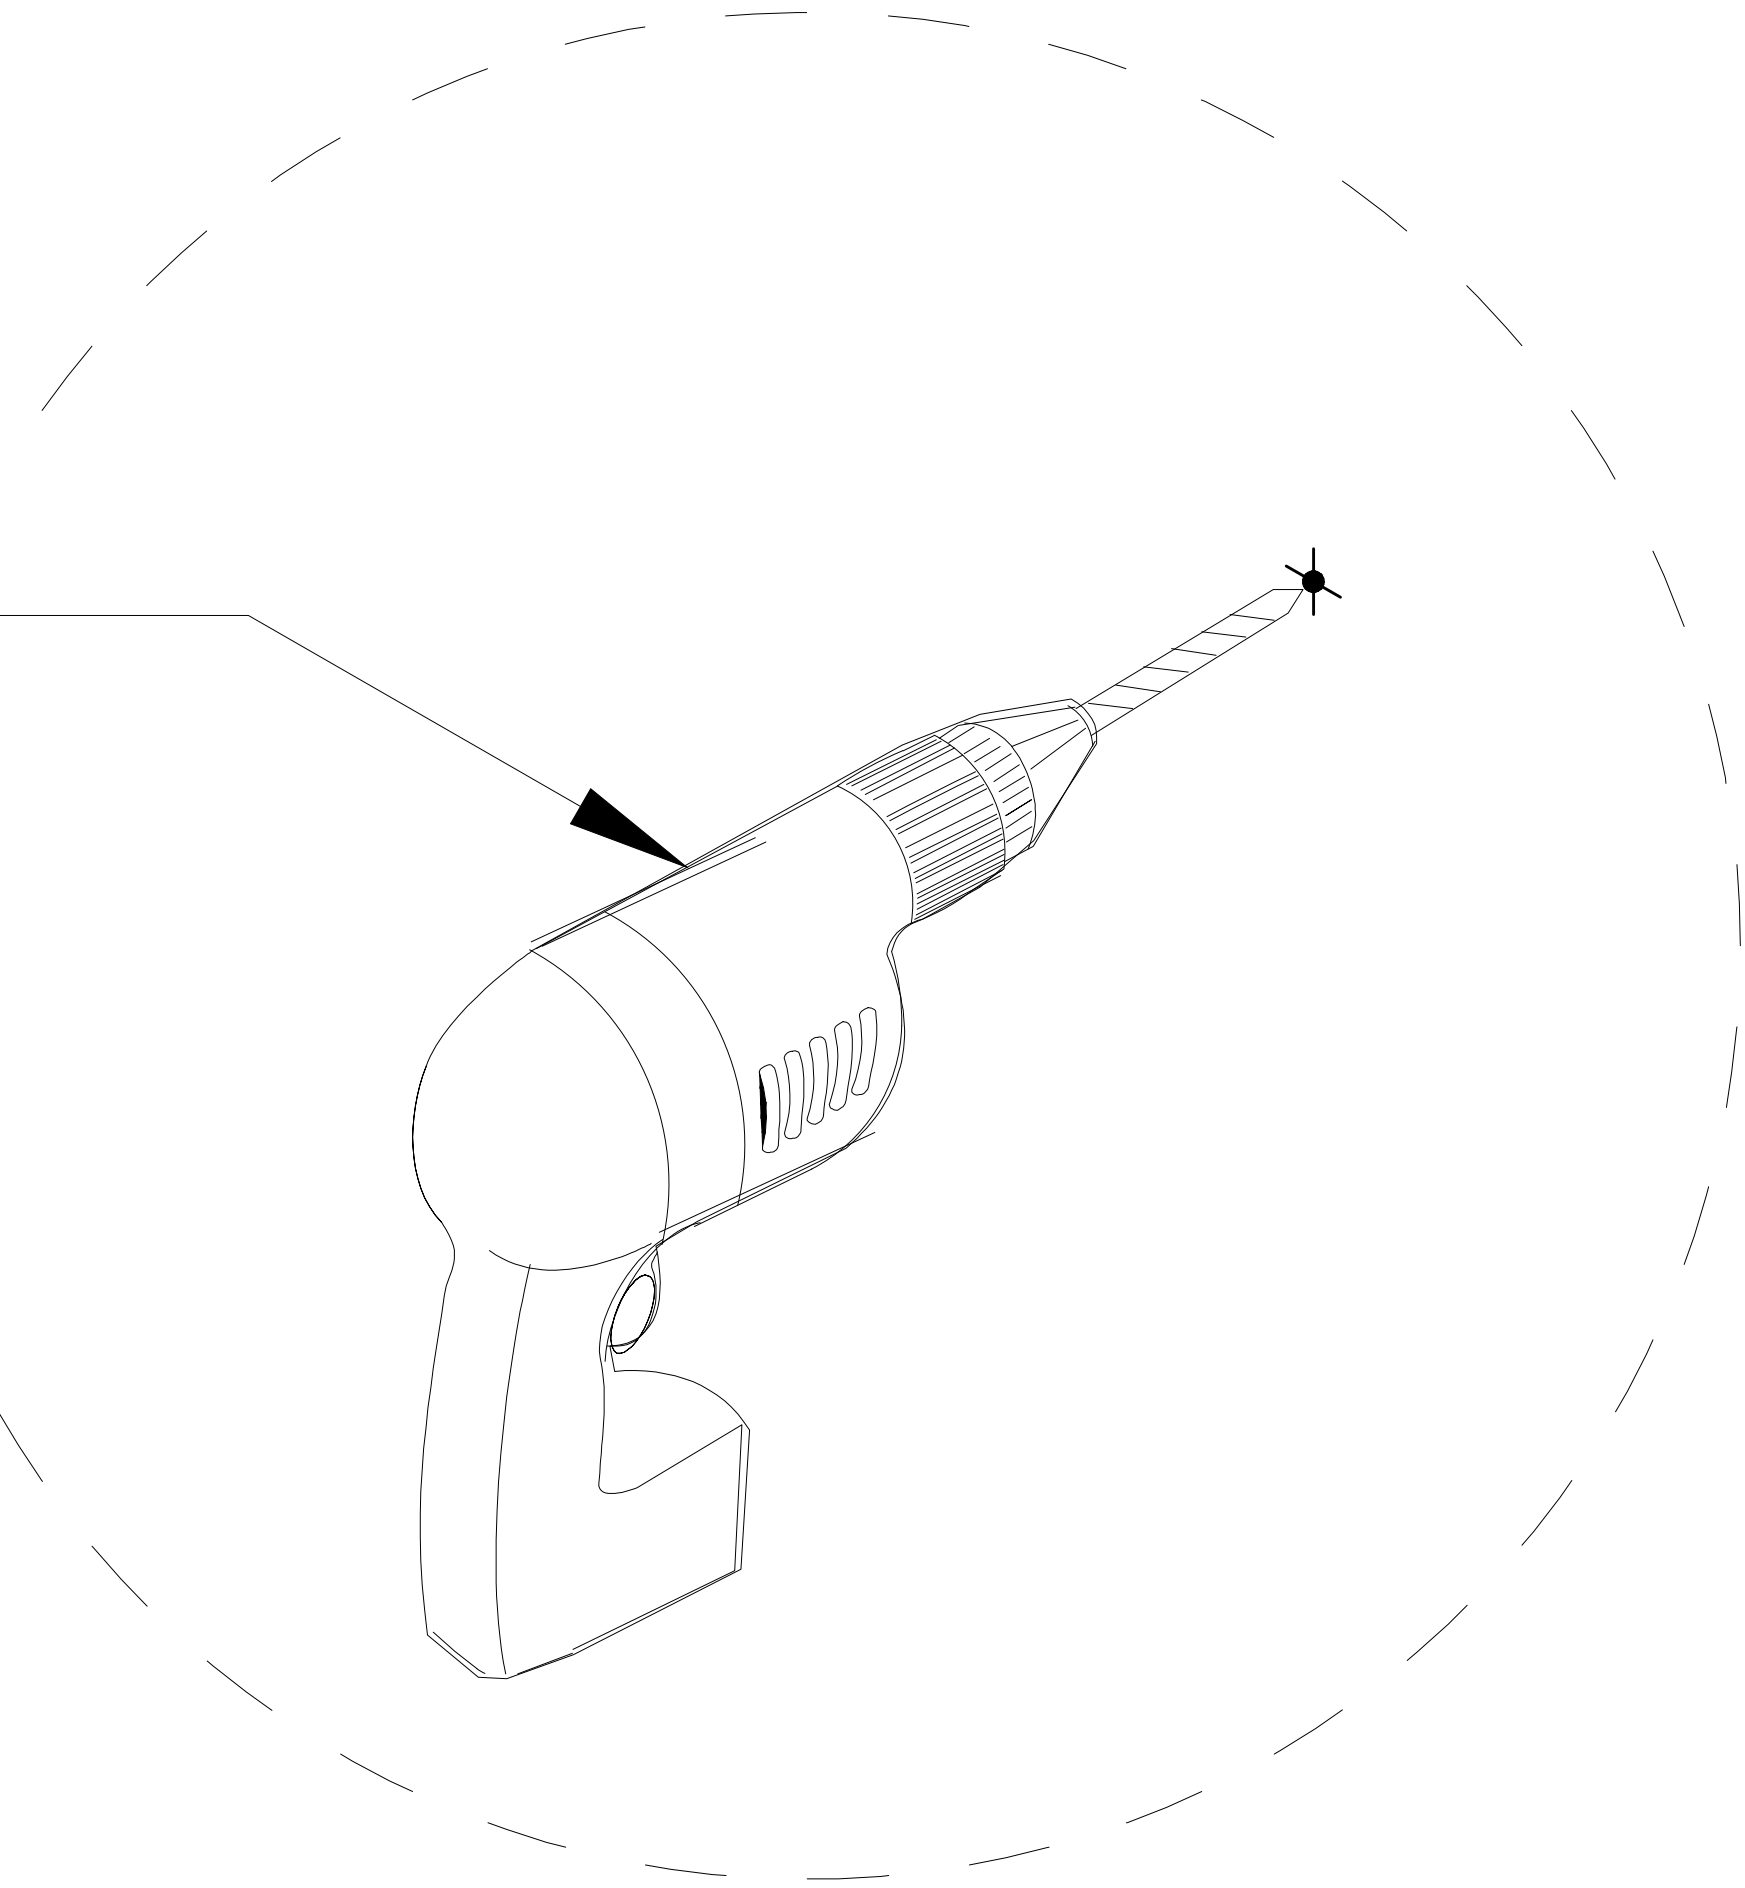


1

9#
TOOLS

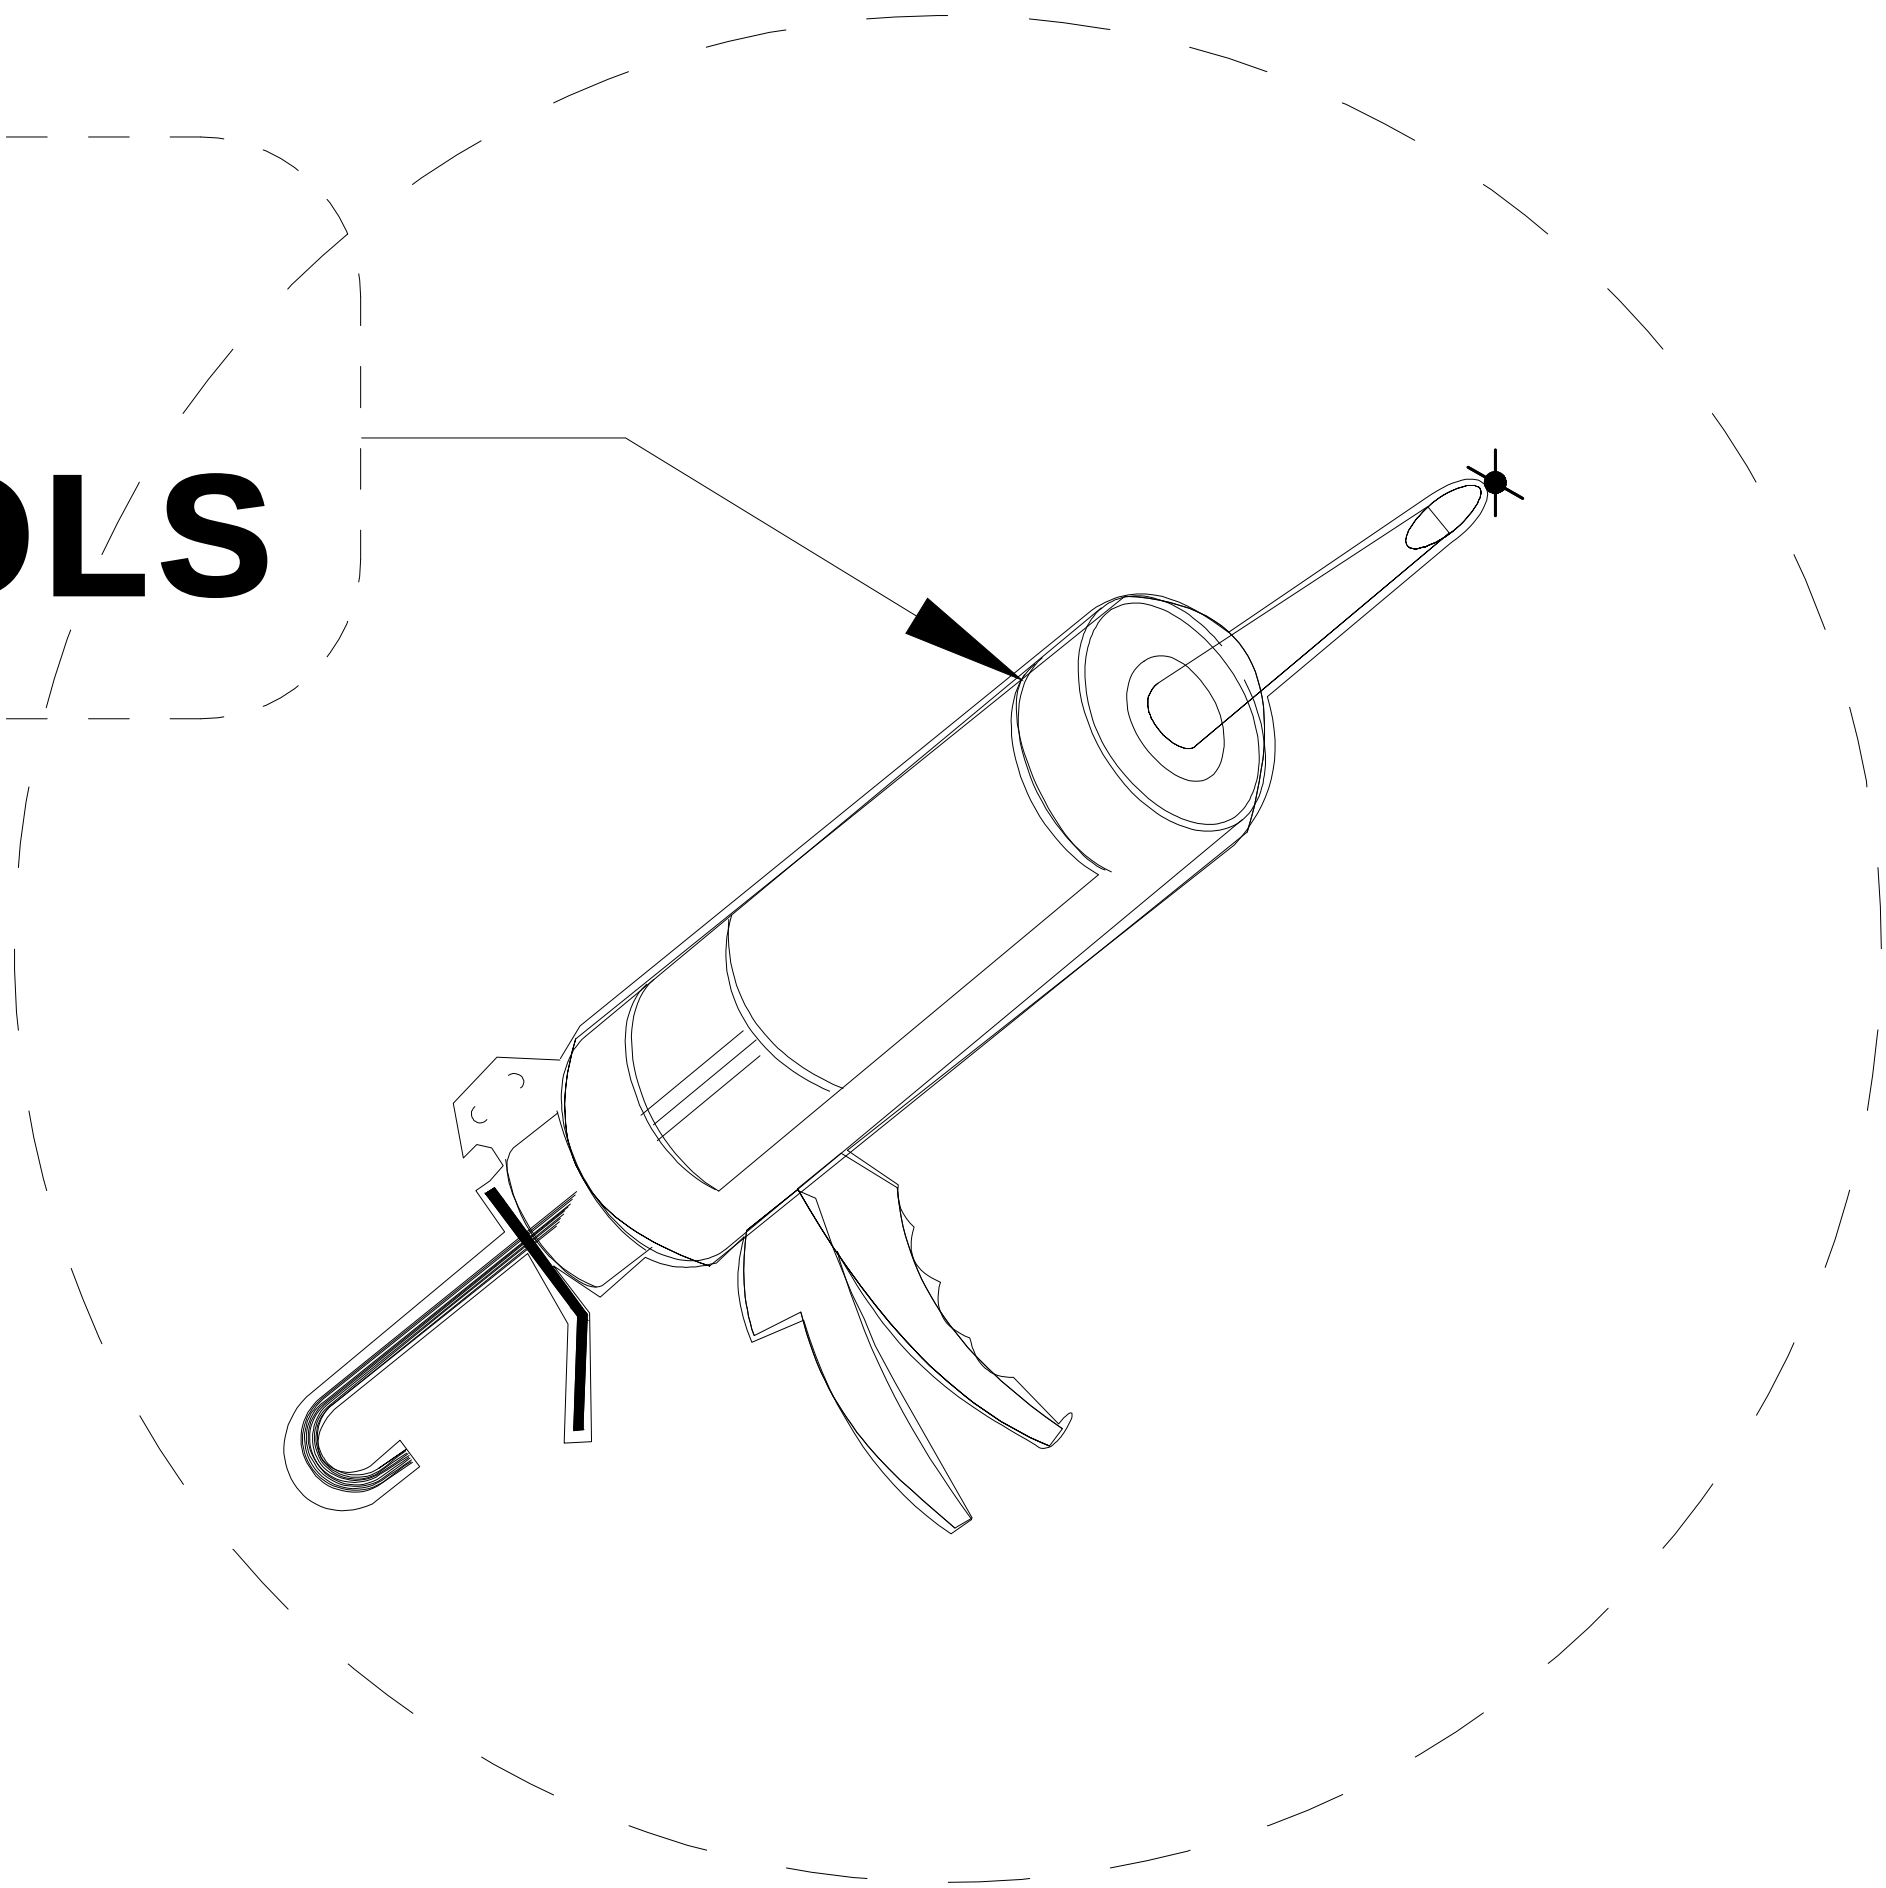


2

8#
TOOLS

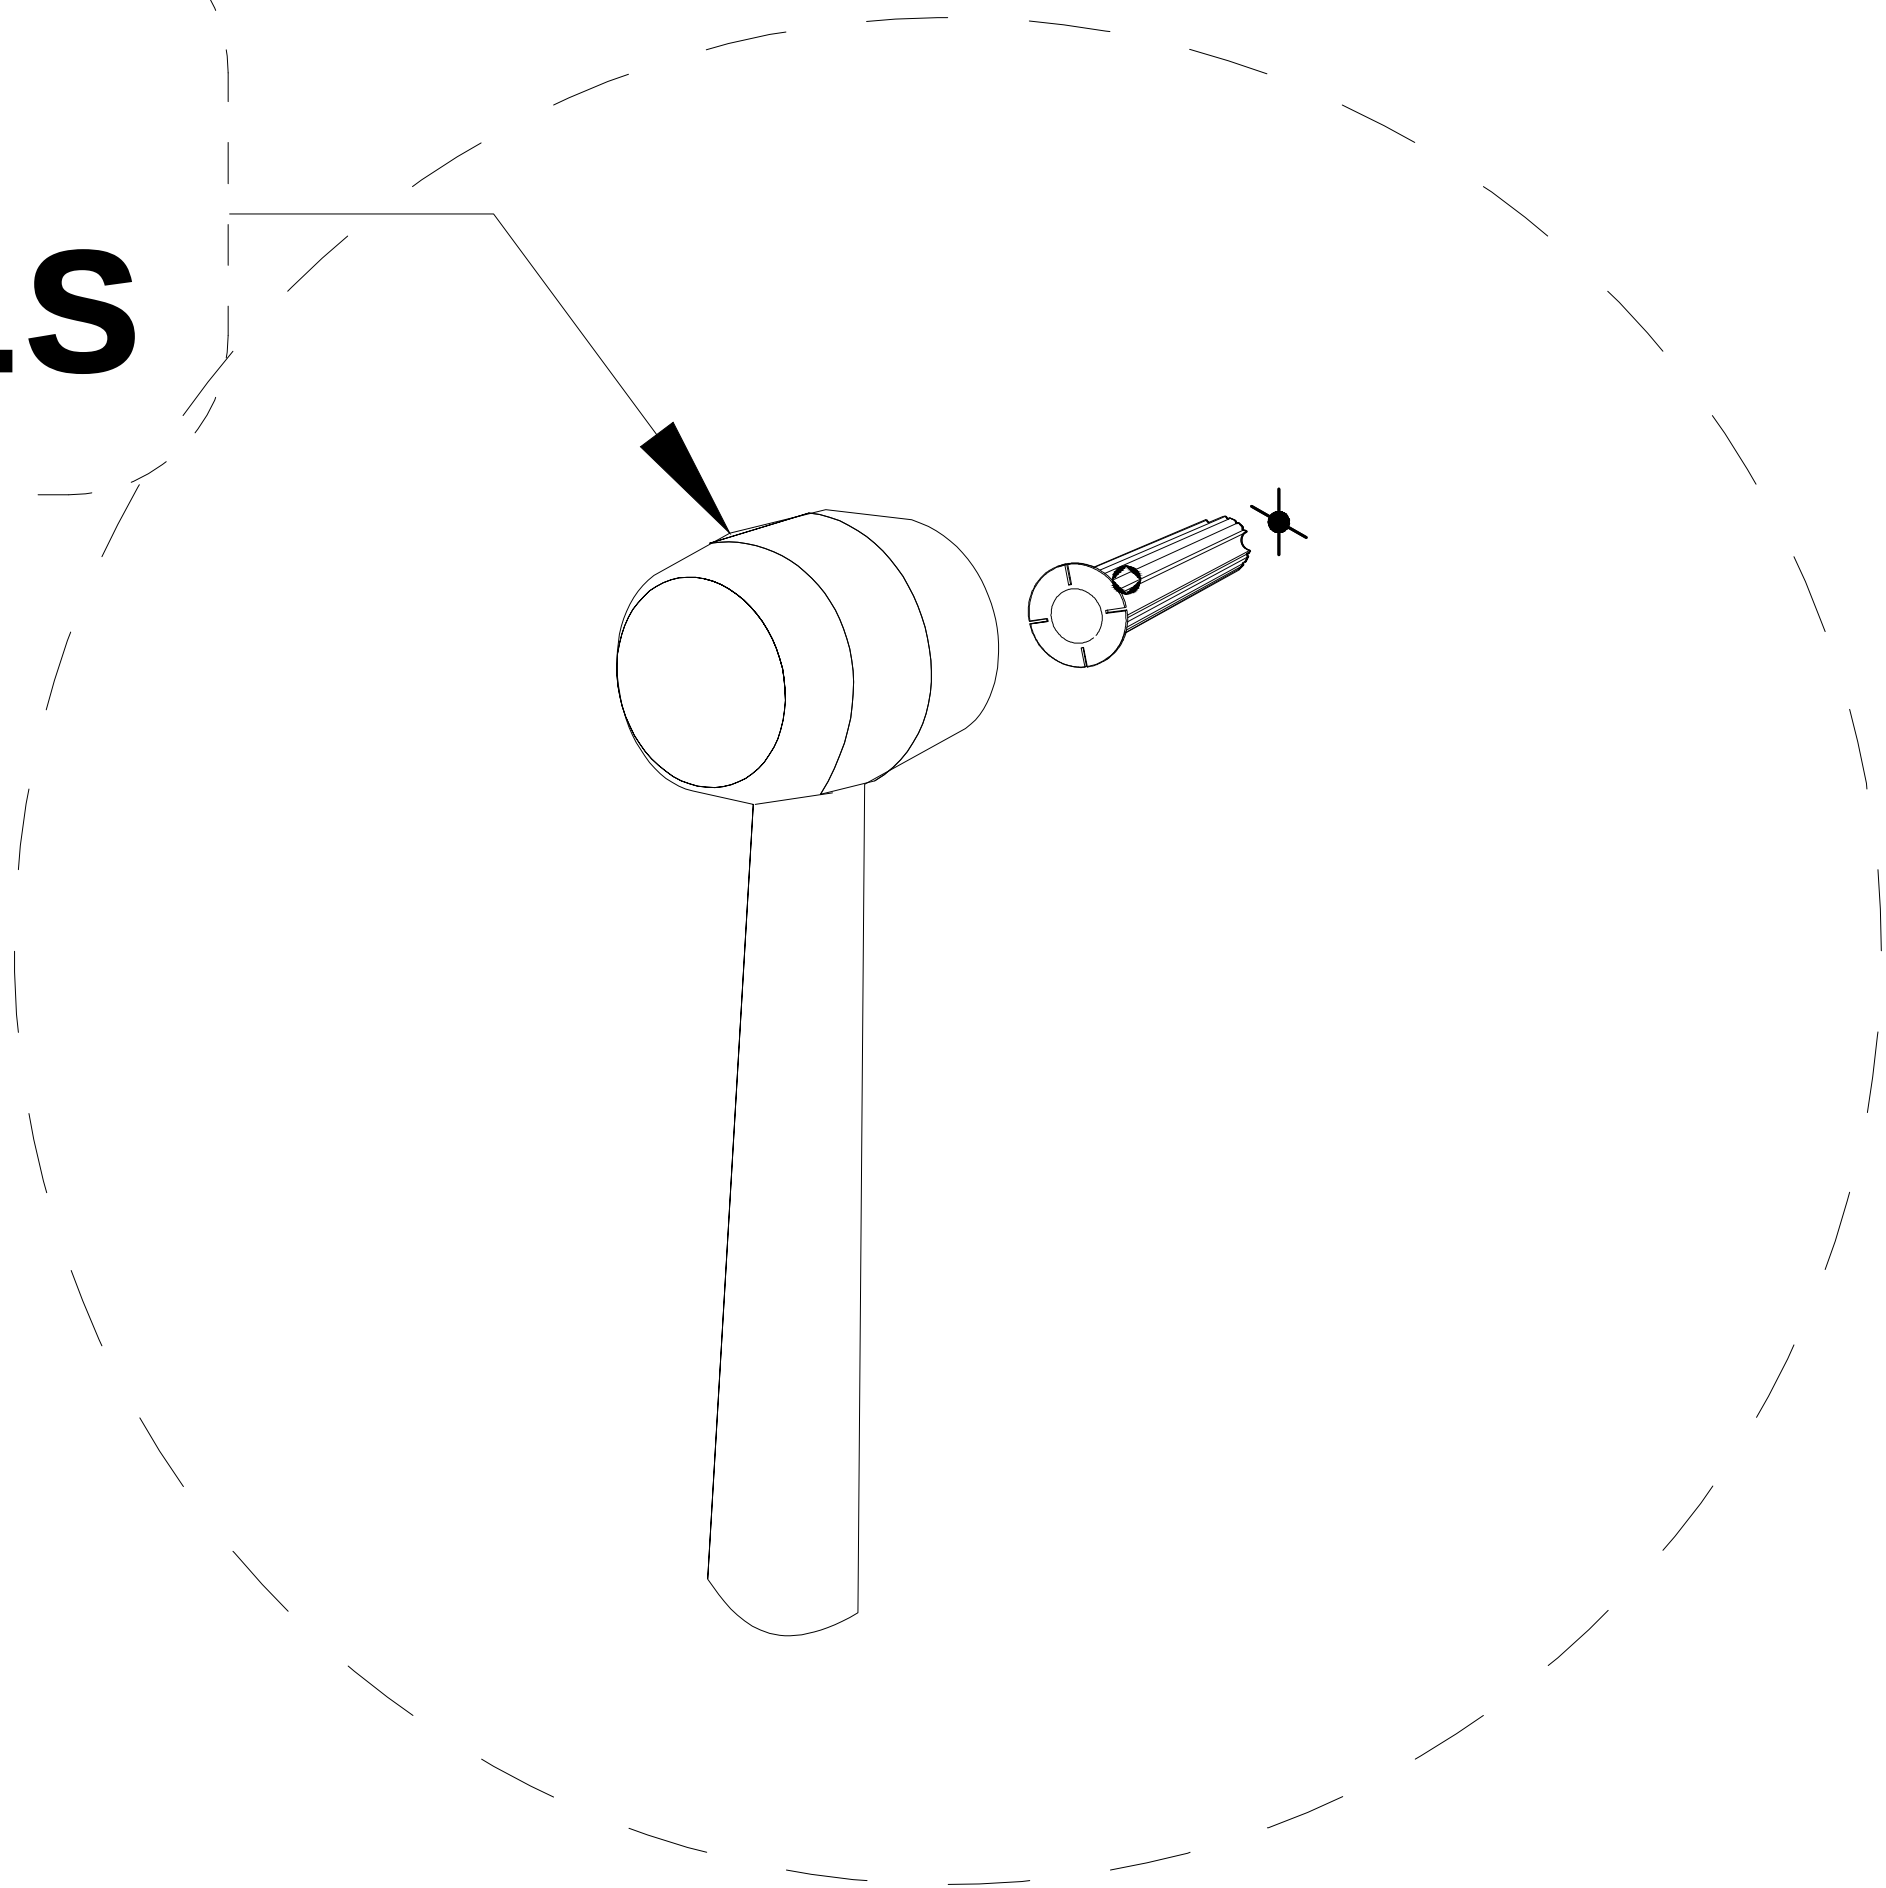


3

10#
TOOLS

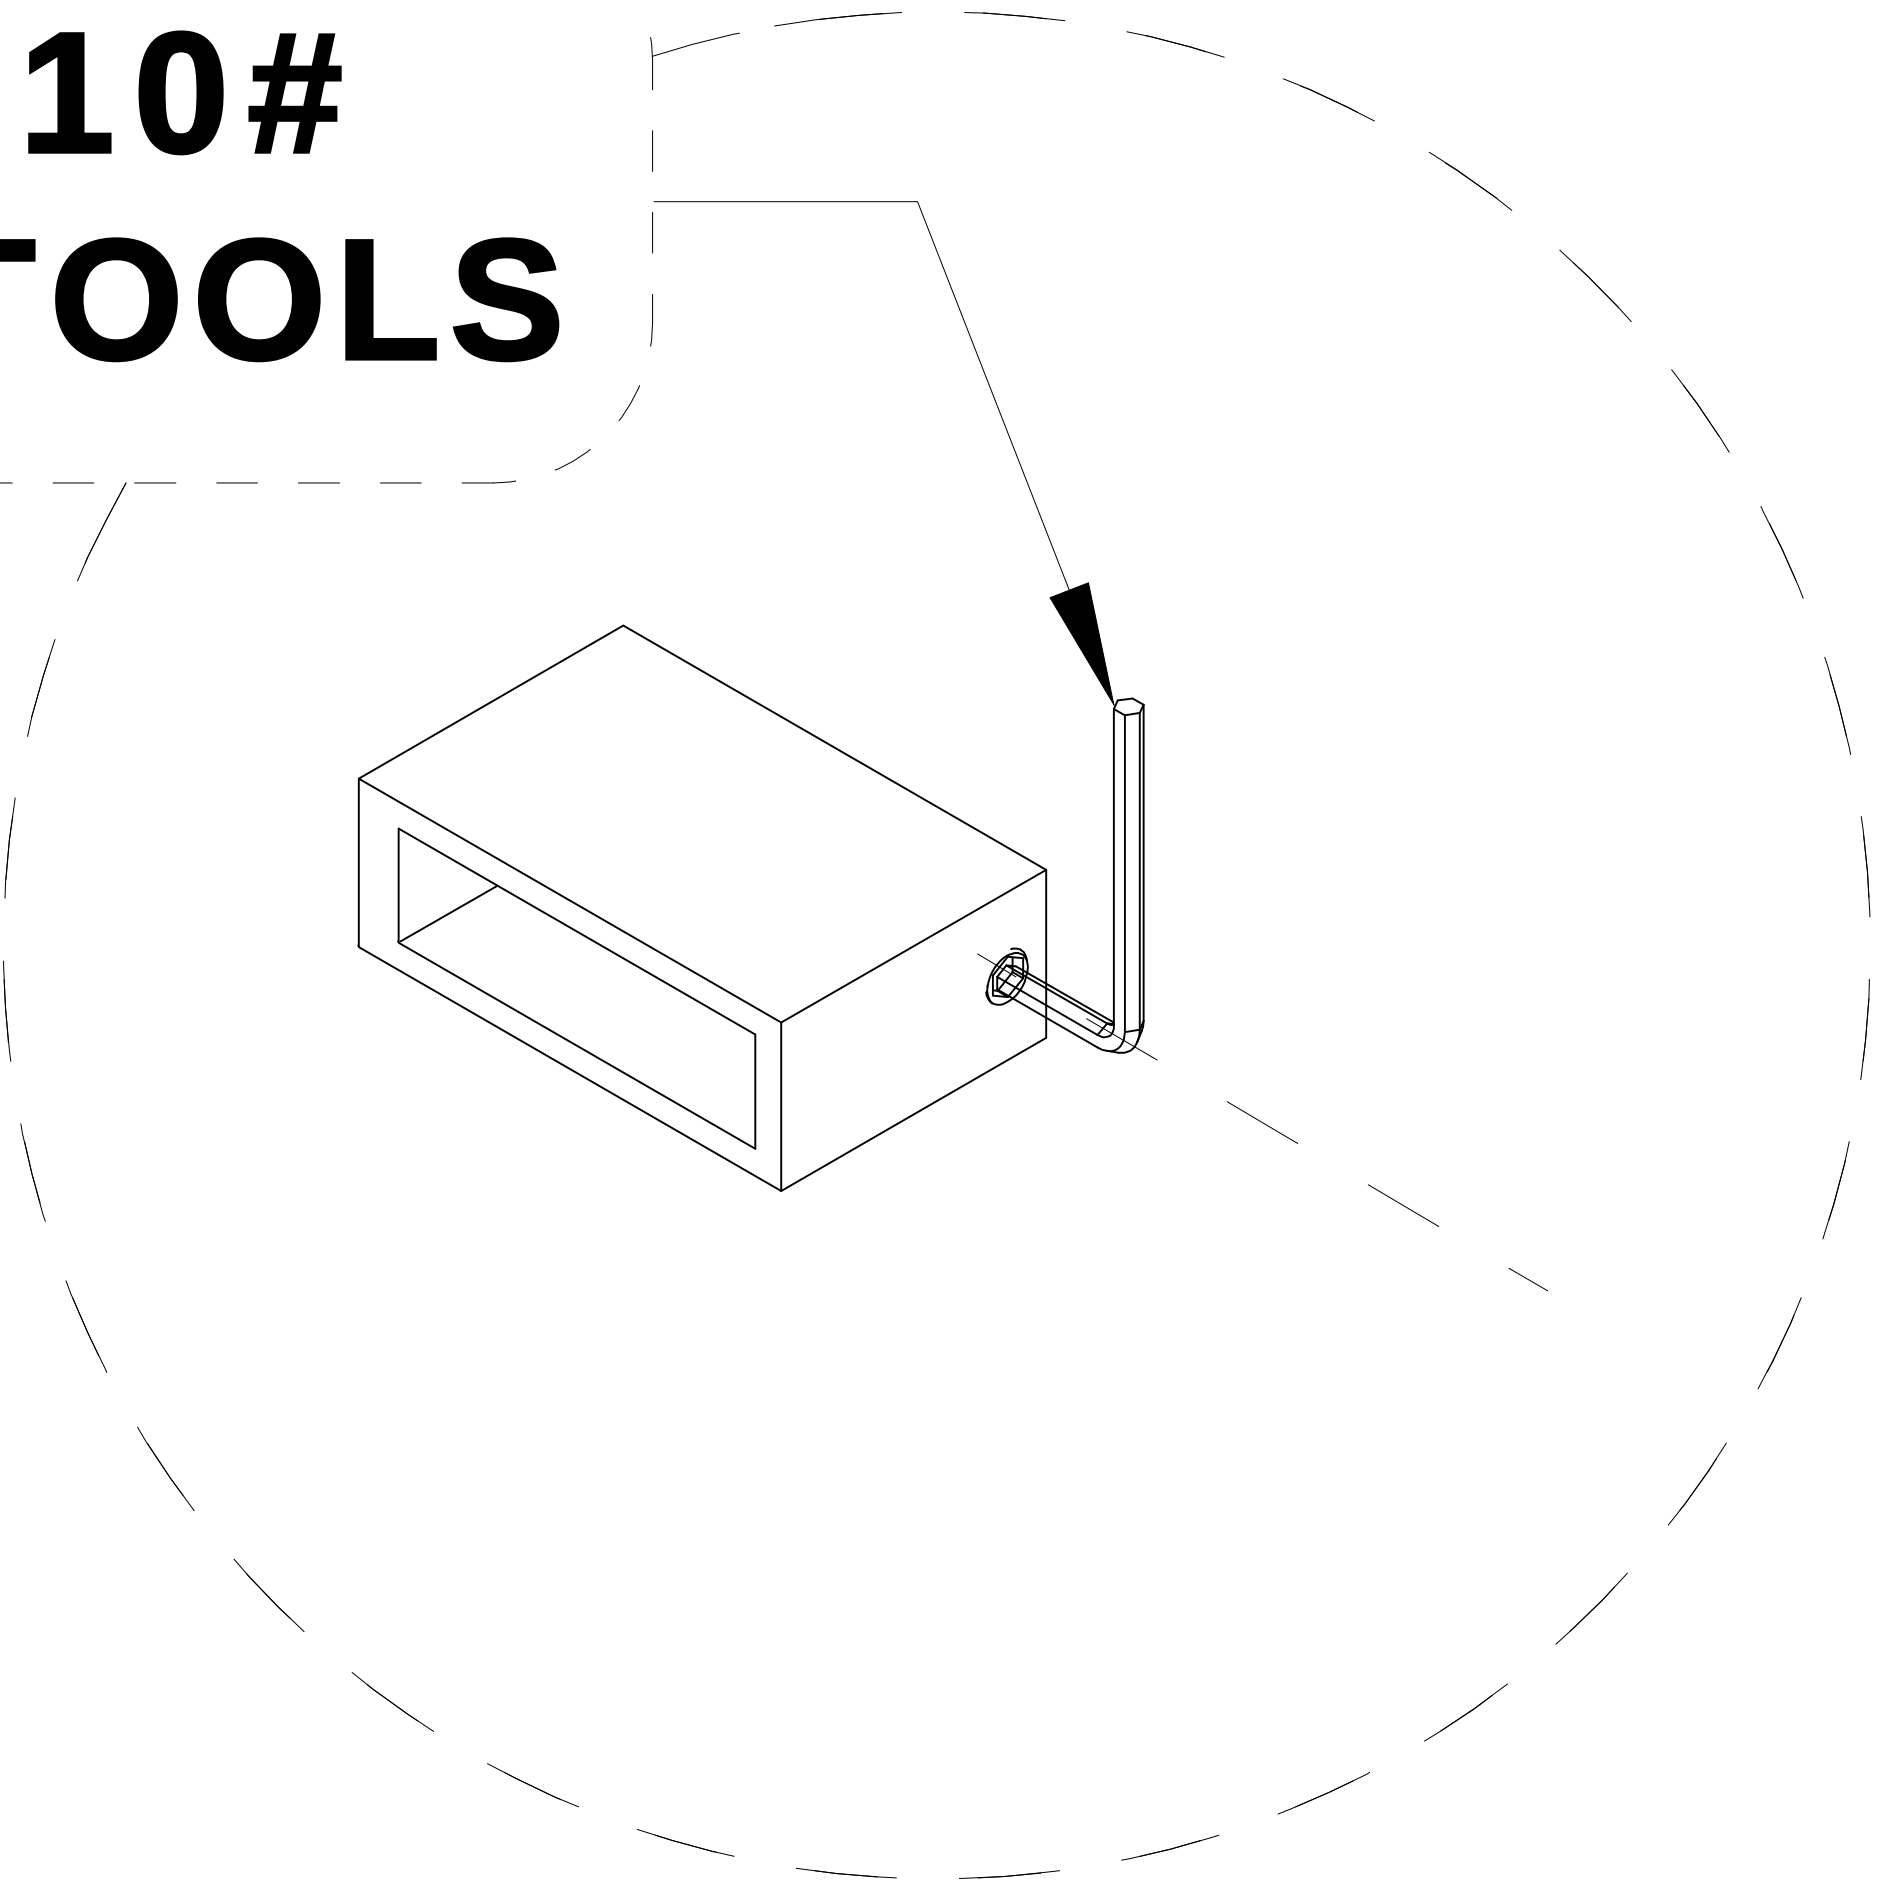


4

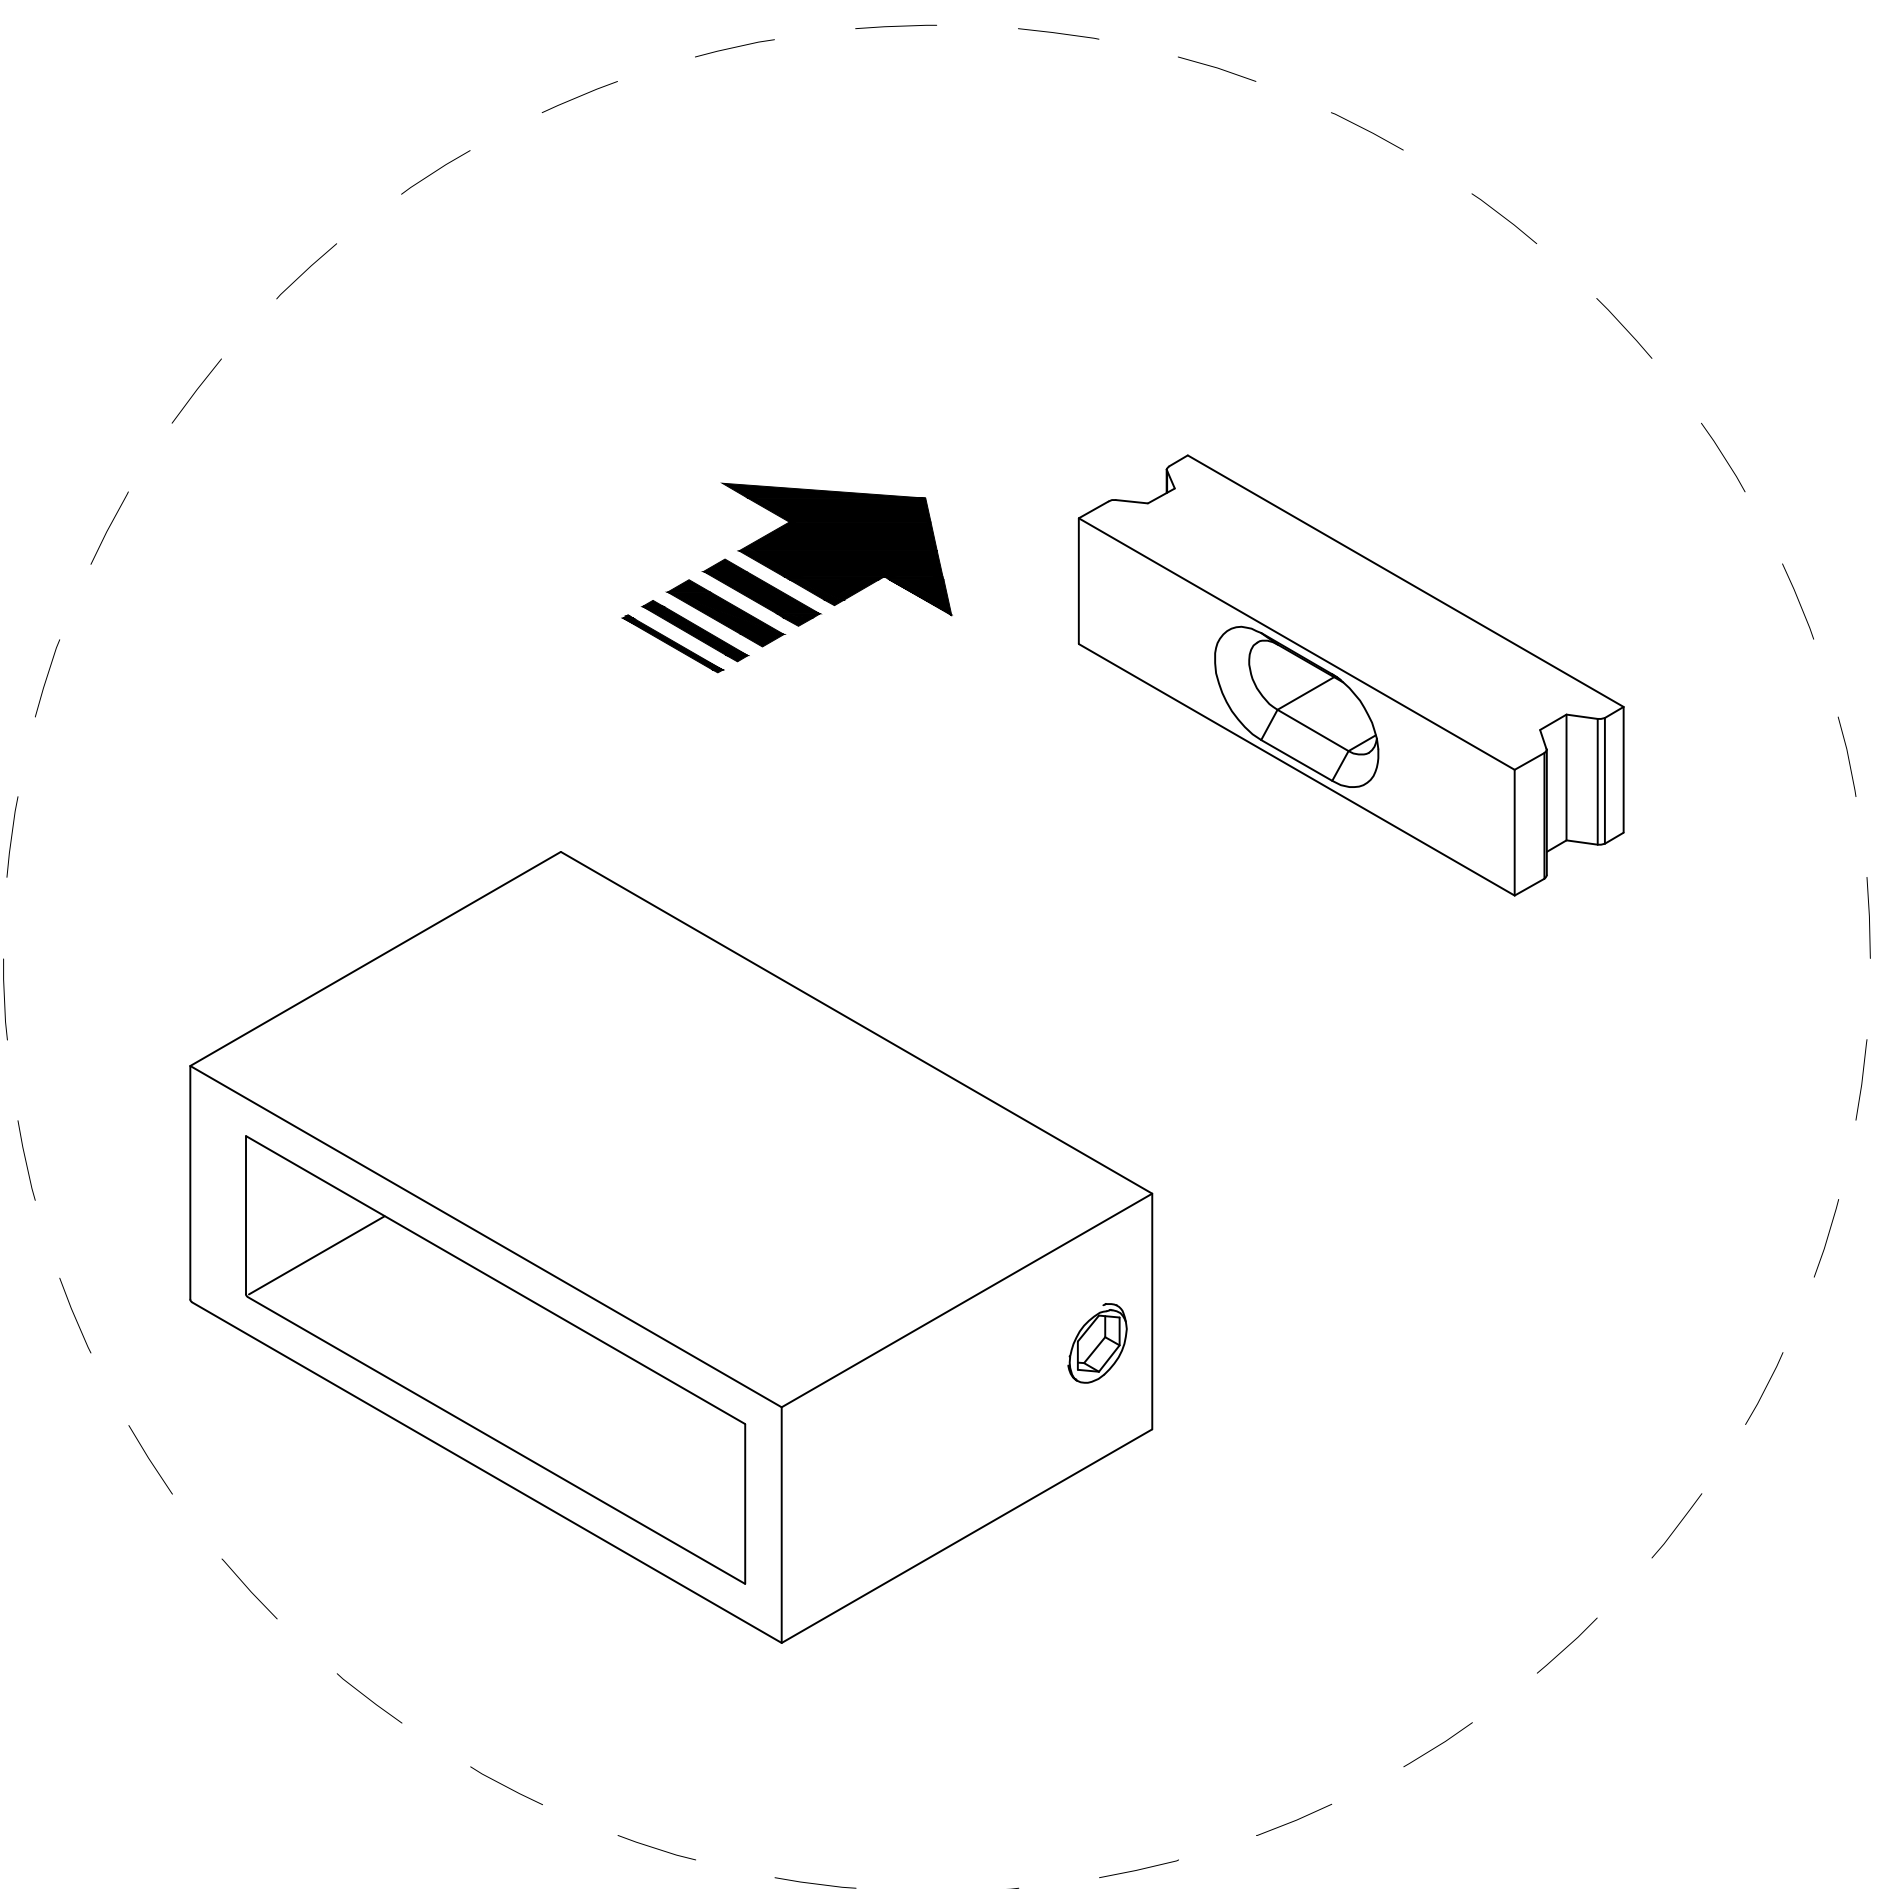


5

3#
TOOLS

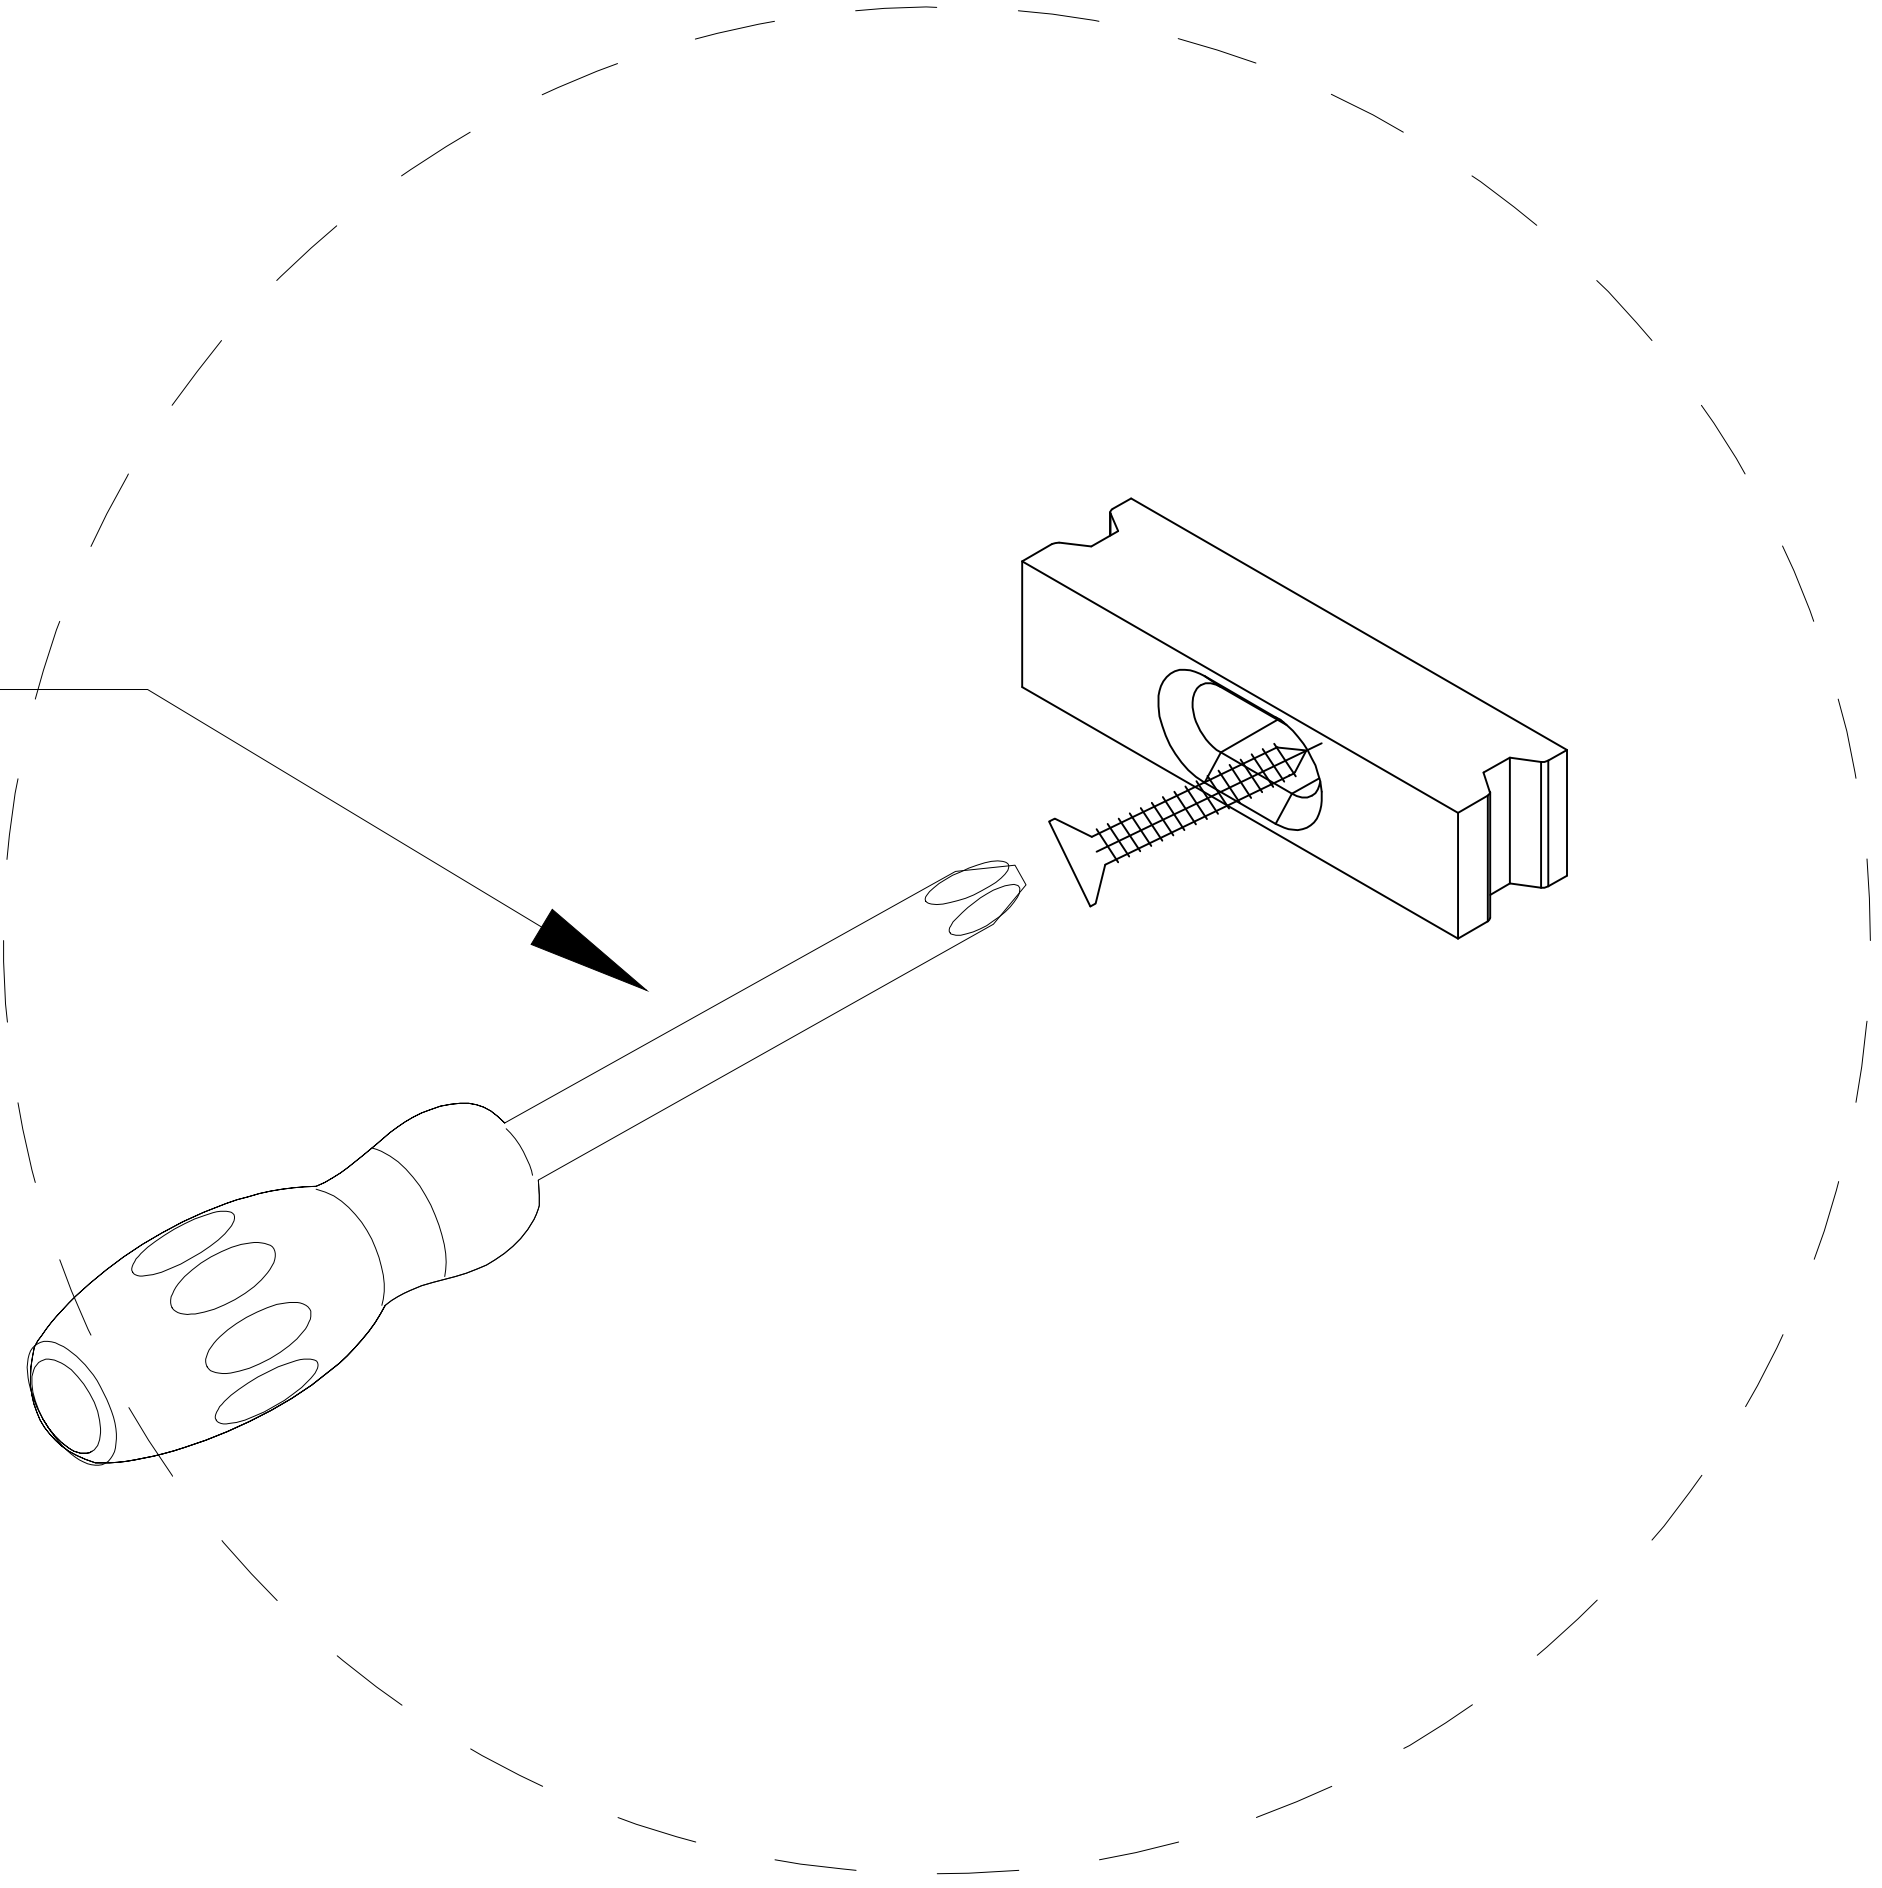


6

STEP- 10




STEP-11




STEP- 12


Install movable glass as shown

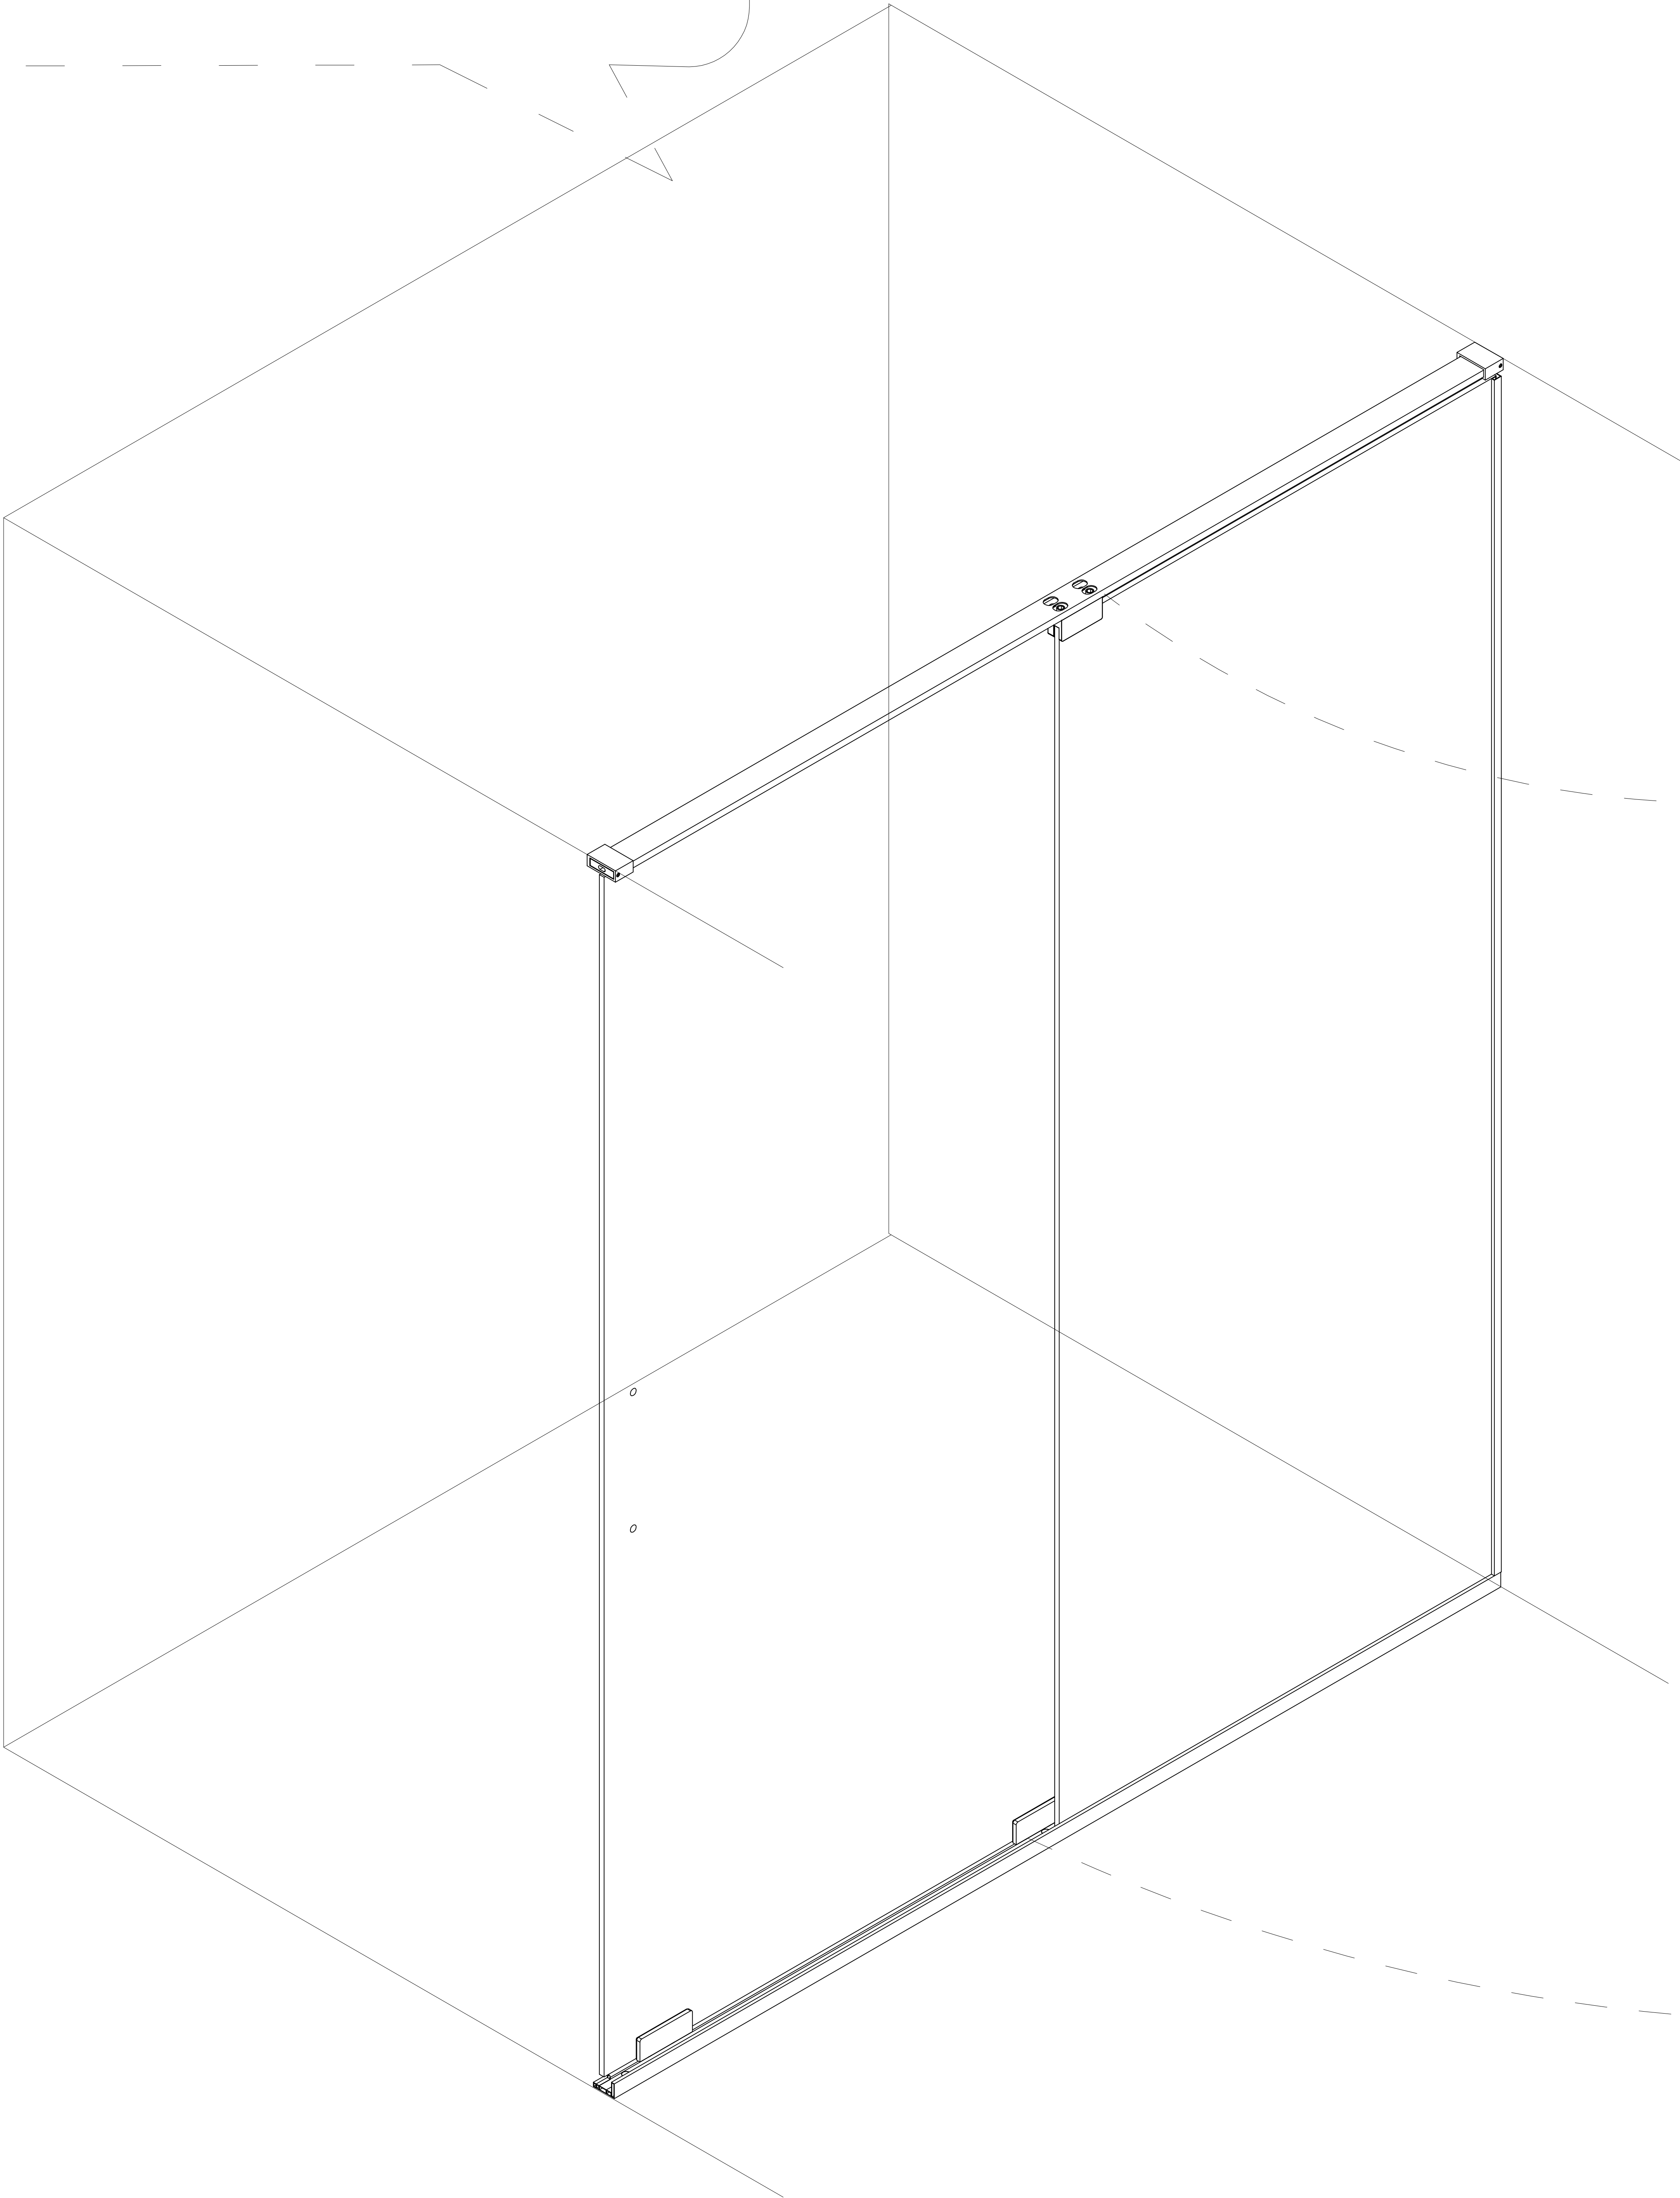




10#
TOOLS

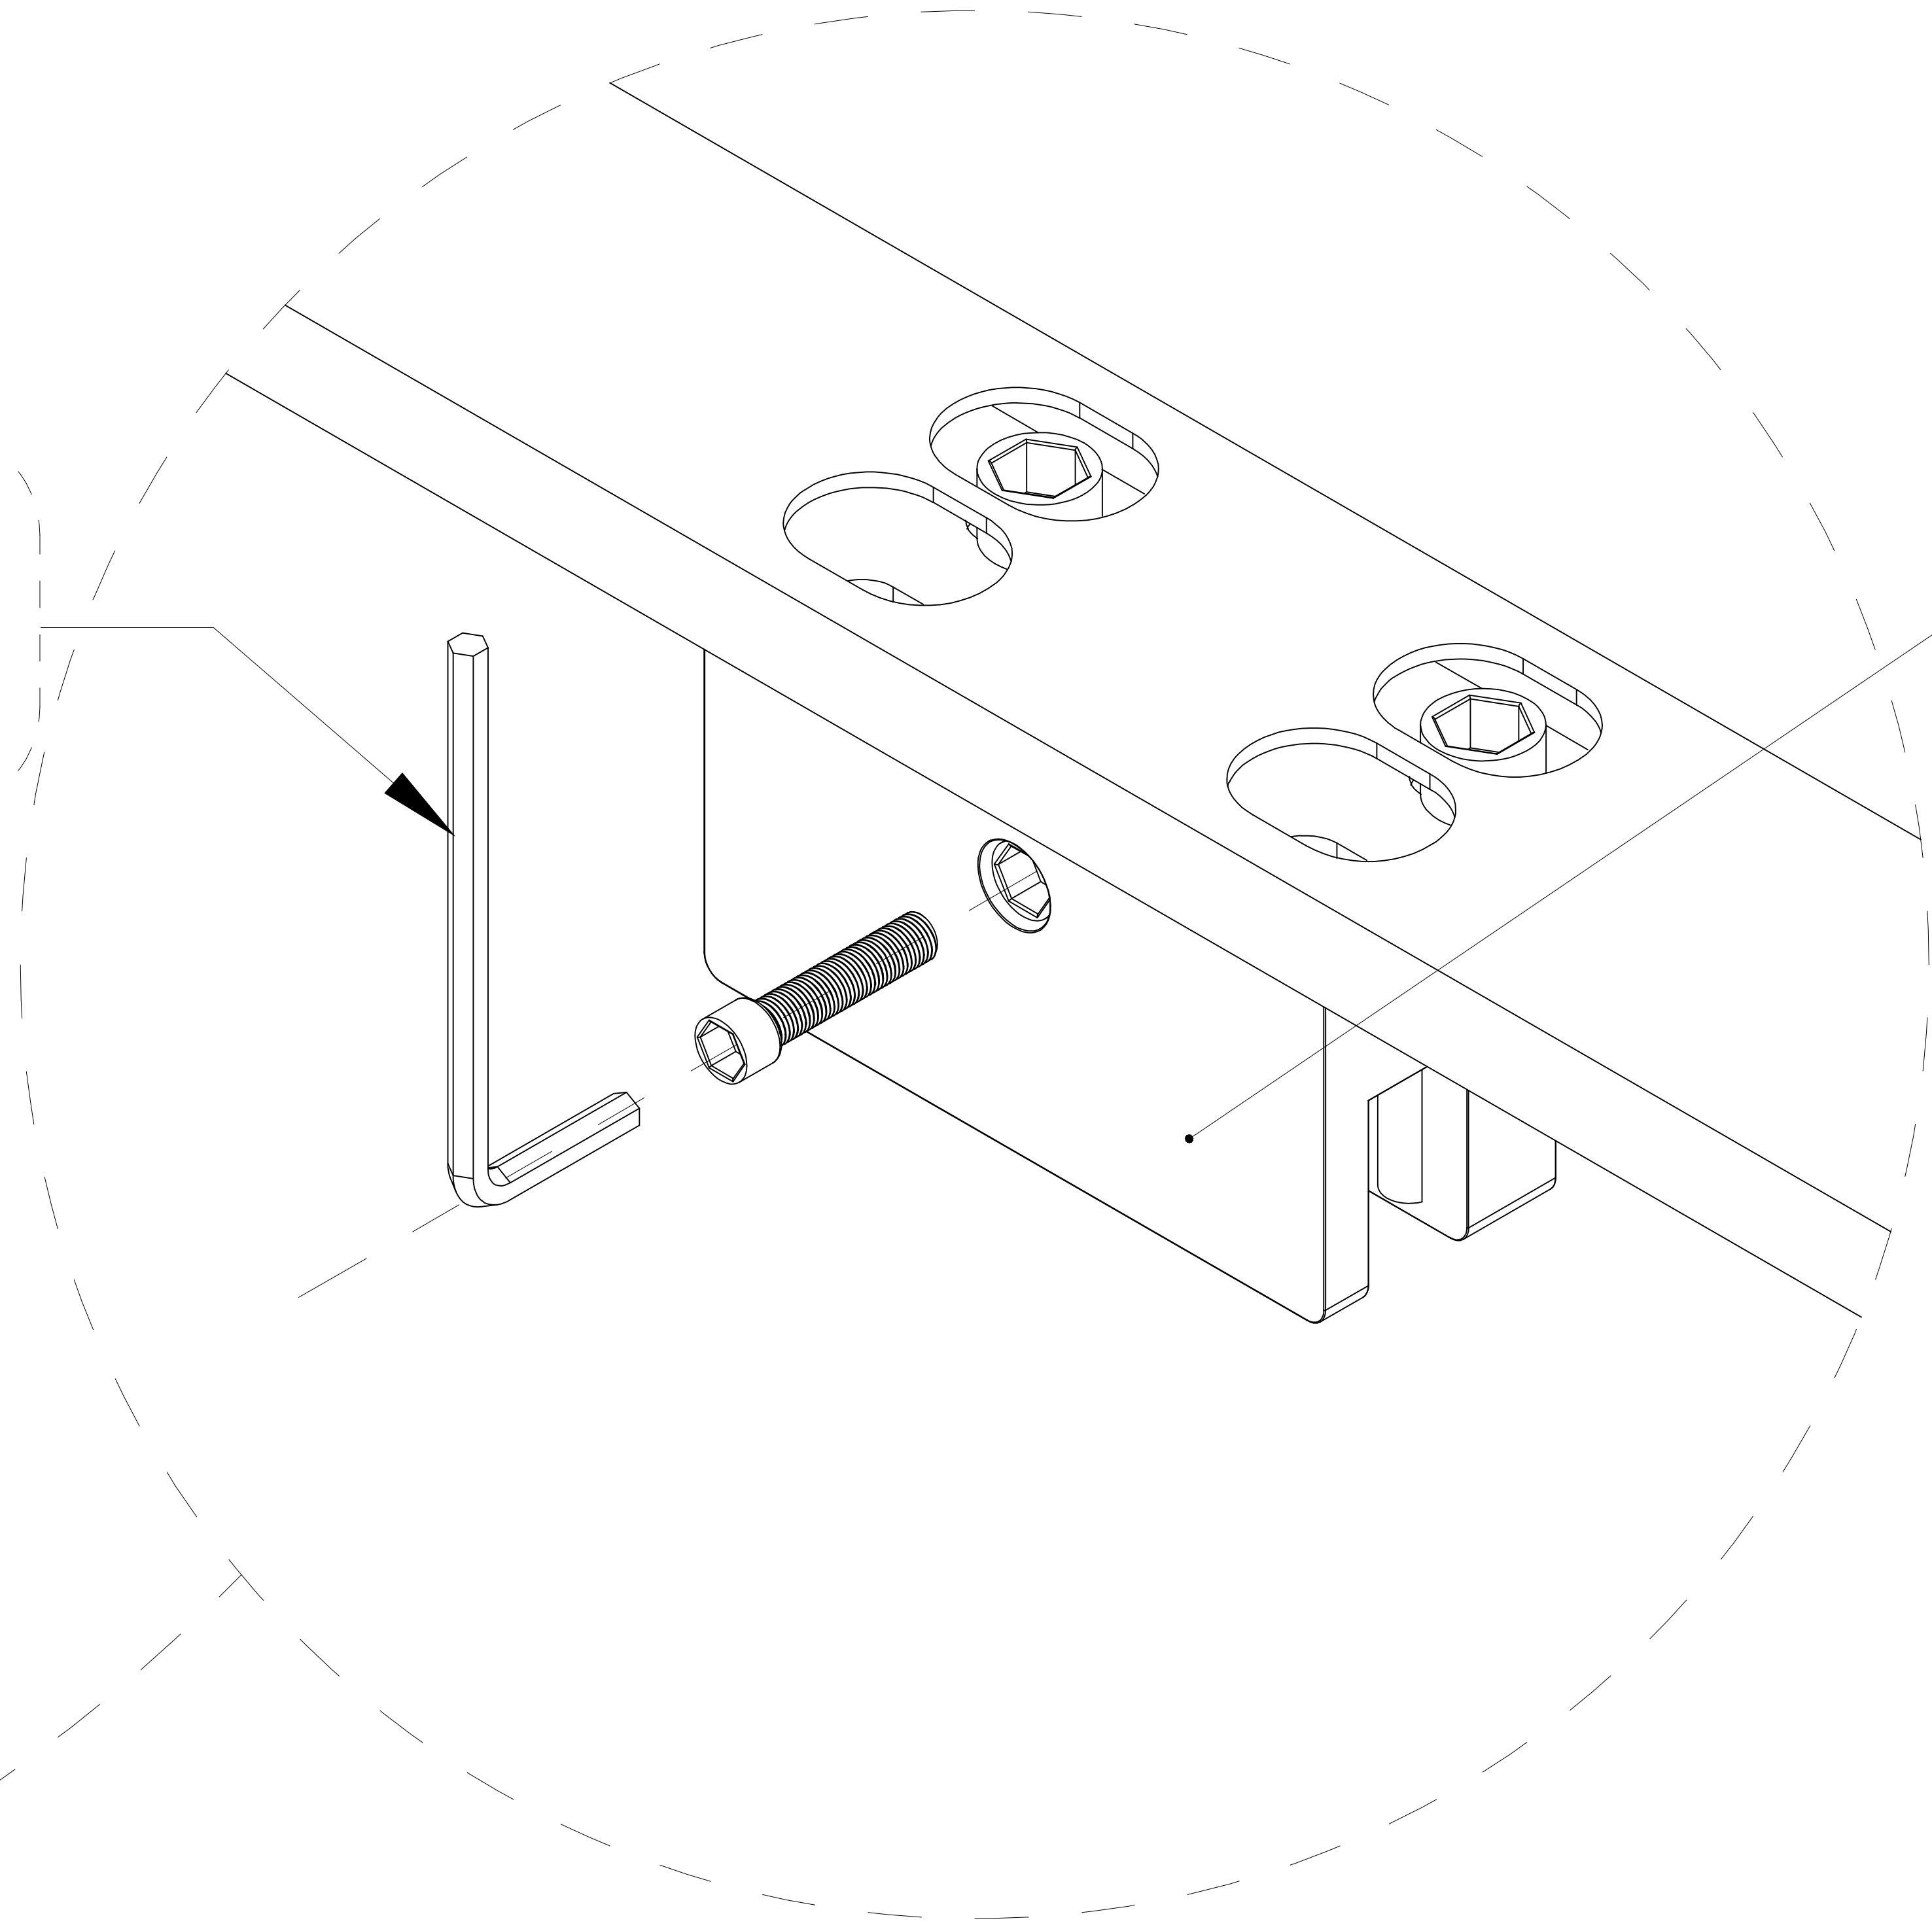


J

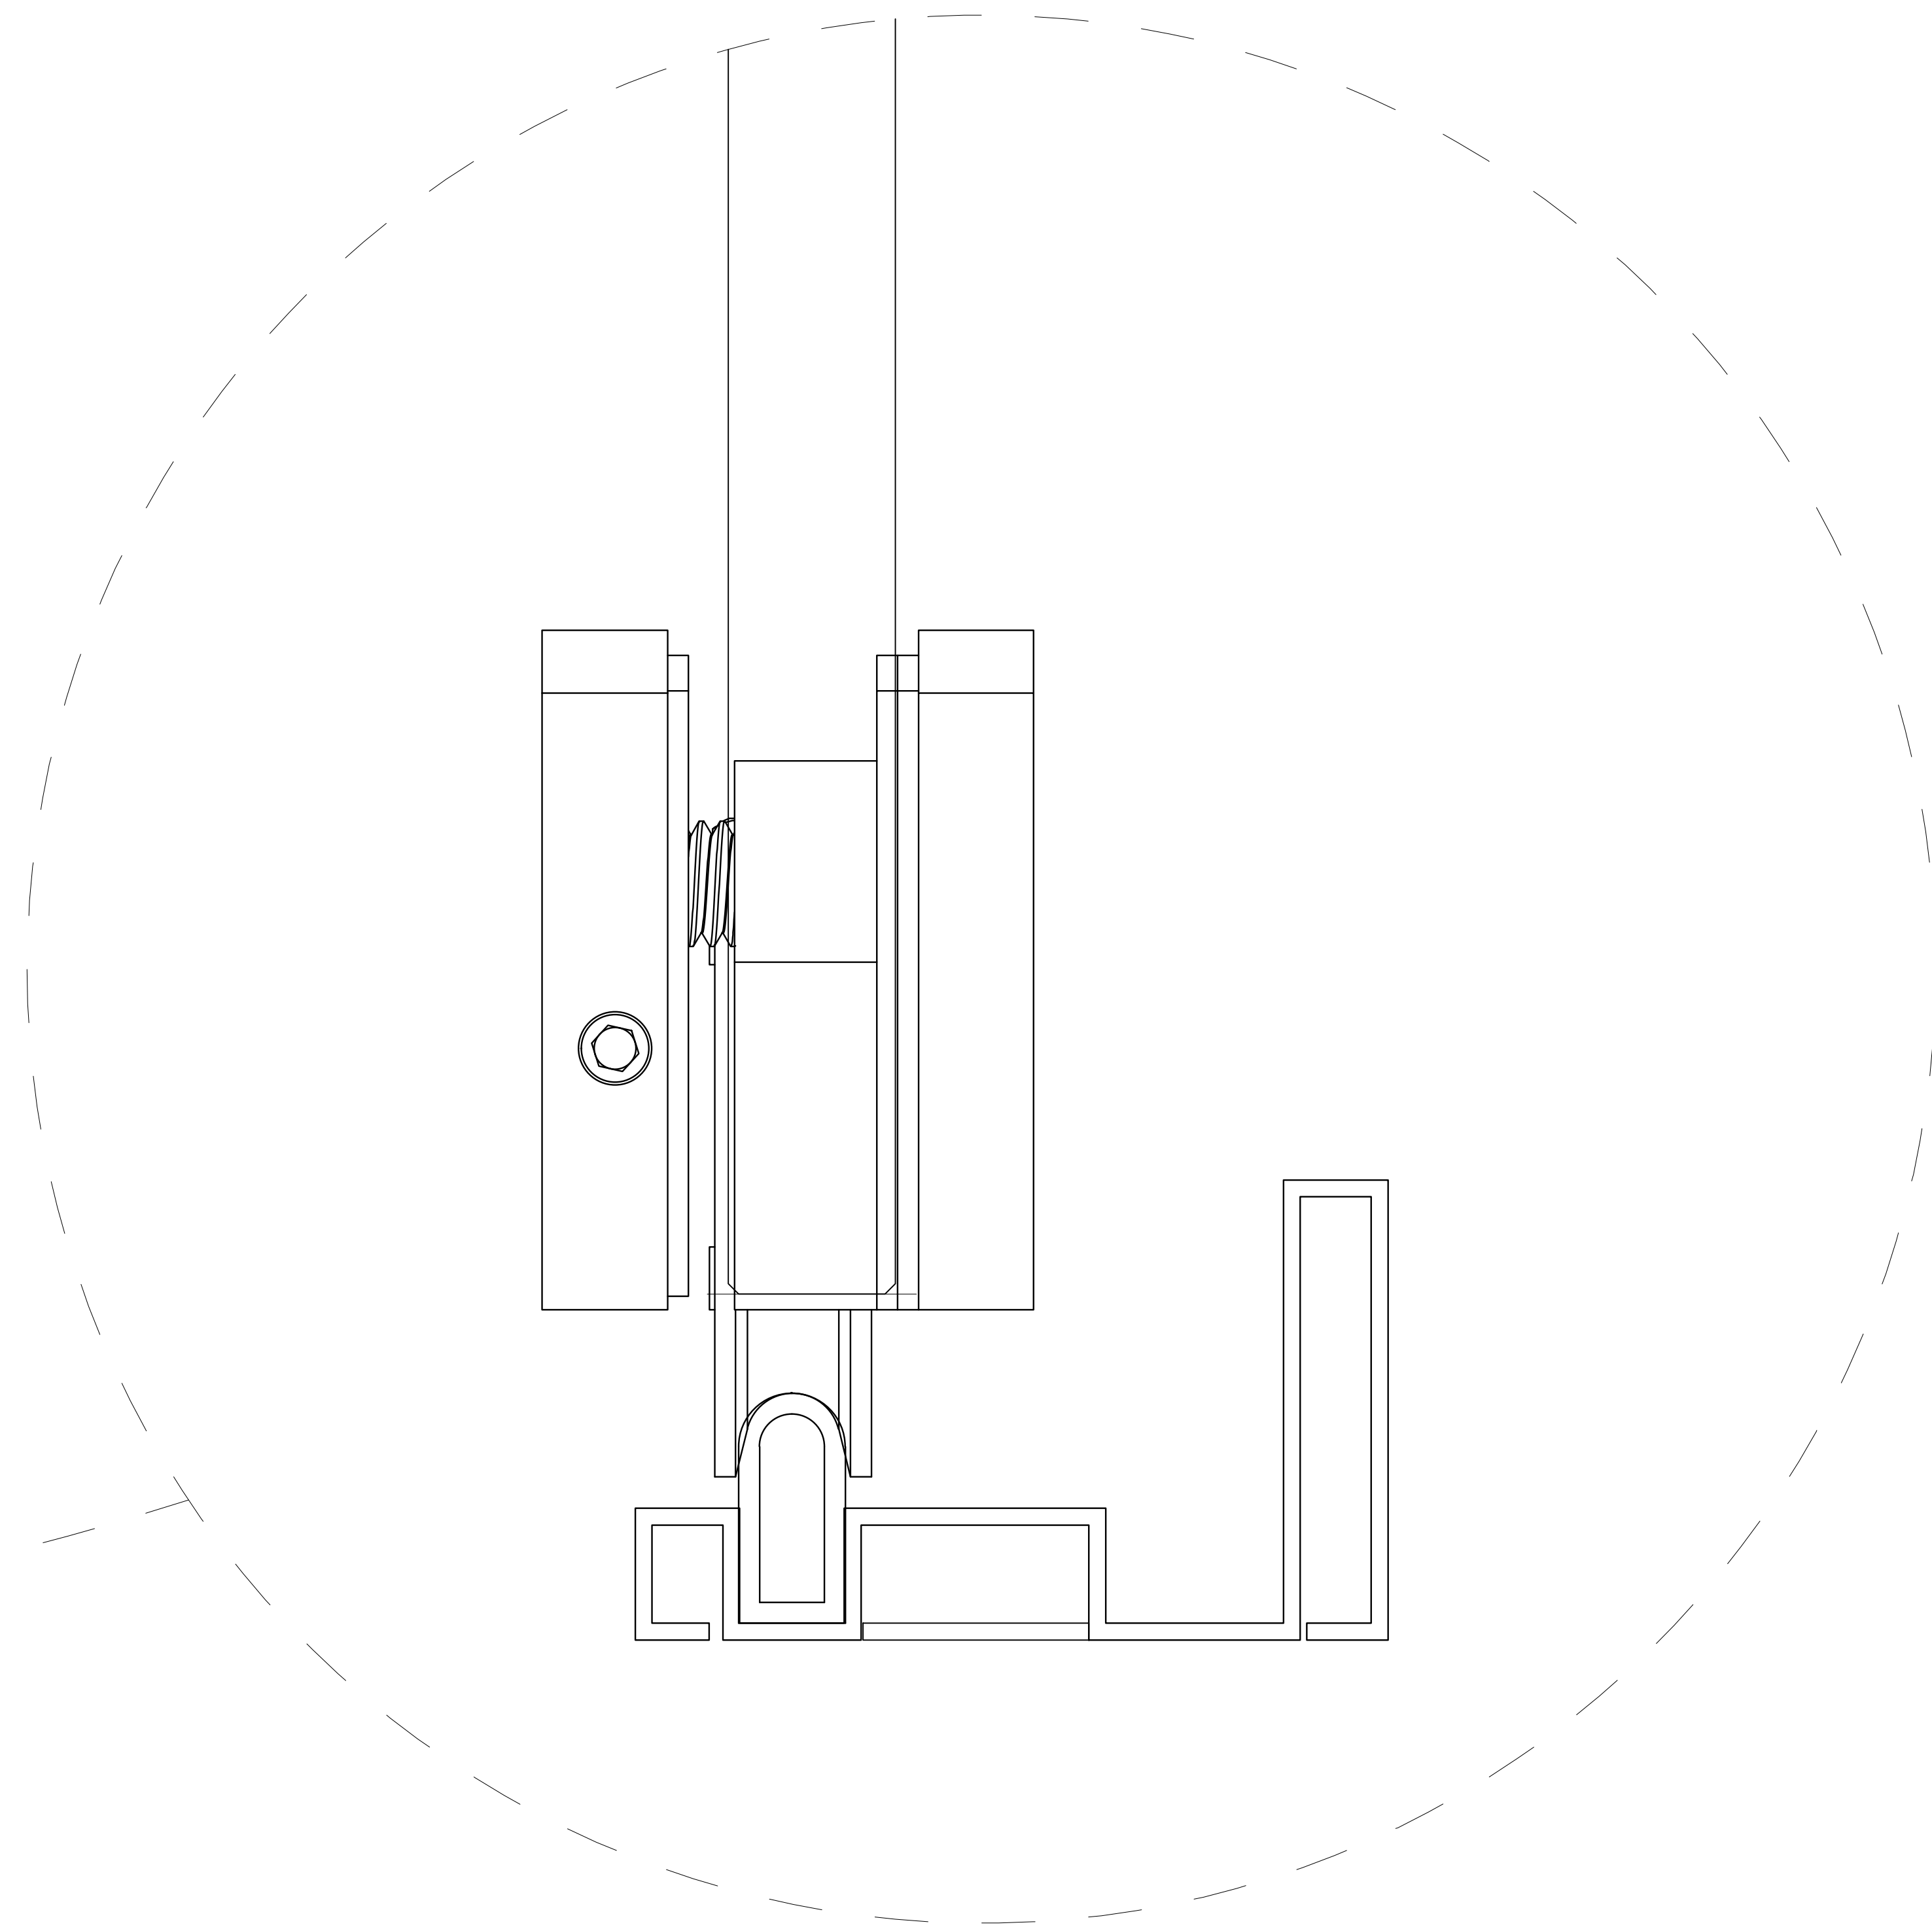


STEP- 13

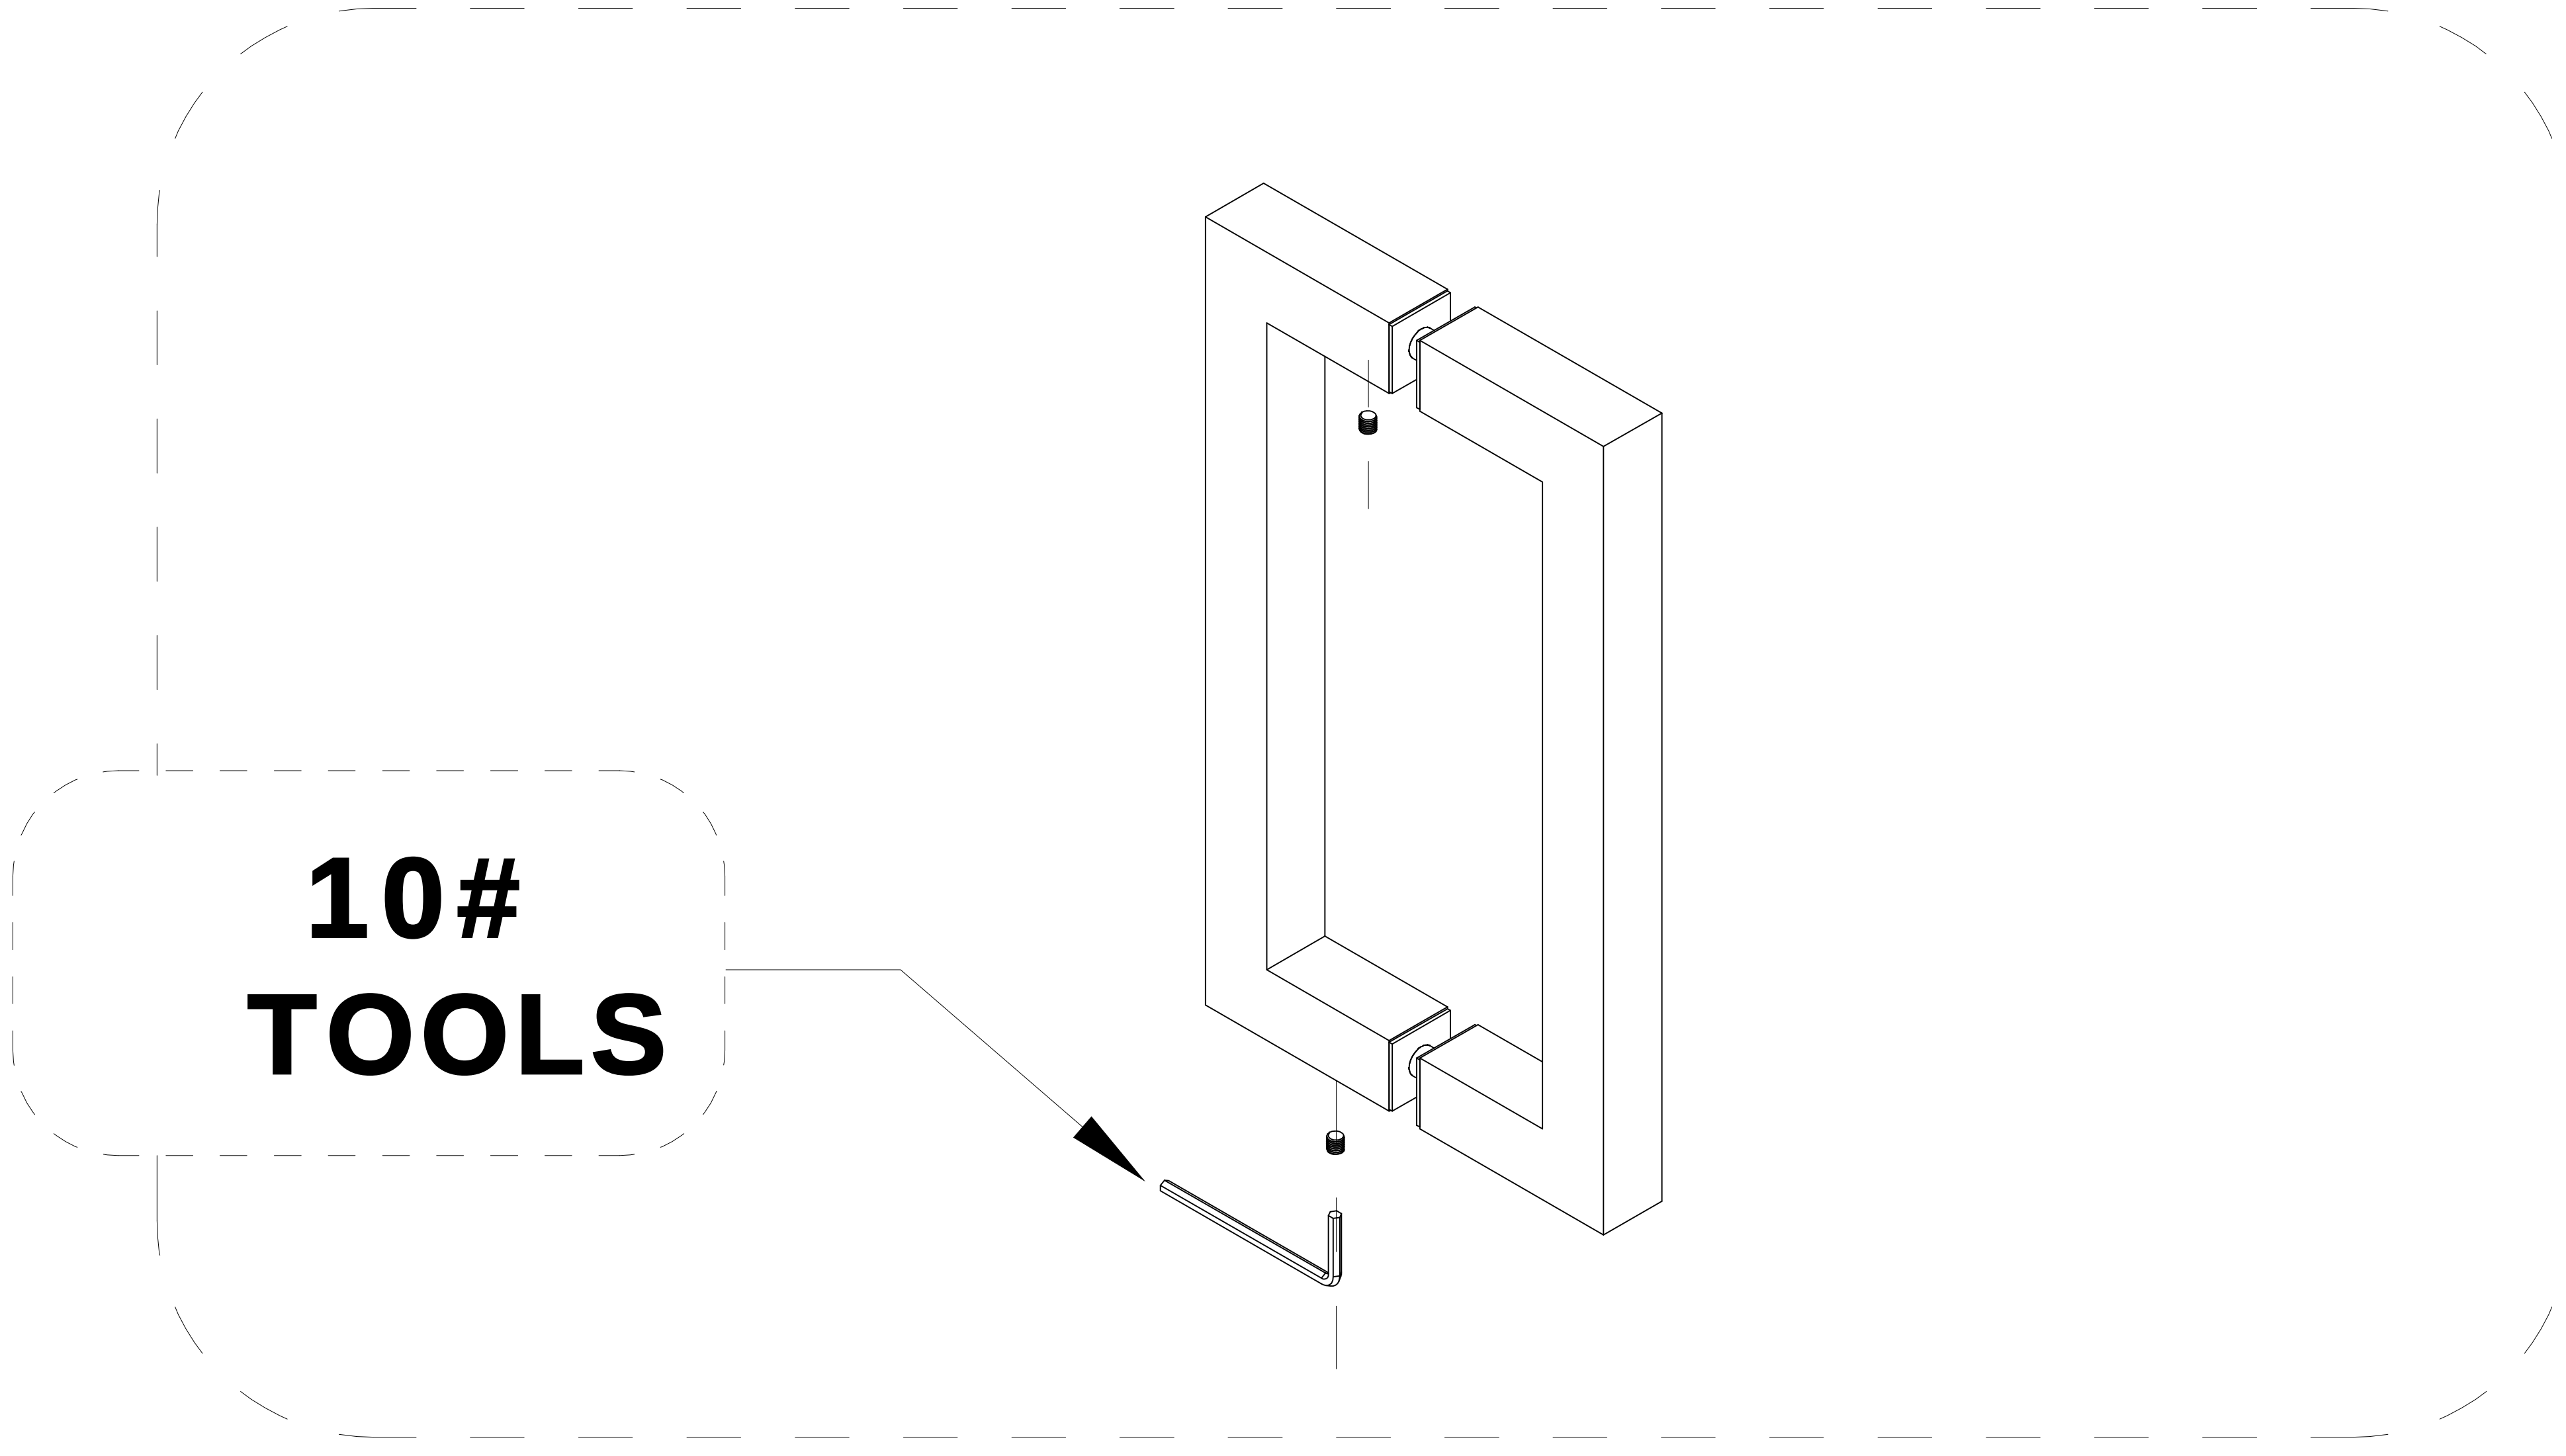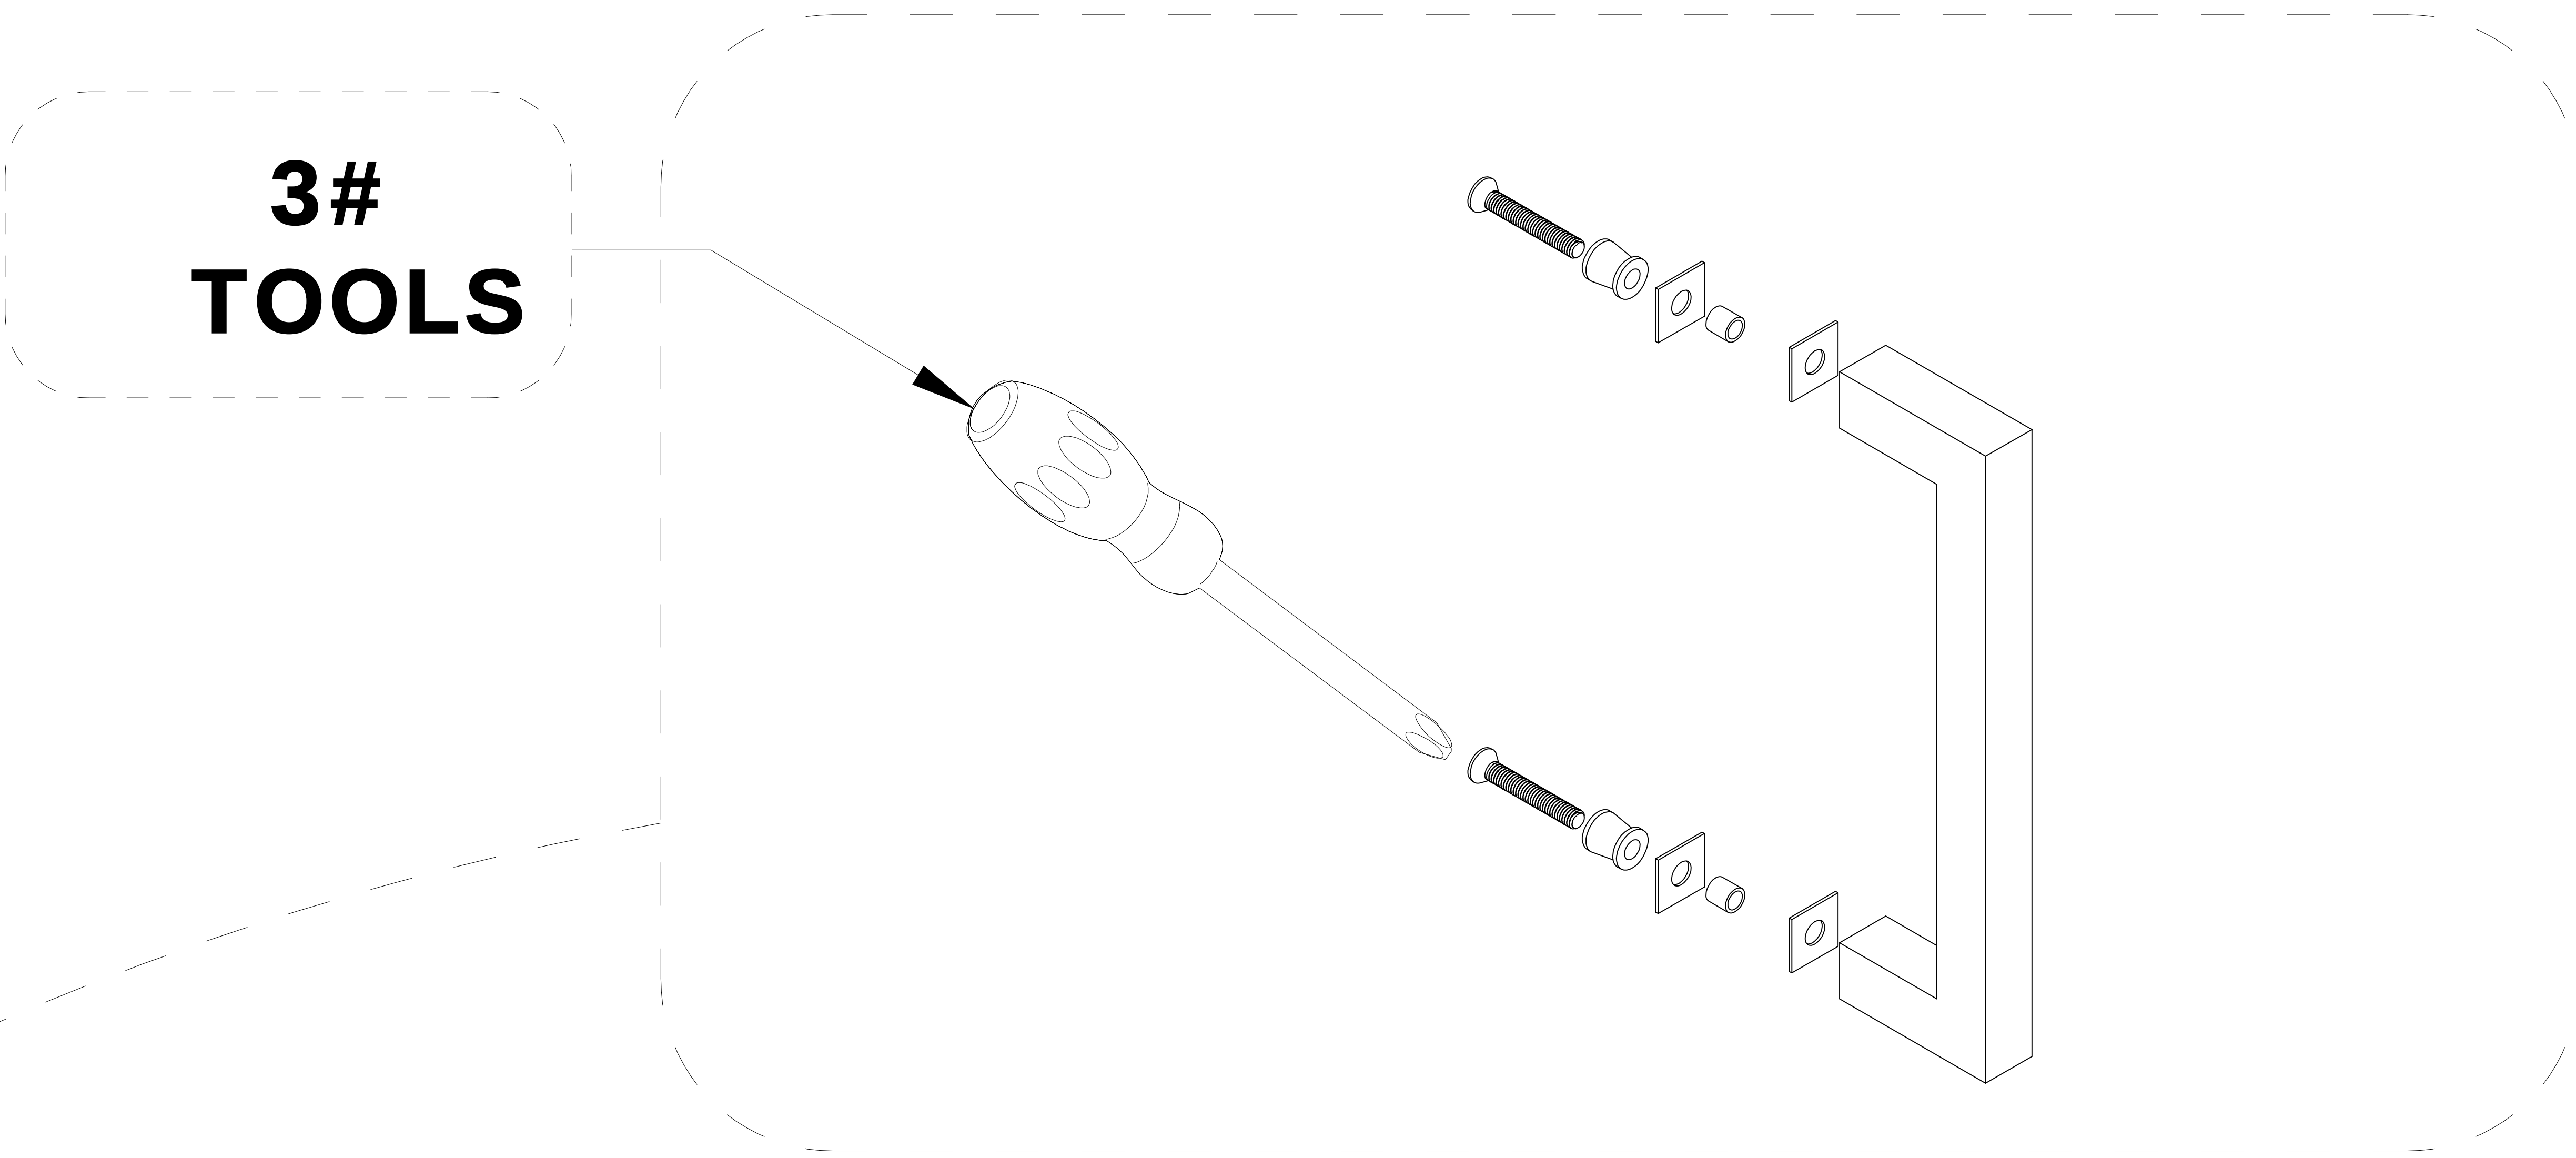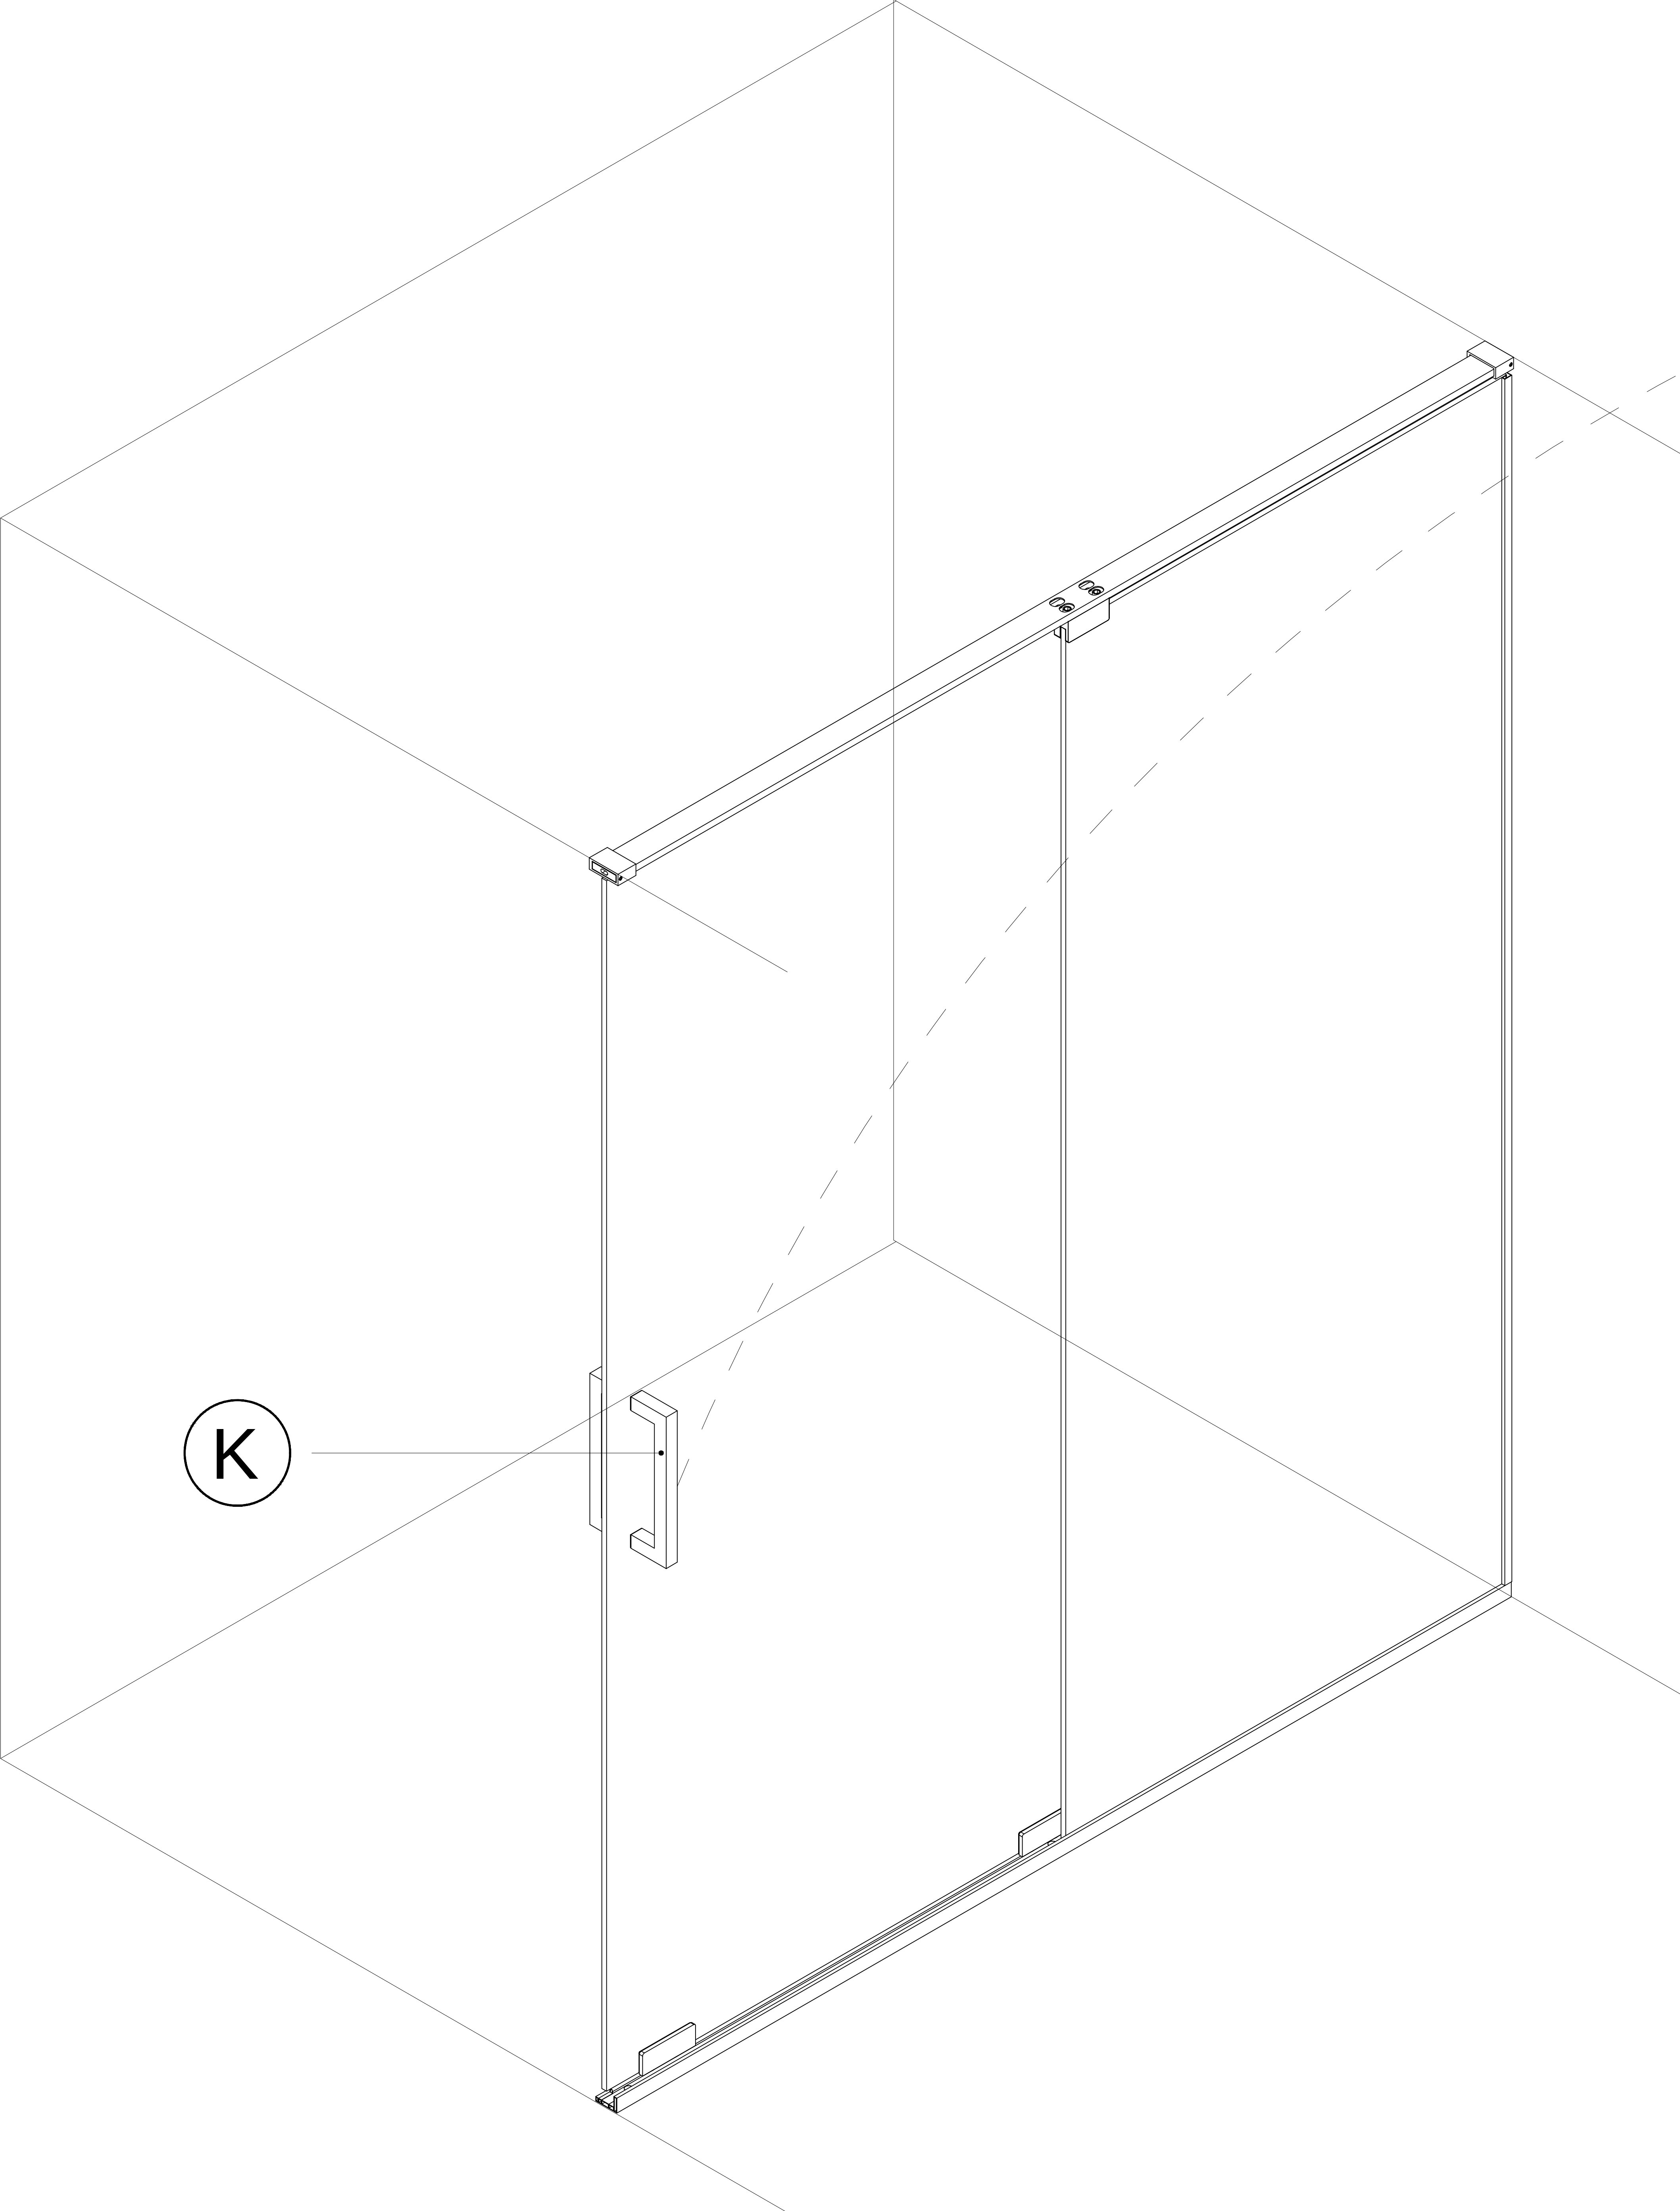

STEP- 14

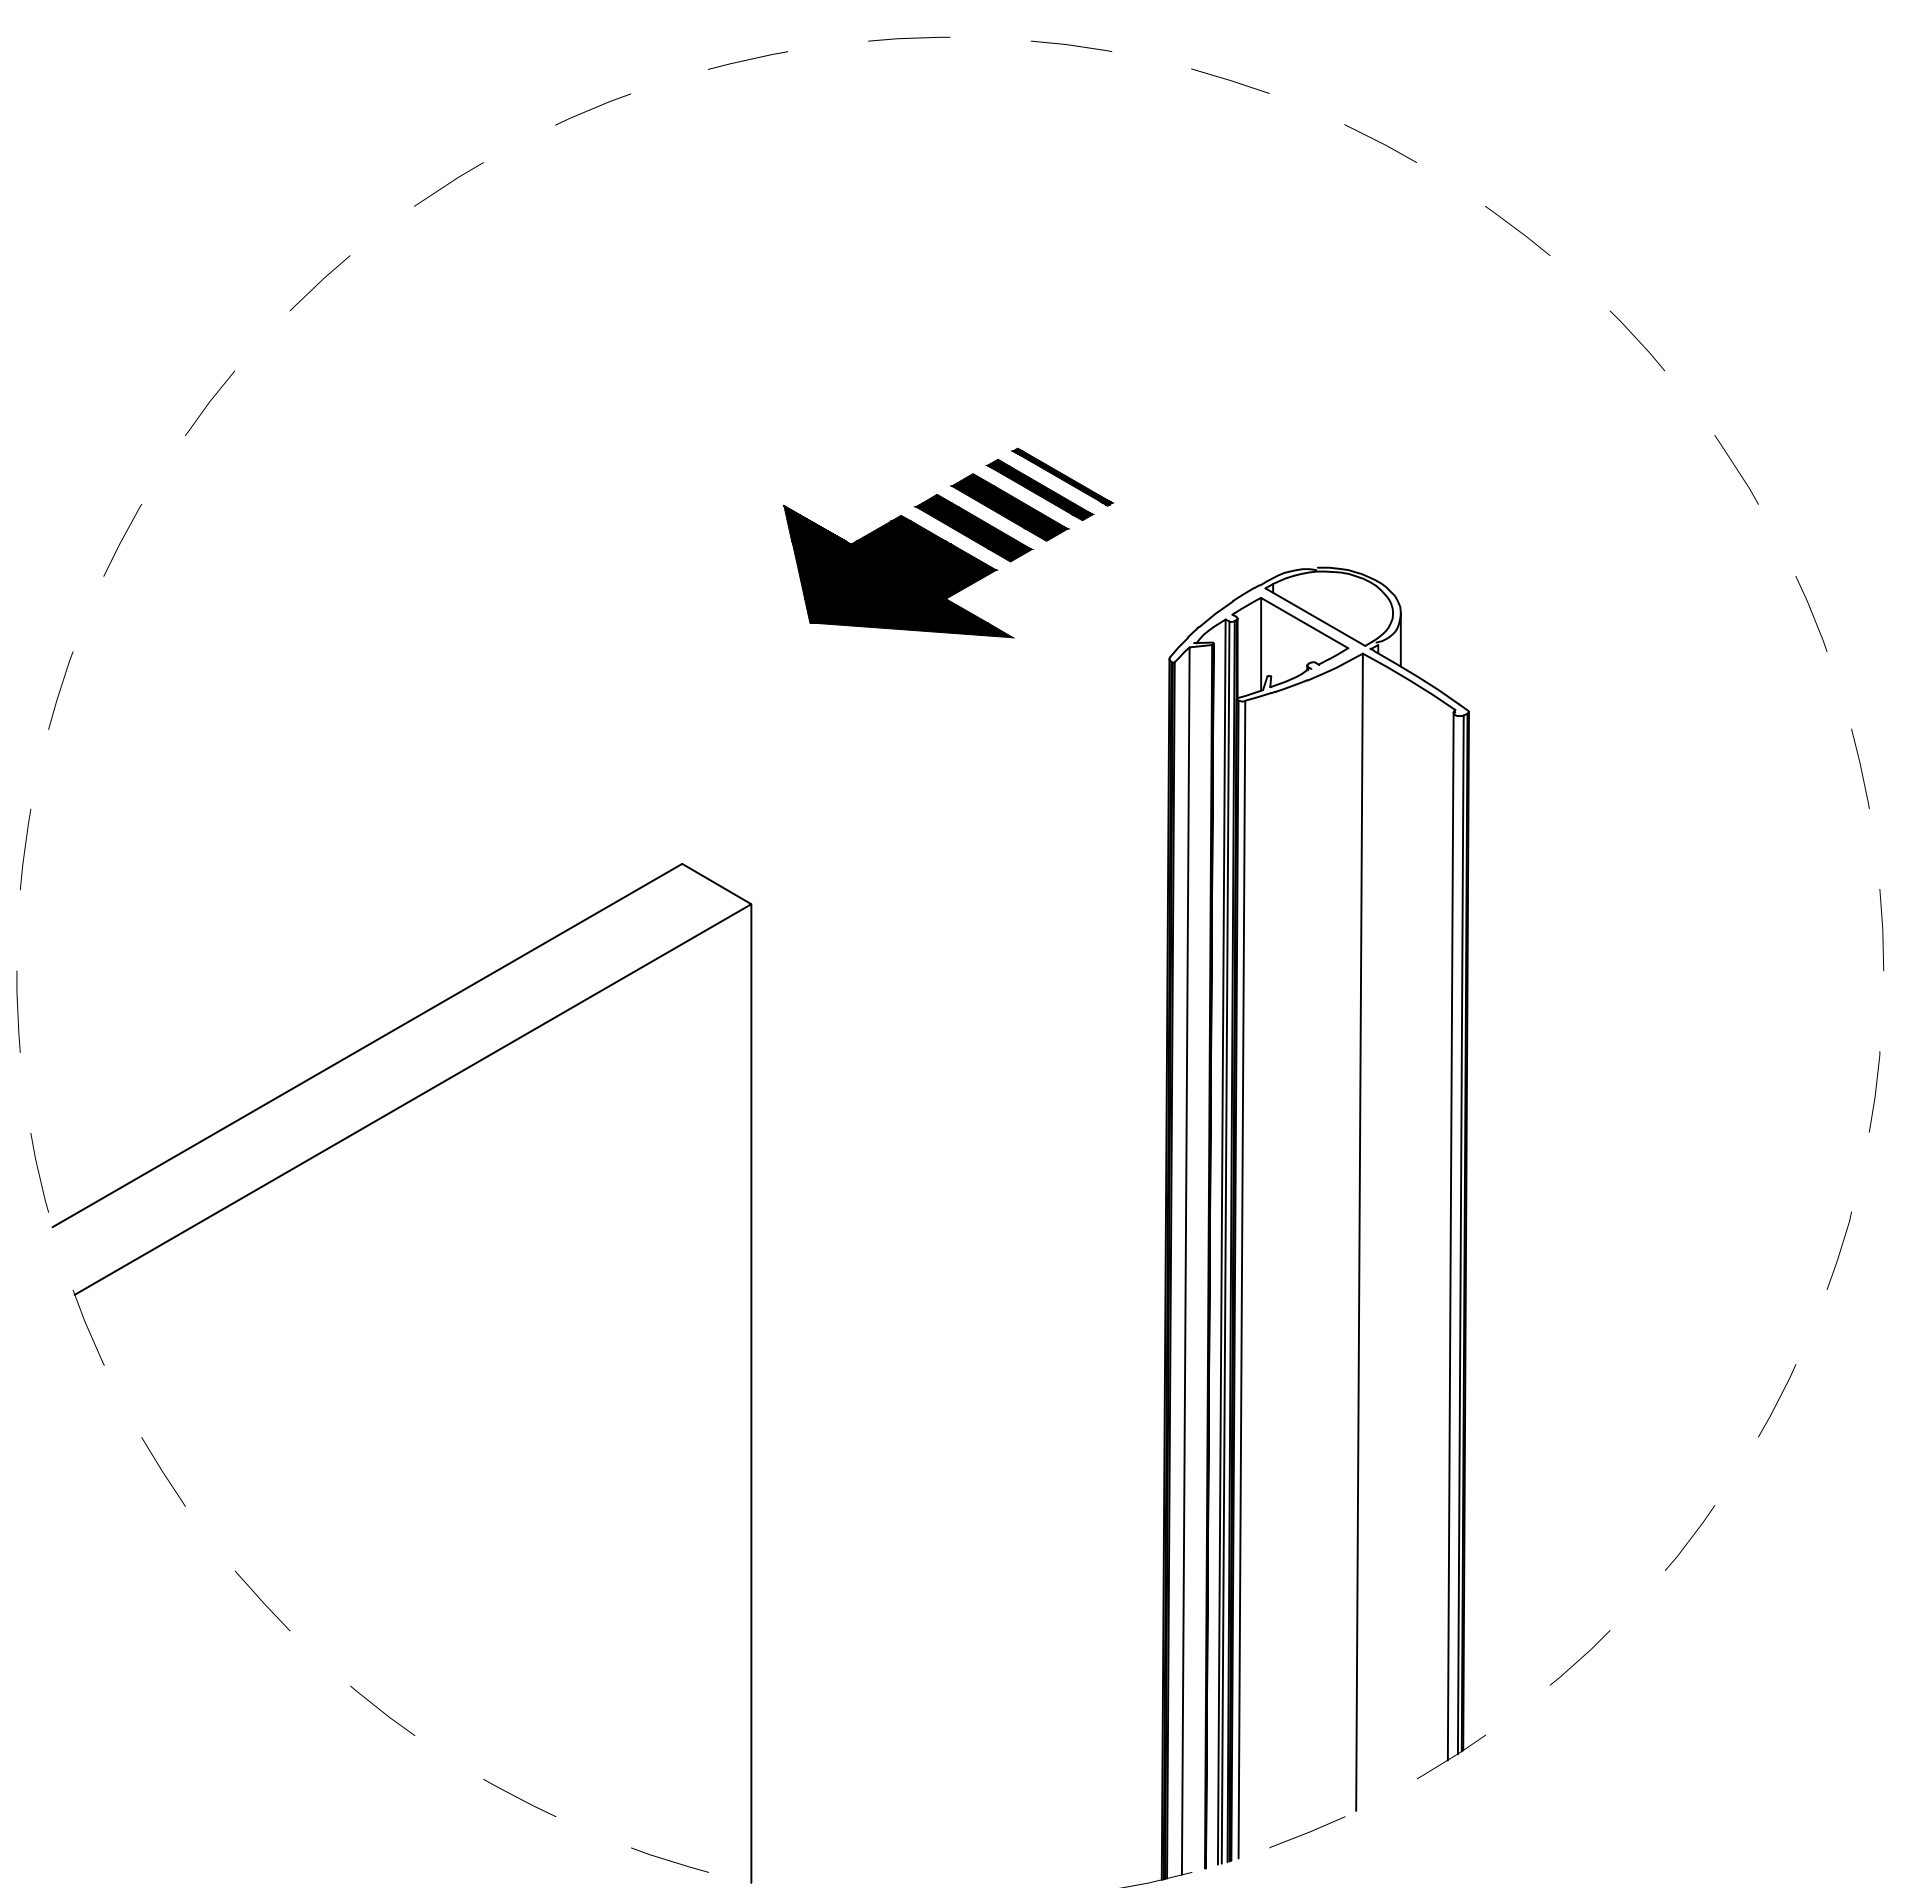



2

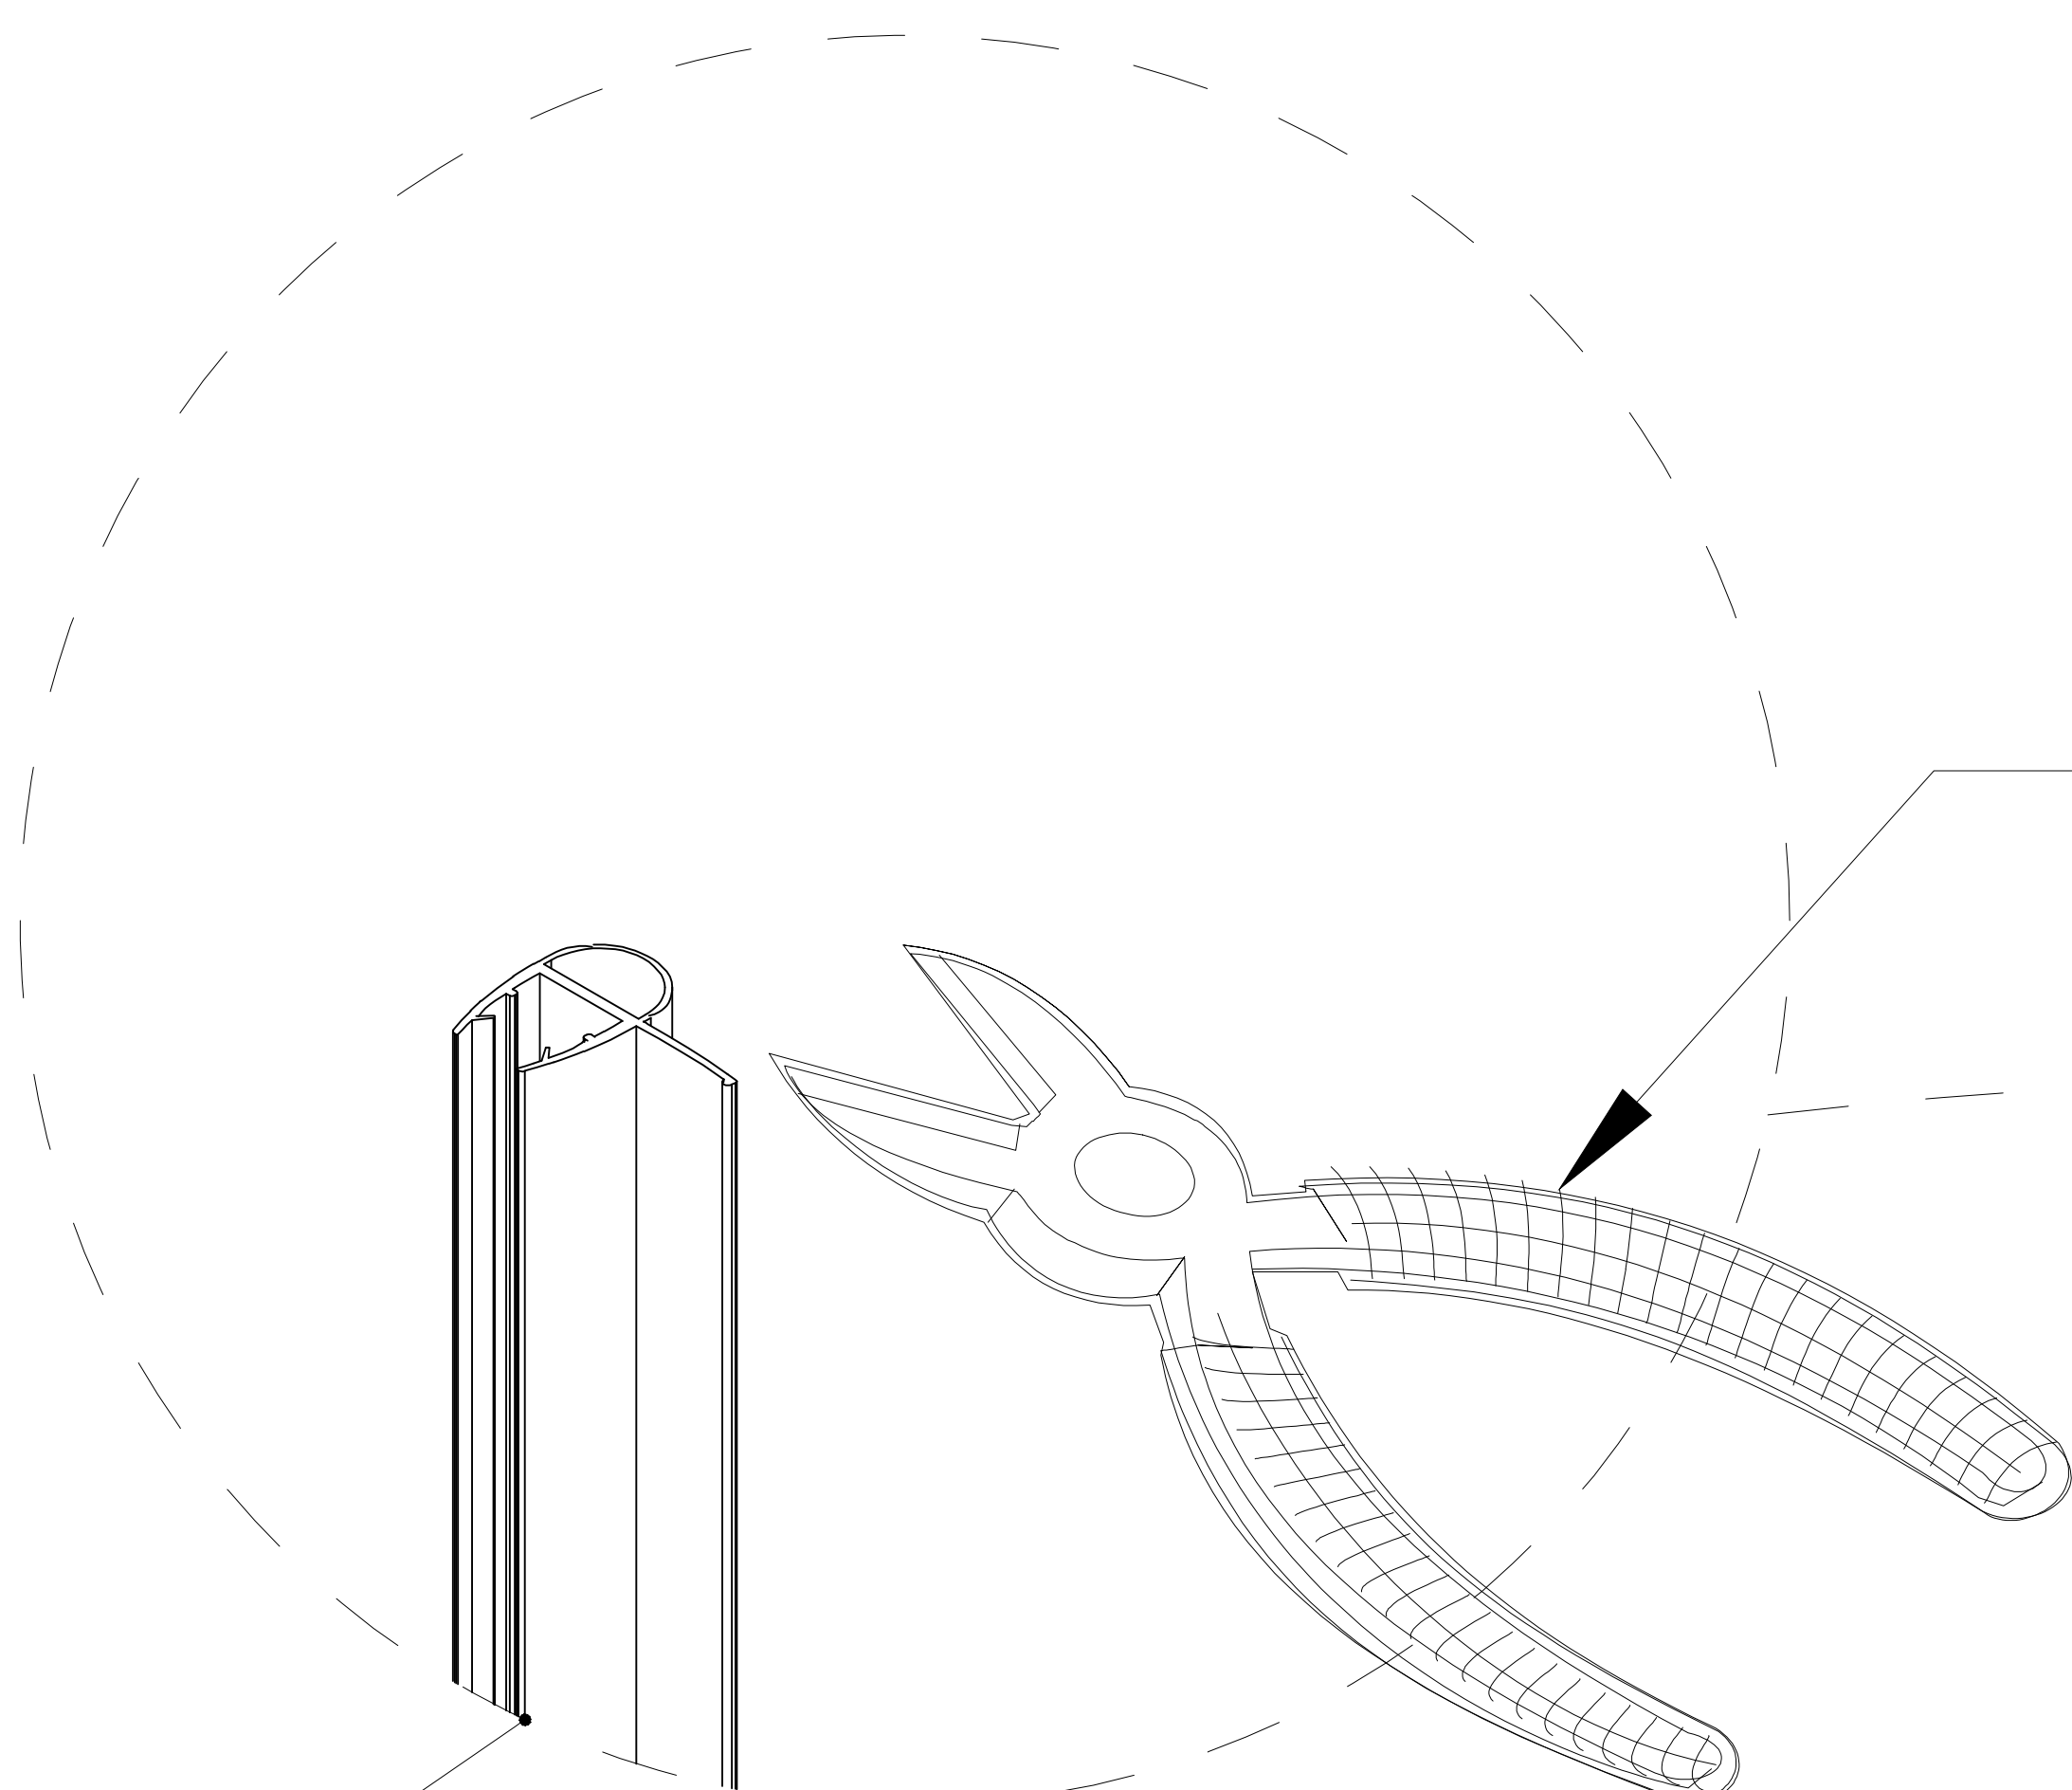

6#
TOOLS

E


1

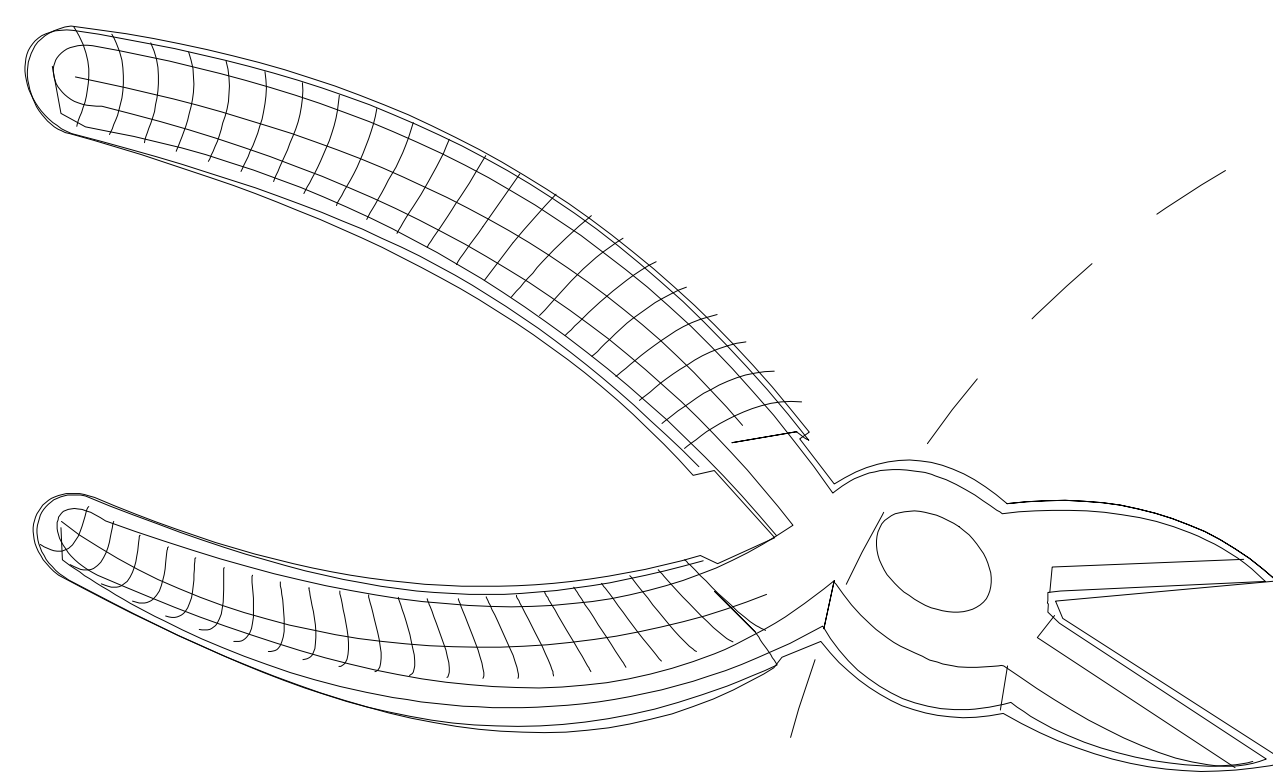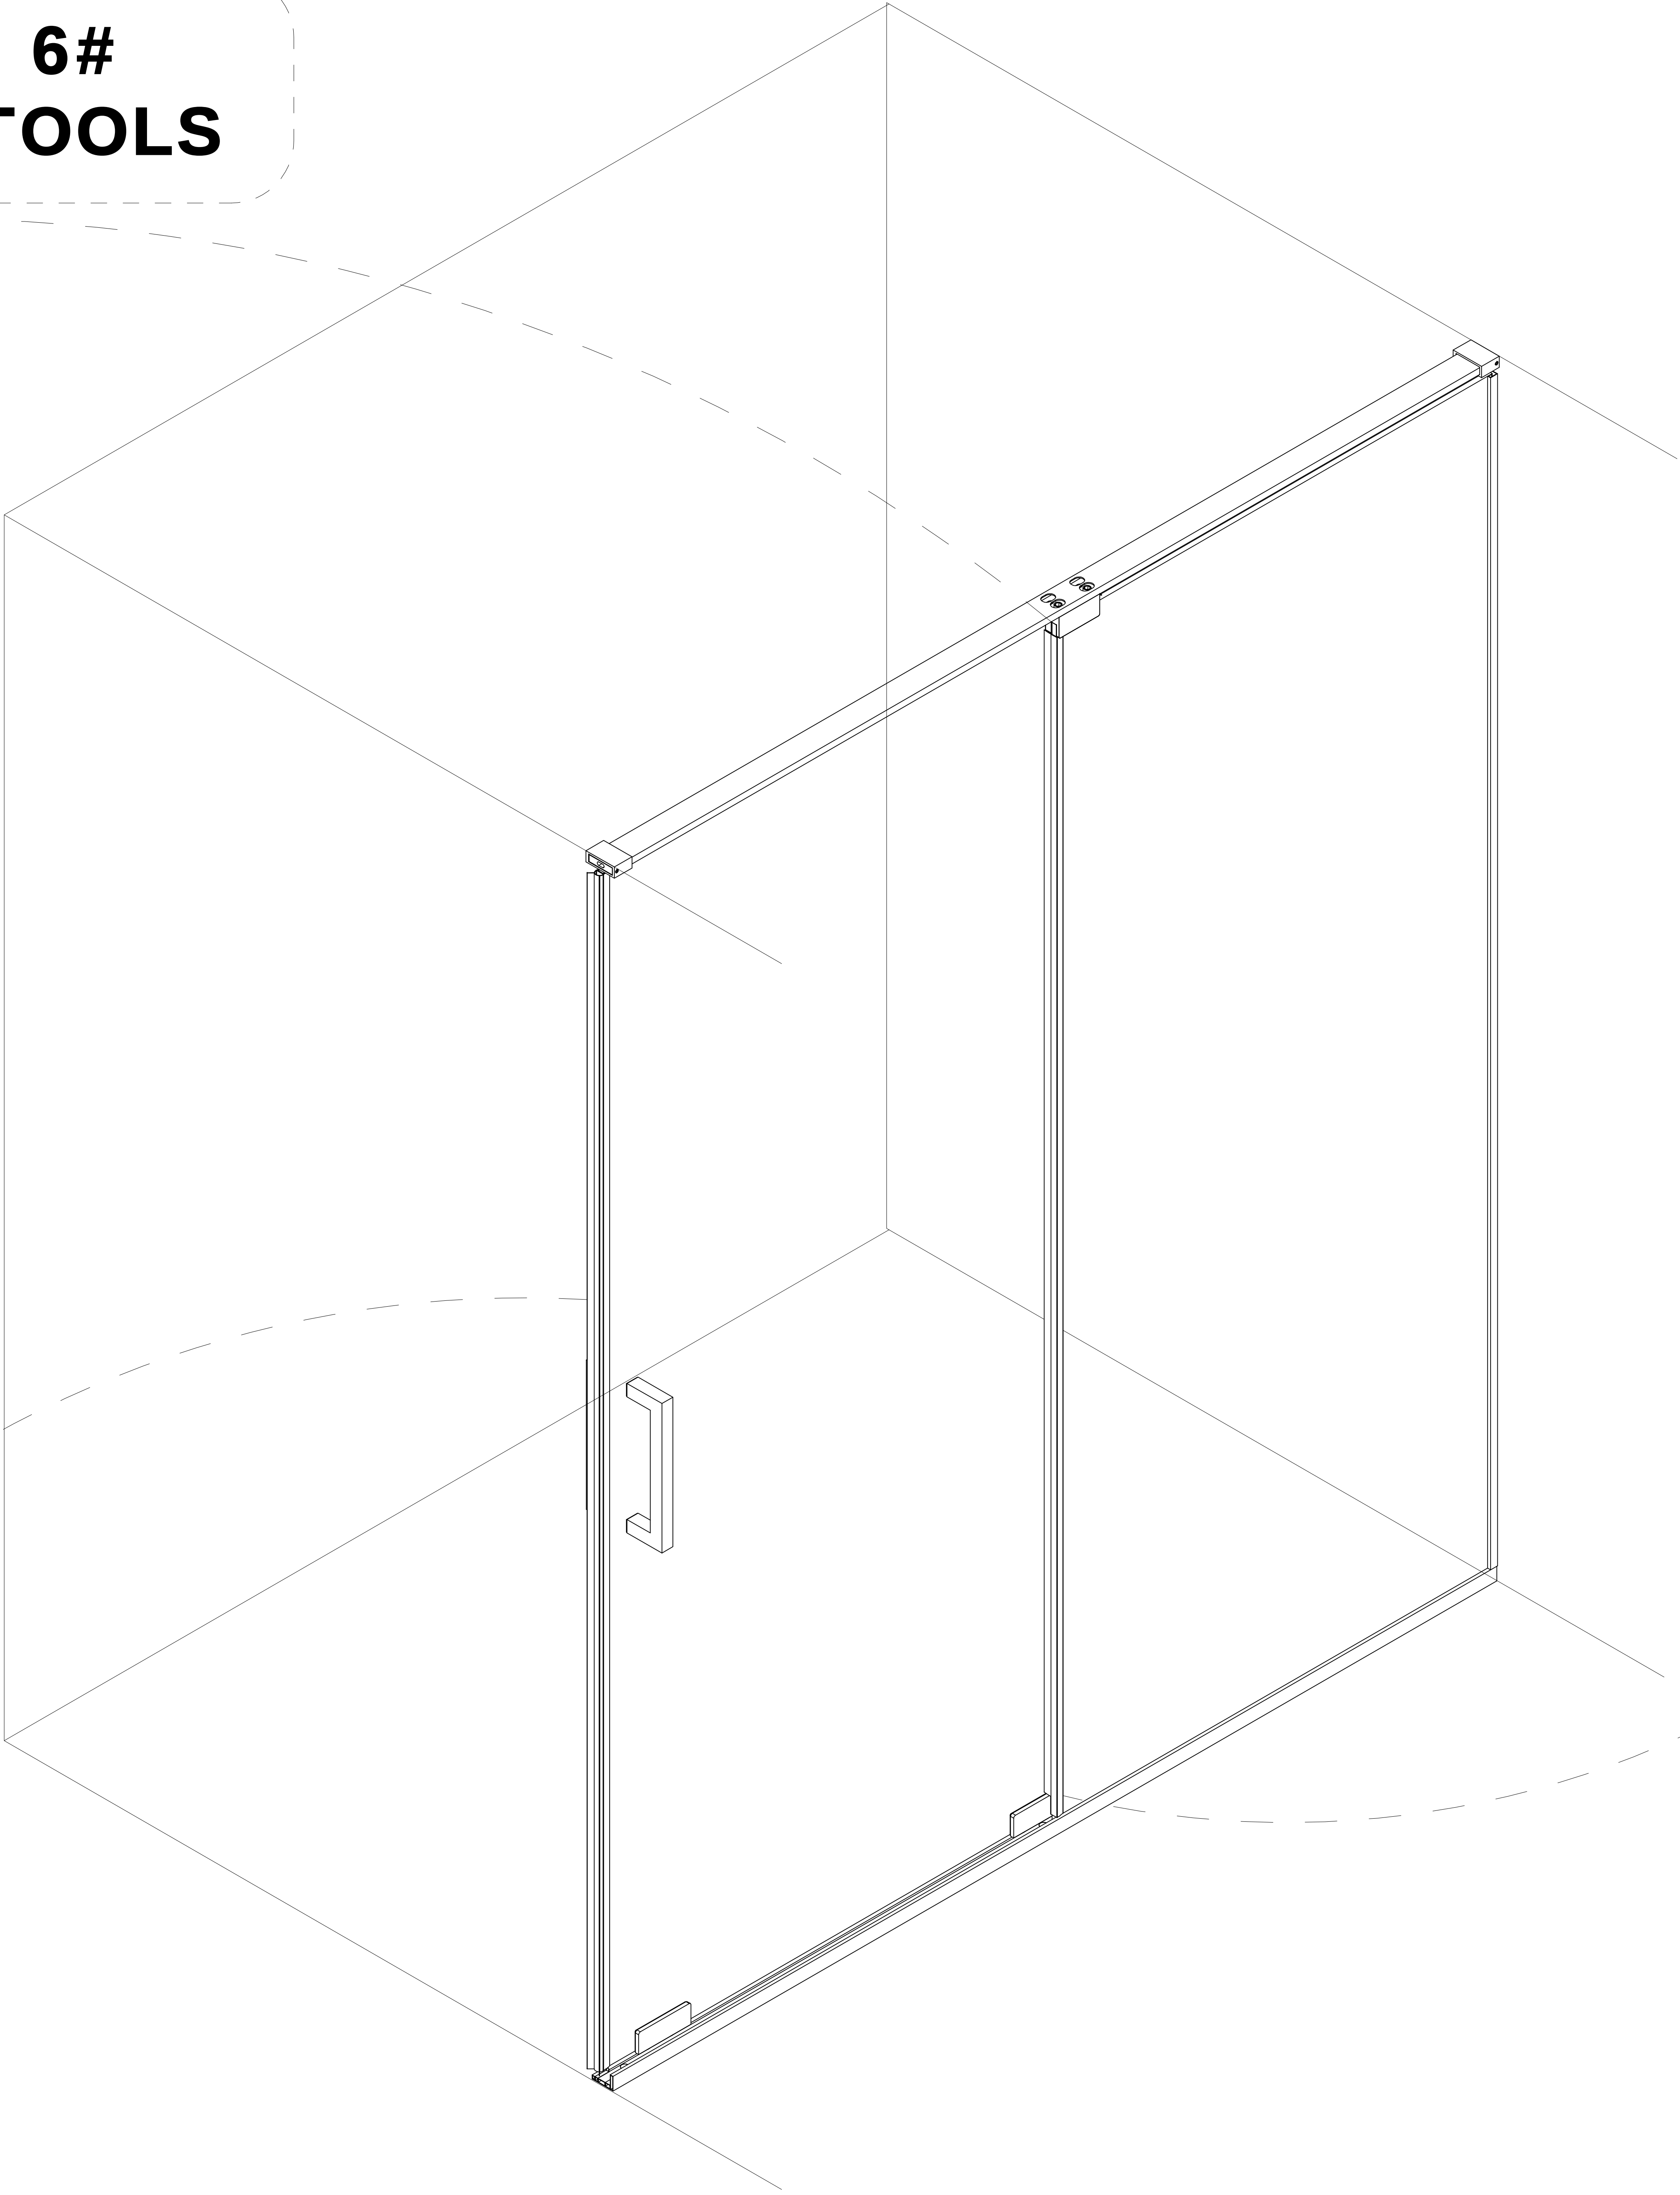

G


27

1

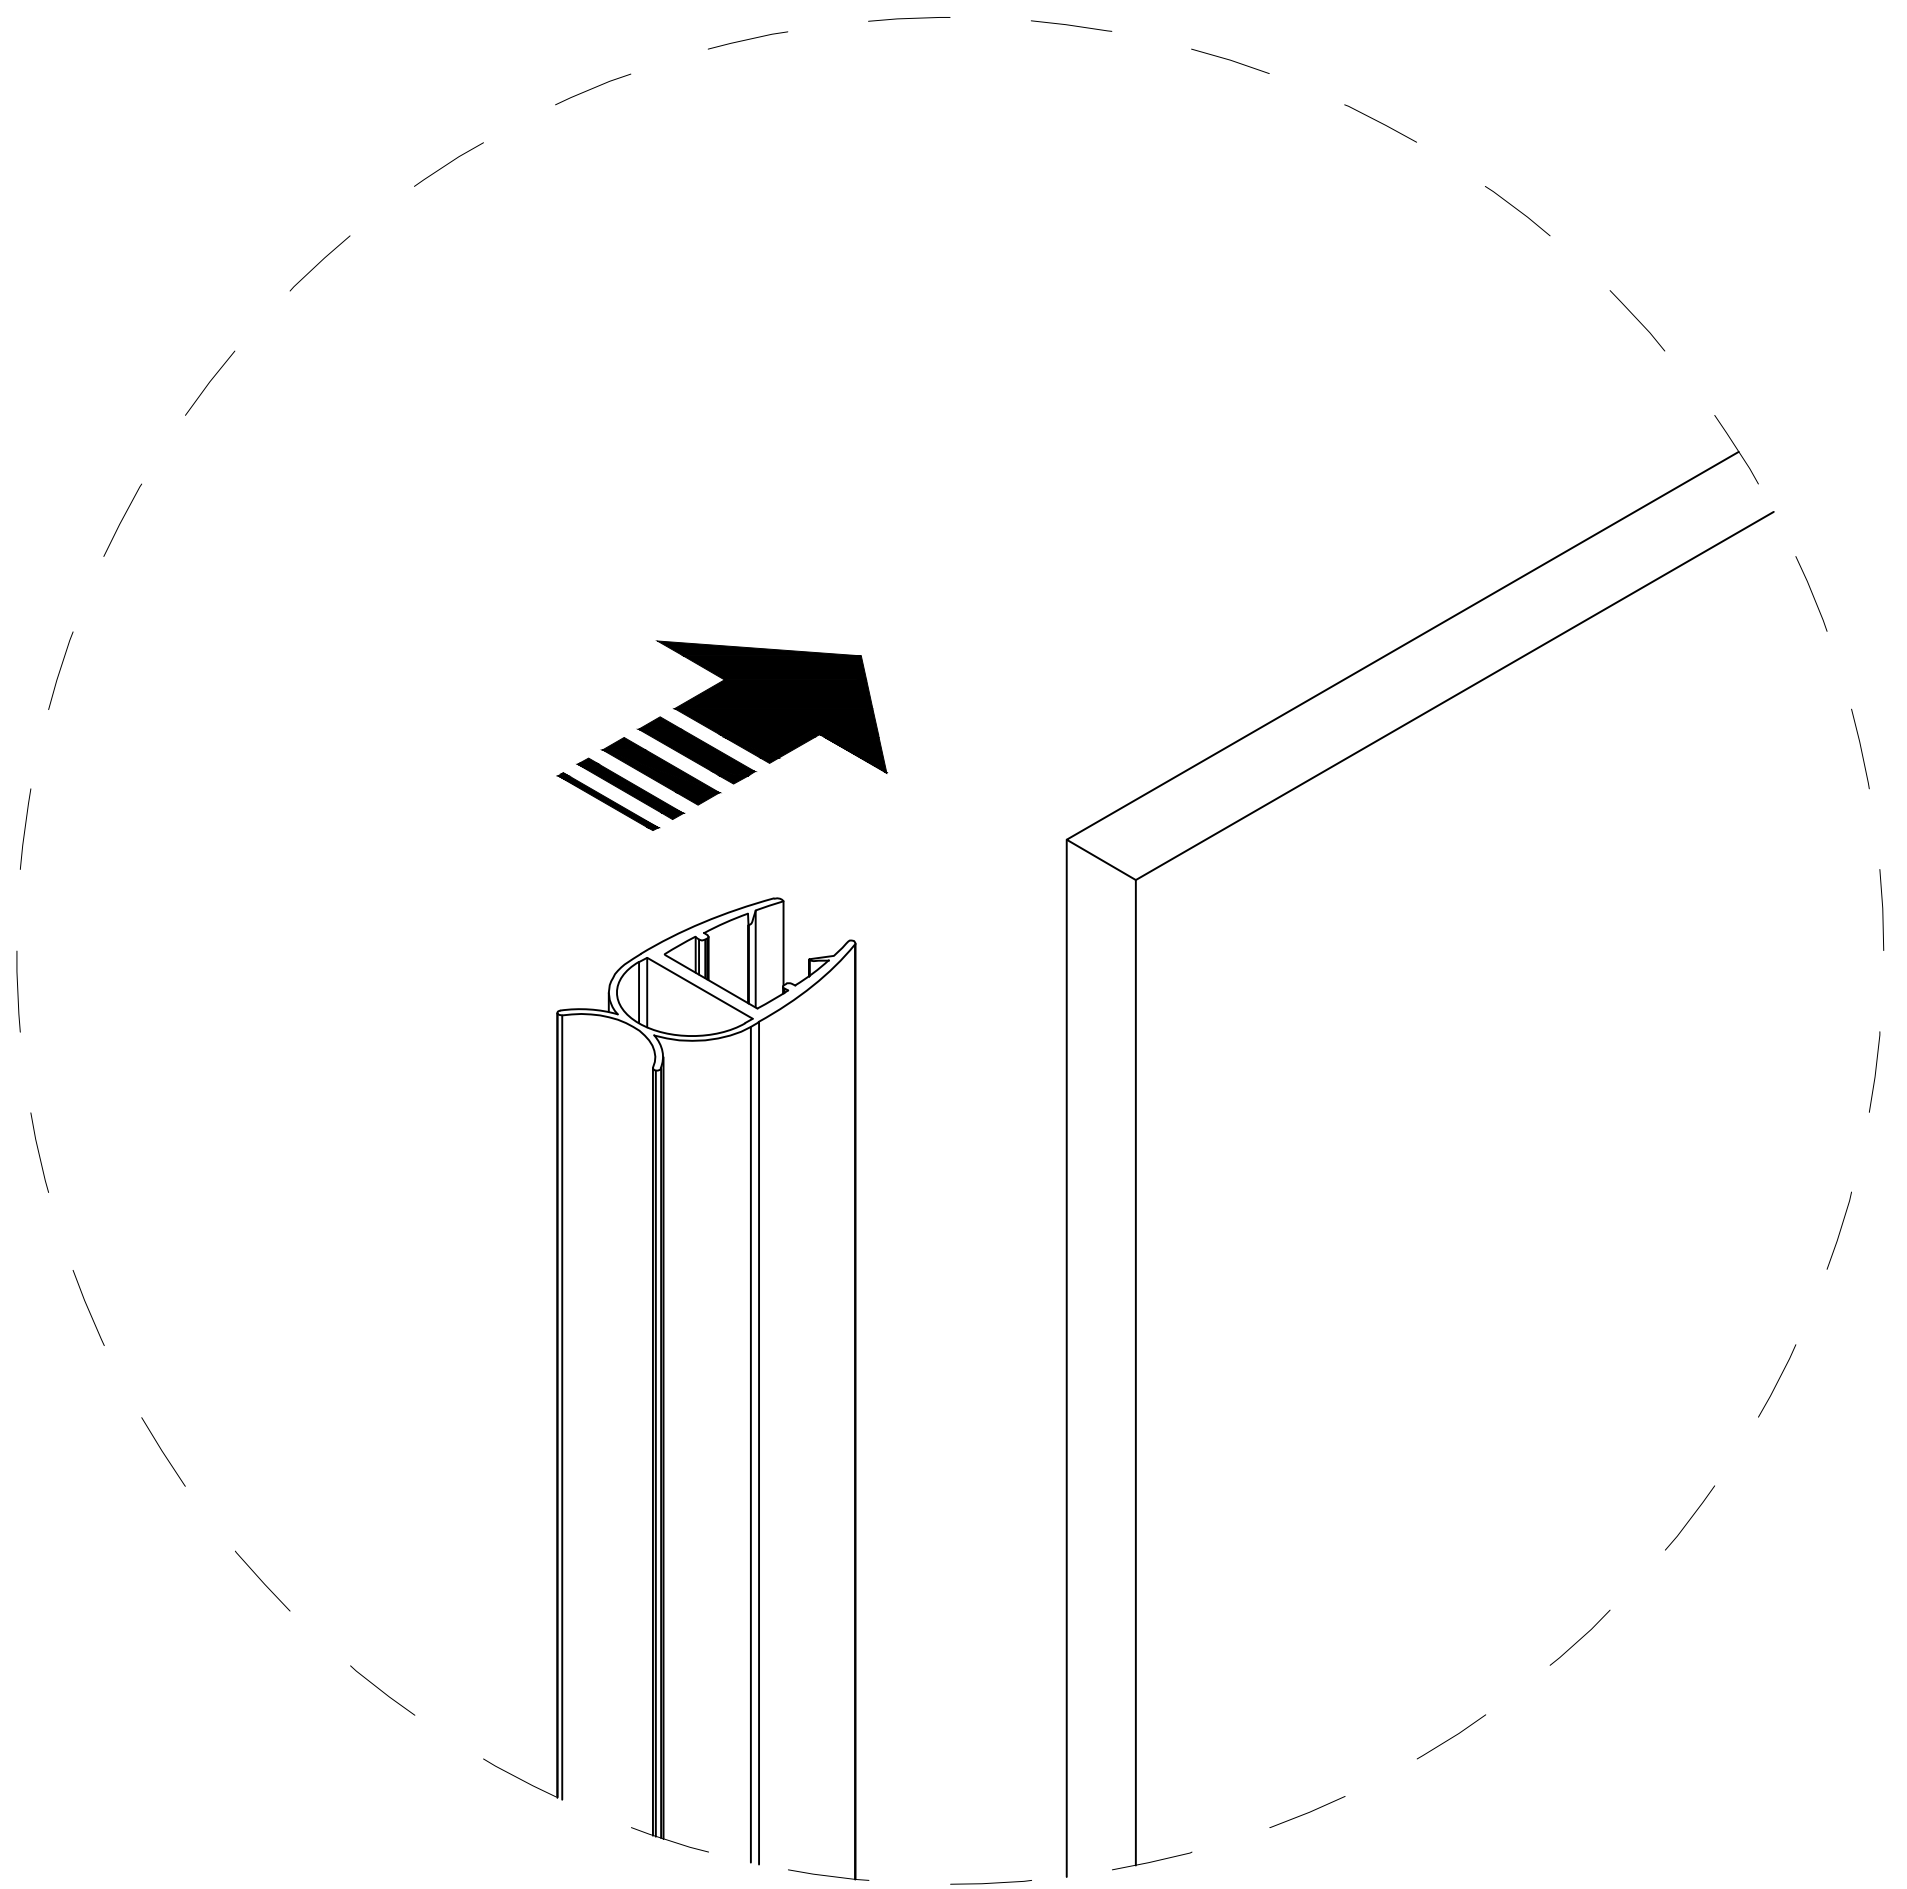


2

F

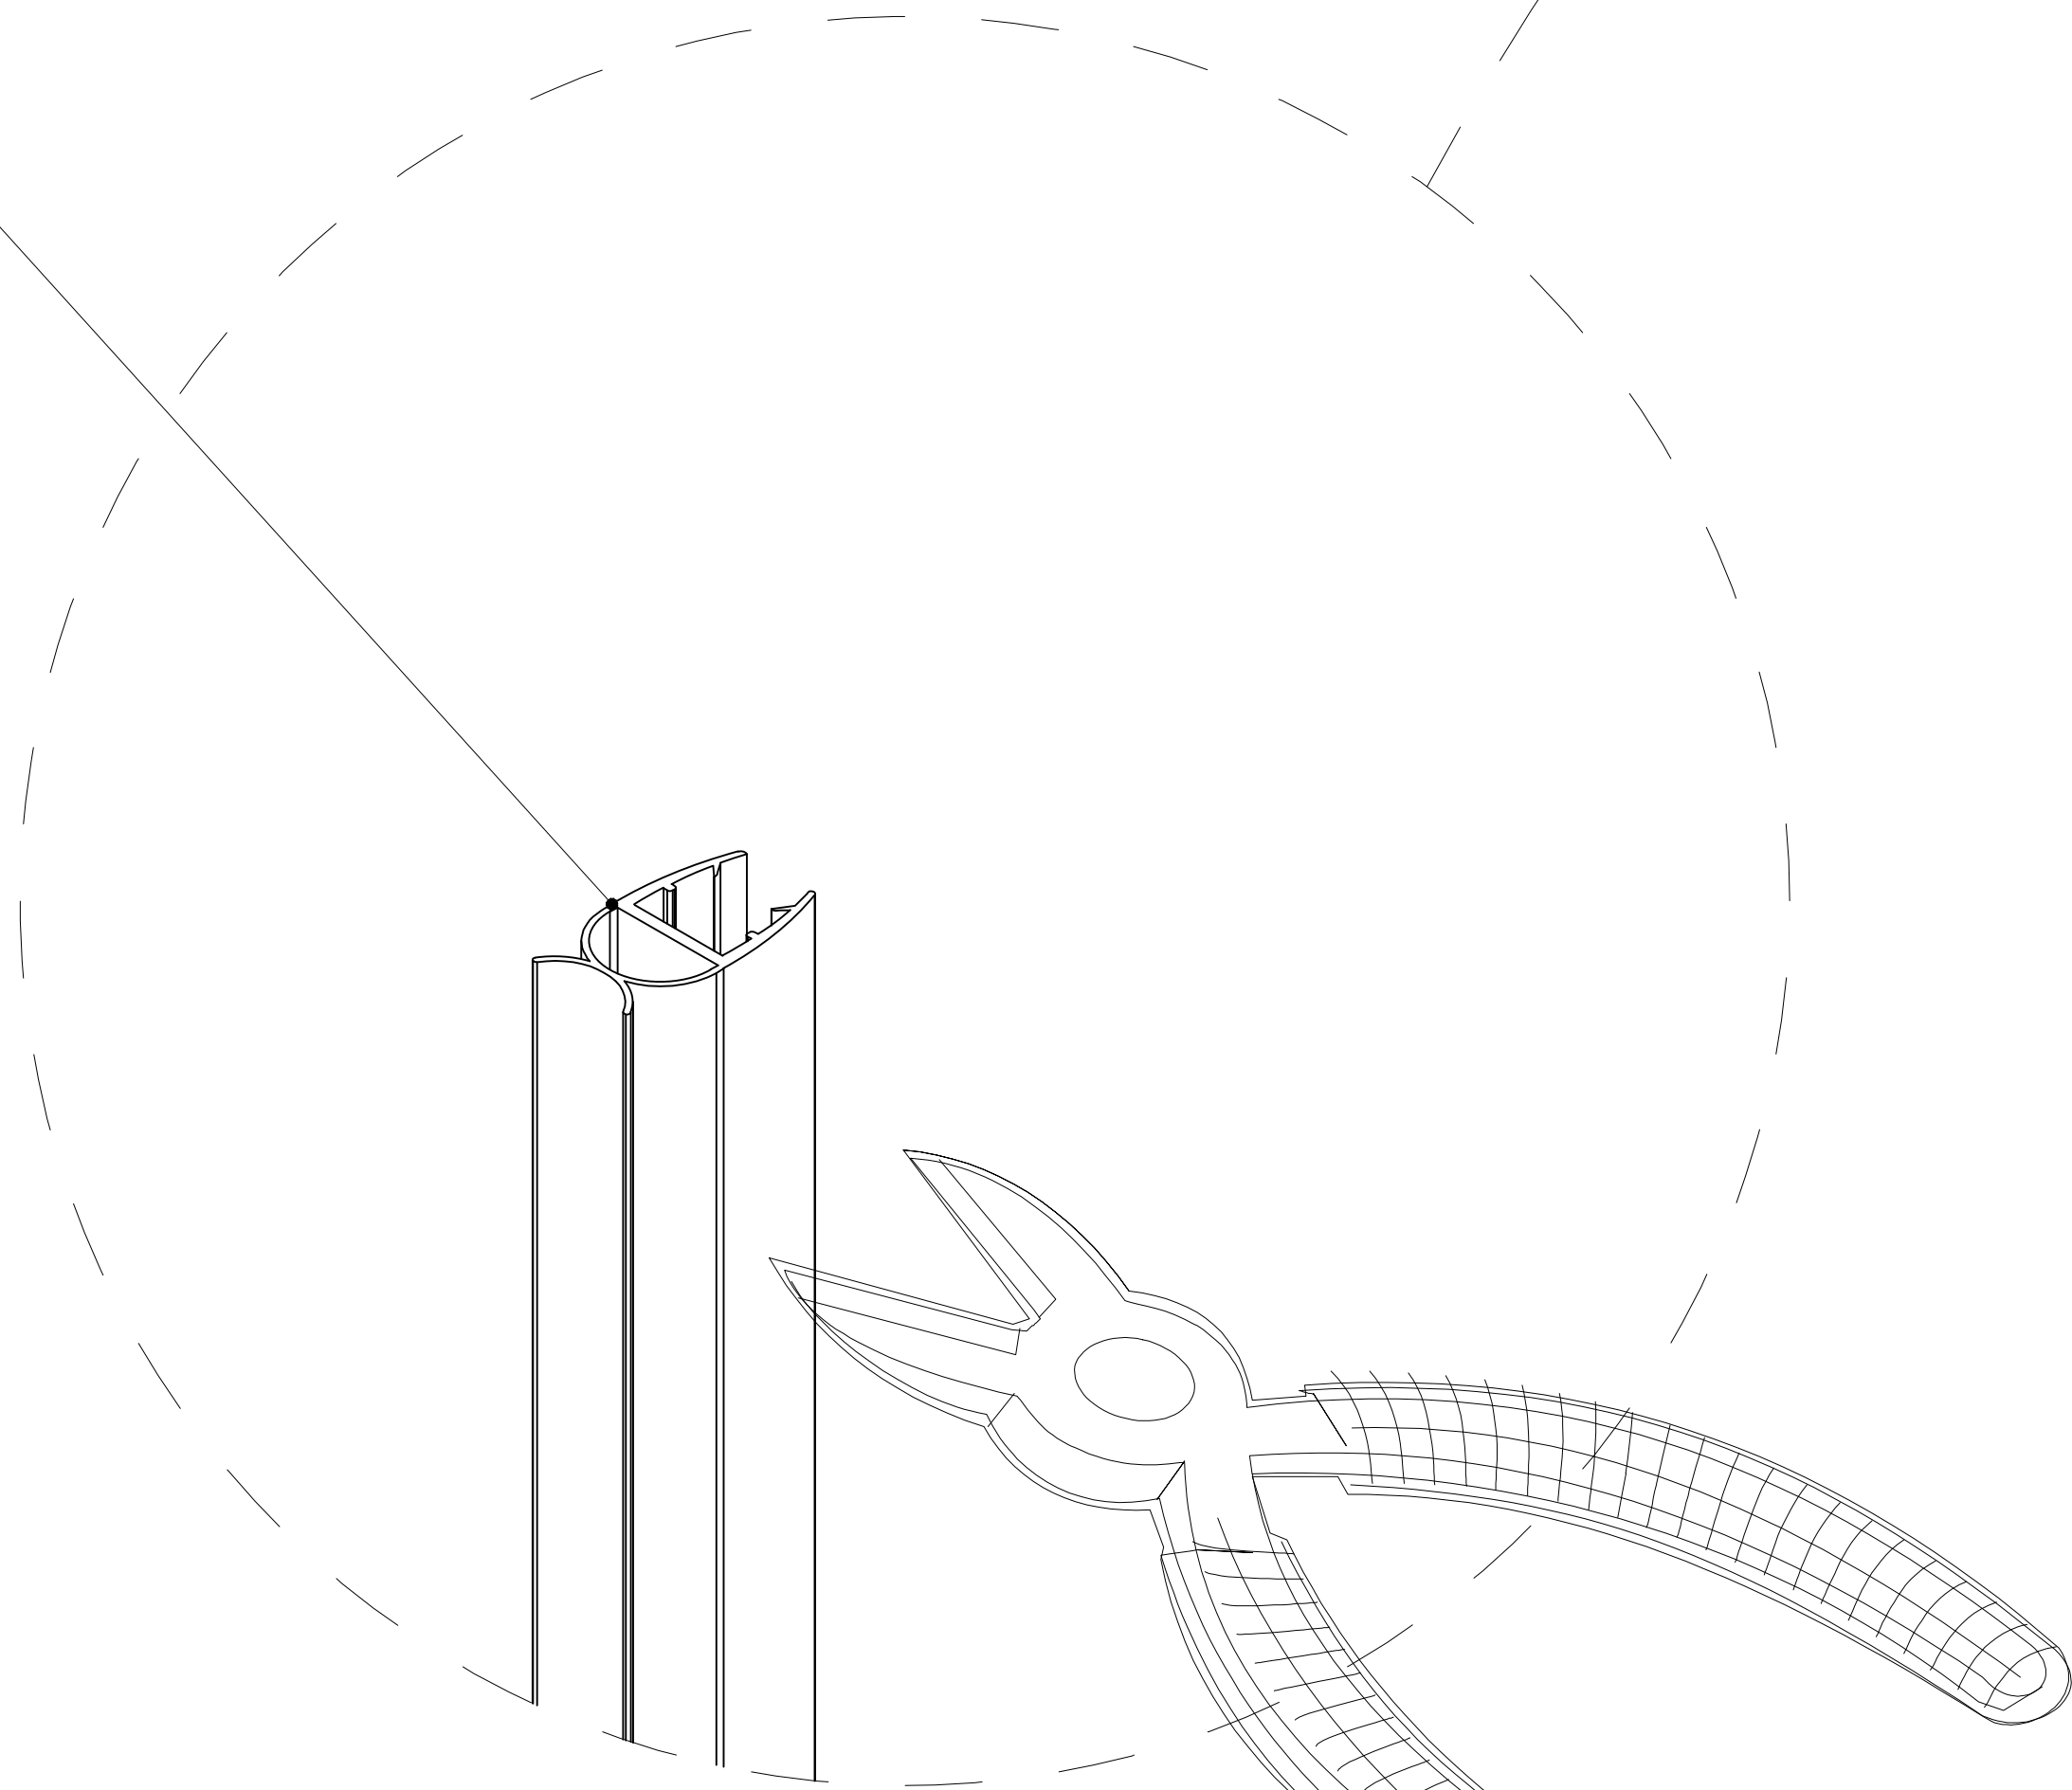

1

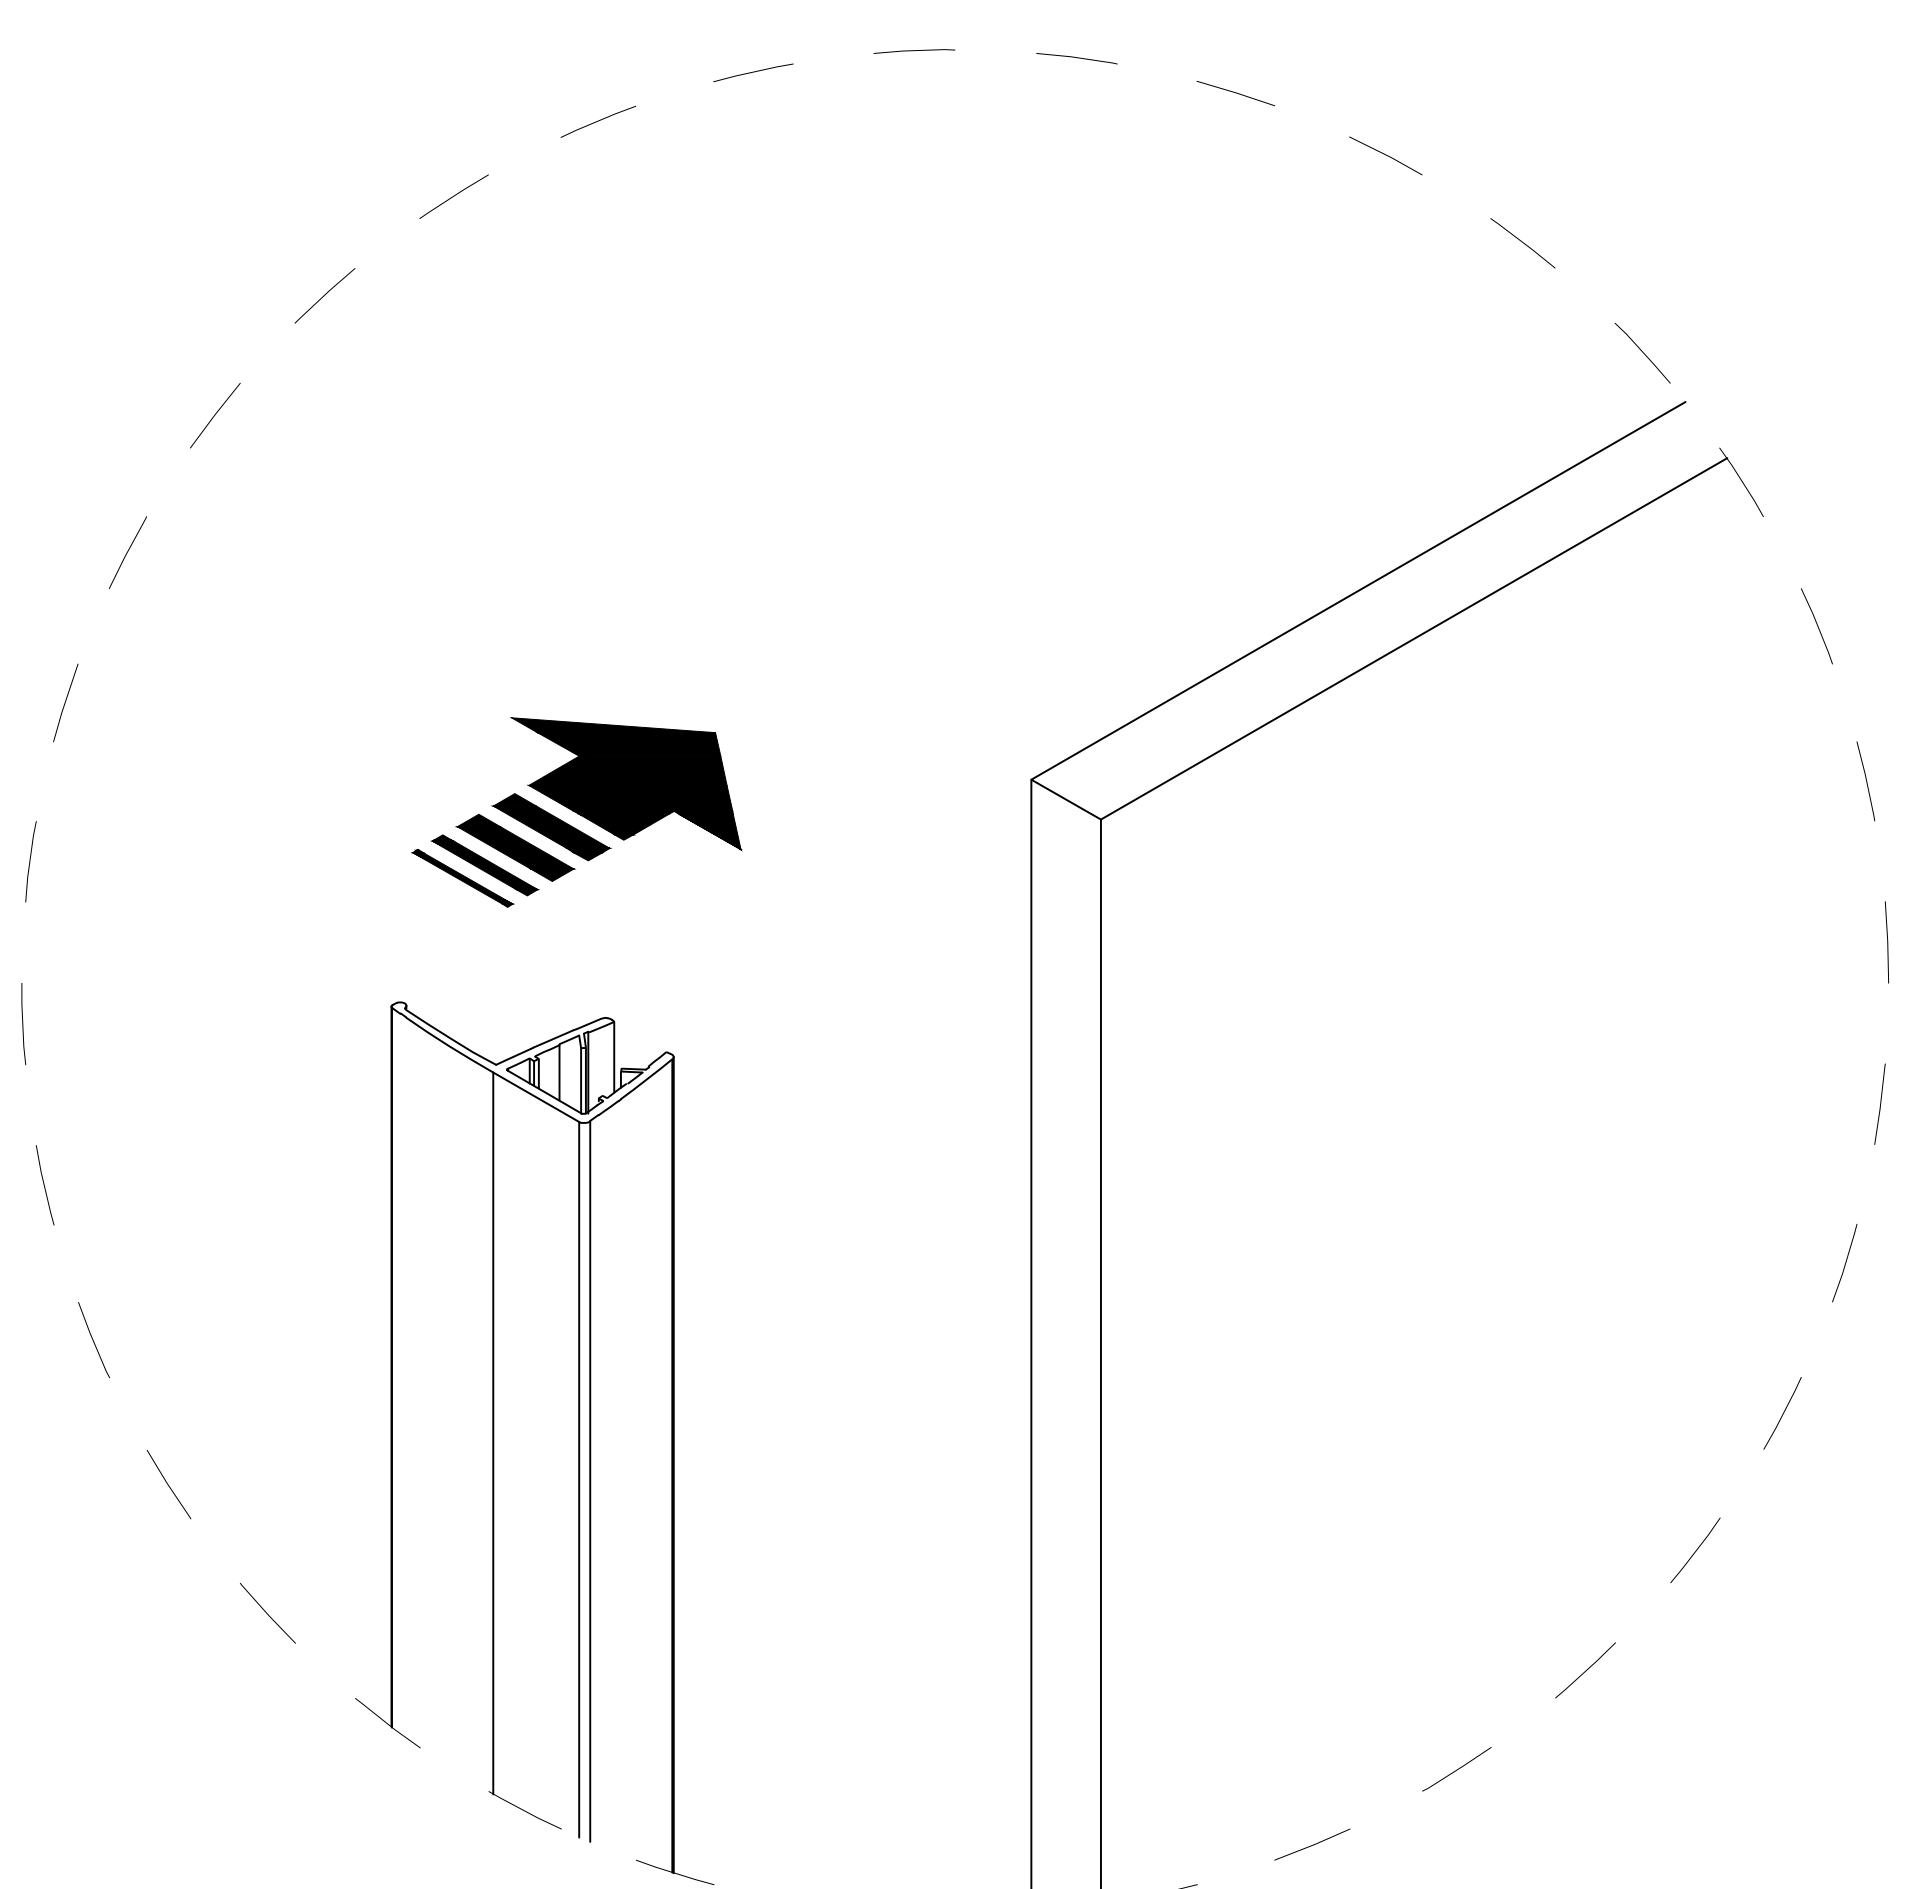

2

STEP- 15

Adjust the screw on the pulley to level the movable glass against the wall and install the decorative lid

**11#
TOOLS**

**4#
TOOLS**

L

R


1

L


R

**3#
TOOLS**

2

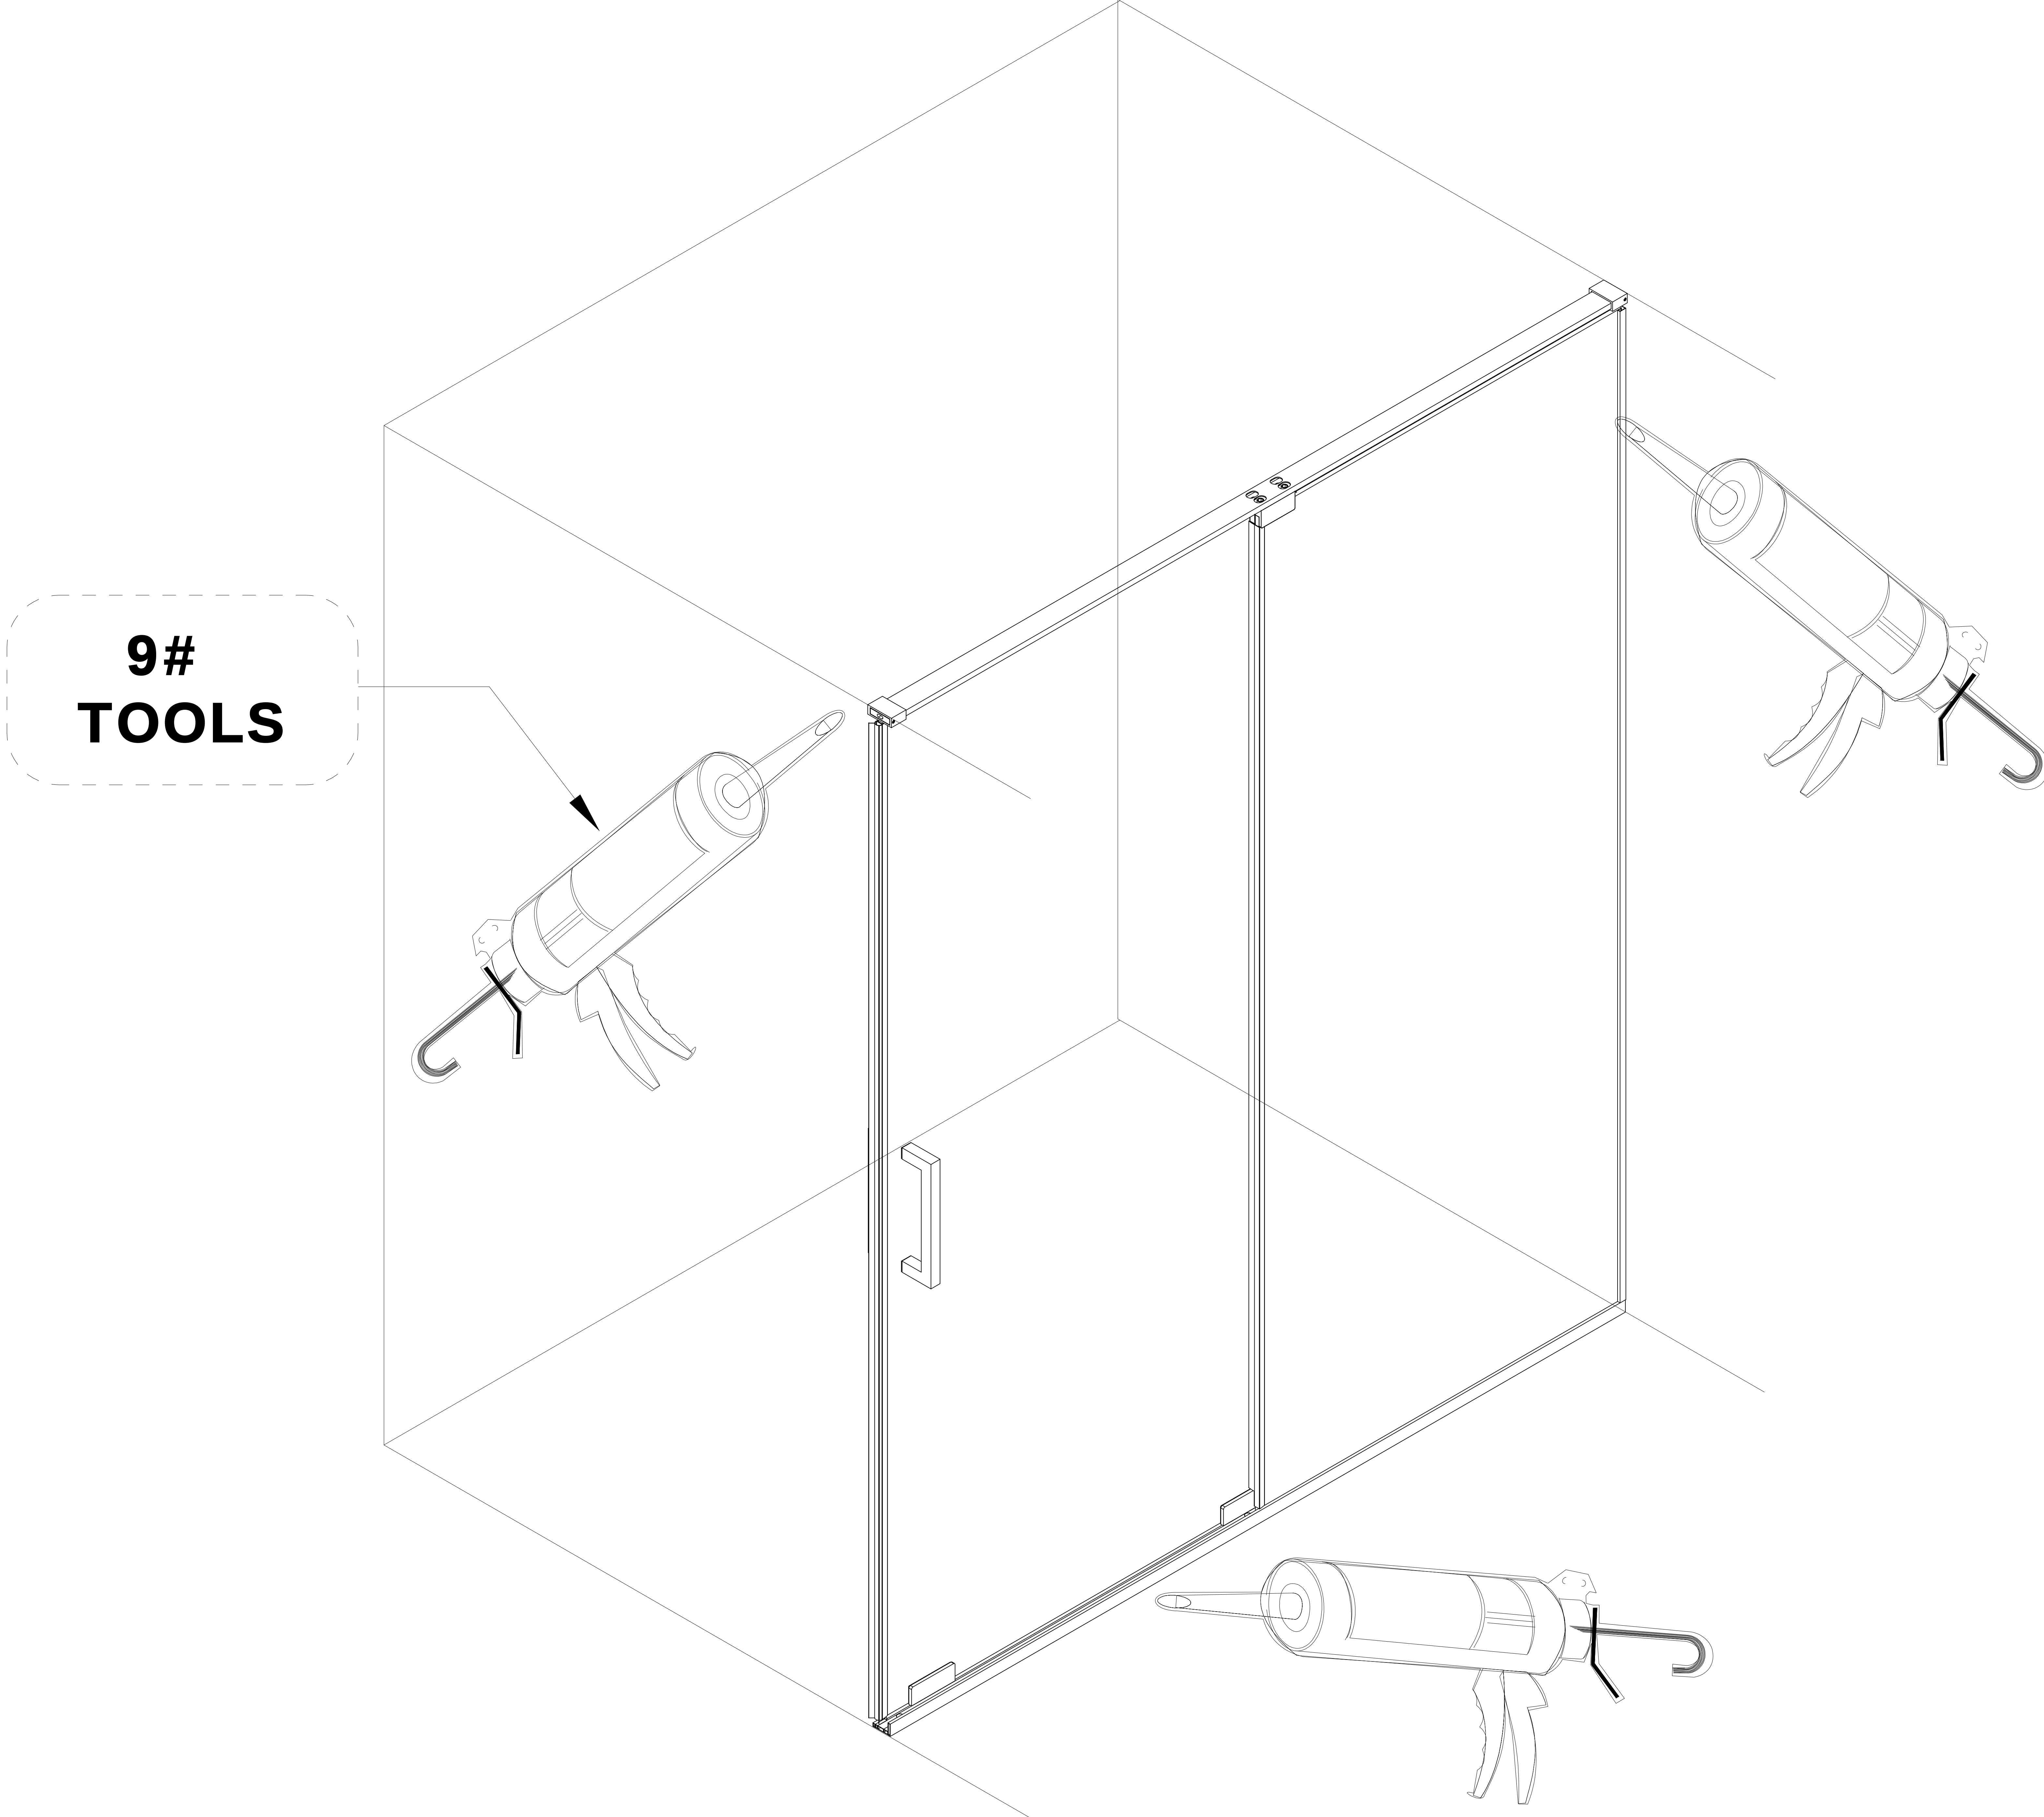

24 HOURS HEURES

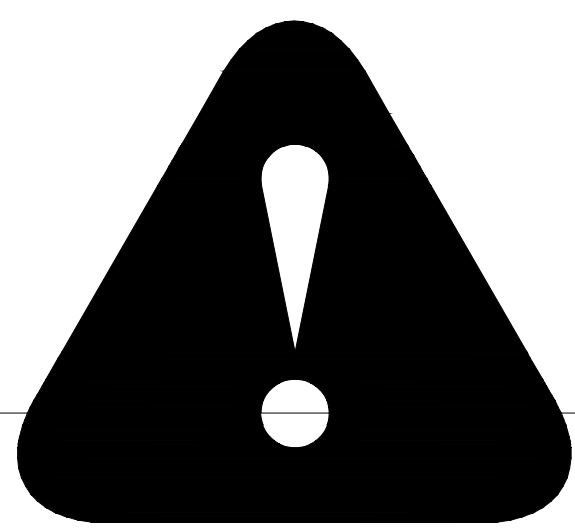

**ONLY SEAL THE OUTSIDE OF THE
SHOWER.DO NOT QPLY SILICONE TO
THE IHSIDE OF THE SHOWER**

SAFETY INFORMATION



CAUTION

Please carefully read the following important safety information before handling or installing this shower. There is a risk of serious injury while handling this product. To minimize these risks, please note:

- Always wear safety glasses and gloves while handling.
- Always read and follow all the steps in the installation instructions.
- Inspect all contents and glass for damage before installation.
- Extreme caution should be taken while handling the glass during installation as the tempered glass may shatter if in contact with a hard surface.
- Handle the tempered glass with caution! Improperly handling the glass can cause it to break suddenly in small pieces (never in pointed fragments).
- Always take all precautions not to touch the tempered glass with any tools during the installation, or after installed.
- Do not cut or modify the tempered glass as it will shatter if cut.
- Carefully remove product from packaging and keep packaging until installation is complete.
- Install the shower on a floor that is level and able to accommodate the weight of the unit and an occupant.
- Consult local building codes and compliance standards prior to installation and ensure conformity.
- After installation, and from time to time, check the glass for fit and finish to ensure that nothing has come loose since installation.
- Keep this installation manual for future reference.




NOTICE

- Any modification or alteration from what is specified in this instruction manual will void any and all warranty on this product.
- We will not be responsible for any damage to the unit or personal property caused by improper installation. If you disregard instructional warnings, you will void your warranty and possibly deal with water damage.

PREPARATION

You will need at least two people to install this unit properly.

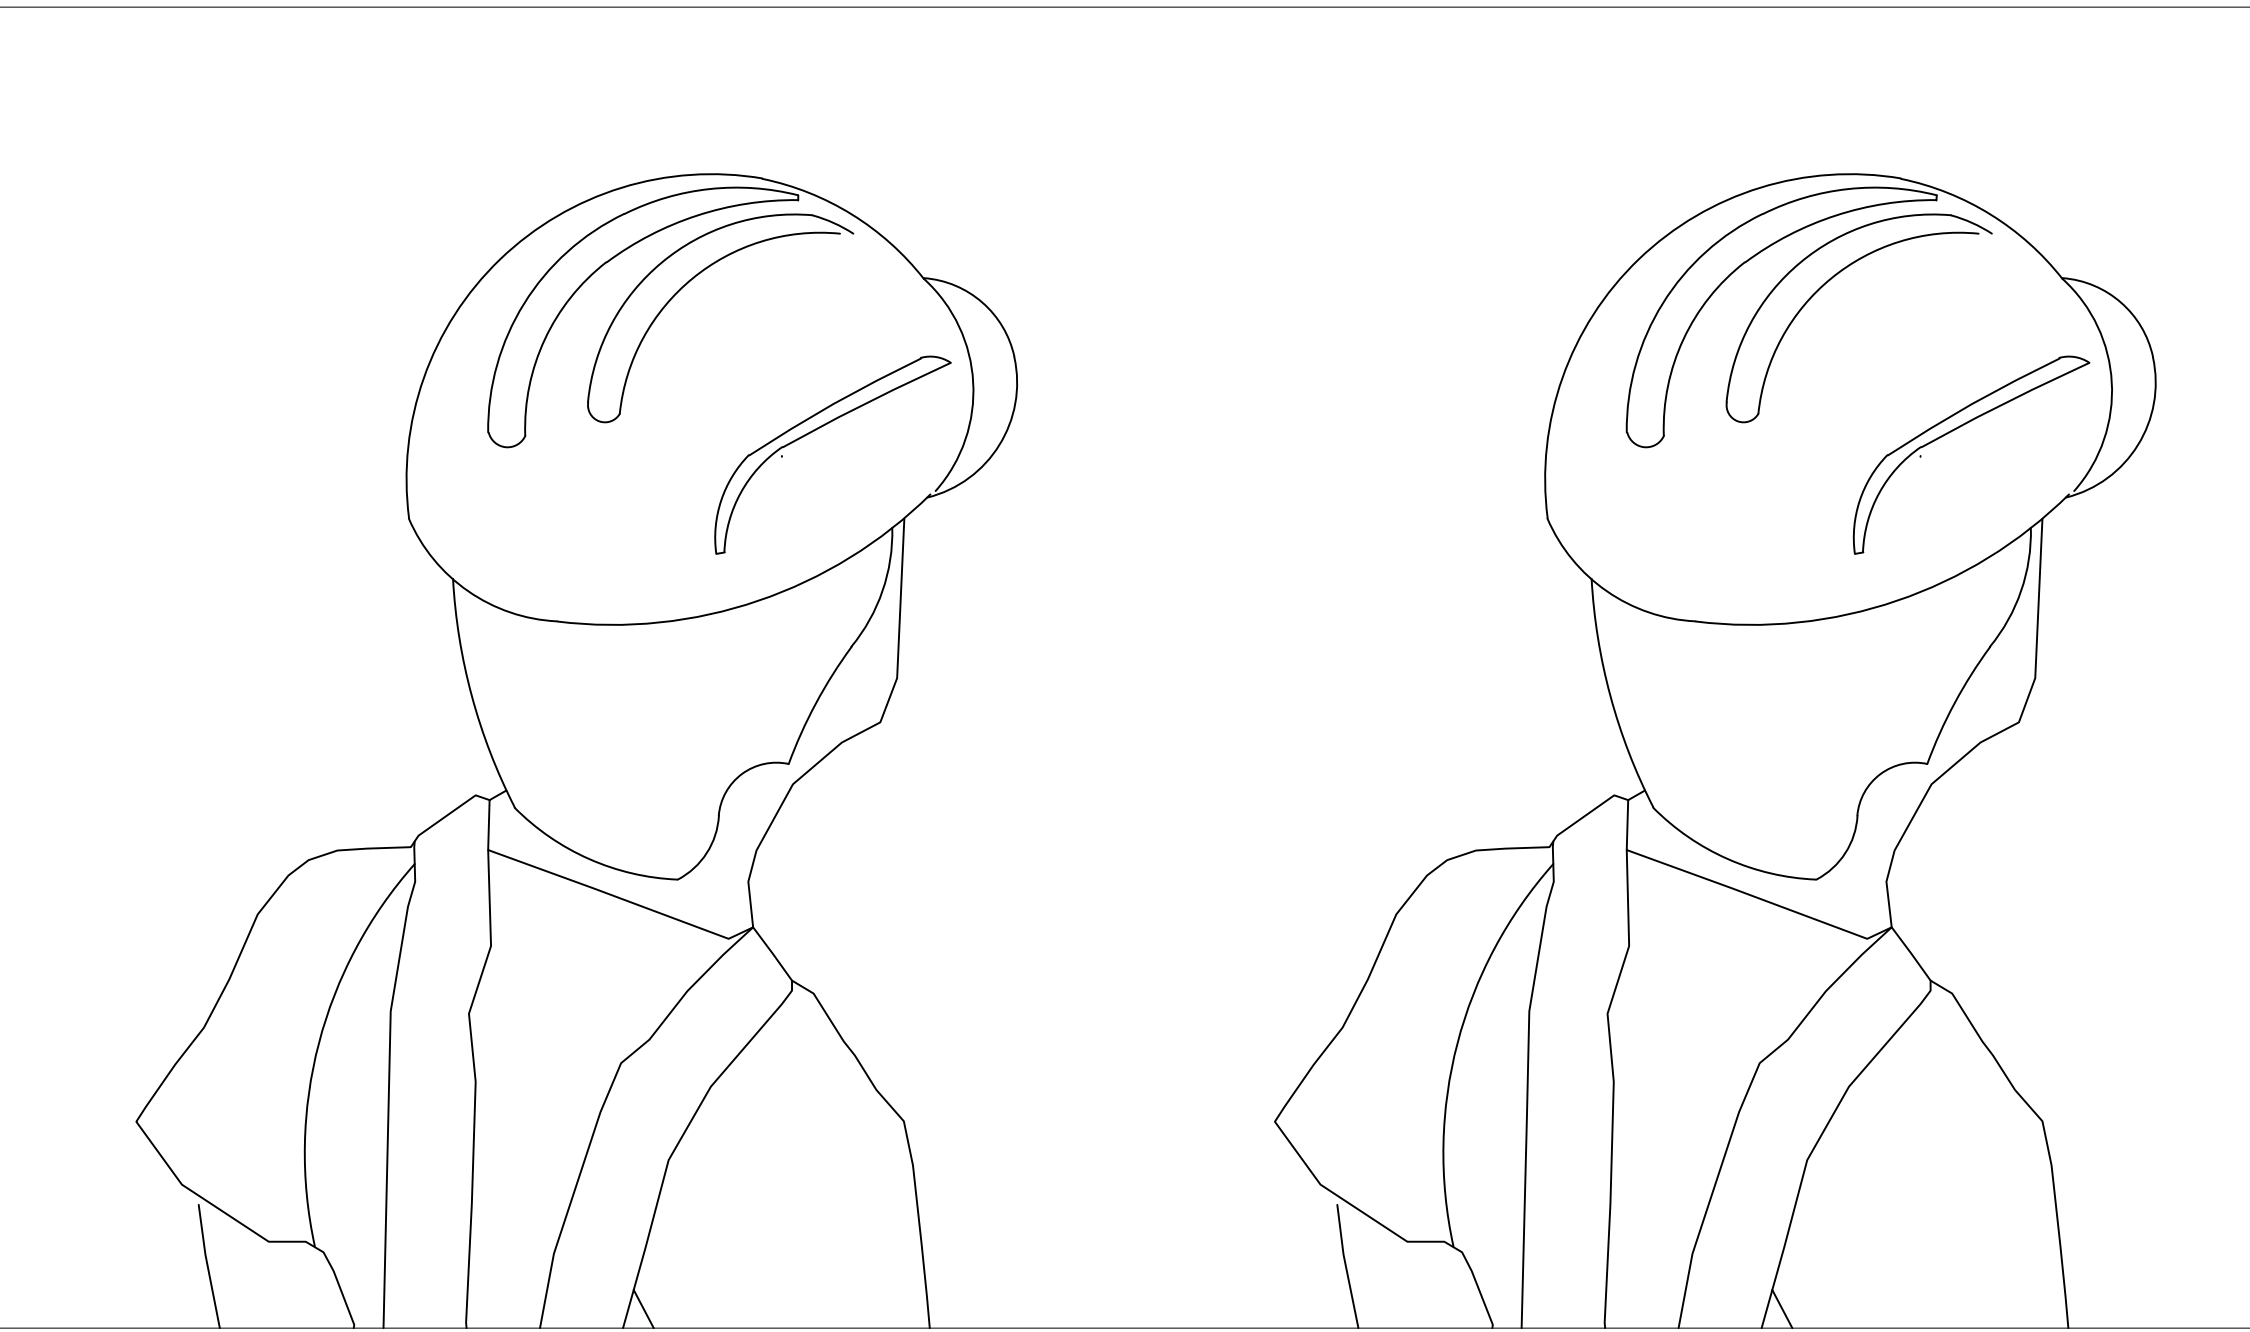

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: Shower (60 min).