

D8L408BS01A

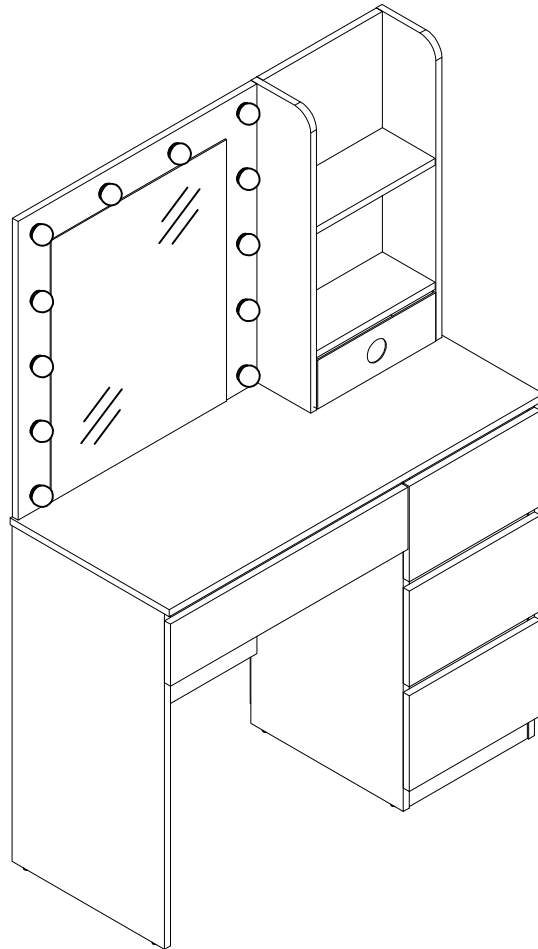


As this item contains many parts, please read the installation instruction carefully before installation . Please use tools properly and carefully. If you have any questions about the product and installation, please contact us.

hosoteservice@gmail.com

Our professional after-sales team will serve you online all day.

Before You Start

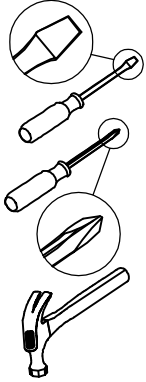

- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. (Assembly speed can be increased by using electric screwdriver)

Helpful Hints


PEOPLE NEEDED FOR ASSEMBLY: 1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an **R** (right) and **L** (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.
- Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.




Board Identification

Not actual size

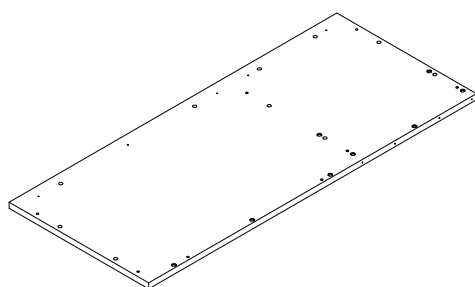


Ⓐ

TOP
Qty:1

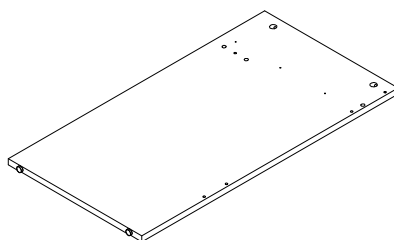


Ⓑ

LEFT SIDE PANEL
Qty:1

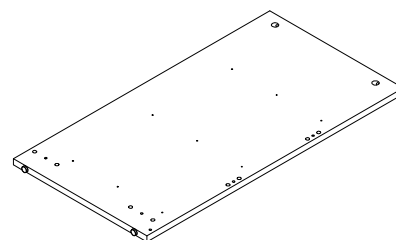


Ⓒ

RIGHT SIDE PANEL
Qty:1

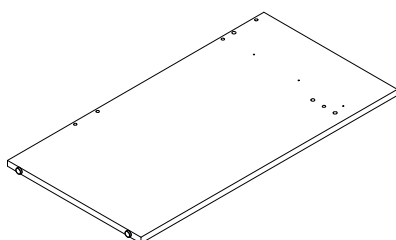


Ⓓ

MIDDLE PANEL
Qty:1

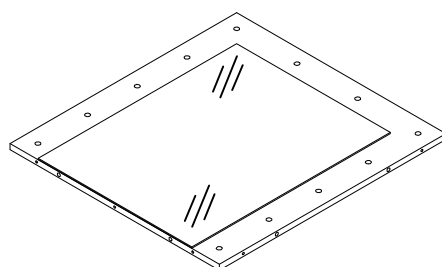


Ⓔ

DRESSING MIRROR
Qty:1

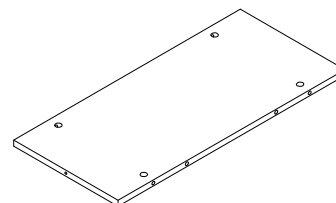


Ⓕ

UPPER BACKPANEL
Qty:1

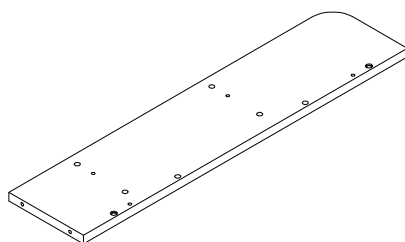


Ⓖ

UPPER LEFT SIDE PANEL
Qty:1

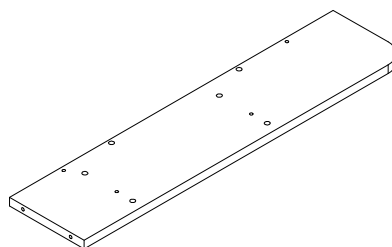

Ⓗ

UPPER RIGHT SIDE PANEL
Qty:1

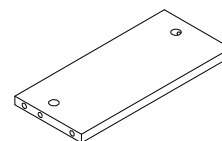


Ⓘ

FIXED SHELF
Qty:2


Board Identification

Not actual size

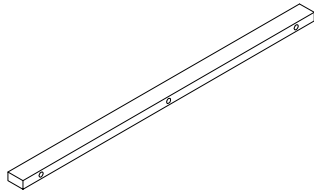


ⓐ

RAIL
Qty:1




ⓑ

RAIL
Qty:1

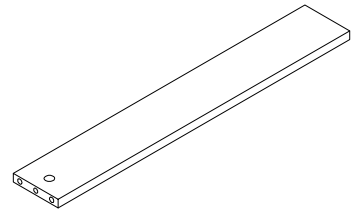


ⓒ

LEFT FRONT CROSS MEMBER
Qty:1

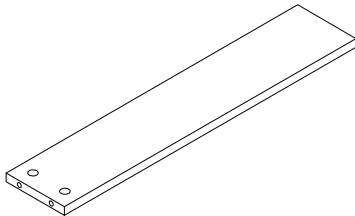


ⓓ

LOWER LEFT REAR RAIL
Qty:1

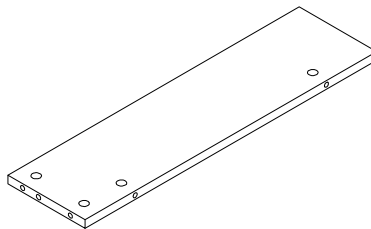


ⓔ

LEFT REAR PANEL
Qty:1




ⓕ

RIGHT FRONT SIDE MEMBER
Qty:2

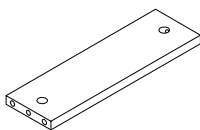


ⓖ

RIGHT BACK RAIL
Qty:1

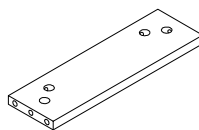

ⓗ

RIGHT FRONT RAIL
Qty:1




ⓘ

BOTTOM FRONT RAIL
Qty:1


Board Identification

Not actual size

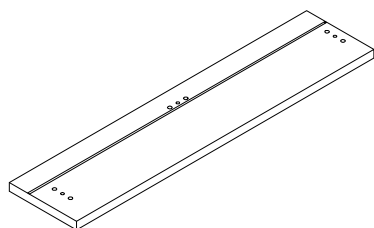


Ⓢ

LARGE DRAWER FRONT
Qty:1

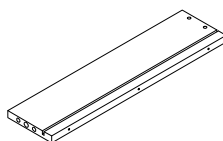


Ⓣ

DRAWER LEFT PANEL
Qty:1

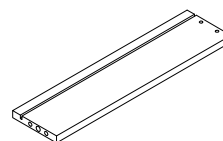


Ⓤ

DRAWER RIGHT PANEL
Qty:1

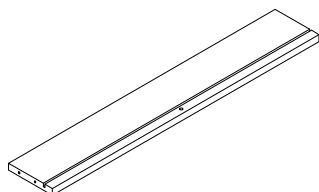


Ⓥ

DRAWER BACK PANEL
Qty:1

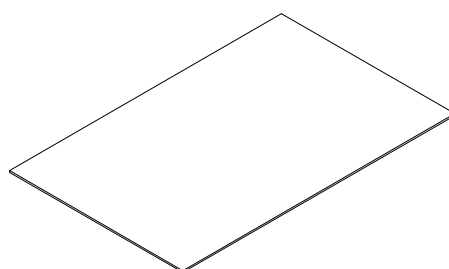


Ⓦ

BOTTOM OF DRAWER
Qty:1

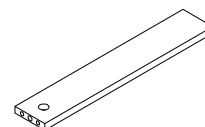


Ⓧ

DRAWER SUPPORT RAIL
Qty:1

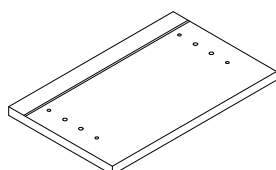


Ⓨ

SMALL DRAWER FRONT
Qty:3

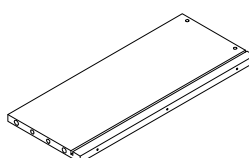

Ⓩ

DRAWER LEFT PANEL
Qty:3

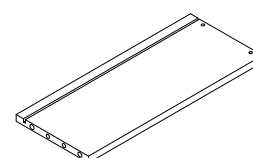


ⒶⒶ

DRAWER RIGHT PANEL
Qty:3

Board Identification


Not actual size

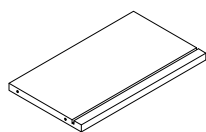

(BB)

DRAWER BACK PANEL


Qty:3

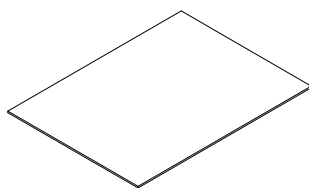

(CC)

BOTTOM OF DRAWER


Qty:3

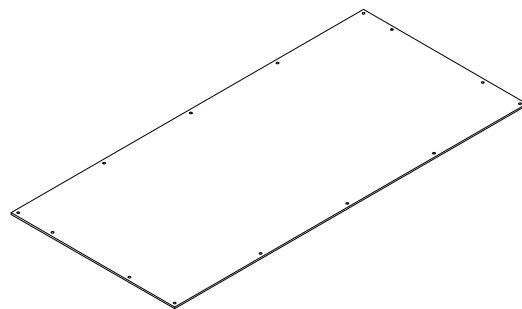

(DD)

LOWER RIGHT REAR PANEL

Qty:1

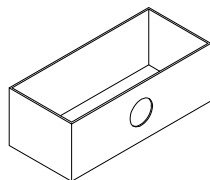


(EE)

STORAGE BOX


Qty:1

Board Identification


Not actual size

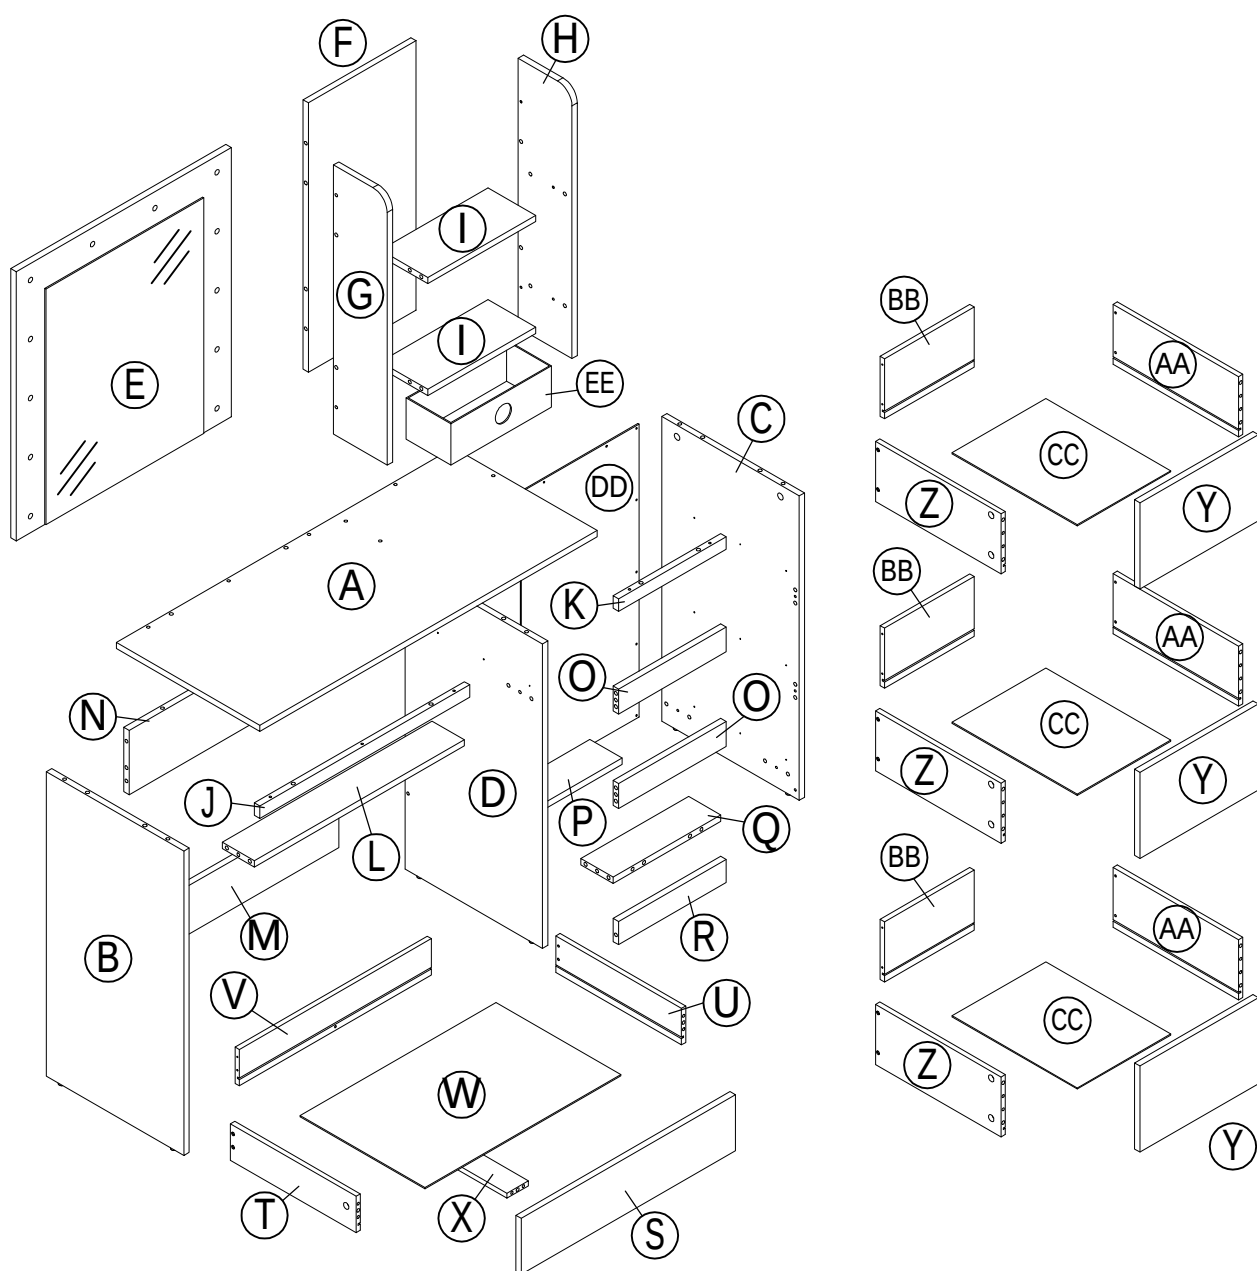


Part List

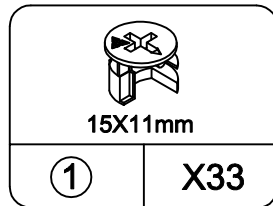


CAM LOCK
spare:3

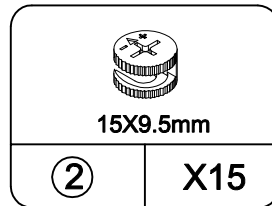


CAM LOCK
spare:2

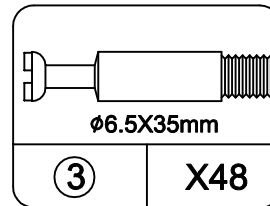


CAM BOLT
spare:3

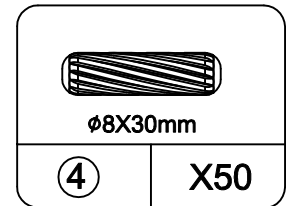


WOOD DOWEL
spare:3

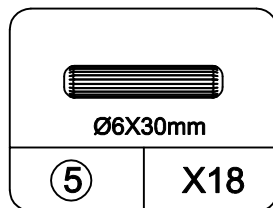


WOOD DOWEL
spare:2

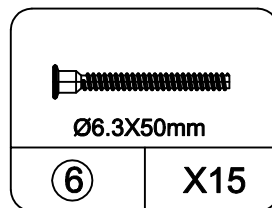


SCREW
spare:2

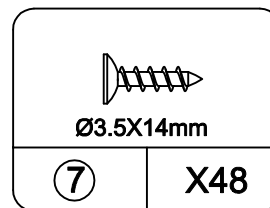


SCREW
spare:3

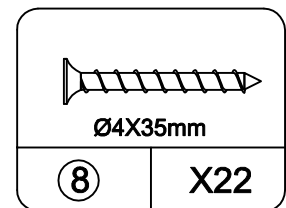


SCREW
spare:3

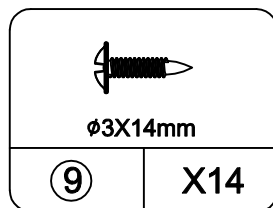


SCREW
spare:2

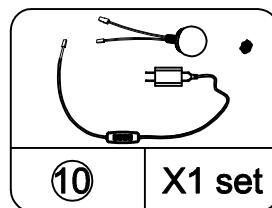


LIGHT BULB

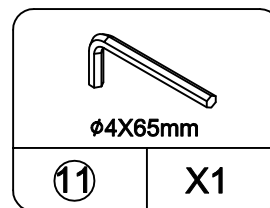


HEX KEY

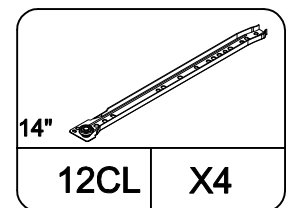


LEFT CABINET MEMBER

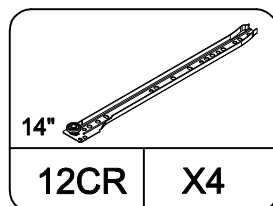


RIGHT CABINET MEMBER

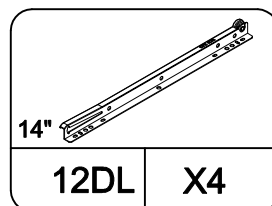

LEFT DRAWER RUNNER

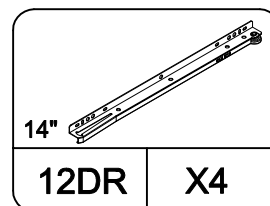


RIGHT DRAWER RUNNER

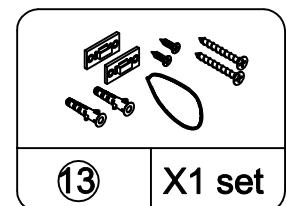

TIPPING RESTRAINT
HARDWARE KIT


Part List

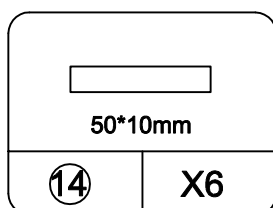







FLOOR-MATS
spare:1

Cam Lock Fastening System








Insert the cam bolt into the hole first, then insert the cam lock and lock it.

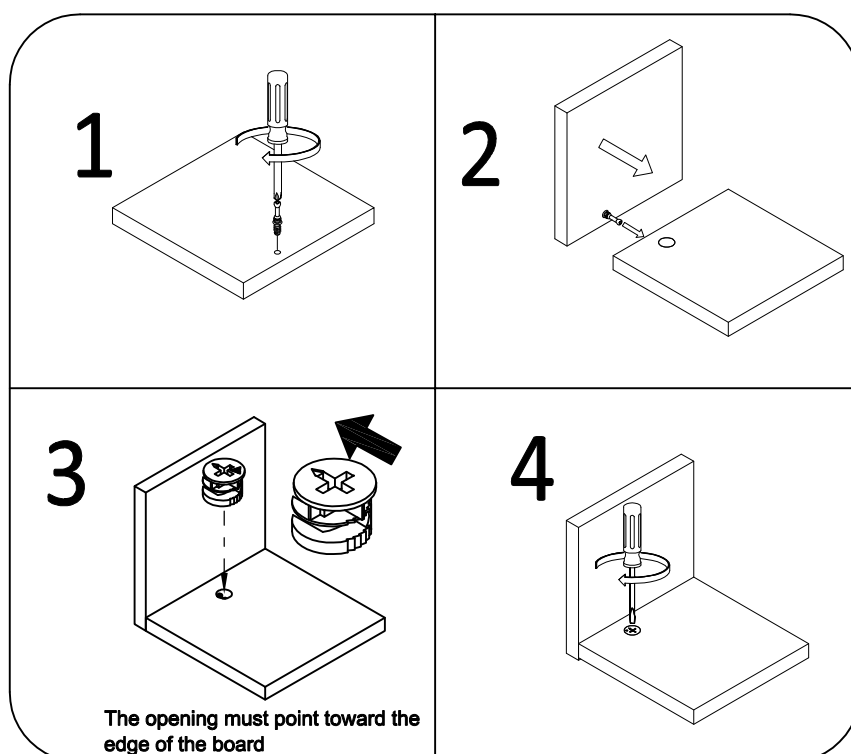








STEP1

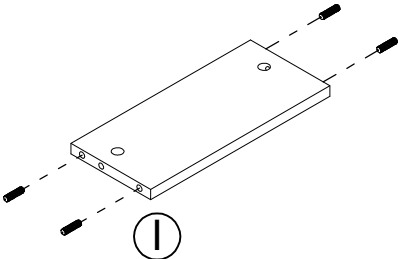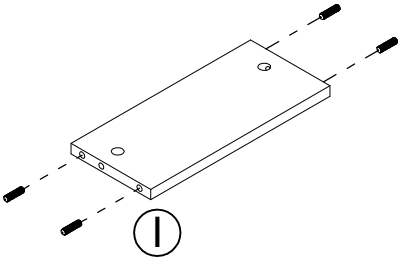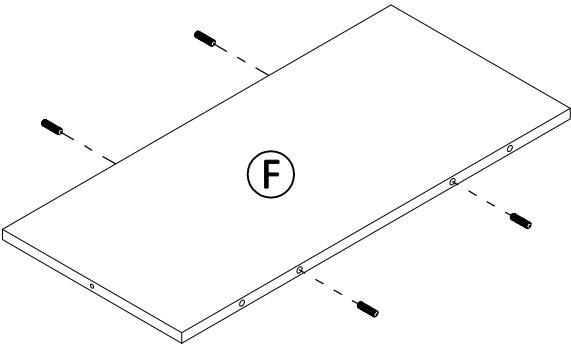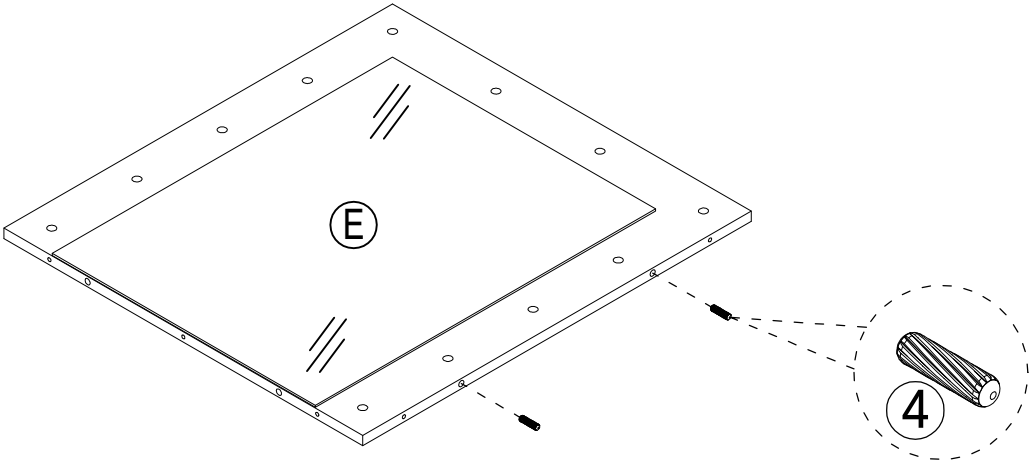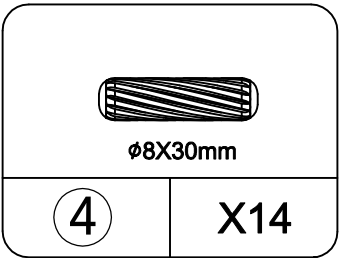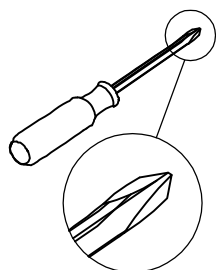


STEP2

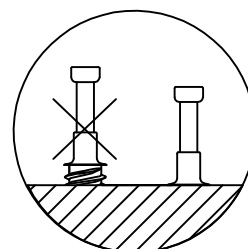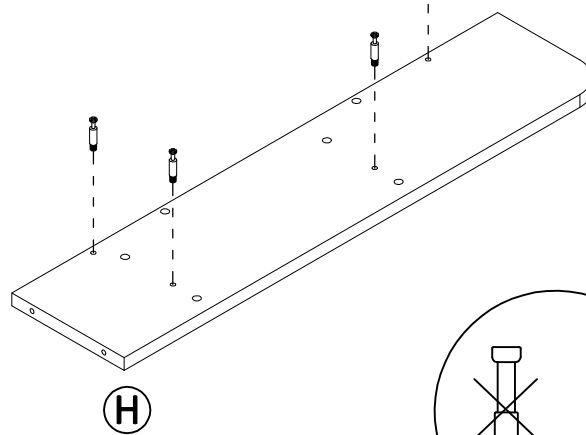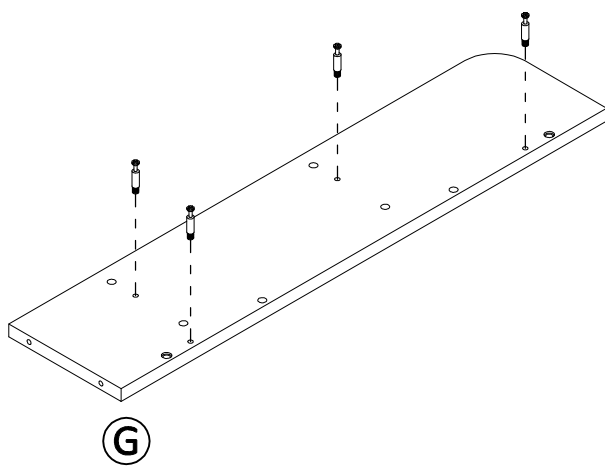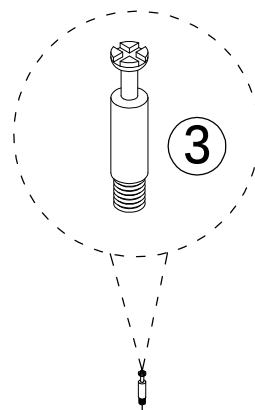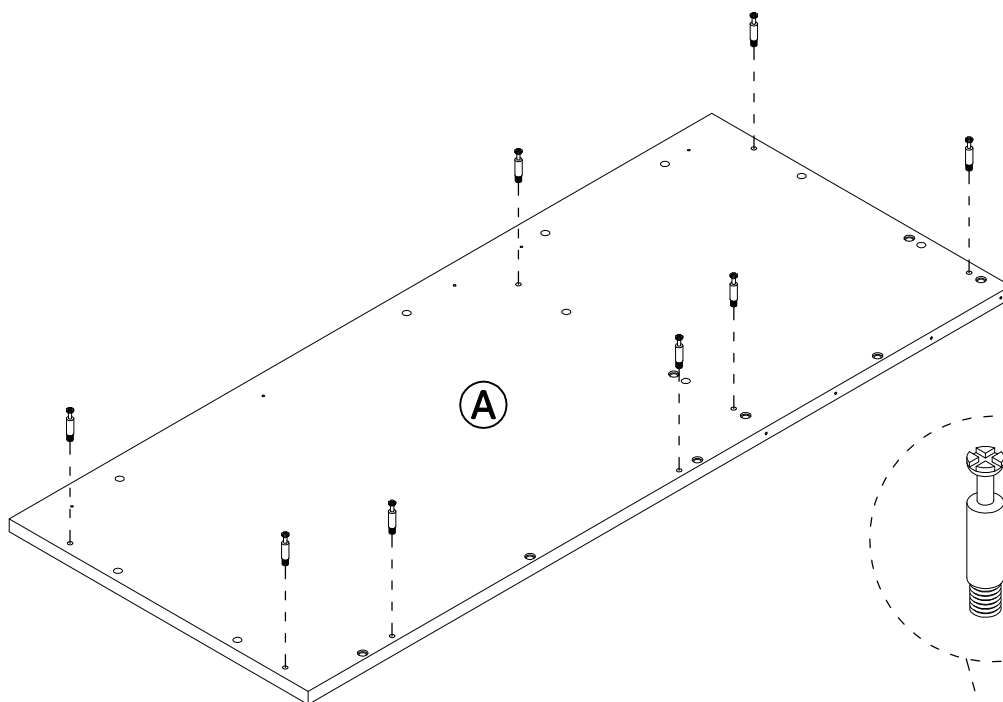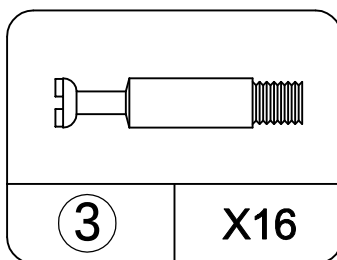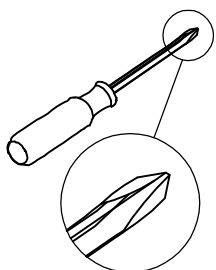


A line drawing of a screwdriver. A circular callout provides a magnified view of the tip, showing a flat, rectangular blade with a central slot.

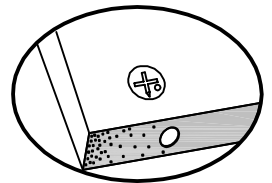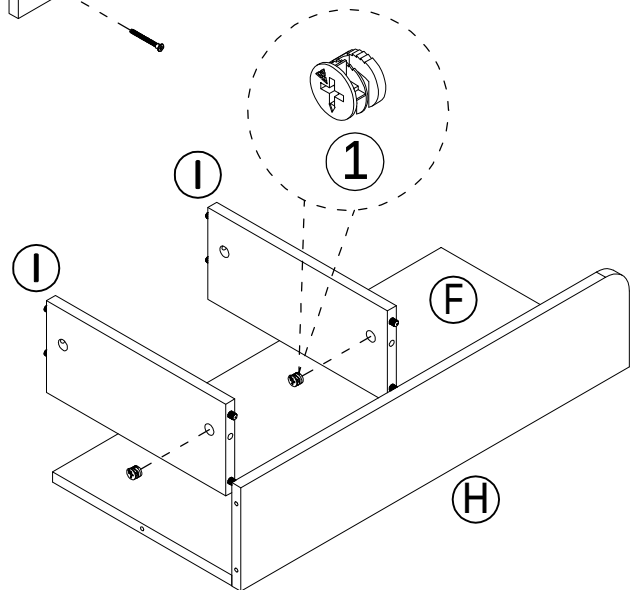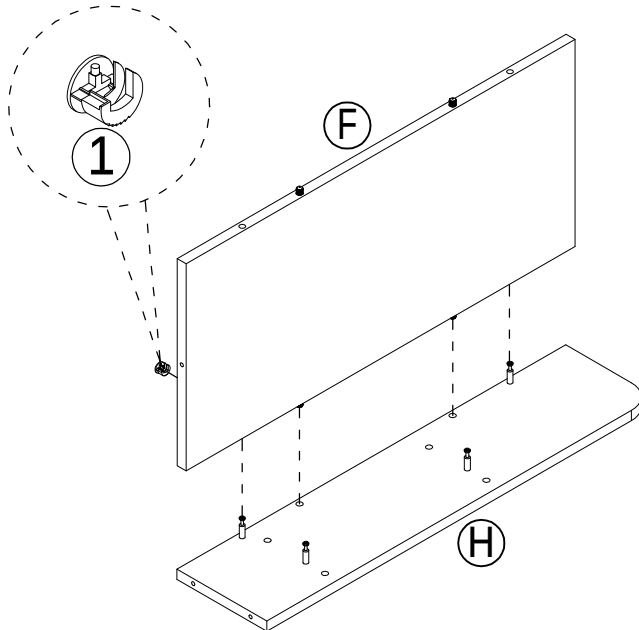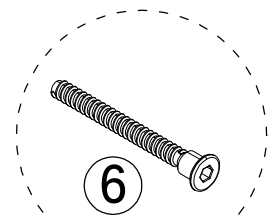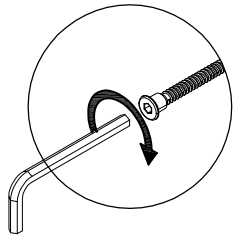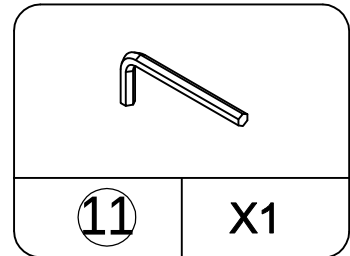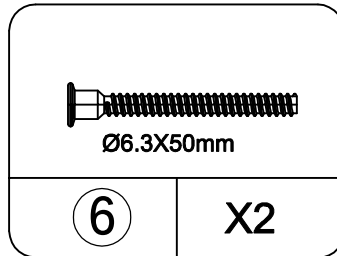

STEP4

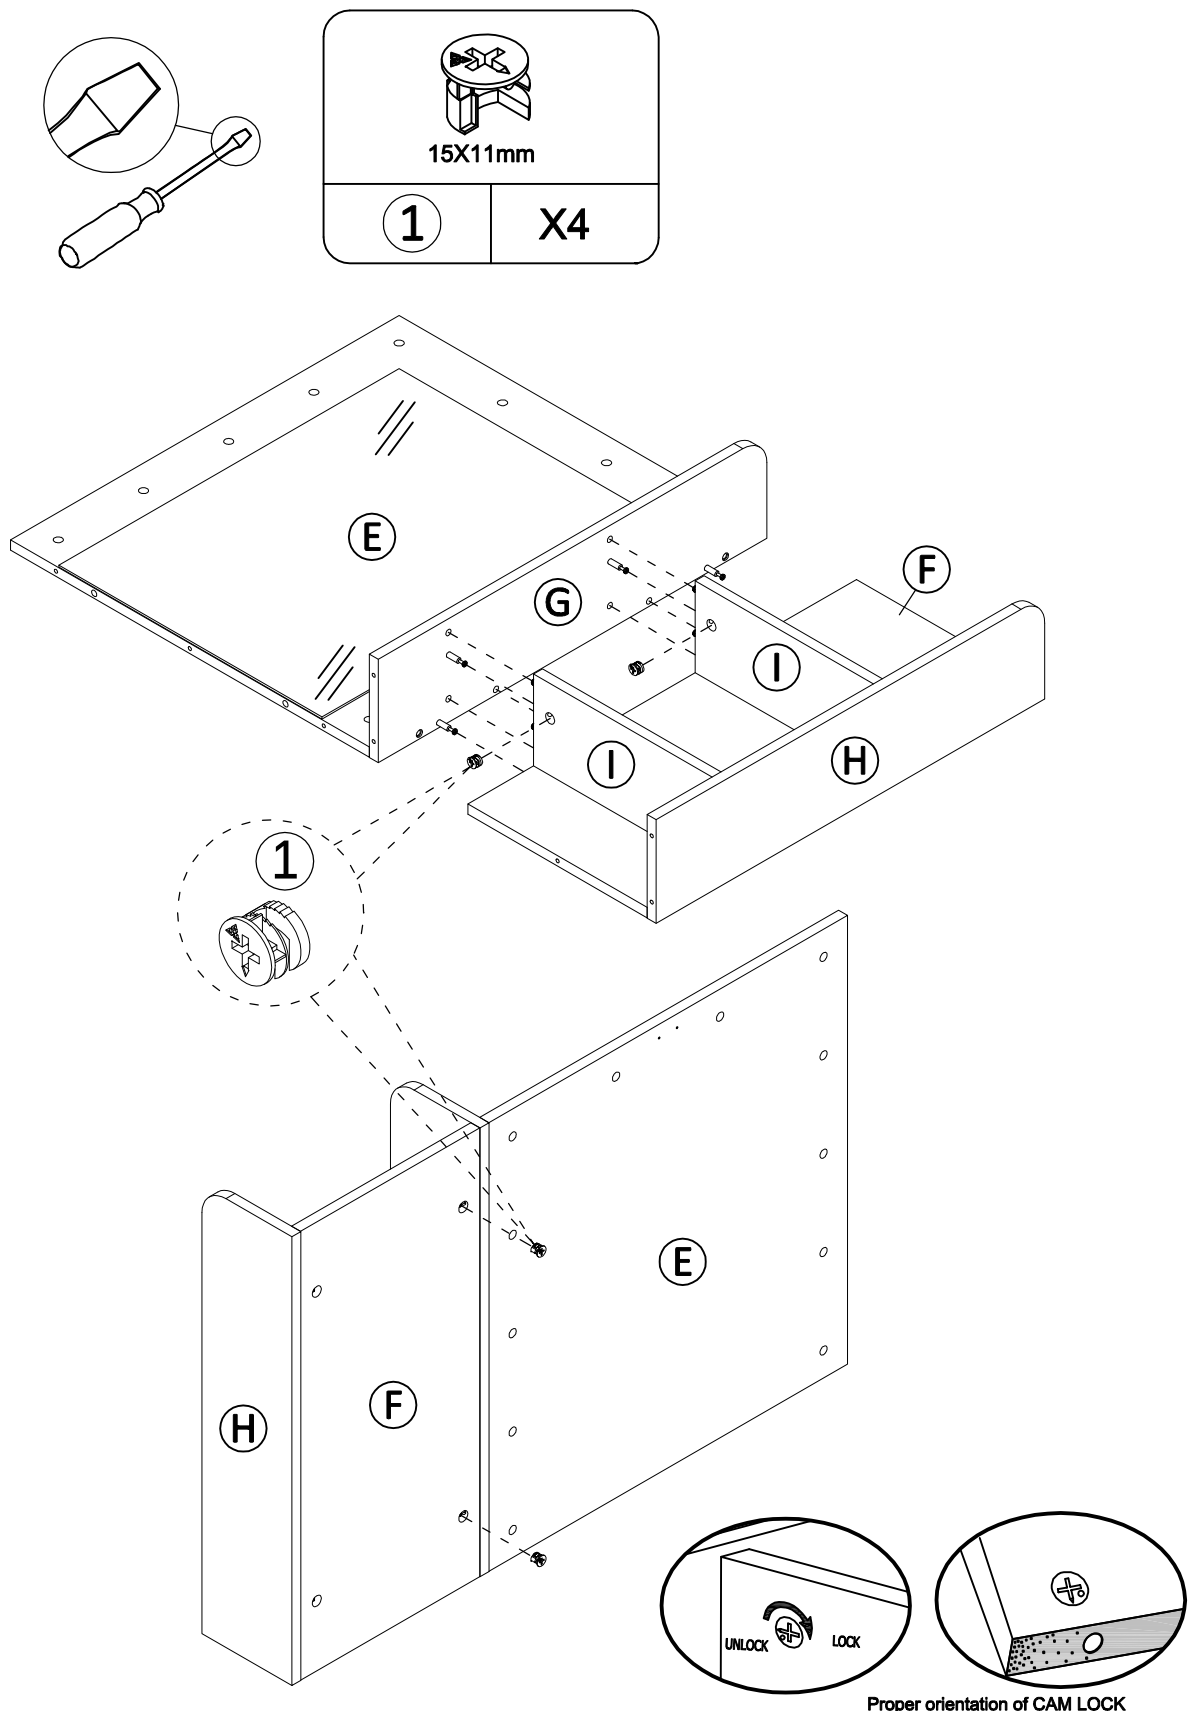


STEP5

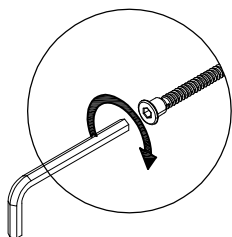









 Ø6.3X50mm	
6	X8

 Ø8X30mm	
4	X2






	
11	X1

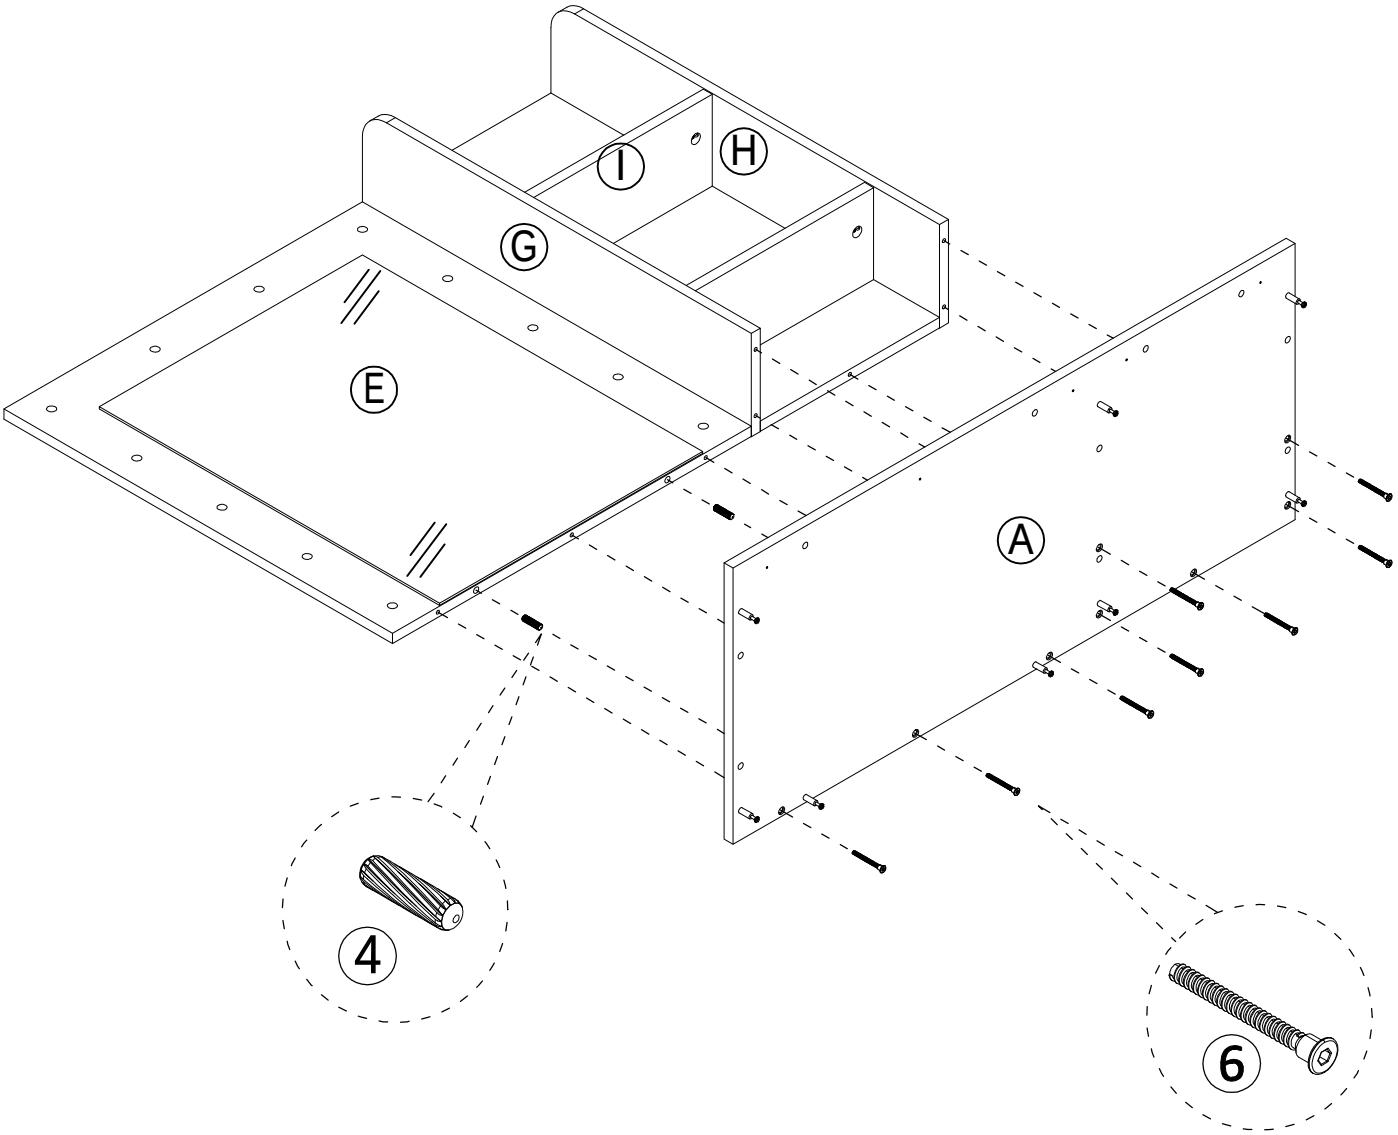







STEP6

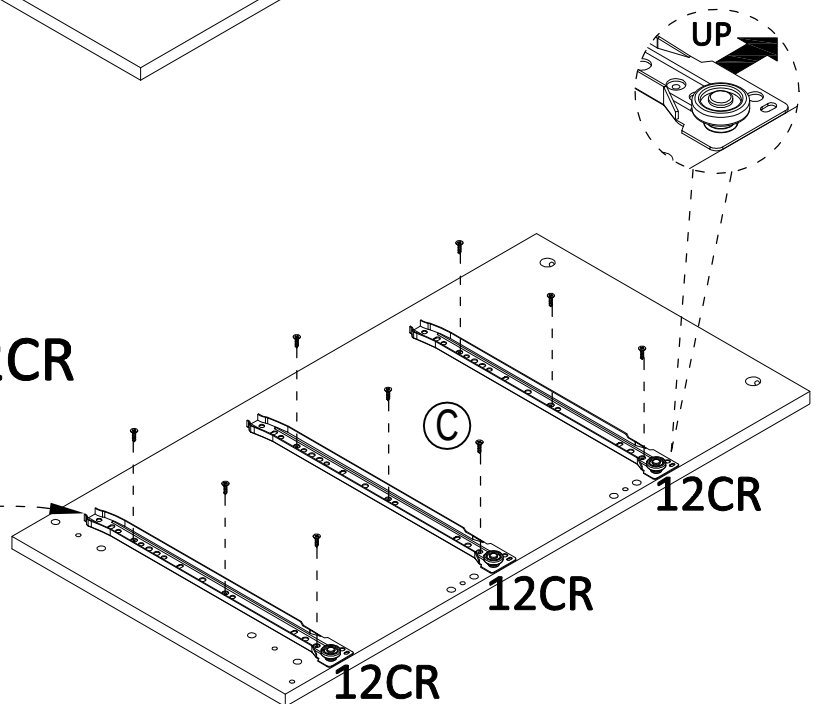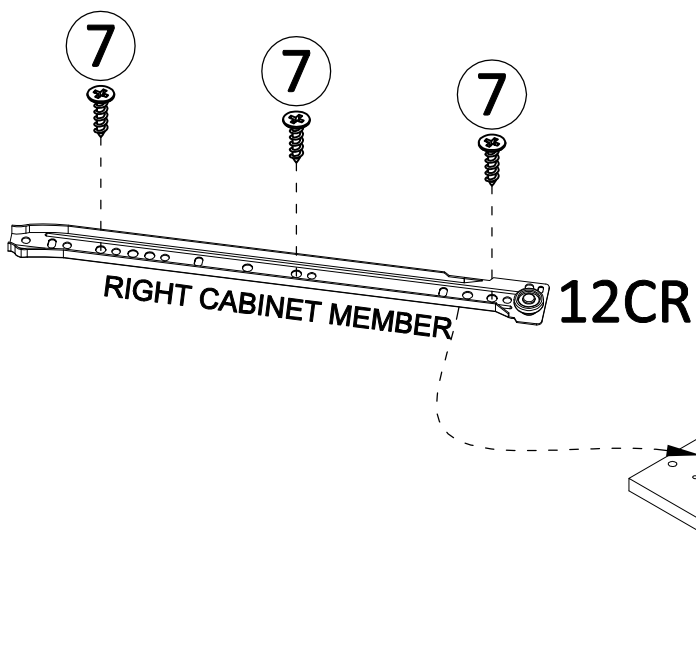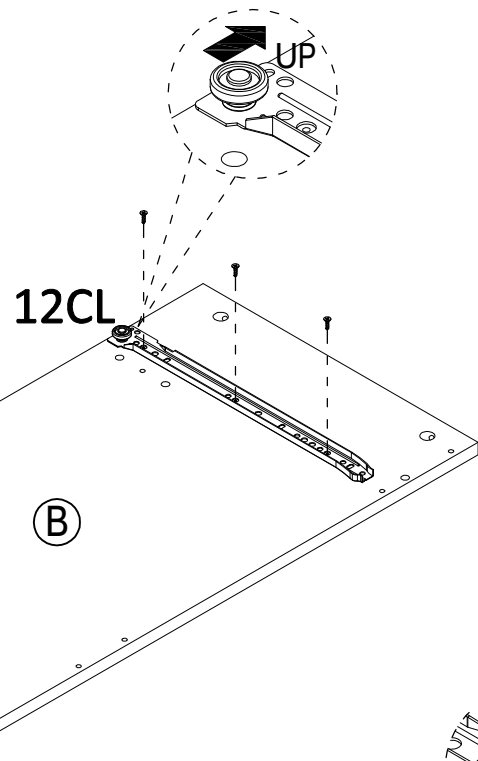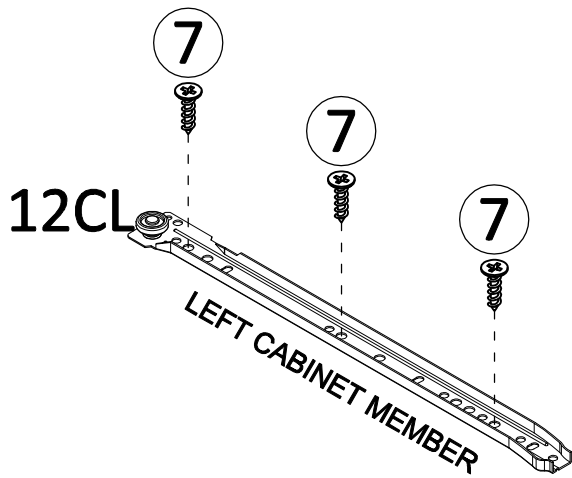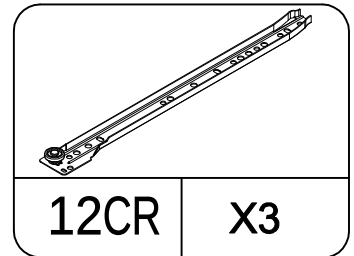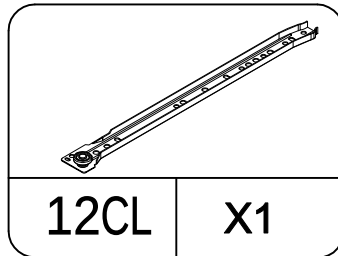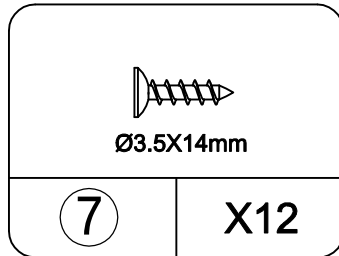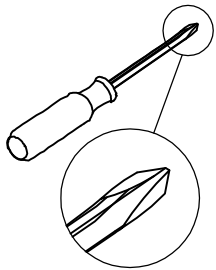







STEP 7

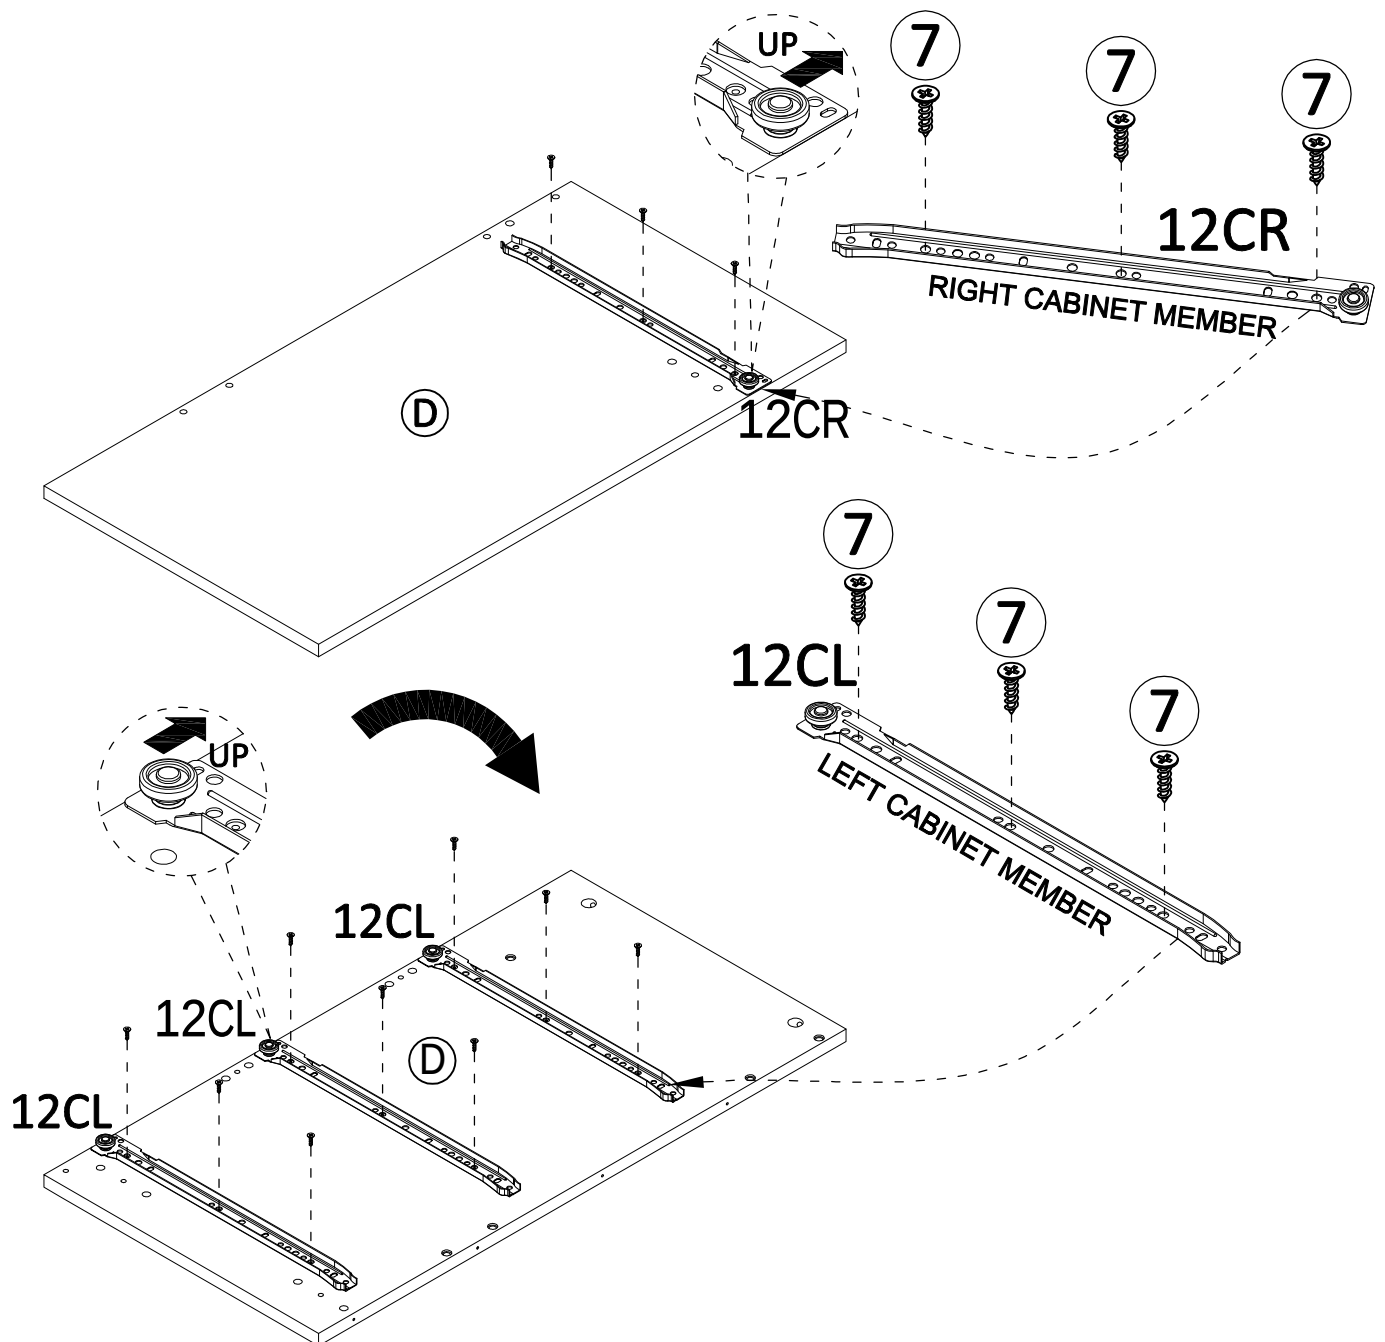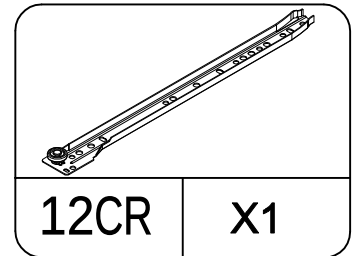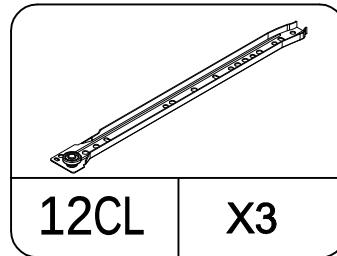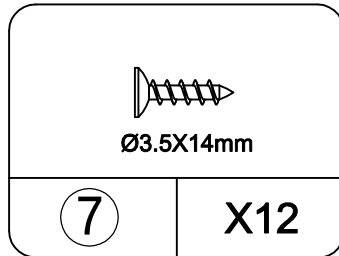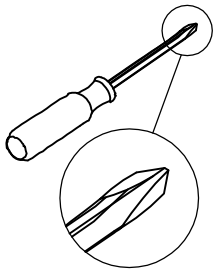








STEP8

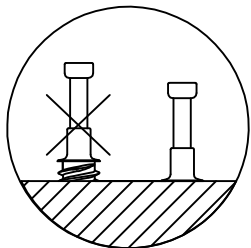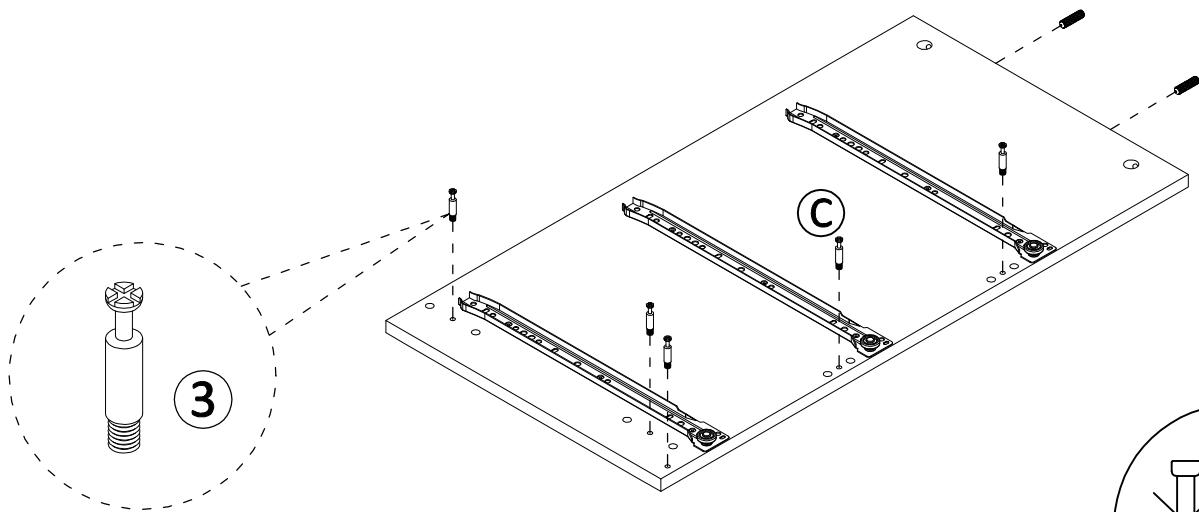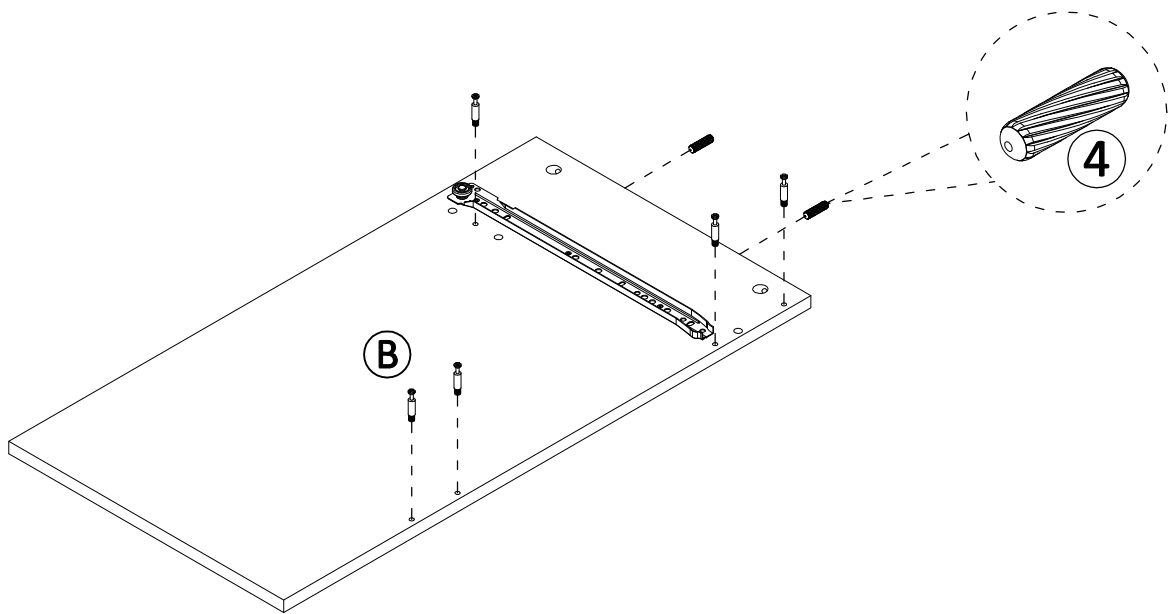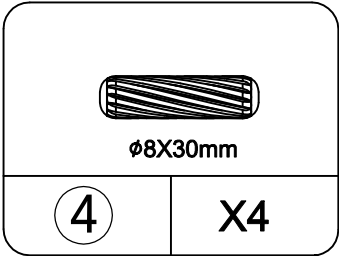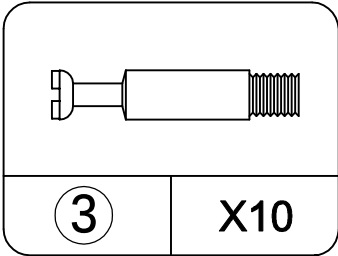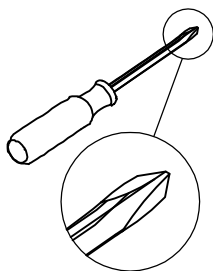




STEP9

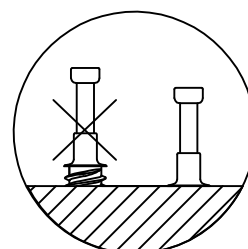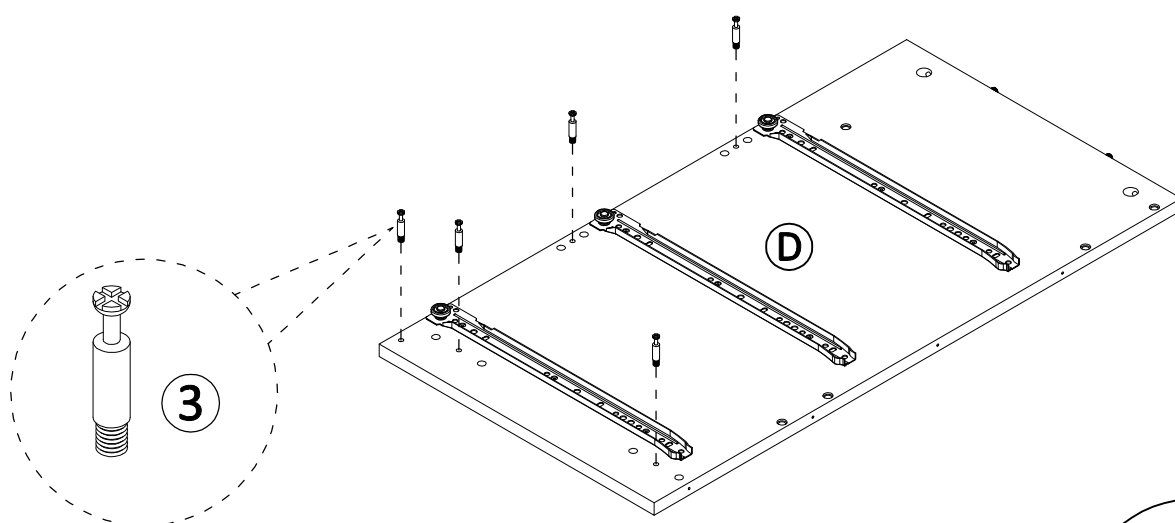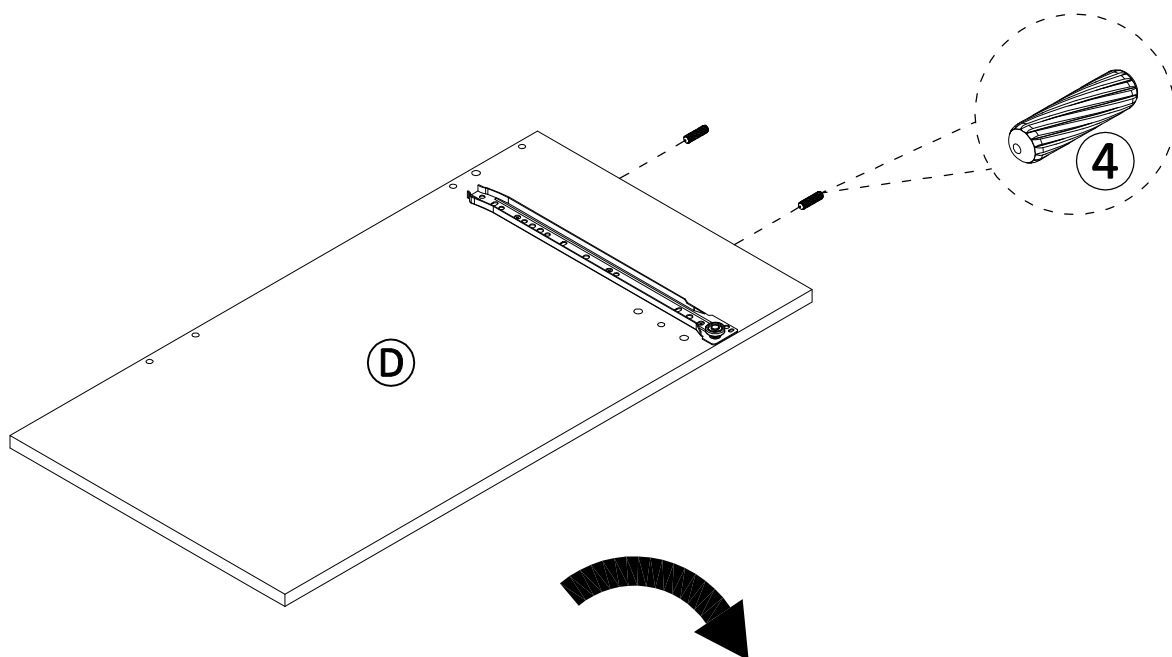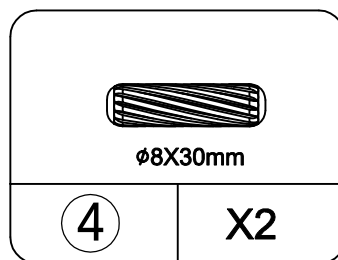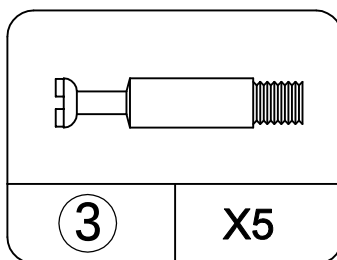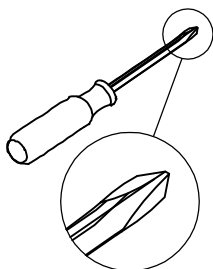











STEP10

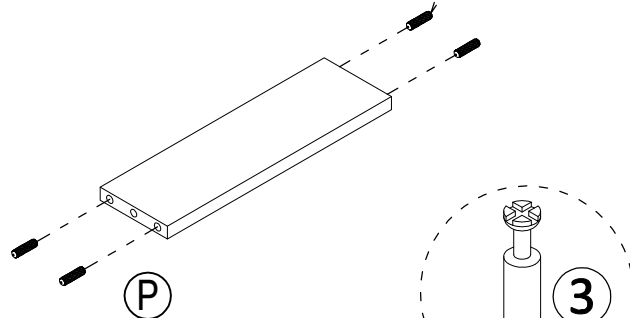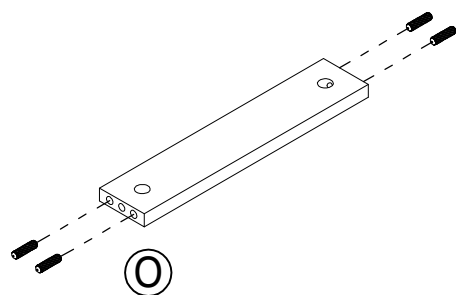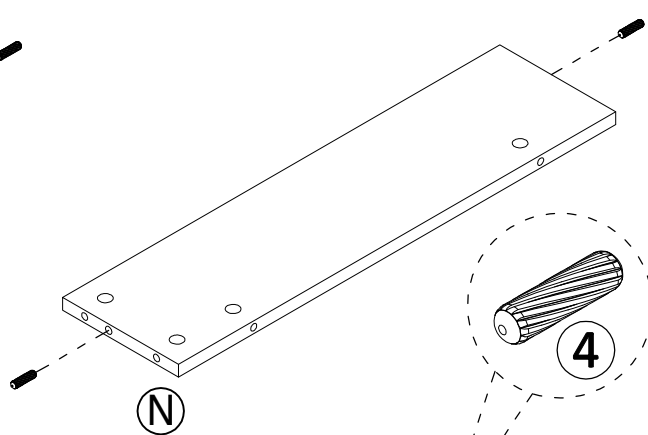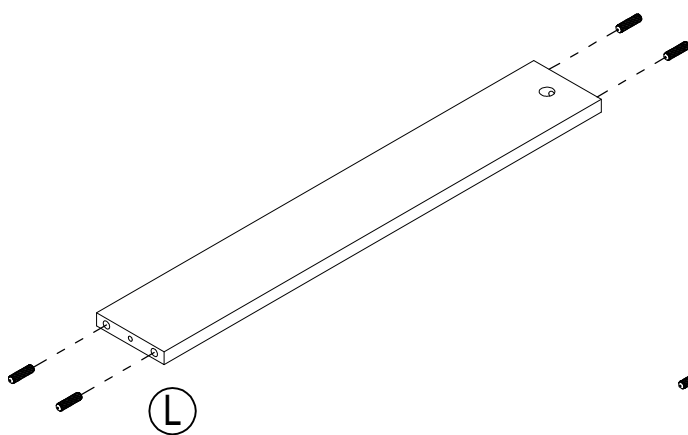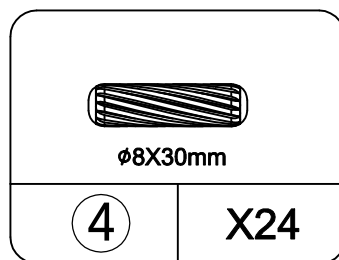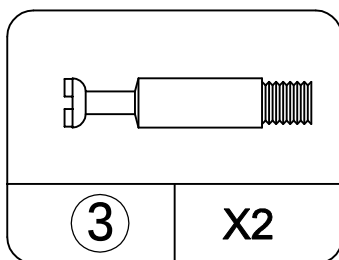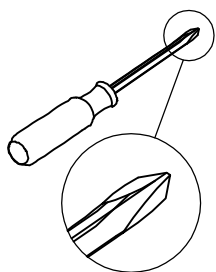

O x 2



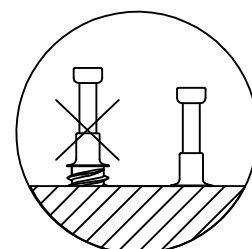
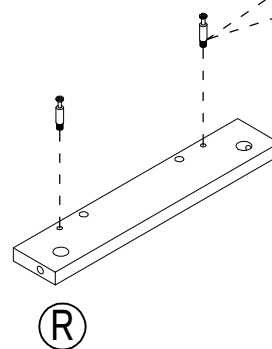
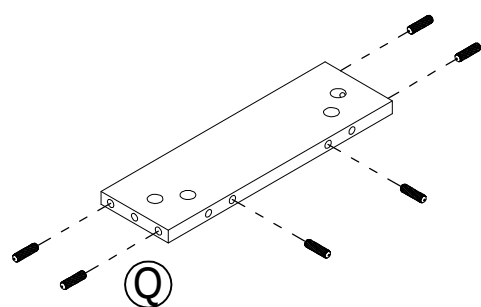


STEP11

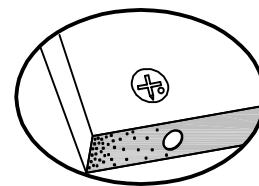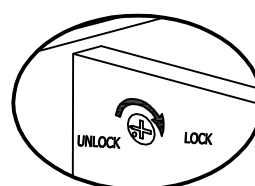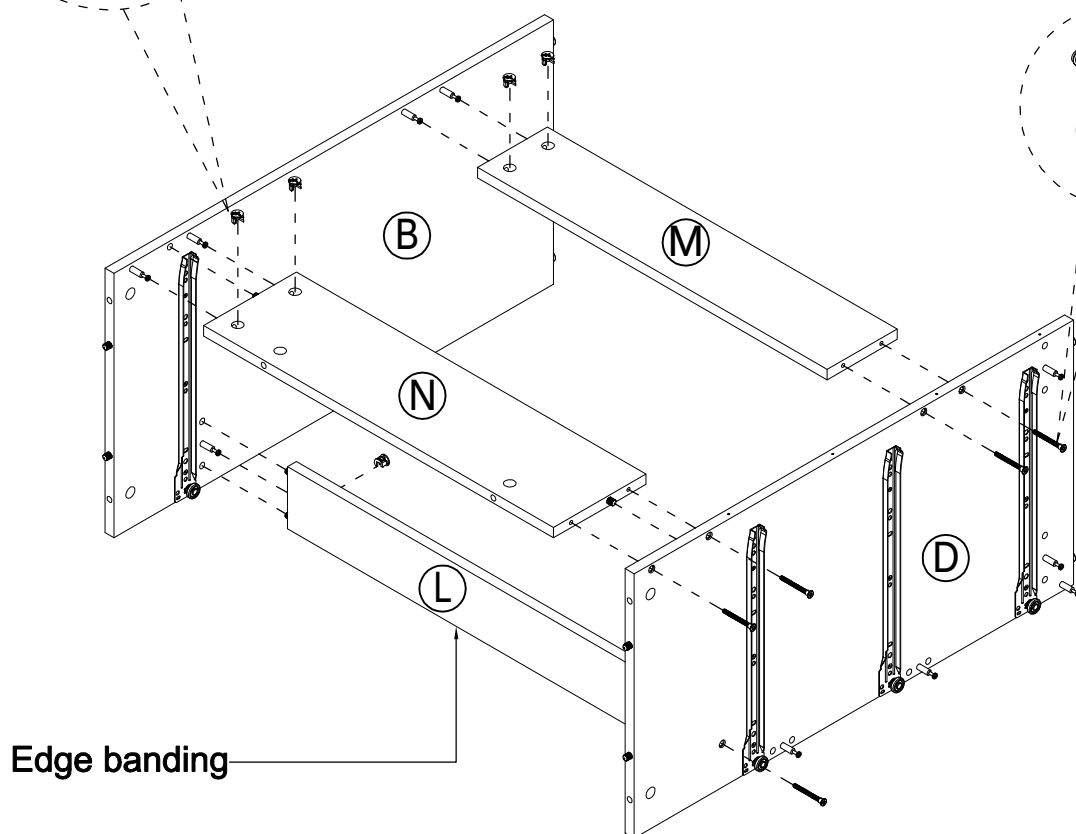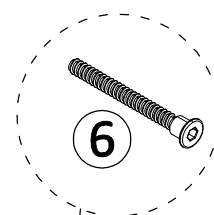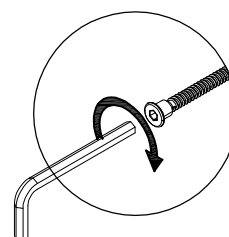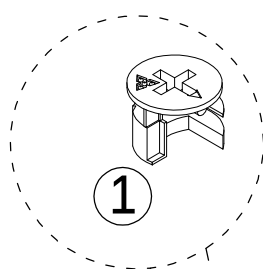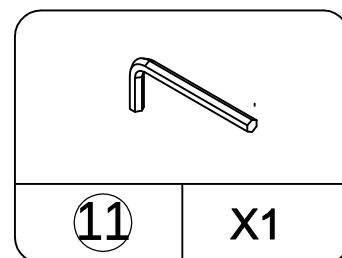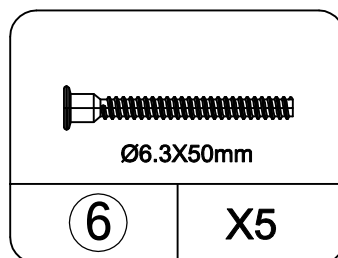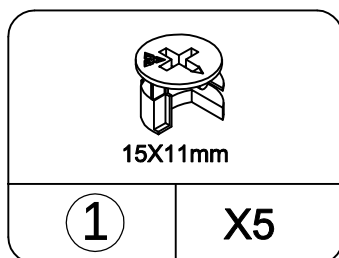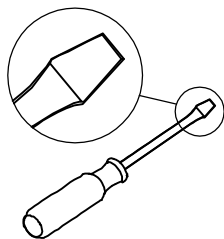






Proper orientation of CAM LOCK

STEP13

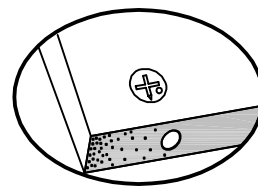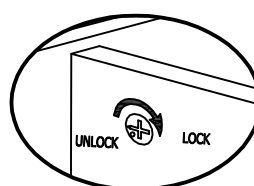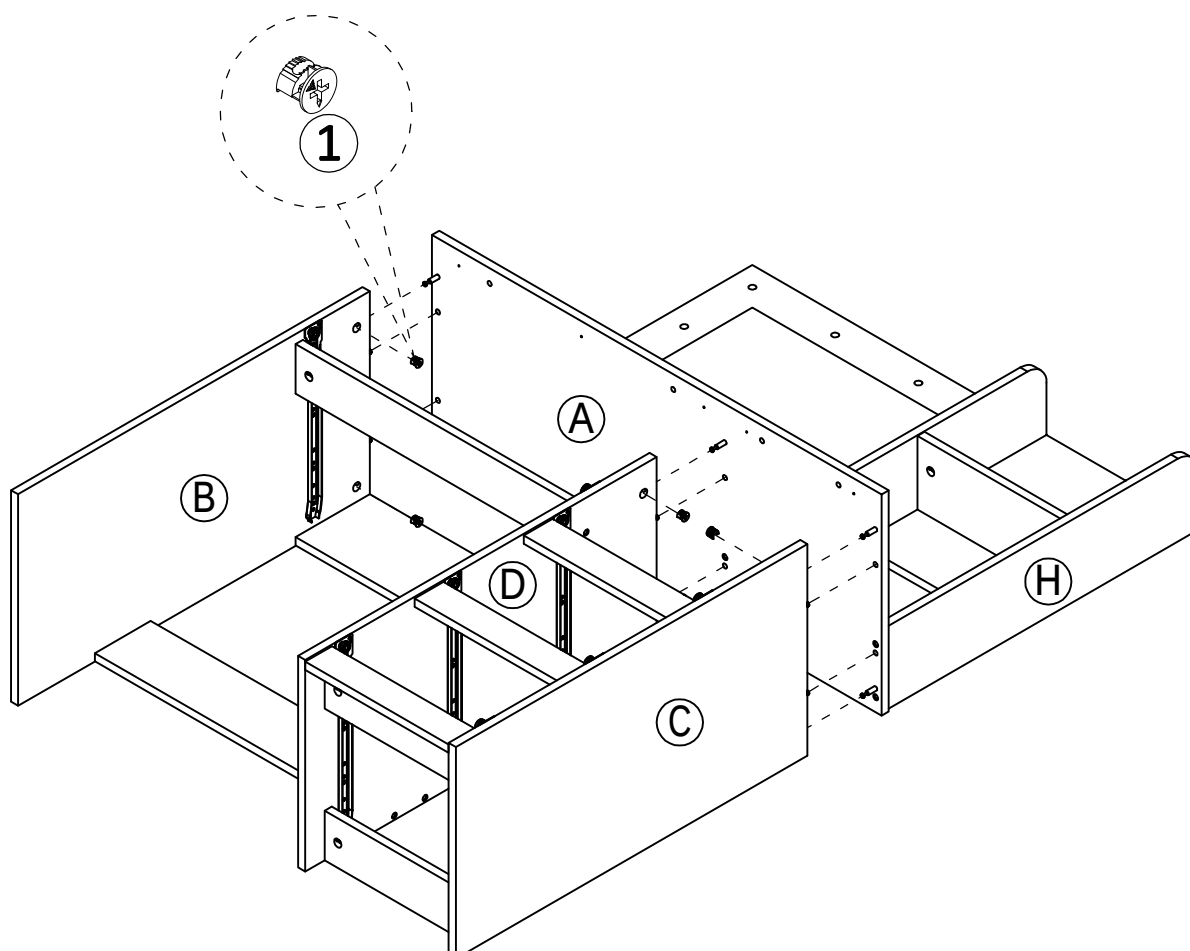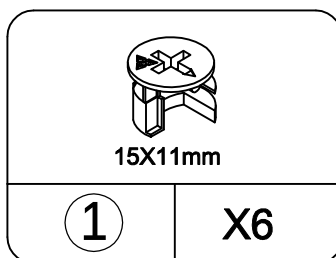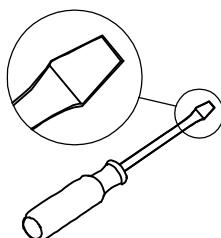






Proper orientation of CAM LOCK

STEP14

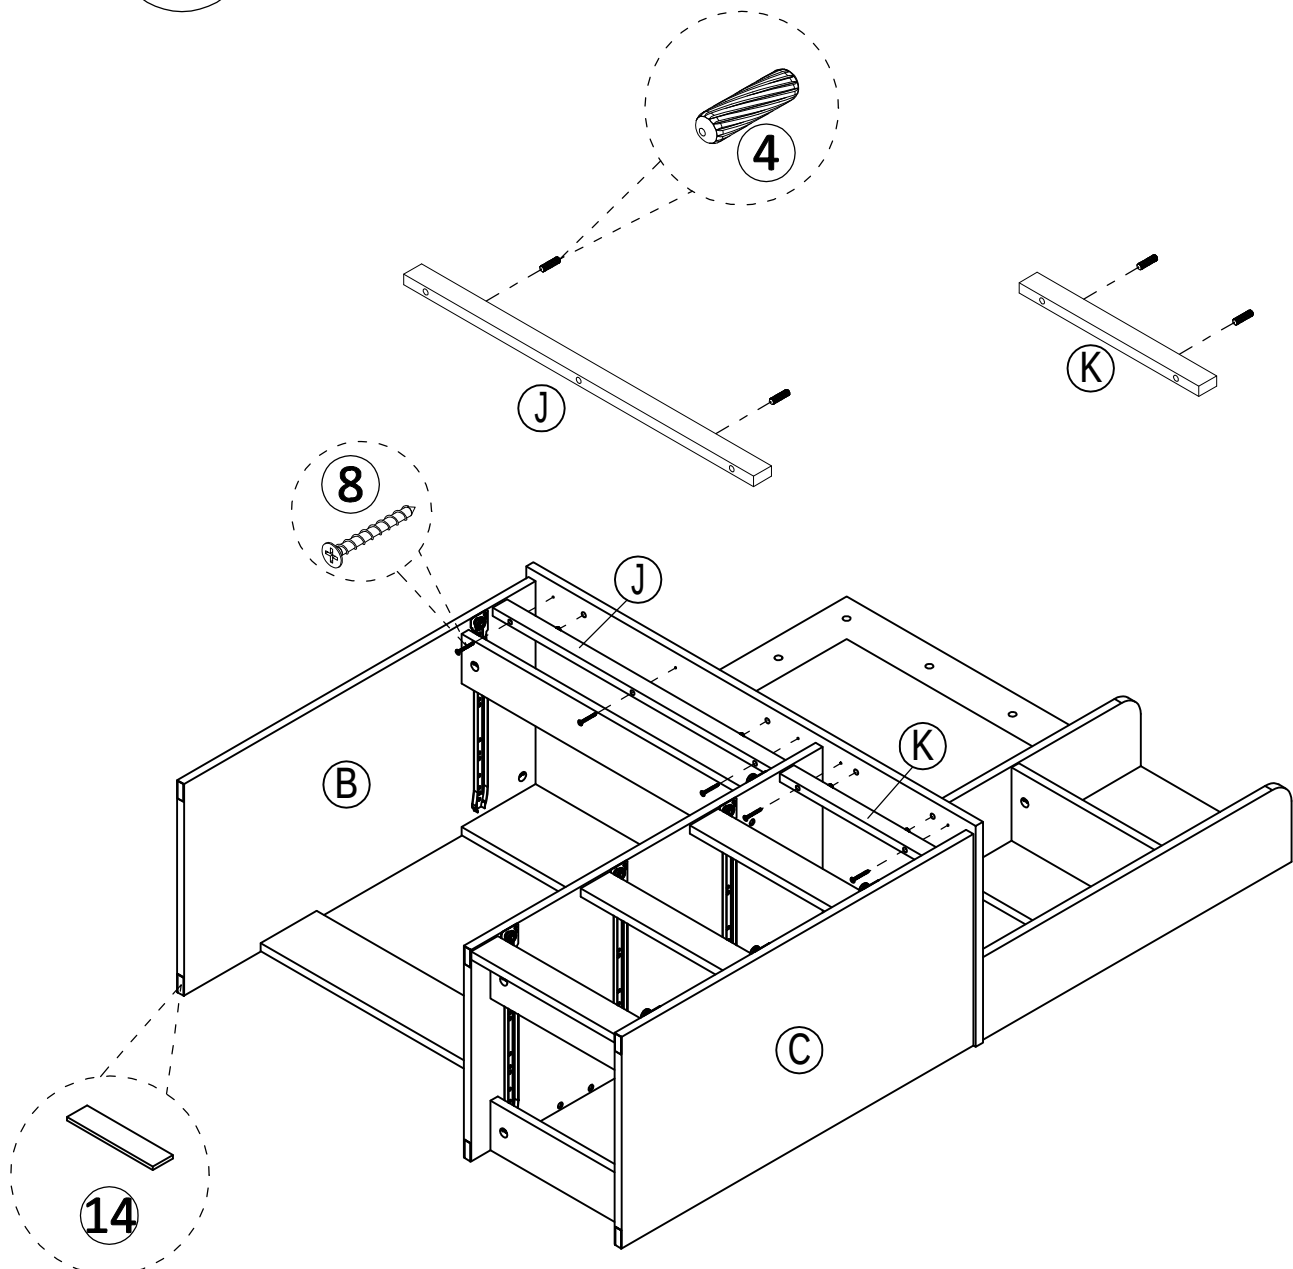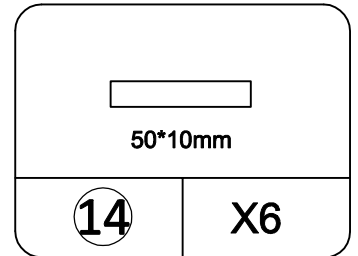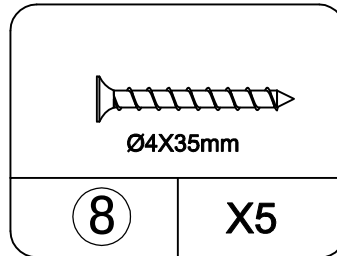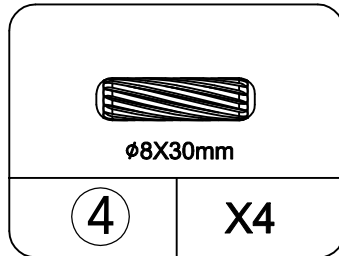
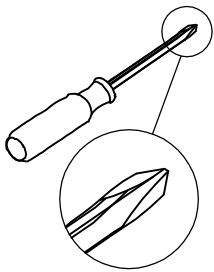


**Tear the layer off
then stick it on the
side panel**

STEP15

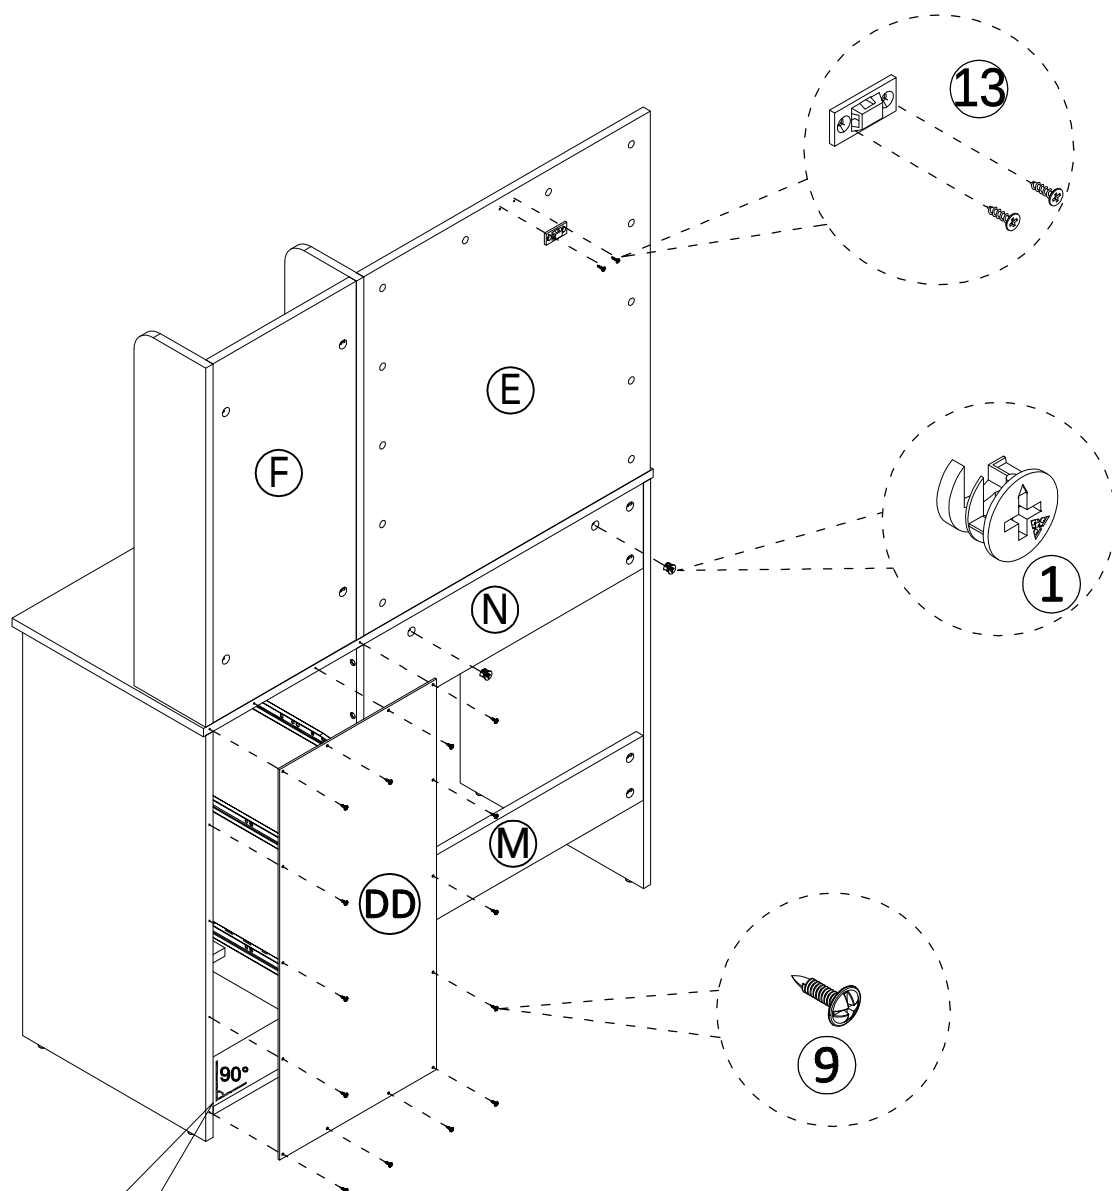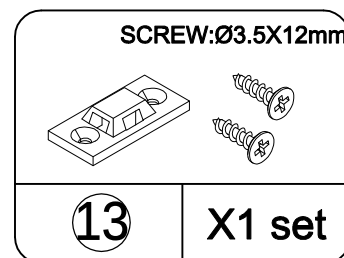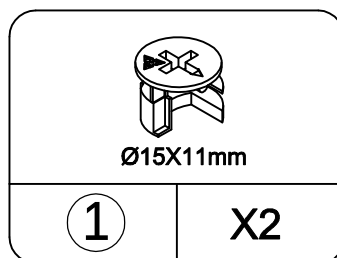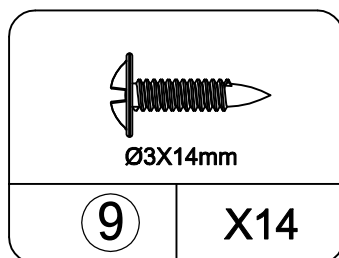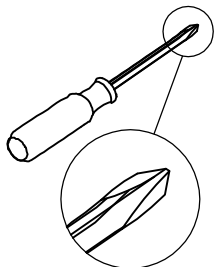


Before attaching the back panel, be sure that the unit is at 90°.


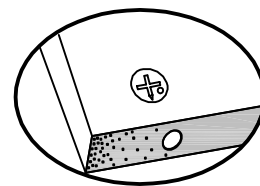
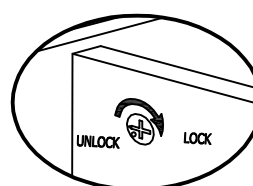


Proper orientation of CAM LOCK



STEP16

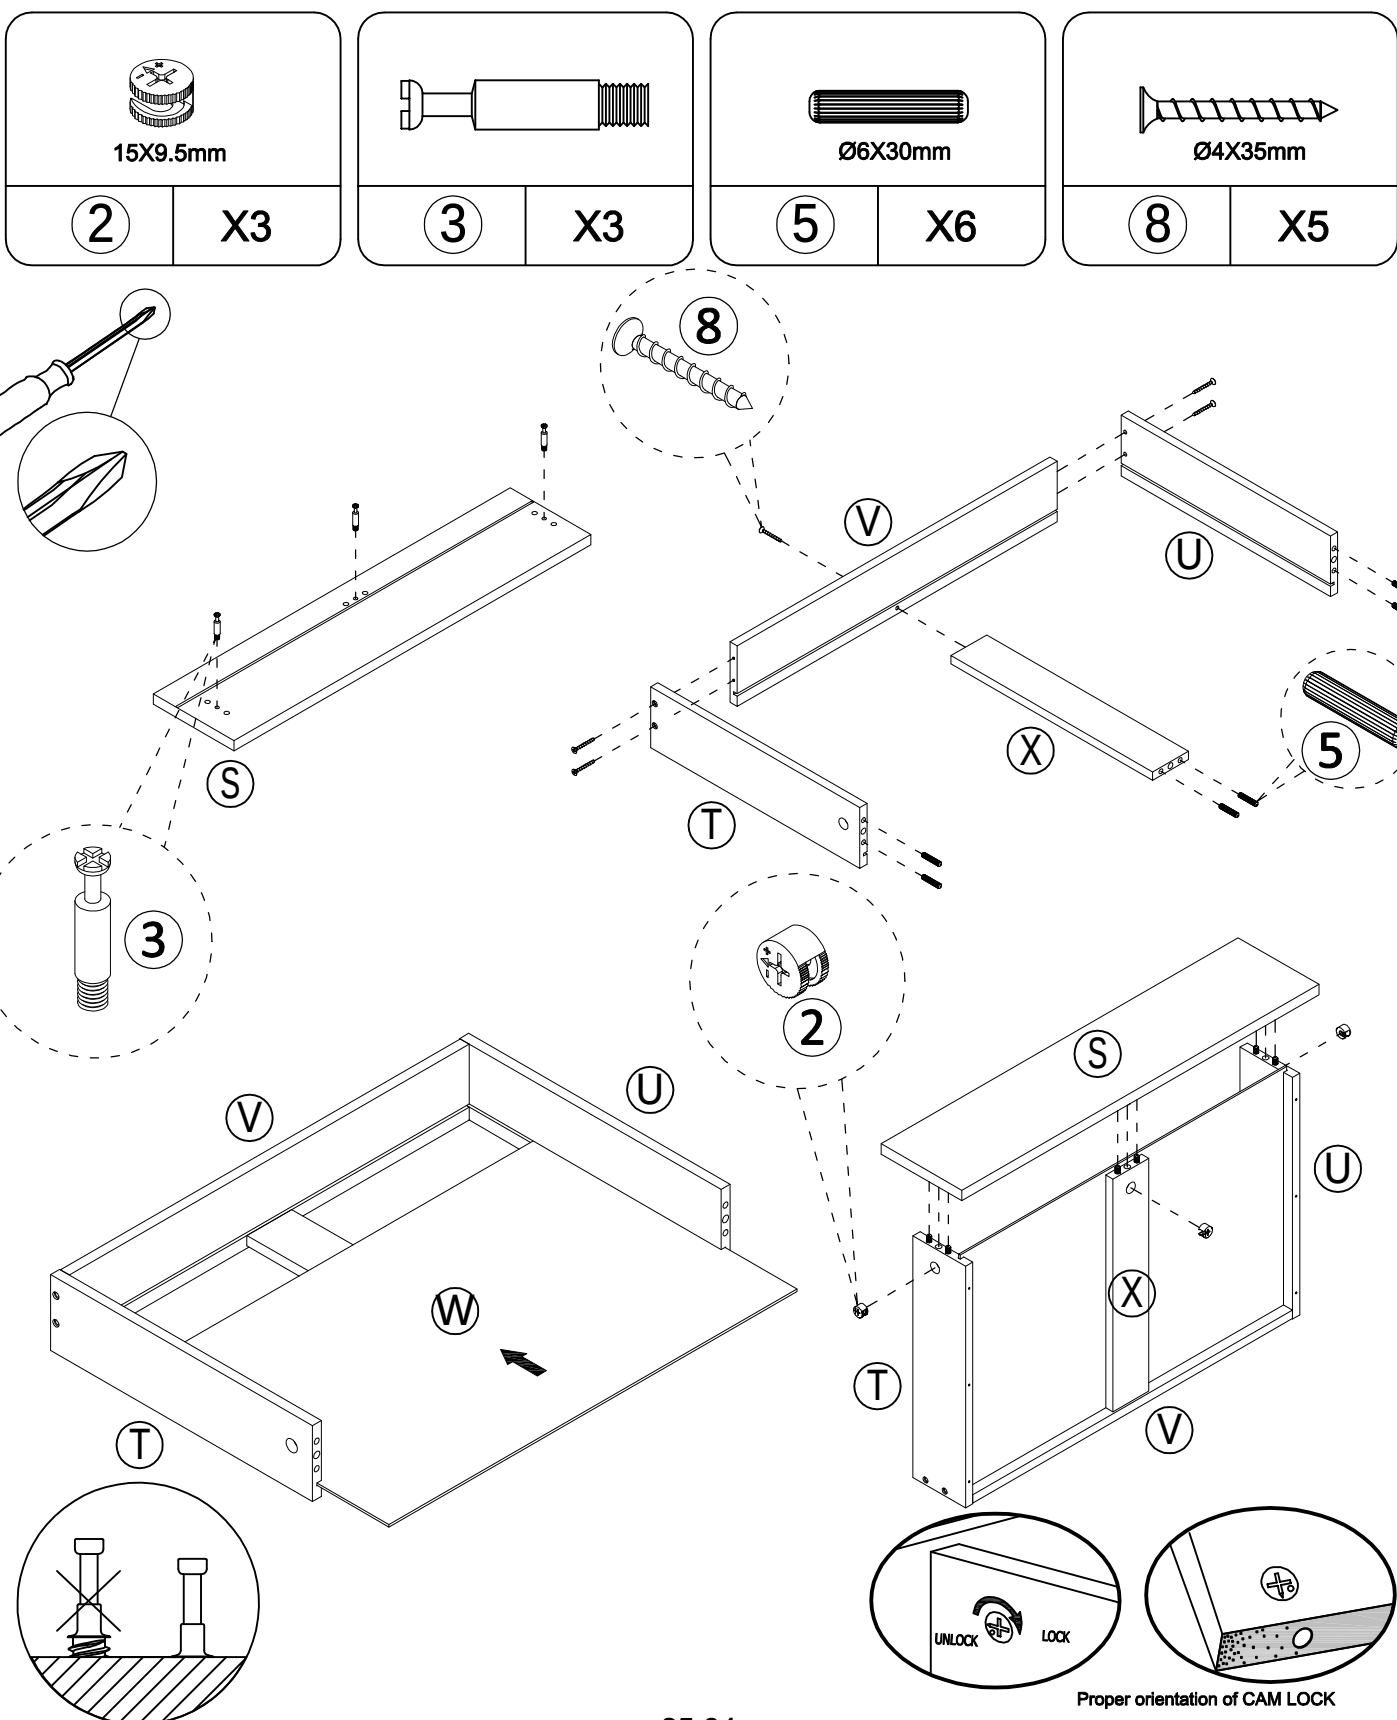

STEP17



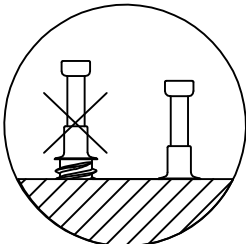
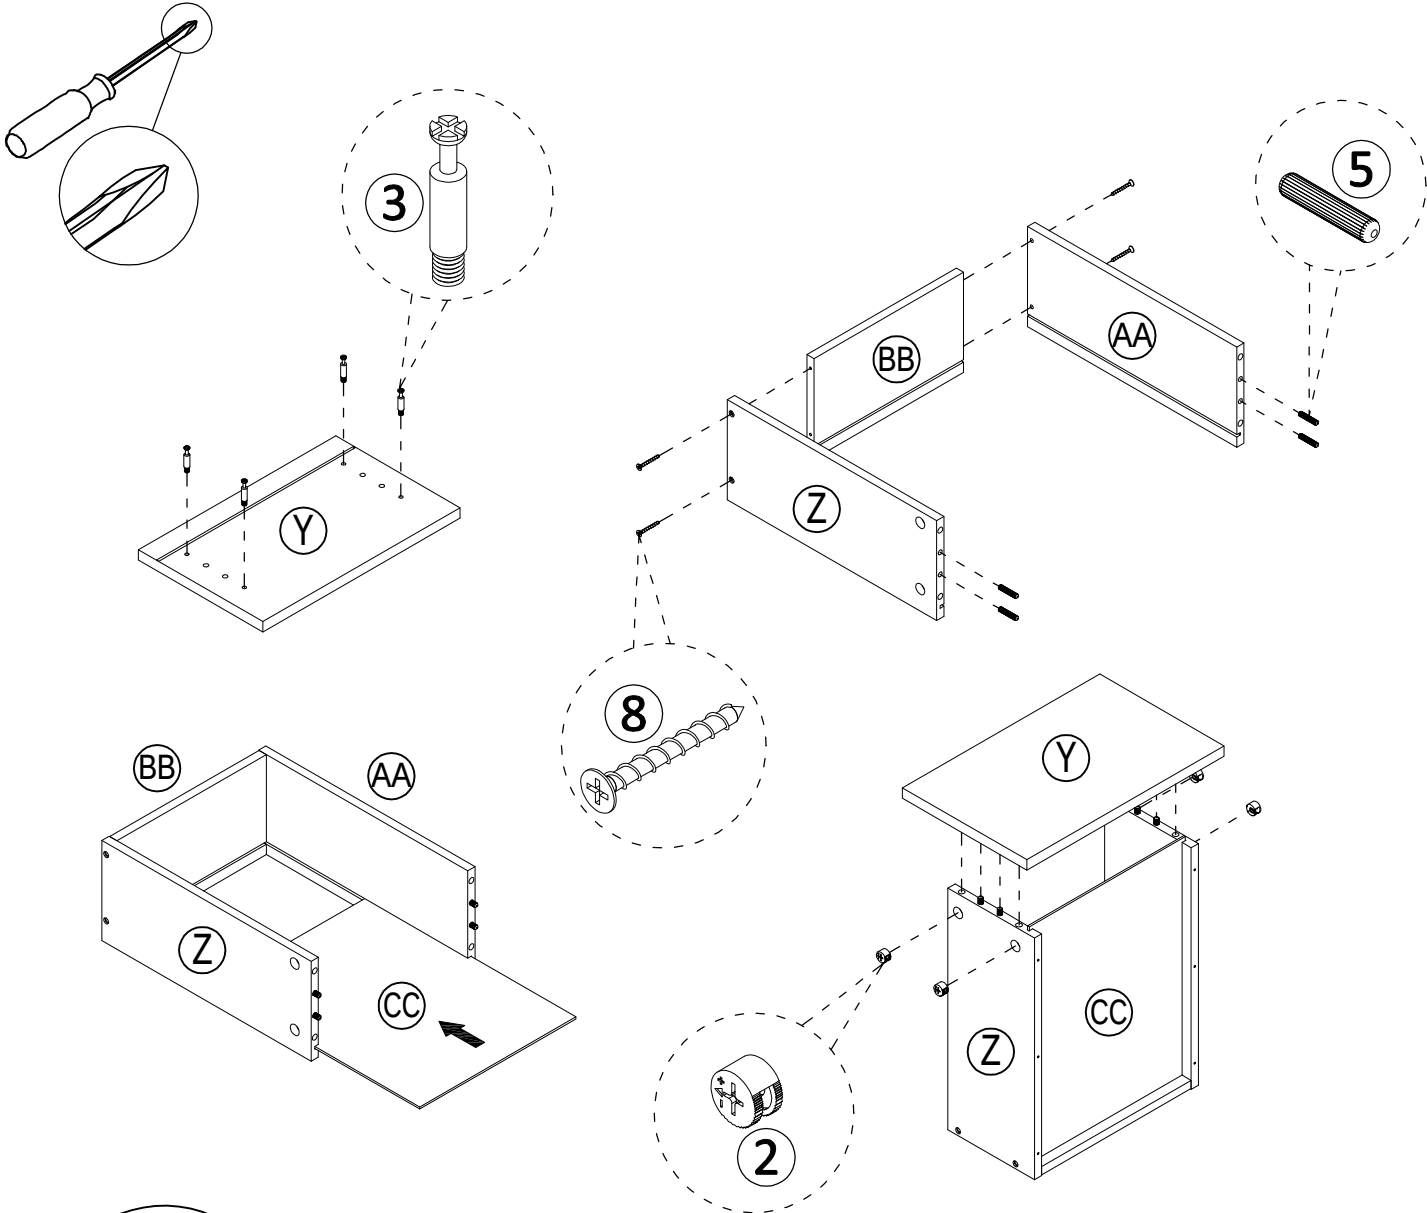
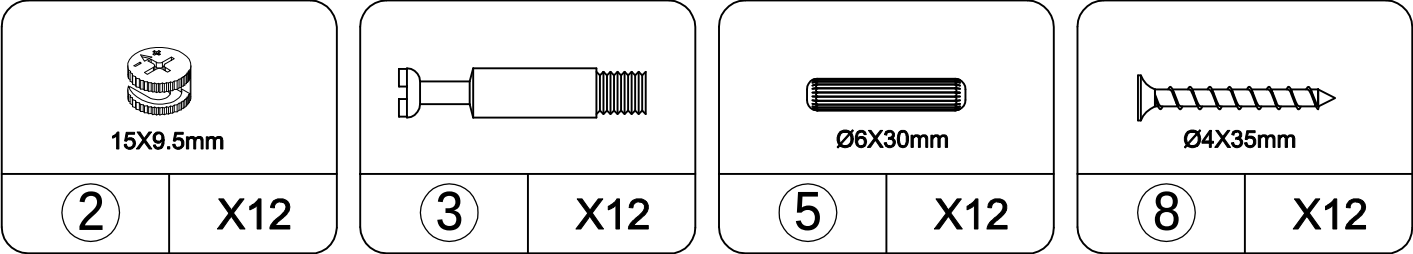


X 3

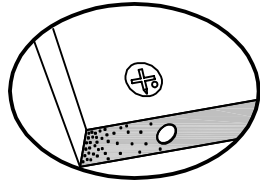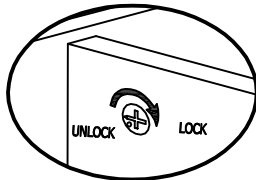


Proper orientation of CAM LOCK


STEP18

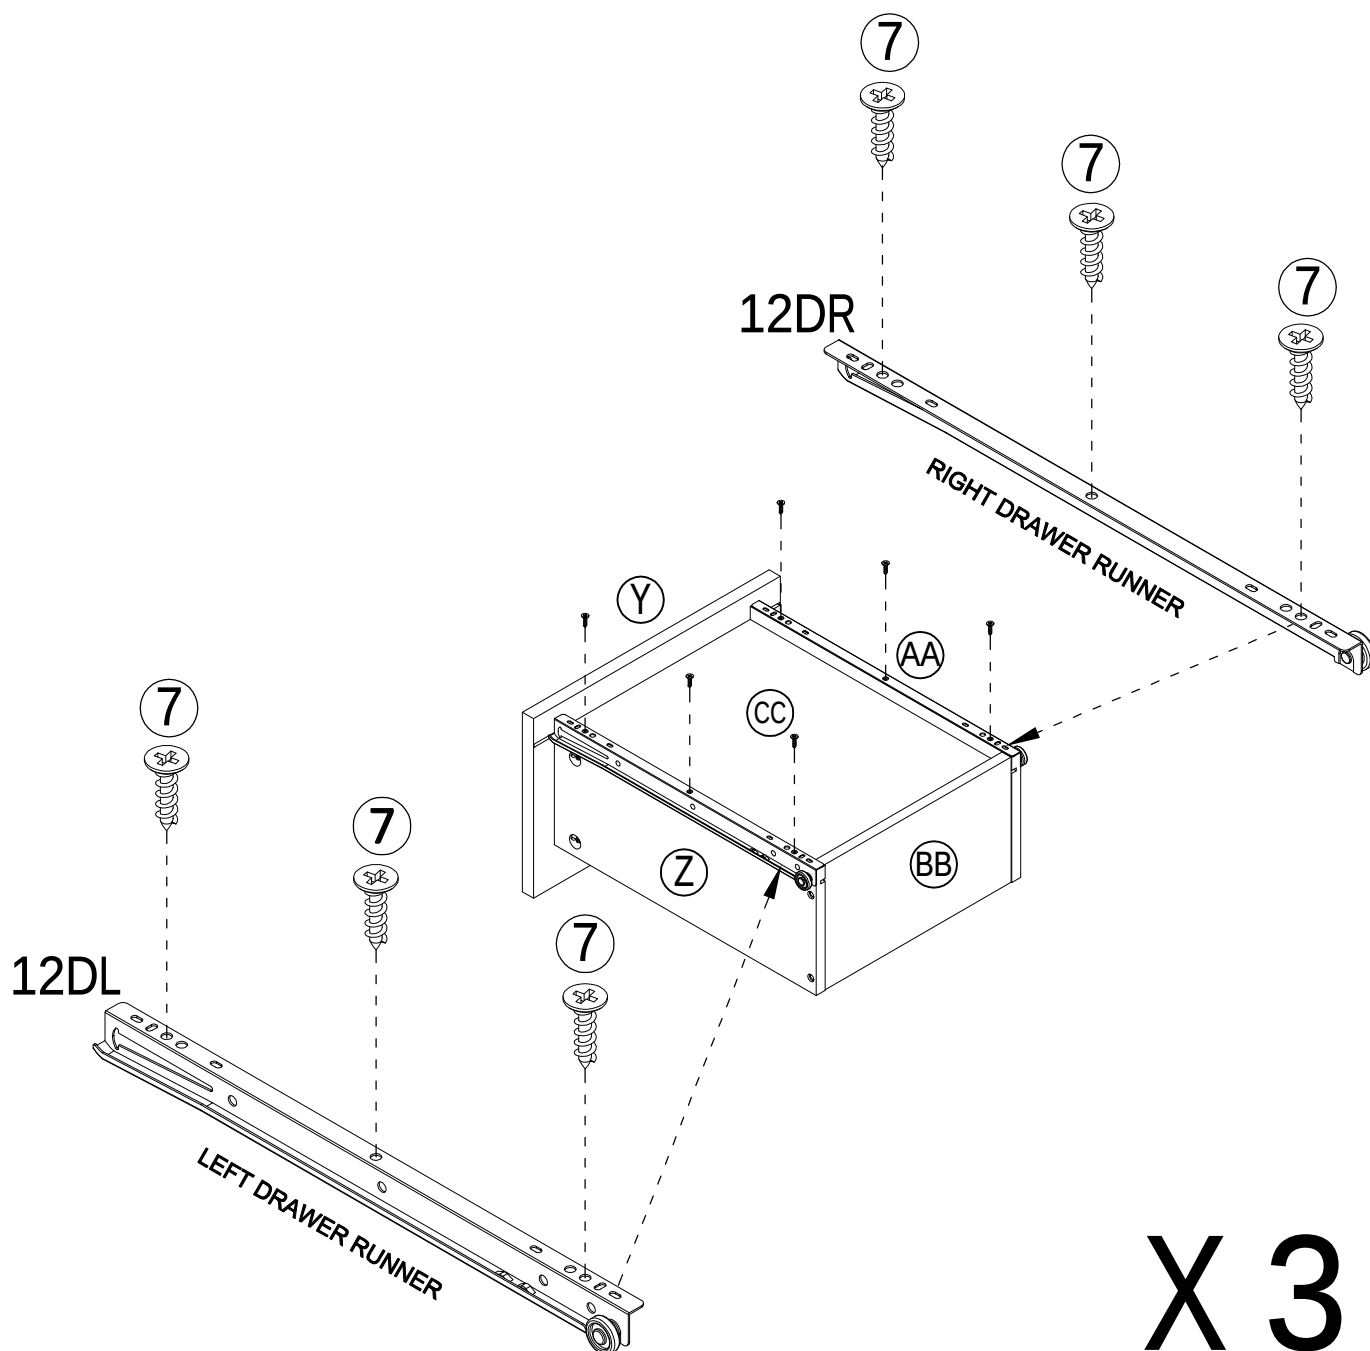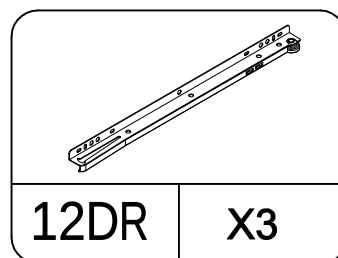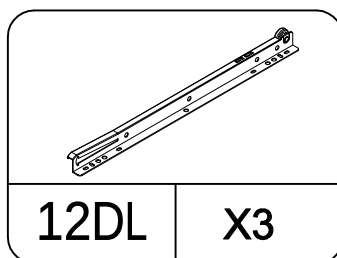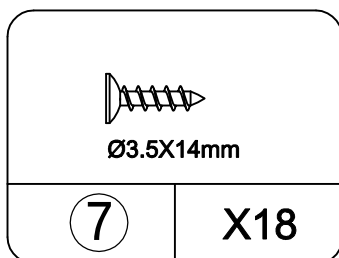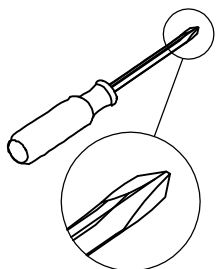


STEP19

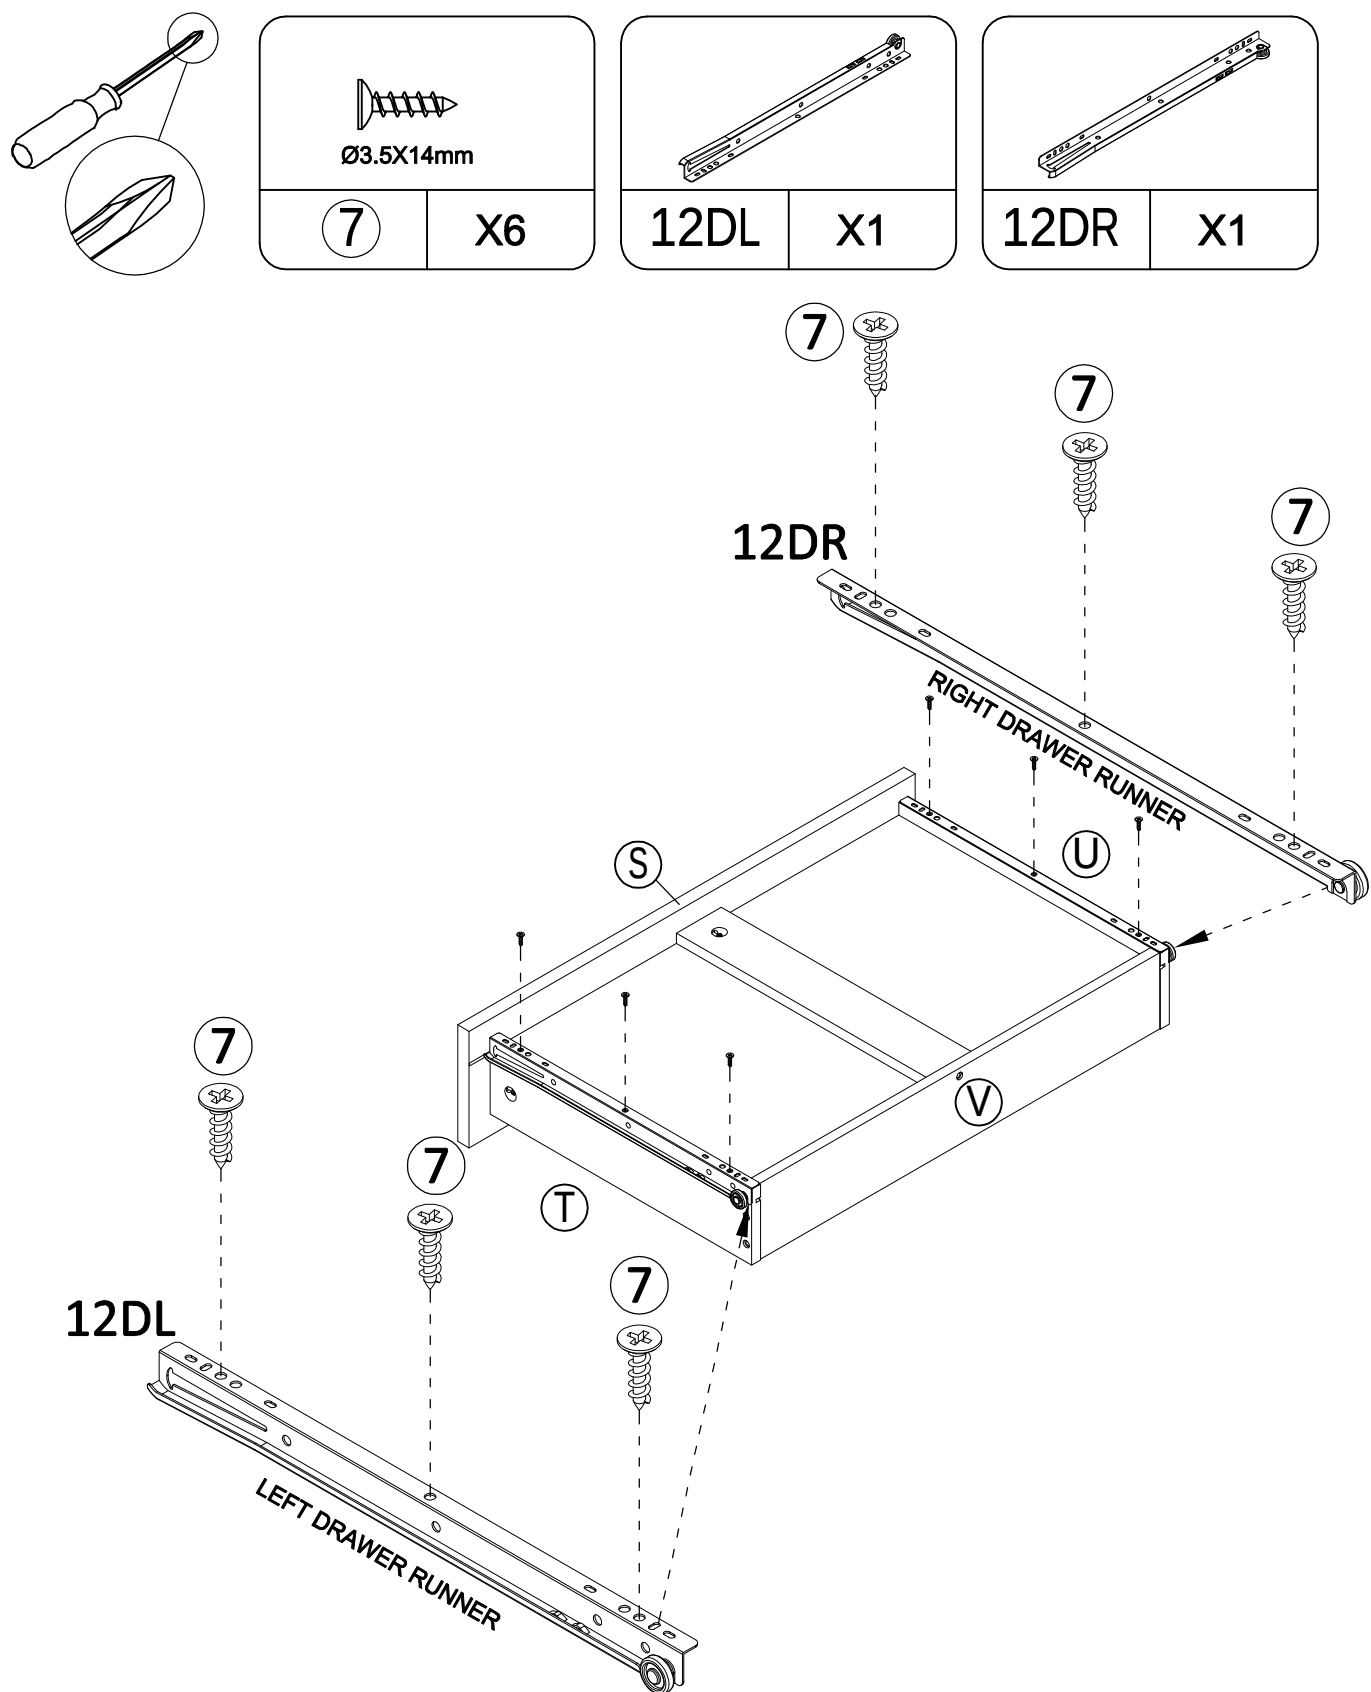



STEP20

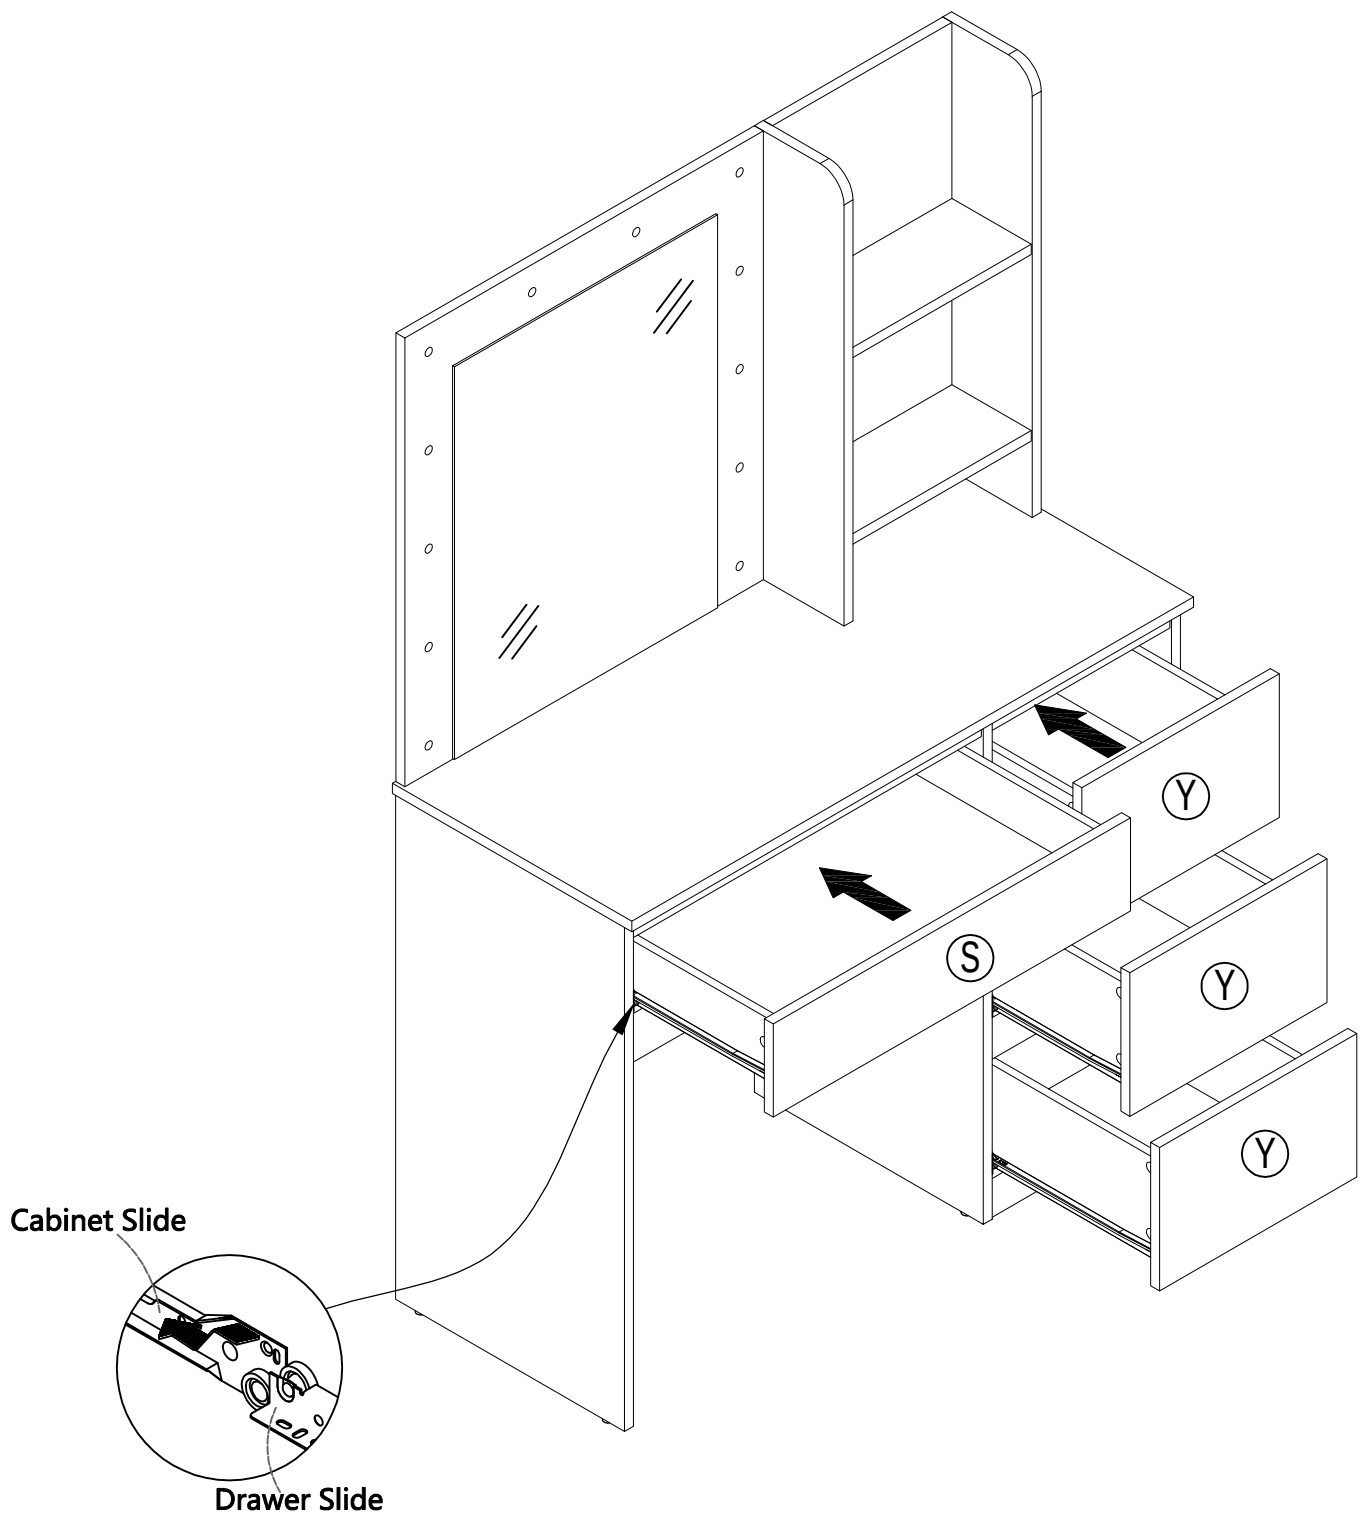

STEP21

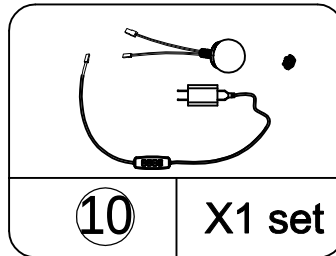

Pass the bulb wire through the pre punched plate, then gently press the bulb and make it adhere to the plate.

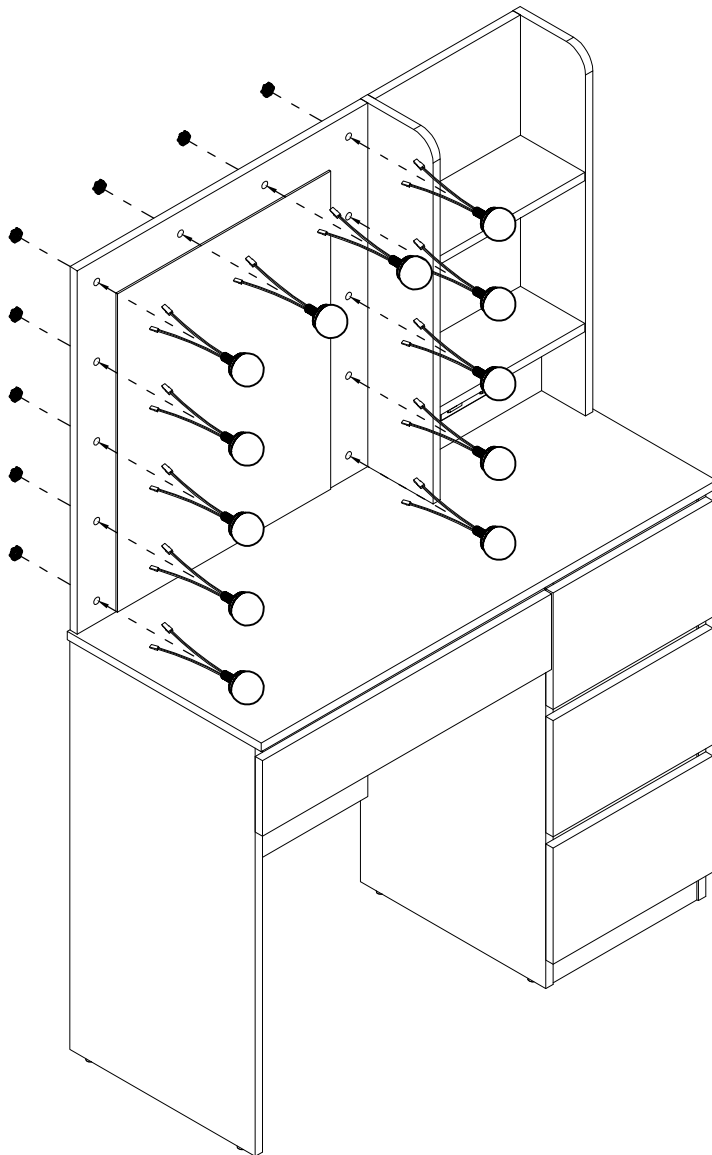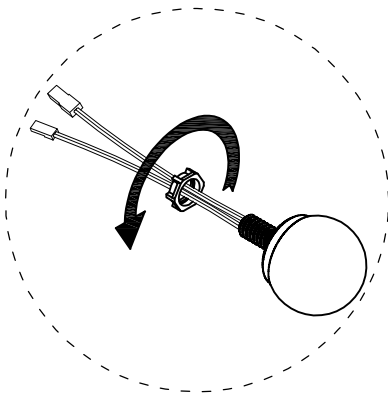


STEP22

Connect the adjacent bulbs successively through the opposite wire head slot (corresponding to the same color line).

When connecting the interface, please note that the colors of the wires at both ends correspond one by one


same color correspond

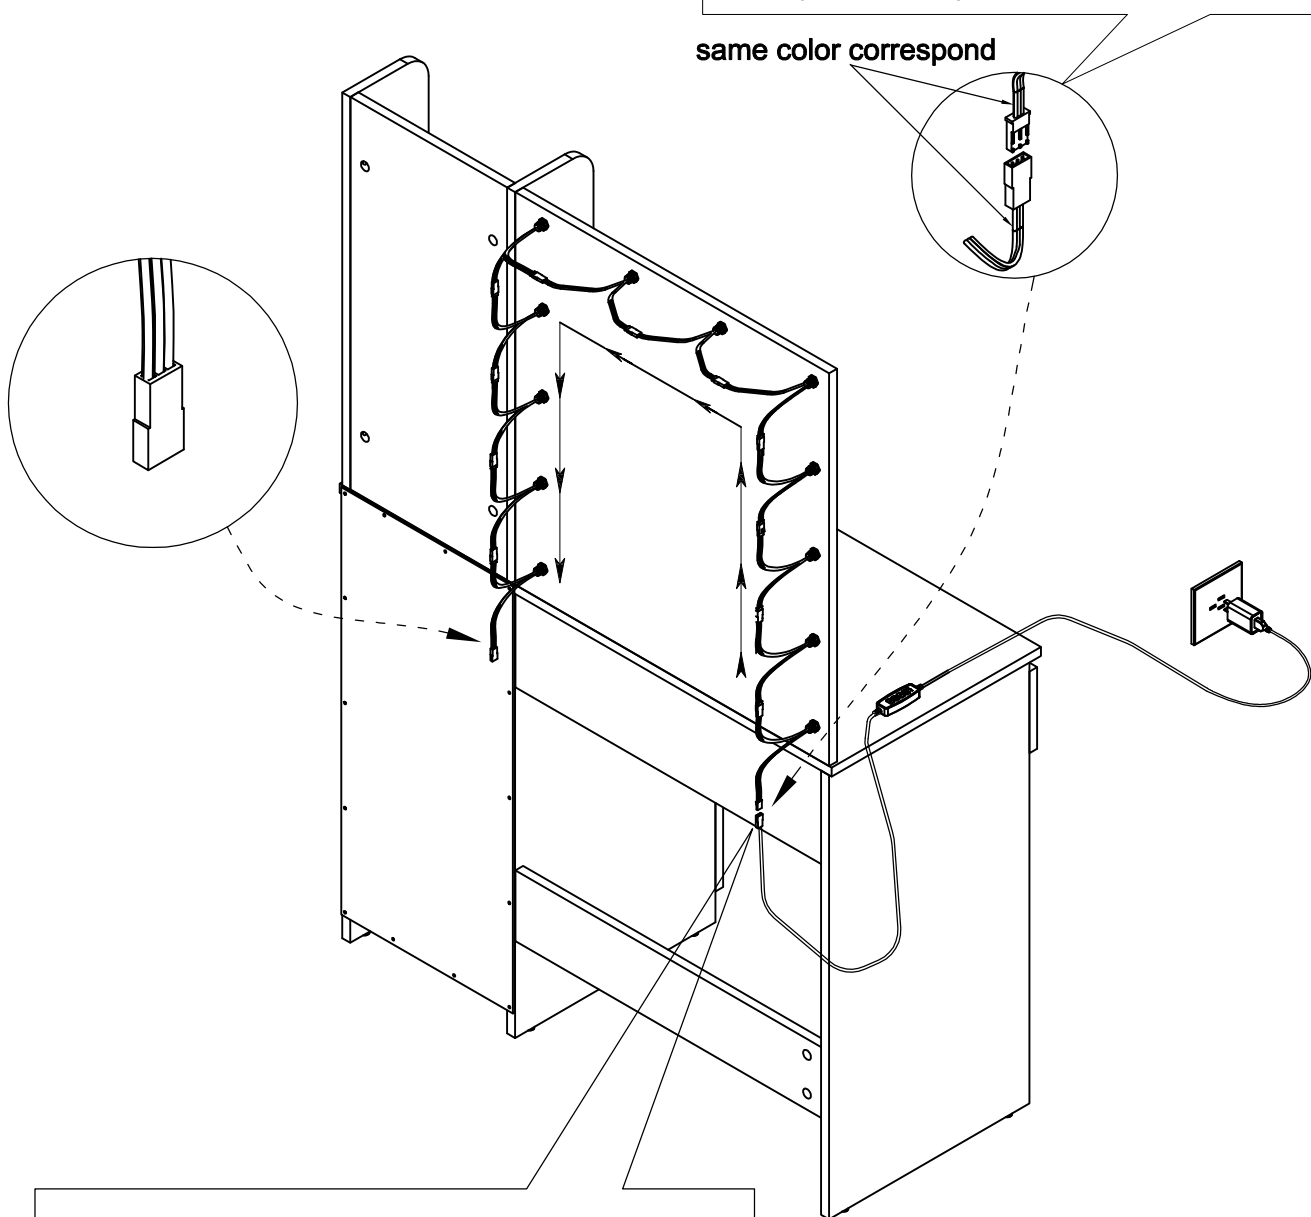


Connect the lights according to the figure. First connect the switch with the first bulb, and then connect other bulbs in series.

STEP23


When making up, you can use the switch to turn on or off the light. The dressing table brings you 3 color temperature light modes, touch the button you can easy light up the mirror and change colors to meet your different needs, long press to adjust the brightness.

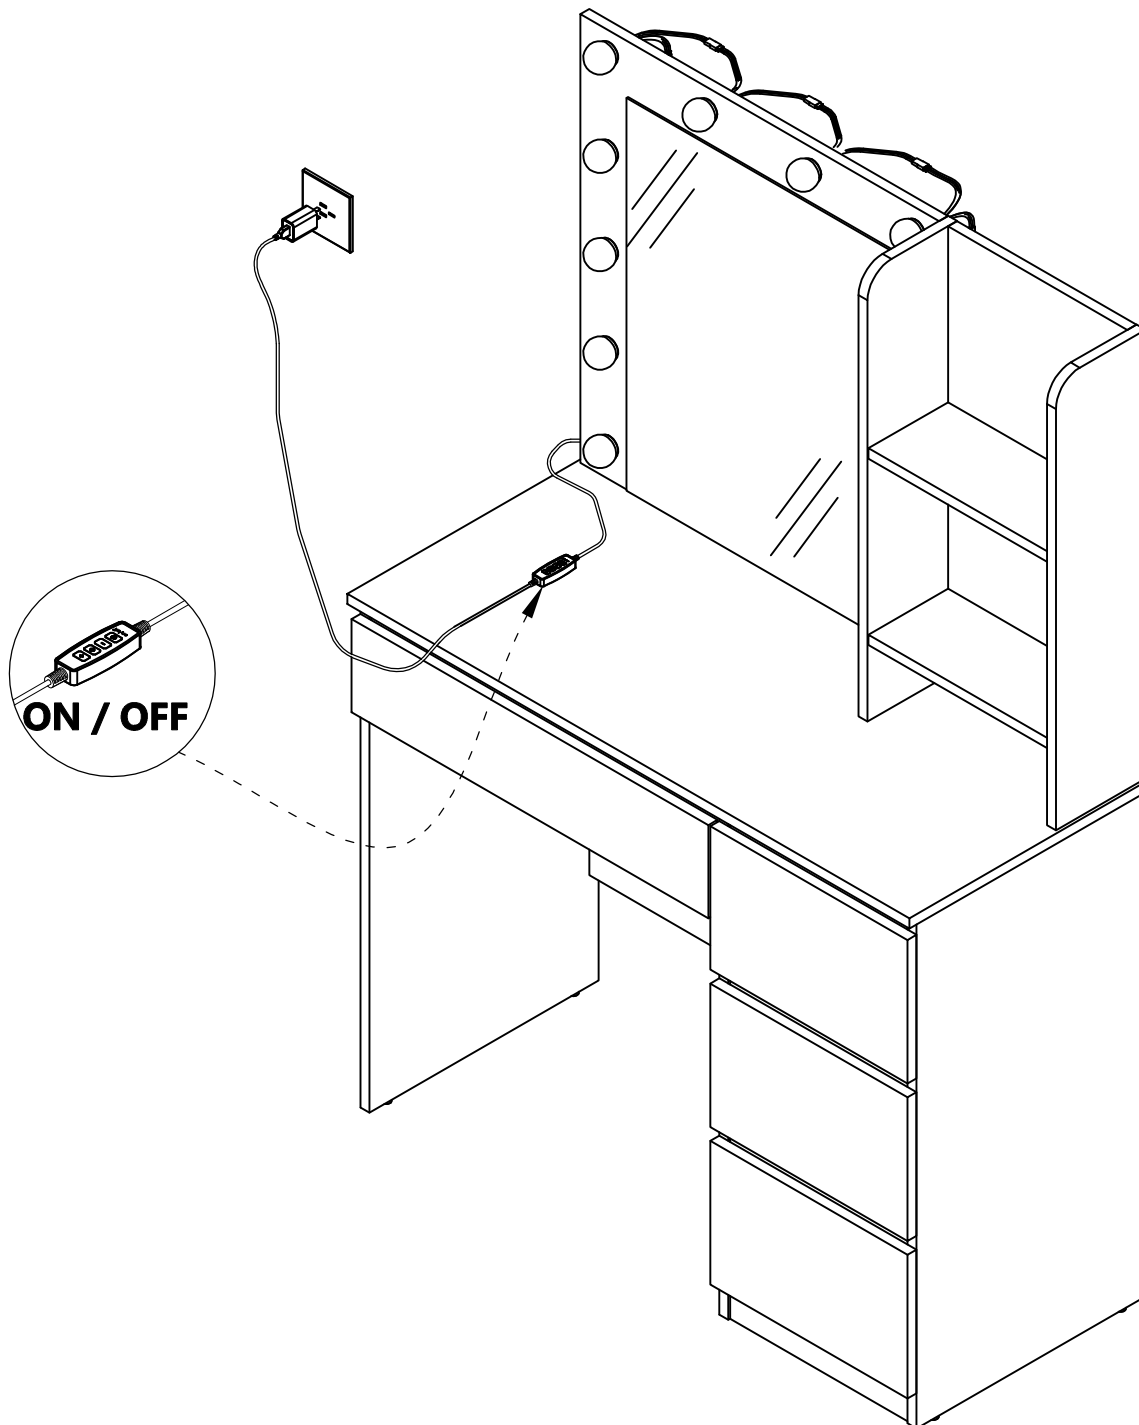

STEP24

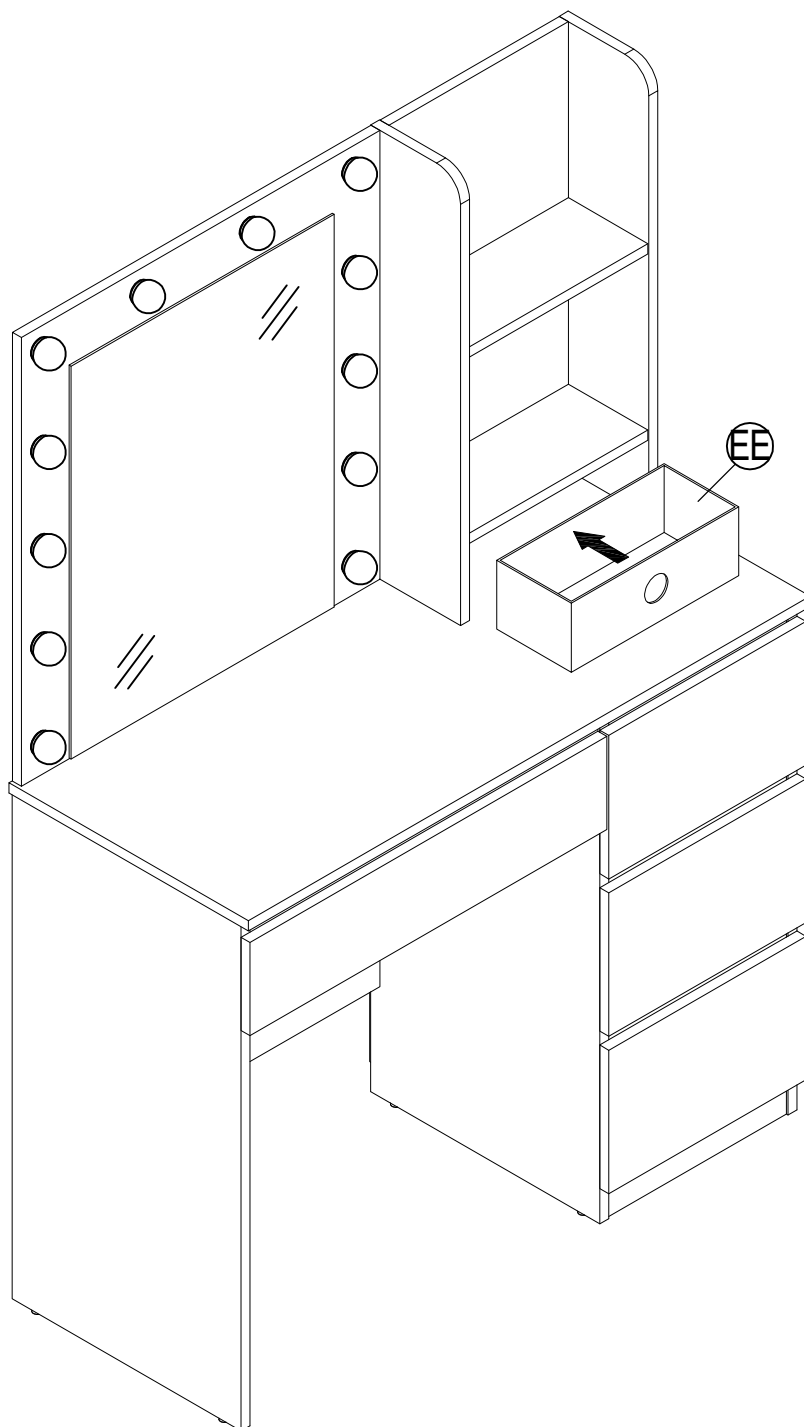

STEP25

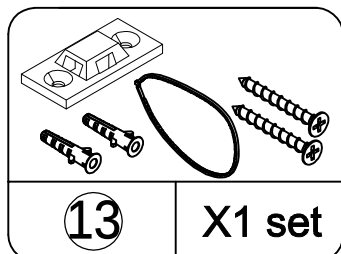


We have included a set of tipping restraint hardware for this unit. You must install this hardware to prevent accidents or injuries that can result from the unit falling. When properly installed, this restraint can provide protection against the unexpected tipping of the unit due to small tremors, bumps or climbing. We strongly recommend mounting this hardware to a wall stud and your unit.




NOTE: The tipping restraint hardware included is for wooden stud wall construction. It must be attached to a wall stud. Depending upon your wall construction different anchor hardware may be required. Please contact your local hardware store for assistance. Young children can be seriously injured by tipping furniture. You must install the tipping restraint hardware with the unit to prevent the unit from tipping, causing any accidents or damage. The tipping restraints are intended only as a deterrent and are not a substitute for proper adult supervision. The tipping restraints are not earthquake restraints. If you wish to add the extra security of earthquake restraints, they must be purchased and installed separately.




Install the tipping restraint hardware

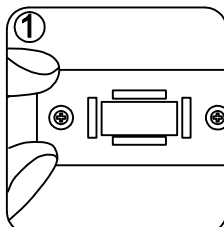


1. make mark on the wall

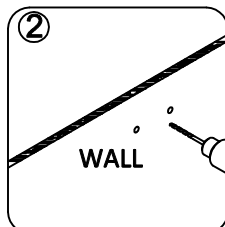


2. drill two Ø6 holes on the wall

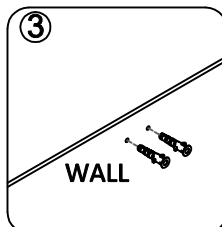

3. put two anchors in the holes

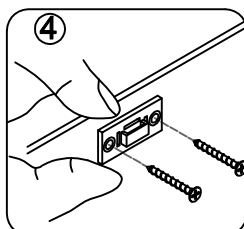

4. fix the device on the wall by the long screws

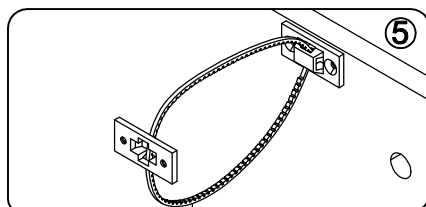

5. Push the cabinet close to the wall so that the two bases are close to each other, and then put on nylon tie to tighten it.

