

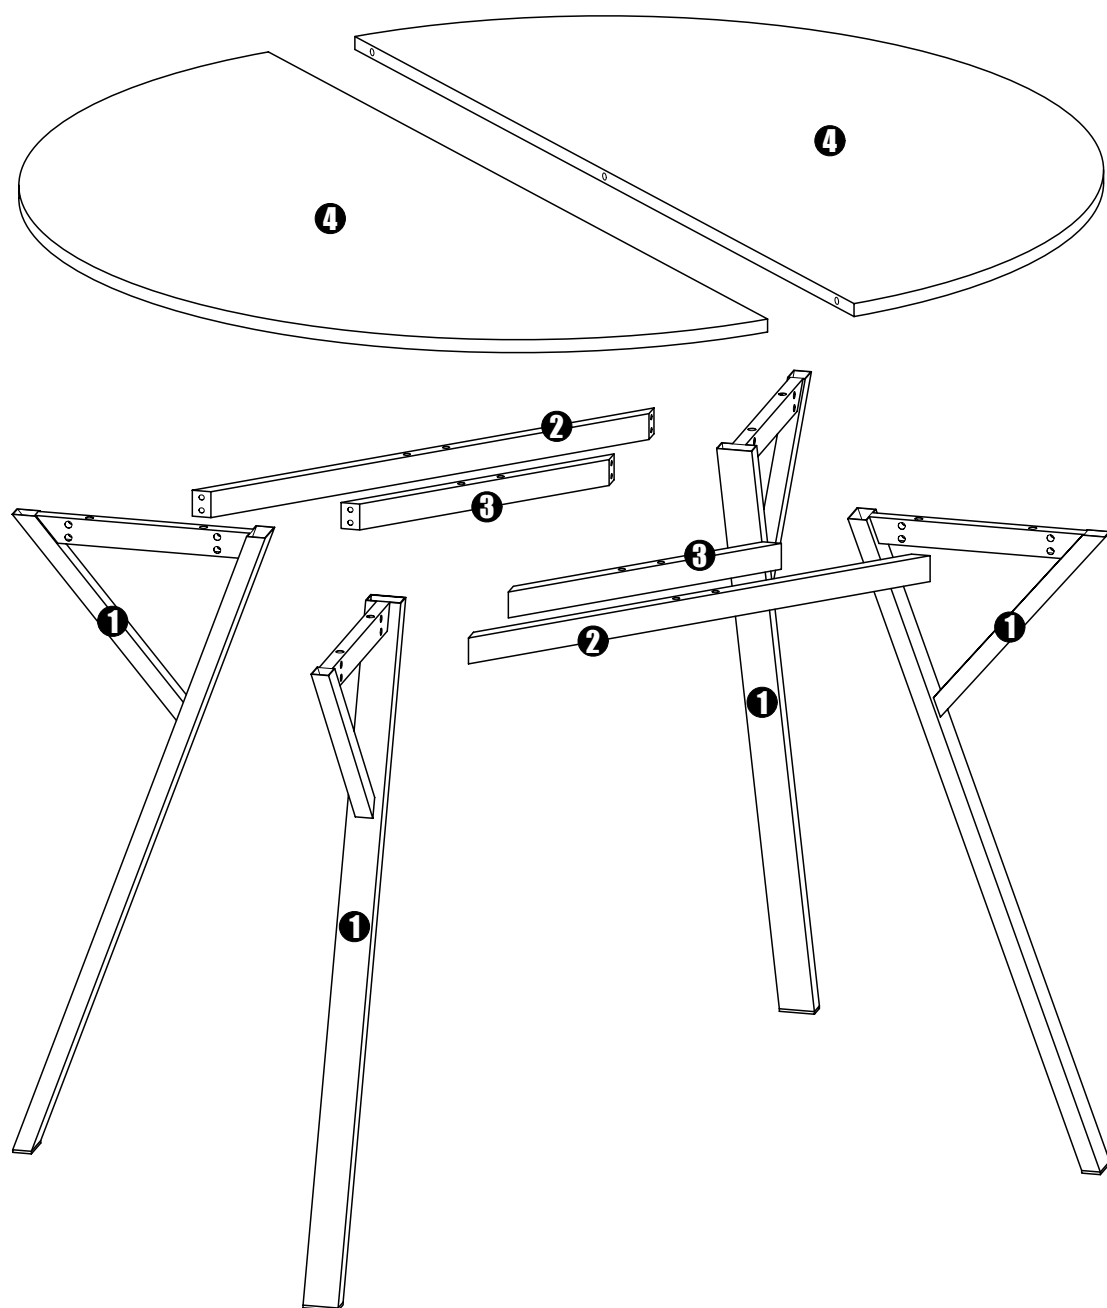
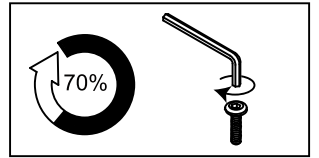




1

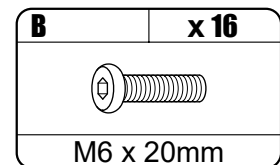

Screws tighten to 70% only at first.

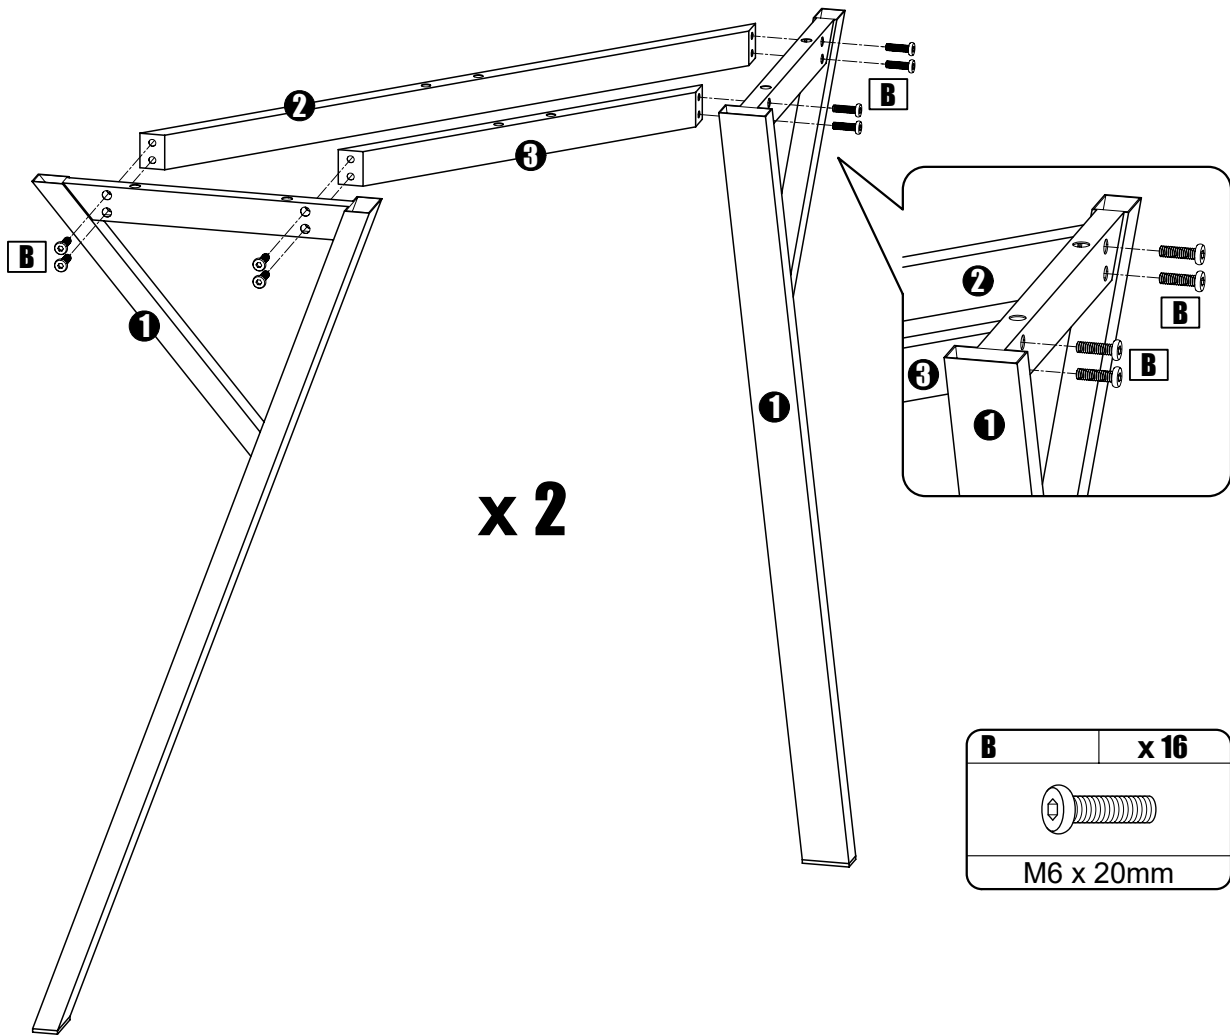

2

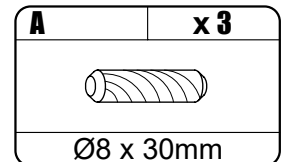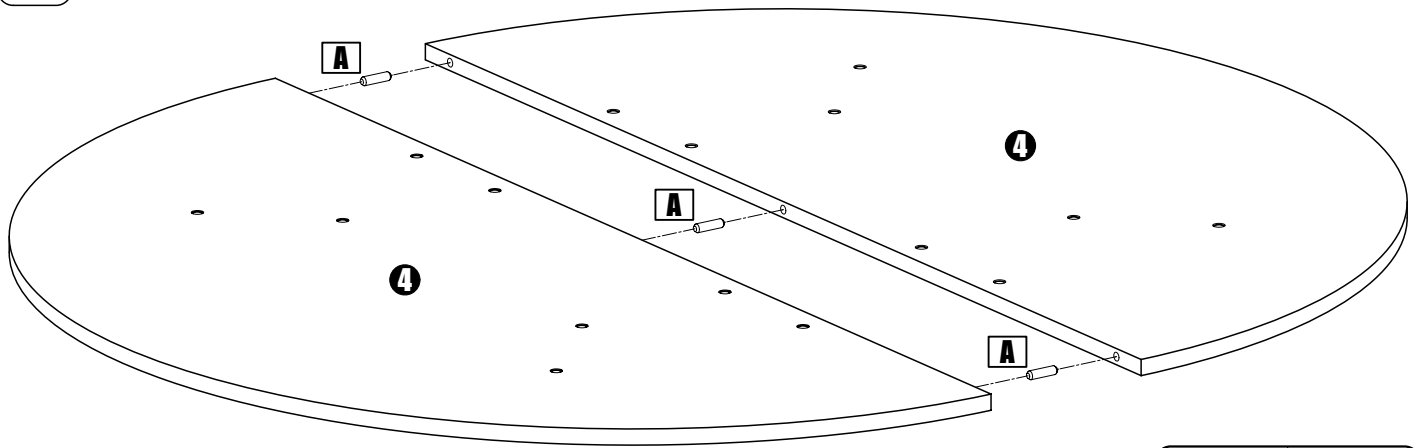

3

First, insert screw "C" into panel "4" without fully tightening. Then tighten all screws after full assembly.

