


ASSEMBLY INSTRUCTION

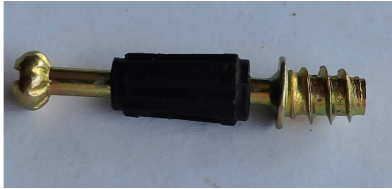




Ax111



Bx111

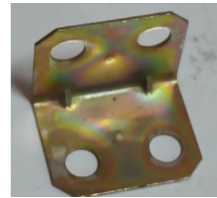

Cx2



Dx2



Ex25



Fx10



Hx5



Jx12






Kx12




Lx10




Px2

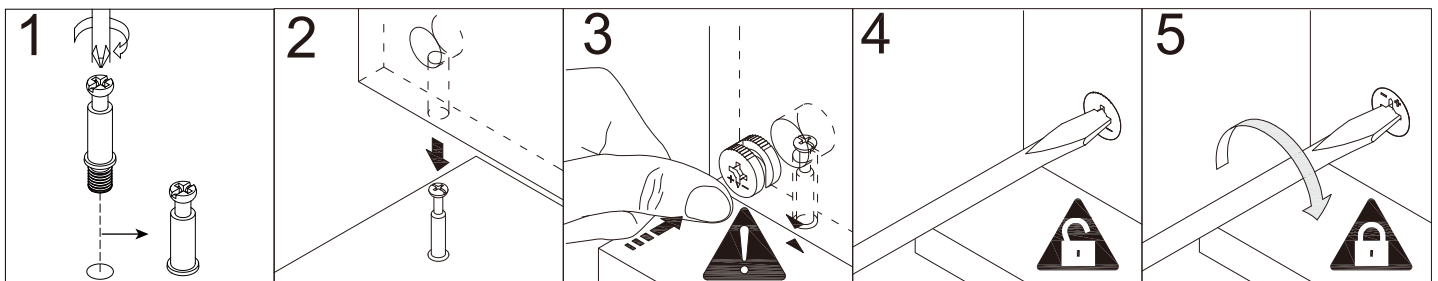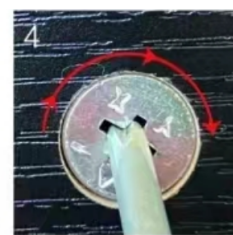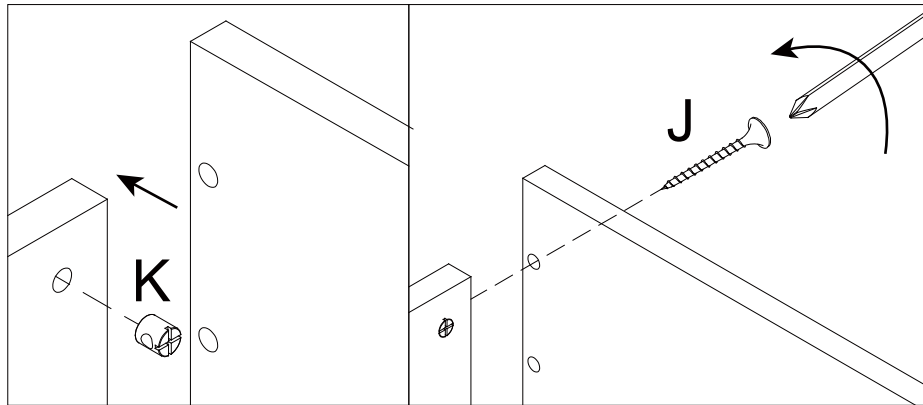


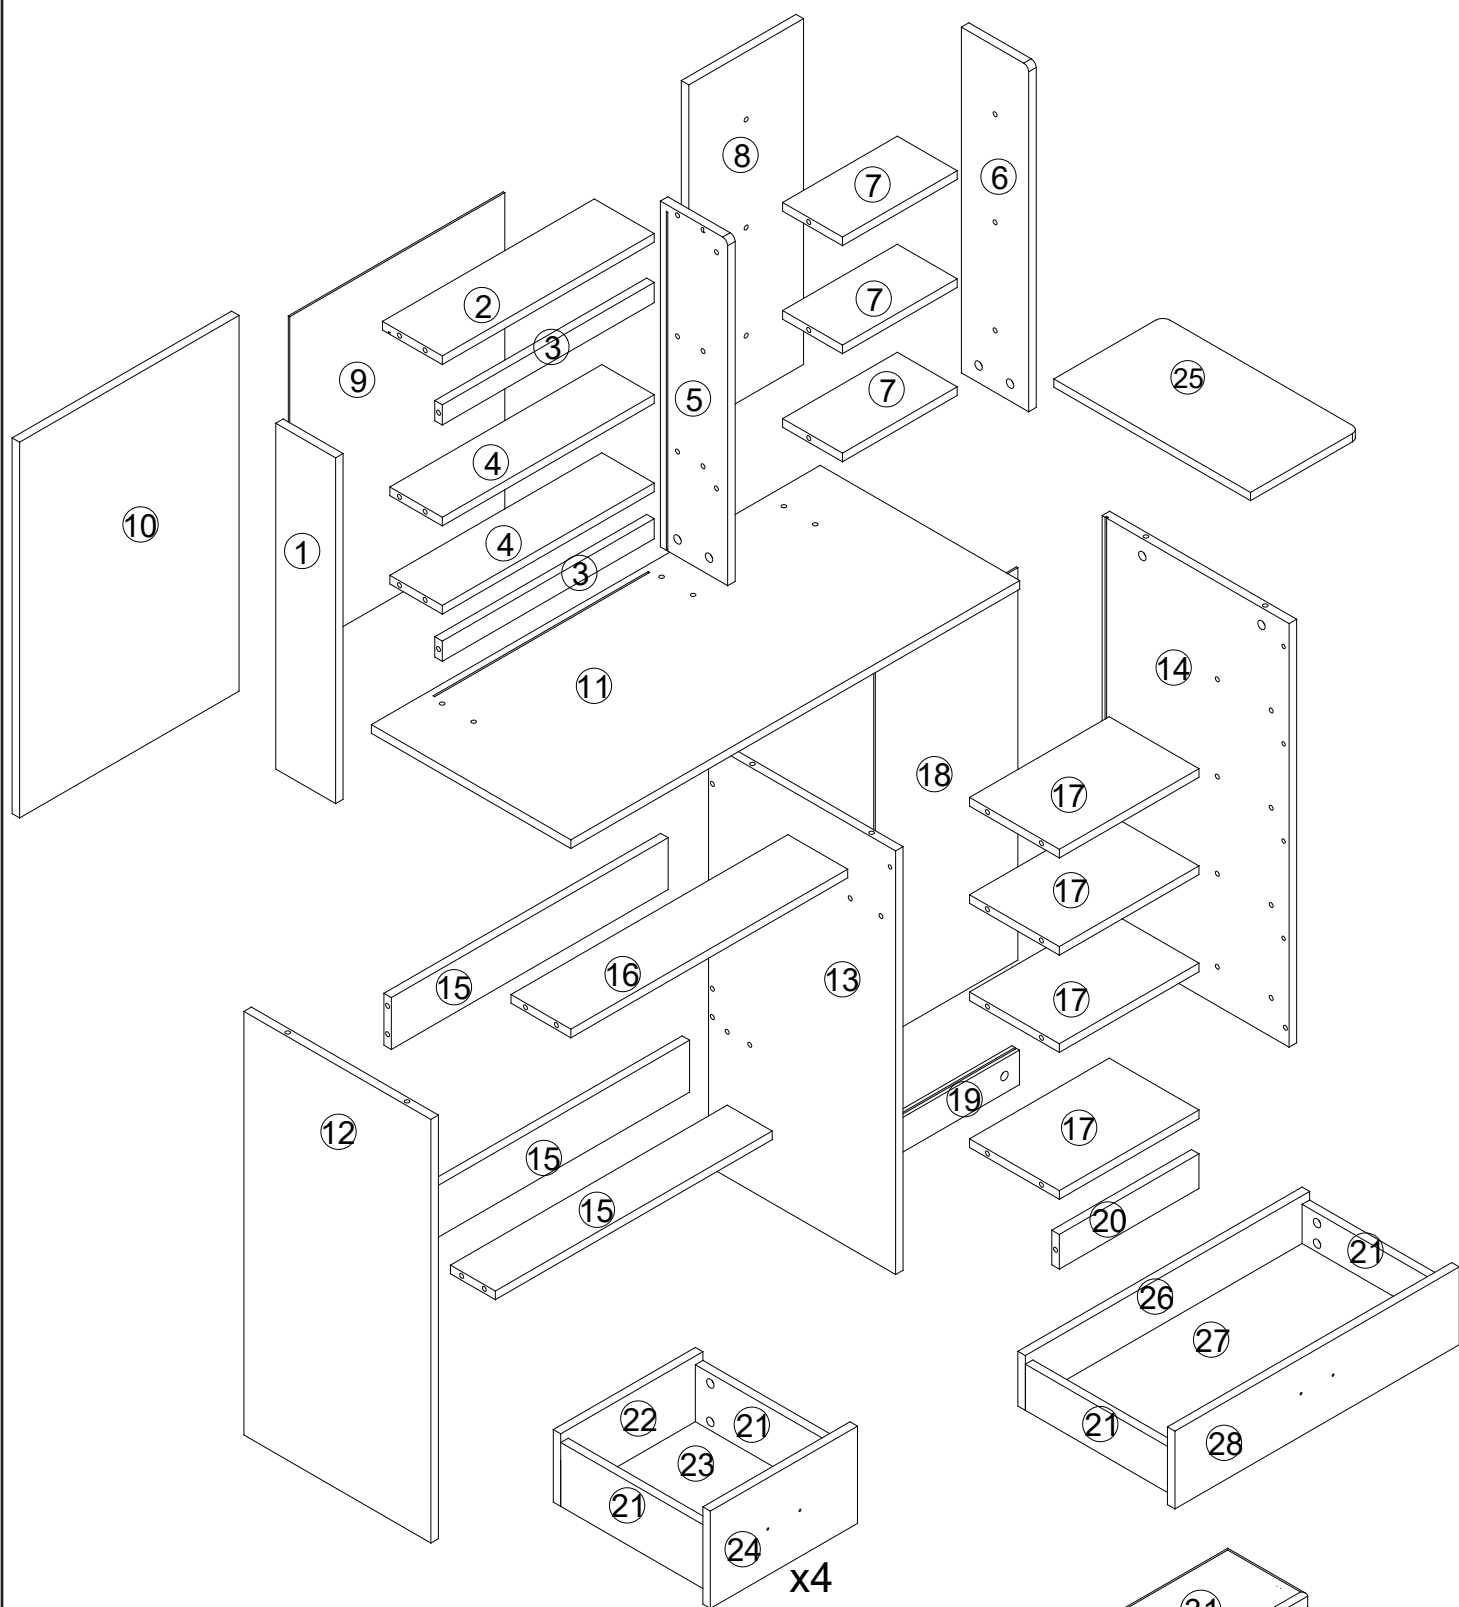


1 - x1	8 - x1	15 - x3	22 - x4	29 - x2
2 - x1	9 - x1	16 - x1	23 - x4	30 - x2
3 - x2	10 - x1	17 - x4	24 - x4	31 - x1
4 - x2	11 - x1	18 - x1	25 - x1	
5 - x1	12 - x1	19 - x1	26 - x1	
6 - x1	13 - x1	20 - x1	27 - x1	
7 - x3	14 - x1	21 - x10	28 - x1	

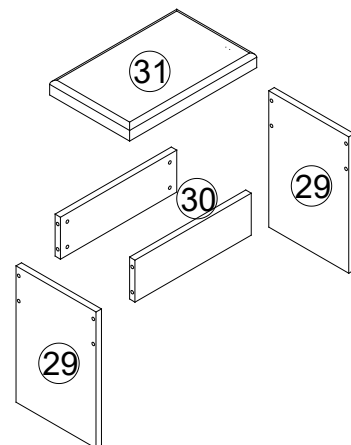


STEP 1

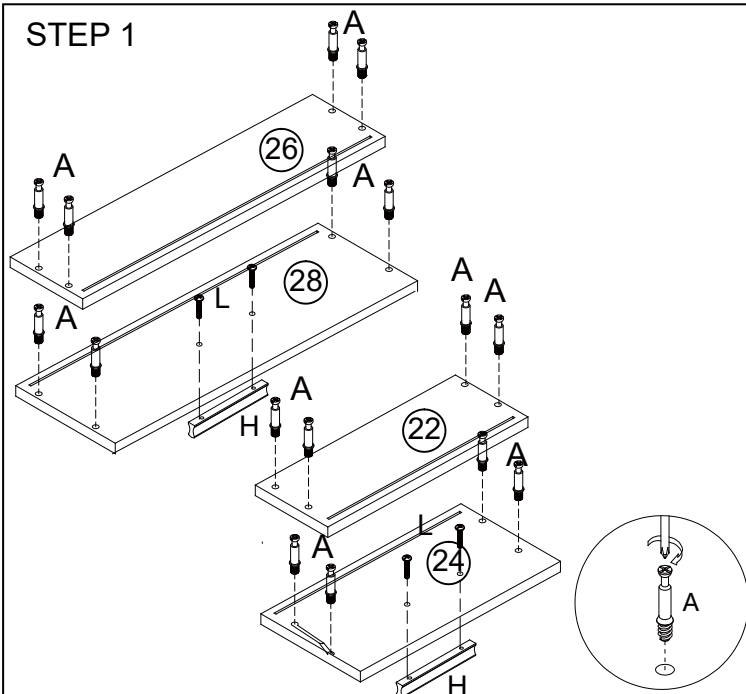


STEP 2

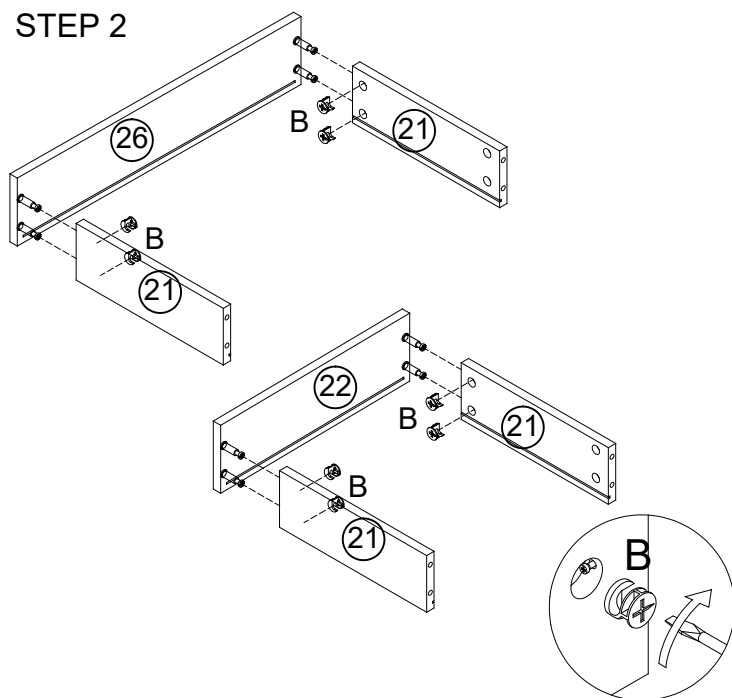

STEP 3

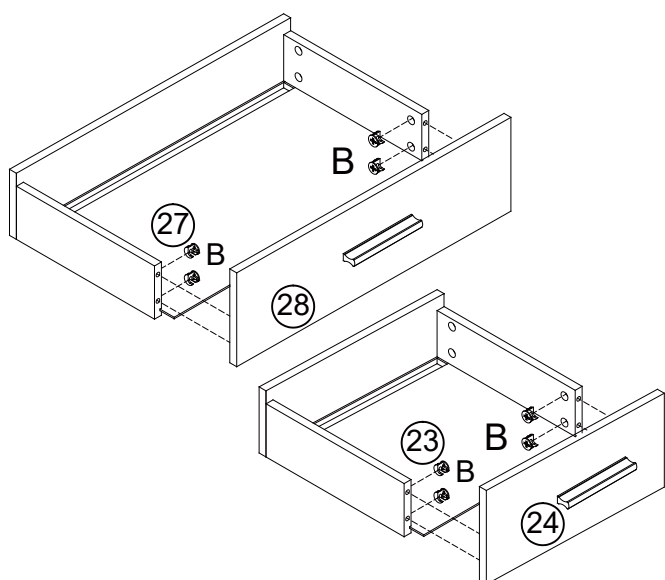


STEP 4

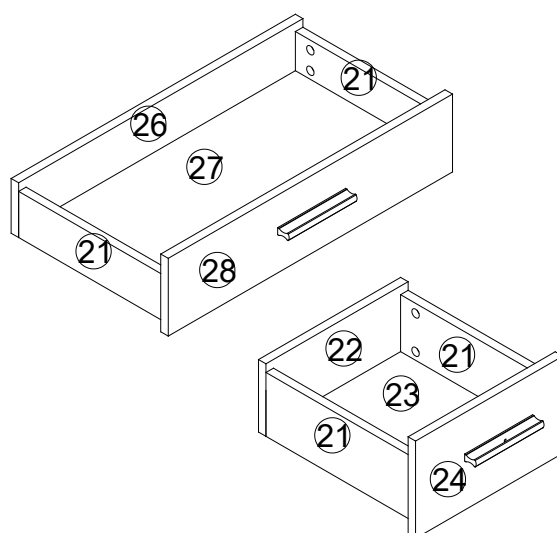


Three drawers are installed in the same way


STEP 5

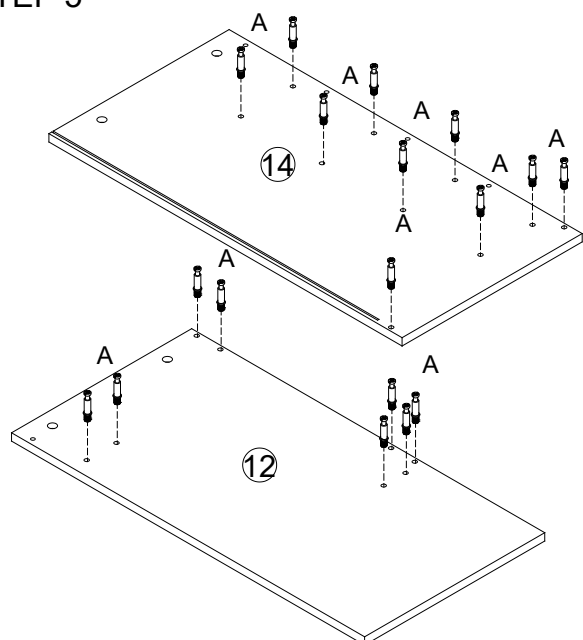


STEP 6

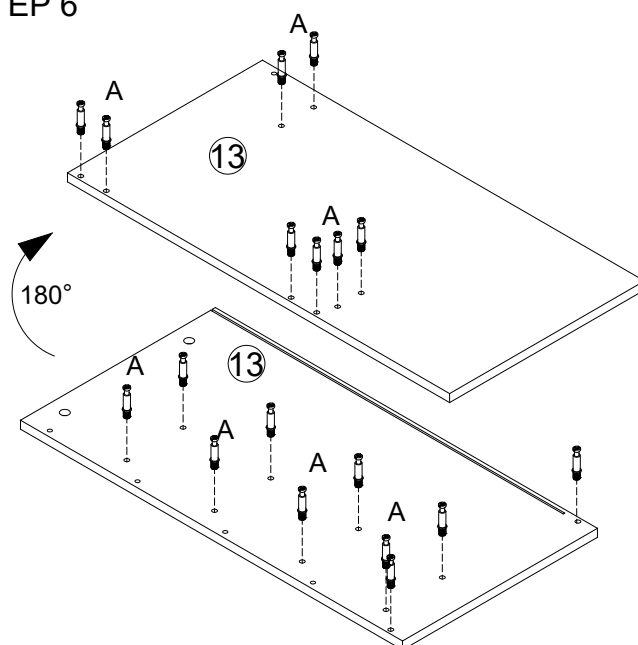


STEP 7

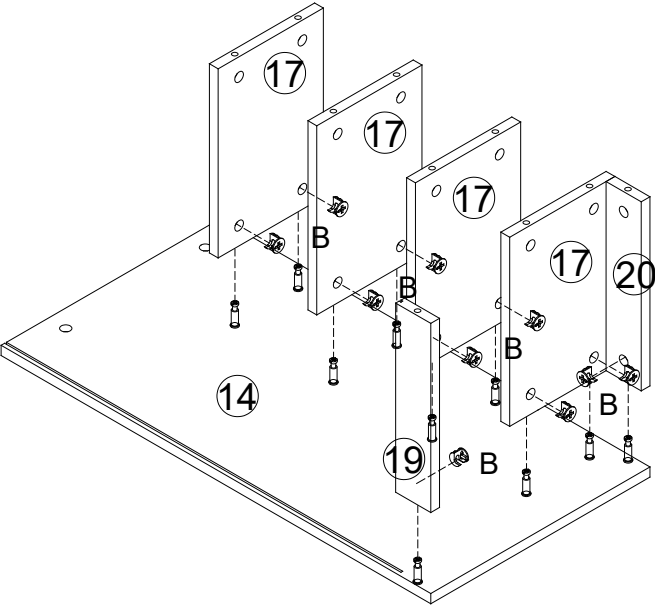


STEP 8

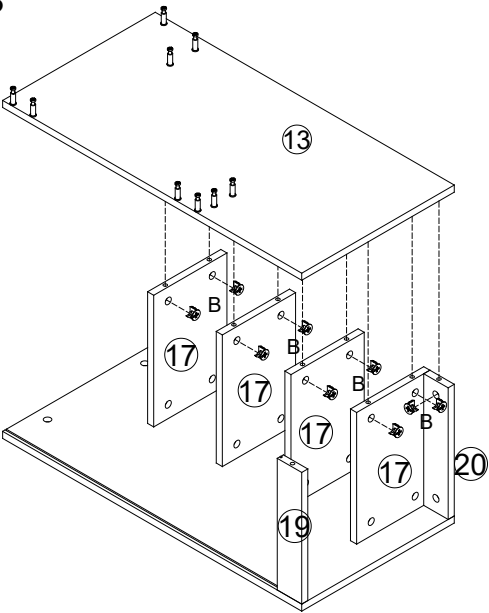


STEP 9

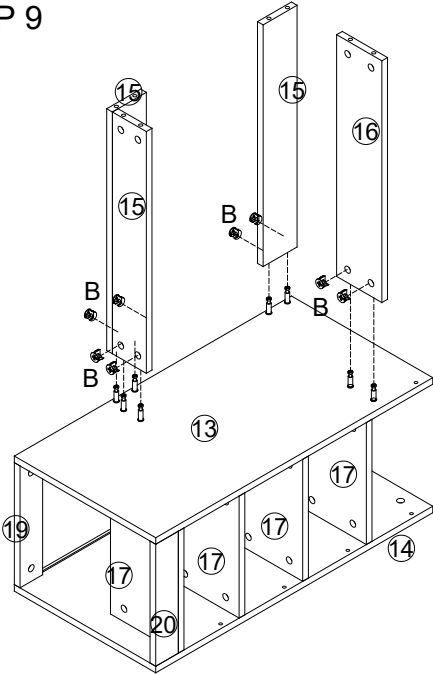


STEP 10

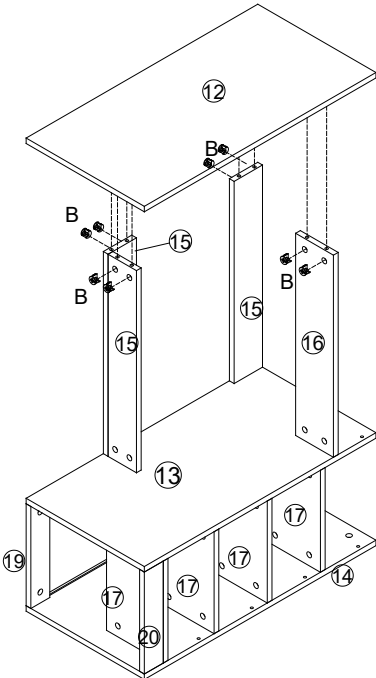


STEP 11

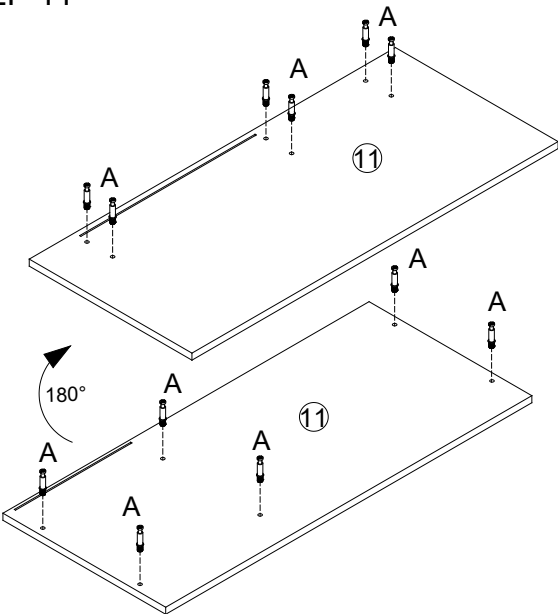


STEP 12

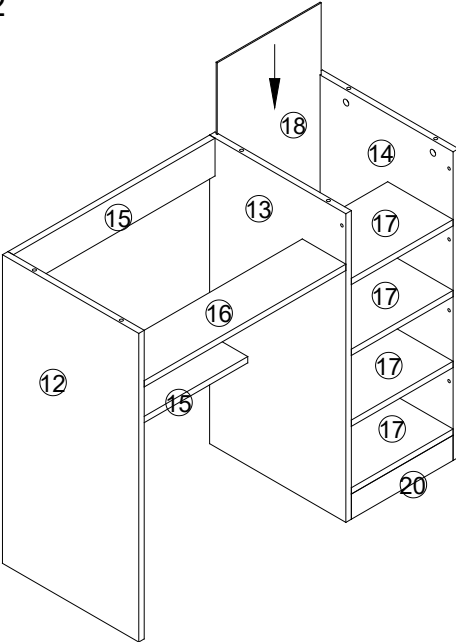


STEP 13

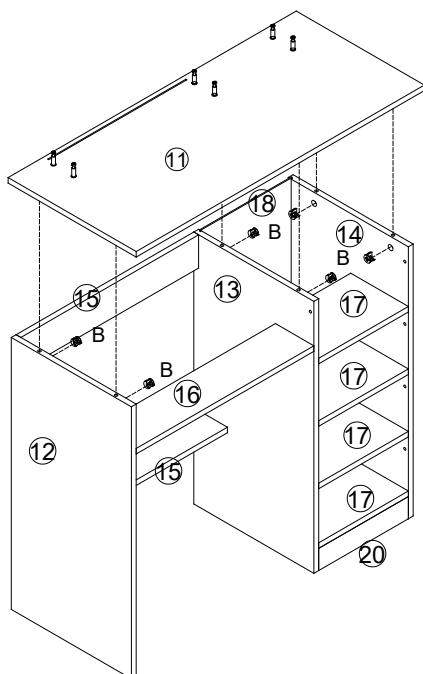


STEP 14

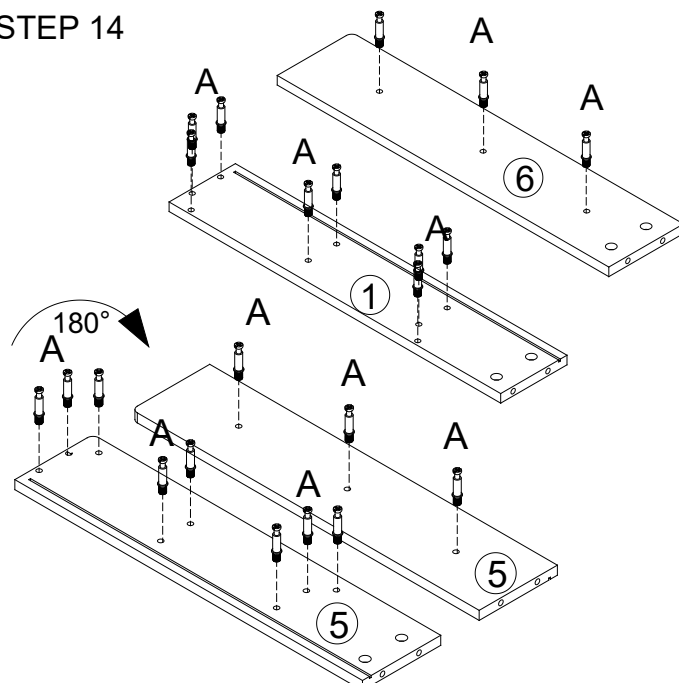


STEP 15

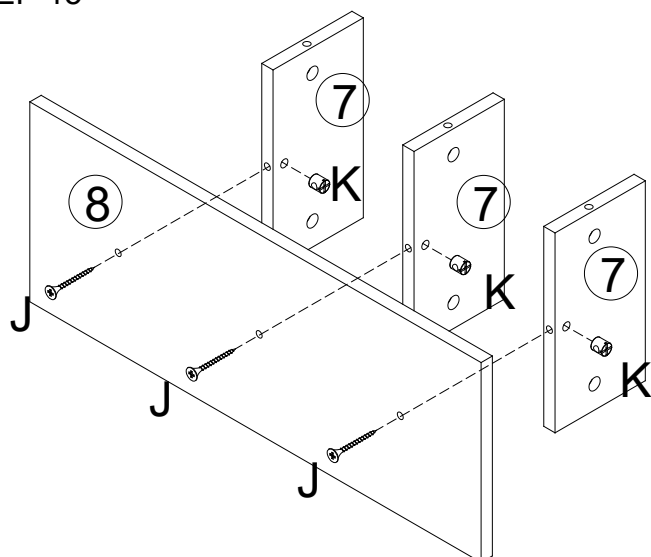


STEP 16

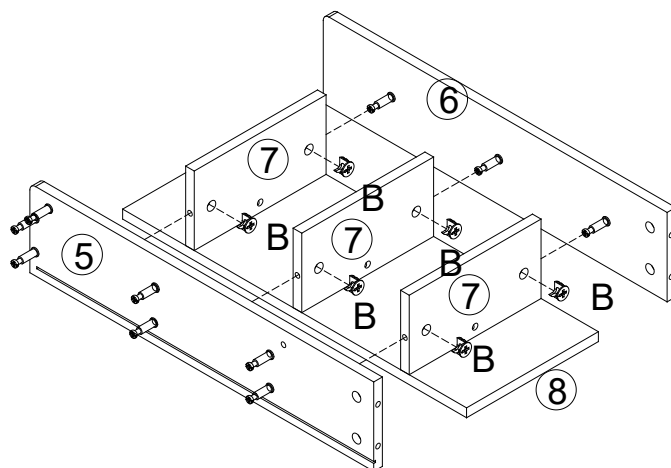


STEP 17

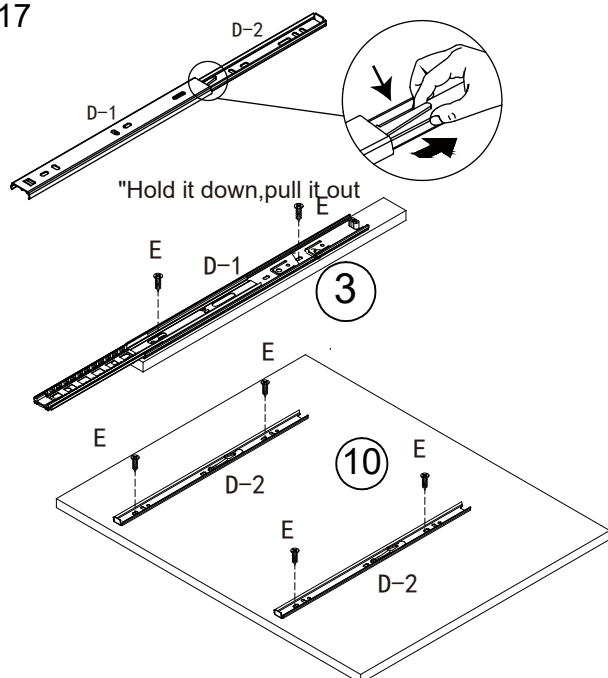


STEP 18

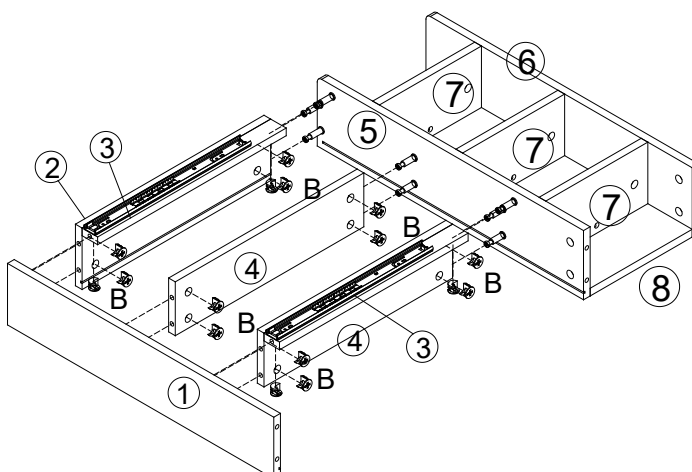


STEP 13

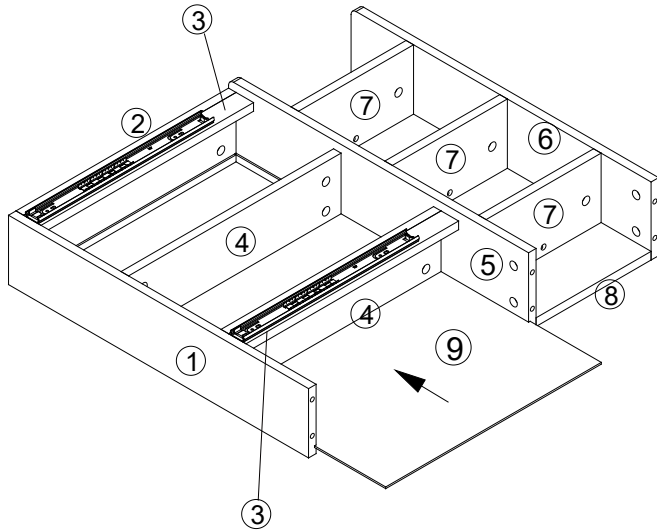


STEP 14

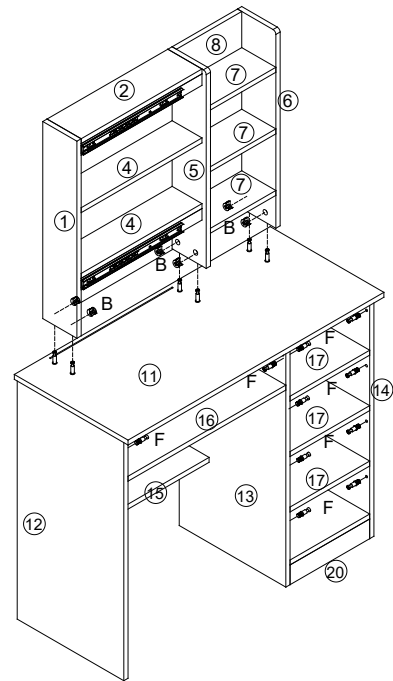

STEP 15

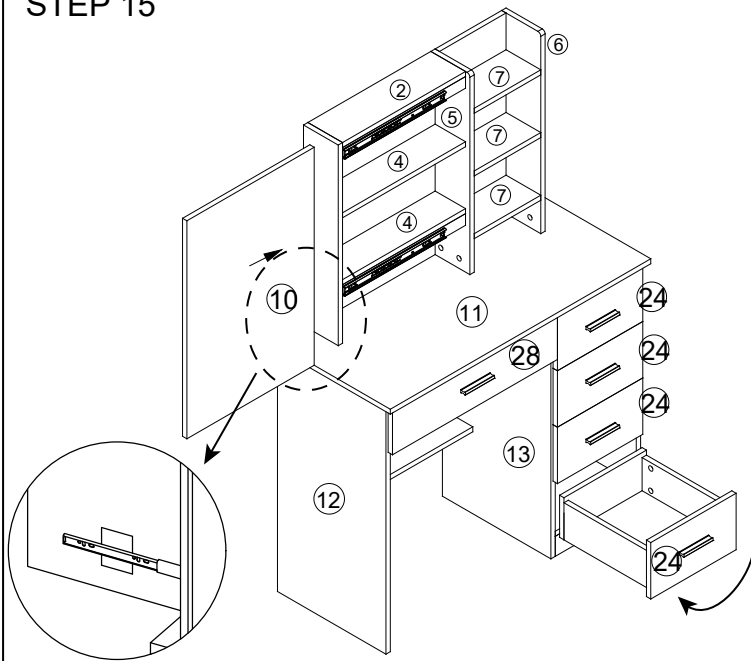

STEP 16

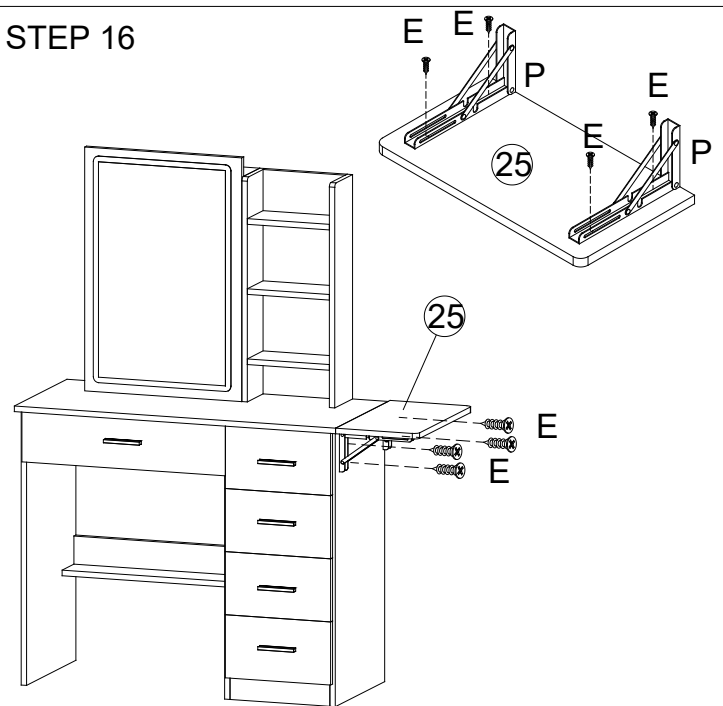

STEP 17

