


ASSEMBLY INSTRUCTIONS INSTRUCTIONS DE MONTAGE


FULL BED/LIT FULL

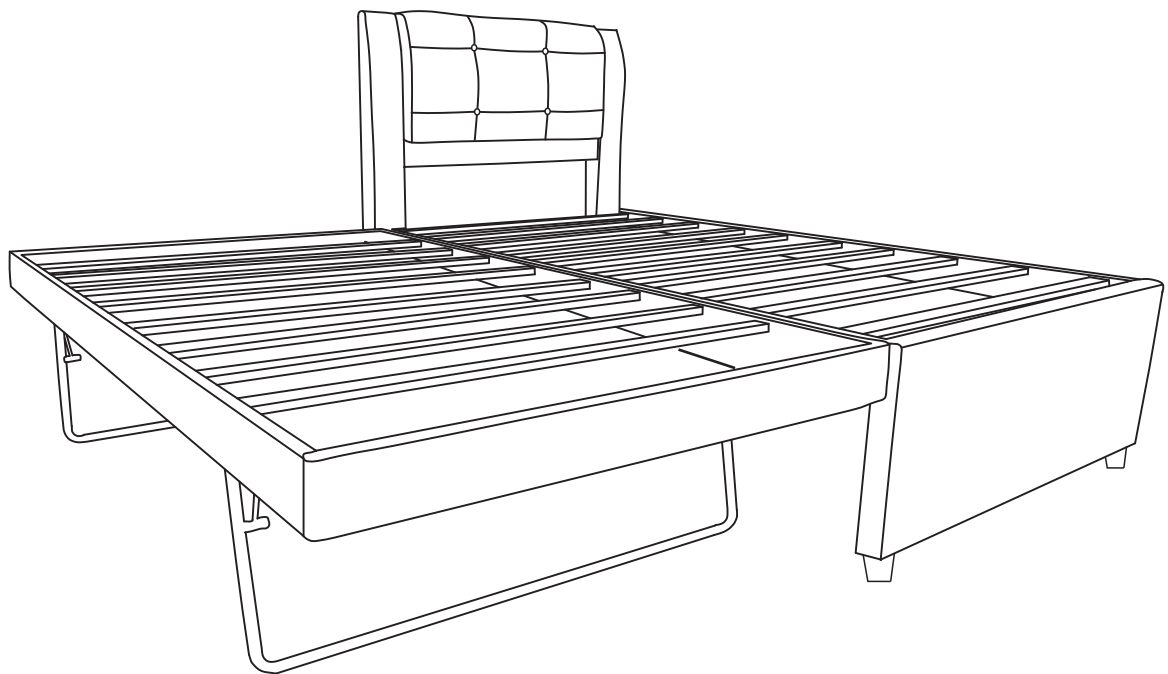

If you have any questions, please feel free to contact us.
Email: lowes.team@qualfurn.net

WF326326/WF326327



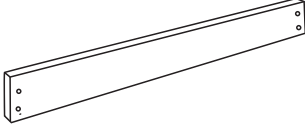
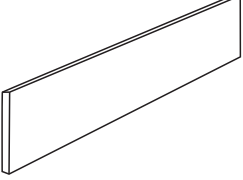



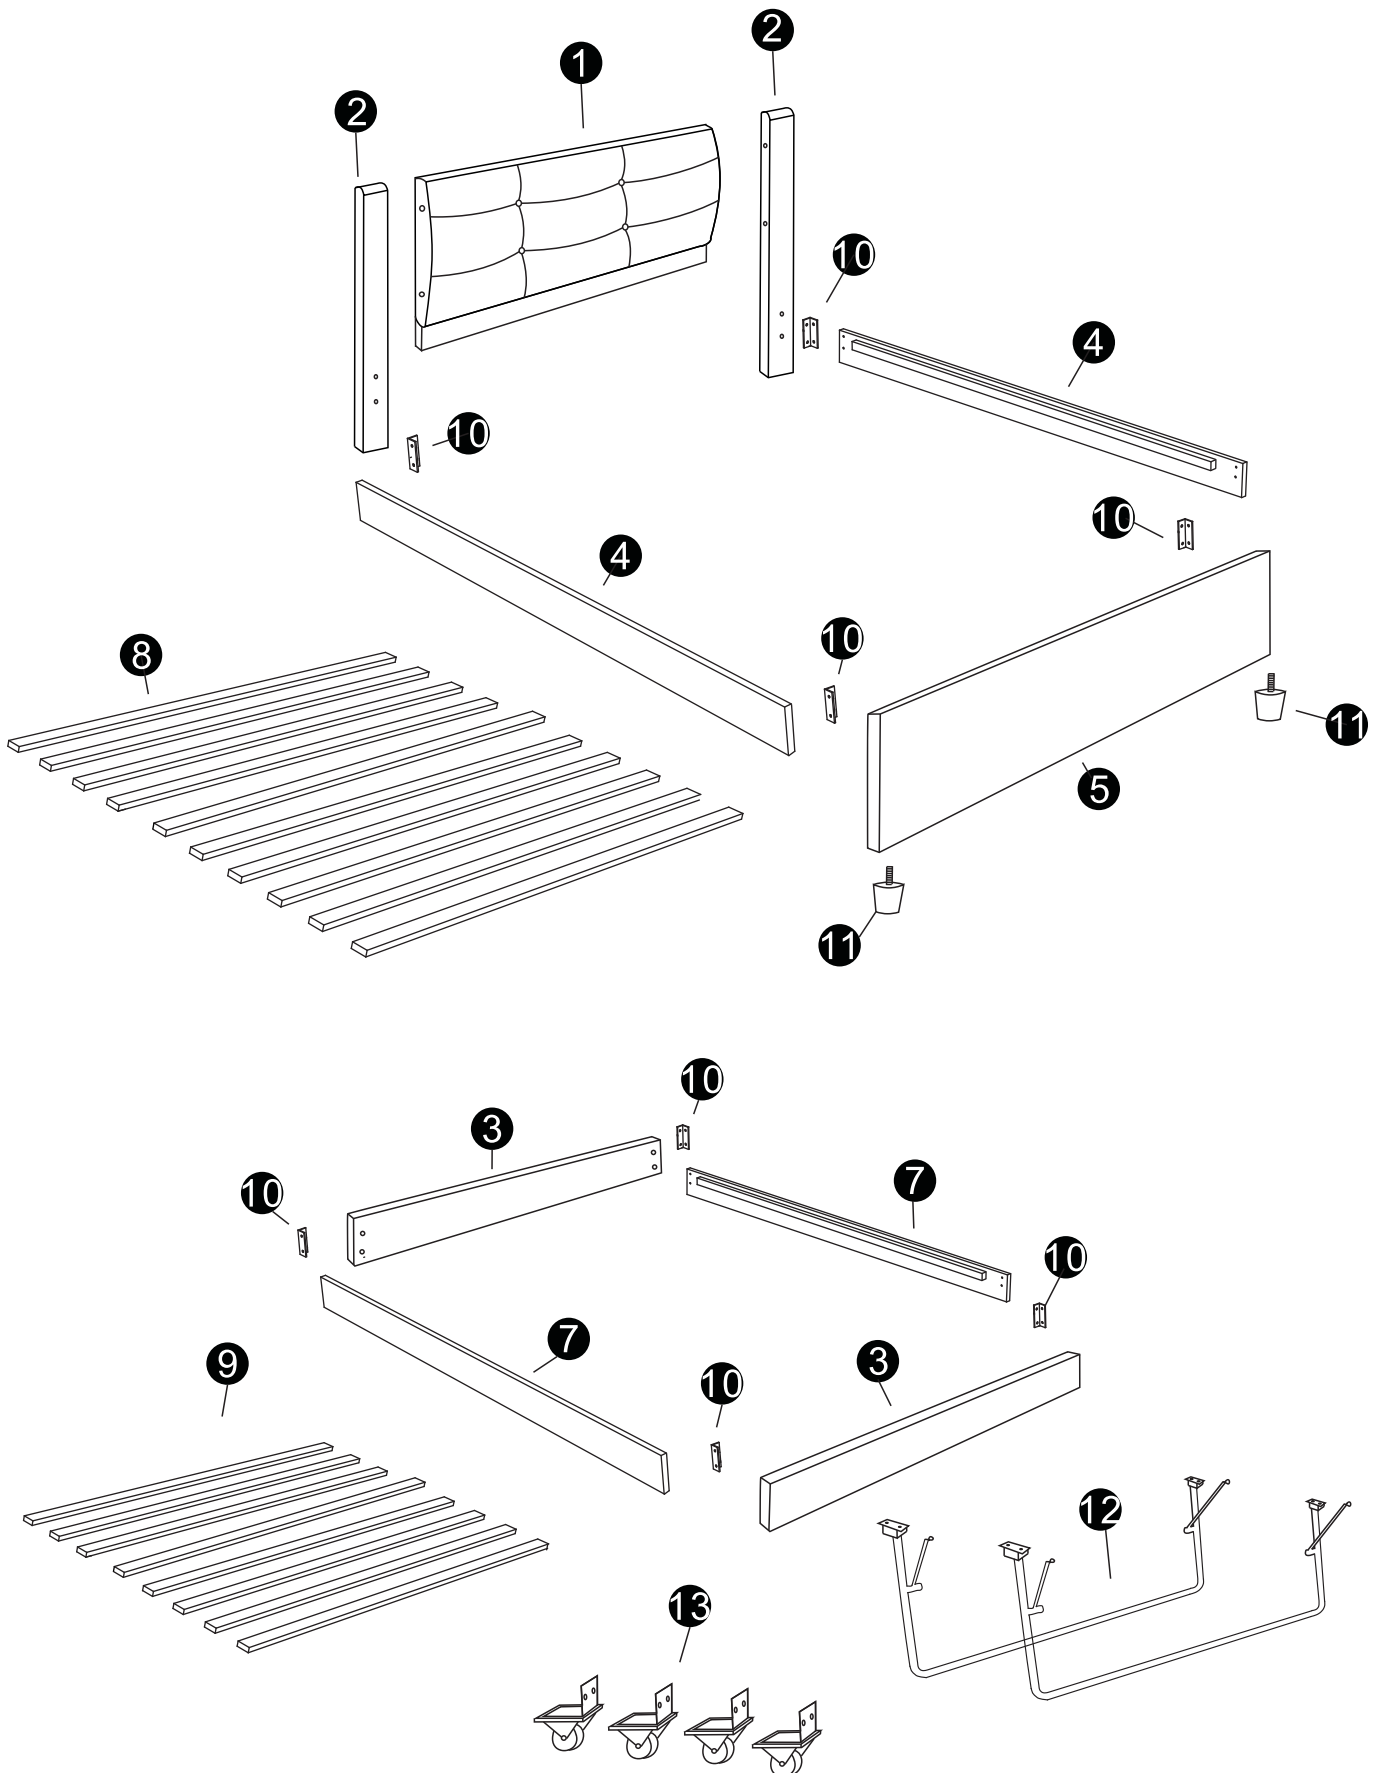
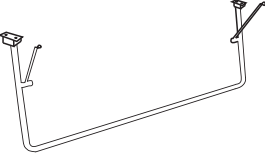

ASSEMBLY INSTRUCTIONS INSTRUCTIONS DE MONTAGE





ASSEMBLY INSTRUCTIONS INSTRUCTIONS DE MONTAGE

PARTS LIST LISTE DE PIÈCES

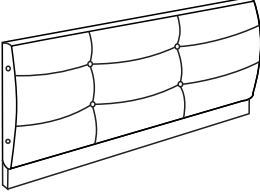WF326326

<p>1 x1</p> 	<p>2 x2(L+R)</p> 	<p>3 x2</p> 	<p>5 x1</p> 
<p>8 x10</p>  <p>Bed board bar Lattes de lit 133cm</p>	<p>9 x8</p>  <p>Bed board bar Lattes de lit 99cm</p>	<p>10 x8</p>  <p>5.5cm</p>	<p>11 x2</p>  <p>7cm</p>
<p>12 x2</p> 	<p>13 x4</p> 		






WF326327
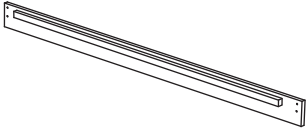
<p>4 x2</p> 	<p>7 x2</p> 		
--	--	--	--

ASSEMBLY INSTRUCTIONS INSTRUCTIONS DE MONTAGE


PARTS LIST LISTE DE PIÈCES

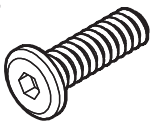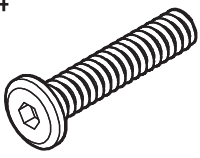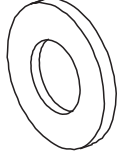

WF326326

A: x32  M6*20mm	B: x24  M6*30mm	C: x4  M8	D: x36  M4*40mm
E: x 1  Allen Ke			


ASSEMBLY INSTRUCTIONS INSTRUCTIONS DE MONTAGE

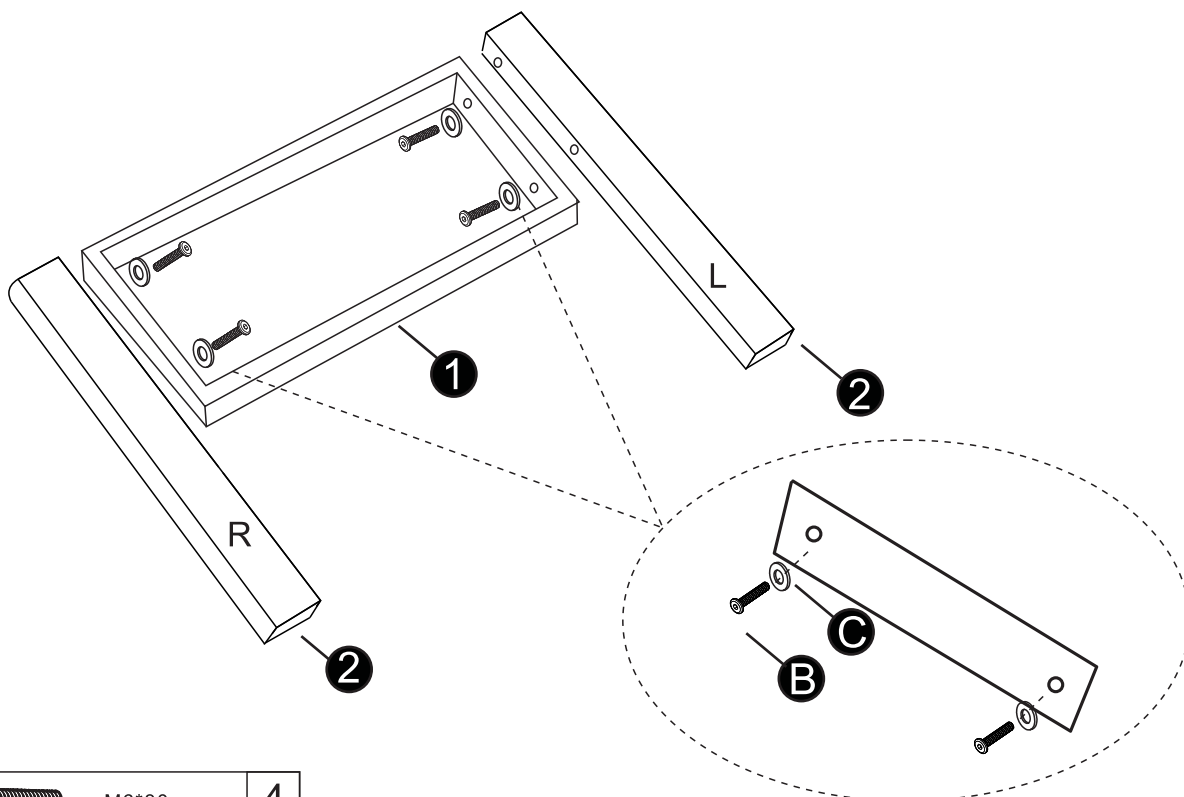STEP 1 ÉTAPE 1



B		M6*30mm	4
C		M8	4


STEP 2 ÉTAPE 2

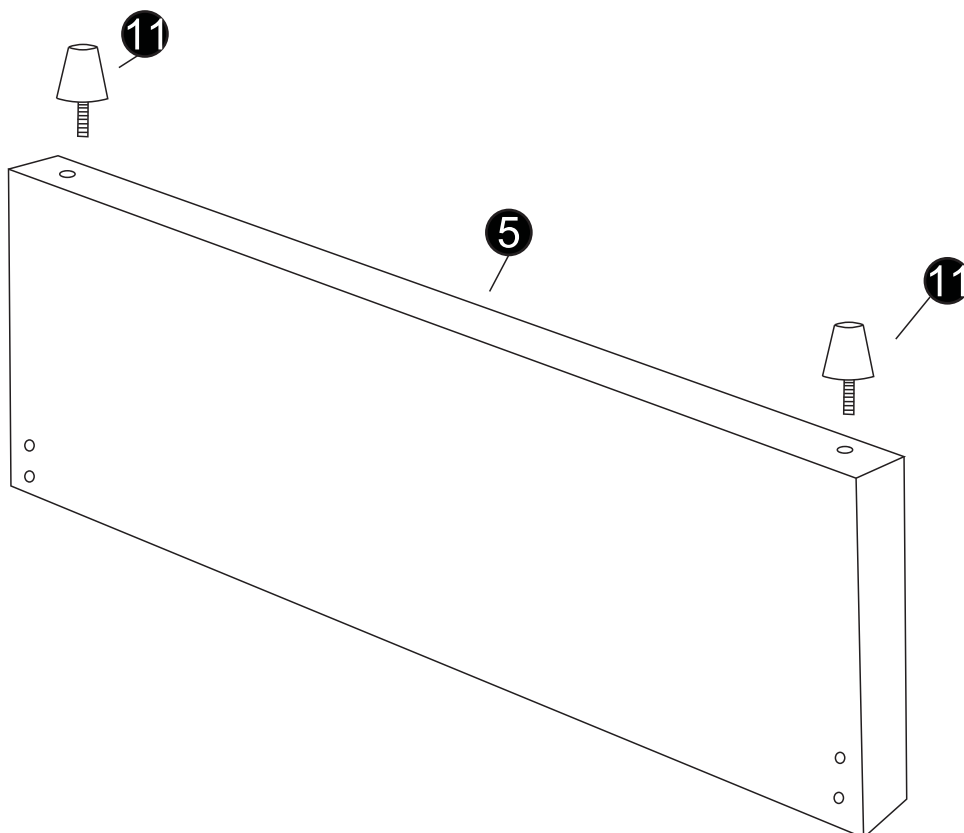

11		2
----	---	---


ASSEMBLY INSTRUCTIONS INSTRUCTIONS DE MONTAGE

STEP 3 ÉTAPE 3

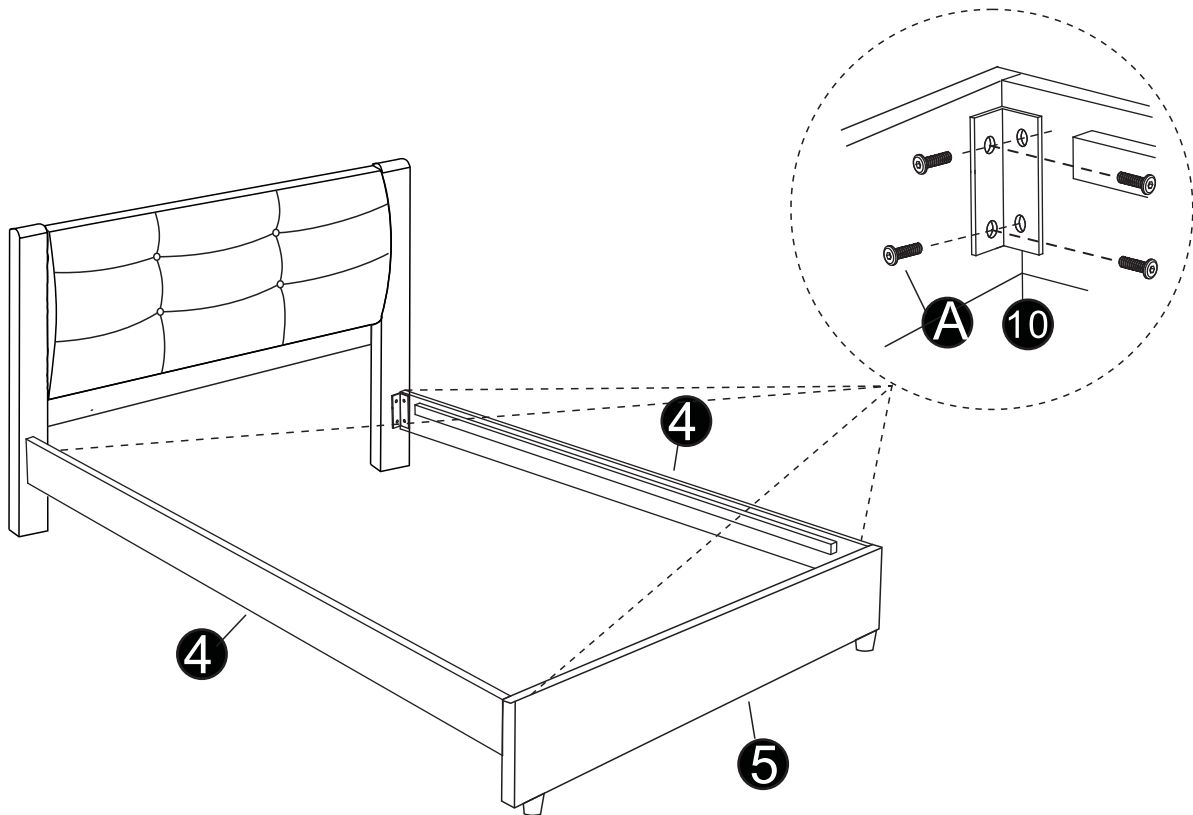

A  M6*20mm 16


STEP 4 ÉTAPE 4

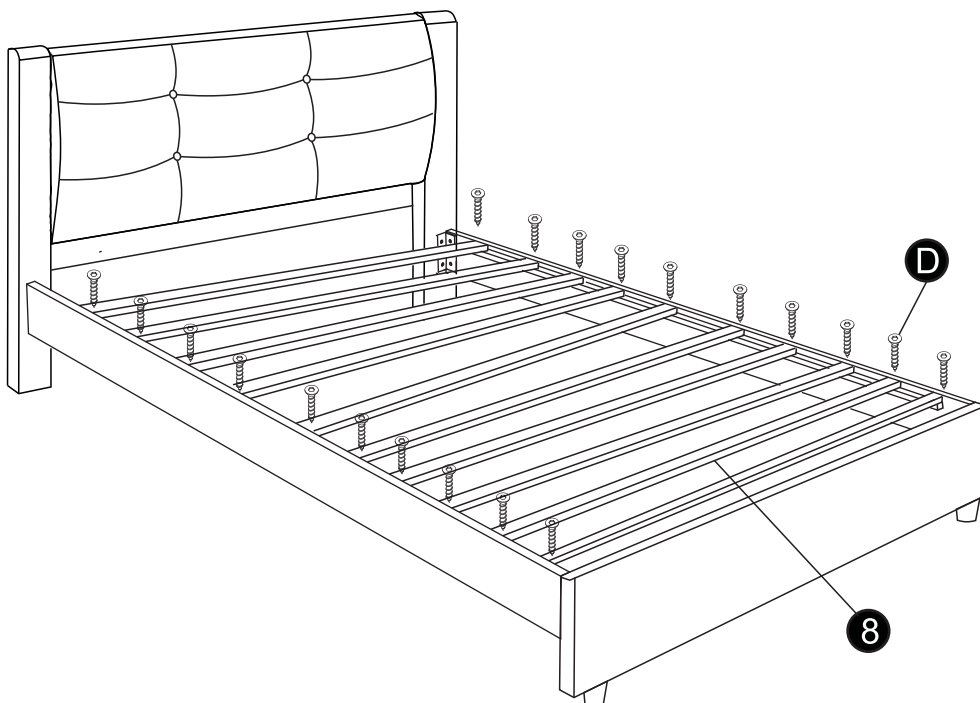

D  M4*40mm 20


ASSEMBLY INSTRUCTIONS INSTRUCTIONS DE MONTAGE

STEP 5 ÉTAPE 5

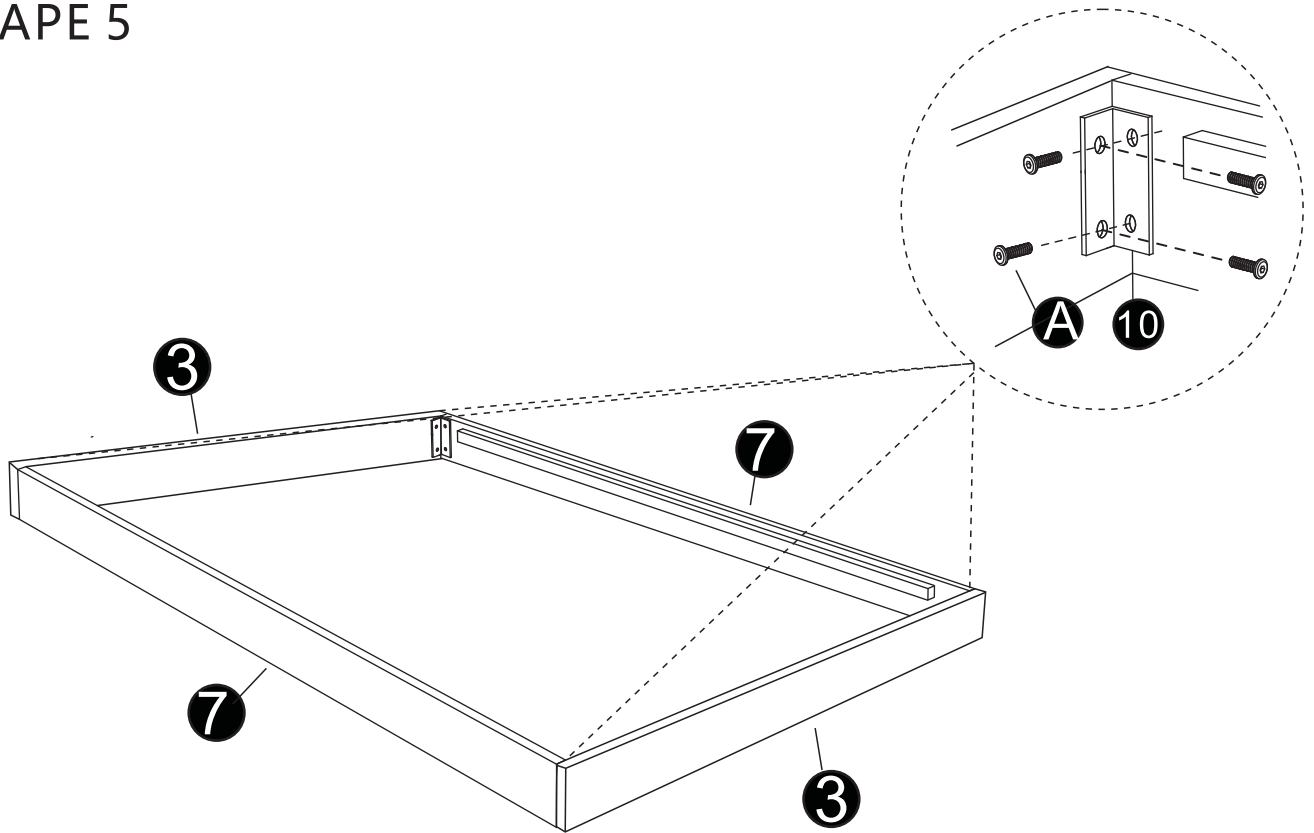

A  M6*20mm 16


STEP 6 ÉTAPE 6

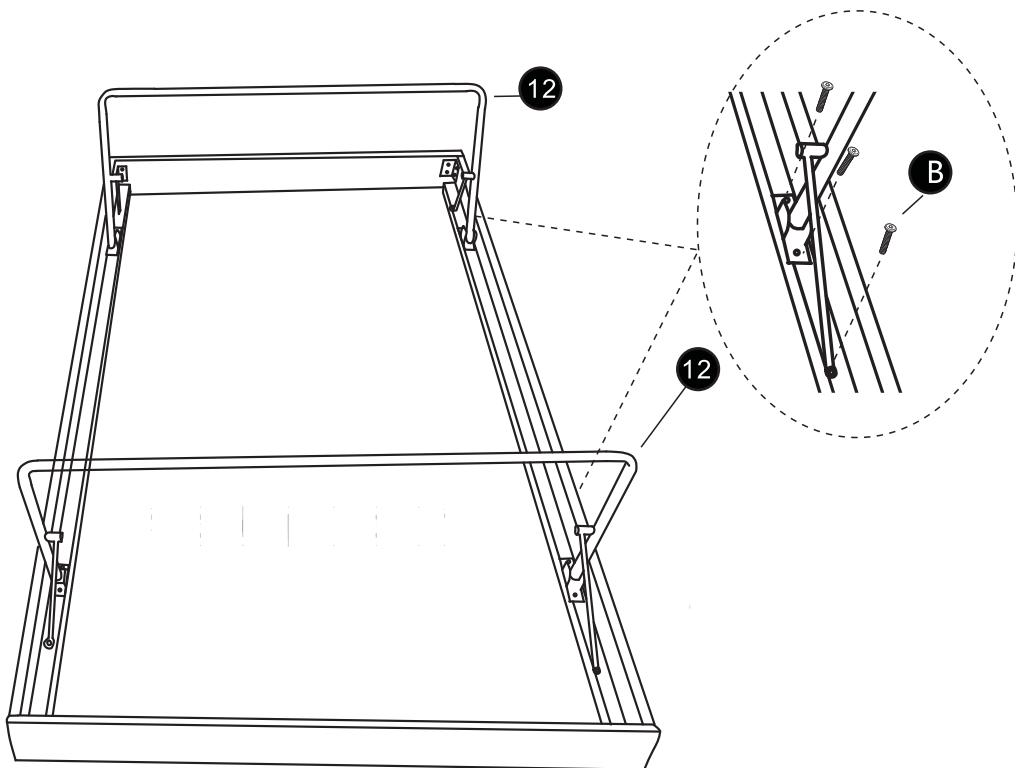

B  M6*30mm 12


ASSEMBLY INSTRUCTIONS INSTRUCTIONS DE MONTAGE

STEP 7 ÉTAPE 7

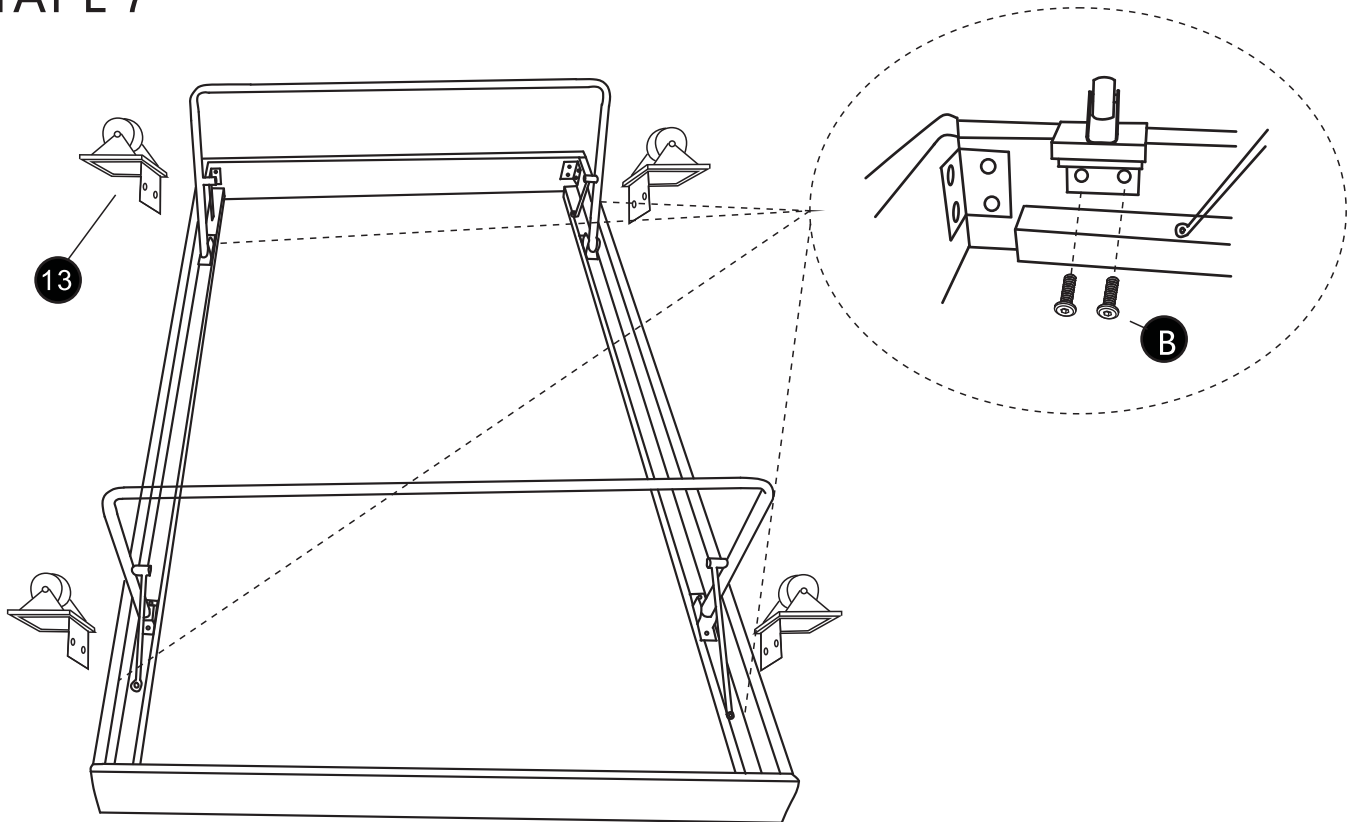

B  M6*30mm 8


STEP 8 ÉTAPE 8

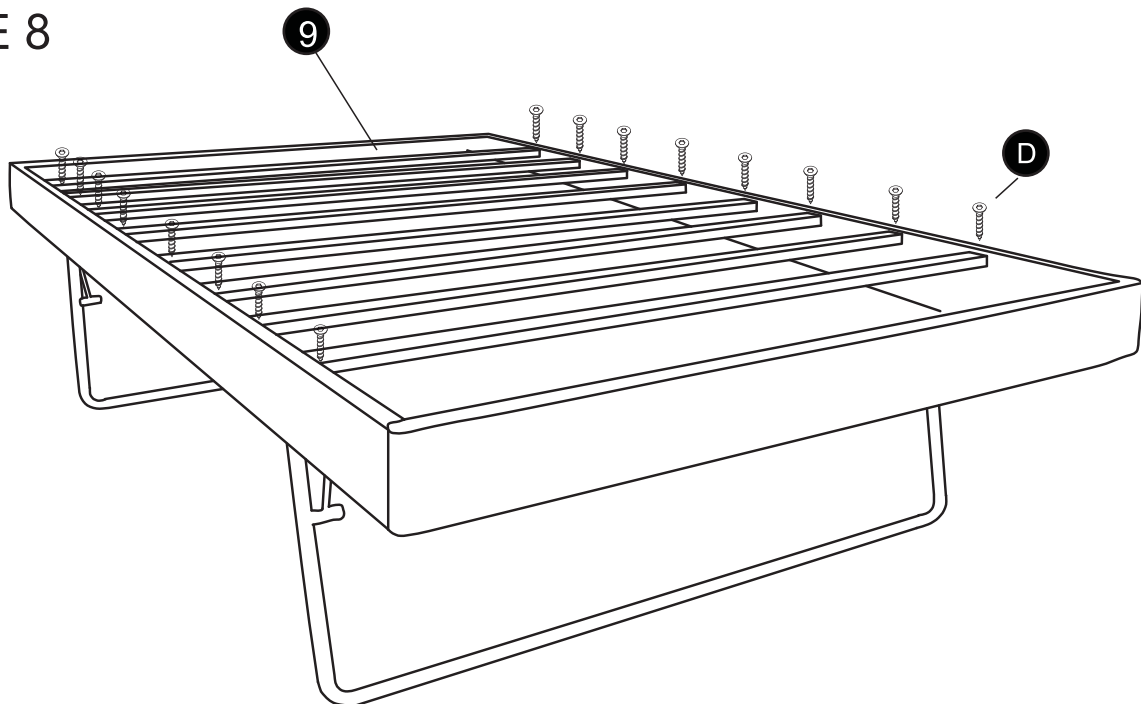





D  M4*40mm 16

ASSEMBLY INSTRUCTIONS INSTRUCTIONS DE MONTAGE

STEP 9 ÉTAPE 9

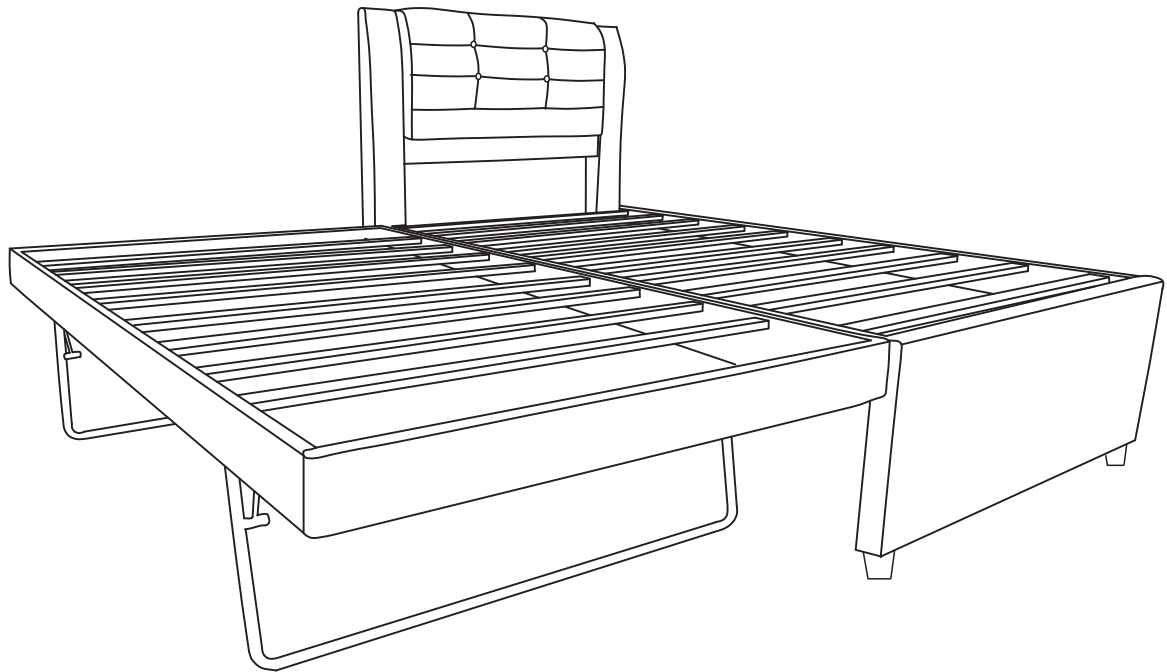

STEP 10 ÉTAPE 10

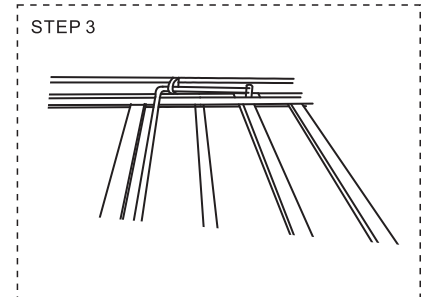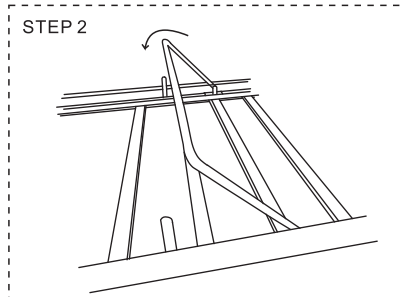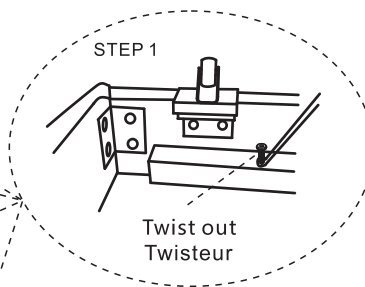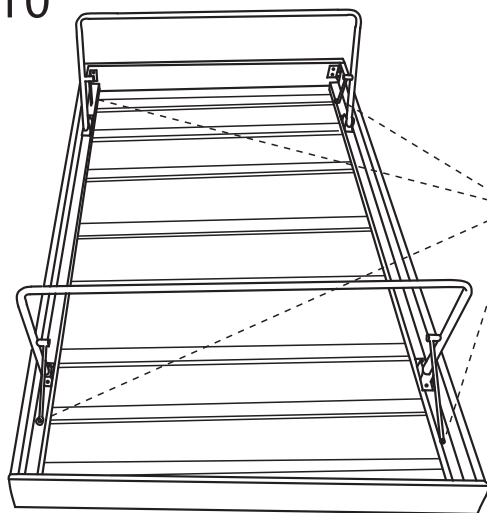

ASSEMBLY INSTRUCTIONS INSTRUCTIONS DE MONTAGE

STEP 11 ÉTAPE 11

