


Parts Breakdown

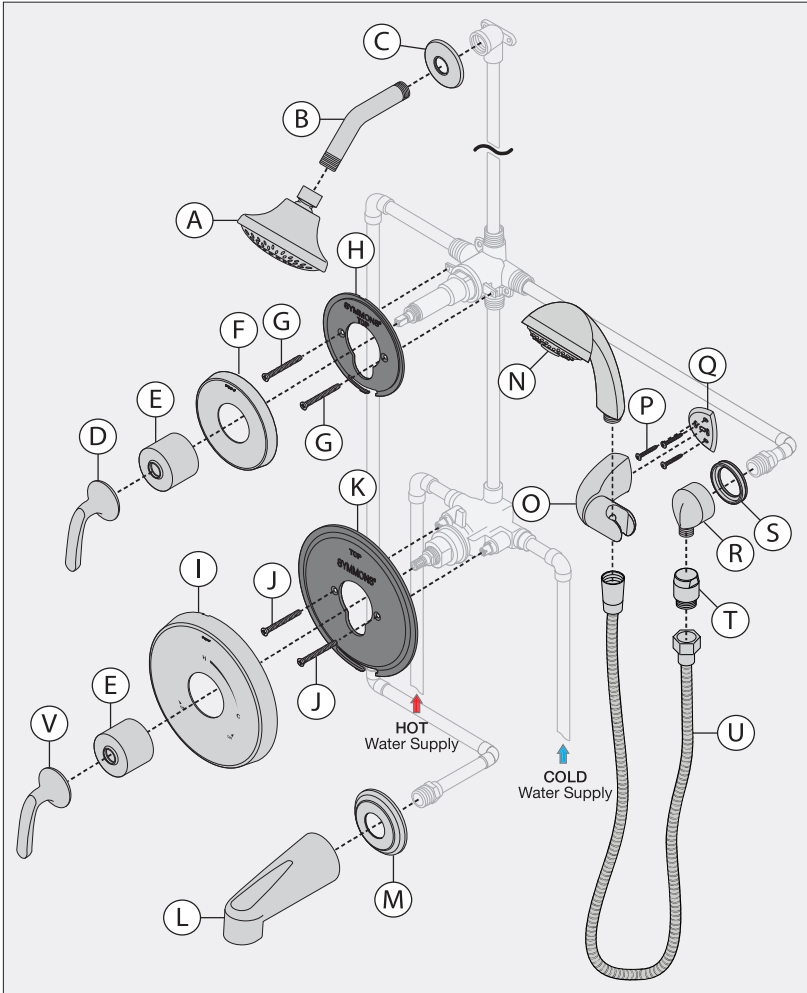

Notes:

- 1) Apply a bead of silicone around the perimeter of all shower trim installed flush to the finished wall (less mounting plates and brackets). Leave opening on bottom of escutcheons for weep hole.
- 2) Apply plumber tape to all threaded connections.






Replacement Parts

Item	Description	Part Number
A	Showerhead	552SH
B	Shower Arm	
C	Flange	300S
D	Diverter Handle Assembly	RTS-006 (5505) RTS-039 (5506)
V	Shower Handle Assembly	RTS-006
E	Dome Cover	T-19/20
F	Diverter Escutcheon	
G	Screws	RTS-038
H	Mounting Plate	
I	Shower Escutcheon	
J	Screws	RTS-005
K	Mounting Plate	
L	Tub Spout	552TS
M	Escutcheon	
N	Hand Shower	552W
O	Wall Cradle	
P	Screws	EF-106
Q	Wall Cradle Plate	
R	Wall Elbow	
S	Escutcheon	RO-004
T	In-line Vacuum	
U	Breaker & 60" Hose	EF-104

Notes:

- 1) Append -STN to part number for Satin Nickel finish; -SBZ for Seasoned Bronze.
- 2) Append -1.5 or -2.0 to showerhead or hand shower for low flow.

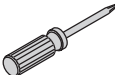Tools Required for Installation

Adjustable Wrench	
Allen Wrench (3/16")	
Phillips Head Screwdriver	
Plumber Tape	
Power Drill	
Silicone	