



MURDESIGN™

Installing your Murdesign Panels

The following are the tools & accessories needed to successfully install your panels:

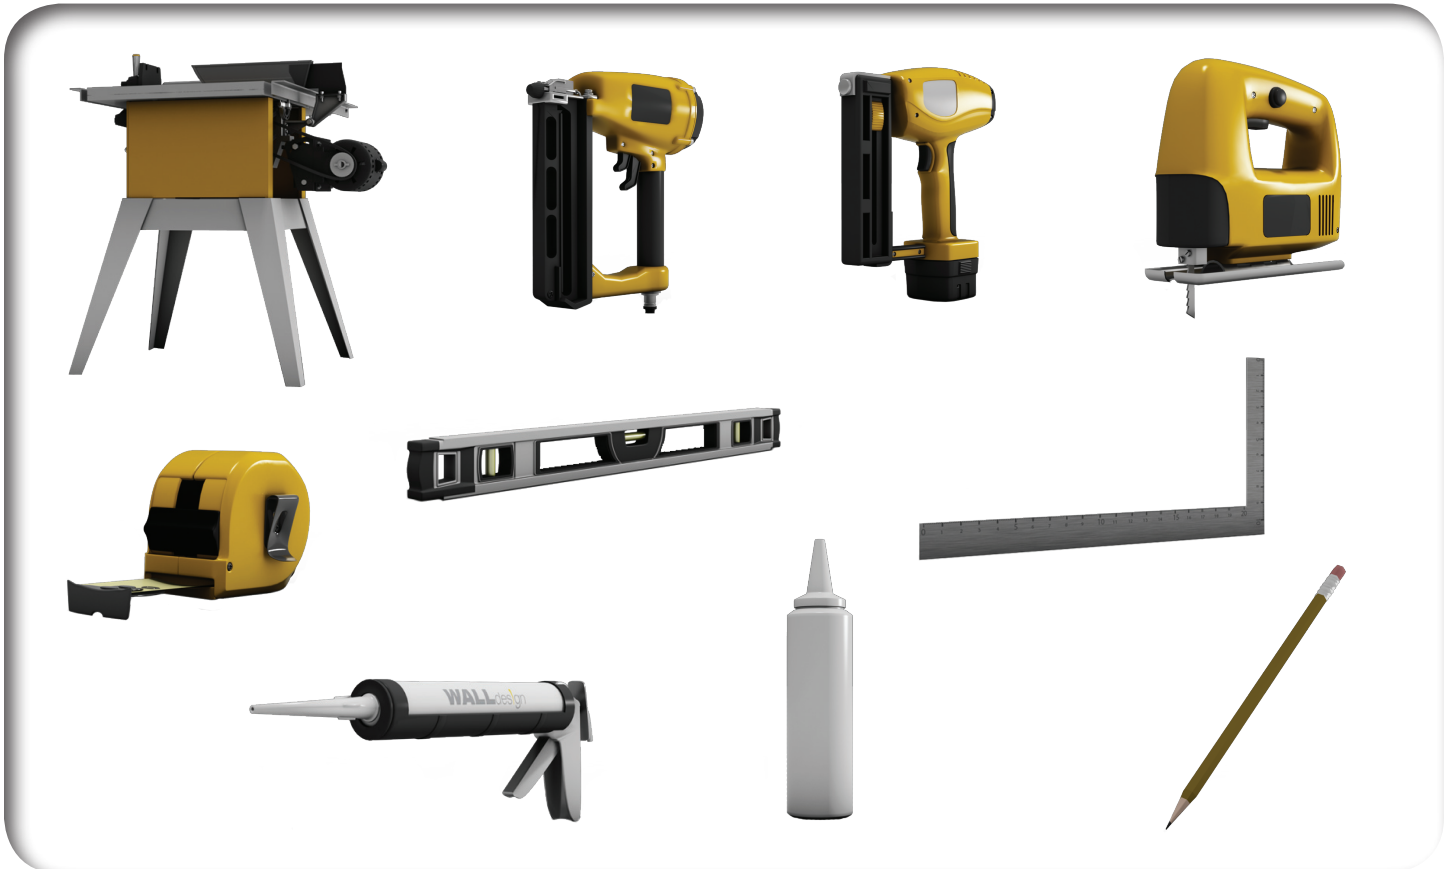

Installation Instructions

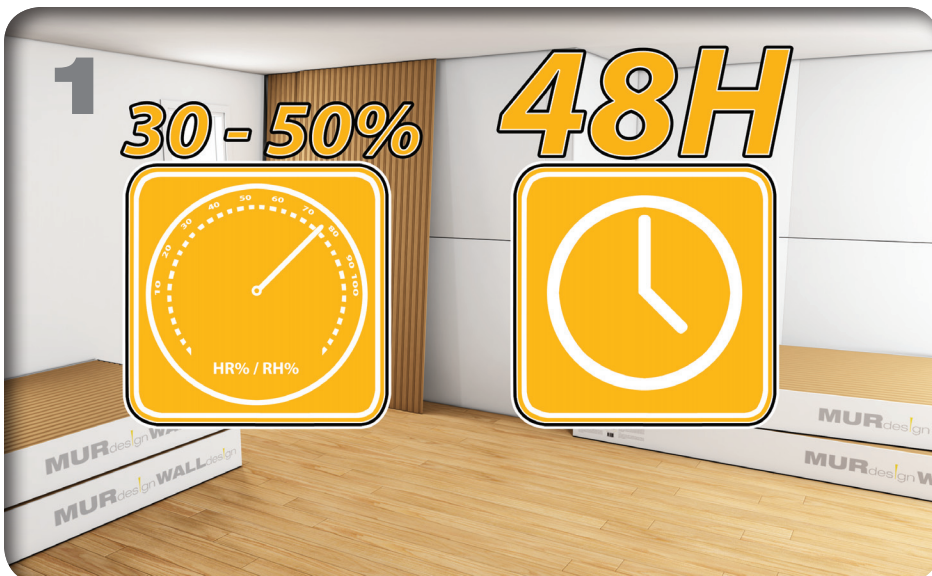


PREPARE

Prior to installation, we strongly recommend following these important steps:

- Store your Murdesign panels in the room where you plan to install them for a period of **48 to 72 hours**. It is essential that they become acclimatized to the room temperature and humidity.
- Ensure that the relative **humidity** in the room **is between 30% and 50%**. Humidity levels impact the wood's expansion and contraction.

2

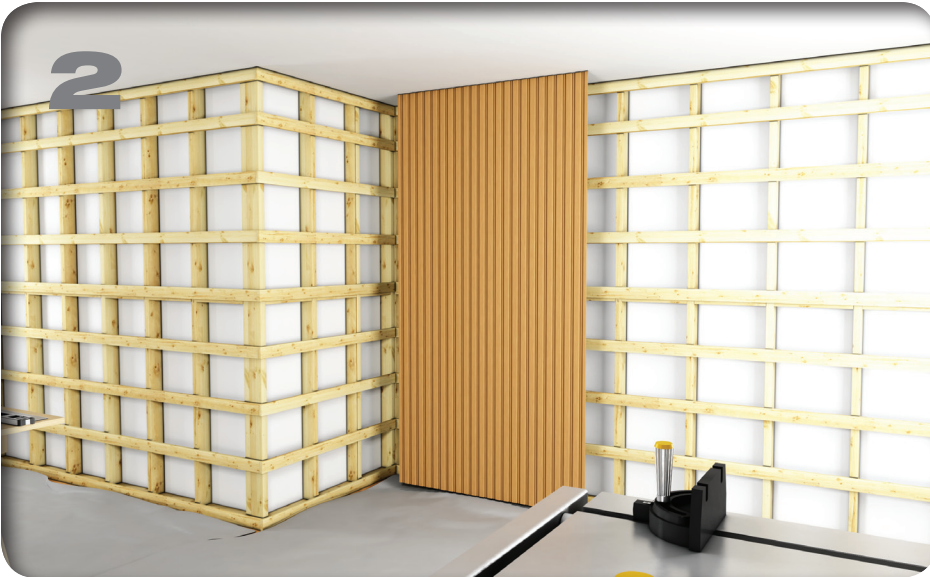


LEVEL WALLS

Ensure walls are level. Panels can be installed directly on studs or wallboard.

For best results, we recommend first adding furring strips to assist in installation and to provide increased stability.

3

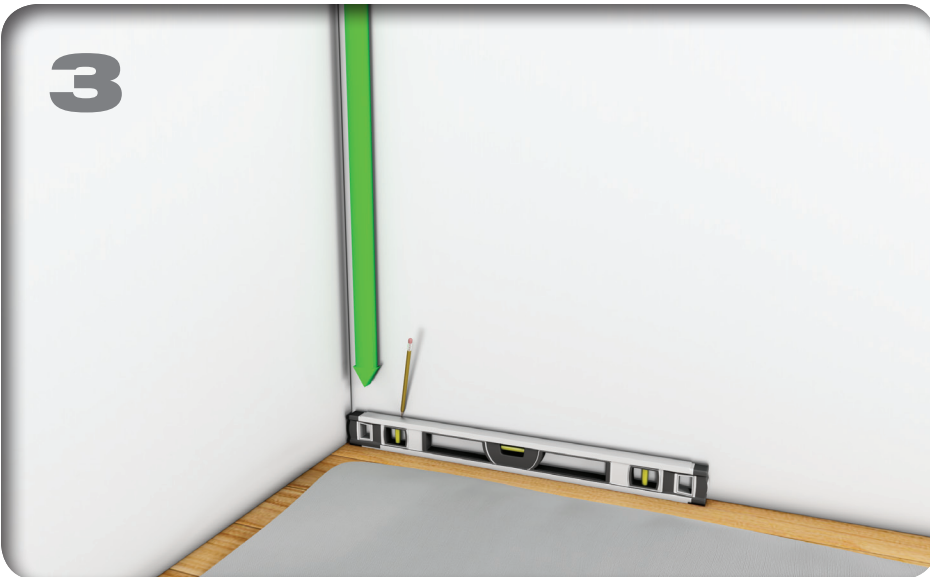


USE A LEVEL

Always use a level!

Start at the base of the wall and draw a straight line.

This will act as your reference line to ensure your panels are straight, even if the walls are not square.

4

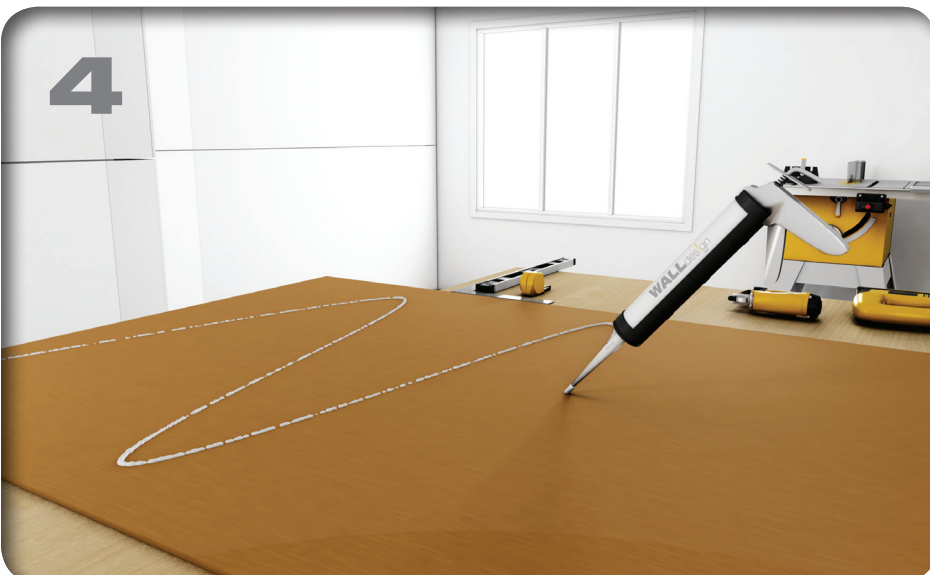

GLUE

Lay panel flat on the floor front side down, then **apply construction adhesive** to the back of the panel.

This will assist in securing panel on wall in preparation for nailing.

5



NAIL

Line up bottom of the panel to your reference line and adhere the panel to the wall.

Nail the panel to the wall for added security and durability. Position nails in less visible locations for a smooth finish.

6



GLUE JOINTS

Reinforce each joint by applying construction adhesive, then wipe away excess adhesive.

This will prevent separation and create a seamless wall design.

REPEAT & ENJOY!

Repeat steps 4-6 to complete the installation, then sit back and enjoy!

The above instructions can be used for vertical, horizontal and diagonal installations. Murdesign offers a variety of half and full wall design options suitable for any interior décor.

Scan the QR code to visit our website for additional information, installation tips and design ideas for any room in your home!

Images and illustrations are intended for visual reference only
Murdesign and logo are trademarks of Mono Serra Group. All rights reserved.

MURDESIGN

Questions?



... or contact us at murdesign@monoserra.com