



Patio Furniture Sets

DL-P23012-D.Blue : W1703S00024
DL-P23012-Beige : W1703S00025
DL-P23012-Grey : W1703S00026

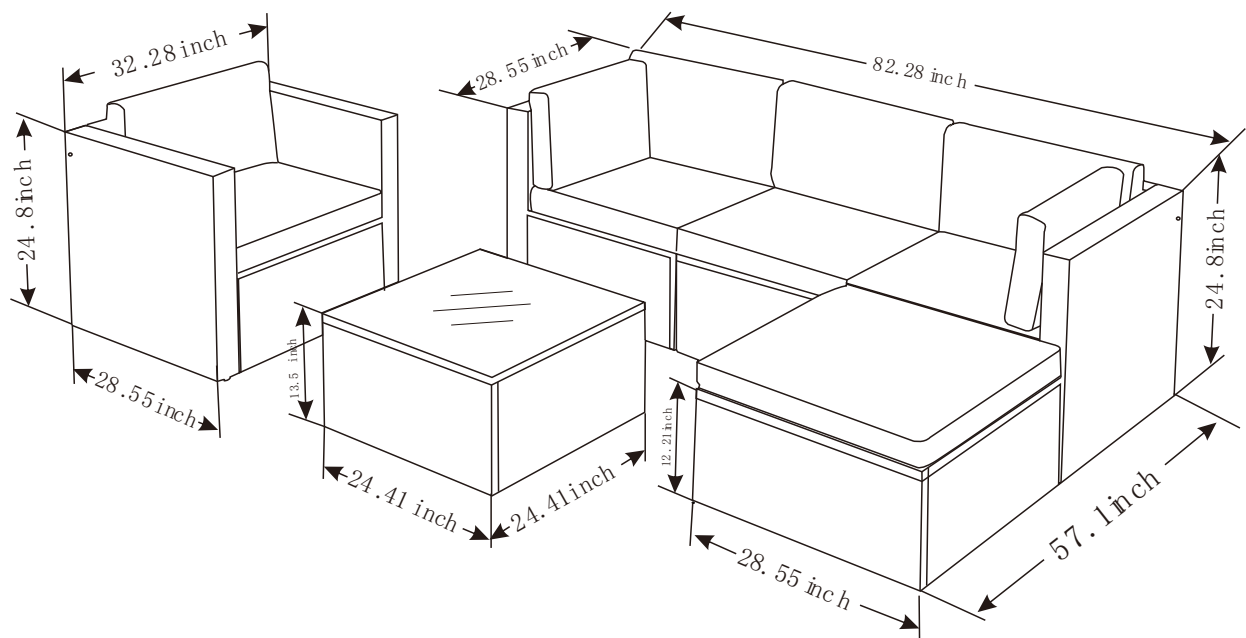

Notice:

1. 50% Tighten before fixing all screws, Allen wrench is recommended instead of an electric drill.
2. Place the item on a flat ground to adjust and make sure it remains stable.
3. Tighten up all screws with tools gradually.
4. If the screws are not aligned with holes during assembly, please loosen all the other screws to 50% and continue the assembly process.
5. If the item is not stable, please loosen all the screws, adjust it on a flat ground and tighten up all screws again.
6. Note : If one or some screws are fully tightened during assembly, chances are the others will not be aligned with holes. In addition, all the holes are designed to be relatively larger to provide more space for the adjustment of the screws.

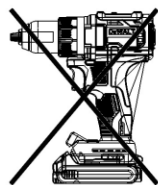

Ax48



M6*35mm

Bx4




M6*110mm

Cx80




M6

Dx1

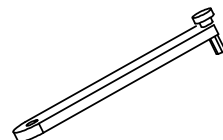

M6


Ex2




Fx28







M6*30mm

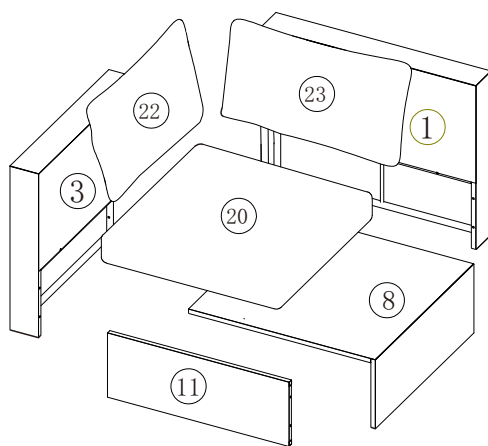


x1

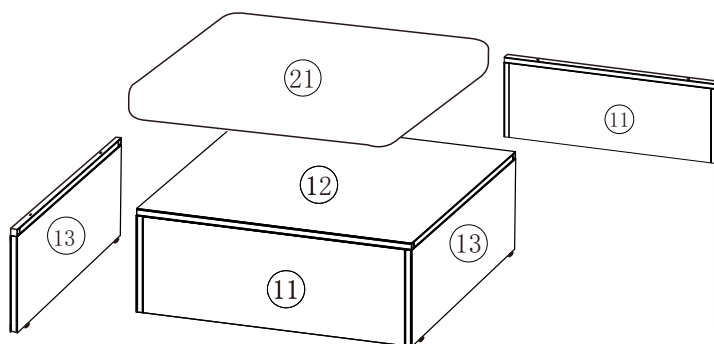


x1

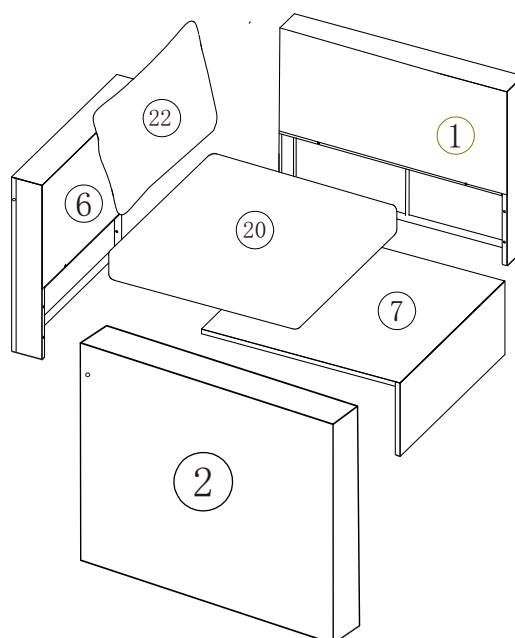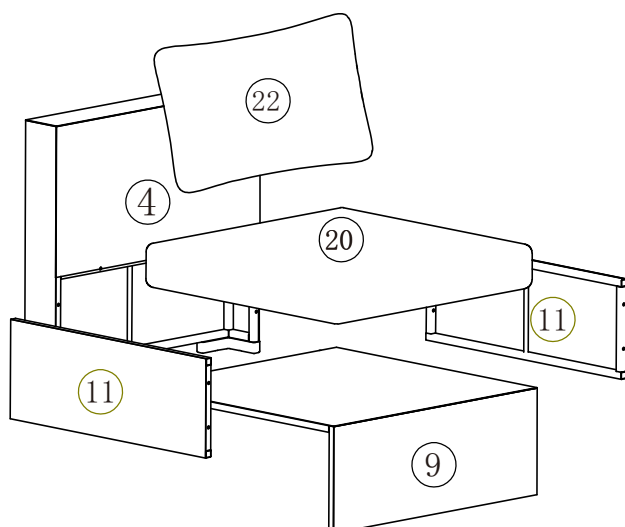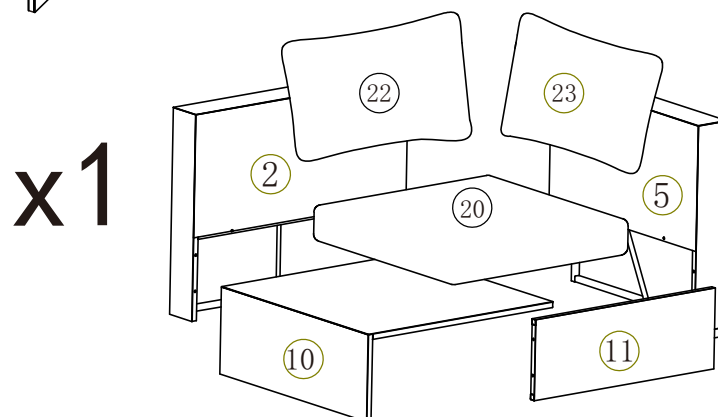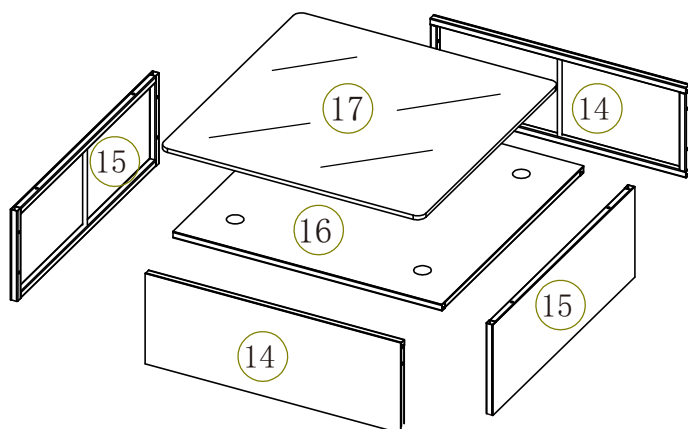


Box: 1/3

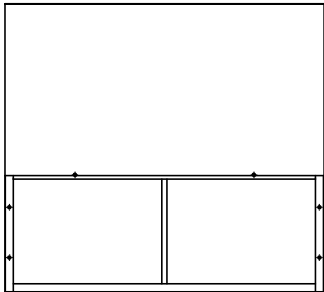


2 x1

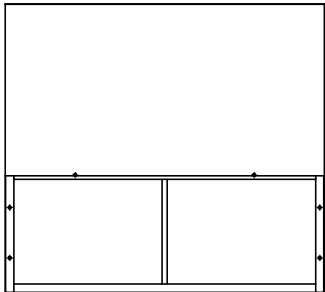


4 x1

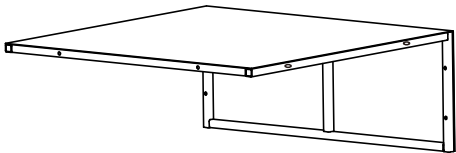


8 x1

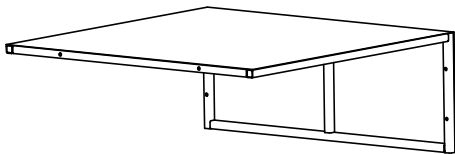


10 x1




14 x2




15 x2

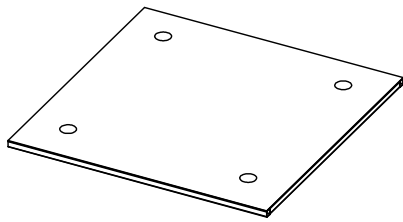


16 x1

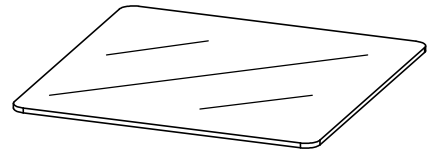


17 x1

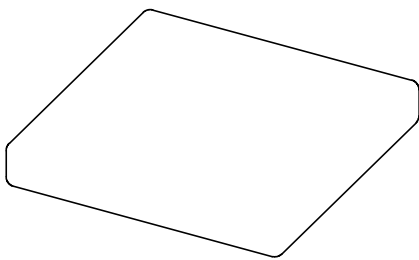


20 x2

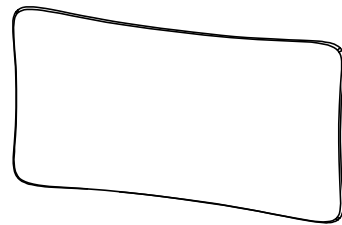


22 x3

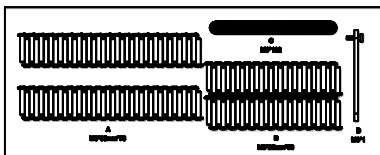


Box:2/3

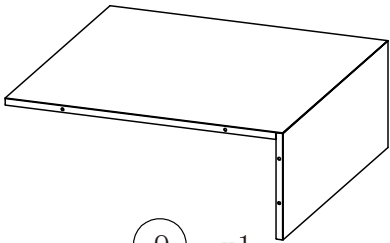


9 x1

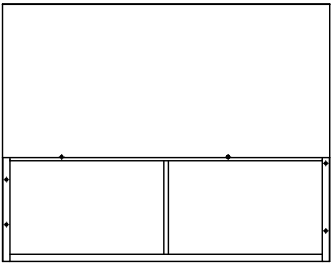


5 x1

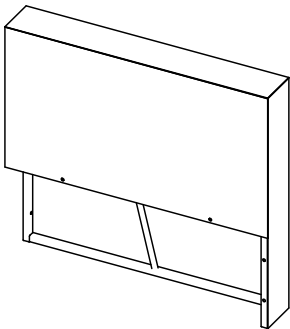


6 x1

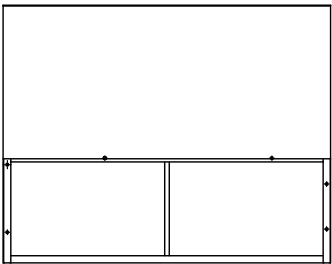


3 x1

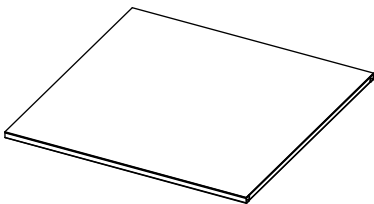


12 x1

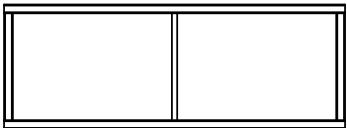


11 x6

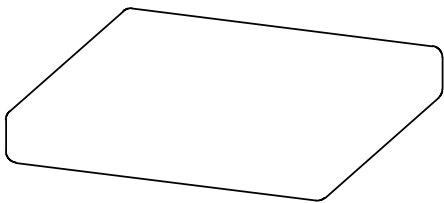

20 x1

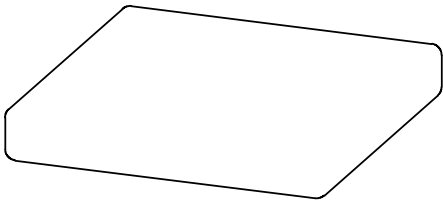


21 x1

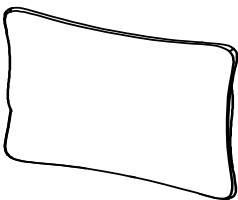


23 x2


Box:3/3

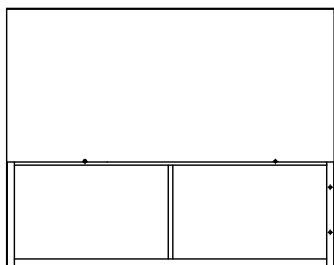


1 x1

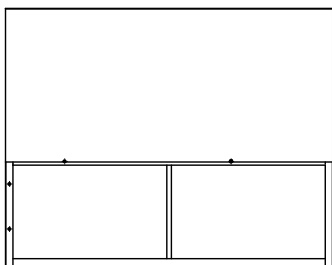


2 x1

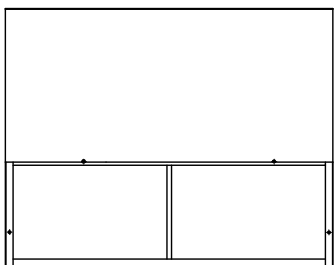


6 x1

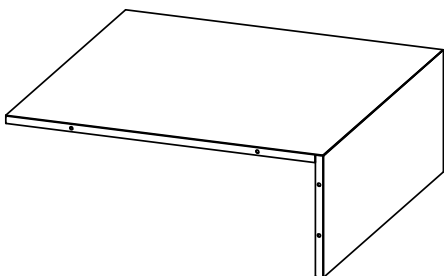

7 x1

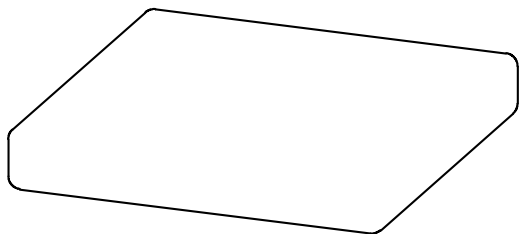


20 x1

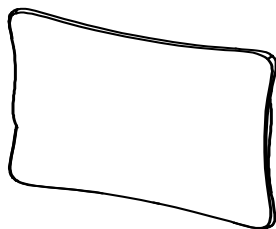

23 x1


1

Ax1  M6x35	Bx1  M6x110	Cx2  M6	D  M6		
---	--	--	--	--	---

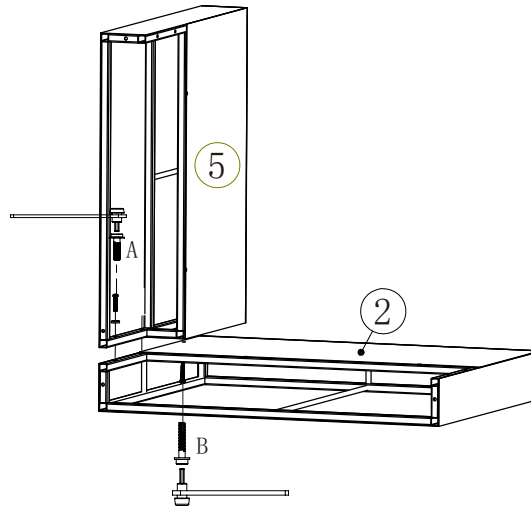



2

Ax6  M6x35	Cx6  M6	D  M6		
---	--	--	--	---

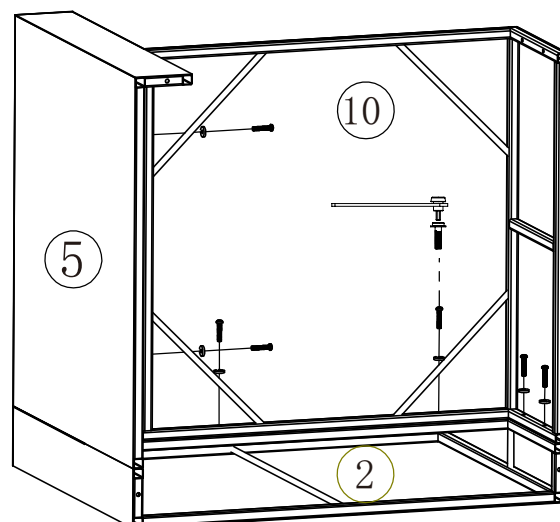




3

Ax4  M6x35	Cx4  M6	D  M6			
---	--	--	--	--	---

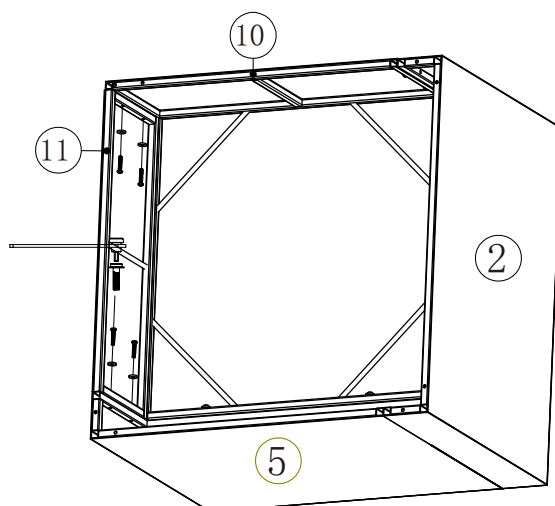


4

Ax4  M6x35	Cx4  M6	D  M6			
---	--	--	--	--	---

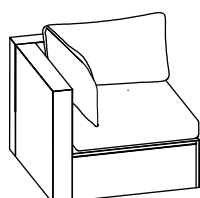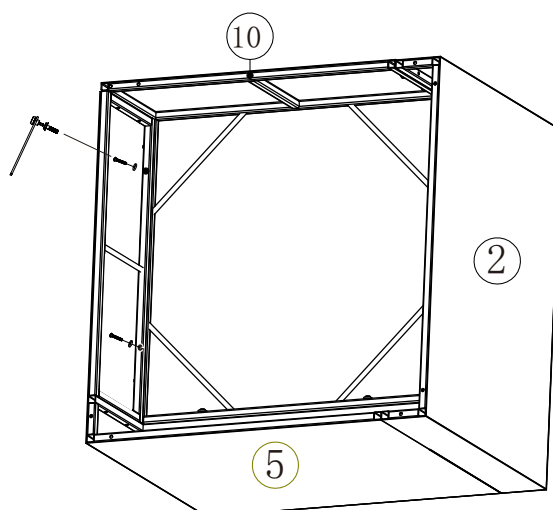


1

Ax1  M6x35	Bx1  M6x110	Cx2  M6	D  M6	
---	--	--	--	---


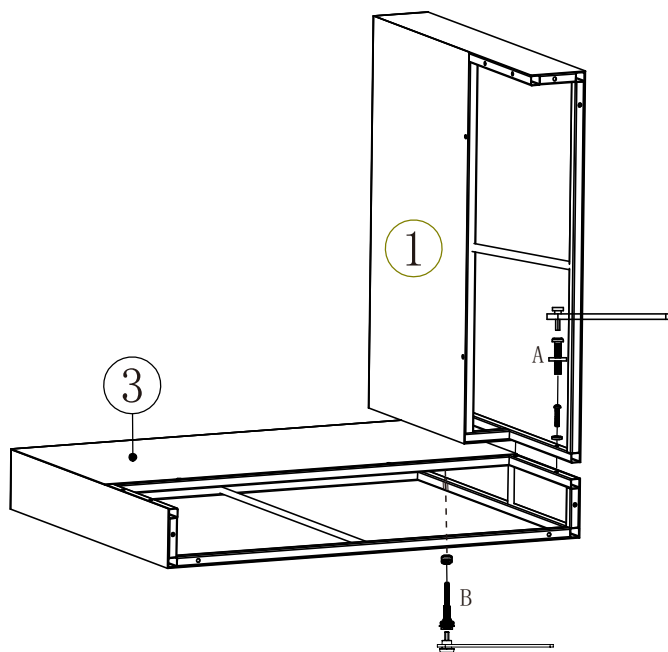



2

Ax6  M6x35	Cx6  M6	D  M6	
---	--	--	---

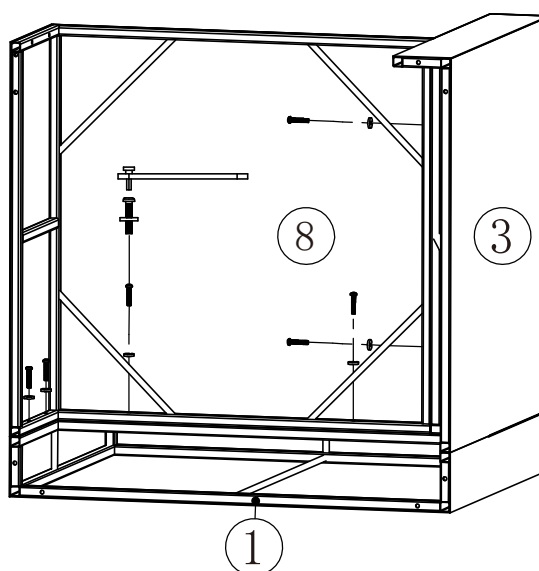



3

Ax4  M6x35	Cx4  M6	D  M6		
---	--	--	--	---

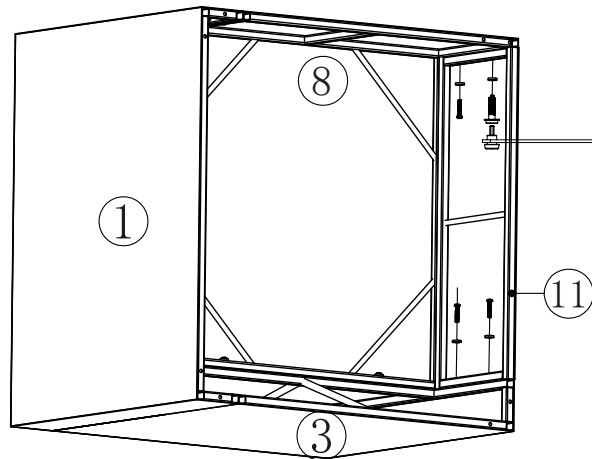



4

Ax2  M6x35	Cx2  M6	D  M6		
---	--	--	--	---

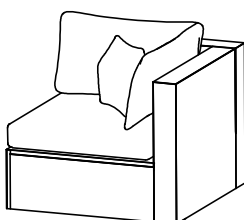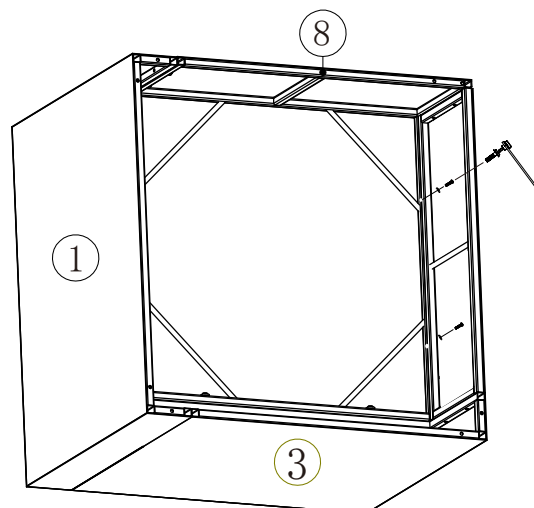




1

Ax4  M6x35	Cx4  M6	D  M6		
---	--	--	--	---

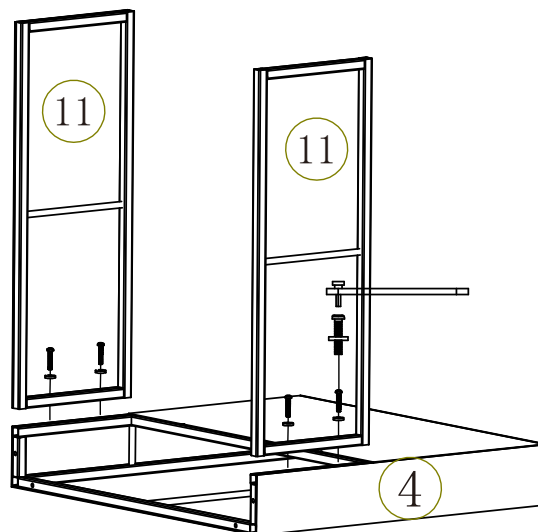


2

Ax6  M6x35	Cx6  M6	D  M6		
---	--	--	--	---

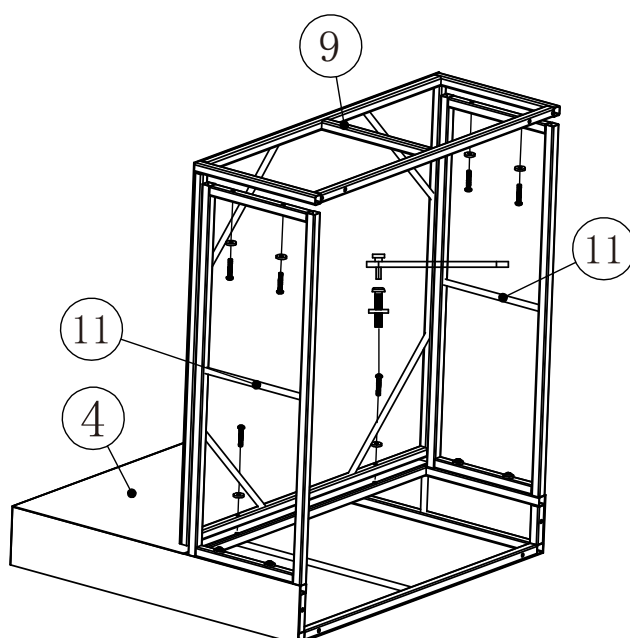
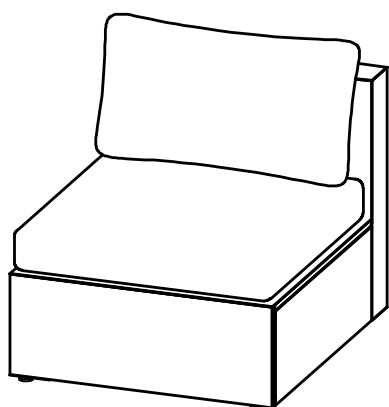



1

Fx4  M6x30	Cx4  M6	D  M6			
---	--	--	--	--	--

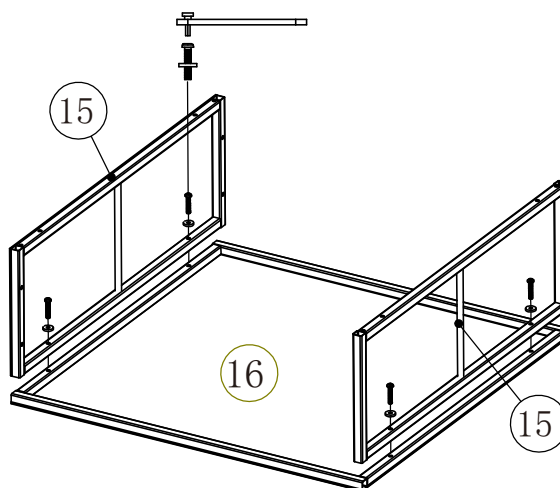




2

Fx8  M6x30	Cx8  M6	D  M6		
---	--	--	--	---


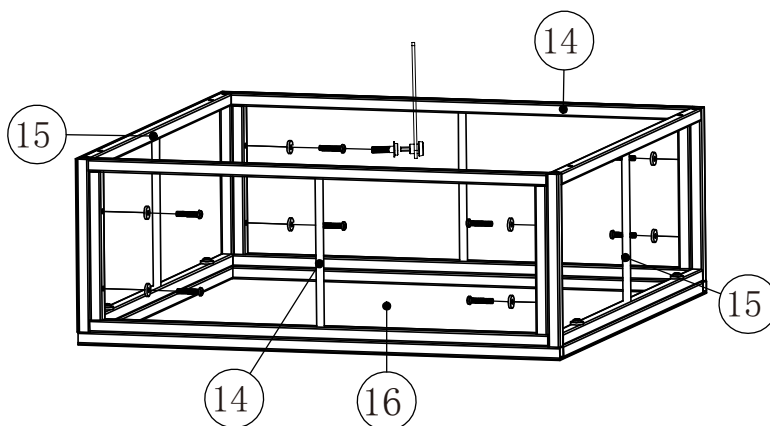



3

17x1 				 50%
---	--	--	--	--

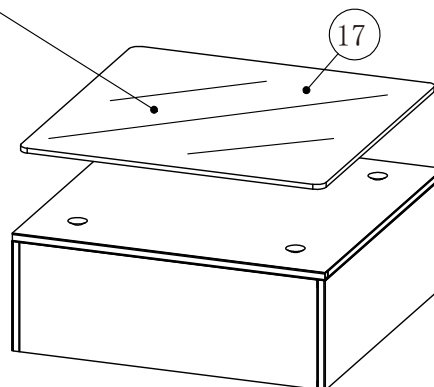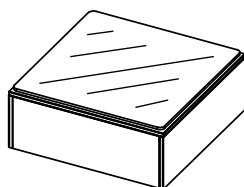




1

Fx4  M6x30	Cx4  M6	D  M6		 100%
---	--	--	--	---


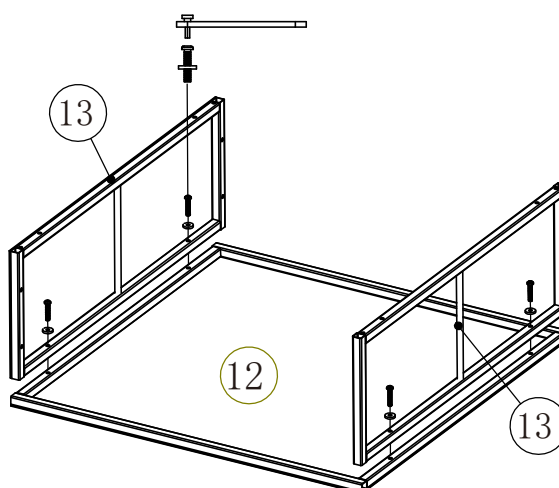



2

Fx12  M6x30	Cx12  M6	D  M6	
--	---	--	---

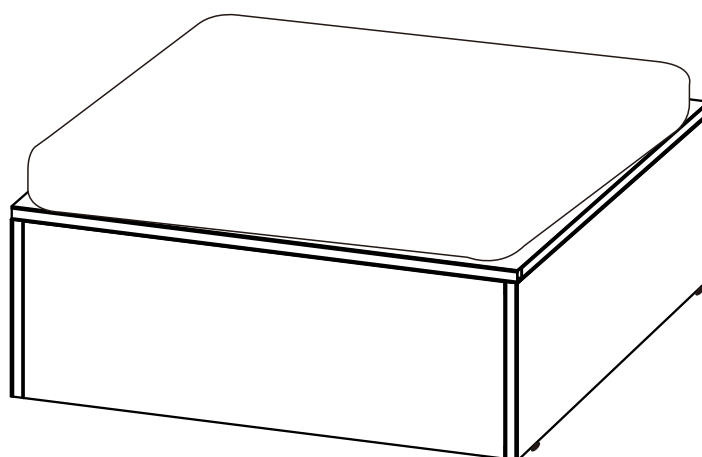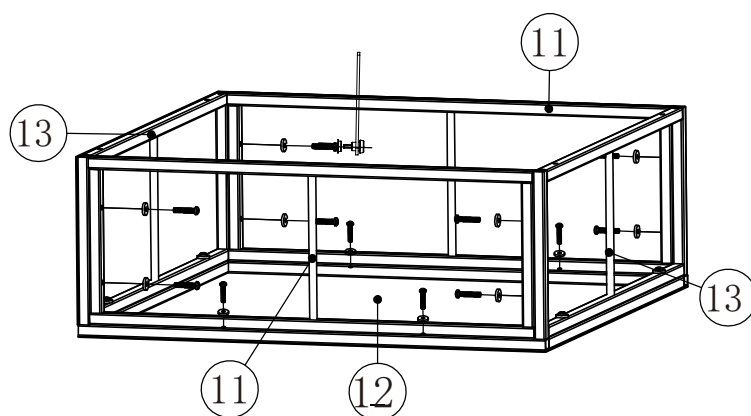



1

Ax1  M6x35	Bx1  M6x110	Cx2  M6	D  M6	
---	--	--	--	---


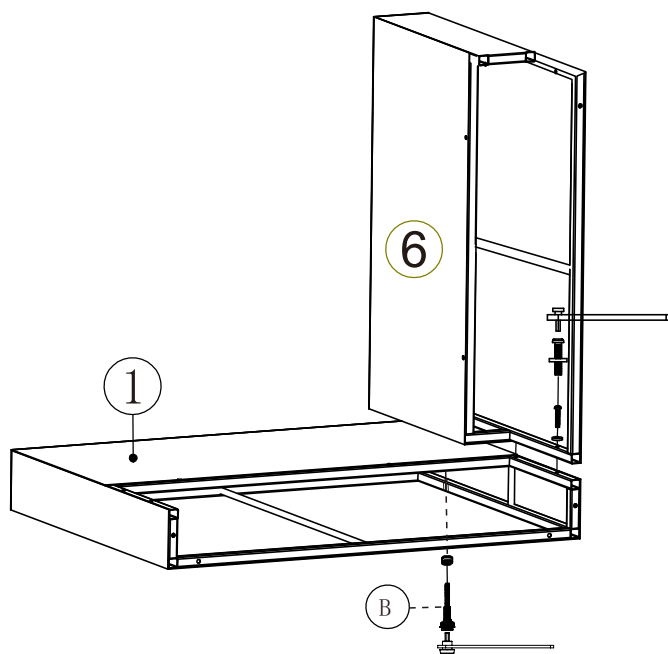



2

Ax6  M6x35	Cx6  M6	D  M6	
---	--	--	---


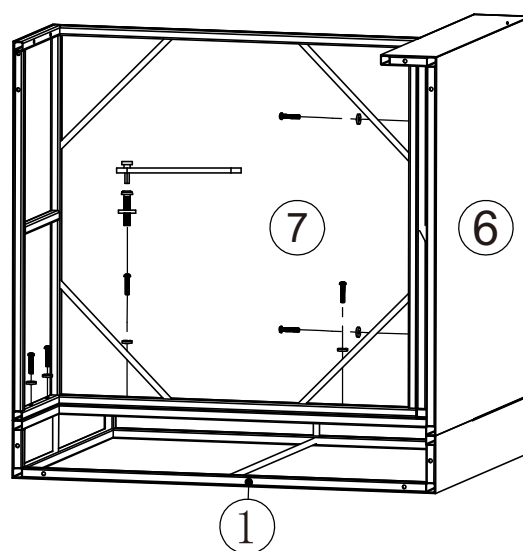




3

Ax6  M6x35	Bx1  M6x110	Cx6  M6	D  M6		
---	--	--	--	--	---

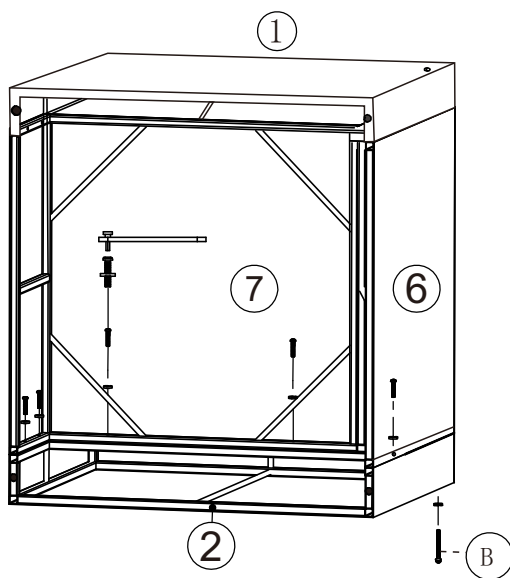





4

Ax4  M6x35	Cx4  M6	D  M6		
---	--	--	--	---

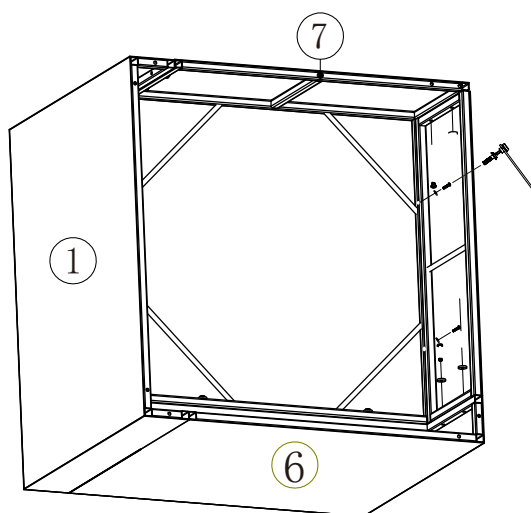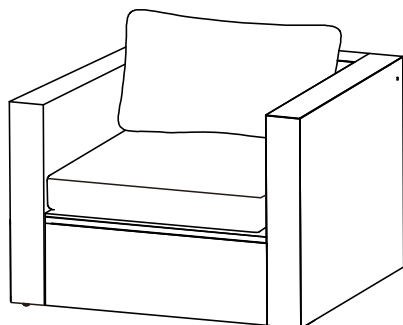



1

Ex2 		
--	--	--

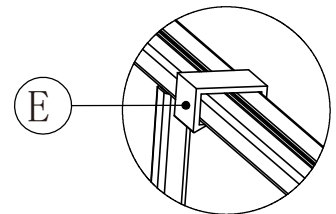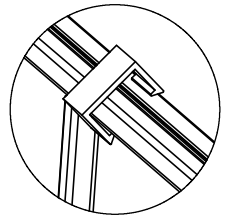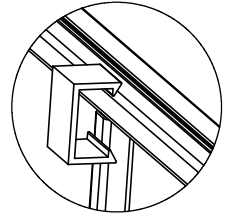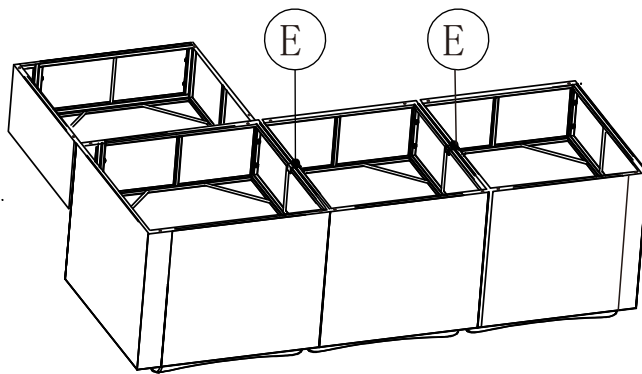

2

20x3 	21x1 		
---	---	--	--

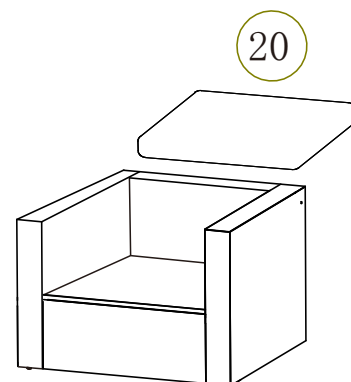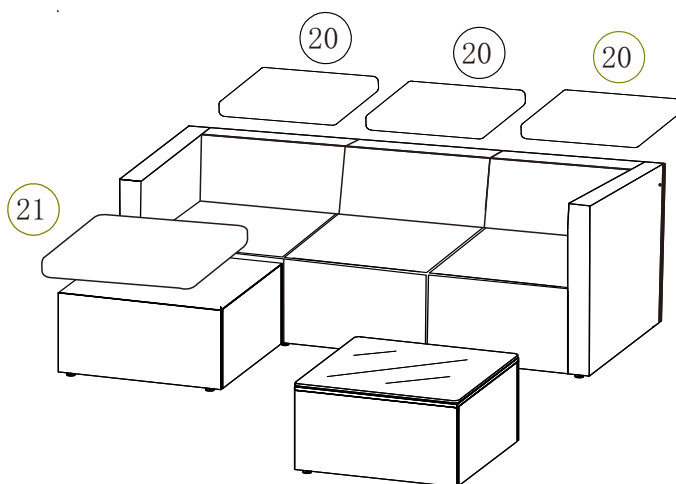

3

22*4 	23*2 		
---	---	--	--

