
ELLEN DEGENERES



ED is Ellen DeGeneres' iconic style, values and personality shared through collections of beautifully designed, high-quality products for home, pets and people. All ED merchandise design and materials are approved by Ellen, ensuring it maintains her standards and upholds her promise to make each item feel like a personal connection between herself and consumers around the world.

48-IN VANITY WITH TOP

MODEL #1580VA-48-201-900-SR; 1580VA-48-201-900-UM; 1580VA-48-201-907-SR; 1580VA-48-201-907-UM; 1580VA-48-201-926-SR; 1580VA-48-201-926-UM; 1580VA-48-242-900-SR; 1580VA-48-242-900-UM; 1580VA-48-242-907-SR; 1580VA-48-242-907-UM; 1580VA-48-242-926-SR; 1580VA-48-242-926-UM; 1580VA-48-323-900-SR; 1580VA-48-323-900-UM; 1580VA-48-323-907-SR; 1580VA-48-323-907-UM; 1580VA-48-323-926-UM

OPTION 1 (Semi-Recessed Sink)



OPTION 2 (Undermount Sink)



MODEL NUMBER	DESCRIPTION
1580VA-48-201-900-SR	ED 48-IN ANAHEIM WHITE VANITY W/ SEMI-RECESSED CARRARA MARBLE TOP
1580VA-48-201-900-UM	ED 48-IN ANAHEIM WHITE VANITY W/ CARRARA MARBLE TOP
1580VA-48-201-907-SR	ED 48-IN ANAHEIM WHITE VANITY W/ SEMI-RECESSED ENGINEERED WHITE TOP
1580VA-48-201-907-UM	ED 48-IN ANAHEIM WHITE VANITY W/ ENGINEERED WHITE TOP
1580VA-48-201-926-SR	ED 48-IN ANAHEIM WHITE VANITY W/ SEMI-RECESSED ENGINEERED CALACATTA TOP
1580VA-48-201-926-UM	ED 48-IN ANAHEIM WHITE VANITY W/ ENGINEERED CALACATTA TOP
1580VA-48-242-900-SR	ED 48-IN ANAHEIM LIGHT GRAY VANITY W/ SEMI-RECESSED CARRARA MARBLE TOP
1580VA-48-242-900-UM	ED 48-IN ANAHEIM LIGHT GRAY VANITY W/ CARRARA MARBLE TOP
1580VA-48-242-907-SR	ED 48-IN ANAHEIM LIGHT GRAY VANITY W/ SEMI-RECESSED ENGINEERED WHITE TOP
1580VA-48-242-907-UM	ED 48-IN ANAHEIM LIGHT GRAY VANITY W/ ENGINEERED WHITE TOP
1580VA-48-242-926-SR	ED 48-IN ANAHEIM LIGHT GRAY VANITY W/ SEMI-RECESSED ENGINEERED CALACATTA TOP
1580VA-48-242-926-UM	ED 48-IN ANAHEIM LIGHT GRAY VANITY W/ ENGINEERED CALACATTA TOP
1580VA-48-323-900-SR	ED 48-IN ANAHEIM ROYAL NAVY VANITY W/ SEMI-RECESSED CARRARA MARBLE TOP
1580VA-48-323-900-UM	ED 48-IN ANAHEIM ROYAL NAVY VANITY W/ CARRARA MARBLE TOP
1580VA-48-323-907-SR	ED 48-IN ANAHEIM ROYAL NAVY VANITY W/ SEMI-RECESSED ENGINEERED WHITE TOP
1580VA-48-323-907-UM	ED 48-IN ANAHEIM ROYAL NAVY VANITY W/ ENGINEERED WHITE TOP
1580VA-48-323-926-SR	ED 48-IN ANAHEIM ROYAL NAVY VANITY W/ SEMI-RECESSED ENGINEERED CALACATTA TOP
1580VA-48-323-926-UM	ED 48-IN ANAHEIM ROYAL NAVY VANITY W/ ENGINEERED CALACATTA TOP

OR

ATTACH YOUR RECEIPT HERE

Serial Number	Purchase Date

Questions, problems, missing parts? Before returning to your retailer, call our customer service department at 1-855-571-1044, 9 a.m. - 5 p.m., EST, Monday - Friday.


TABLE OF CONTENTS FOR OPTION 1 (Semi-Recessed Sink)

Package Contents	5
Hardware Contents	5
Safety Instructions	5
Preparation	6
Assembly or Installation Instructions	6
Care and Maintenance	13
Warranty	13
Replacement Parts List	14


TABLE OF CONTENTS FOR OPTION 2 (Undermount Sink)

Package Contents	17
Hardware Contents	17
Safety Instructions	17
Preparation	18
Assembly or Installation Instructions	18
Care and Maintenance	25
Warranty	25
Replacement Parts List	26

PART	DESCRIPTION	QUANTITY	CARTON
Α	Vanity	1	Box 2 of 3
В	Тор	1	Box 1 of 3
С	Backsplash	1	DOX 1 01 3
D	Sink	1	Box 3 of 3
Е	Left Door (preassembled to Vanity (A))	2	
F	Right Door (preassembled to Vanity (A))	2	Box 2 of 3
G	Floor Plumbing Cutout Lid	1	
Н	Drawer Divider	2	
Ī	Shelf	4	
L	Sink Template	1	Box 1 of 3

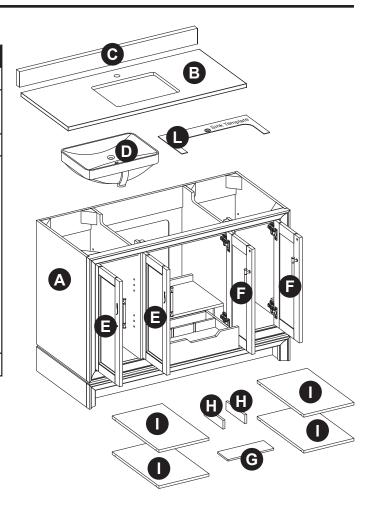

HARDWARE CONTENTS (NOT SHOWN ACTUAL SIZE)

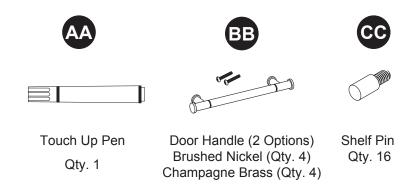

SAFETY INSTRUCTIONS

Please read and understand this entire manual before attempting to assemble, operate or install the product.

WARNING

• There are several assembly steps, including unpacking, that require two adults.

CAUTION

• Follow these instructions closely, take your time, and use care while assembling this vanity.

KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Installation Time: 45 minutes (24 hours for silicone caulk to dry).

Tools Required for Installation (not included): Phillips screwdriver, utility knife or scissors, silicone caulk, power drill with drill bit, measuring tape, level

INSTALLATION INSTRUCTIONS (Semi-Recessed Sink)

Note: This vanity base comes with two different door handle options.

1. One set of door handles (BB) is attached to the inside of doors (E & F), and the other set is packaged separately in the box. If necessary, use the attached string to open the doors until you reattach the handles. If you would like to switch handles, simply remove the existing handles and attach the other finish, as illustrated in the diagram.

Hardware Used



Door Handle





Note: Clean area where the vanity (A) will be permanently located prior to beginning installation, ensuring the vanity (A) will not interfere with any water supply and drain lines once mounted.

2. With two people, carefully place vanity (A) against the wall in its final location.

While holding the vanity base firmly against the wall, use the pre-assembled levelers on the bottom of each leg of the vanity (A) to level the item. Twisting the levelers counterclockwise will raise the height of the vanity (A), and twisting them clockwise will lower the vanity.

Once the vanity is in place, against the wall, and level from front to back and side to side, drill a hole through the vanity mounting area and into the wall studs (as illustrated in diagram 2). Using appropriate mounting hardware (not included), secure the vanity (A) to

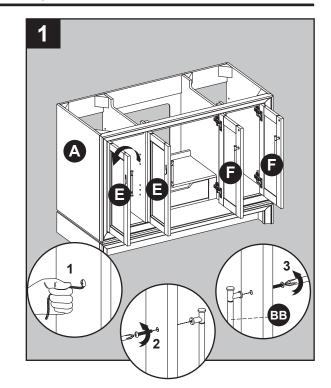

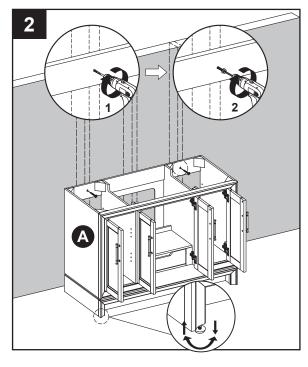


a wall stud. If possible, secure the vanity (A) to two wall studs for increased stability.




Vanity (A) MUST be secured to wall.

3. Take out the top (B) and backsplash (C) according to the steps indicated by the drawings on the right, and place them face up onto a scratch free surface such as a foam sheet that came in the packaging.

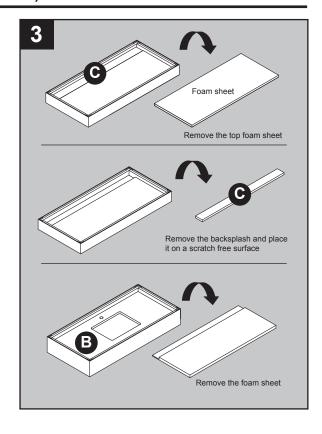


Note: At this stage it may be easier to install the faucet and drain kit (not included) to top (B) per the manufacturer's instructions, before moving on to Step 4.


4. Apply stain free silicone caulk (not included) to the top edge of vanity (A). With the help of another adult, gently lower top (B) onto the vanity (A). Wipe away any excess caulk with a soft cloth, and wait approximately 24 hours for it to dry.

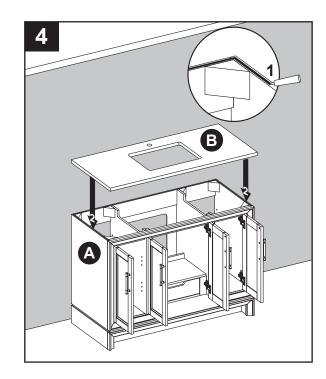

5. Put the sink template (L) on the top (B). The hole in the cardboard needs to be aligned with the hole in the stone top. Make sure the sink template and stone top are flush along the back edge.

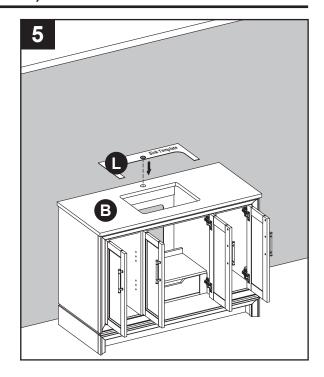


6. Apply a thin bead of silicone caulk (not included) onto the stone top close to the edge of the sink cut out as pictured.

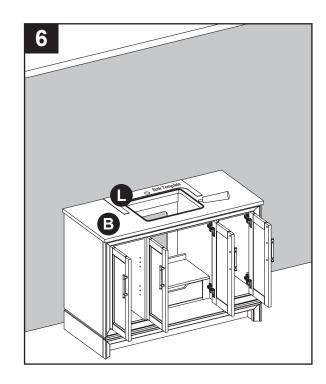


7. With the help of another adult, Gently lower the sink onto the stone top using even pressure to set the sink properly.

Make sure the sink over-flow hole is at the front of wood cabinet.

If some silicone caulk has over-flowed please clean it up at that time with water.

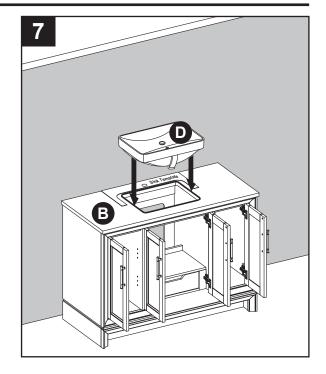


8. Apply silicone caulk (not included) to unpolished side and bottom of backsplash (C). Position backsplash (C) on top (B) and against wall. Clean any excess caulk before allowing to dry.

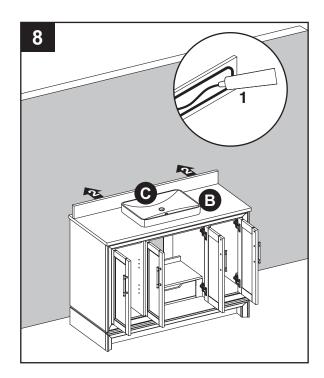


9. The back of the vanity is open for accessibility for drain(s) and water line(s) hookup. If your plumbing comes out of the back wall, insert the floor plumbing cutout lid (G), as shown in Illustration 9. This will close the hole and increase your storage space.

If your plumbing comes out of the floor, this hole provides accessibility for drain and water line hookup.

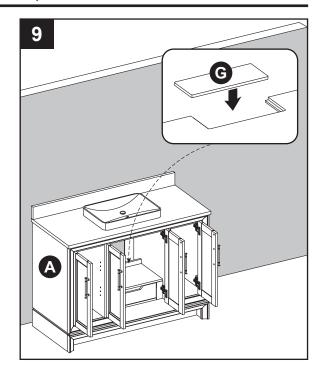

10. Insert two drawer dividers (H) into the notch of drawer inside.

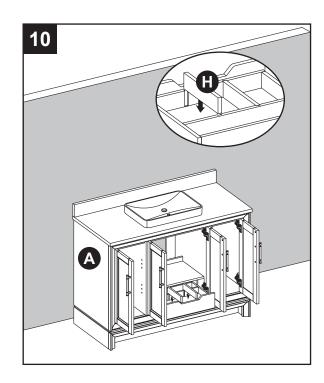

11. Screw shelf pins (CC) hand tight into the threaded holes of vanity (A). Place shelf (I) on top of shelf pins (CC).

Repeat for the remaining shelves (I).


Hardware Used



Shelf Pin




x 16

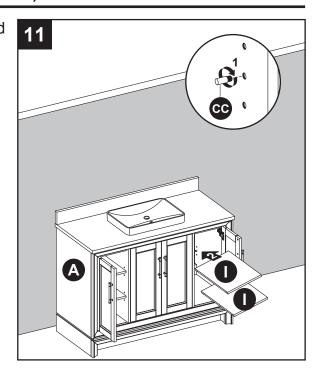



12. If you need to adjust the doors, do so in the following manner.

To adjust door up or down, loosen screws (a) on both hinges, adjust door, and retighten screws. To adjust door left or right, turn screws (b) on both hinges, in and out.


To adjust door in or out, loosen screws (c) on both hinges, adjust door, and retighten screws.

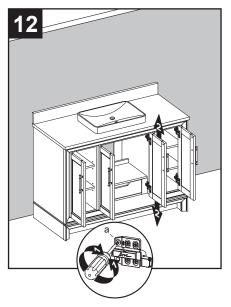

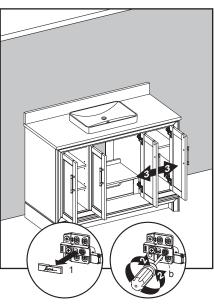

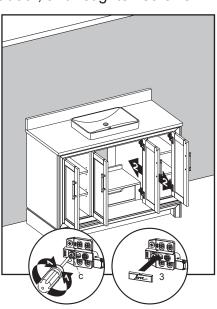

13. As shown in the diagram, fully extend the drawer and locate the plastic levers on the metal glide tracks. Push the left-side and right-side levers at the same time to disengage the drawer from the drawer glides. Gently lift the drawer up to remove it from vanity (A).

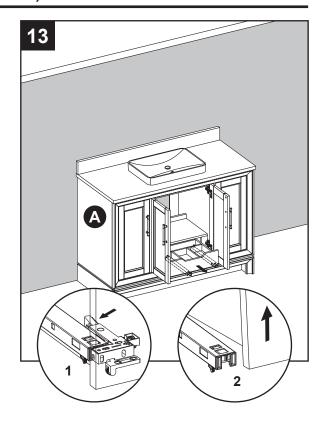


14. To reinstall drawer(s) into vanity (A), fully extend metal glide tracks. Gently lower and slide drawer box into rear glide catch. Next, lower drawer box down to completely rest on extended glides. Then, push plastic levers to lock the drawer box in place.

Note: Drawer box alignment can be adjusted, if necessary. As shown in the diagram, spin the adjustment wheel to the left to raise the drawer box, or to the right to lower the drawer box. The left and right-side glide heights can also be adjusted independently in order to find the drawers best alignment position.

CAUTION

DO NOT force drawer or damage to glide(s) may occur. If drawer does not slide in with ease, remove and try again from the start.

Assembly is now complete. Install desired faucet and drain assemblies (neither included) per the manufacturers' instructions to complete the installation.

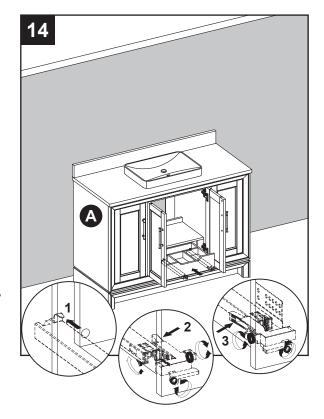

CARE AND MAINTENANCE

- Dust the vanity regularly with a soft, non-lint producing cloth or household dusting product.
- You can clean the vanity with a gentle, non-abrasive household cleaner.
- Make sure to dry the wood immediately with a soft cloth or towel.
- The stone top can be cleaned using standard marble cleaning agents available at your local supplier.
- Tips for using touch-up pen (AA): For scratches, stroke in direction of scratch; for worn areas, stroke in direction of wood grain. Rub off excess colorant promptly with a soft cloth.


IMPORTANT


- Shade variations and patterns are an inherent characteristic of stone (e.g. granite, marble, engineered stone). Stone tops will vary from product to product. Use caution placing items such as soap or any fragranced material on the stone surface. Use a soap dish, coaster or similar item to protect the surface if placing any soap or fragranced products on the stone.
- If soap or fragranced products come in contact with the stone top, rinse the surface with water and dry using a soft non-abrasive cloth.
- **WARNING:** Must use cleaning agents safe for stone. Check your cleaning agents use restrictions before using on any stone. Damage to the stone may result. Vanity Manufacturer not responsible for damage caused by improper cleaning agents or soaps used. Warranty will not cover damage caused by the use of improper soaps or cleaning agents.
- **DO NOT** use products to clean the stone top that contain acetone, lemon, vinegar or other acids as these may cause damage to the stone surface.
- Periodically reseal the stone top using an appropriate stone sealer available from your local home store. Follow the manufacturer's directions on how to apply.

WARRANTY

The manufacturer warrants this item against defects in materials and workmanship for a period of one (1) year from the date of original retail purchase. This warranty applies only to the original purchaser. This warranty does not apply to any damage on the product by accident, misuse, or modified, improper installation or by affixing accessories not produced by the manufacturer. The manufacturer will not be held liable for damages caused from cleaners or soaps that etch or stain the stone top. The manufacturer is not accountable whatsoever for product installation during the warranty period. There is no further expressed warranty. The manufacturer shall not be legally responsible for incidental, consequential or special damages arising at or in connection with product use or performance except as may otherwise be accorded by law. The manufacturer disclaims any and all implied warranties.


REPLACEMENT PARTS LIST FOR 1580VA-48-201-SR (Semi-Recessed Sink)

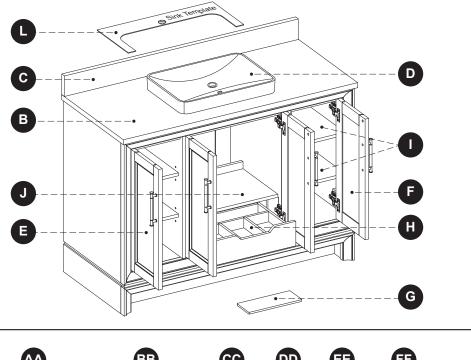




PART	DESCRIPTION	PART #
	Complete Set 48" Carrara Marble Top	3500VT-48-900
В	Complete Set 48" Pure White Top	3500VT-48-907
	Complete Set 48" Engineered Calacatta Top	3500VT-48-926
	48" Carrara Marble Backsplash	PUBS-25-900-48
С	48" Pure White Backsplash	PUBS-25-907-48
	48" Engineered Calacatta Backsplash	PUBS-25-926-48
D	Sink	SN047B
Е	Left Door	1580VA-48-201 DOOR SET
F	Right Door	1300VA-40-201 DOOK GET
G	Floor Plumbing Cutout Lid	201 FP LID
Н	Drawer Divider	1580VA-48-201-DIVIDER
I	Shelf	1580VA-48-201-SHELF
J	Center Shelf	1580VA-48-201-CENTER SHELF
L	Sink Template	SN047B-TEMPLATE
AA	Touch-up Pen	OF-0010
BB	Door Handle-brushed nickel	1580-BN DOOR HARDWARE
	Door Handle-champagne brass	1580-CB DOOR HARDWARE
CC	Shelf Pin	PU17-SP-002
DD	Hinge	SH-ABC-HINGES
EE	Leveler	T-1007
FF	12-IN Glide Track Set	SH-ABC-12IN-3A


REPLACEMENT PARTS LIST FOR 1580VA-48-242-SR (Semi-Recessed Sink)

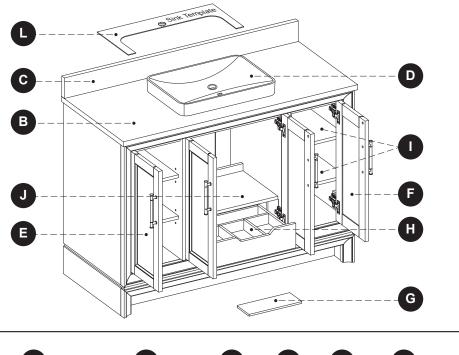




PART	DESCRIPTION	PART#
	Complete Set 48" Carrara Marble Top	3500VT-48-900
В	Complete Set 48" Pure White Top	3500VT-48-907
	Complete Set 48" Engineered Calacatta Top	3500VT-48-926
	48" Carrara Marble Backsplash	PUBS-25-900-48
С	48" Pure White Backsplash	PUBS-25-907-48
	48" Engineered Calacatta Backsplash	PUBS-25-926-48
D	Sink	SN047B
Е	Left Door	1580VA-48-242 DOOR SET
F	Right Door	1300VA-40-242 DOOK 3E1
G	Floor Plumbing Cutout Lid	242 FP LID
Н	Drawer Divider	1580VA-48-242-DIVIDER
I	Shelf	1580VA-48-242-SHELF
J	Center Shelf	1580VA-48-242-CENTER SHELF
L	Sink Template	SN047B-TEMPLATE
AA	Touch-up Pen	OF-0120R
BB	Door Handle-brushed nickel	1580-BN DOOR HARDWARE
	Door Handle-champagne brass	1580-CB DOOR HARDWARE
CC	Shelf Pin	PU17-SP-002
DD	Hinge	SH-ABC-HINGES
EE	Leveler	T-1007
FF	12-IN Glide Track Set	SH-ABC-12IN-3A


REPLACEMENT PARTS LIST FOR 1580VA-48-323-SR (Semi-Recessed Sink)

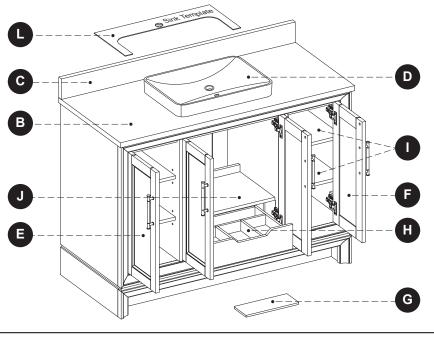




PART	DESCRIPTION	PART#
	Complete Set 48" Carrara Marble Top	3500VT-48-900
В	Complete Set 48" Pure White Top	3500VT-48-907
	Complete Set 48" Engineered Calacatta Top	3500VT-48-926
	48" Carrara Marble Backsplash	PUBS-25-900-48
С	48" Pure White Backsplash	PUBS-25-907-48
	48" Engineered Calacatta Backsplash	PUBS-25-926-48
D	Sink	SN047B
Е	Left Door	1580VA-48-323 DOOR SET
F	Right Door	1300VA-40-323 DOOK 3E1
G	Floor Plumbing Cutout Lid	323 FP LID
Н	Drawer Divider	1580VA-48-323-DIVIDER
I	Shelf	1580VA-48-323-SHELF
J	Center Shelf	1580VA-48-323-CENTER SHELF
L	Sink Template	SN047B-TEMPLATE
AA	Touch-up Pen	OX-0180Y
BB	Door Handle-brushed nickel	1580-BN DOOR HARDWARE
	Door Handle-champagne brass	1580-CB DOOR HARDWARE
CC	Shelf Pin	PU17-SP-002
DD	Hinge	SH-ABC-HINGES
EE	Leveler	T-1007
FF	12-IN Glide Track Set	SH-ABC-12IN-3A

PART	DESCRIPTION	QUANTITY	CARTON
Α	Vanity	1	Box 2 of 3
В	Тор	1	Box 1 of 3
С	Backsplash	1	DOX 1 01 3
D	Sink	1	Box 3 of 3
Е	Left Door (preassembled to Vanity (A))	2	
F	Right Door (preassembled to Vanity (A))	2	Box 2 of 3
G	Floor Plumbing Cutout Lid	1	
Н	Drawer Divider	2	
I	Shelf	4	

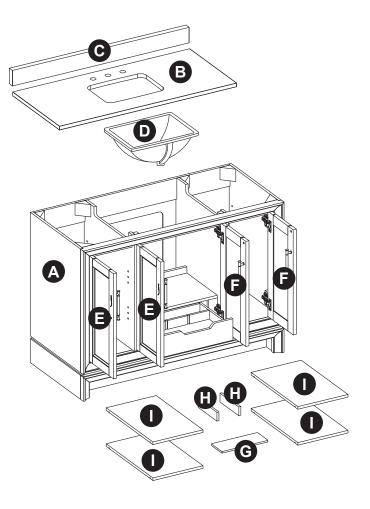

HARDWARE CONTENTS (NOT SHOWN ACTUAL SIZE)

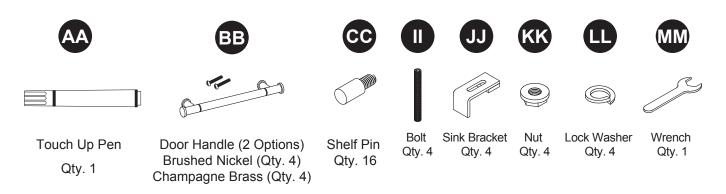

SAFETY INSTRUCTIONS

Please read and understand this entire manual before attempting to assemble, operate or install the product.

WARNING

• There are several assembly steps, including unpacking, that require two adults.

CAUTION

• Follow these instructions closely, take your time, and use care while assembling this vanity.

KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Installation Time: 45 minutes (24 hours for silicone caulk to dry).

Tools Required for Installation (not included): Phillips screwdriver, utility knife or scissors, silicone caulk, power drill with drill bit, measuring tape, level

INSTALLATION INSTRUCTIONS (Undermount Sink)

Note: This vanity base comes with two different door handle options.

1. One set of door handles (BB) is attached to the inside of doors (E & F), and the other set is packaged separately in the box. If necessary, use the attached string to open the doors until you reattach the handles. If you would like to switch handles, simply remove the existing handles and attach the other finish, as illustrated in the diagram.


Hardware Used



Door Handle





x 4



2. With two people, carefully place vanity (A) against the wall in its final location. While holding the vanity base firmly against the wall, use the pre-assembled levelers on the bottom of each leg of the vanity (A) to level the item. Twisting the levelers counterclockwise will raise the height of the vanity (A), and twisting them clockwise will lower the vanity.

Once the vanity is in place, against the wall, and level from front to back and side to side, drill a hole through the vanity mounting area and into the wall studs (as illustrated in diagram 2). Using appropriate mounting hardware (not included), secure the vanity (A) to

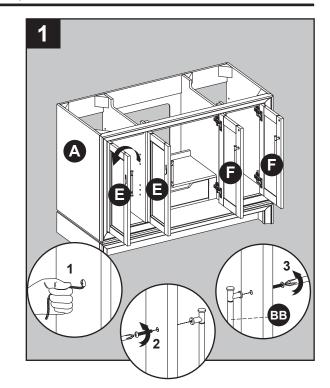

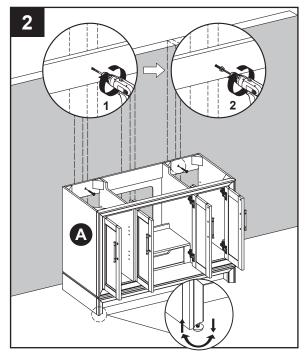


a wall stud. If possible, secure the vanity (A) to two wall studs for increased stability.



Vanity (A) MUST be secured to wall.

3. Take out the top (B) and backsplash (C) according to the steps indicated by the drawings on the right, and place them face down onto a scratch free surface such as a foam sheet that came in the packaging.

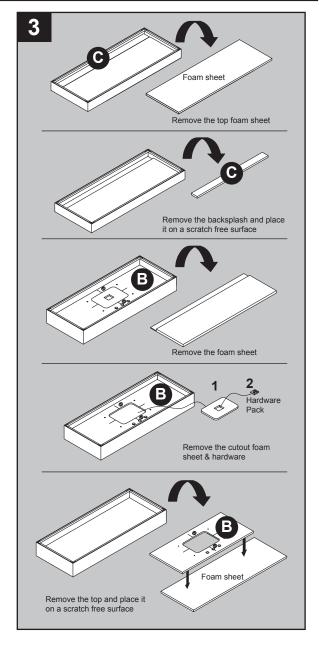


4. Apply silicone caulk (not included) to the top edge of sink (D). With the help of another adult, lower the sink onto the back side of the stone top.


Make sure the sink over-flow hole is facing the front of stone top.

Be sure to align the sink well with the stone top cut out allowing for equal stone overhang on the front, back and sides of the ceramic sink (D).

Note: To install the sink onto the top correctly, ensure that the two "BACK" stamps on the sink and the top are aligned on the same sides. Use the guide lines marked on the sink and bottom side of stone top to assist with sink location.

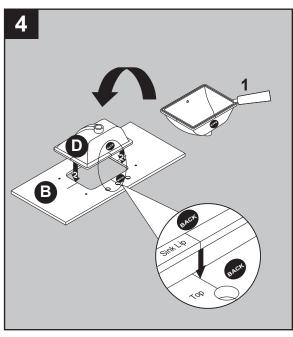

5. Screw bolts (II) into the threaded holes of stone top (B).

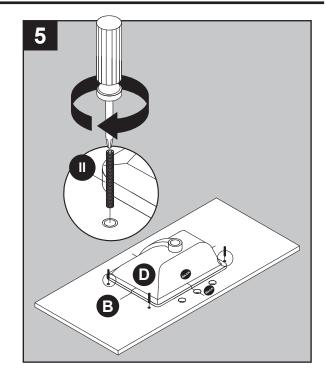

Hardware Used



Bolt




x 4


6. Lower the sink brackets (JJ) over the bolts (II) and allow to rest on the sink lip. Adjust location of bracket to firmly grasp sink lip. Lower lock washers (LL) over bolts (II) and secure with nuts (KK). Hand tighten nuts (KK) with included wrench (MM).

DO NOT OVER TIGHTEN!

Tip: Check that the sink placement is well centered front to back and side to side of the stone top cut out before allowing the silicone caulk to dry. If the sink is not centered well unscrew sink clamps, re-adjust the sink position and re-tighten the sink brackets.



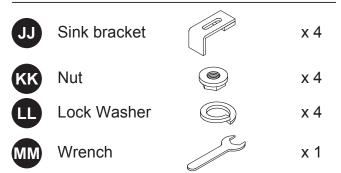


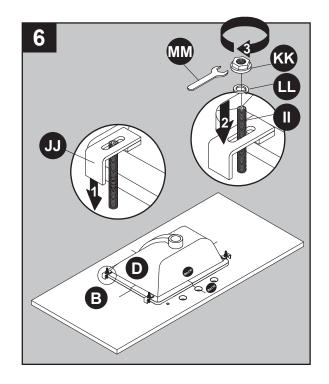


Helpful tip: it may be easier to install your choice of faucet (not included) before securing the vanity top (B) to vanity base (A).

7. To install the Top (B) to the vanity (A).

Apply silicone caulk to the top edge of the wood cabinet. With the help of another adult, gently lower the stone top with assembled sink onto the cabinet. Make sure the stone top is flush with the back side of the wood cabinet and the stone overhang is equal on both sides over the wood cabinet left and right side walls. Remove any excess caulk before allowing to dry.

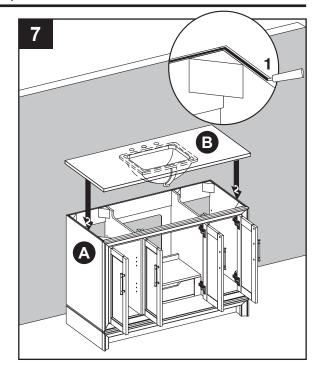


 Apply silicone caulk (not included) to unpolished side and bottom of backsplash (C). Position backsplash (C) on top (B) and against wall. Clean any excess caulk before allowing to dry.

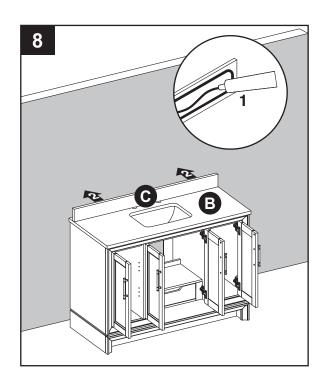


9. The back of the vanity is open for accessibility for drain(s) and water line(s) hookup. If your plumbing comes out of the back wall, insert the floor plumbing cutout lid (G), as shown in Illustration 9. This will close the hole and increase your storage space.

If your plumbing comes out of the floor, this hole provides accessibility for drain and water line hookup.

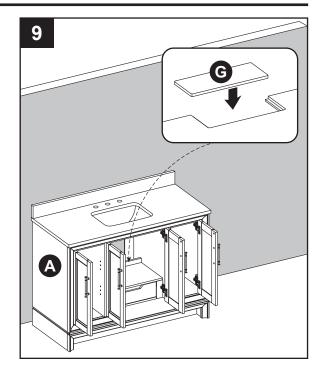

10. Insert two drawer dividers (H) into the notch of drawer inside.

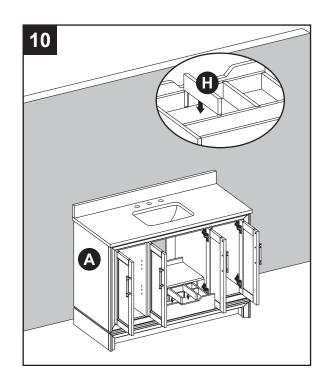

11. Screw shelf pins (CC) hand tight into the threaded holes of vanity (A). Place shelf (I) on top of shelf pins (CC).

Repeat for the remaining shelves (I).


Hardware Used



Shelf Pin




x 16

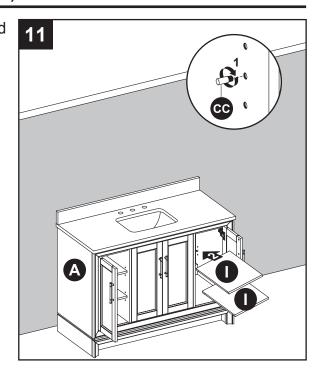



12. If you need to adjust the doors, do so in the following manner.

To adjust door up or down, loosen screws (a) on both hinges, adjust door, and retighten screws. To adjust door left or right, turn screws (b) on both hinges, in and out.


To adjust door in or out, loosen screws (c) on both hinges, adjust door, and retighten screws.

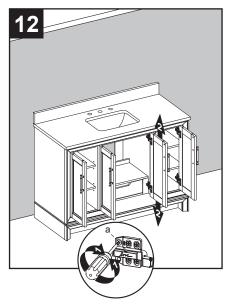

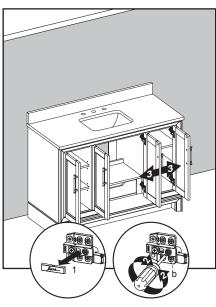

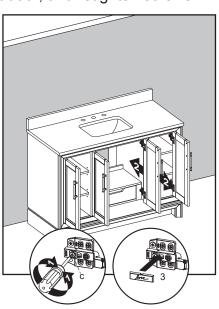

13. As shown in the diagram, fully extend the drawer and locate the plastic levers on the metal glide tracks. Push the left-side and right-side levers at the same time to disengage the drawer from the drawer glides. Gently lift the drawer up to remove it from vanity (A).

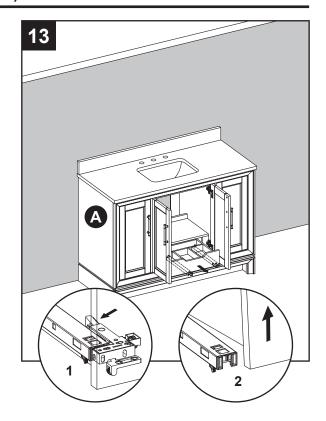


14. To reinstall drawer(s) into vanity (A), fully extend metal glide tracks. Gently lower and slide drawer box into rear glide catch. Next, lower drawer box down to completely rest on extended glides. Then, push plastic levers to lock the drawer box in place.

Note: Drawer box alignment can be adjusted, if necessary. As shown in the diagram, spin the adjustment wheel to the left to raise the drawer box, or to the right to lower the drawer box. The left and right-side glide heights can also be adjusted independently in order to find the drawers best alignment position.

CAUTION

DO NOT force drawer or damage to glide(s) may occur. If drawer does not slide in with ease, remove and try again from the start.

Assembly is now complete. Install desired faucet and drain assemblies (neither included) per the manufacturers' instructions to complete the installation.

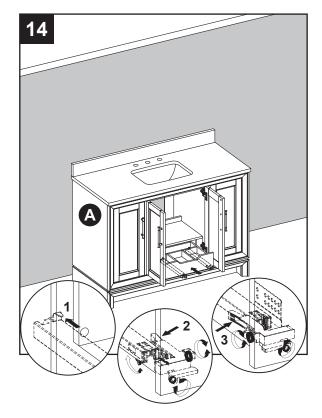

CARE AND MAINTENANCE

- Dust the vanity regularly with a soft, non-lint producing cloth or household dusting product.
- You can clean the vanity with a gentle, non-abrasive household cleaner.
- Make sure to dry the wood immediately with a soft cloth or towel.
- The stone top can be cleaned using standard marble cleaning agents available at your local supplier.
- Tips for using touch-up pen (AA): For scratches, stroke in direction of scratch; for worn areas, stroke in direction of wood grain. Rub off excess colorant promptly with a soft cloth.


IMPORTANT


- Shade variations and patterns are an inherent characteristic of stone (e.g. granite, marble, engineered stone). Stone tops will vary from product to product. Use caution placing items such as soap or any fragranced material on the stone surface. Use a soap dish, coaster or similar item to protect the surface if placing any soap or fragranced products on the stone.
- If soap or fragranced products come in contact with the stone top, rinse the surface with water and dry using a soft non-abrasive cloth.
- **WARNING:** Must use cleaning agents safe for stone. Check your cleaning agents use restrictions before using on any stone. Damage to the stone may result. Vanity Manufacturer not responsible for damage caused by improper cleaning agents or soaps used. Warranty will not cover damage caused by the use of improper soaps or cleaning agents.
- **DO NOT** use products to clean the stone top that contain acetone, lemon, vinegar or other acids as these may cause damage to the stone surface.
- Periodically reseal the stone top using an appropriate stone sealer available from your local home store. Follow the manufacturer's directions on how to apply.

WARRANTY

The manufacturer warrants this item against defects in materials and workmanship for a period of one (1) year from the date of original retail purchase. This warranty applies only to the original purchaser. This warranty does not apply to any damage on the product by accident, misuse, or modified, improper installation or by affixing accessories not produced by the manufacturer. The manufacturer will not be held liable for damages caused from cleaners or soaps that etch or stain the stone top. The manufacturer is not accountable whatsoever for product installation during the warranty period. There is no further expressed warranty. The manufacturer shall not be legally responsible for incidental, consequential or special damages arising at or in connection with product use or performance except as may otherwise be accorded by law. The manufacturer disclaims any and all implied warranties.


REPLACEMENT PARTS LIST FOR 1580VA-48-201-UM (Undermount Sink)

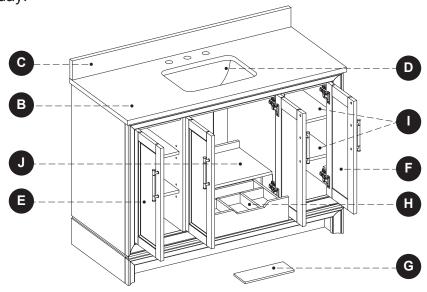




PART	DESCRIPTION	PART#
	Complete Set 48" Carrara Marble Top	2500VT-48-900
В	Complete Set 48" Pure White Top	2500VT-48-907
	Complete Set 48" Engineered Calacatta Top	2500VT-48-926
	48" Carrara Marble Backsplash	PUBS-25-900-48
С	48" Pure White Backsplash	PUBS-25-907-48
	48" Engineered Calacatta Backsplash	PUBS-25-926-48
D	Sink	PU17-18x14-SQUARE
Е	Left Door	- 1580VA-48-201 DOOR SET
F	Right Door	1360VA-46-201 DOOR SET
G	Floor Plumbing Cutout Lid	201 FP LID
Н	Drawer Divider	1580VA-48-201-DIVIDER
I	Shelf	1580VA-48-201-SHELF
J	Center Shelf	1580VA-48-201-CENTER SHELF
AA	Touch-up Pen	OF-0010
ВВ	Door Handle-brushed nickel	1580-BN DOOR HARDWARE
BB	Door Handle-champagne brass	1580-CB DOOR HARDWARE
CC	Shelf Pin	PU17-SP-002
DD	Hinge	SH-ABC-HINGES
EE	Leveler	T-1007
FF	12-IN Glide Track Set	SH-ABC-12IN-3A
II	Bolt	
JJ	Sink Bracket]
KK	Nut	GTC-SINK CLIPS
LL	Lock Washer]
MM	Wrench	


REPLACEMENT PARTS LIST FOR 1580VA-48-242-UM (Undermount Sink)

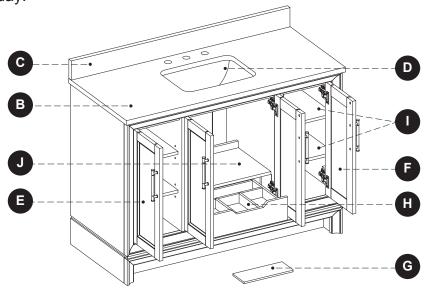




PART	DESCRIPTION	PART#
	Complete Set 48" Carrara Marble Top	2500VT-48-900
В	Complete Set 48" Pure White Top	2500VT-48-907
	Complete Set 48" Engineered Calacatta Top	2500VT-48-926
	48" Carrara Marble Backsplash	PUBS-25-900-48
С	48" Pure White Backsplash	PUBS-25-907-48
	48" Engineered Calacatta Backsplash	PUBS-25-926-48
D	Sink	PU17-18x14-SQUARE
Е	Left Door	1580VA-48-242 DOOR SET
F	Right Door	1300VA-40-242 DOON 3E1
G	Floor Plumbing Cutout Lid	242 FP LID
Н	Drawer Divider	1580VA-48-242-DIVIDER
I	Shelf	1580VA-48-242-SHELF
J	Center Shelf	1580VA-48-242-CENTER SHELF
AA	Touch-up Pen	OF-0120R
ВВ	Door Handle-brushed nickel	1580-BN DOOR HARDWARE
	Door Handle-champagne brass	1580-CB DOOR HARDWARE
CC	Shelf Pin	PU17-SP-002
DD	Hinge	SH-ABC-HINGES
EE	Leveler	T-1007
FF	12-IN Glide Track Set	SH-ABC-12IN-3A
Ш	Bolt	
JJ	Sink Bracket	
KK	Nut	GTC-SINK CLIPS
LL	Lock Washer	
MM	Wrench	

REPLACEMENT PARTS LIST FOR 1580VA-48-323-UM (Undermount Sink)

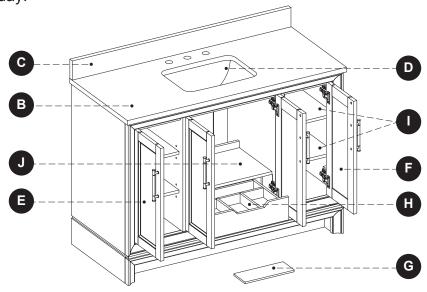



PART	DESCRIPTION	PART#
	Complete Set 48" Carrara Marble Top	2500VT-48-900
В	Complete Set 48" Pure White Top	2500VT-48-907
	Complete Set 48" Engineered Calacatta Top	2500VT-48-926
	48" Carrara Marble Backsplash	PUBS-25-900-48
С	48" Pure White Backsplash	PUBS-25-907-48
	48" Engineered Calacatta Backsplash	PUBS-25-926-48
D	Sink	PU17-18x14-SQUARE
Е	Left Door	- 1580VA-48-323 DOOR SET
F	Right Door	1300VA-40-323 DOON 3E1
G	Floor Plumbing Cutout Lid	323 FP LID
Н	Drawer Divider	1580VA-48-323-DIVIDER
I	Shelf	1580VA-48-323-SHELF
J	Center Shelf	1580VA-48-323-CENTER SHELF
AA	Touch-up Pen	OX-0180Y
ВВ	Door Handle-brushed nickel	1580-BN DOOR HARDWARE
BB	Door Handle-champagne brass	1580-CB DOOR HARDWARE
CC	Shelf Pin	PU17-SP-002
DD	Hinge	SH-ABC-HINGES
EE	Leveler	T-1007
FF	12-IN Glide Track Set	SH-ABC-12IN-3A
П	Bolt	
JJ	Sink Bracket]
KK	Nut	GTC-SINK CLIPS
LL	Lock Washer]
MM	Wrench	

