



DESIGNED FOR LIFE

Assembly Instructions



Three drawer file cabinet

Model No.
HOGA-F2141



LITTLE TREE
Little Tree by Tribesigns

www.tribesigns.com

Contact Us

We're here to help you.



Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.

Warm Tips

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

How to Get the Assembly Video

Step 1

Scan the QR code.






Installation Video

Step2

Search with the Model No.
(on the bottom left corner of the title page)




Note: If you can't find the assembly video, please contact us.

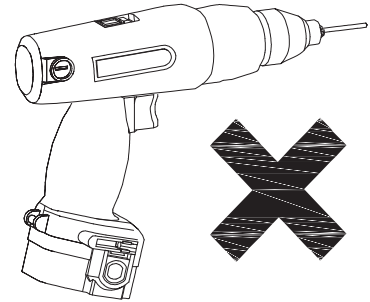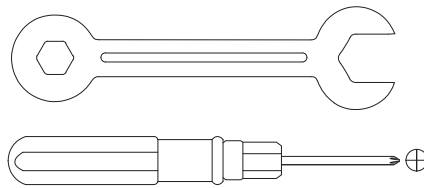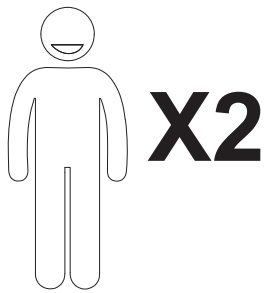



We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

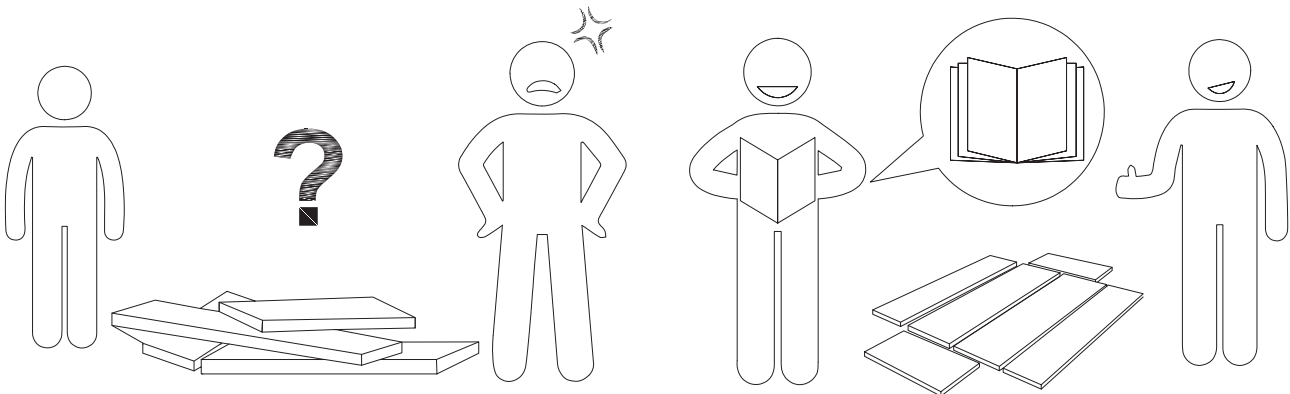

Install the Anti-Tip Straps

Using the anti-tip straps can reduce the risk of tipping over, but can not eliminate it.
















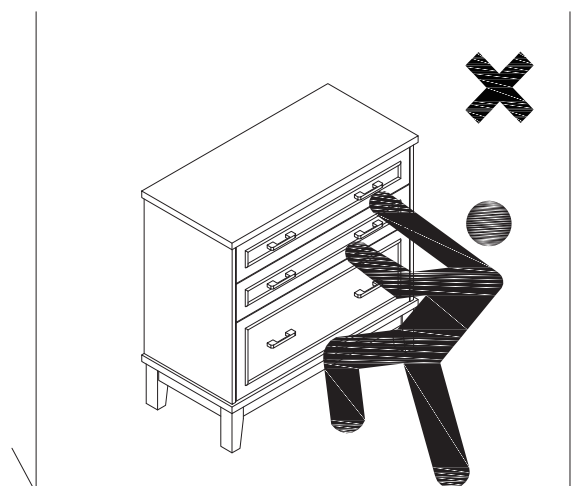
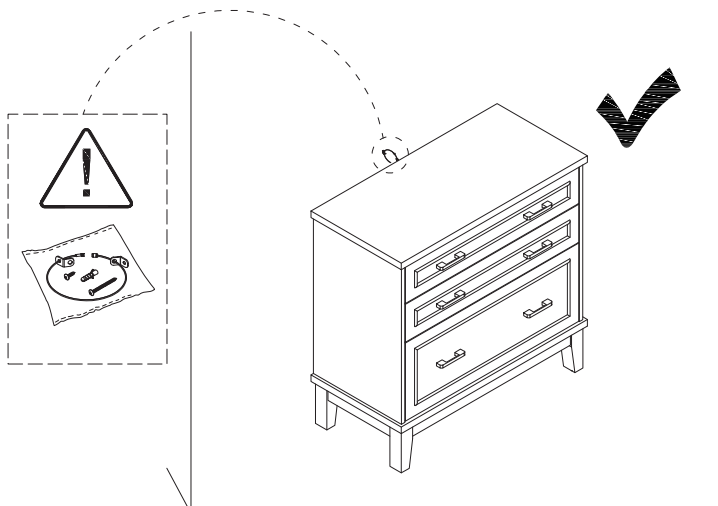


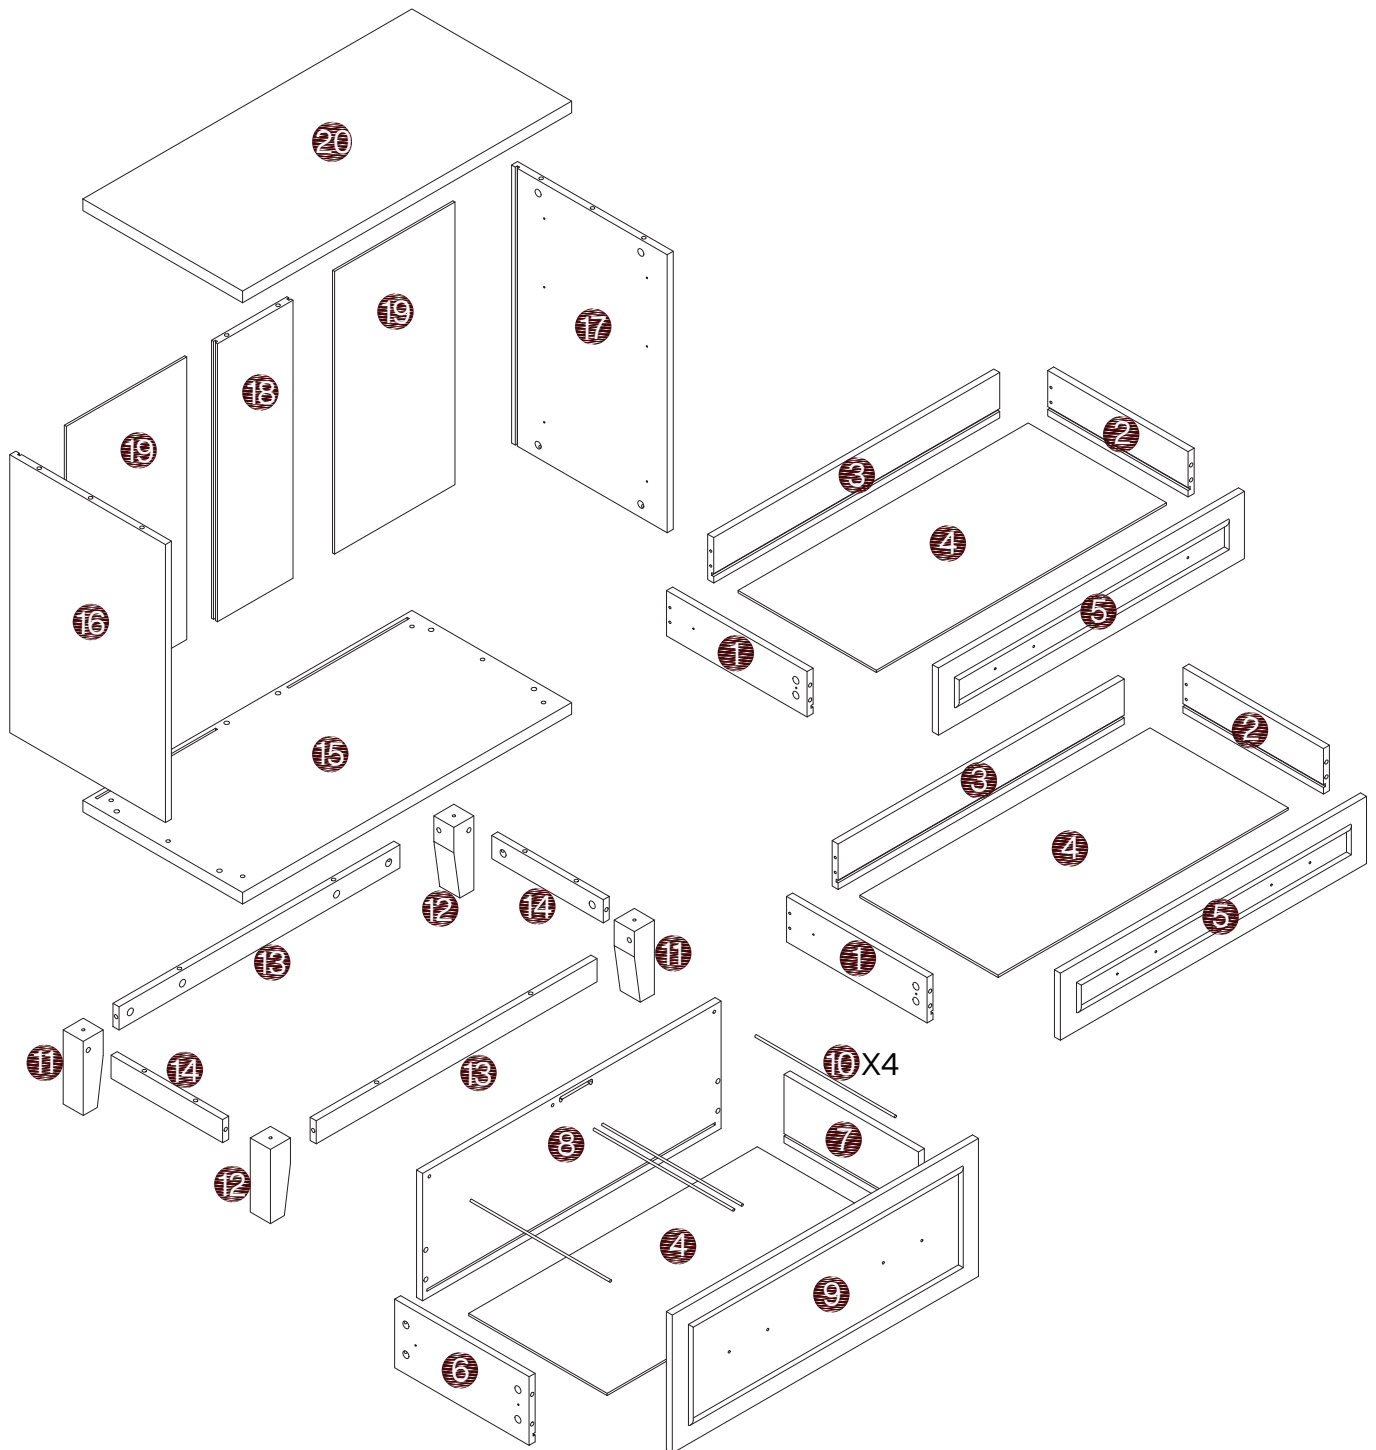






⚠ Caution







Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.

Parts List

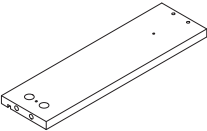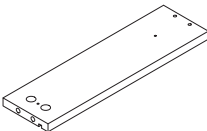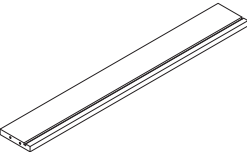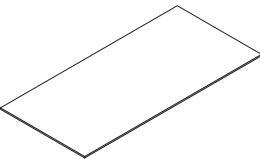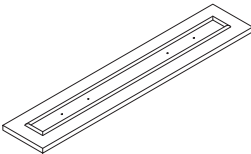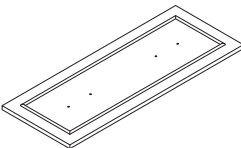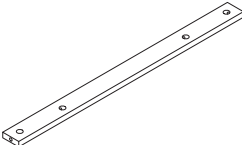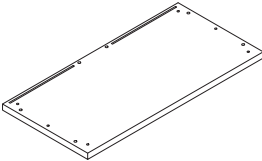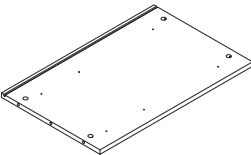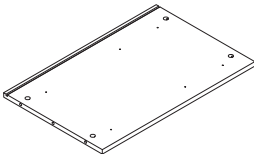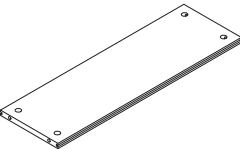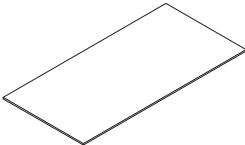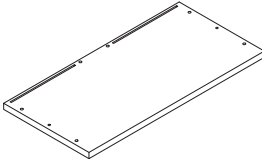1  2 pcs	2  2 pcs	3  2 pcs	4  3 pcs	5  2 pcs
6  1 pc	7  1 pc	8  1 pc	9  1 pc	10  4 pcs
11  2 pcs	12  2 pcs	13  2 pcs	14  2 pcs	15  1 pc
16  1 pc	17  1 pc	18  1 pc	19  2 pcs	20  1 pc

Hardware List

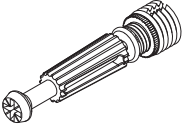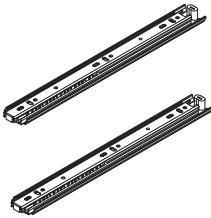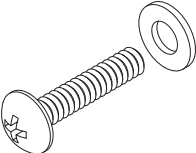
A	B	C	D	E	F
					
M6x35mm	Ø15x12mm	Ø8x30mm	350mm	Ø3.5x14mm	Ø4x20mm
40 pcs	40 pcs	8 pcs	3 sets	28 pcs	12 pcs

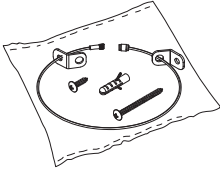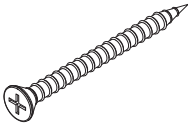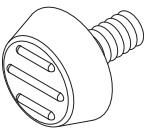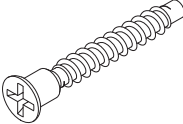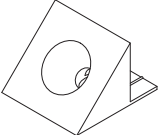G	H	I	J	K	L
					
96mm		Ø3.5x35mm	M6x14mm	Ø7x48mm	
6 pcs	1 pc	8 pcs	4 pcs	4 pcs	4 pcs


M					
					
1 pc					

Installation of Cams and Pins

Screw the pin into the hole. To set the cams correctly, ensure that the arrow on the cam is opening to the hole of the pin it is locking. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

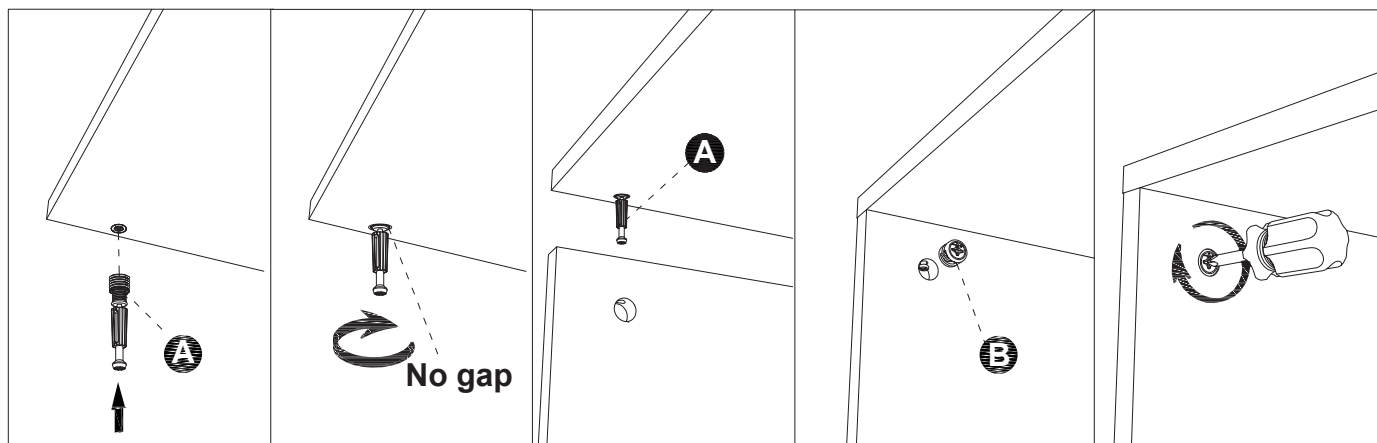


Read each step carefully before starting. It is very important that each step of instruction is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.

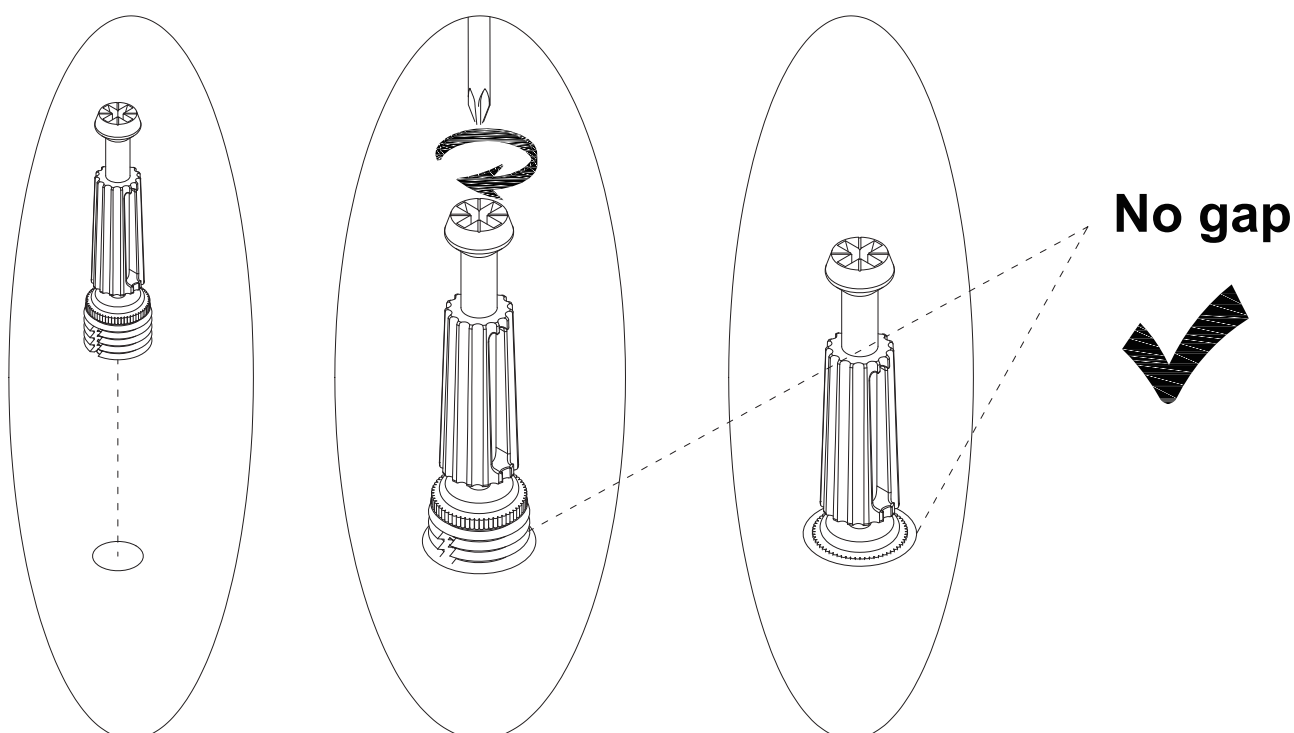

Please split component "D" into "D-1" and "D-2" before assembling the slide rail component, and then proceed to the next step of assembly


Step 1

Pull apart component "N" to each side, and then gently push up the lever of component "N-1"

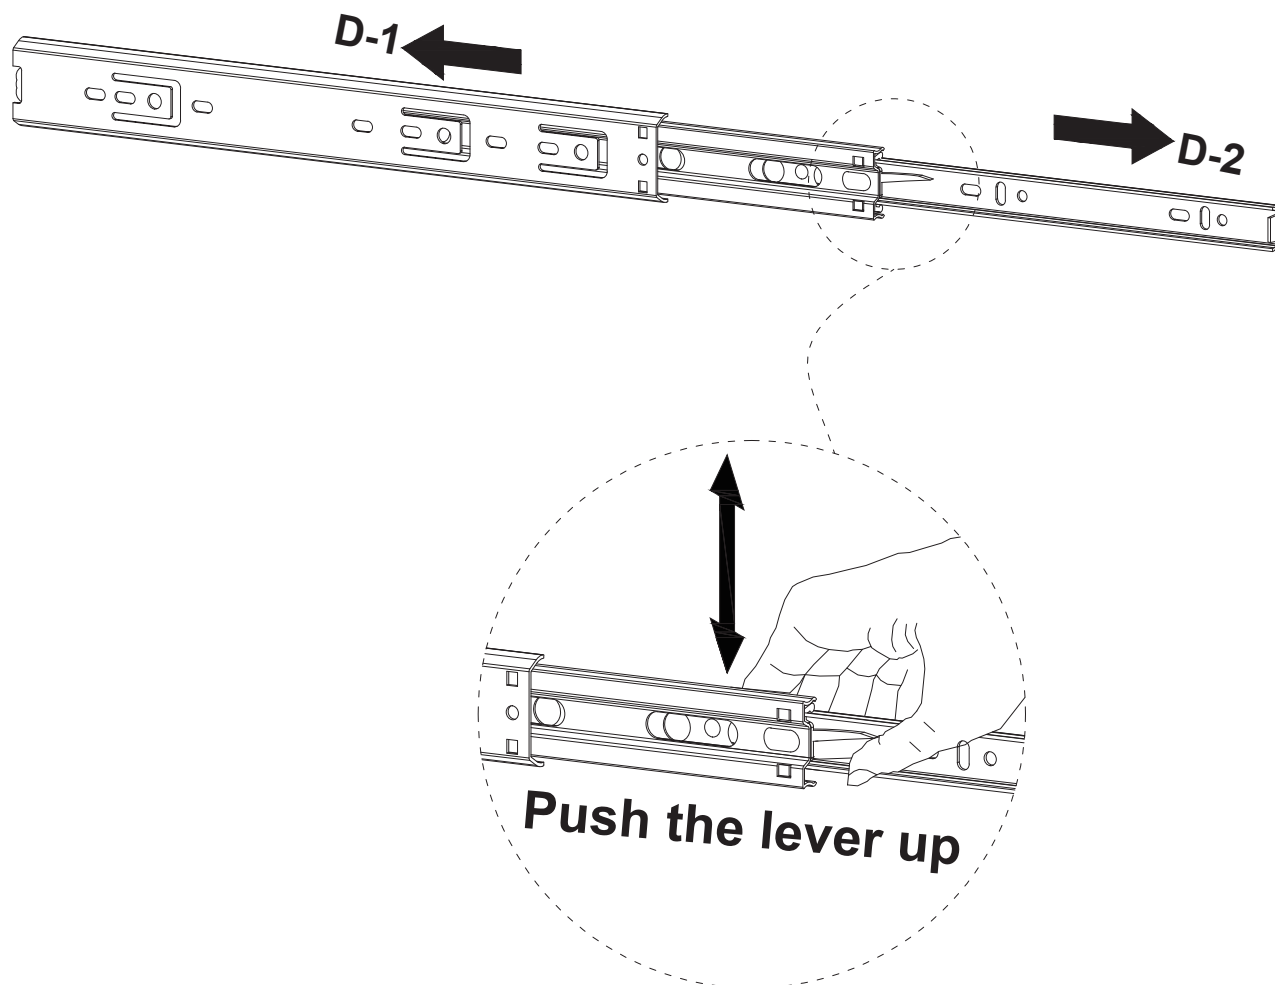


Step 2



Split component "D-1" and "D-2"

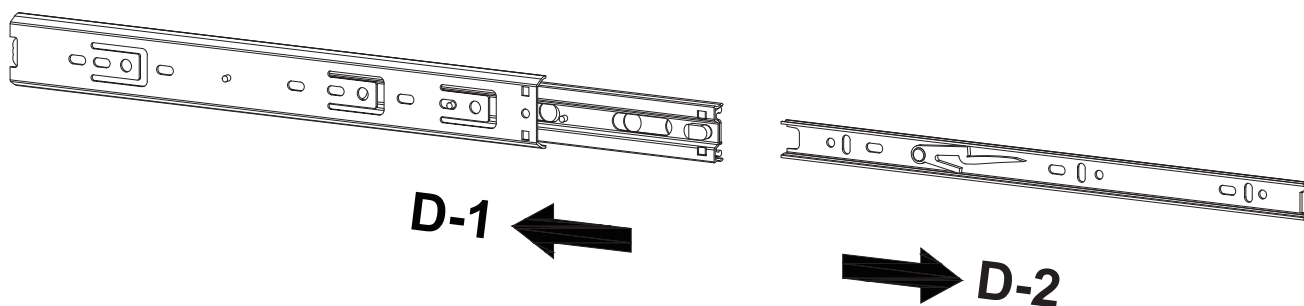

1

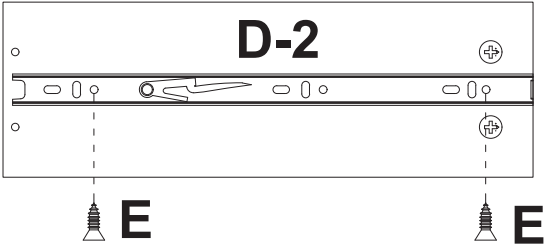


D	E
	 Ø3.5x14mm
2 sets	8 pcs

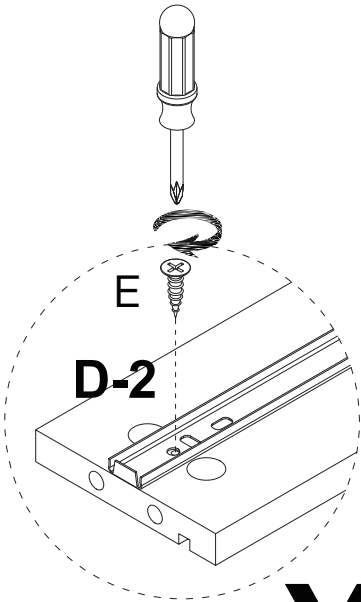
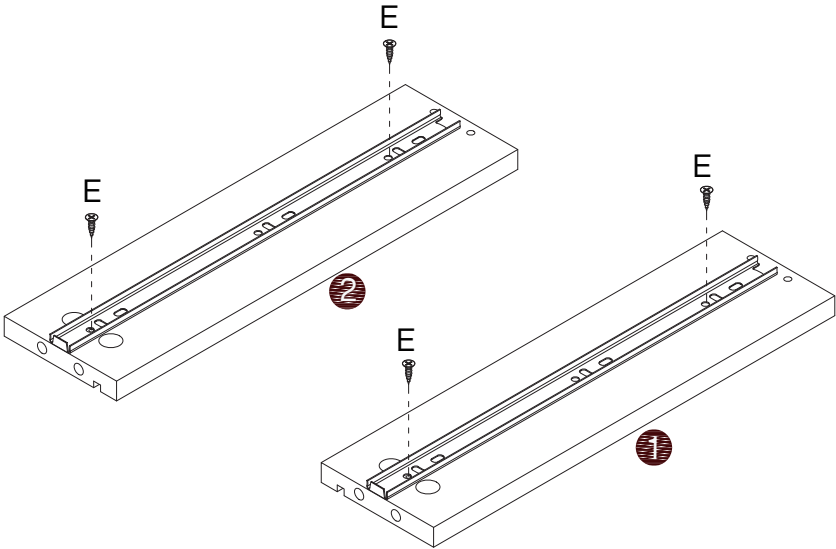


X2



2

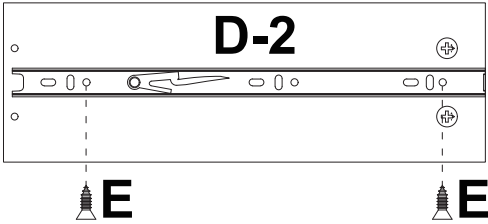

D	E
	 Ø3.5x14mm
1 sets	4 pcs

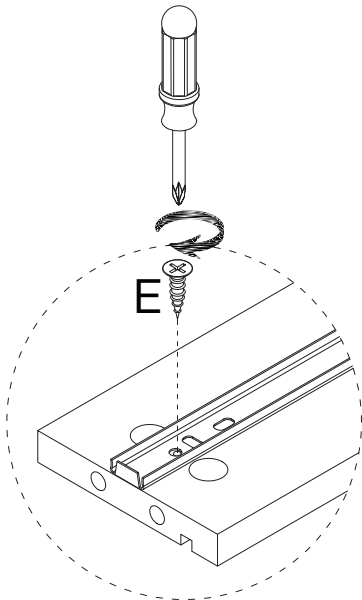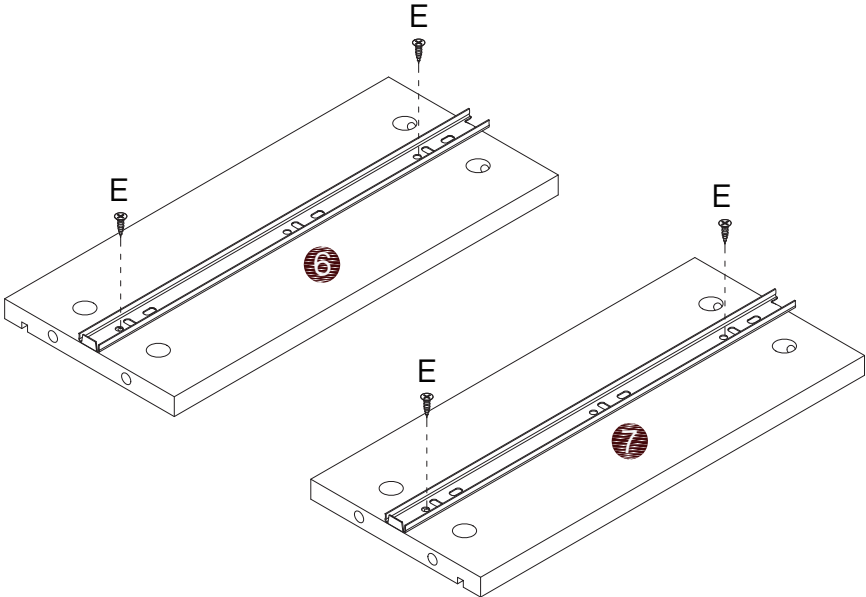

3

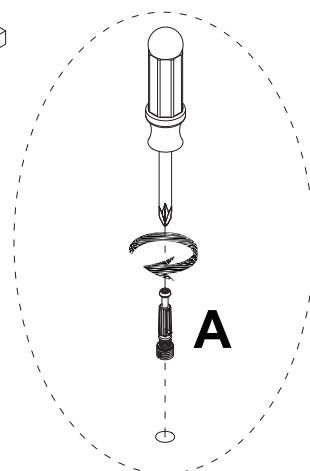
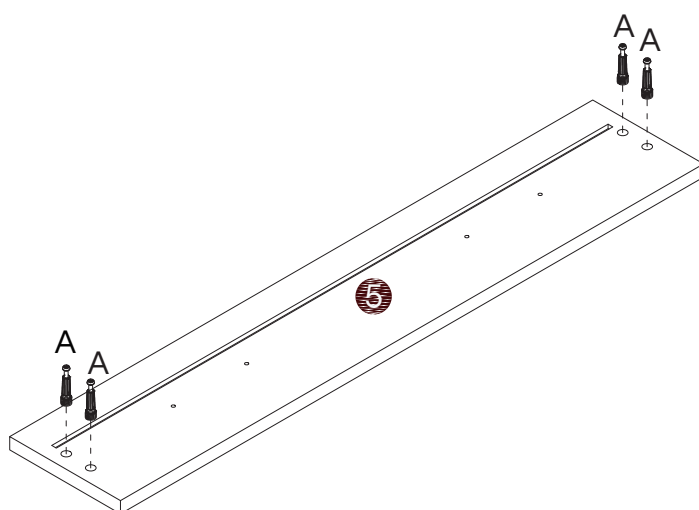


A

M6x35mm
8 pcs

X2

4

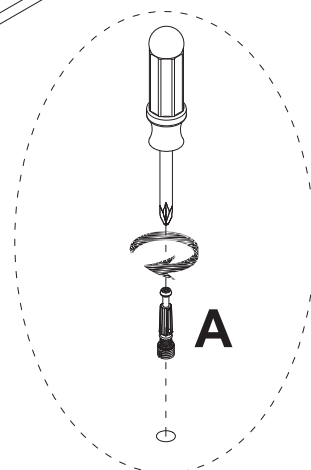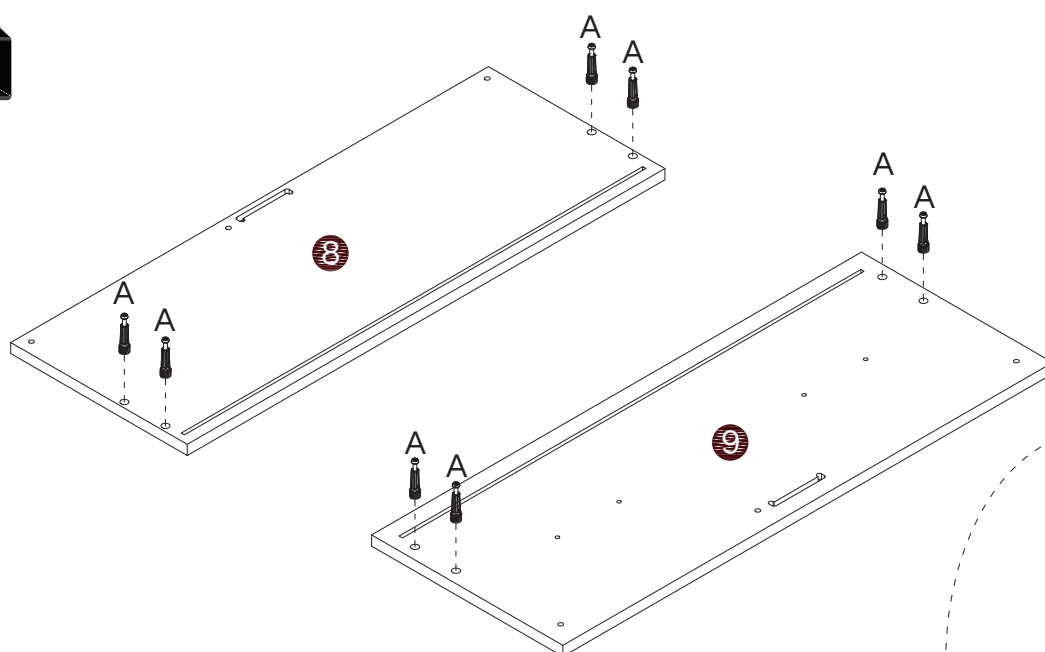



A

M6x35mm
8 pcs

5


B

Ø15x12mm
8 pcs

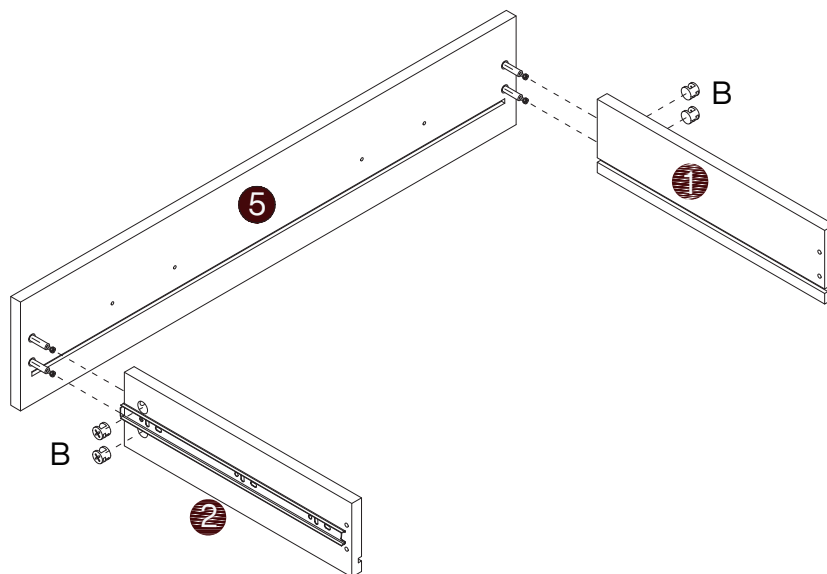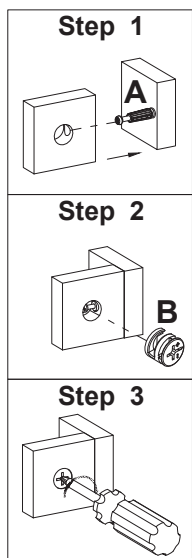

X2

6

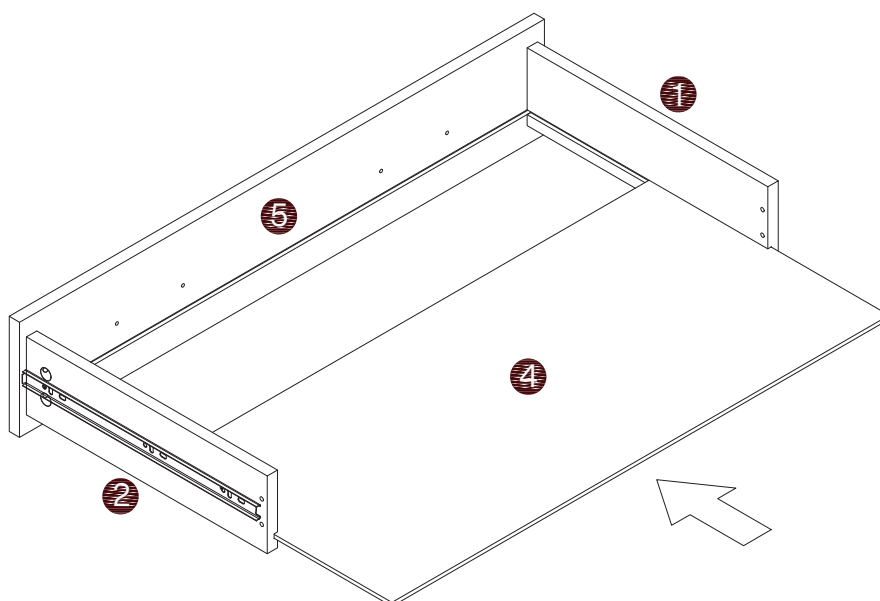


X2

7



I


Ø3.5x35mm
8 pcs

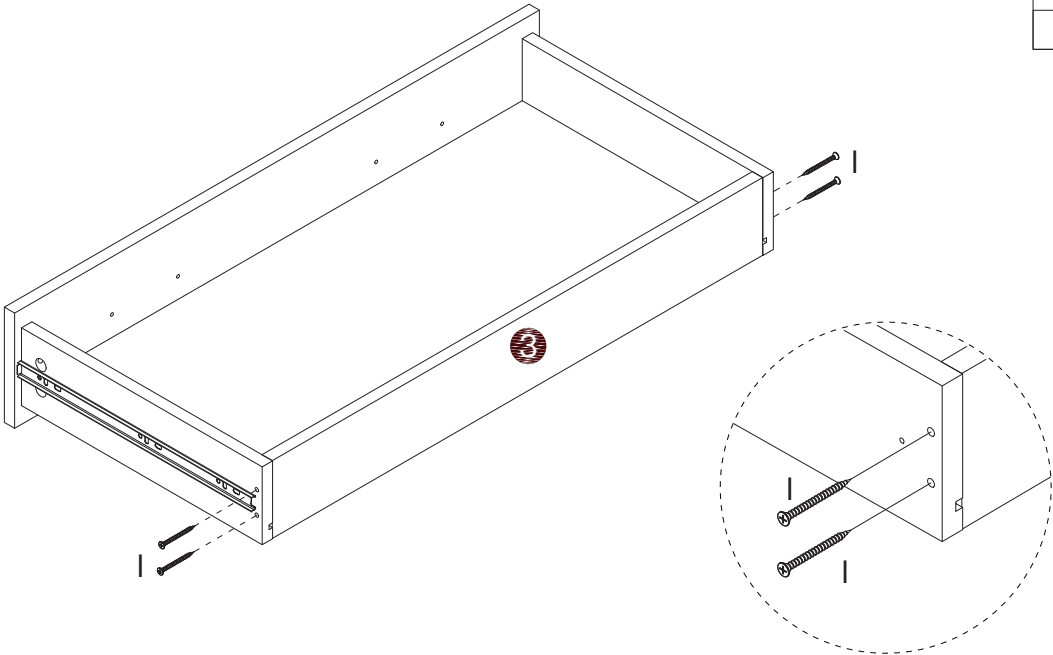

X2



8

F	G
	
Ø4x20mm	96mm
8 pcs	4 pcs

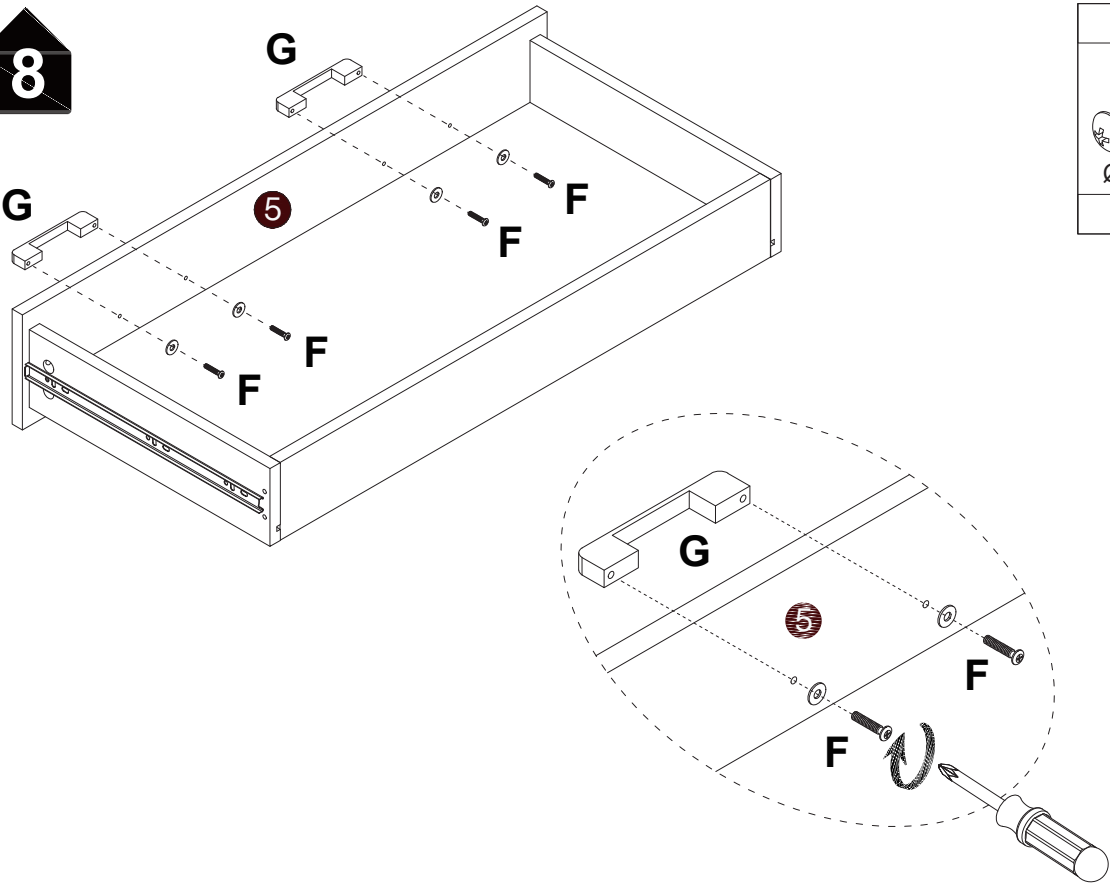


X2

9

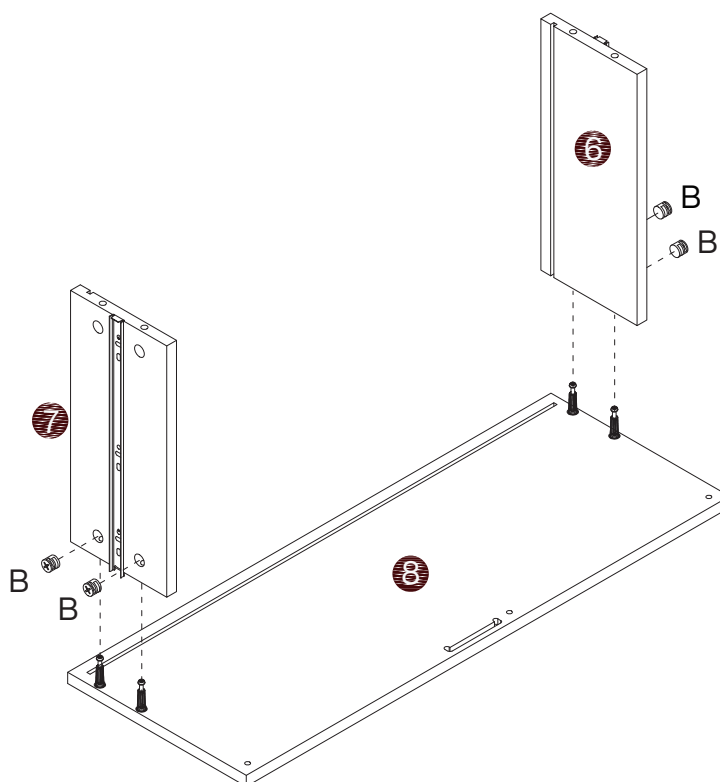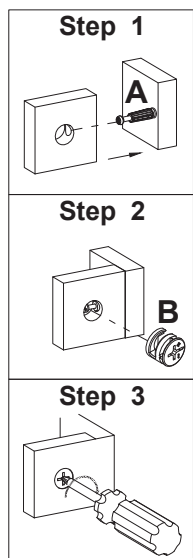


B
Ø15x12mm
4 pcs

10

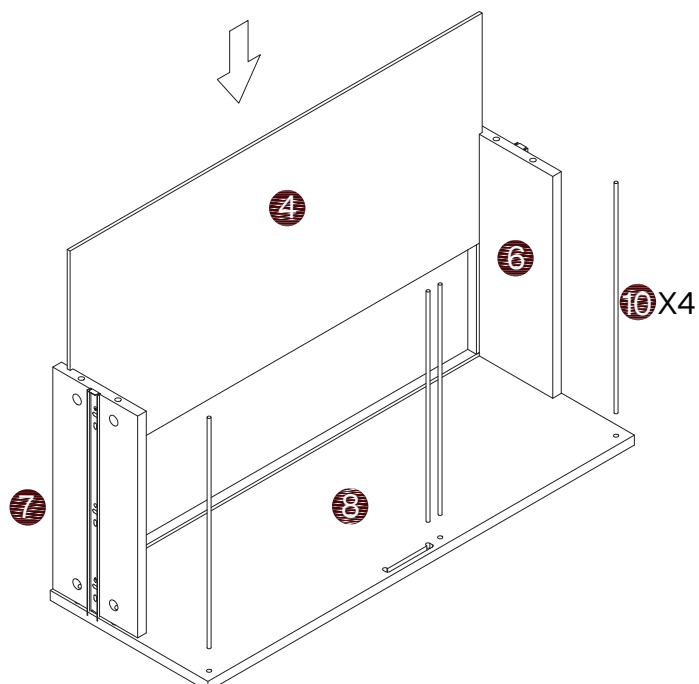


11


Step 1

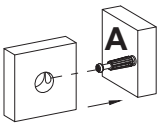


Step 2

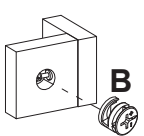

Step 3


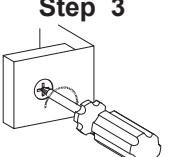



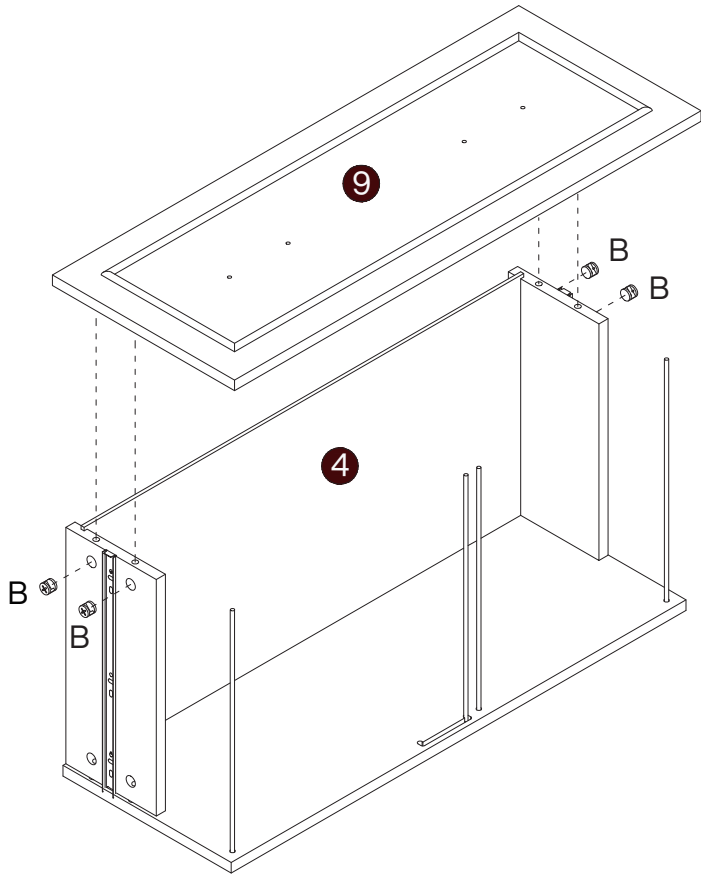


B


Ø15x12mm
4 pcs

12


F	G
	
Ø4x20mm	96mm
4 pcs	2 pcs

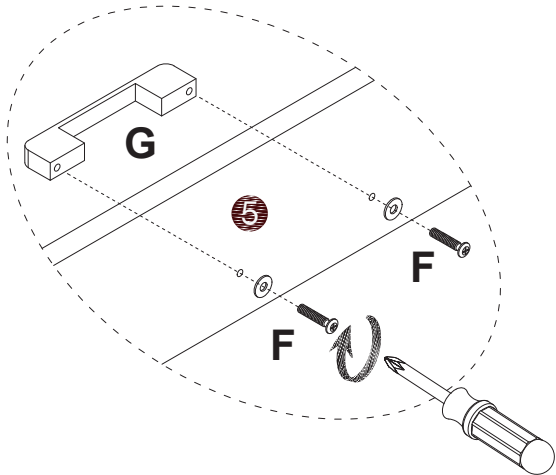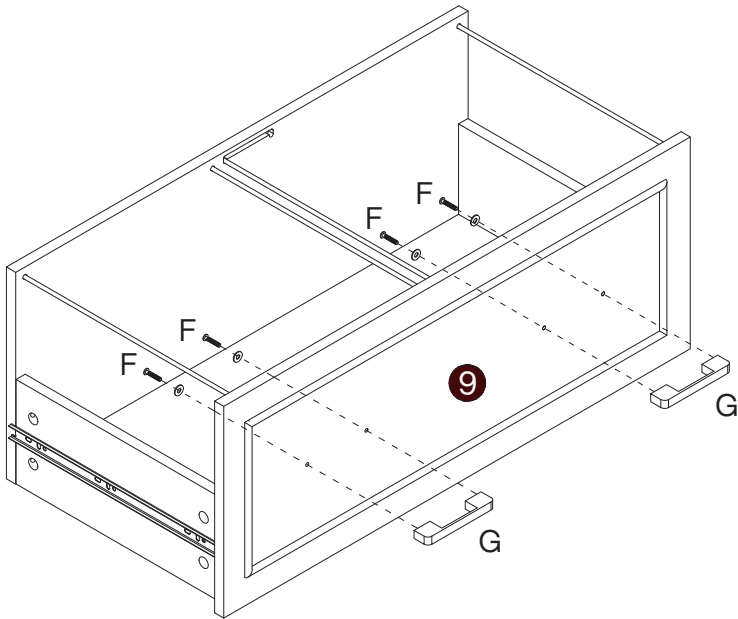

13

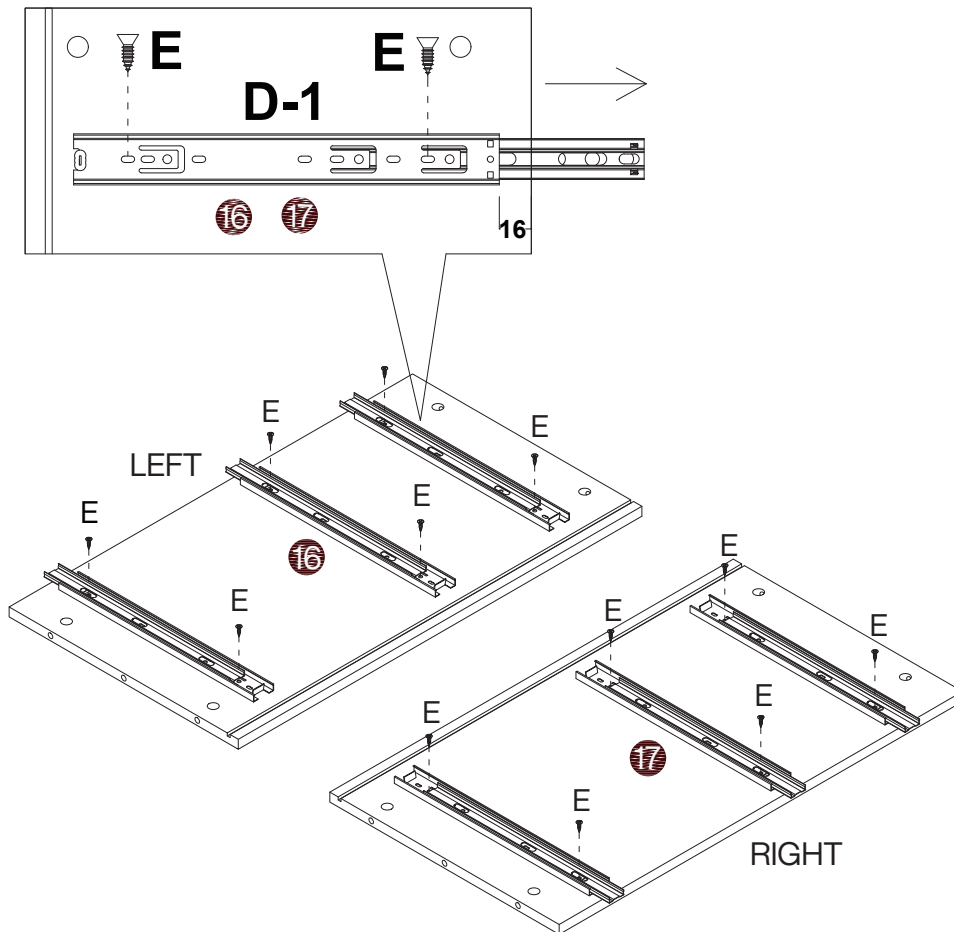


D	E
3 set	12 pcs

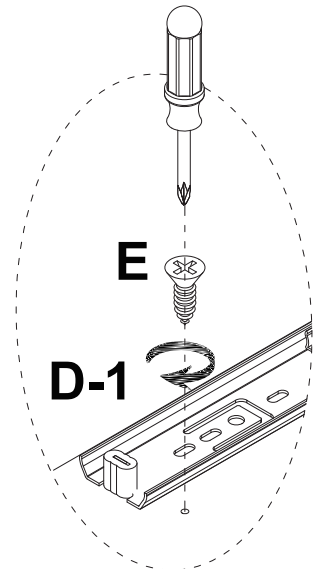


Please note that the wider part of the slide is NOT flush with the edge of the cabinet.

14

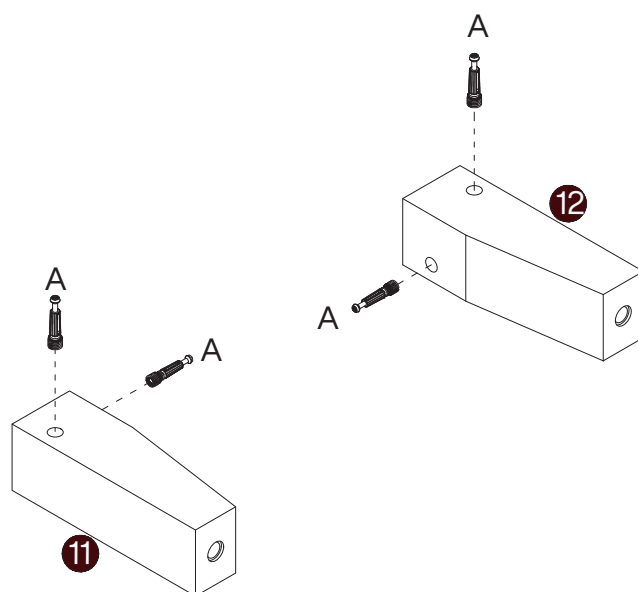

A
M6x35mm
8 pcs


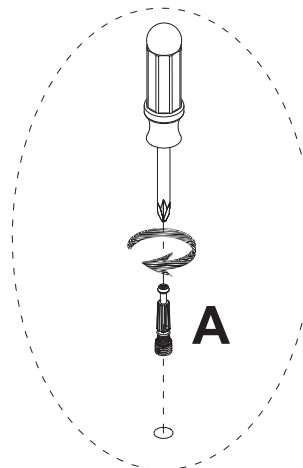


X2

15

B



Ø15x12mm
4 pcs

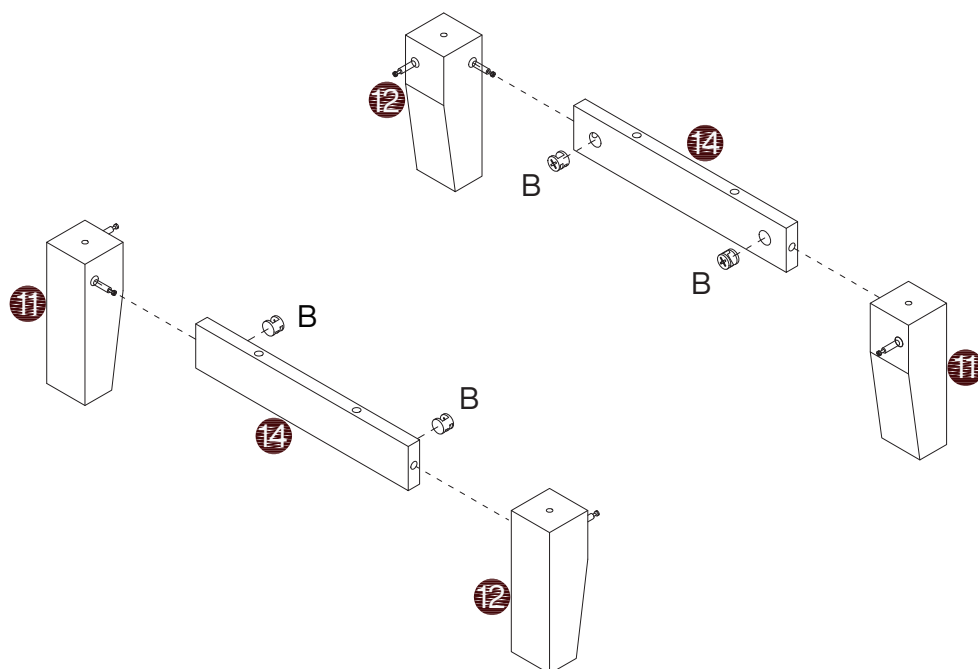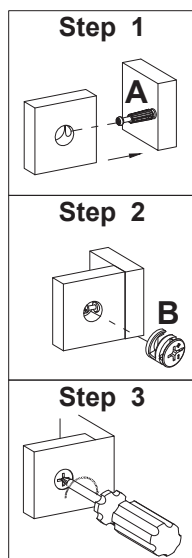

16




B

Ø15x12mm
4 pcs

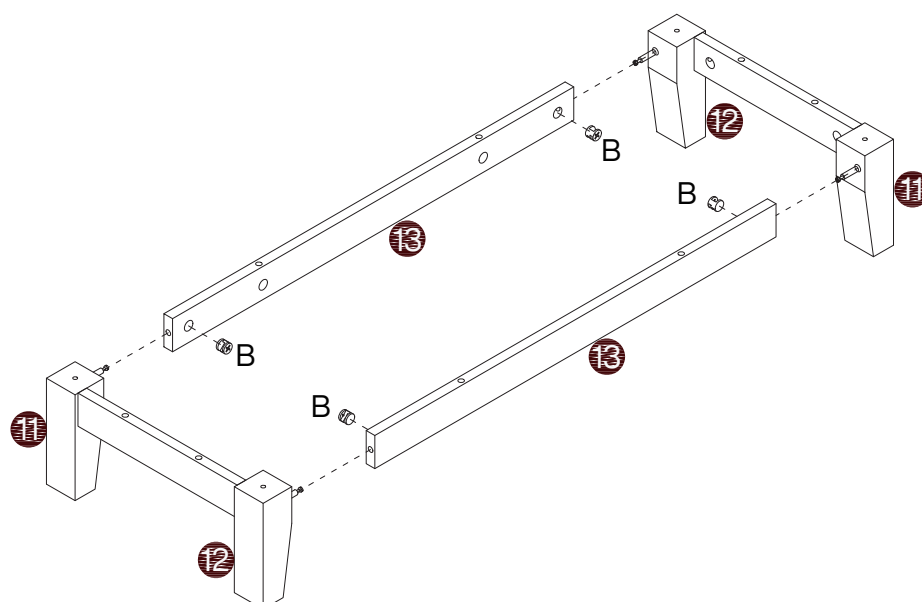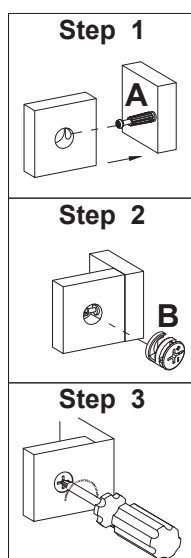




17

A	C
	
M6x35mm	Ø8x30mm
4 pcs	4 pcs

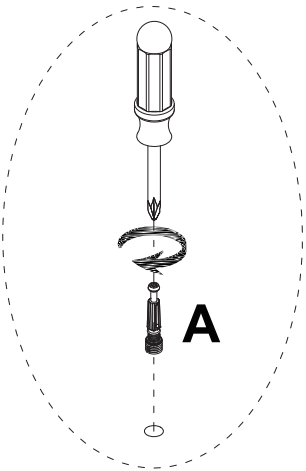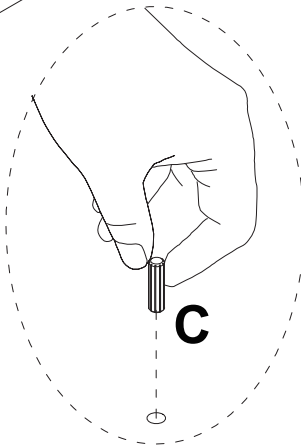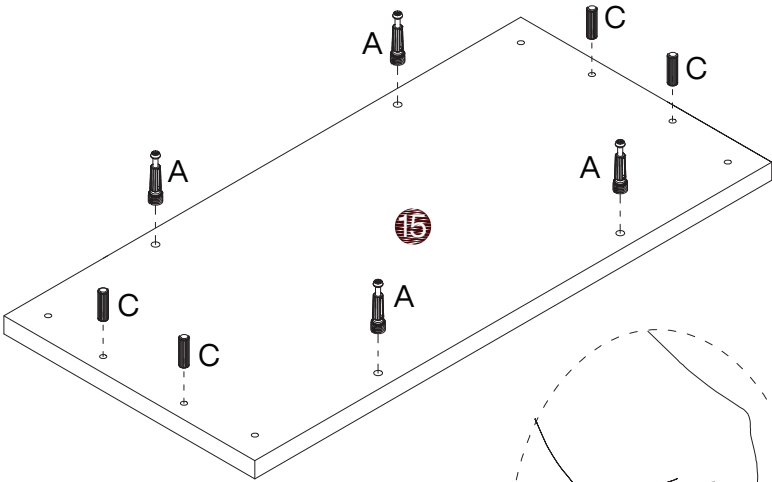


18


B	J
	
Ø15x12mm	M6x14mm
4 pcs	4 pcs

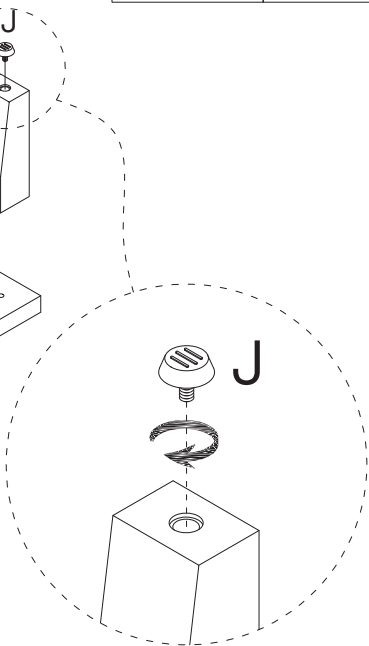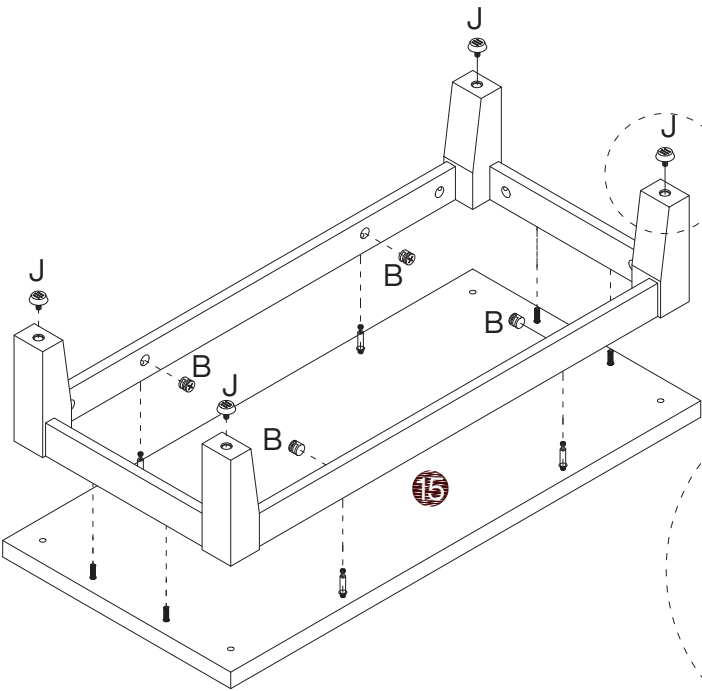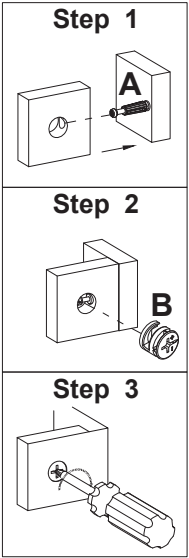



19

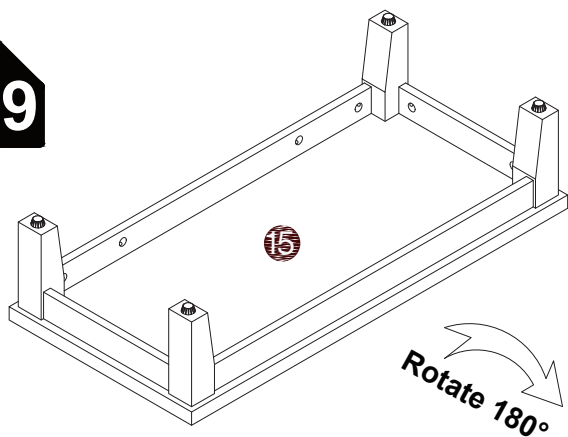


Rotate 180°

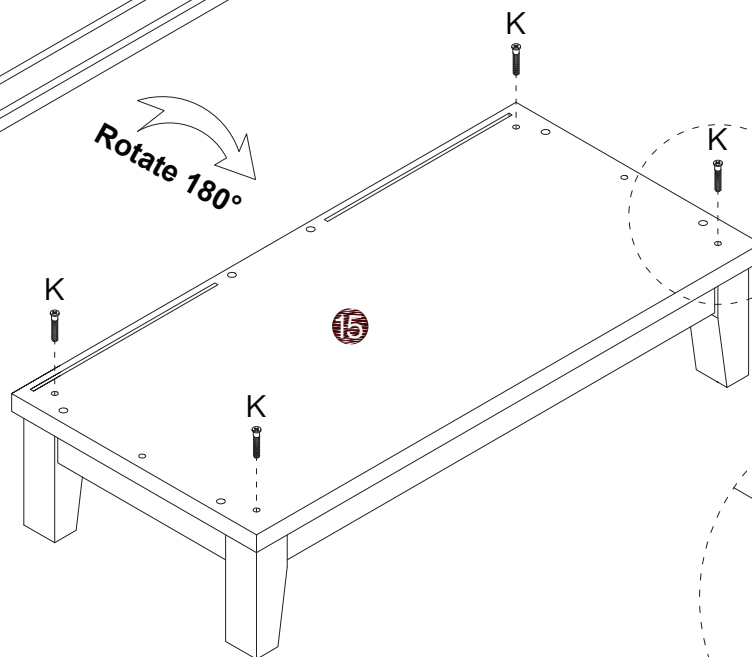




K

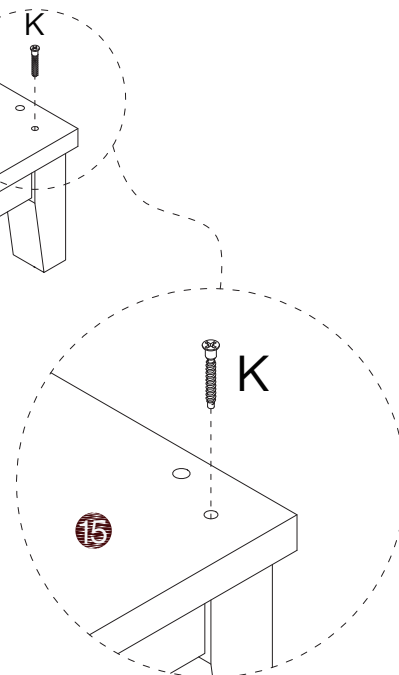Ø7x38mm
4 pcs

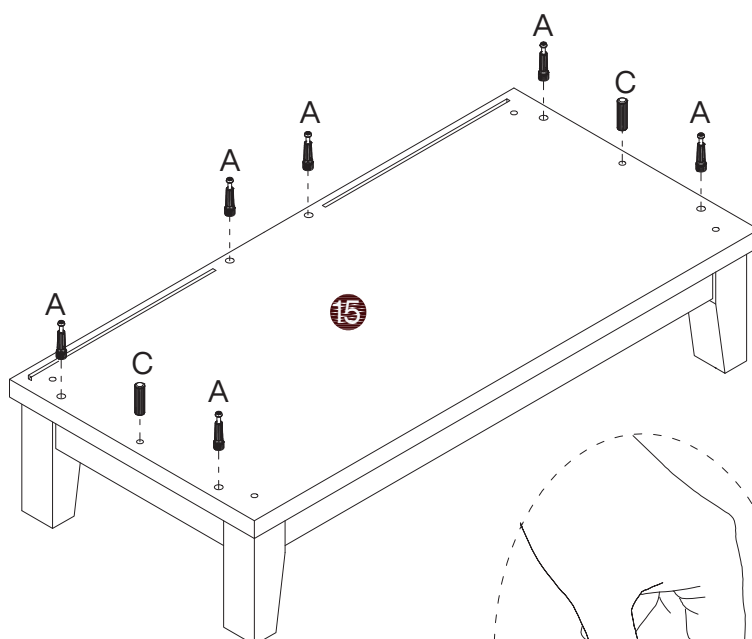




20



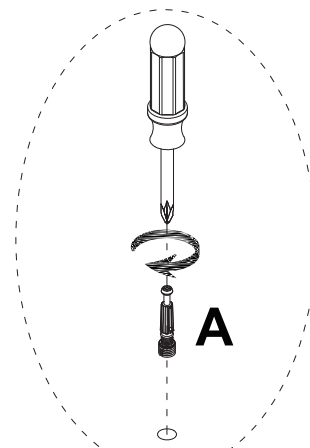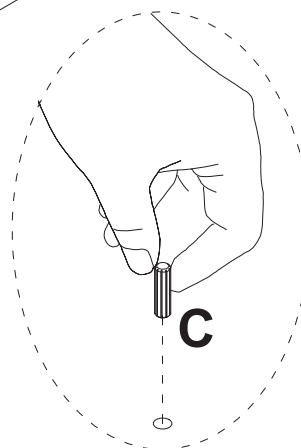
A	C
	
M6x35mm	Ø8x30mm
6 pcs	2 pcs




21

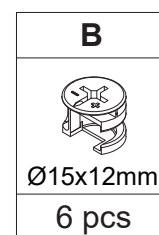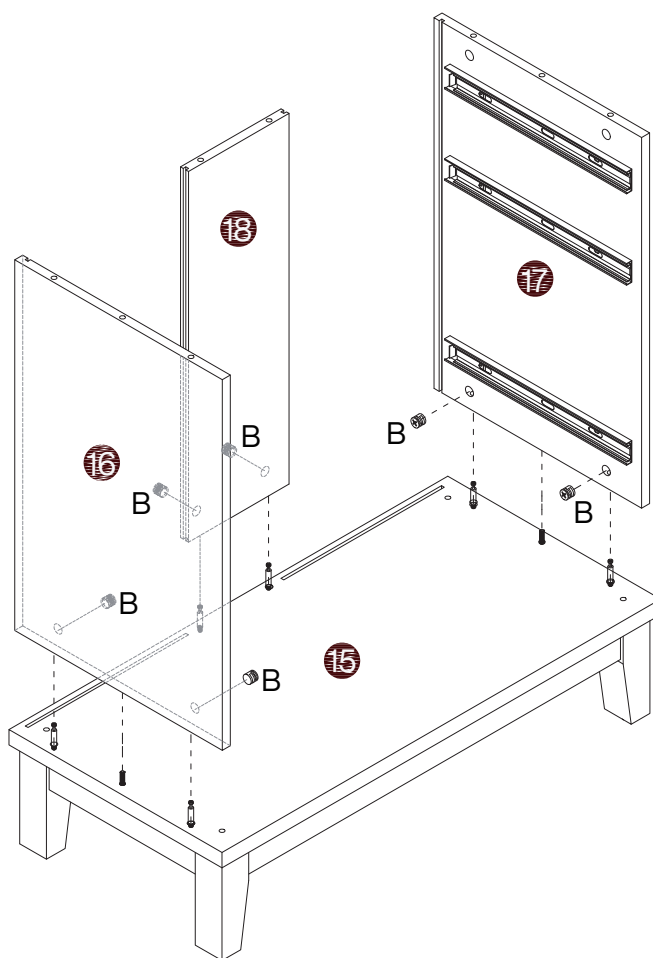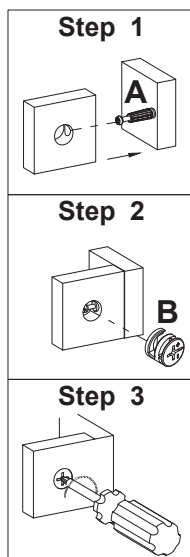

22

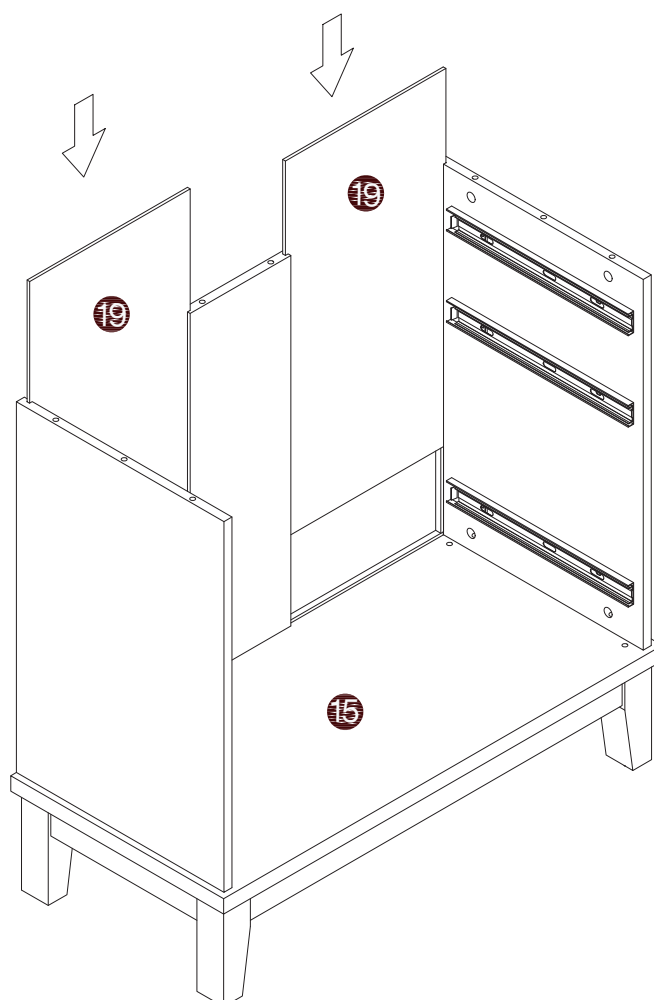


23

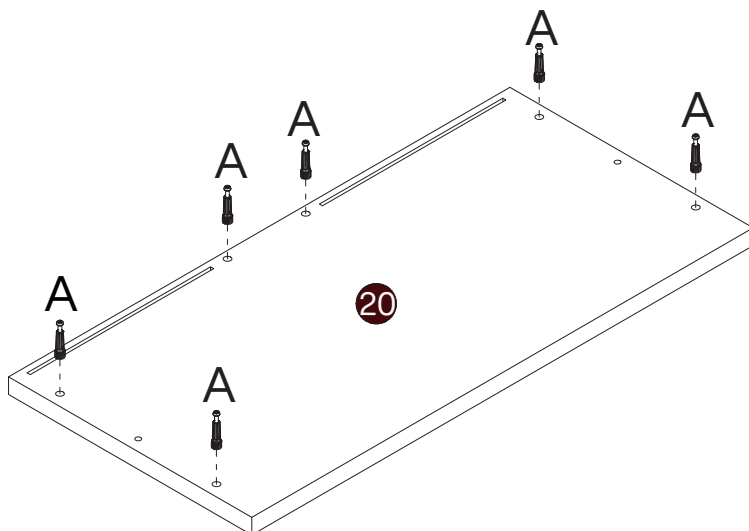


A



M6x35mm
6 pcs

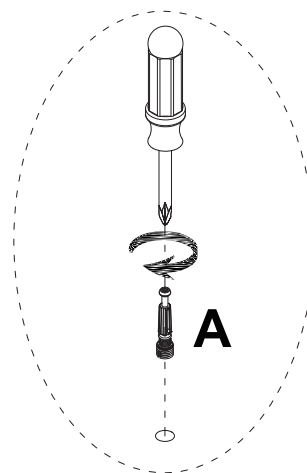


24

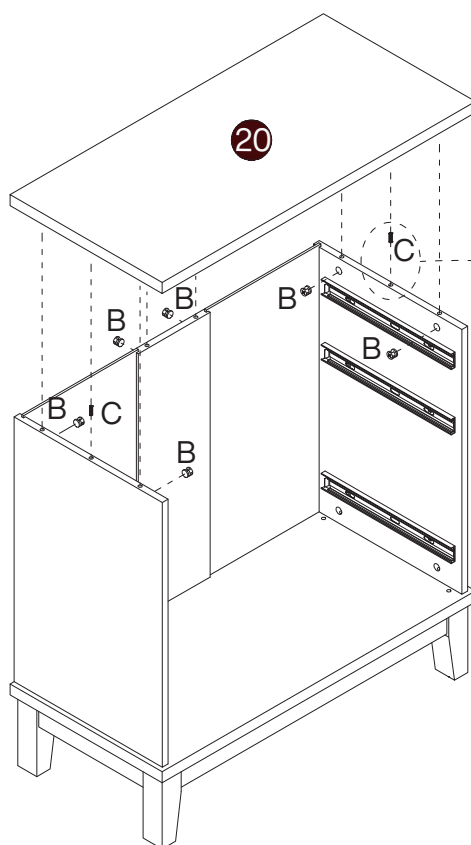


B	C
	
Ø15x12mm	Ø8x30mm
6 pcs	2 pcs

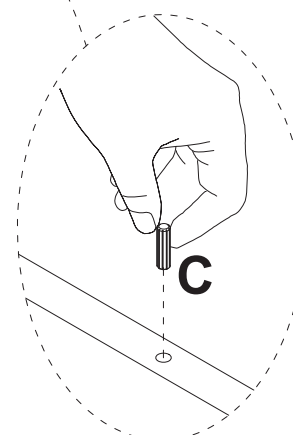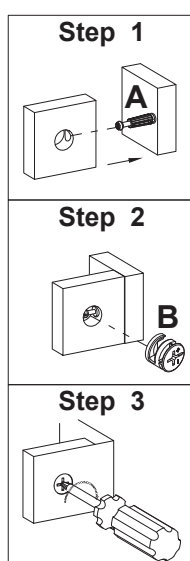


25


L	E
	
4 pcs	Ø3.5x14mm 4 pcs

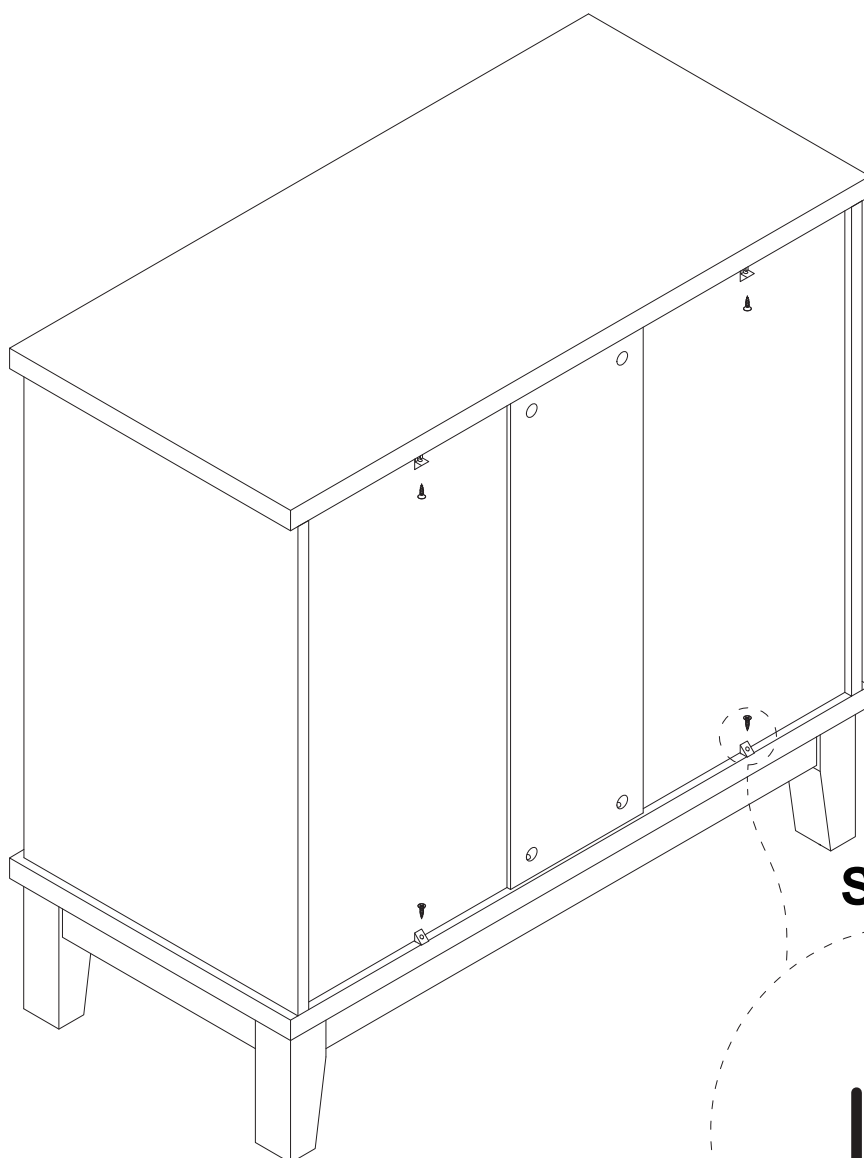


Step 1

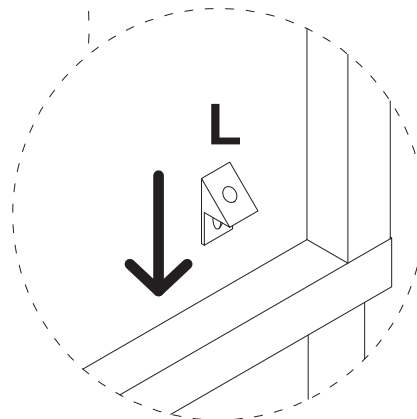

Step 2

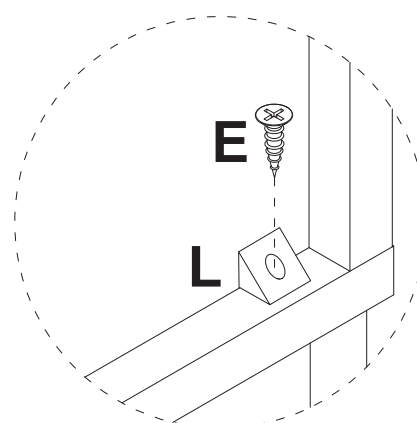


26

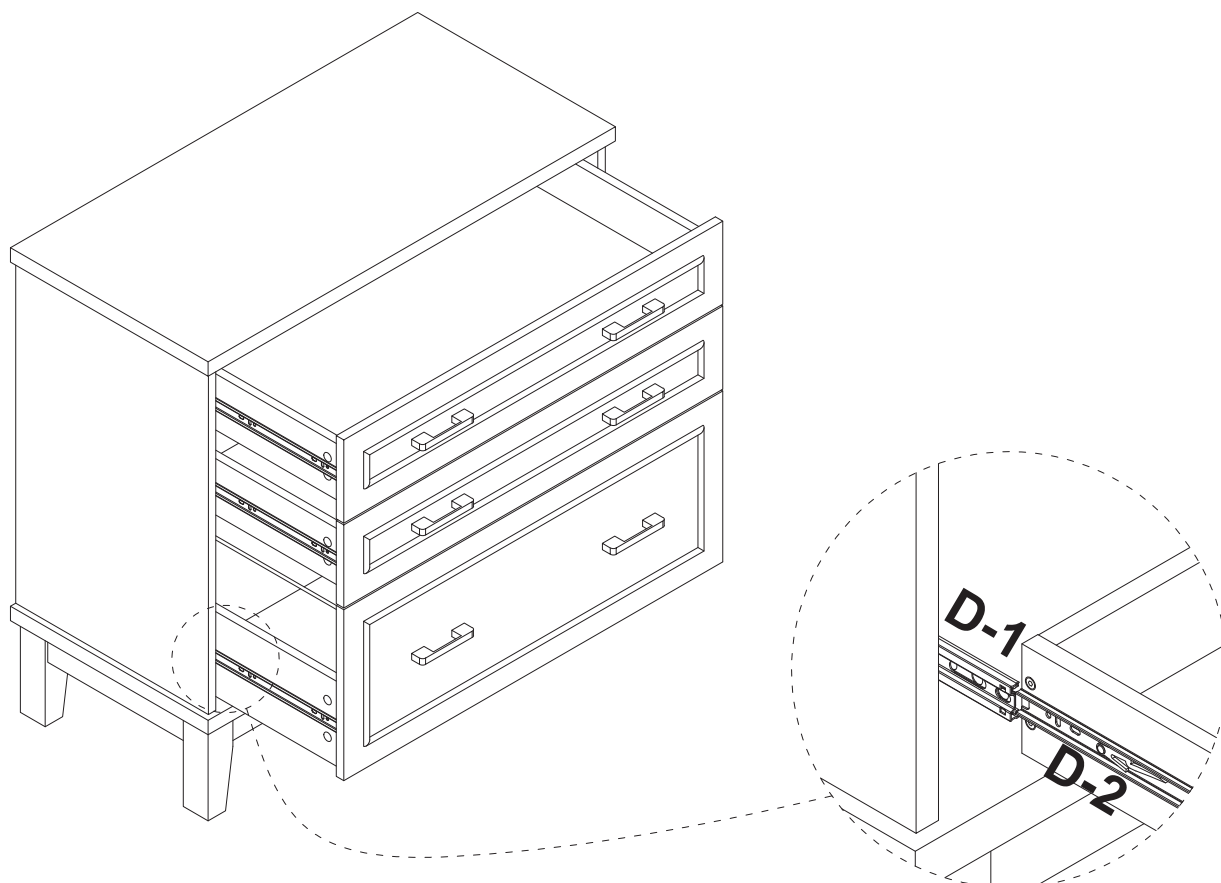

Align the "D-2" with the "D-1" guideway and gently push it in to complete the assembly

27

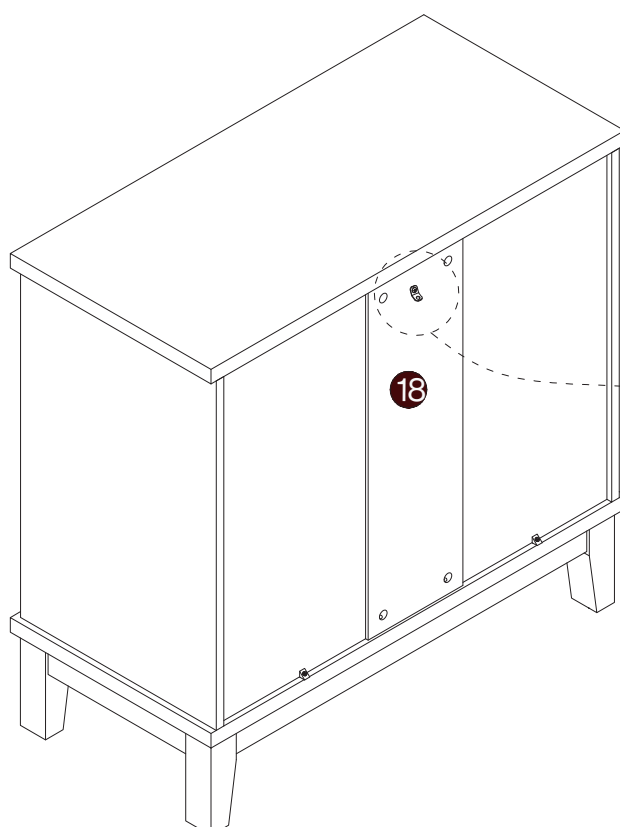


H

1 pc


28

Wall



Step1



Step2

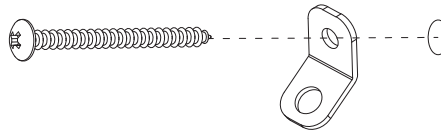


Step3

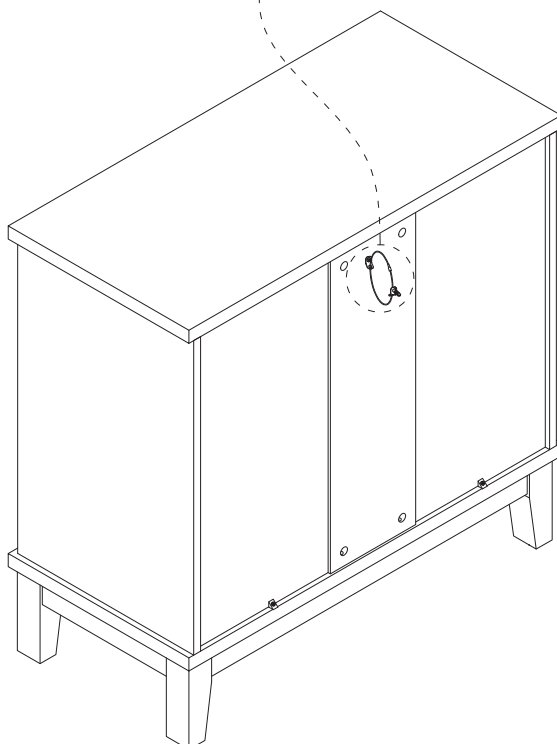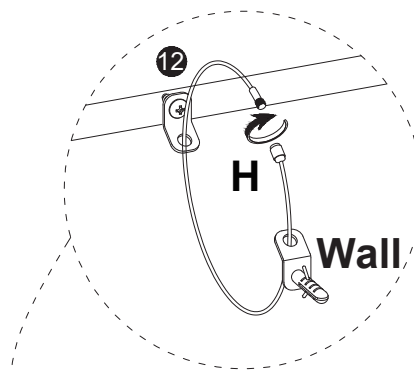



DESIGNED FOR LIFE

Thank you for your support!

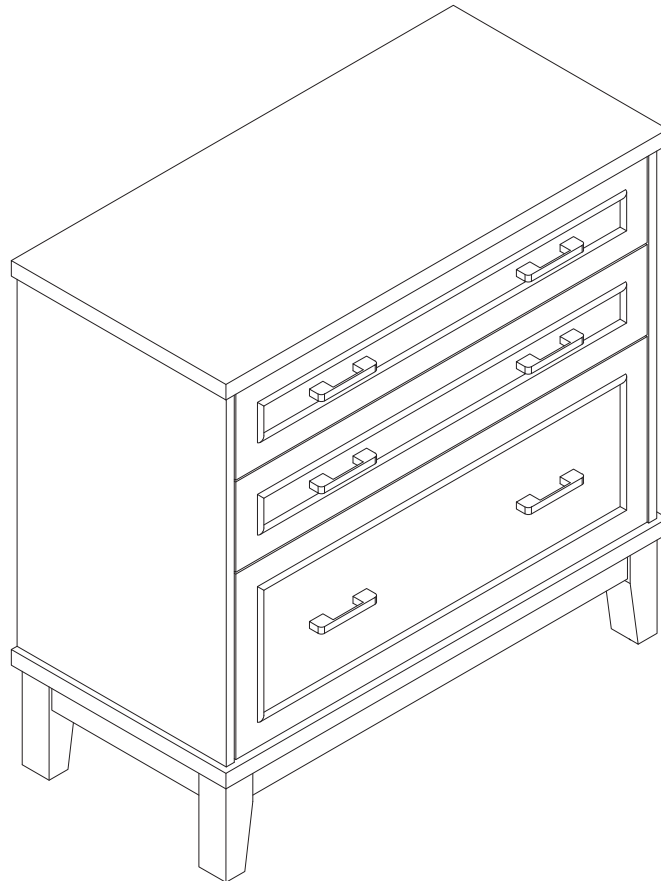

Contact our customer service team



support@tribesigns.com
www.tribesigns.com



1-424-220-6888

Contact us anytime except
12:00 AM to 8:00 AM EST.

Follow Tribesigns



Facebook



Instagram



Pinterest



Twitter



YouTube



TikTok



WhatsApp