


NOTE:

Check the inside of the larger pieces in your box for other materials packed inside.
When assembling components, place on a non-abrasive surface to avoid scratching.
We recommend an area approximately 5'x 8' for unobstructed assembling.
You should not need to use excessive force when assembling components.

If you are having problems with the assembly or installation of this product,
we are happy to assist you with the process,

Contact Method: Log in to your Amazon account>select"your Orders">
find the order ID>click"Contact Seller"

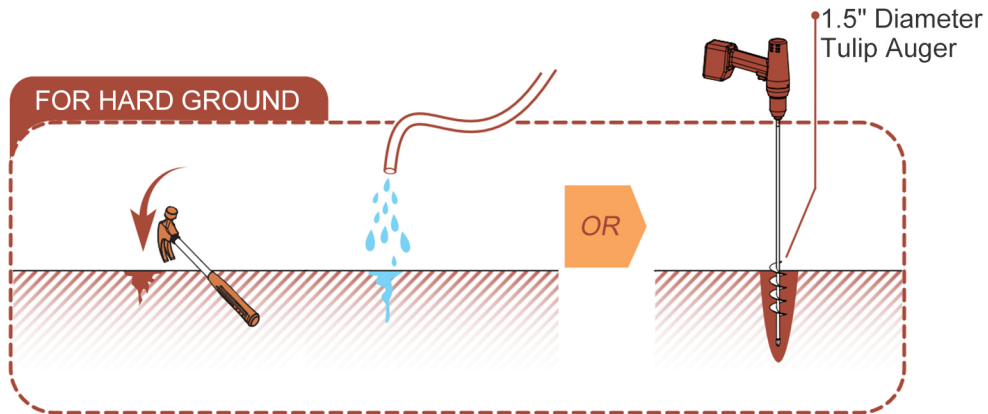

INSTRUCTION OF OPERATION & USER MANUAL WOOD OUTDOOR FENCE

PREPARATION

► Tools required for a smoother installation experience.



Drill




Mallet

► May be needed depending on soil condition.




► 1 1/2" Tulip Auger*



► Level

We recommend 2 people for a smoother assembly.

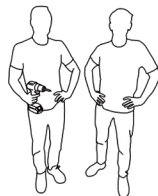

LAY OUT MATERIALS



A: Wood Spacer



D: Post Cap*4



E: Dowel*4



G: Post Anchor *4



B: Board



C: Screw A




F: Post*4

ASSEMBLING




1. Take two posts (F) first to put it together.

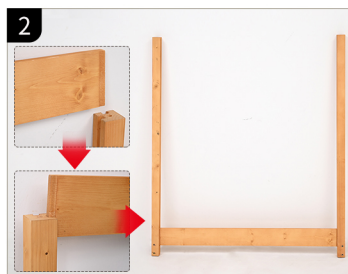

2. Put the first board (B).




3. Put Wood Spacer (A). Horizontal does not need this step

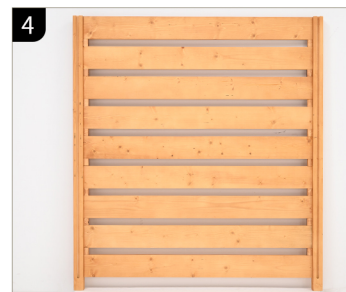


4. Preliminary formation.



5. Install stake, install 3, you need to use Screw A (C).

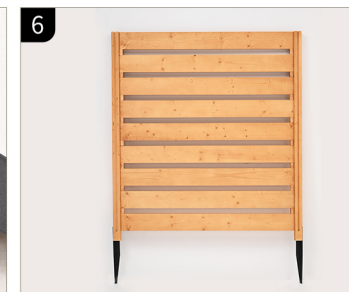


6. Formation 2.

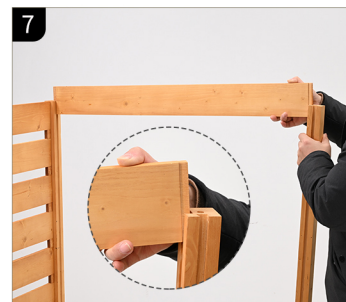

7. Install the other side



8. Formation 3

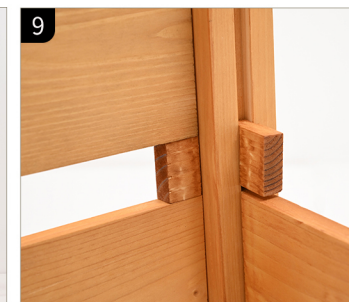


9. Add Wood Spacer (A)



10. Continue to add Board (C).




11. Install Dowel (E).

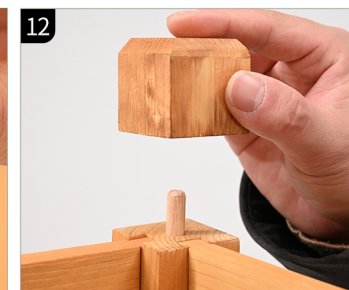

12. Install Post Cap (D).



13. Preliminary formation.

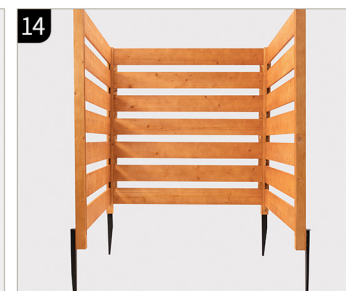

14. Install the other side.



15. Nail into the soil, Post Anchor (G) The side that can be struck with a hammer with assistance