

• Easily Converts Most Tub Drains

Tub Plate Installation Instructions

1. Remove overflow plate and linkage assembly. **(Fig. A)**
2. Using original screws, install the converter bracket and attach the face plate. **(Fig. B)**

Tub Stopper Installation: (Fig. C&D)

1. Remove the old drain body using pliers as shown. **(Fig. C)**
2. Determine thread size. Use the bushing adapter **(2)** if needed.
3. Apply PTFE tape to strainer body **(3)**.
4. Apply putty seal under flange of strainer body **(3)**.
5. Making sure threads are clear of debris, screw in new drain body **(3)** into waste elbow **(1)** and tighten.
6. Remove any excess putty.
7. Screw in new stopper **(4)**.

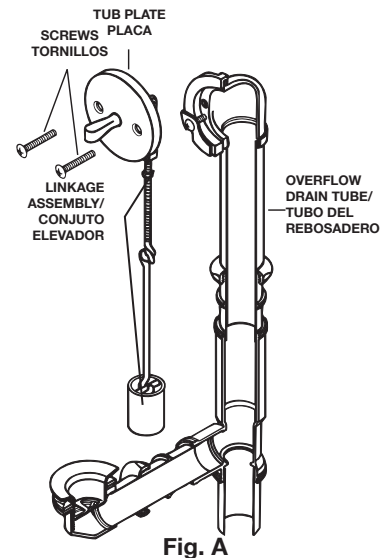


Fig. A

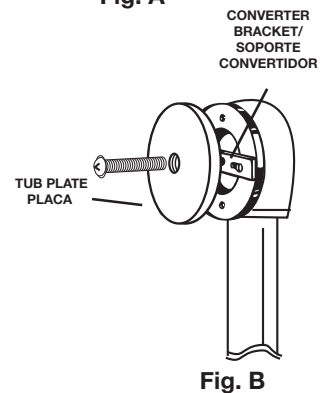


Fig. B



Fig. C

• Convierte Facilmente la Mayoría de los Desagües.

Instalación de la placa de Bañera

1. Desmonte la placa del rebosadero y el ensamble del conjunto elevador. **(Fig. A)**
2. Usando los tornillos originales, instale el soporte convertidor e instale la placa nueva. **(Fig. B)**

Instalación de la Coladera de Bañera: (Fig. C&D)

1. Desaloje el cuerpo del desagüe con unas pinzas. **(Fig.C)**
2. Determine la medida de la rosca. De ser necesario use el adaptador **(2)**.
3. Aplique cinta PTFE en el cuerpo del desagüe **(3)**.
4. Aplicar masilla por debajo del cuerpo del desagüe **(3)**.
5. Asegúrese que las roscas estén limpias, atornille el cuerpo nuevo del desagüe **(3)** en el codo del desagüe **(1)**, y apriételo.
6. Desaloje el exceso de masilla.
7. Atornille el tapón nuevo **(4)**.

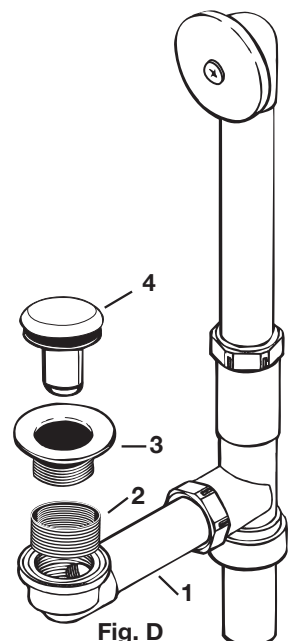


Fig. D