


ASSEMBLY INSTRUCTIONS

L BUNK BED WITH STAIR AND TABLE

If you have any questions, please feel free to contact us.
Email: lowesteam@aminalife.com

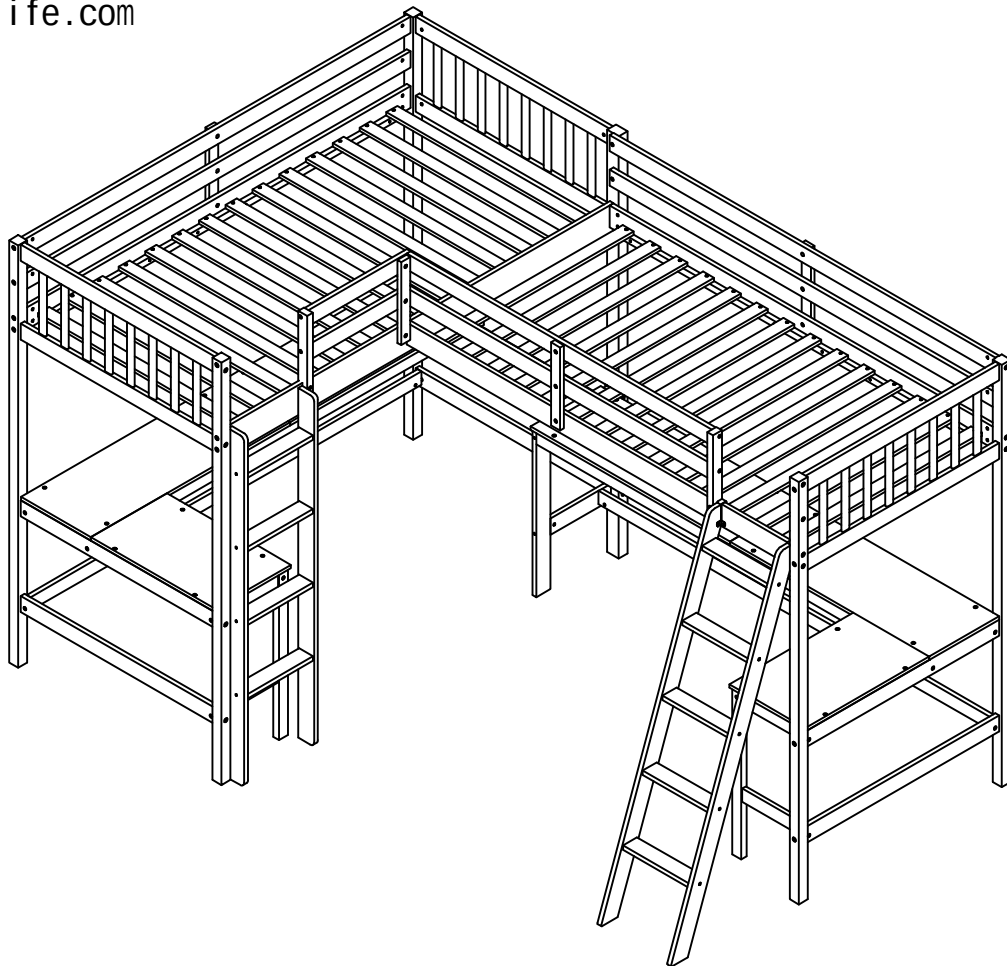

WF310445/WF310446/WF310447

SAFETY WARNINGS AND GENERAL NOTES:

Follow the information on the warnings on the loft bed end structure and on the carton. Do not remove the warning label from the bed. Always use the recommended size mattress on mattress support, or both, to help prevent the likelihood of entrapment or falls.

The top surface of the mattress must be at least 5*inch (127mm) below the upper edge of the guardrail.

Do not allow children under 6 years of age to use the upper bunk.

Periodically check and ensure the guardrail, ladder and other components are in their proper position, free from damage, and all connectors are tight.

Do not allow horseplay on or under beds.

Always prohibit jumping on the bed.

Prohibit more than one person on upper bunk.

Always use the ladder for entering and leaving the upper bunk.

Do not use substitute parts. Contact the manufacturer or dealer for replacement parts.

Use of a night-light may provide added safety precaution for a child using the upper bunk.

Always use guardrails on both long sides of the upper bunk.

If the loft bed will be placed next to a wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and the wall.

The use of water or sleep flotation mattresses is prohibited.

STRANGULATION HAZARD-Never attach or hang items to any part of the loft bed that are not designed for use with the bed.

Keep these instructions for future reference.

We recommend assembling your loft bed on the shipping carton to protect your floor or carpet.

Be certain all staples are out of the box before beginning assembly on the shipping carton.


USE ONLY MATTRESSES WHICH ARE 74"-75" LONG AND 38 1/2" WIDE ON UPPER. ENSURE THICKNESS OF MATTRESS DOES NOT EXCEED 6".

SURFACE OF MATTRESS MUST BE AT LEAST 5" (127MM) BELOW THE UPPER EDGE OF GUARDRAILS.

Replacement Parts:









Replacement Parts, including additional guardrails, may be obtained from any of our (GIGACLOUD TECHNOLOGY (USA) INC. 18961 ARENTH AVENUE, CITY OF INDUSTRY , CA, 91748.) dealers

Detail View







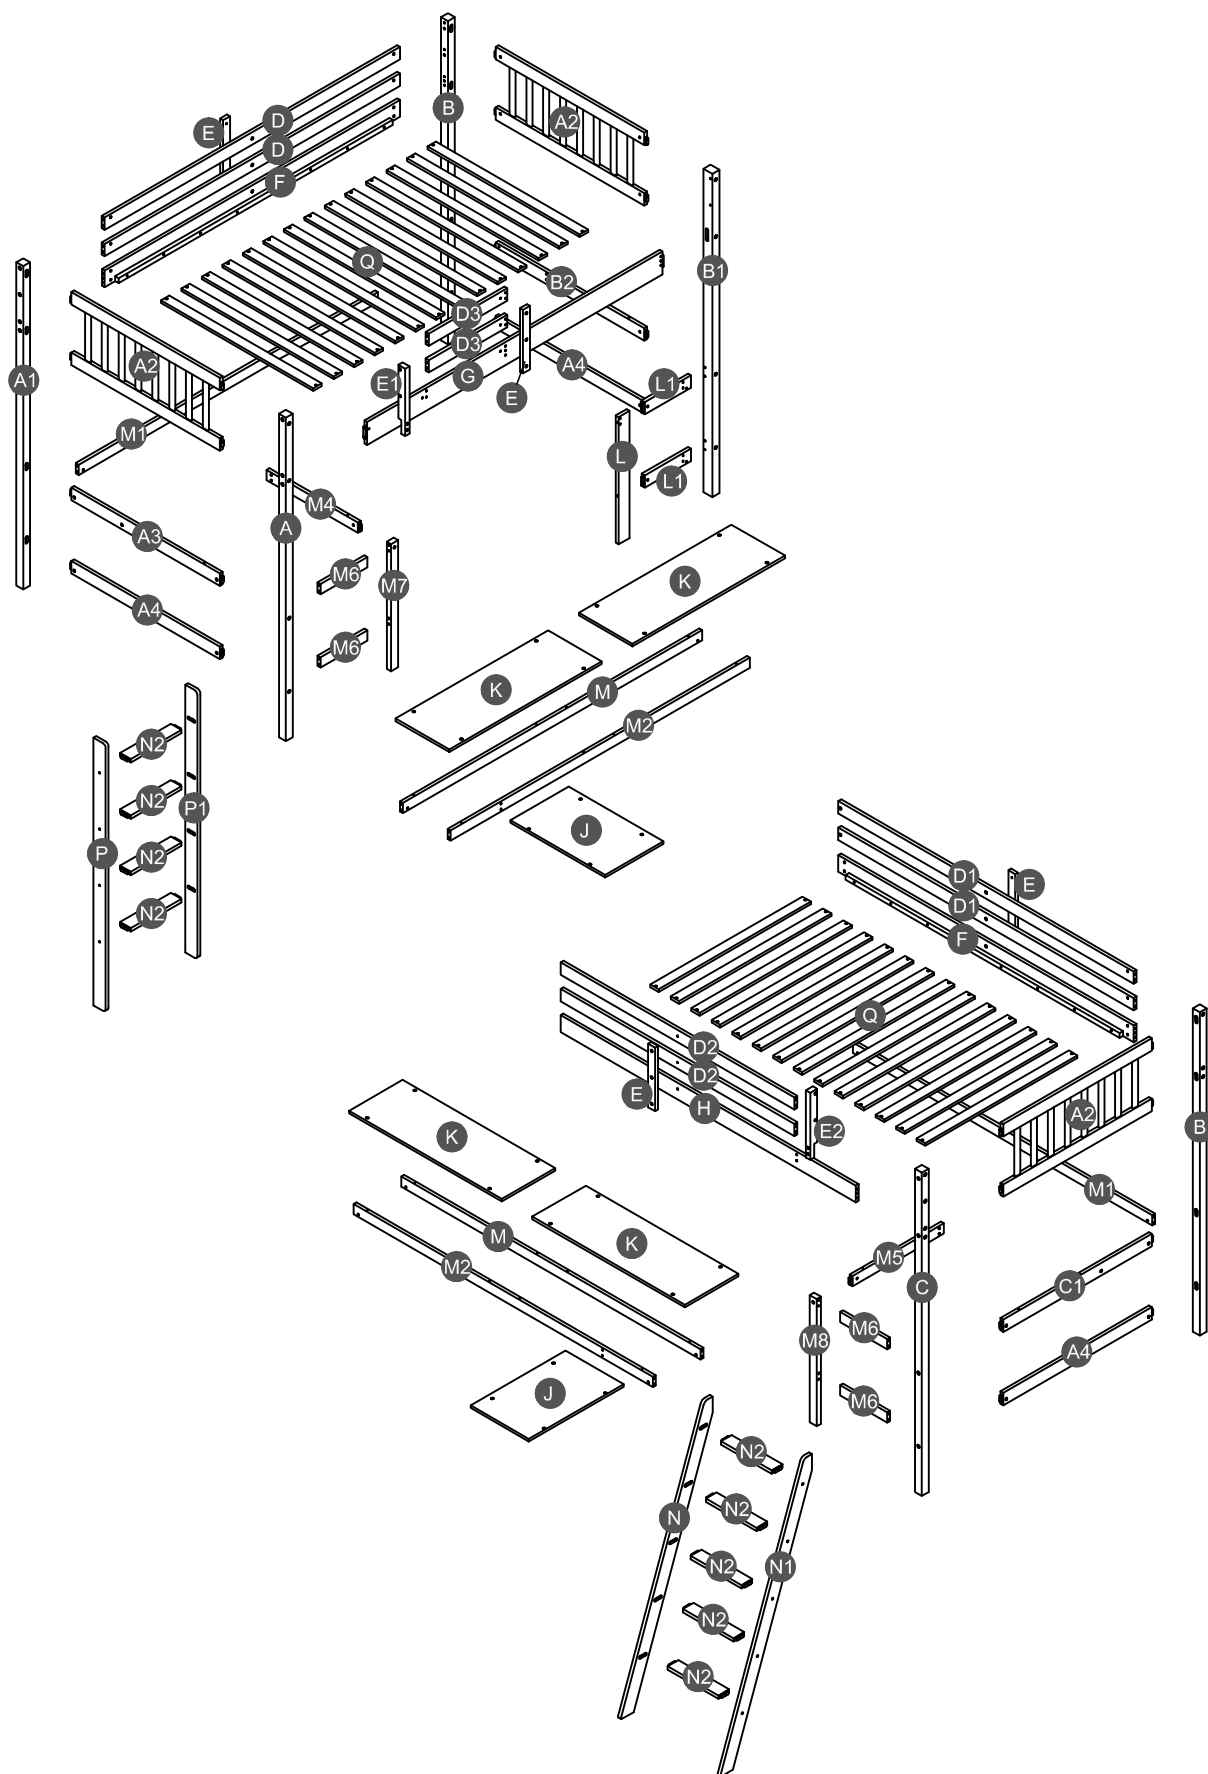


Part List

WF310445








A  Leg (Left Front) - 1pc	A1  Leg (Left Back) - 1pc	B  Leg (Right Back) - 2pcs
B1  Leg (Right Front) - 1pc	C  Leg (Right Front) - 1pc	D  Long guard rail (back) - 2pcs
D1  Long guard rail (back) - 2pcs	F  Upper side rail (Back) - 2pcs	G  Upper side rail (Front) - 1pc
H  Upper side rail (Front) - 1pc	M1  Lower horizontal bar (back) - 2pcs	Q  Slat - 14pcs

WF310446 + Hardware inside







A2  Frame HB/FB - 3pcs	A3  Divider horizontal bar FB - 1pc	B2  Divider horizontal bar HB - 1pc
D2  Long guard rail (front) - 2pcs	M  Lower horizontal bar (back) - 2pcs	M2  Lower horizontal bar (front) - 2pcs
N  Left side ladder - 1pc	N1  Right side ladder - 1pc	N2  Step ladder - 9pcs
P  Left side ladder - 1pc	P1  Right side ladder - 1pc	Q  Slat - 14pcs

Part List


WF310447

A4  Lower horizontal bar - 3pcs	C1  Divider horizontal bar HB - 1pc	D3  Short guard rail (front) - 2pcs
E  Vertical guard rail - 4pcs	E1  Support guard rail (Left) - 1pc	E2  Support guard rail (Right) -1pc
J  Top panel - 2pcs	K  Top panel - 4pcs	L  Short leg (Right Front) - 1pc
L1  Horizontal bar (Front) - 2pcs	M4  Horizontal bar (Left) - 1pc	M5  Horizontal bar (Right) - 1pc
M6  Horizontal bar (Front) - 4pcs	M7  Short leg (Left Front) - 1pc	M8  Short leg (Right Front) - 1pc

Hardware List WF310446


1  $\varnothing 10 \times 40 \text{mm}$ Wood dowel (12pcs)	2  $\varnothing 8 \times 30 \text{mm}$ Wood dowel (28pcs)	3  $(\varnothing 15) 1/4" \times 100 \text{mm}$ Hex-Head bolts (24pcs)
4  $(\varnothing 15) 1/4" \times 80 \text{mm}$ Hex-Head bolts (36pcs)	5  $(\varnothing 12) 1/4" \times 70 \text{mm}$ Hex-Head bolts (2pcs)	6  $(\varnothing 12) 1/4" \times 60 \text{mm}$ Hex-Head bolts (40pcs)
7  $(\varnothing 12) 1/4" \times 40 \text{mm}$ Hex-Head bolts (2pcs)	8  $(\varnothing 12) 1/4" \times 35 \text{mm}$ Hex-Head bolts (4pcs)	9  $(\varnothing 12) 1/4" \times 30 \text{mm}$ Hex-Head bolts (12pcs)
10  $1/4" \times 15 (9.5 \text{mm})$ Horizontal-Hole bolts (100pcs)	11  $(1/4") 4.5 \times 58 \text{mm}$ Allen key (1pc)	12  $(\varnothing 12) 1/4" \times 40 \text{mm}$ Hex-Head bolts (24pcs)
13  $\varnothing 4 \times 30 \text{mm}$ Wood screws (56pcs)	14  $\varnothing 4 \times 19 \text{mm}$ Wood screws (10pcs)	15  $\varnothing 3.5 \times 15 \text{mm}$ Wood screws (4pcs)
16  $81 \times 26 \times 21 (2.5 \text{mm})$ Hooks (2pcs)	17  $21 \times 21 \times 17 \times 1.7 \text{mm}$ Metal bracket (2pcs)	18  $40 \times 17 \times 17 \times 1.6 \text{mm}$ Metal bracket (1pc)

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

STEP 1:

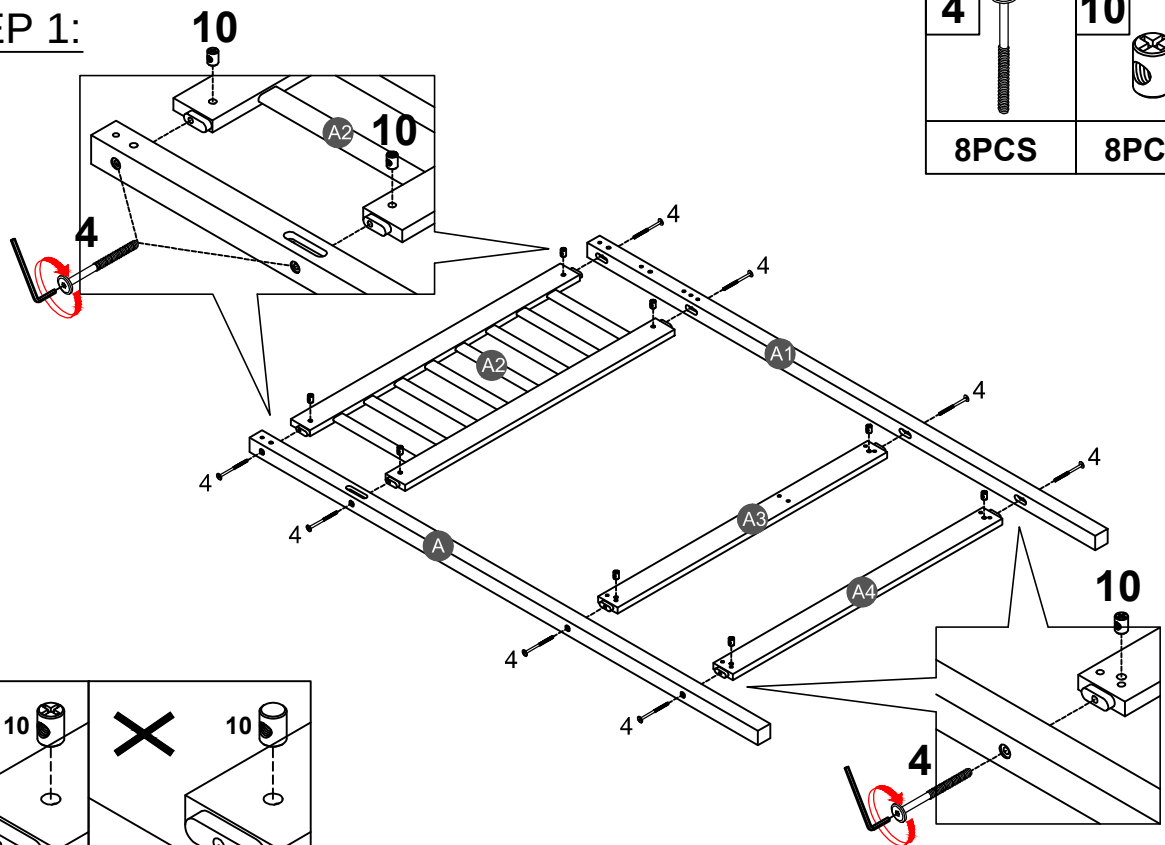


Note: Part 10 will face up with the "x" mark on it, otherwise it cannot be tightened

STEP 2:

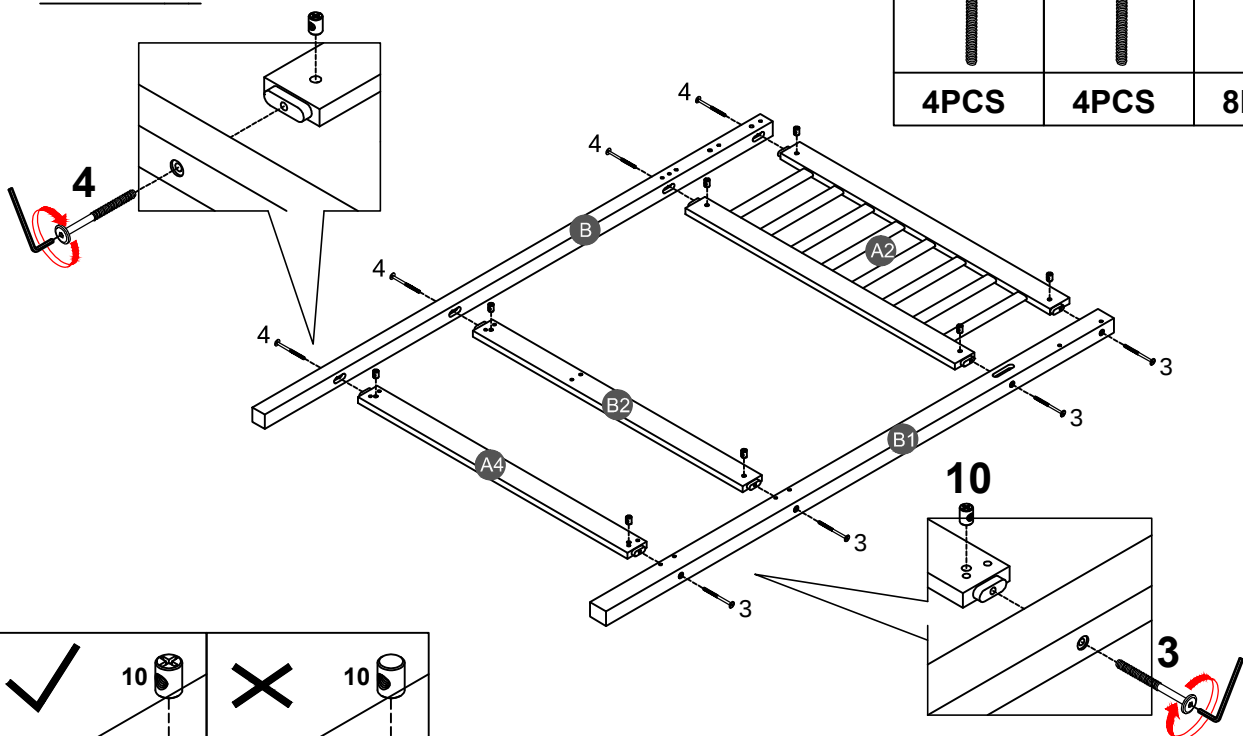


Note: Part 10 will face up with the "x" mark on it, otherwise it cannot be tightened

STEP 3:

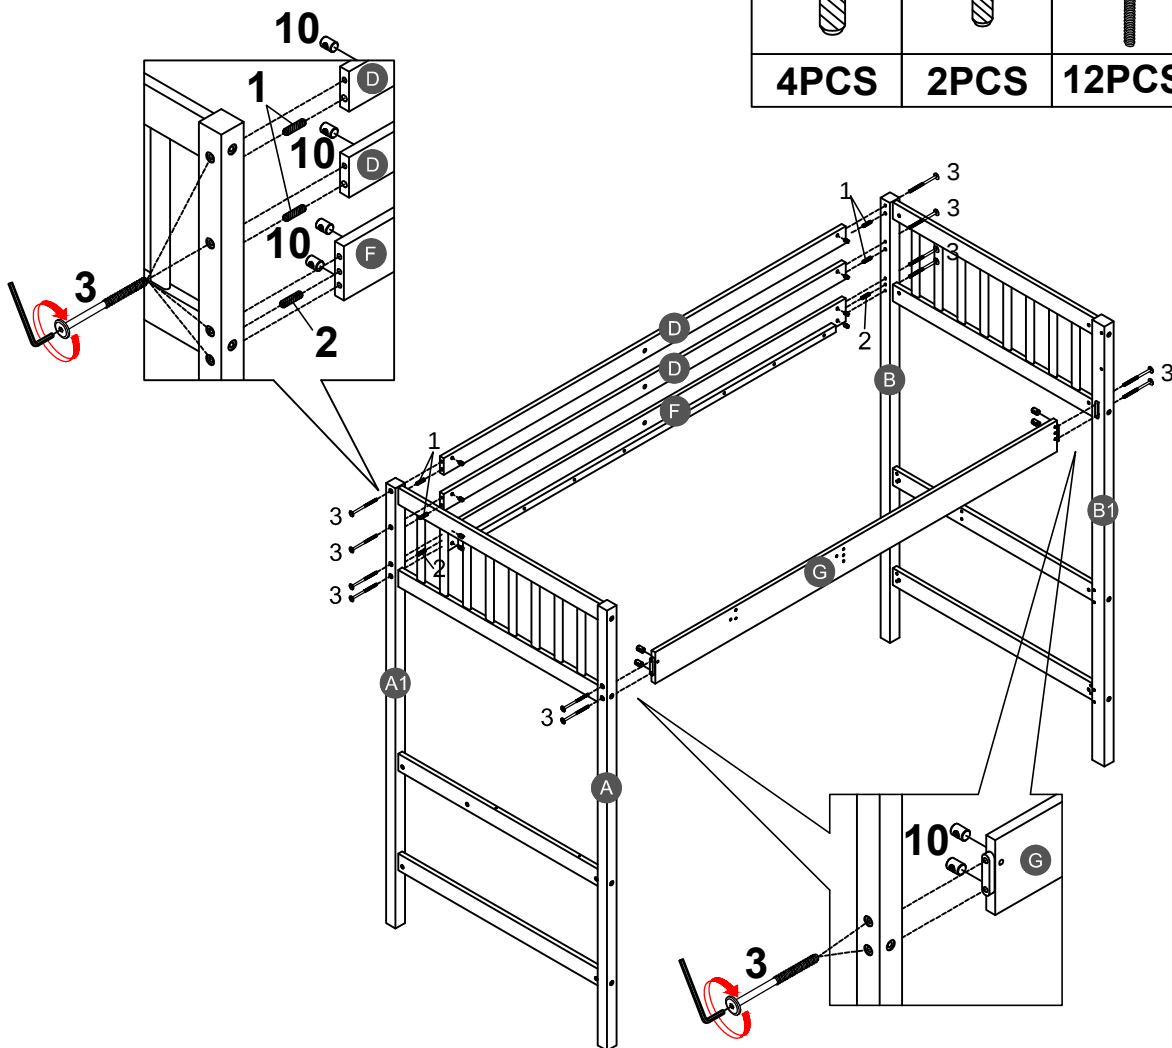


1		2		3		10	
4PCS		2PCS		12PCS		12PCS	

STEP 4:

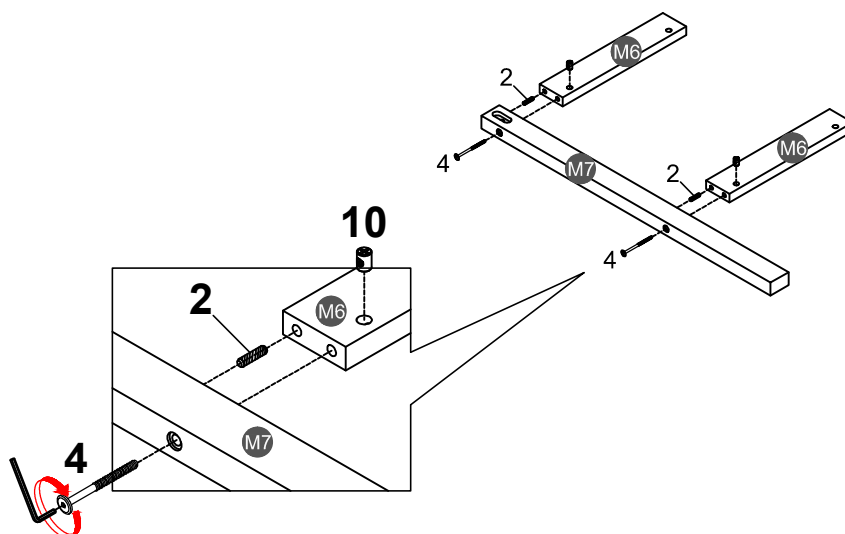


2		4	
2PCS		2PCS	
10		2PCS	

STEP 5:

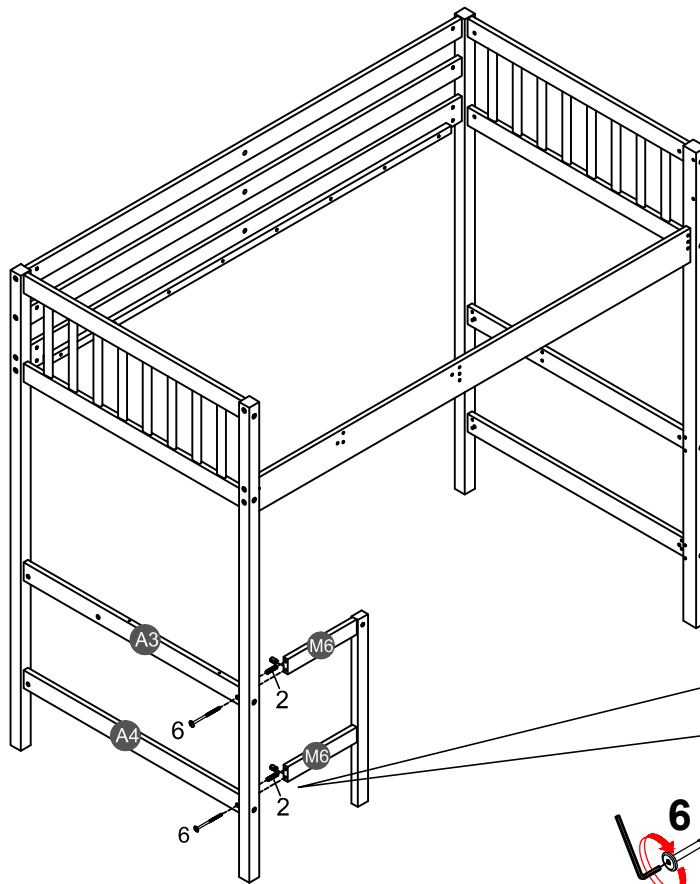


2		6	
2PCS		2PCS	
		10	
		2PCS	

STEP 6:

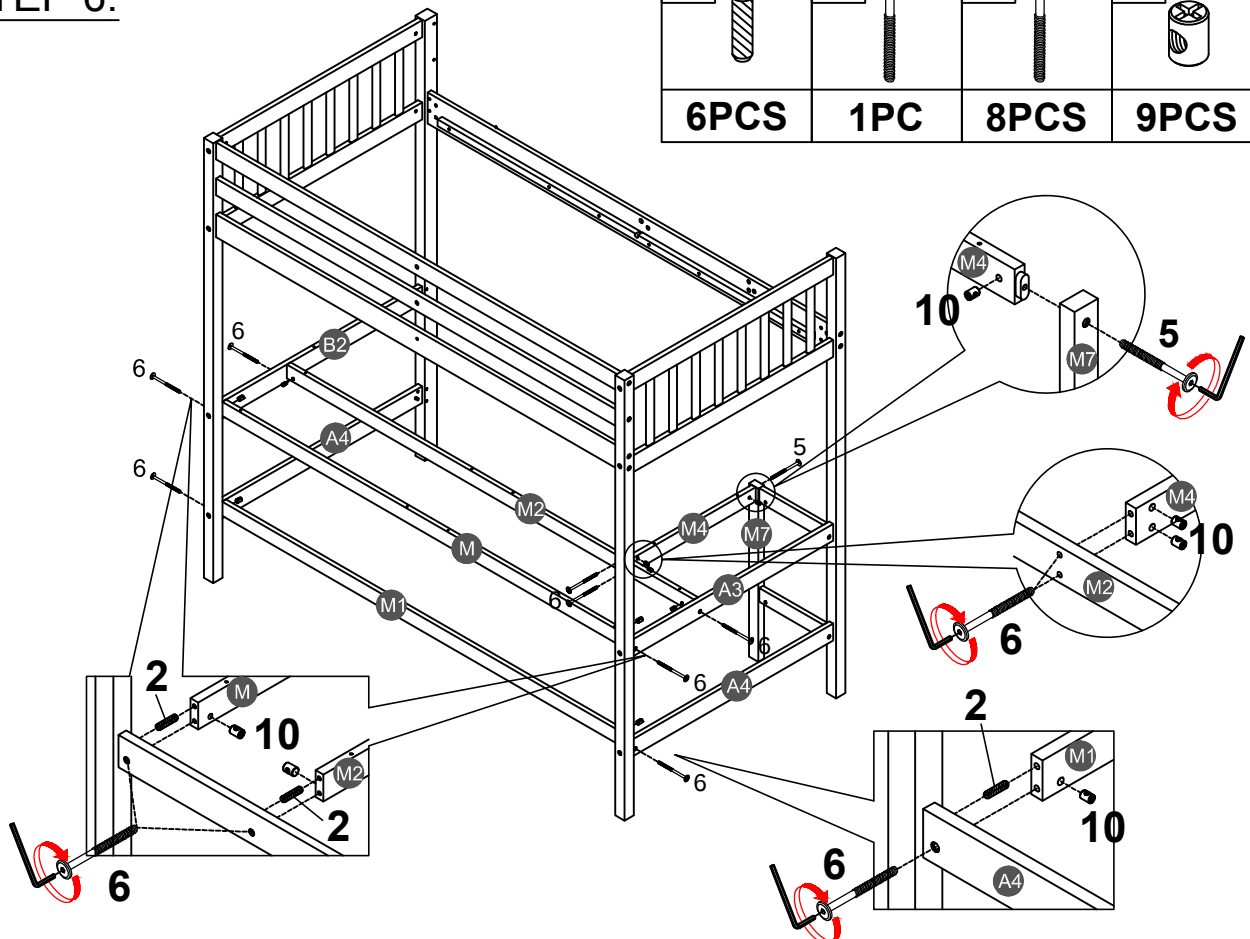


2		5		6		10	
6PCS		1PC		8PCS		9PCS	


STEP 7:

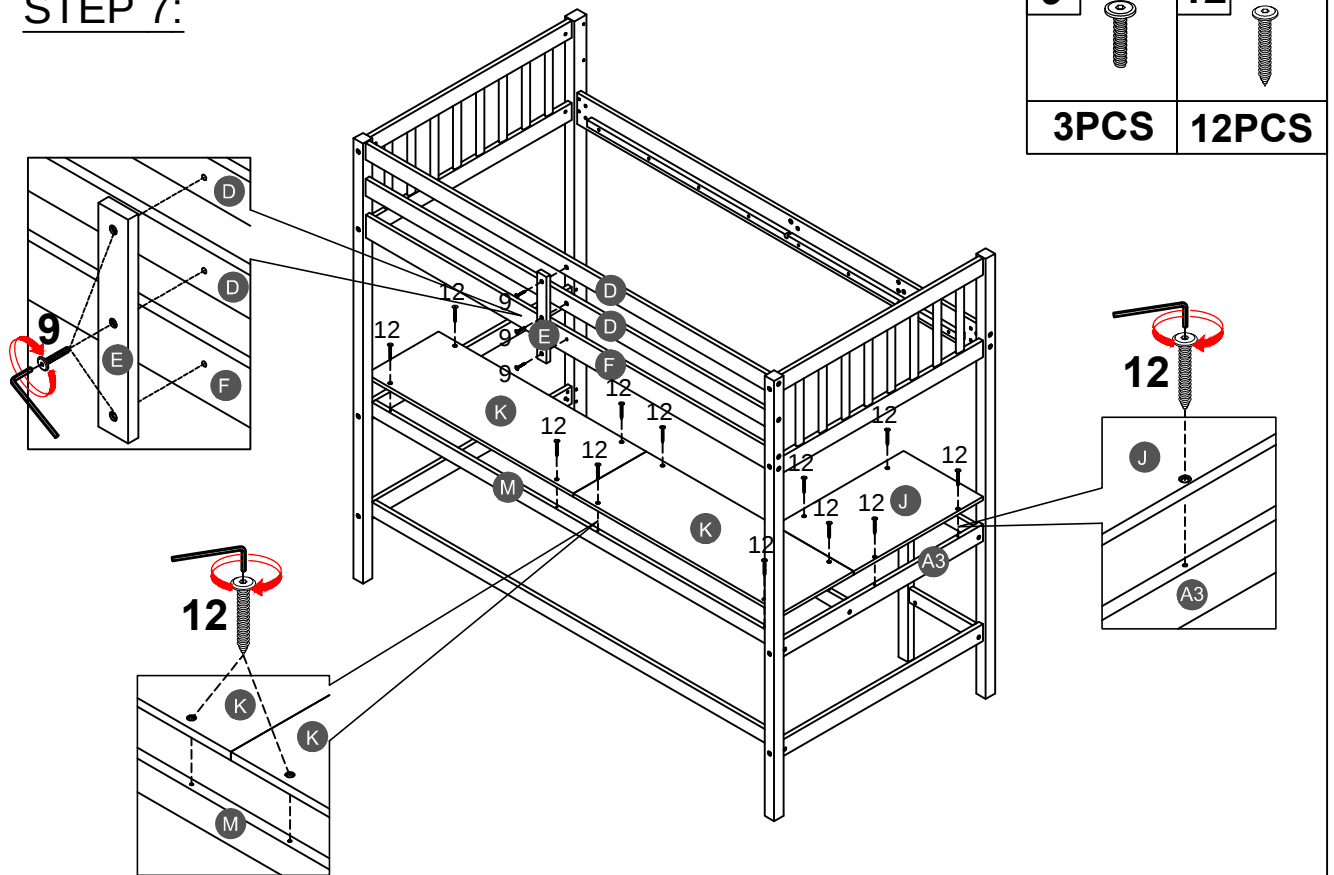


STEP 8:

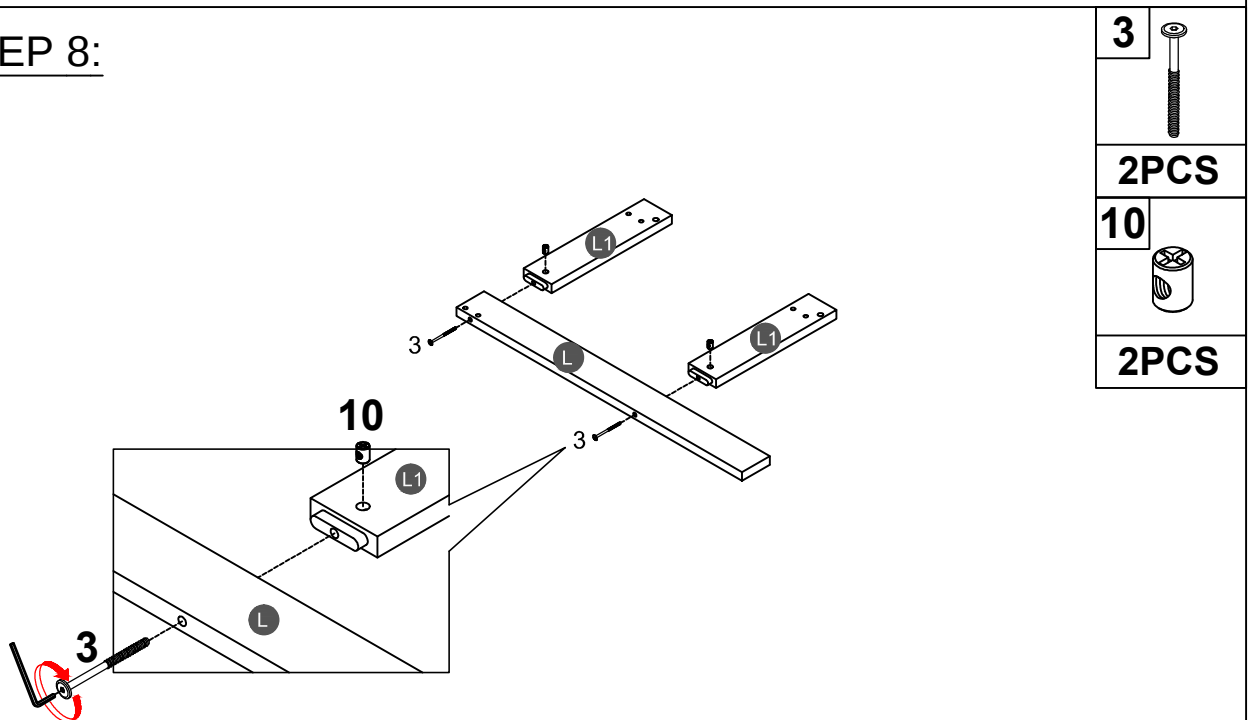

STEP 9:

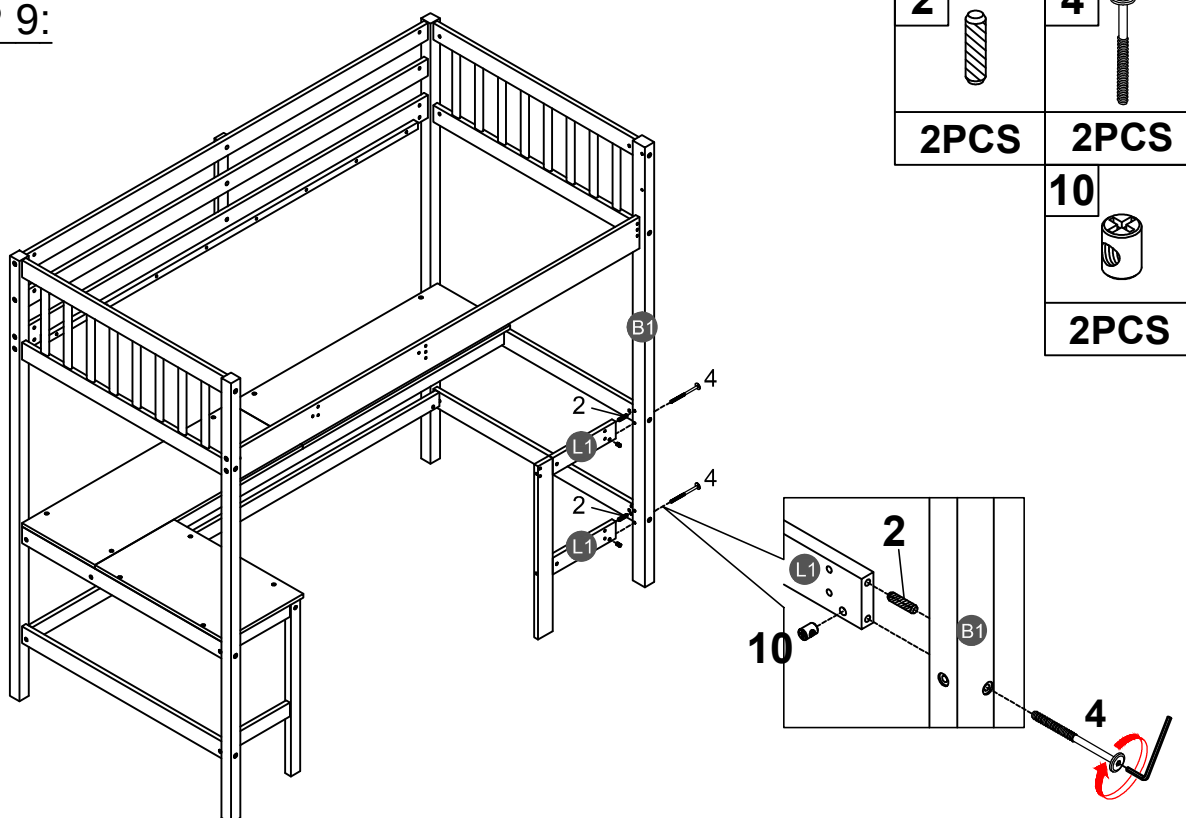


STEP 10:

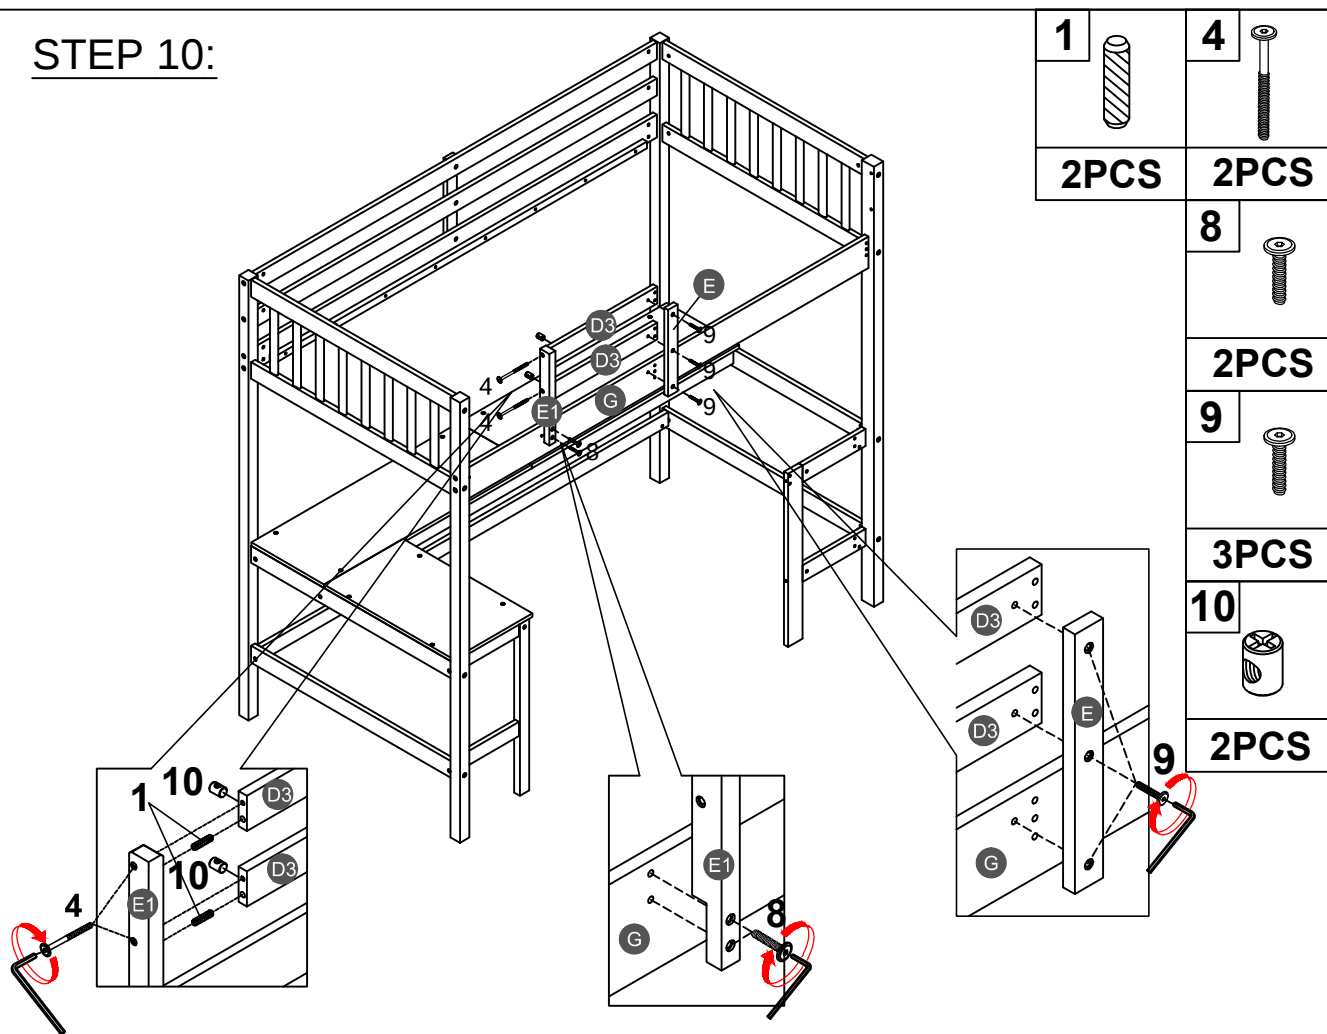


STEP 11:

6		10		15		18	
8PCS		8PCS		2PCS		1PC	

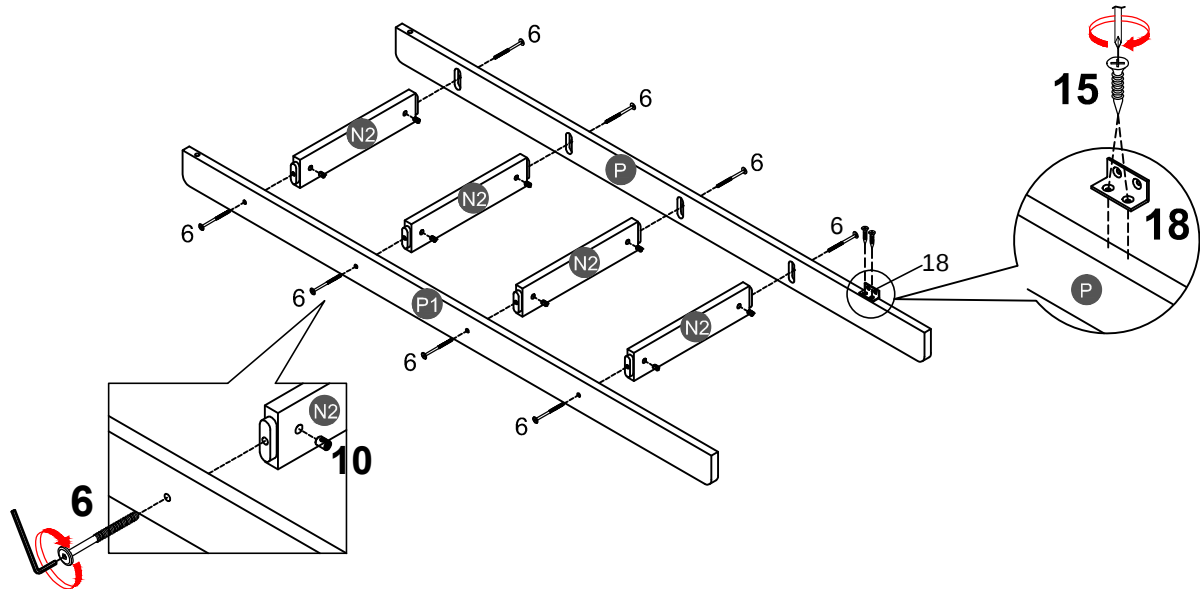


STEP 12:


7	
2PCS	
15	
2PCS	

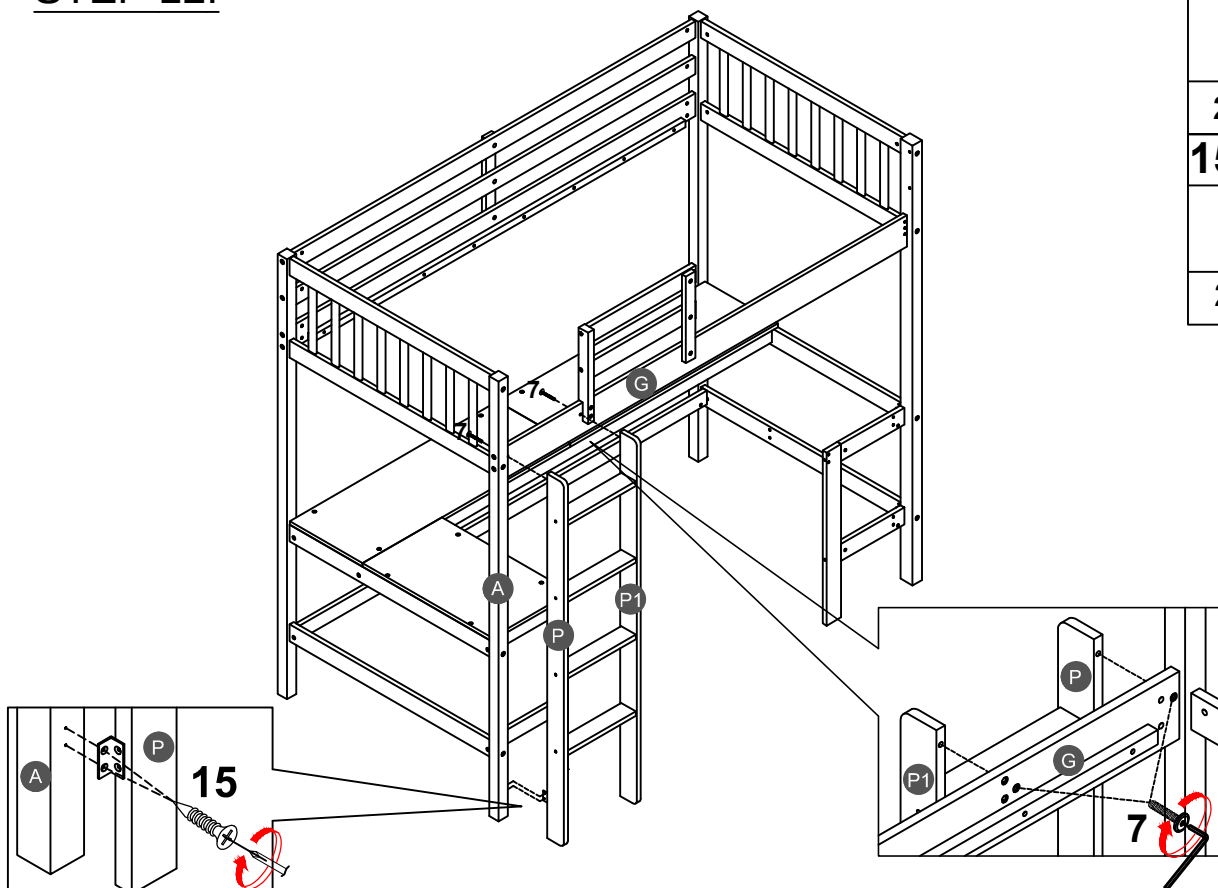


STEP 13:

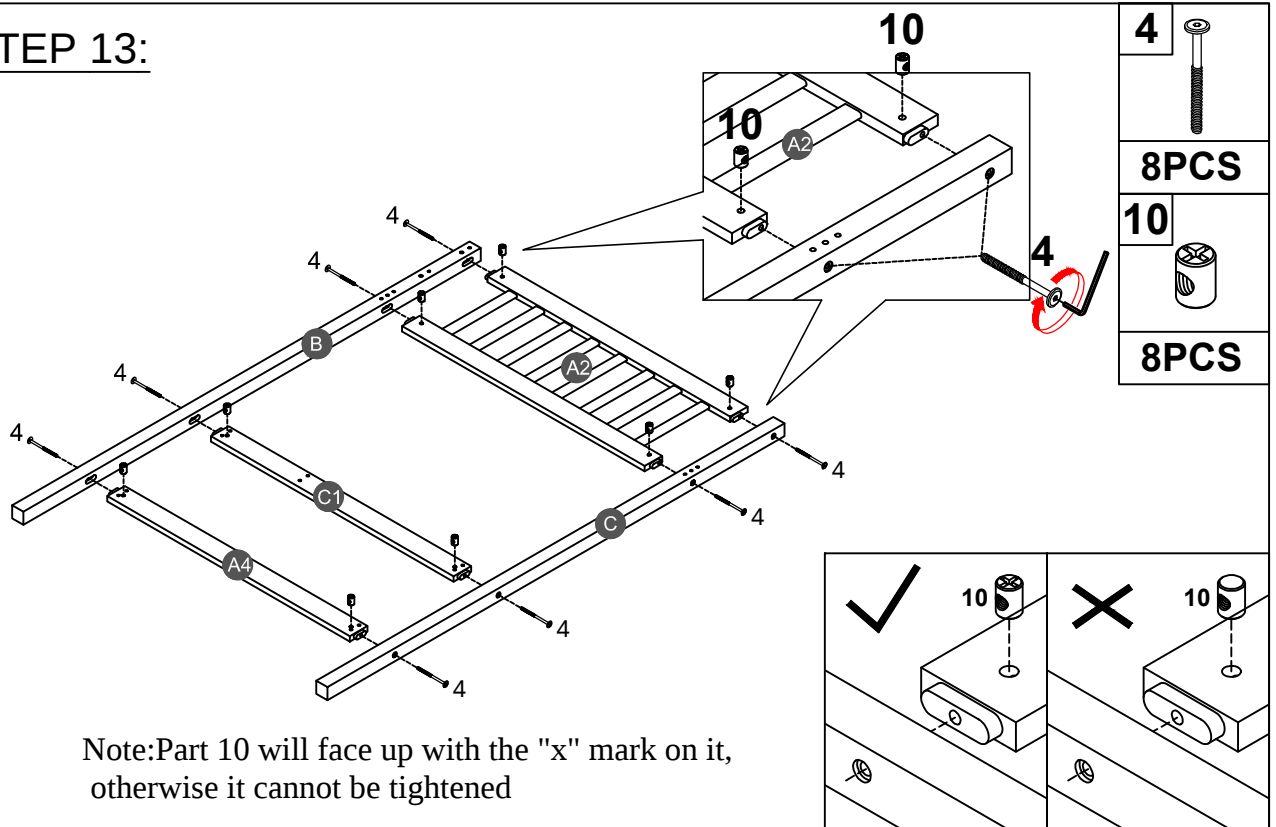

STEP 14:

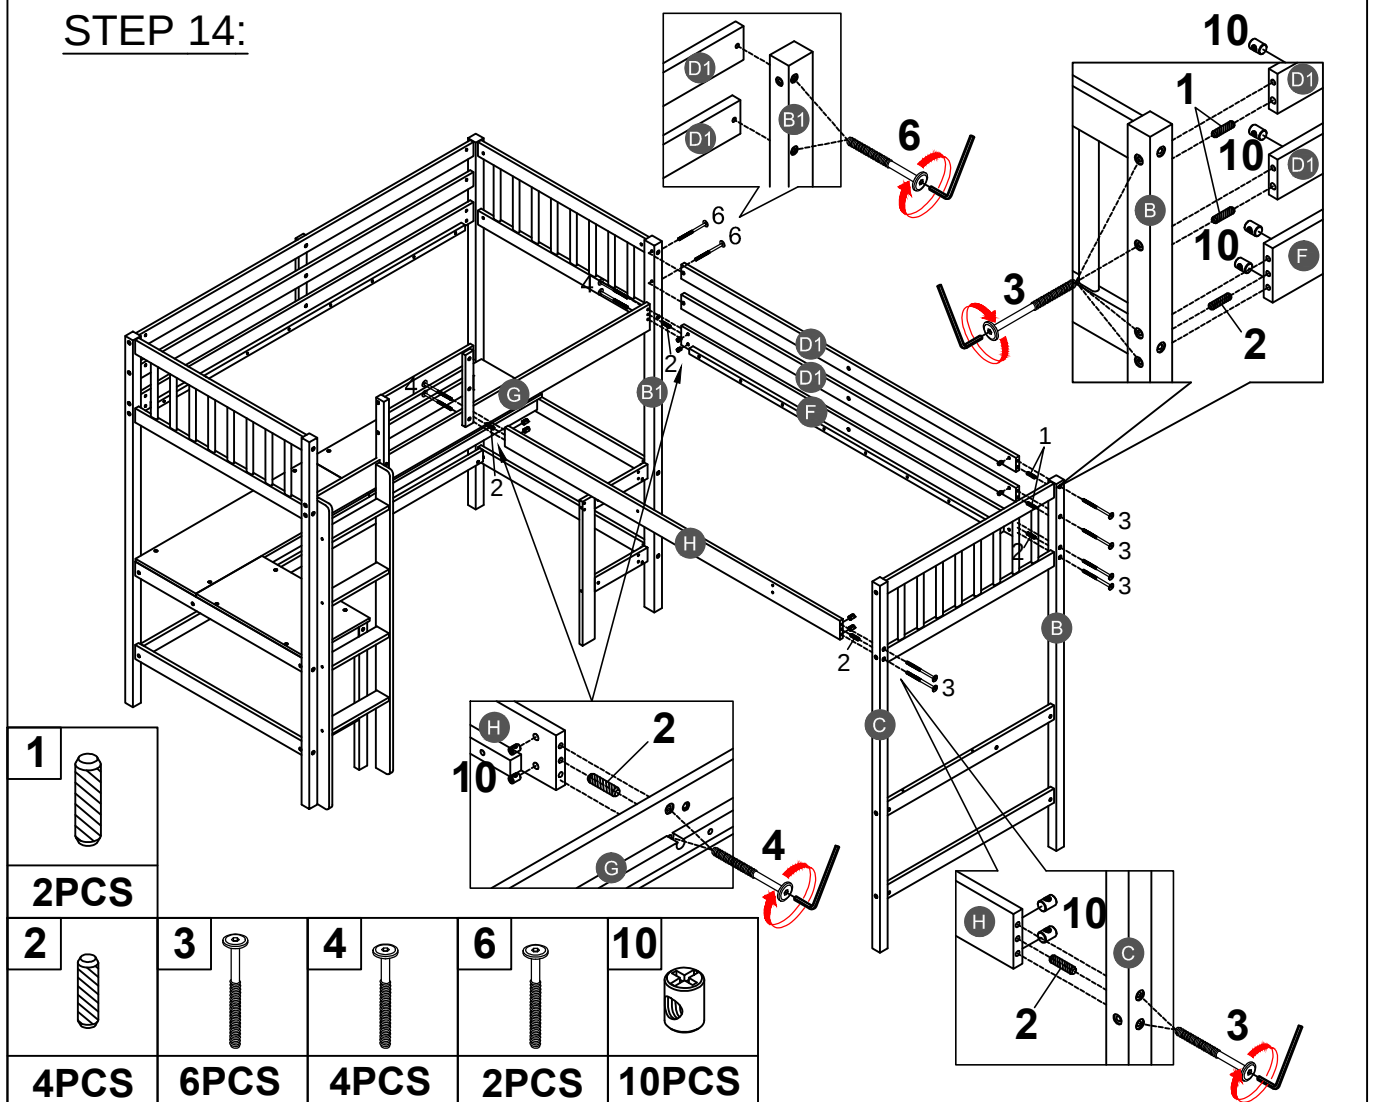


STEP 15:

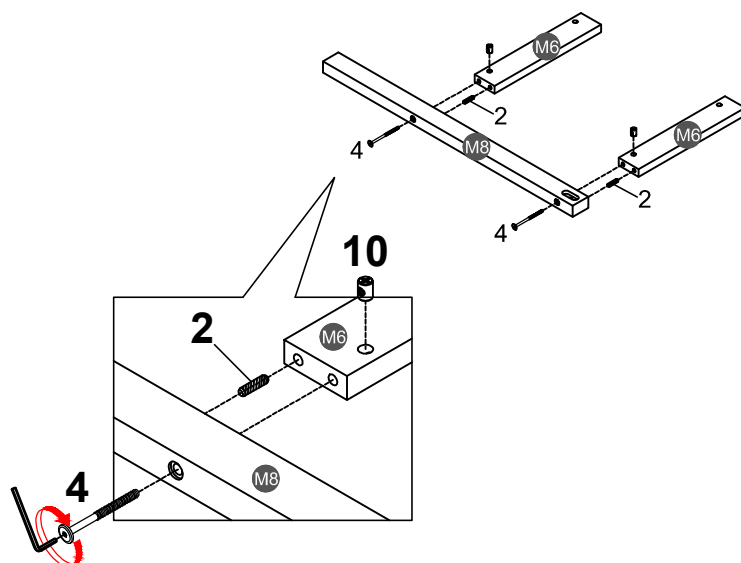


2		4	
2PCS		2PCS	
		10	
		2PCS	

STEP 16:

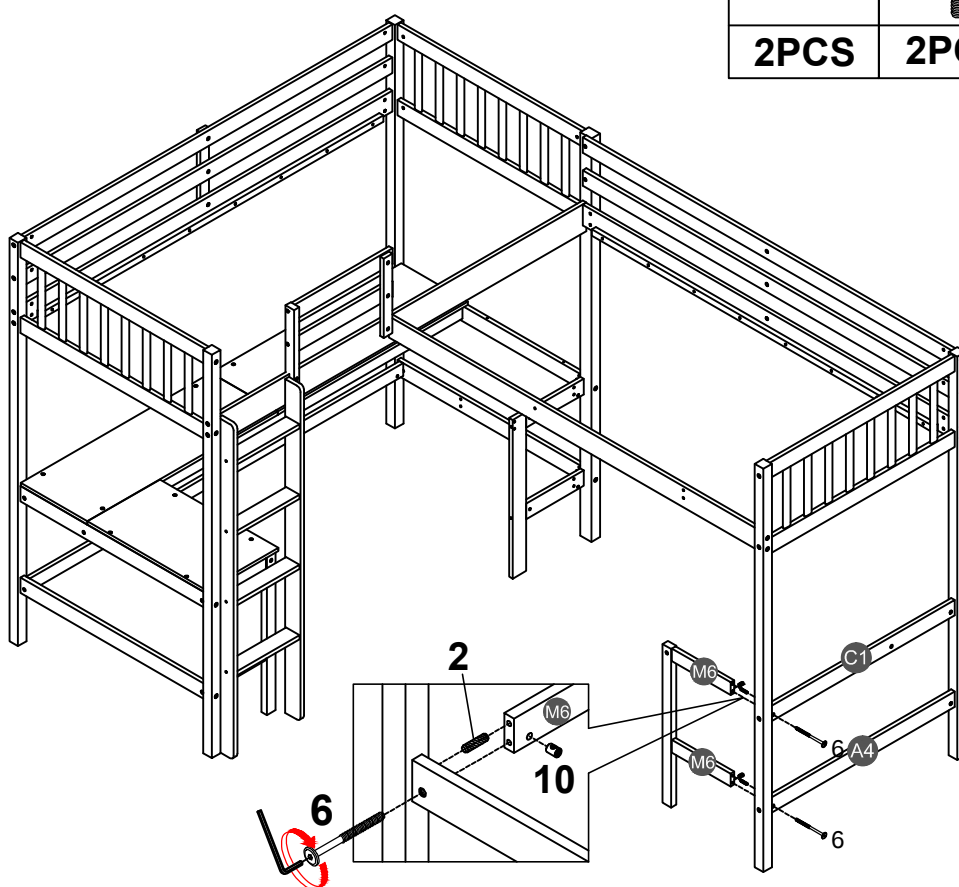


2		6		10	
2PCS		2PCS		2PCS	


STEP 17:

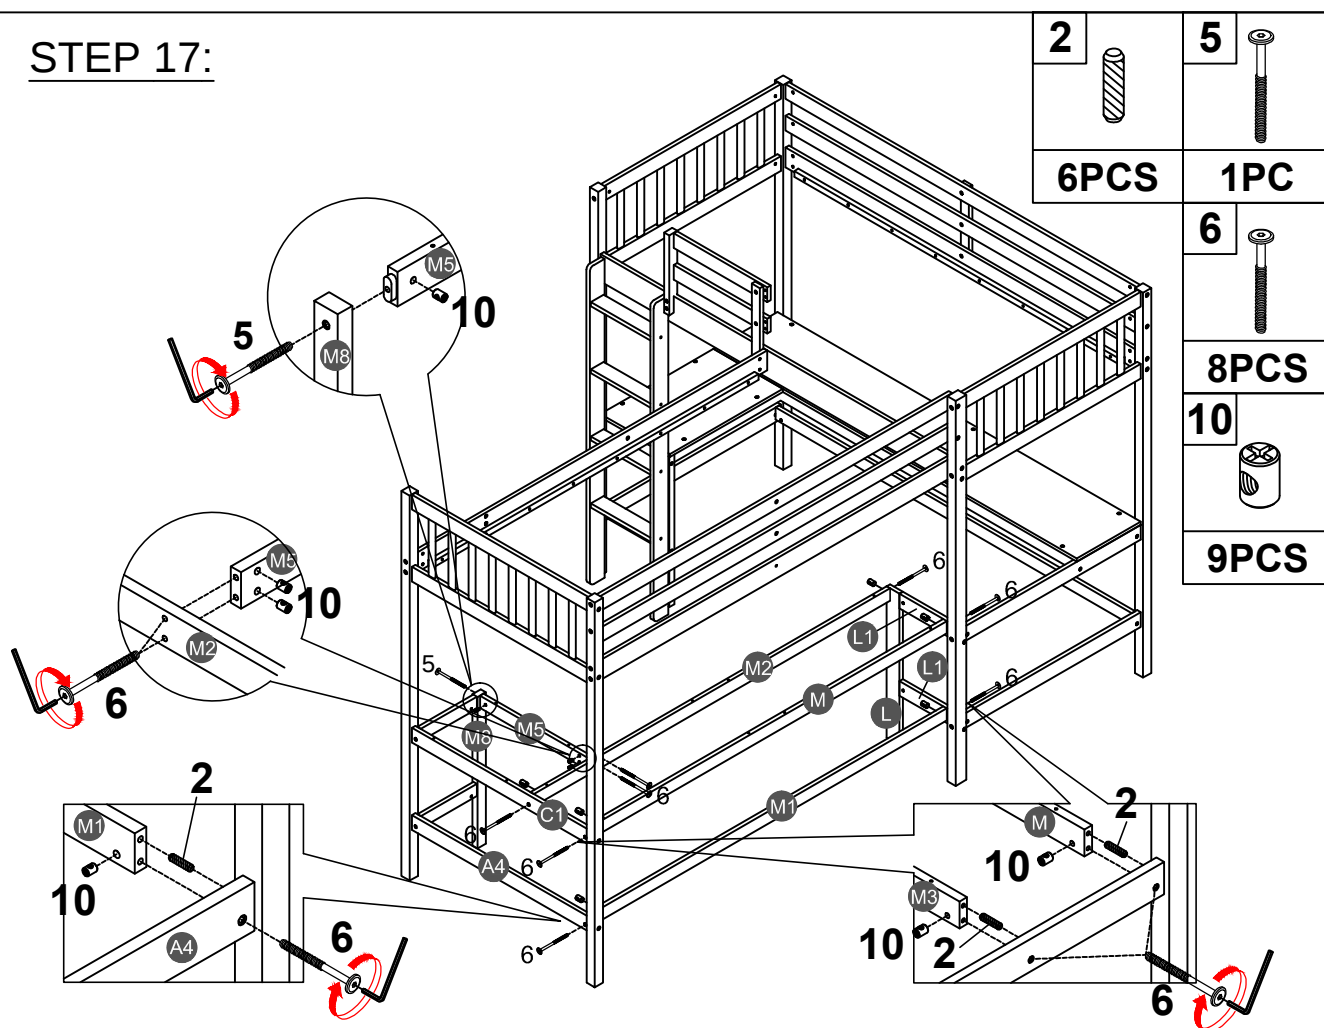


STEP 18:

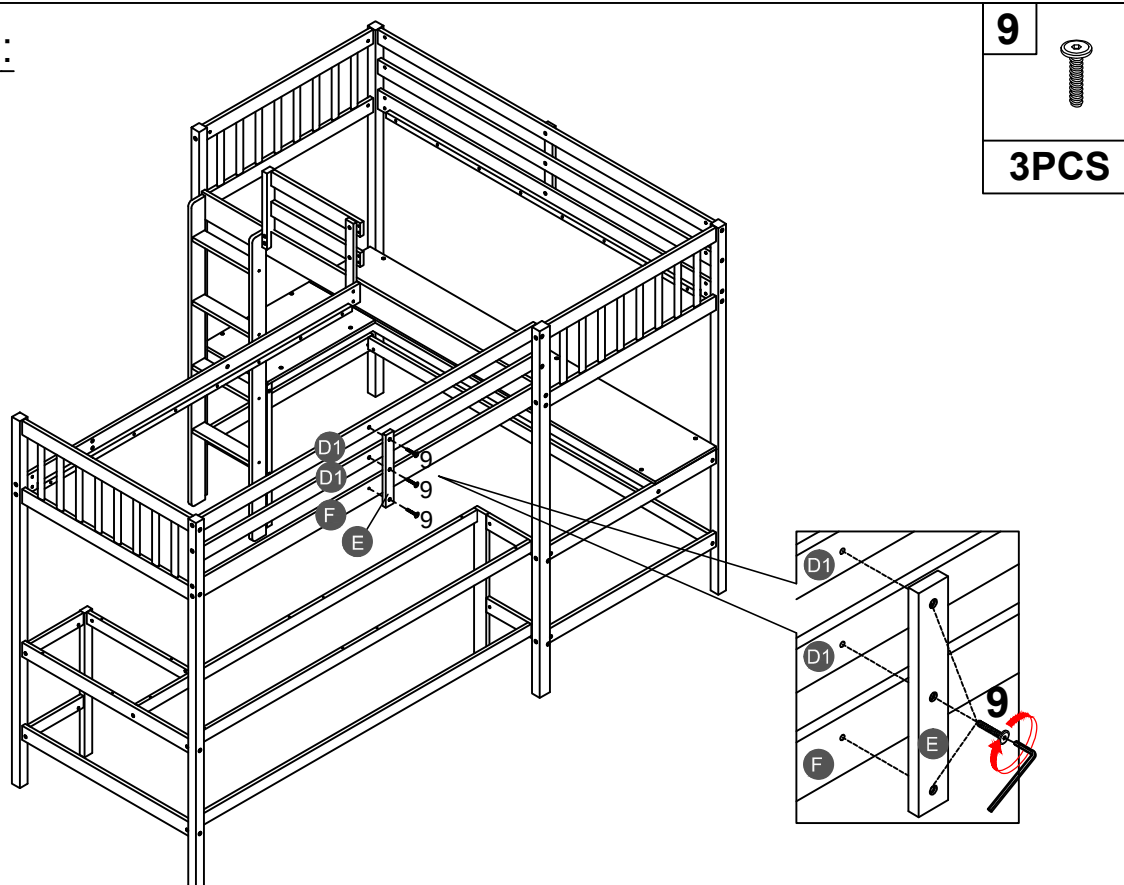


STEP 19:

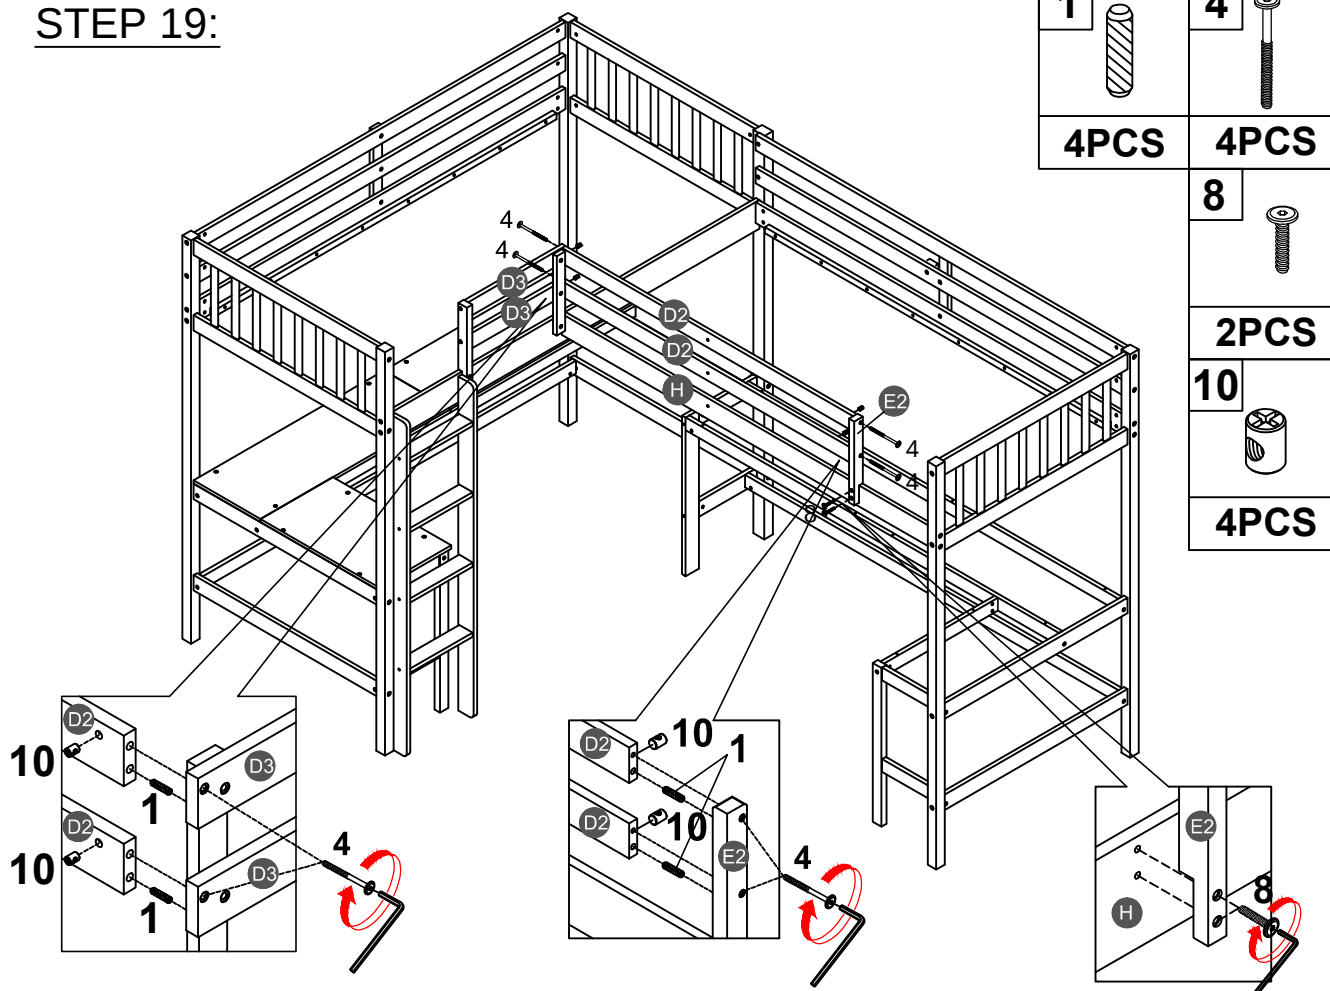


STEP 20:

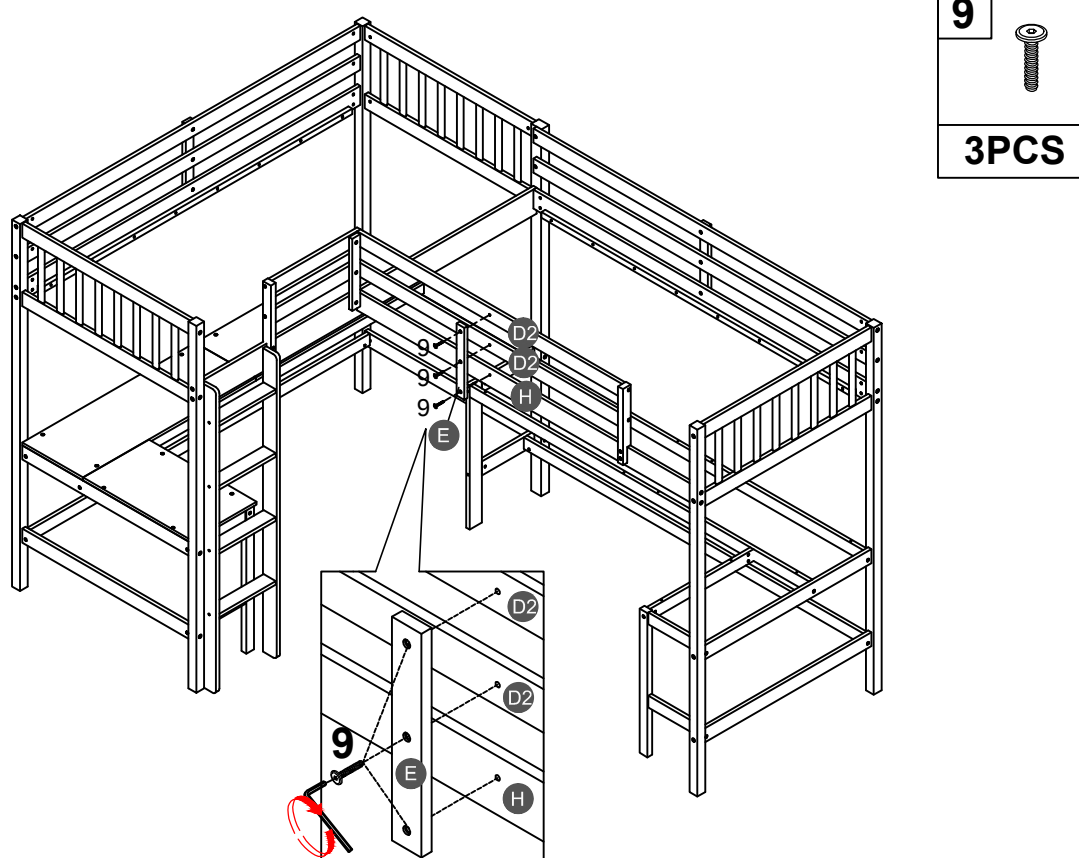


STEP 21:

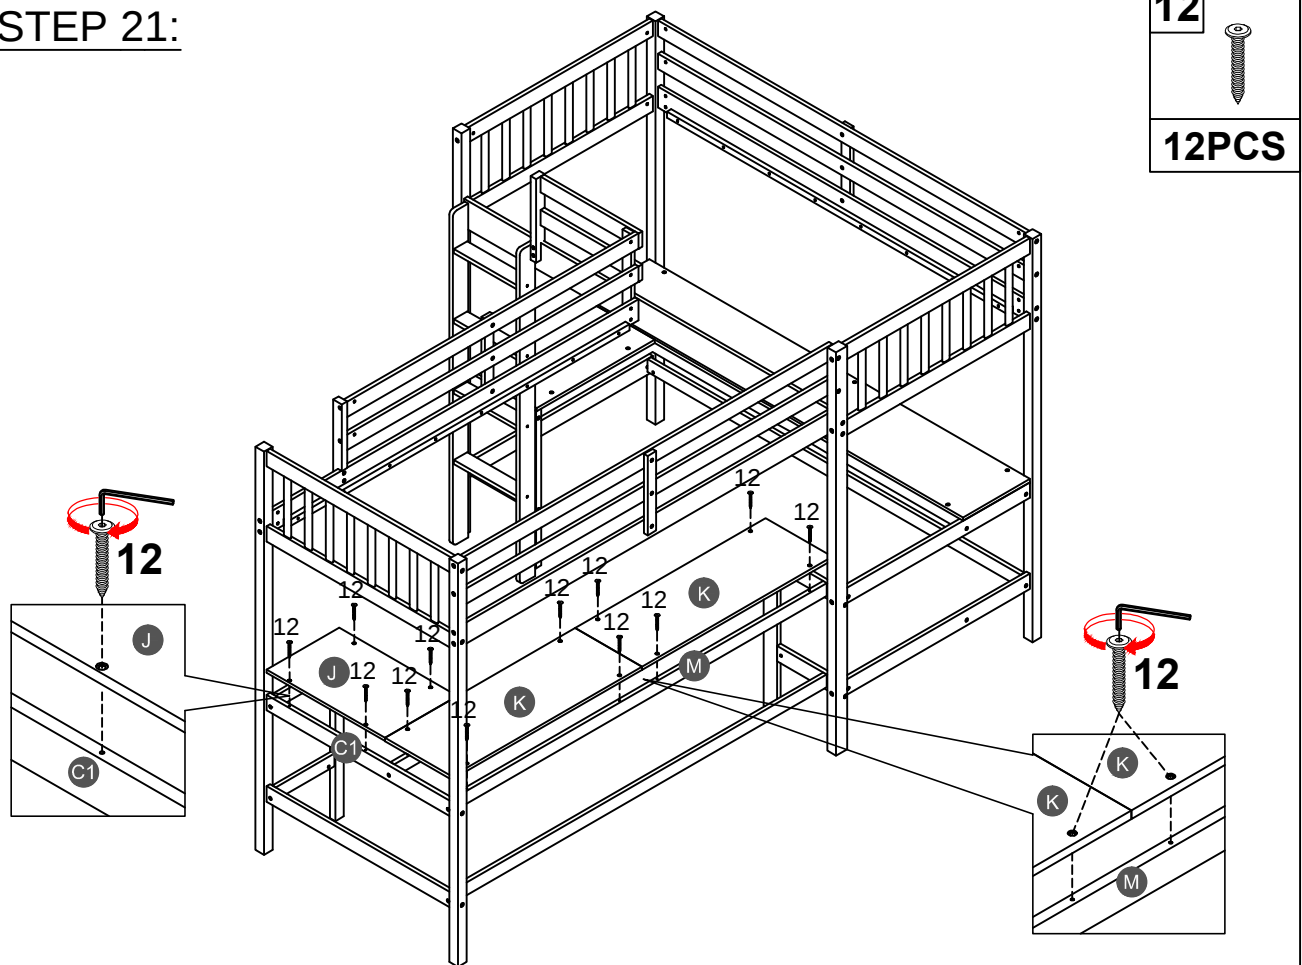


STEP 22:

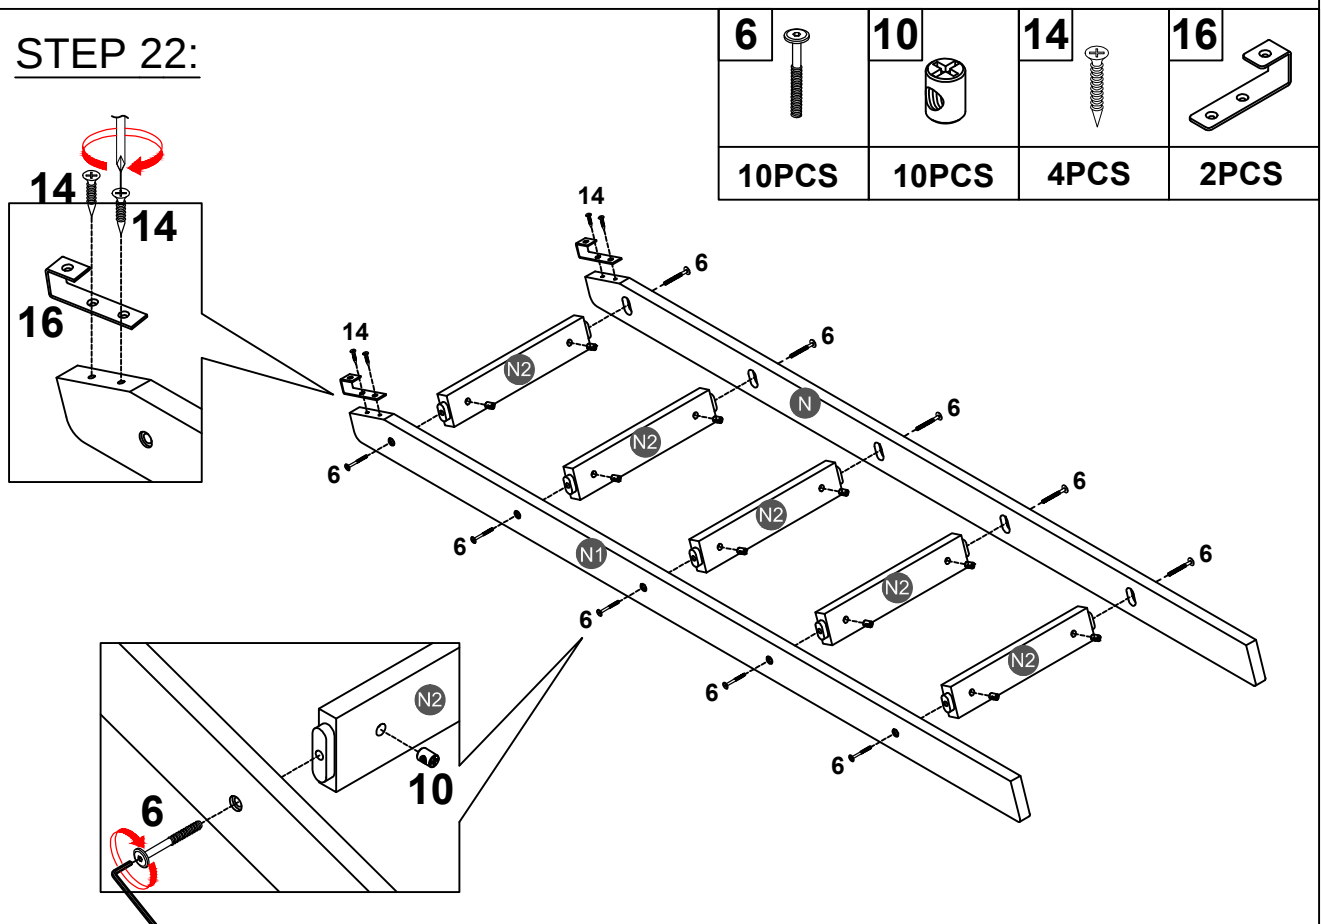

STEP 23:

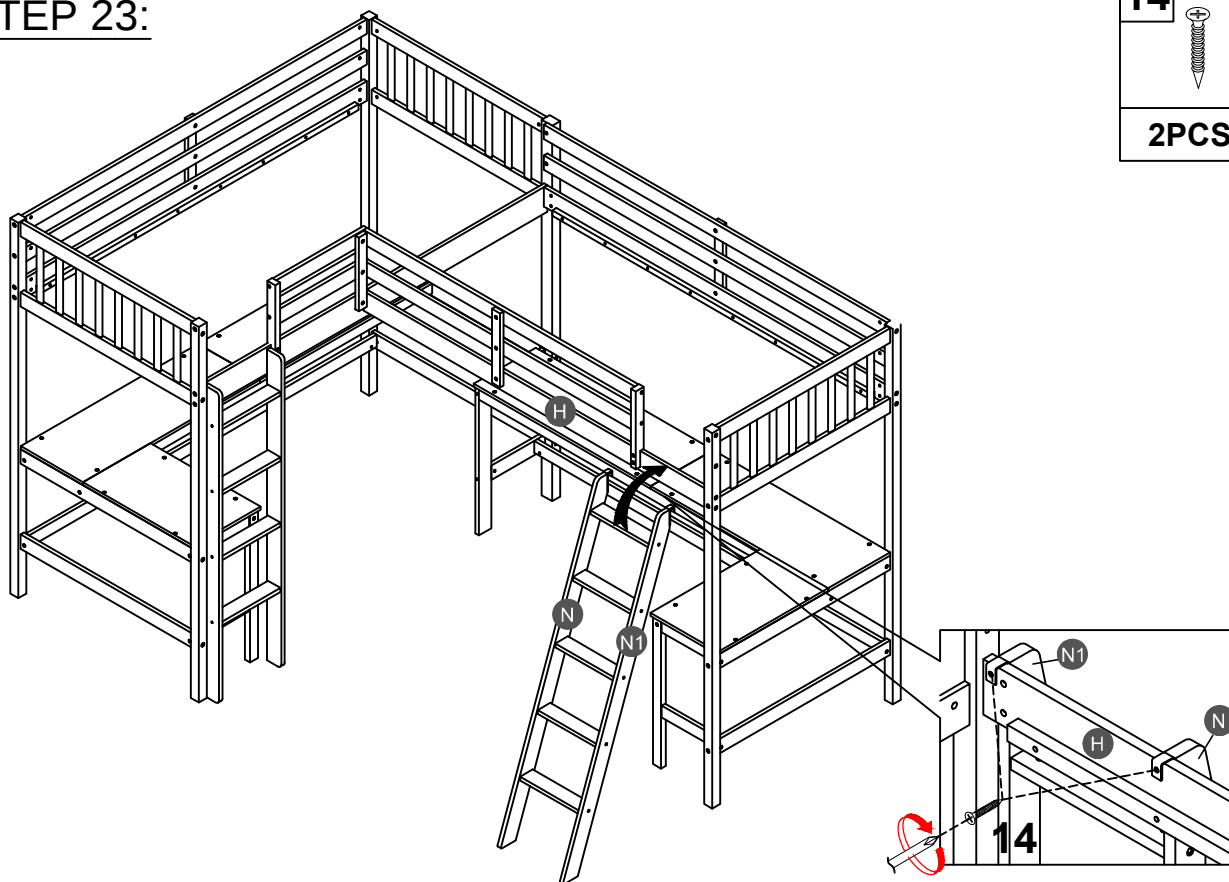

STEP 24:


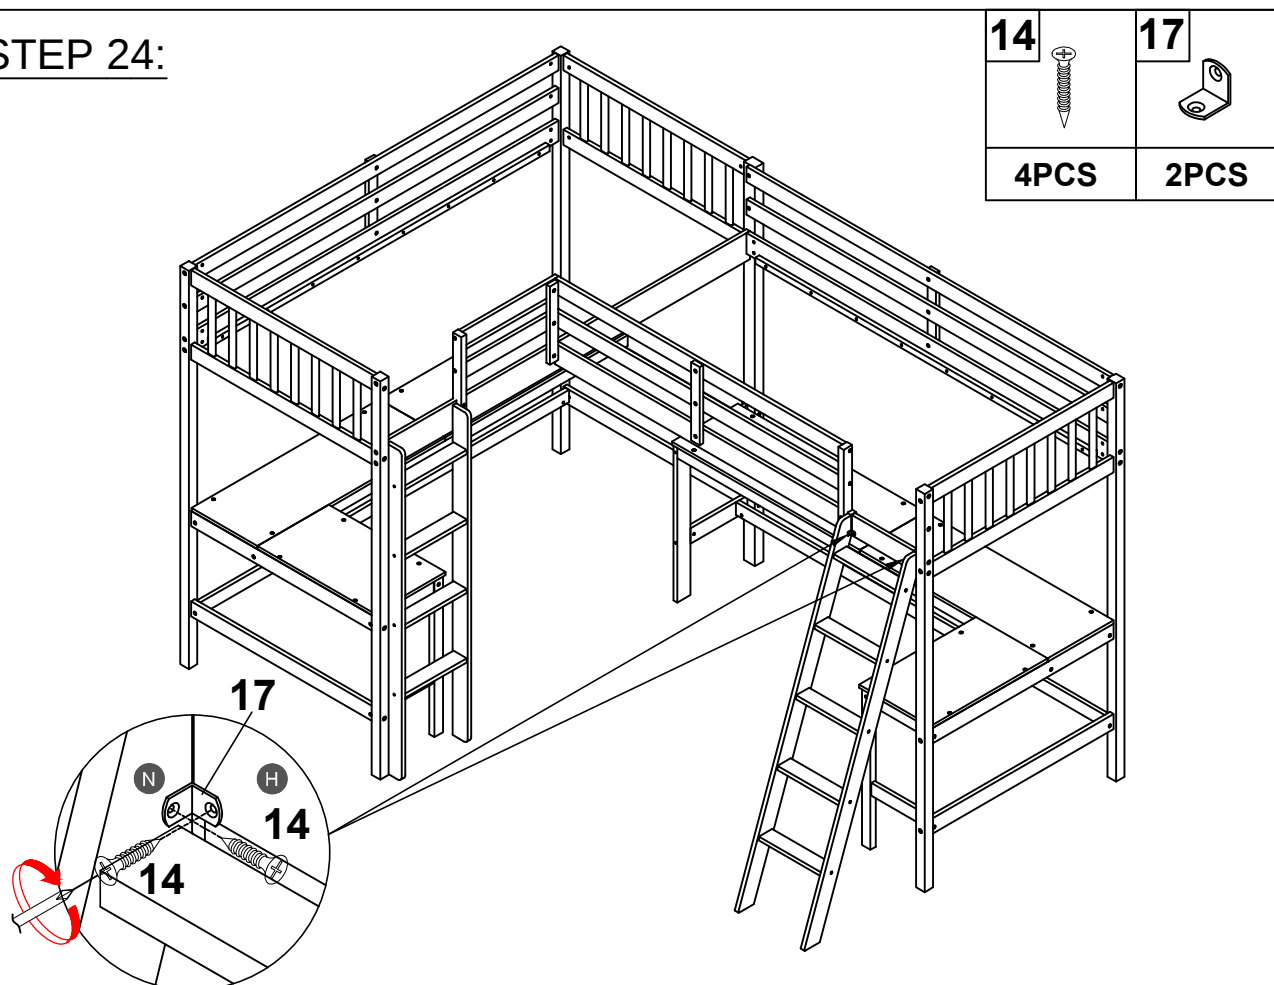


STEP 25:


13




56PCS

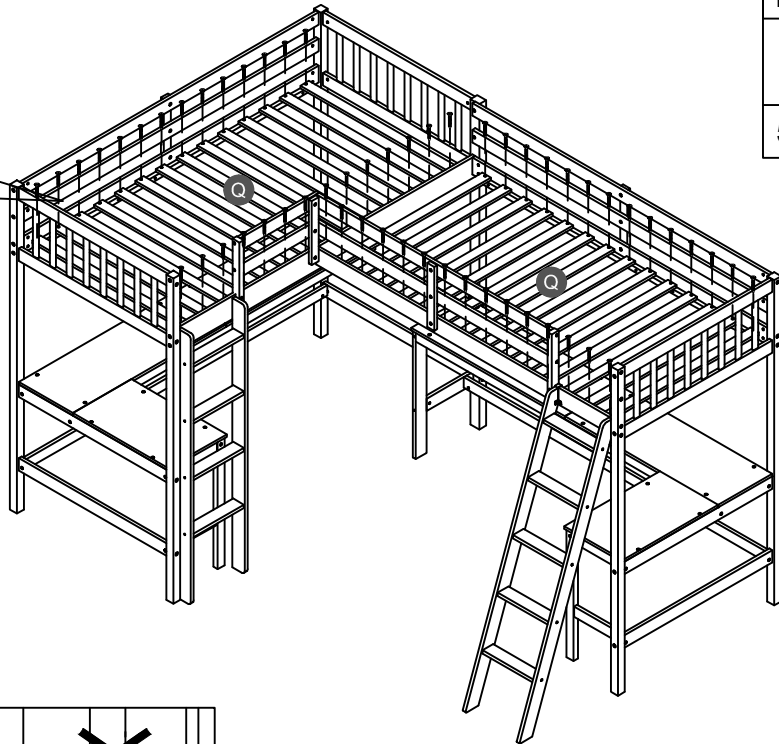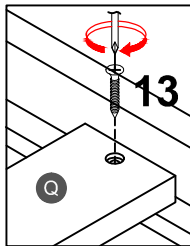

3.1 " 79mm
3.3 " 84.5mm
2.4 " 61mm

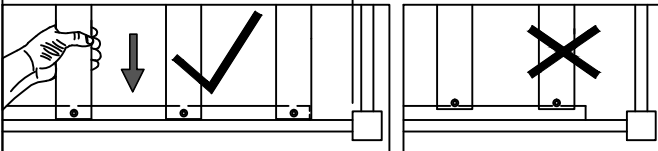

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw.

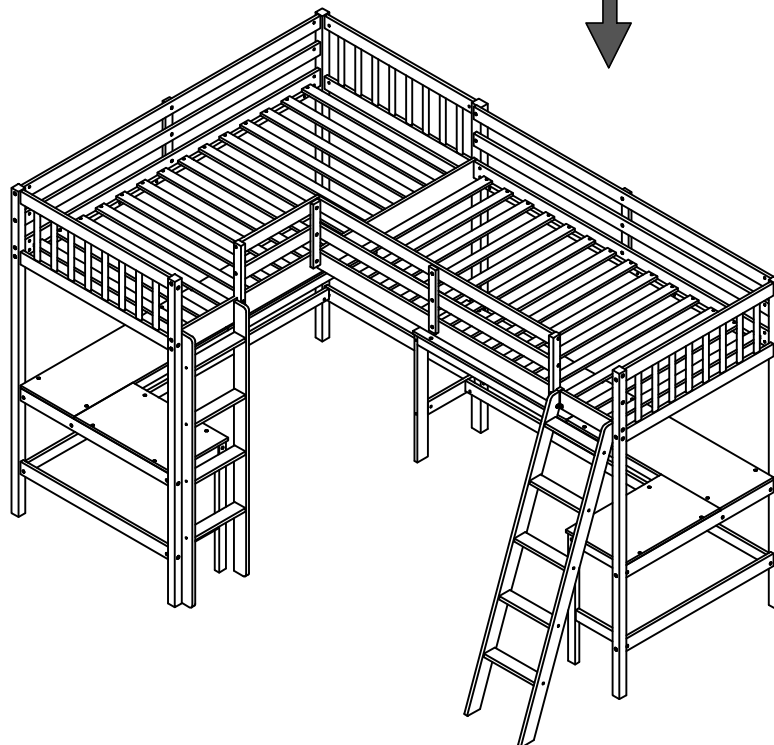

Make sure to tighten all the screws of the bed.