




Items Included:

Wood/Vinyl Bracket Assembly (2)

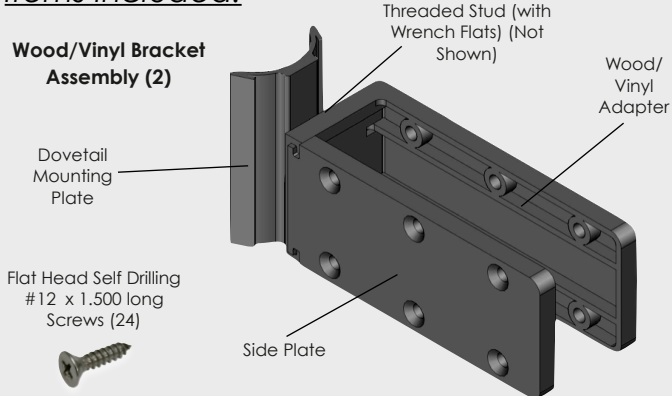

2

Installing Your Brackets

To install your wood/vinyl gate brackets, simply insert the dovetail mounting plate into the dovetail portion of your Boerboel Gate System™ as shown in Figure 2a. Slide the dovetail adapter along the dovetail track until bracket is in the desired position as shown in Figure 2b. Once your bracket is in the desired position, simply tighten the bracket in place using a 13mm wrench as shown in Figure 2c.

3

Mounting Your Gate

To mount your gate using the wood/vinyl gate brackets, you must first remove the side plates from the wood/vinyl adapters. Next, using a power drill, attach the horizontal rails of your vinyl or wood fence section to the interior of the wood/vinyl adapters by use of 12 of the included flat head self drilling #12 screws. Once your wood/vinyl gate is in place, attach the side plates to the opposite side of the horizontal rails of your fence section using the remaining 12 screws as shown in figure 3. It is recommended to pre-drill all holes.

***Note: The Wood/Vinyl brackets can accommodate rail widths from 1.5" to 3". For rail widths over 3", use of the side plates is not required. It is recommended to insert a wood 2x4 inside vinyl fence rails over 3" in diameter where the wood/vinyl adapter is mounted. The wood 2x4 should be the same length as the rail in which it is contained. Be sure that the screws secure snugly through the wood/vinyl adapter, vinyl fence and wooden 2x4 to add stability and strength to your gate. It is recommended to position your wood/vinyl adapters in line with your fence section's horizontal rails whenever possible. See Figure 3b. You may remove any excess portion of the wood/vinyl adapter if desired. See Figure 3c.**

4

Adjusting Your Gate

Once your gate has been mounted, you can adjust it's position on your Boerboel Gate System™ by loosening the threaded studs on both the top and bottom bracket using a 1/2" wrench and adjust your gate up and down the dovetail accordingly.

Once your gate and brackets are in the desired location on your opener, simply re-tighten the threaded studs.


YOU HAVE SUCCESSFULLY INSTALLED YOUR WOOD/VINYL GATE BRACKET KIT.
For Assistance: 1-888-418-4400

1

Before you begin...

The brackets included in this kit replace the aluminum gate brackets originally included with your Boerboel Gate System™ to allow for the use of wood or vinyl gates. Make sure you have all of the required tools for your installation. Installation of these wood/vinyl gate brackets should be performed after the installation of your Boerboel Gate System™ has been performed. For instructions on installing your Boerboel Gate System™, please refer to the assembly instructions included with your opener.


2a

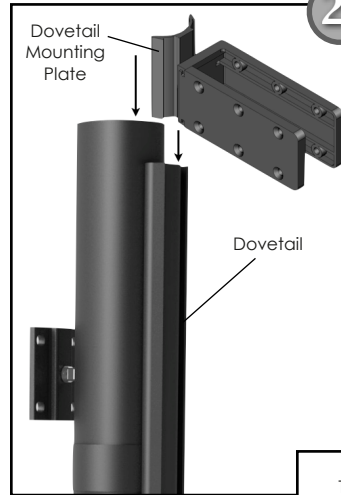

2b




2c

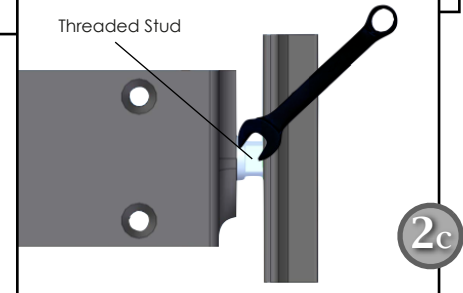


3a



3b

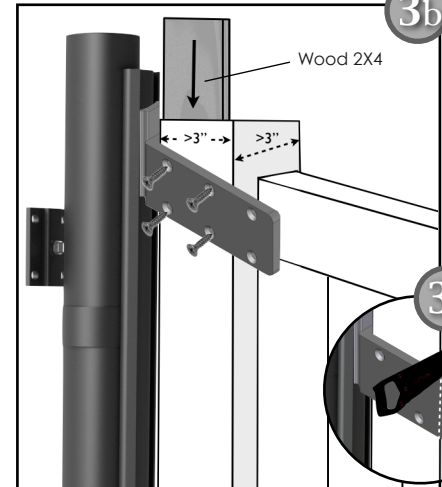

3c

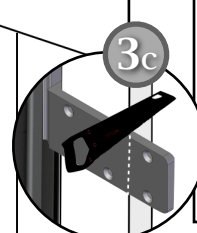

4

