


# **NS010**

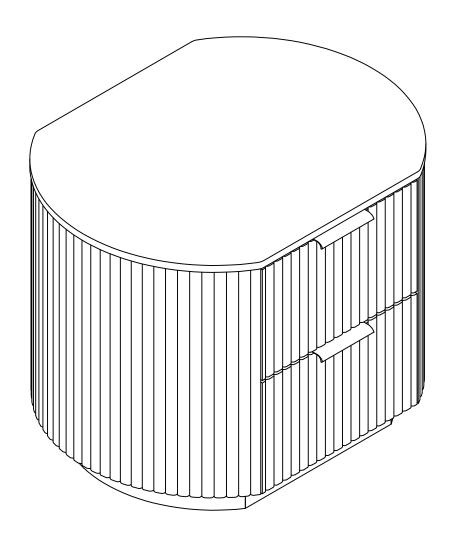




# STOP!

Before beginning the assembly process, ensure all boxes and parts have been delivered.

#### FOR BEST RESULTS:

- Do not throw away packaging materials until assembly is complete.
- Assemble item on a soft surface, such as cardboard or carpet, to protect finish.
- Proper assembly requires two people.

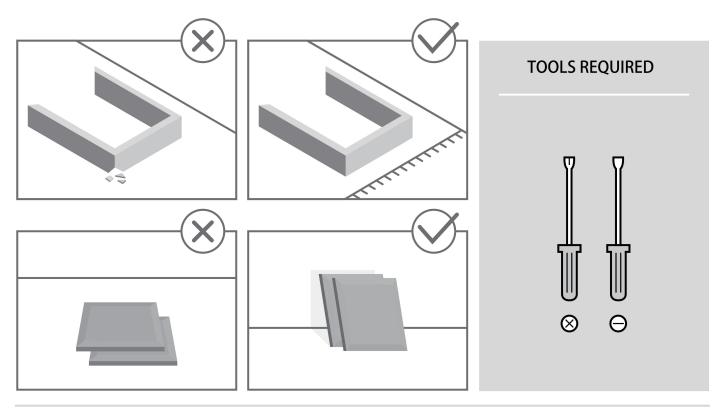



View our assembly video online: WWW.MANHATTANCOMFORT.COM



Stuck? Question? We are here to help. tel: 908-888-0818

e-mail: help@manhattancomfort.com


Support Site



Page 2 NSO10


#### Included in this package:

- A. TOP PANEL(1)
- B. BOTTOM PANEL(1)
- C. LEFT FRAME (1)
- D. RIGHT FRAME (1)
- E. BACK PANEL (1)
- F. HORIZONTAL PANEL (1)
- G. FRONT & BACK LOWER PANEL (2)
- H. LEFT & RIGHT LOWER PANEL (2)
- I. DRAWER LEFT PANEL (2)
- J. DRAWER RIGHT PANEL (2)
- K. DRAWER BACK PANEL (2)
- L. DRAWER BOTTOM PANEL (2)
- M. DRAWER FRONT PANEL(2)

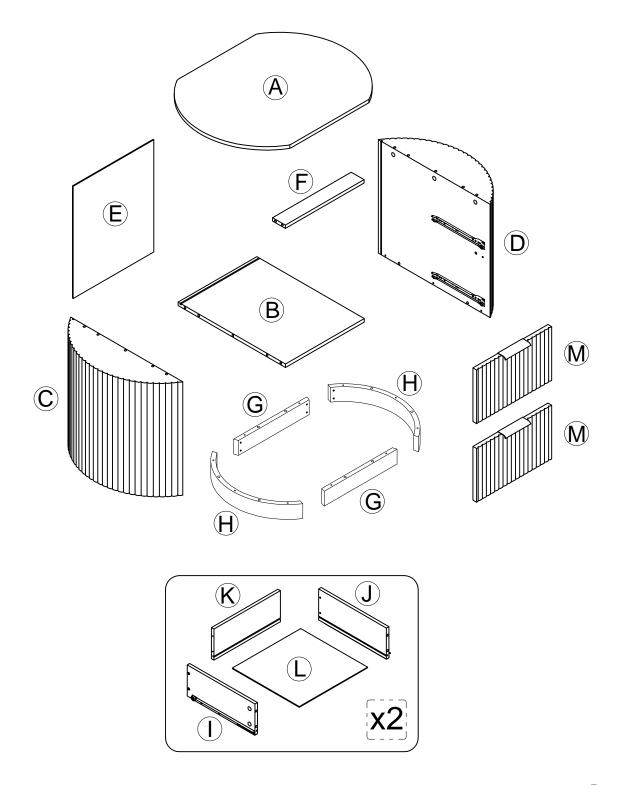

#### **Hardware Identification**





(2) KD LARGE CAM - 14pcs Ø15\*12mm







WOOD DOWEL - 18pcs Ø8\*30mm



(5) BLACK SCREW - 20pcs Ø3.5\*12mm



6 KD SMALL CAM - 8pcs Ø15\*10mm



7 SCREW - 10pcs Ø4\*50mm



8 SCREW - 8pcs Ø4\*38mm



(9) SCREW - 6pcs Ø3\*17mm



10 BLACK HANDLE - 2pcs






12 BRACKET 143<sup>0</sup> - 8pcs 28\*17\*1.5mm



13 PLASTIC WEDGE - 6pcs 16\*16.5\*10.5mm



Page 4 NS010

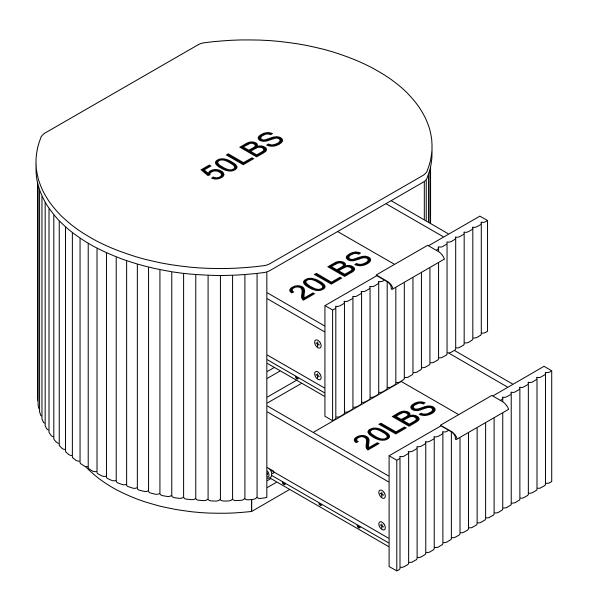


# Step 1:

\* Insert Six KD BOLT (1) to the TOP PANEL (A)




(6 PCS)

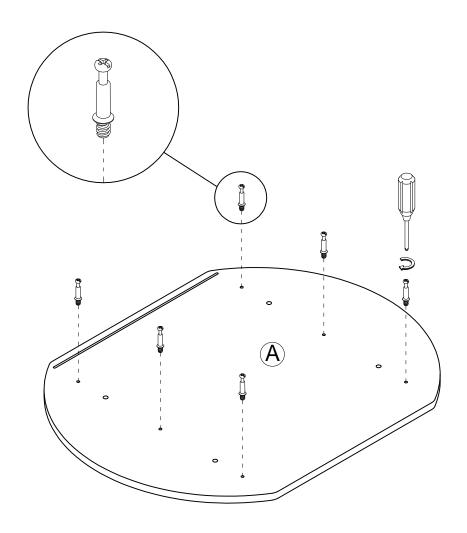

Page 6 NS010

\* Insert Eight KD BOLT (1) to the LEFT FRAME (C) and RIGHT FRAME (D)

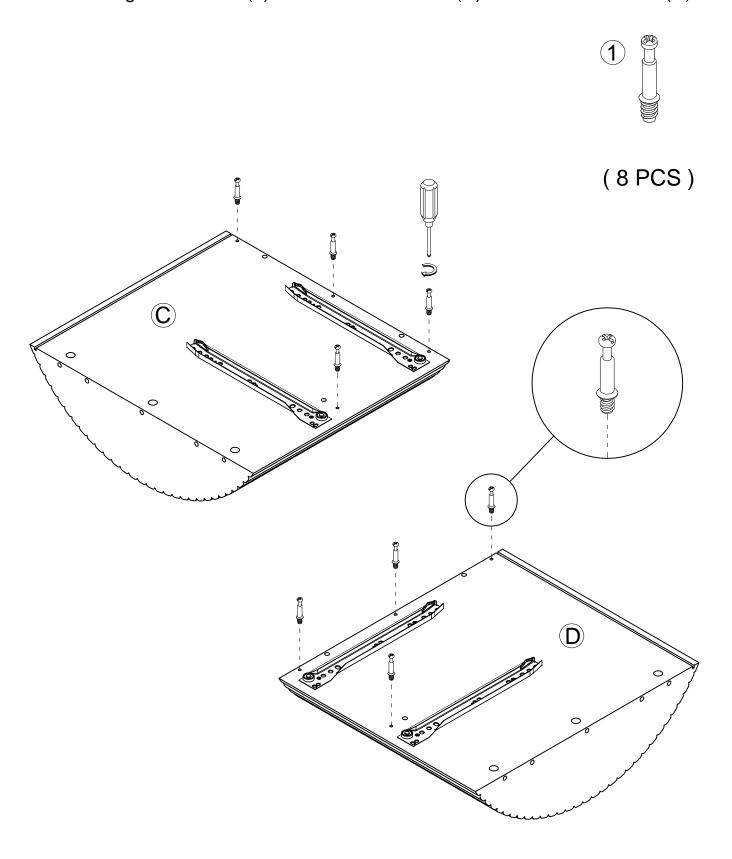


### Step 3:

\* Attach the HORIZONTAL PANEL (F) & BOTTOM PANEL (B) to LEFT FRAME (C)

by the Four KD LARGE CAM (2), Four COVER CAP (3) and Three WOOD DOWEL (4) 3 2


(4 PCS) (4 PCS) (3 PCS)

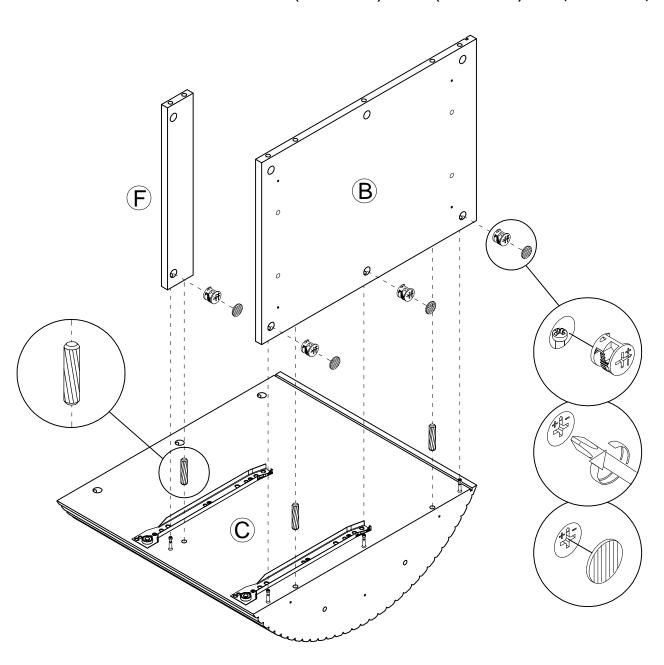


Page 8 **NS010** 

### Step 4:

\* Attach the RIGHT FRAME (D) to the HORIZONTAL PANEL (F), BOTTOM PANEL (B) by the Four KD LARGE CAM (2), Four COVER CAP (3) and Three WOOD DOWEL (4)

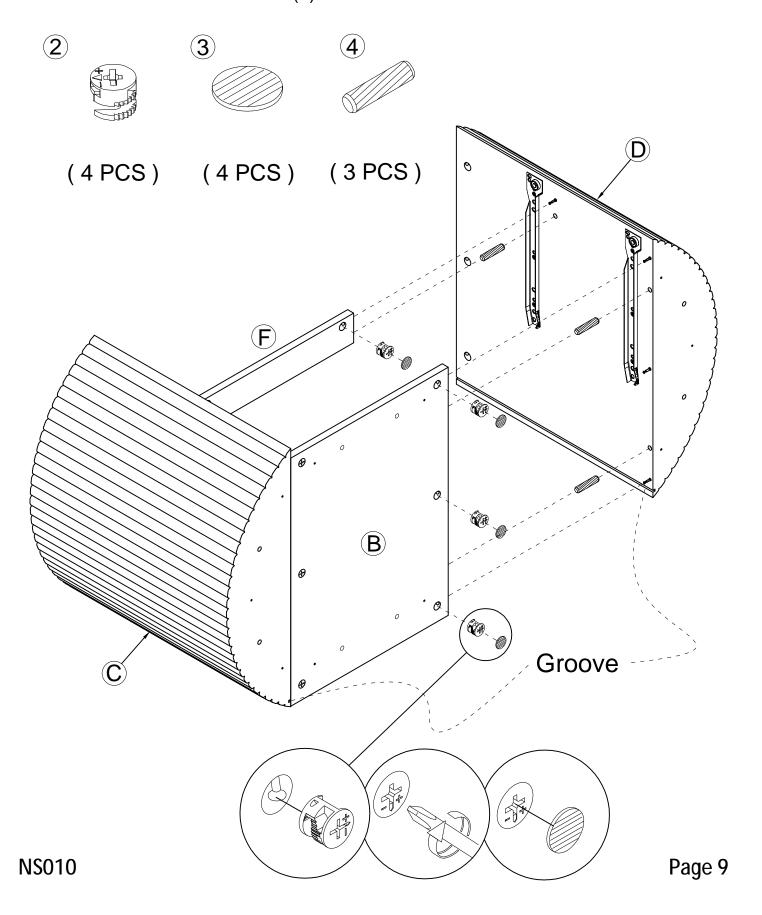


\* Insert the BACK PANEL (E) to the stand.

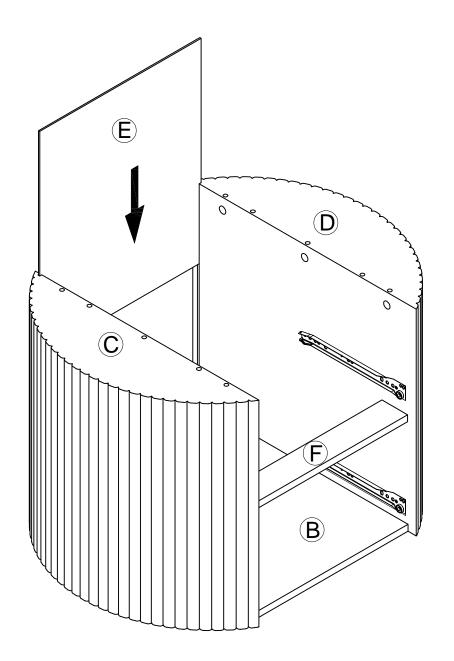

Page 10 NS010


### Step 6:

\* Attach the TOP PANEL (A) to the LEFT FRAME (C), RIGHT FRAME (D) by the Six KD LARGE CAM (2), Six COVER CAP (3), Four WOOD DOWEL (4)

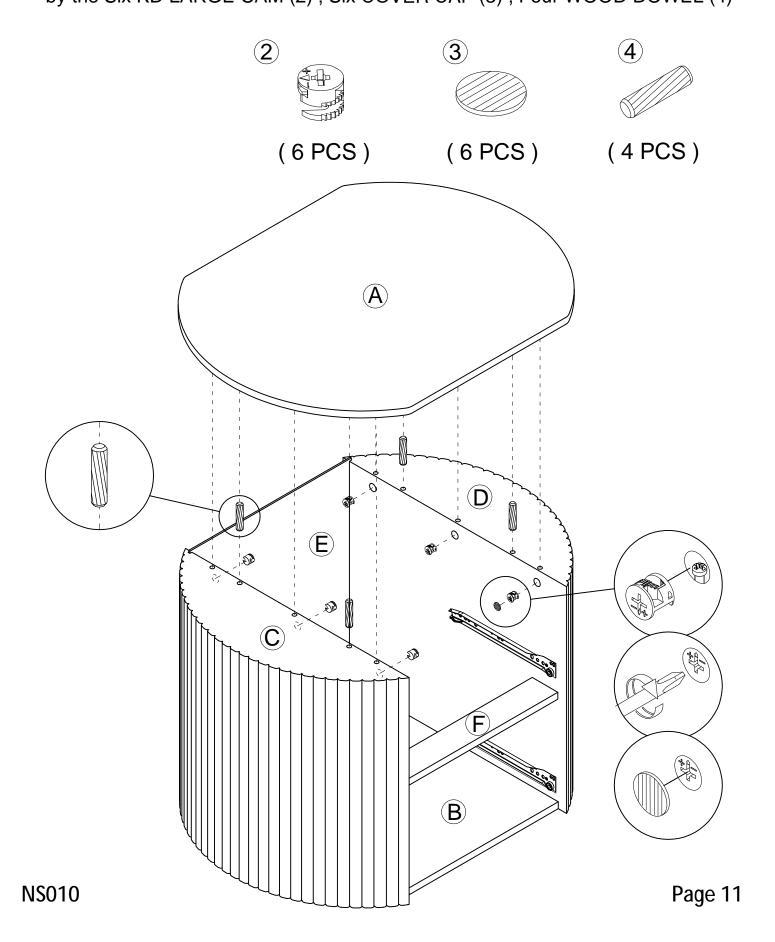

### Step 7:


\* Attach the Eight BRACKET (12) to the LOWER PANEL (G),(H) by the Sixteen SCREW (5)

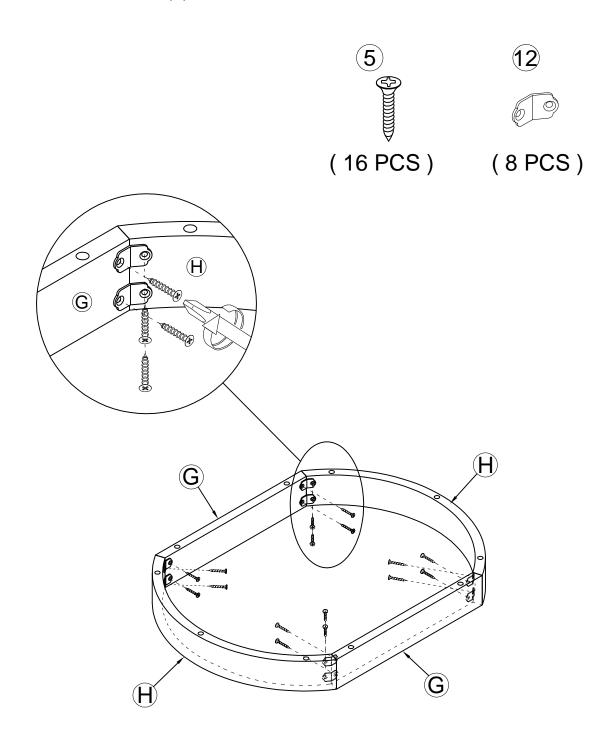

Page 12 NS010


### Step 8:

\* Attach the LOWER PANEL (G),(H) to the LEFT FRAME (C), RIGHT FRAME (D) and BOTTOM PANEL (B) by the Ten SCREW (7) and eight WOOD DOWEL (4)

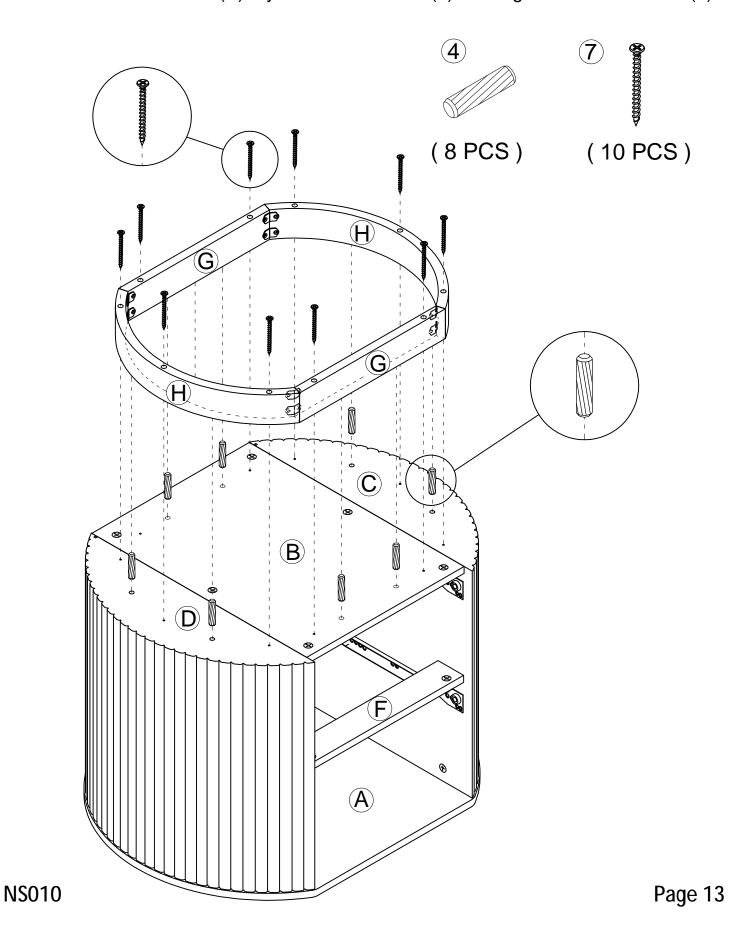

### Step 9:


\* Assemble the DRAWER BACK PANEL (K) to the DRAWER LEFTPANEL (I) and DRAWER RIGHT PANEL (J) by the SCREW (8)

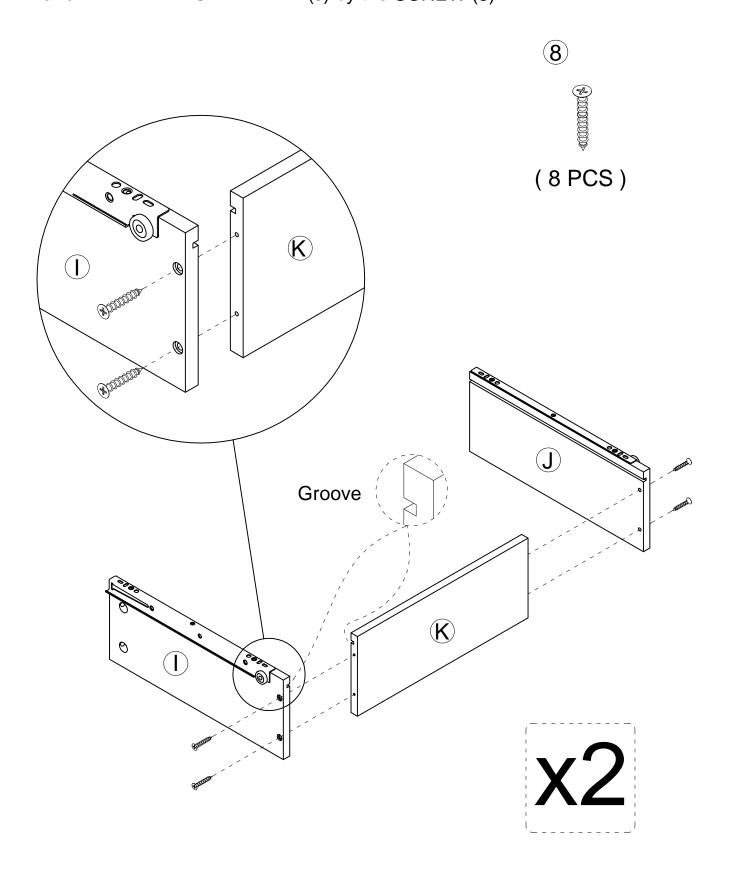

Page 14 NS010

# Step 10:

\* Slide in the DRAWER BOTTOM PANEL (L)

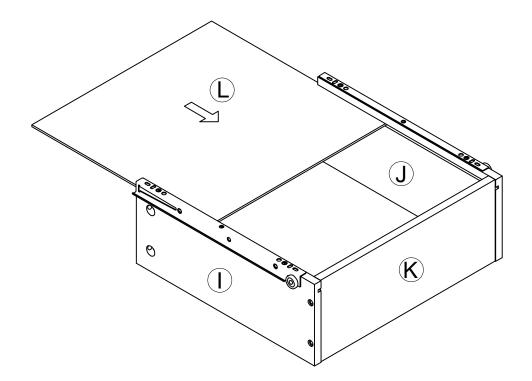




### Step 11:

\* Insert eight KD BOLT (1) to two DRAWER FRONT PANEL (M)


\* Attach two BLACK HANDLE (10) or two GOLD HANDLE (11) to two DRAWER FRONT PANEL (M) by Four SCREW (5)

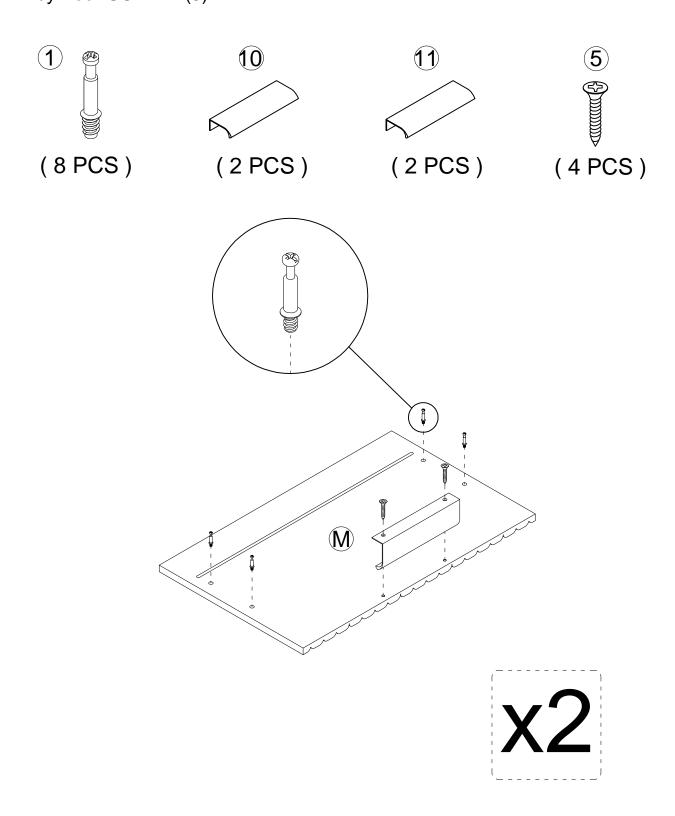



Page 16 NS010

### Step 12:

\* Assemble Two DRAWER FRONT PANEL (M) to the DRAWER TRAY by Eight KD SMALL CAM (6) and Eight COVER CAP (3)

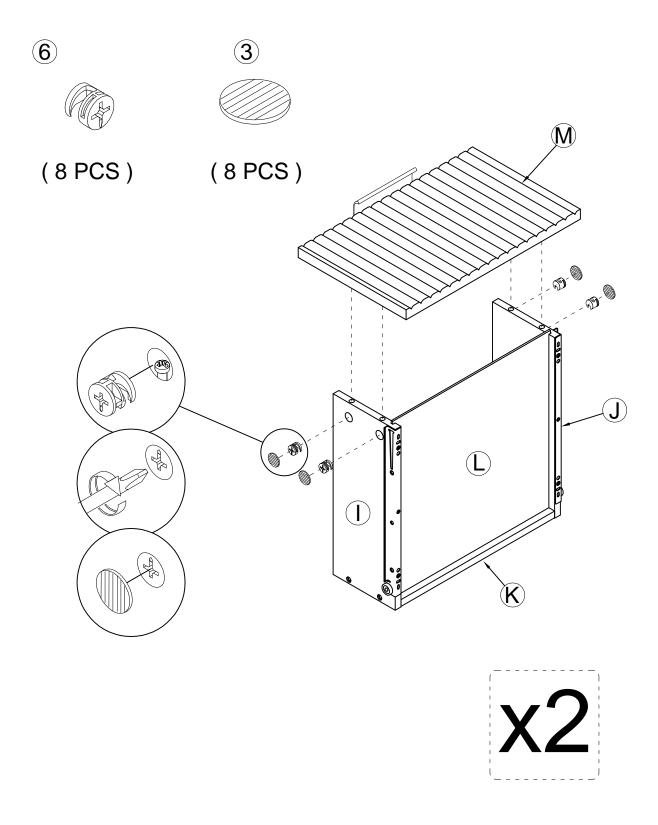

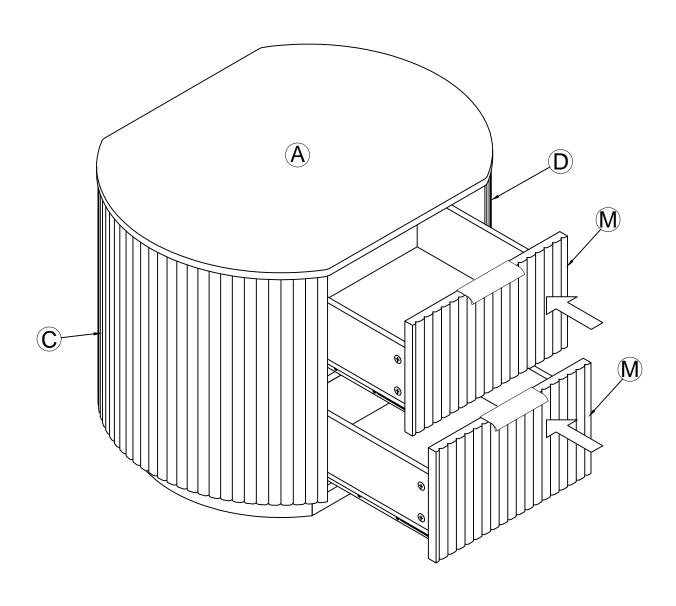


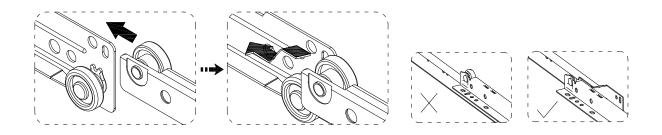

Page 18 NS010

### Step 14:

\* Insert six PLASTIC WEDGE (13) to the BACK PANEL (E) by the six SCREW (9)

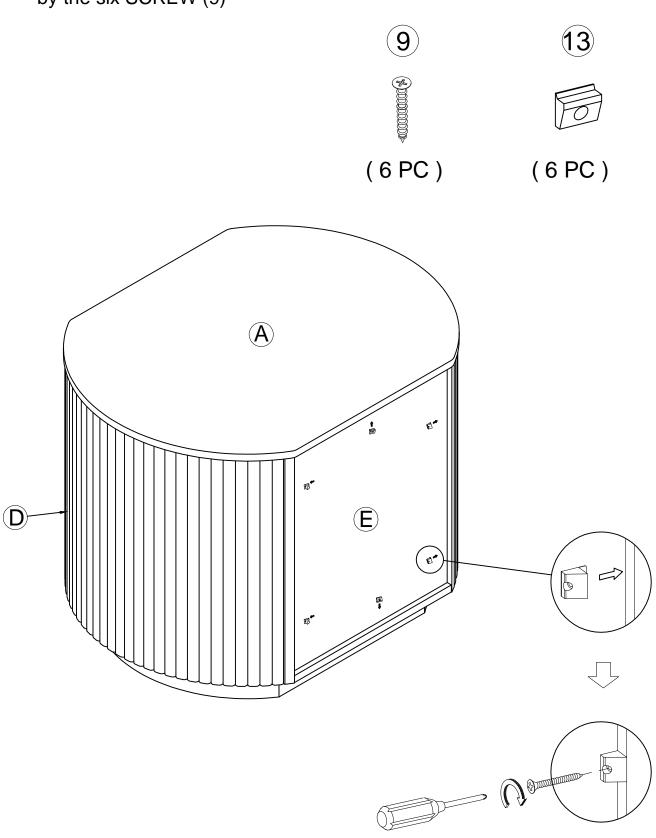



#### WARRANTY POLICY

All Manhattan Comfort furniture products are warranted, to the original purchaser at the time of purchase and for a period of 30 days thereafter.

Our warranty is limited to new products purchased in factory sealed cartons. This warranty is valid in the United States of America and Canada.

In order to provide you with timely assistance, please thoroughly inspect your furniture for missing or defective parts immediately after opening the carton.

Manhattan Comfort offers a 30-day parts replacement warranty on all items.

Our furniture products are not intended for outdoor use.

#### THE WARRANTY DOES NOT COVER:

- Defects/damages by improper assembly or disassembly.
- Defects/damages caused by shipping. Claims for damage during transit should be placed immediately to the transportation company.
- Defects/damages caused by inappropriate use of the furniture.