NOTICE

- * Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- * This item should be assembled on a soft suace to prevent scratching the finish during assembly.
- * This item may require periodic tigtening.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated assembly time: 15-20 Minutes
- * Require 1-2 person for assembly.
- * Tools Required for Assembly (included): Allen Key

CARE AND MAINTENANCE

Always use felt pads under all article to prevent discoloration or softening of the lacquer. Plastic and rubber bases on items can discolor product. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional spills. How often you apply the wax depends on how much wear the furniture receives.

CARE AND MAINTENANCE

Piece	Description	Picture	Quantity
Α	Ceramic Top		1X
В	Iron Legs	<u></u>	4X
HW1	JCB BOLT 10x5x12 mm	A	14X
HW2	Allen Key		1X



ITEM ID -ACC2914 PRODUCT DIMENSION -16.14x14.57x14.57"




Weight Capacity: 5 lbs

WARNING: DO NOT STAND ON SIDE TABLE


WARNING: DO NOT OVER TORQUE BOLTS/SCREWS

PREPARATION


- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not atempt to assemble the product.
- * Estimated Assembly time: 15-20 minutes.
- * Tools Required for Assembly (included): Allen Key
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

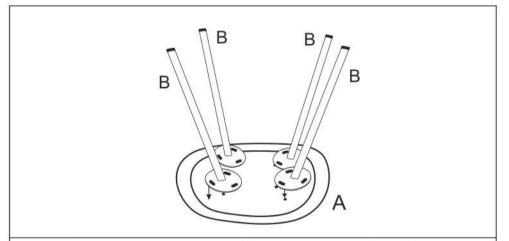


Step 1: Turn Ceramic Top A upside down. Be careful as Ceramic can be heavy and fragile.

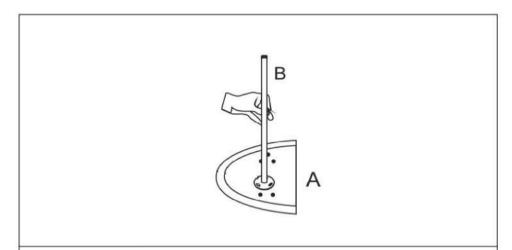

Step 2: Position Iron Legs B over the bottom of Ceramic top A. Ensure that the attachment points on Legs B align with the corresponding points on Ceramic top A.

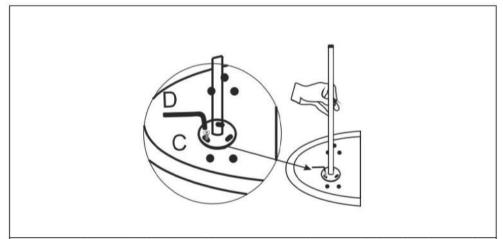

Step 3: Using the JCB Bolt (HW1), attach Ceramic top A and Legs B. You'll need an Allen Key for this step. Insert the Allen Key into the screw head and turn clockwise until tight. Be careful not to overtighten as this could damage the Ceramic or the Iron Legs.

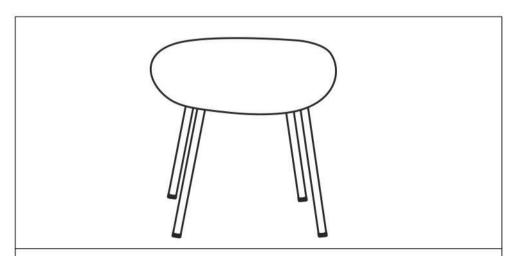

Step 4: Once Legs B is securely attached to Ceramic top A, carefully turn the assembly right side up. You may need assistance for this step due to the weight of the Ceramic.