



ASSEMBLY INSTRUCTIONS

TWIN BED





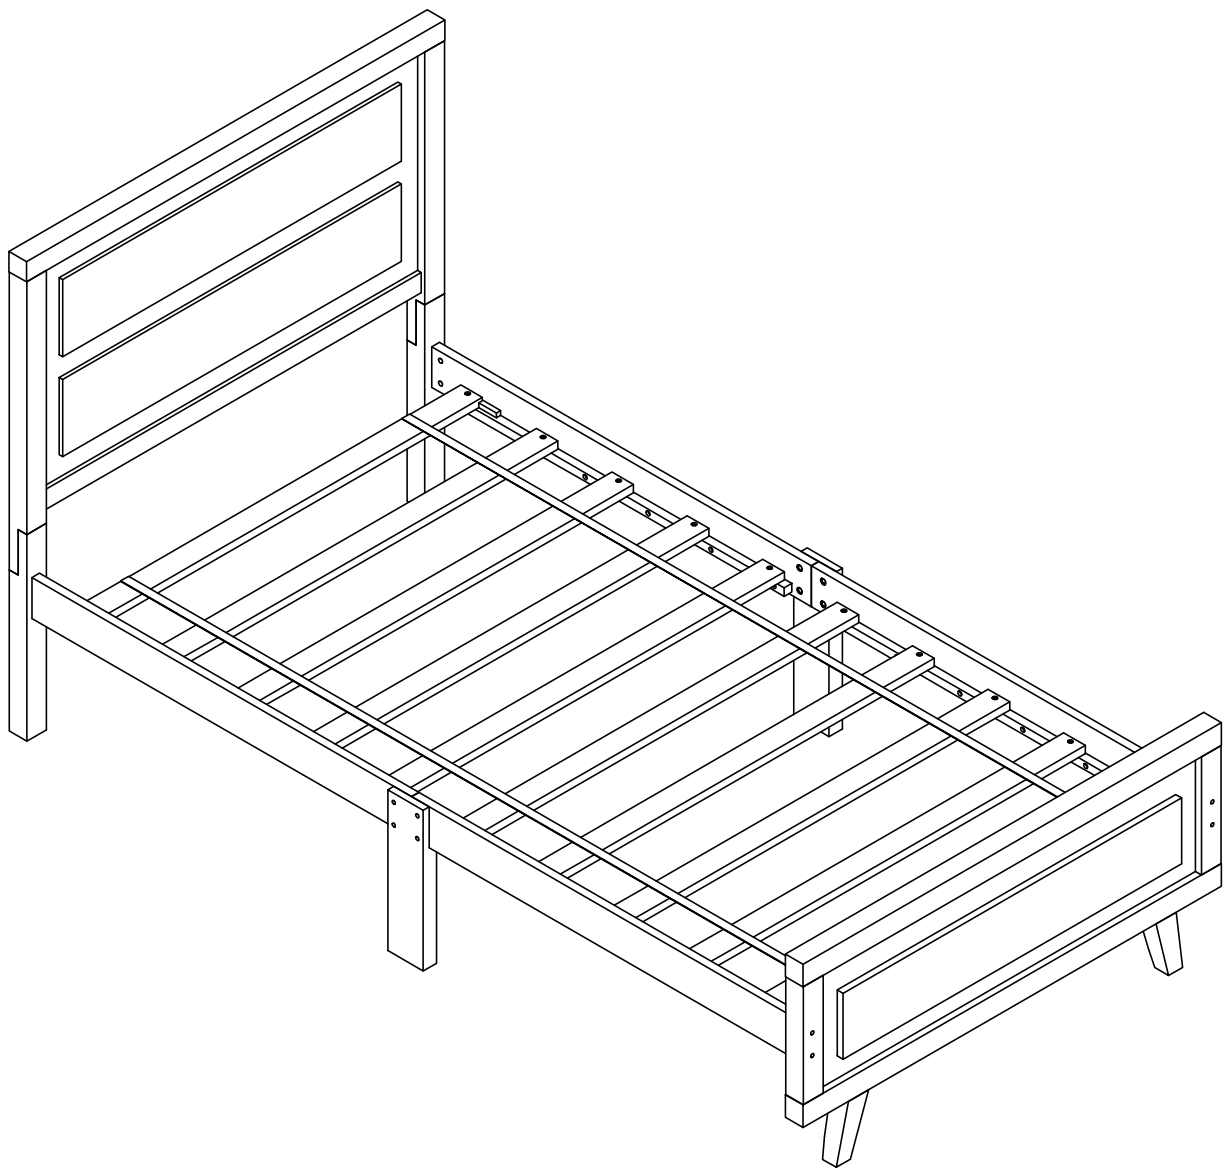


WF188513


Detail View

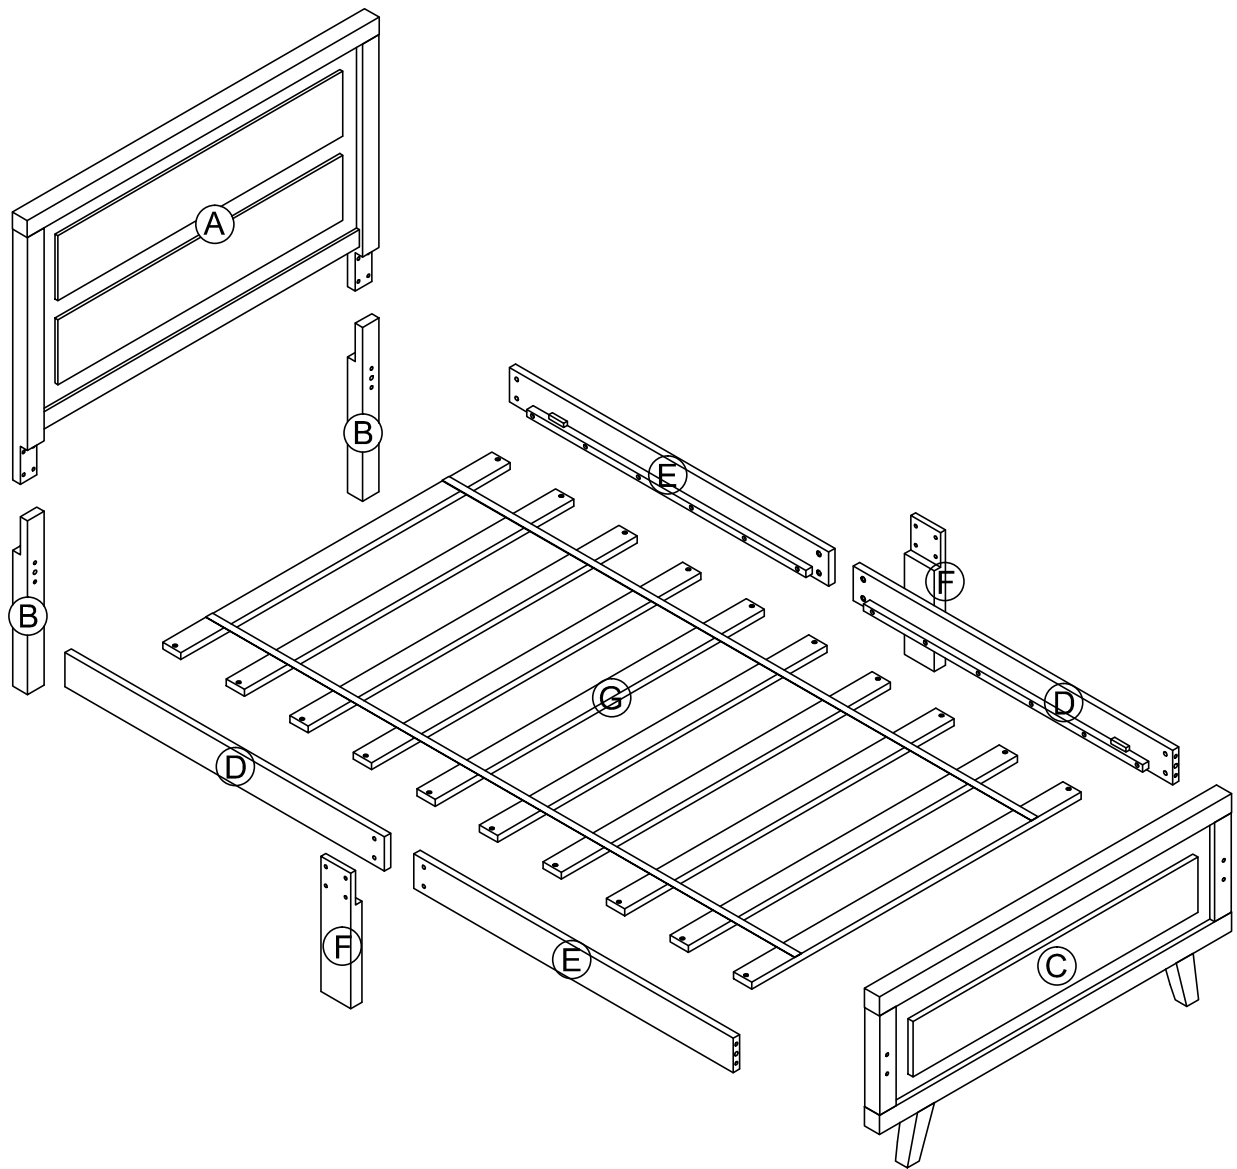



Part List

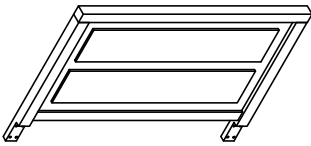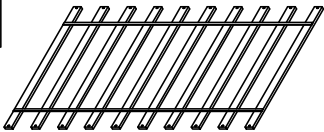A 	B 	C 
Headboard - 1pc	Leg HB(L&R) - 2pcs	Footboard - 1pc
D 	E 	F 
Side rail left & right - 2pcs	Side rail left & right - 2pcs	Side rail support - 2pcs
G 		
Slat - 1set (10pcs)		

Hardware List


1  Ø8*30mm Wood dowel (4pcs)	2  (Ø15)1/4"*90mm Hex-Head bolts (8pcs)	3  (Ø12)1/4"*40mm Hex-Head bolts (8pcs)
4  (Ø12)1/4"*30mm Hex-Head bolts (8pcs)	5  1/4"*15 (9.5mm) Horizontal-Hole bolts(8pcs)	6  Ø1/4"*19*2mm Flat washer(8pcs)
7  Ø4*30mm Wood screws (20pcs)	8  (1/4")4.5*58mm Allen key (1pc)	

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)

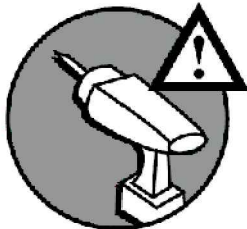


PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

STEP 1:

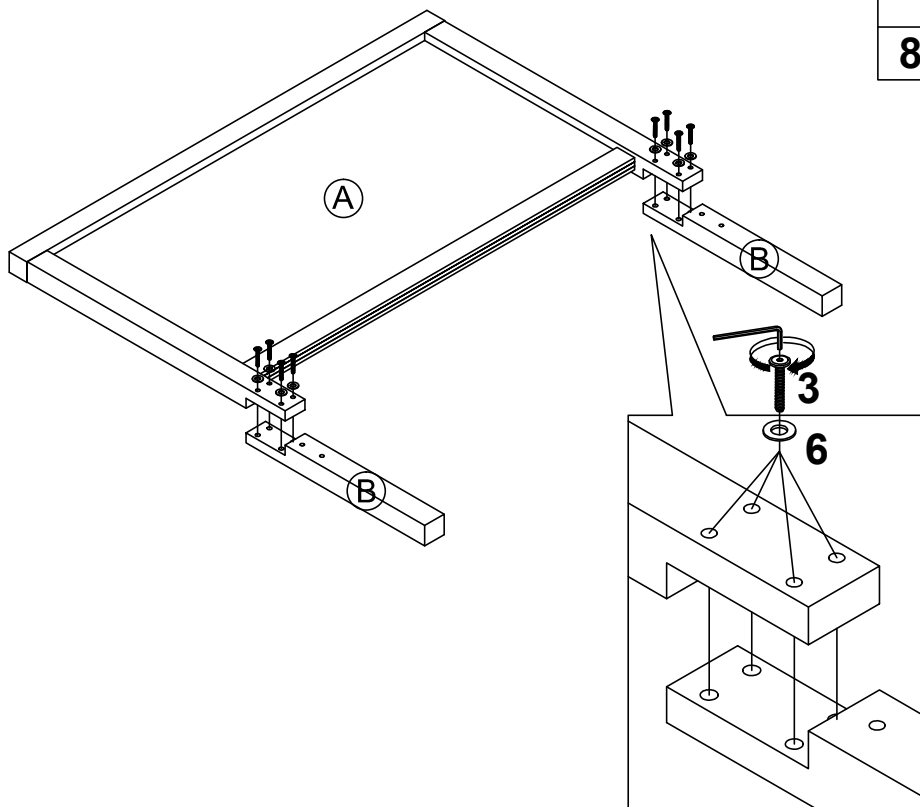

3	6
	
8PCS	8PCS


STEP 2:

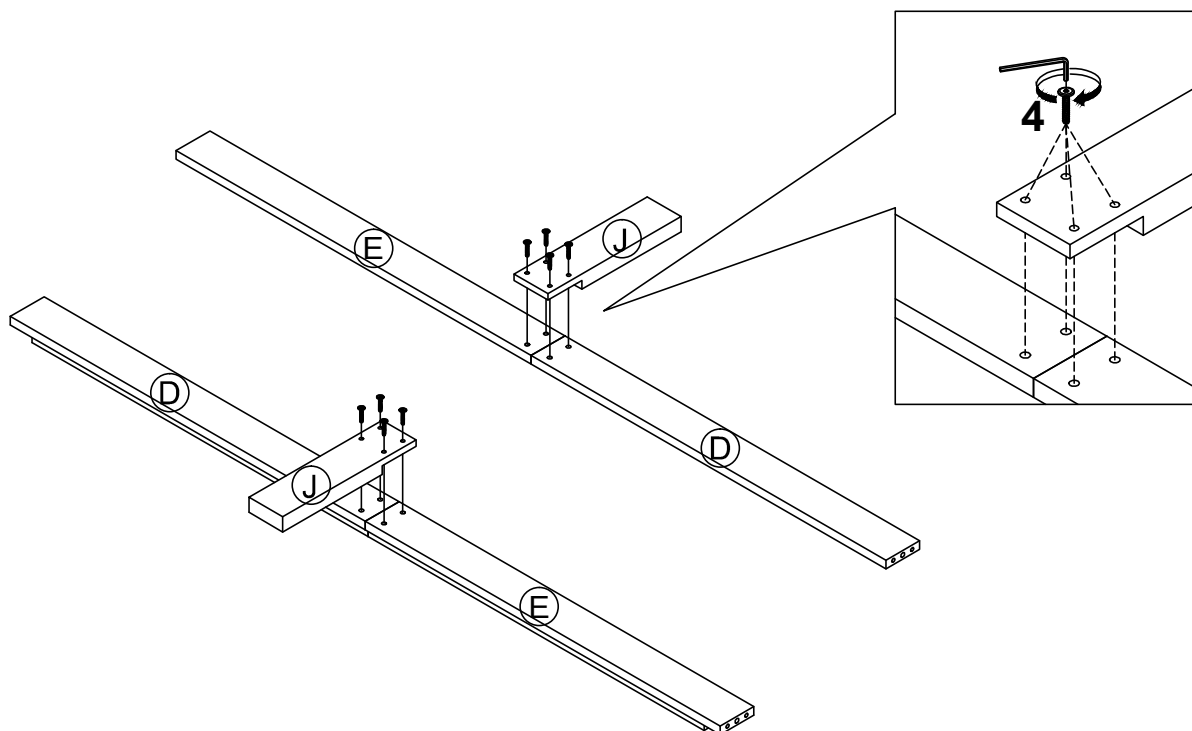

4


8PCS

STEP 3:

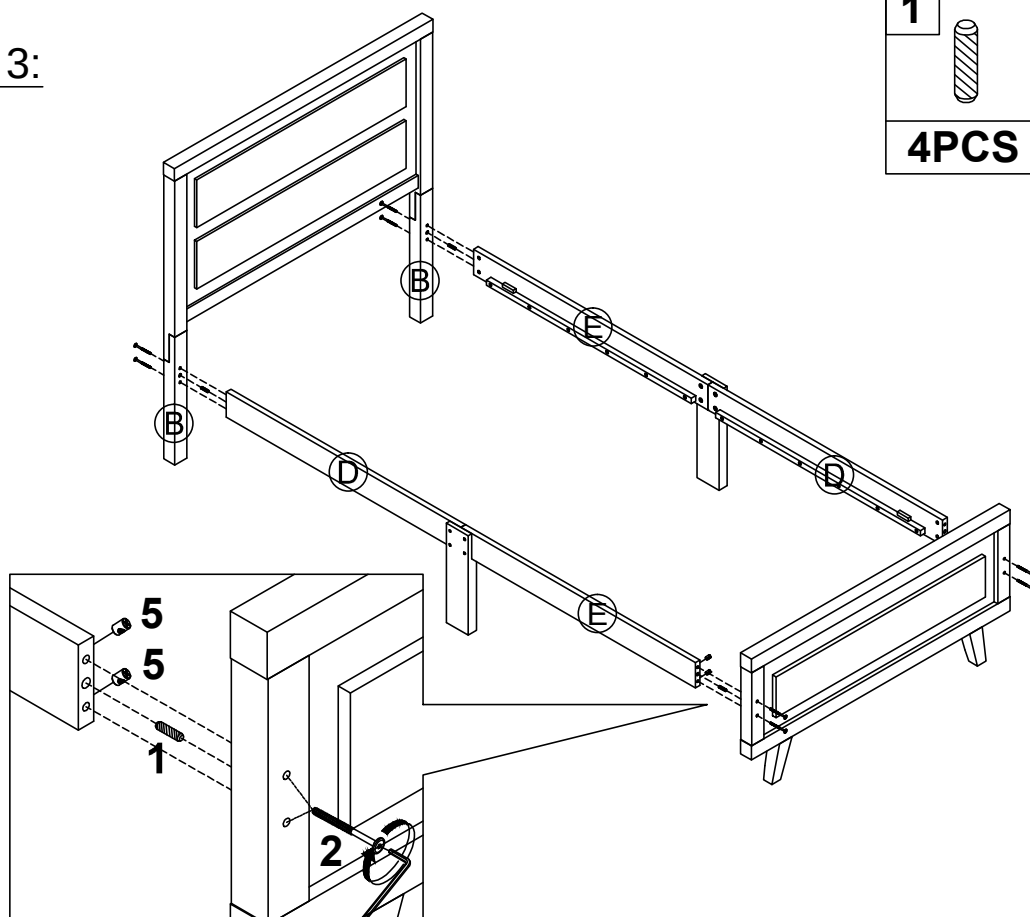

1		2	
4PCS		8PCS	
		5	
		8PCS	

STEP 4:

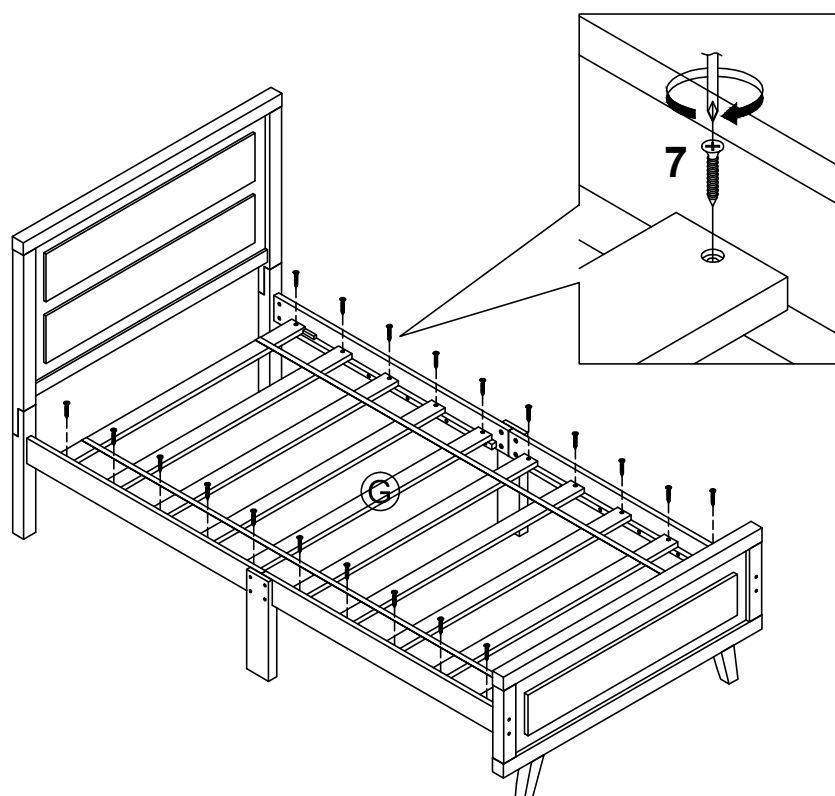

7	
20PCS	