




**MANHATTAN
COMFORT**

**2-AFSB046
AF004**

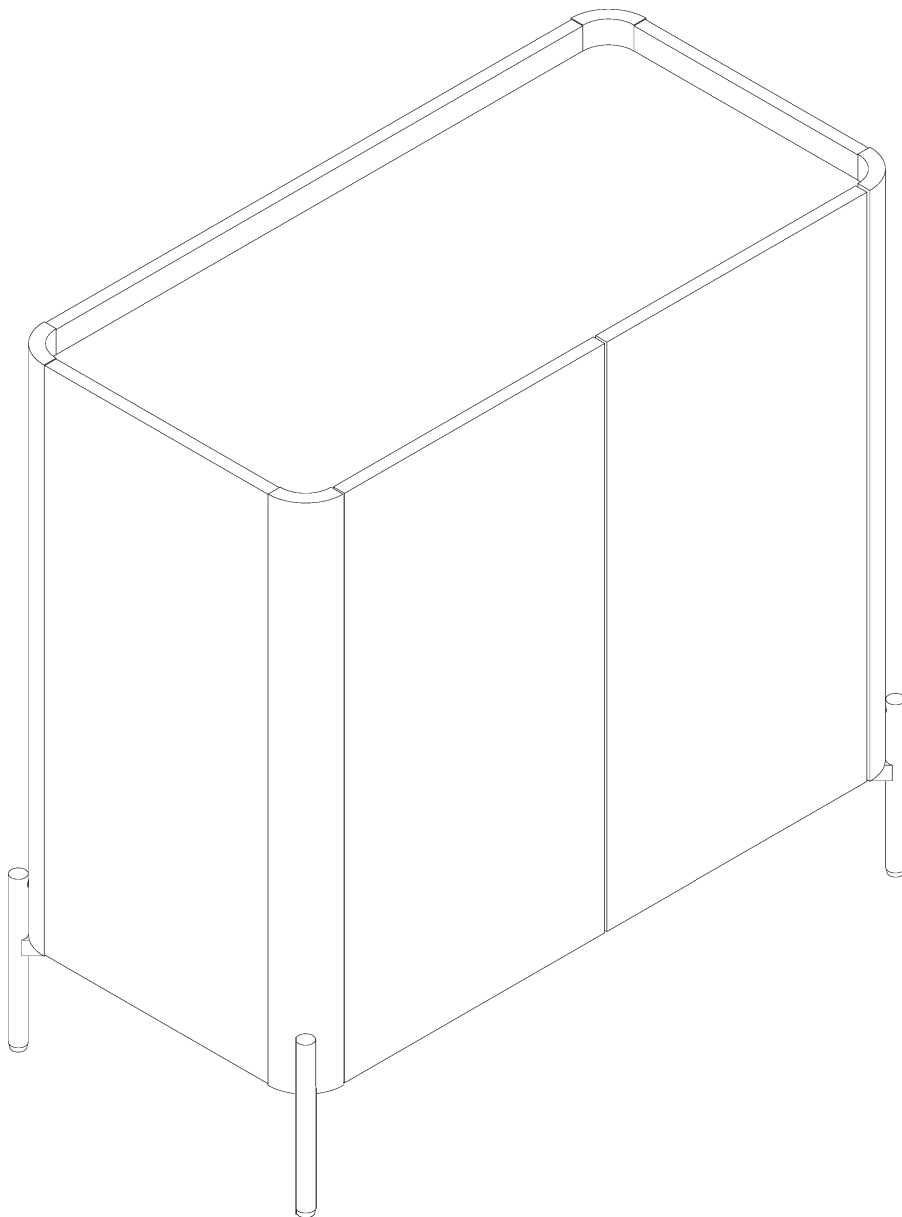

V.08212024







STOP!


Before beginning the assembly process,
ensure all boxes and parts have been delivered.

FOR BEST RESULTS:

- Do not throw away packaging materials until assembly is complete.
- Assemble item on a soft surface, such as cardboard or carpet, to protect finish.
- Proper assembly requires two people.

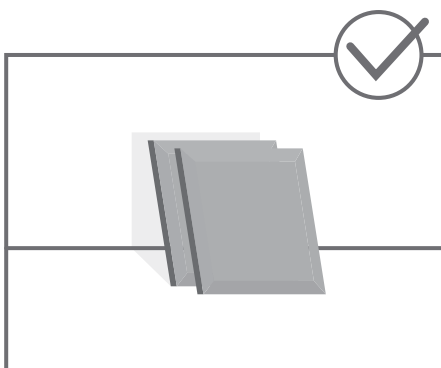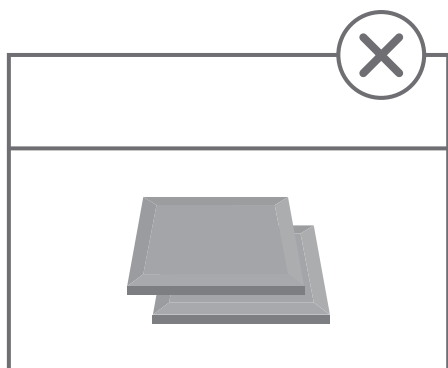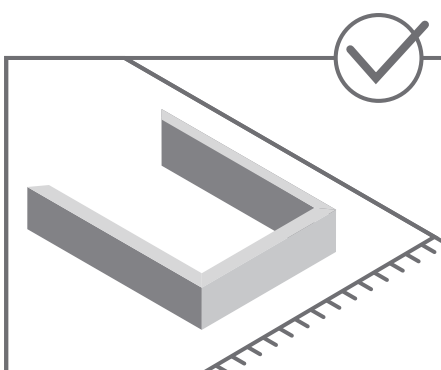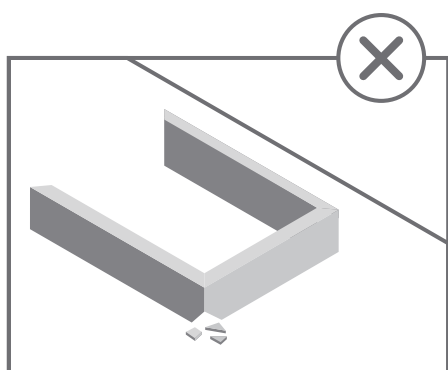

TOOLS REQUIRED

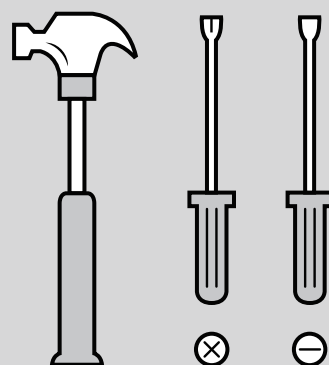

View our assembly video online:
WWW.MANHATTANCOMFORT.COM




Stuck? Question? We are here to help.
tel: 908-888-0818
e-mail: help@manhattancomfort.com

Support Site



Included in this package:

- A. TOP (1)
- B. BOTTOM (1)
- C. LEFT PANEL (1)
- D. RIGHT PANEL (1)
- E. DOOR (2)
- F. TOP BACK PANEL (1)
- G. BOTTOM BACK PANEL (1)
- H. SHELF PANEL (1)
- I. BACK LEFT STRIP (1)
- J. BACK RIGHT STRIP (1)

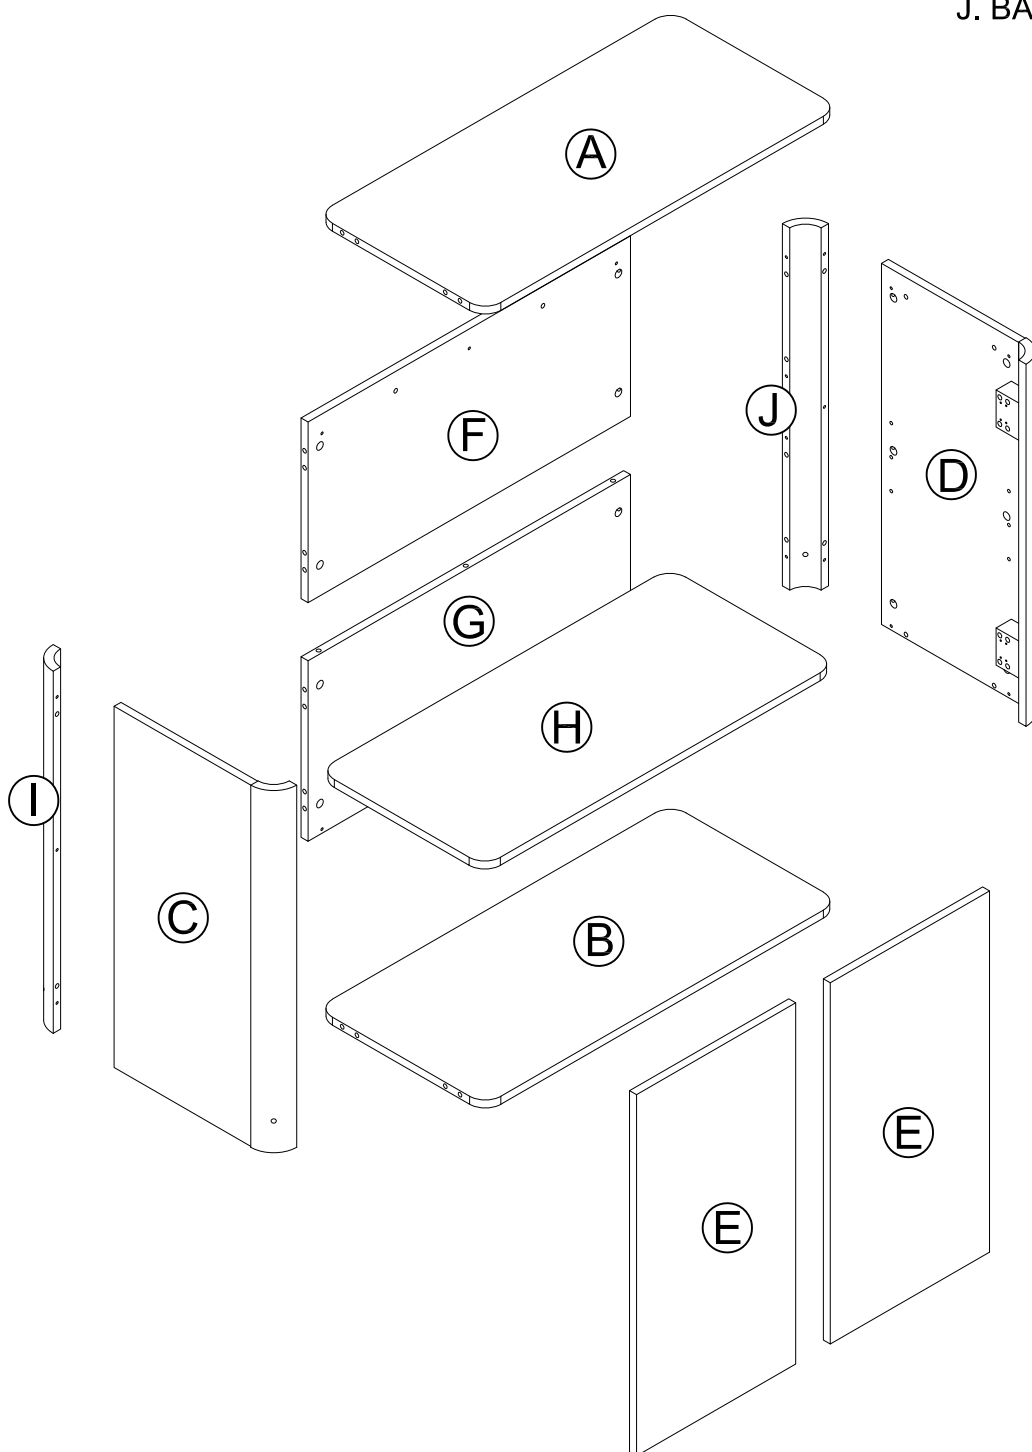


Hardware Identification


- ① KD BOLT - 28pcs
L=25mm




- ② KD CAM - 28pcs
Ø15*11mm




- ③ COVER CAP - 28pcs




- ④ WOOD DOWEL - 27pcs
Ø8*30mm




- ⑤ LOCK - 1pc




- ⑥ SHELF PEGS - 4pcs

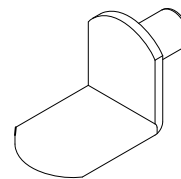


- ⑦ LEGS - 4pcs




- ⑧ HINGE - 4pcs

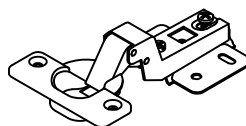


- ⑨ SCREW - 24pcs
Ø4*14mm




- ⑩ BOLT - 12pcs
M6*28mm




- ⑪ STRAPS - 2pcs

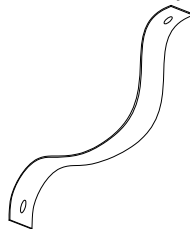

- ⑫ SCREW - 2pcs
Ø4*18mm




- ⑬ SCREW - 2pcs
Ø4*25mm




- ⑭ PLASTIC - 2pcs



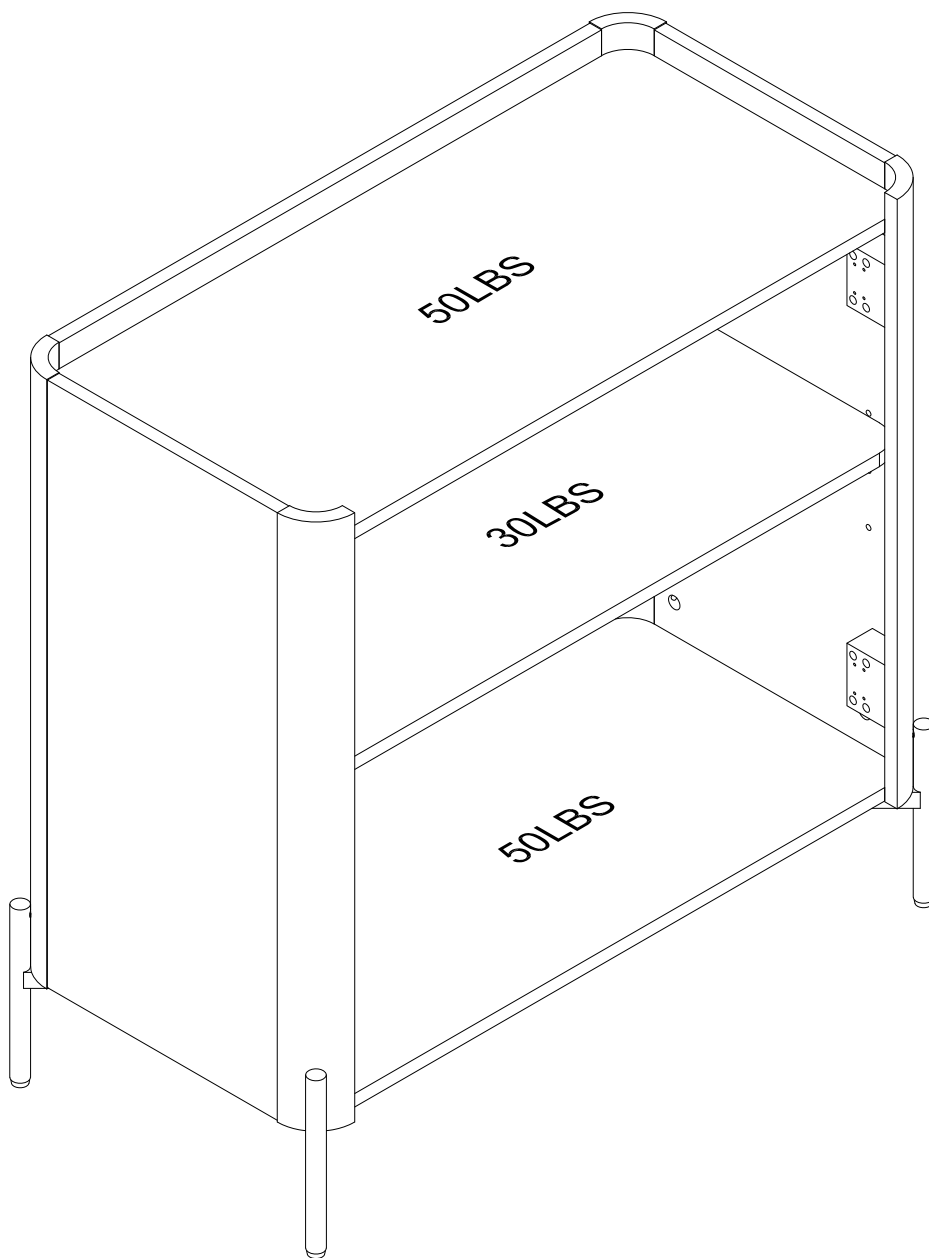

Step 1:



* Insert Fourteen KD BOLT (1) to the BACK LEFT STRIP (I) and BACK RIGHT STRIP (J).

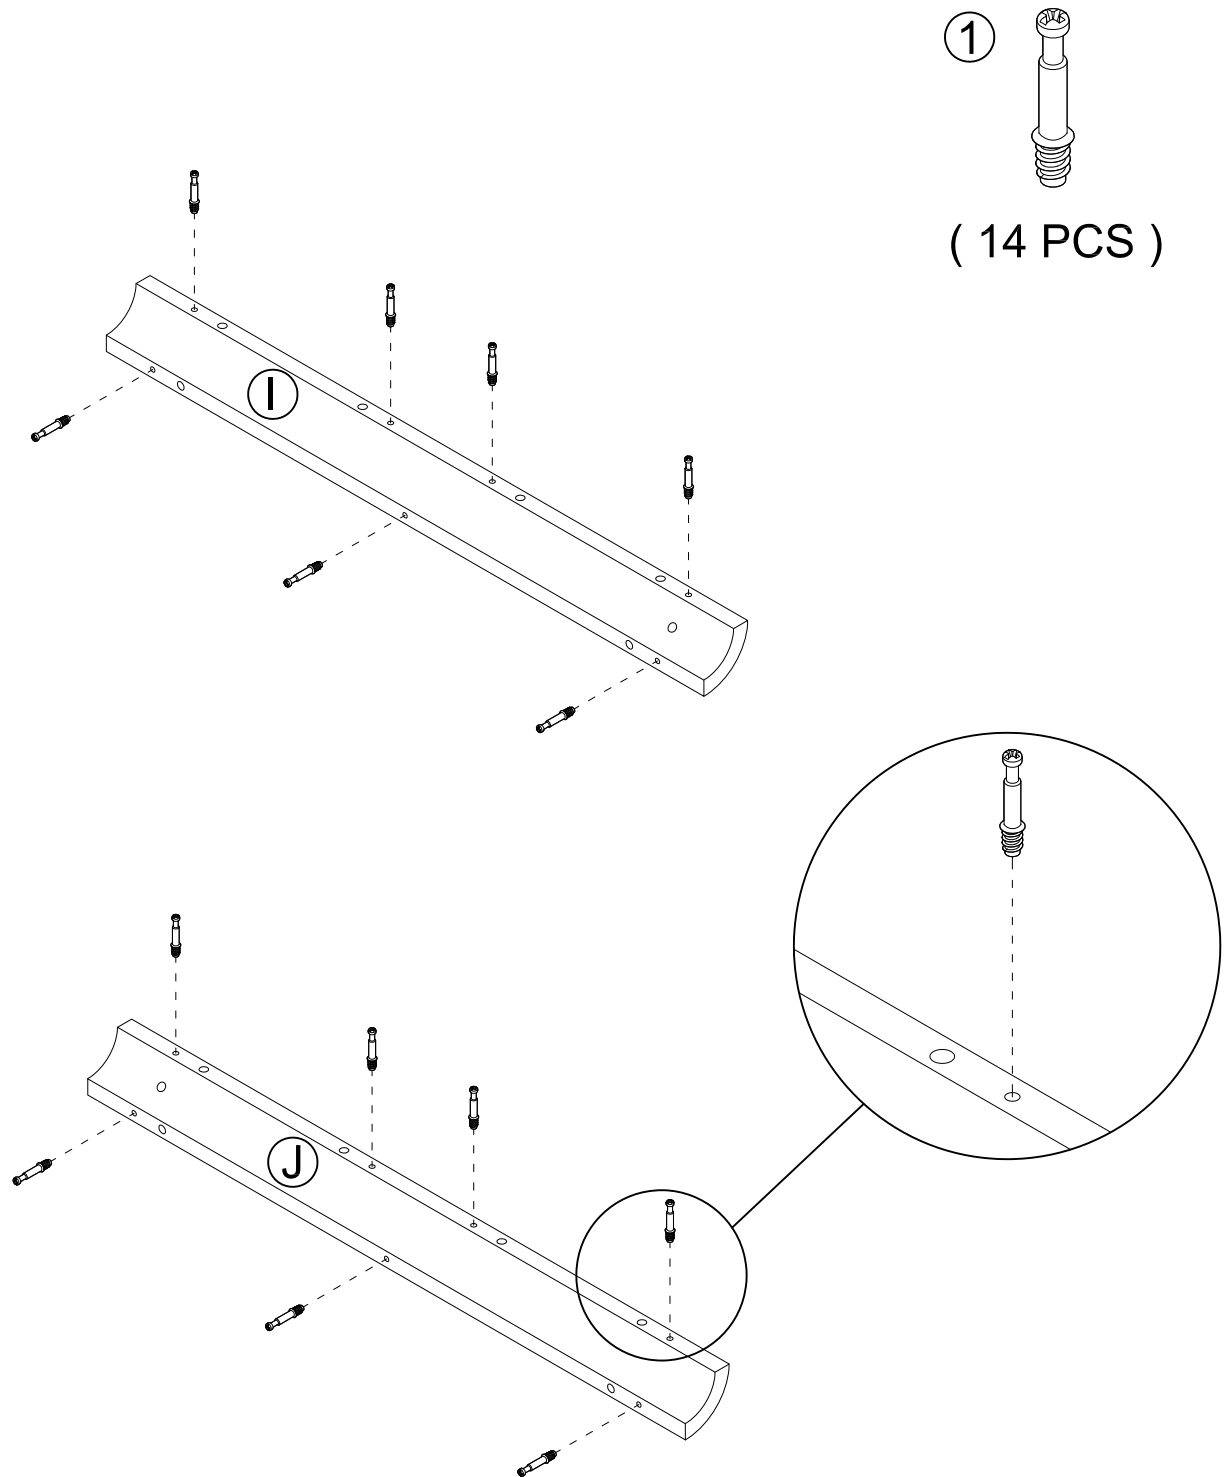

Step 2:


* Attach the BACK LEFT STRIP (I) to the LEFT PANEL (C) by the Three KD CAM (2) , Three COVER CAP (3) ,and Two WOOD DOWEL (4) .

* Attach the BACK RIGHT STRIP (J) to the RIGHT PANEL (D) by the Three KD CAM (2) , Three COVER CAP (3) ,and Two WOOD DOWEL (4) .

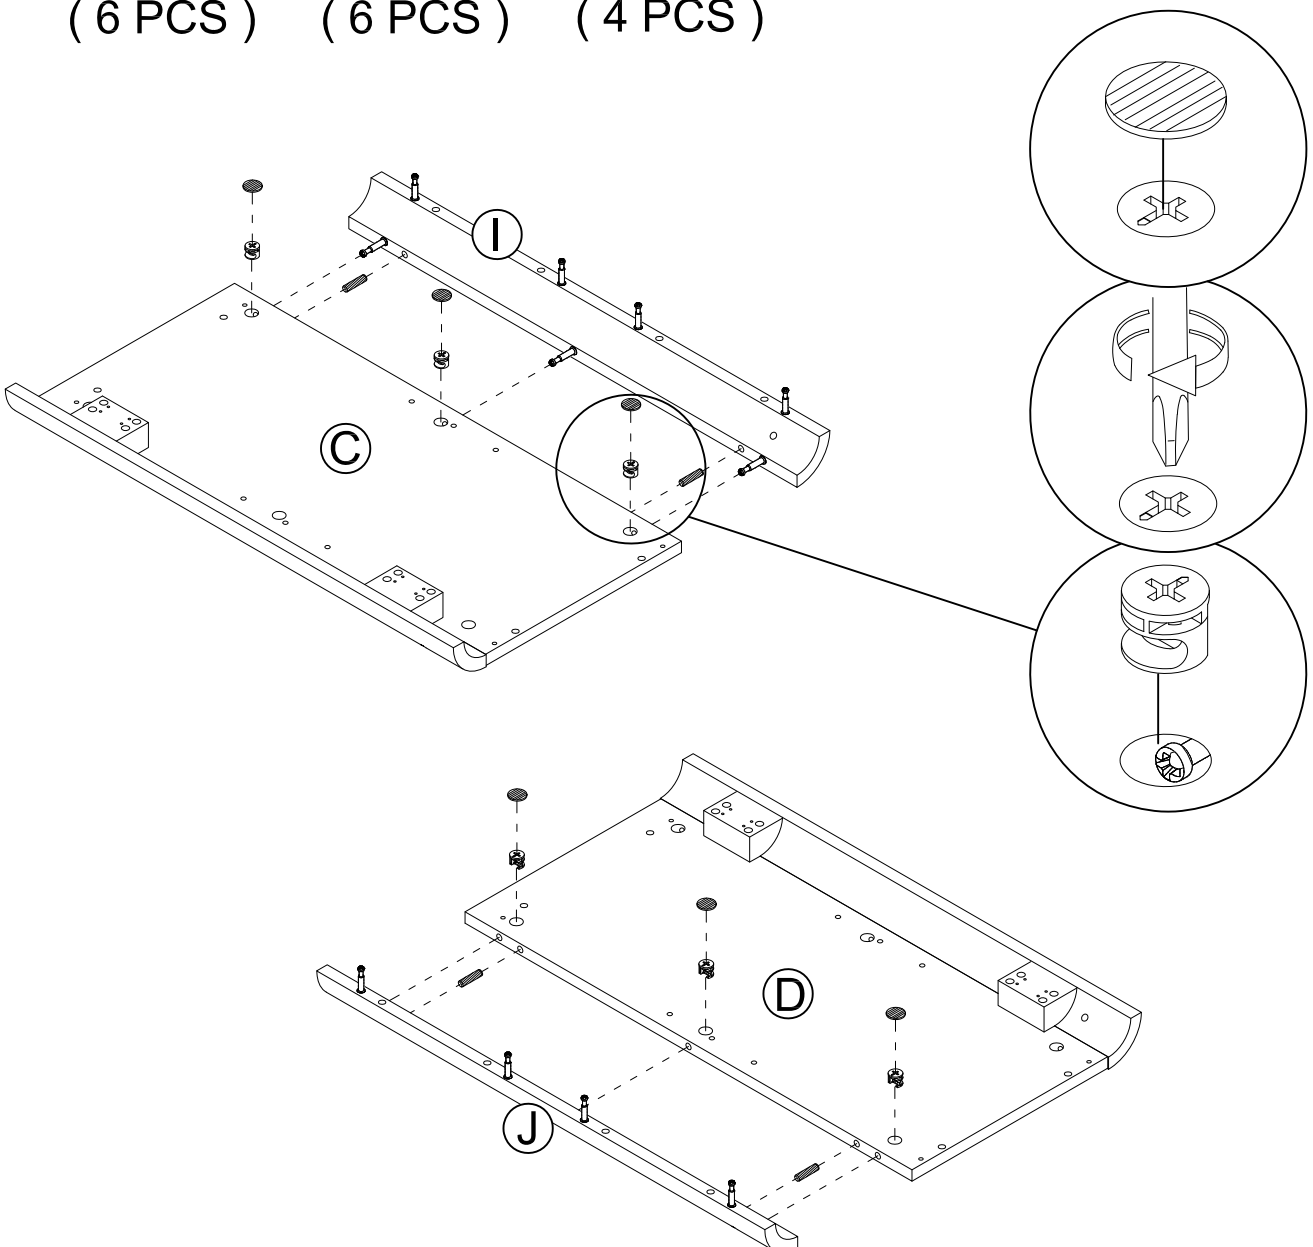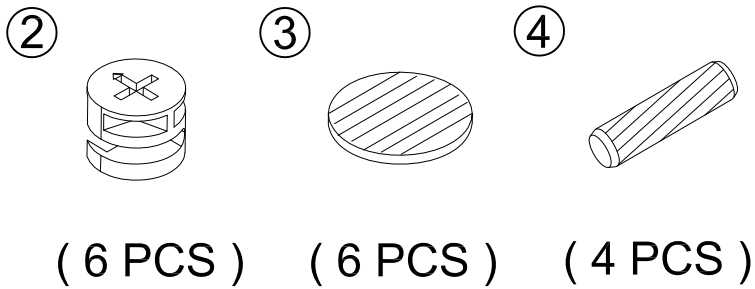


Step 3:

* Insert Eight KD BOLT (1) to the LEFT PANEL (C) and RIGHT PANEL (D).

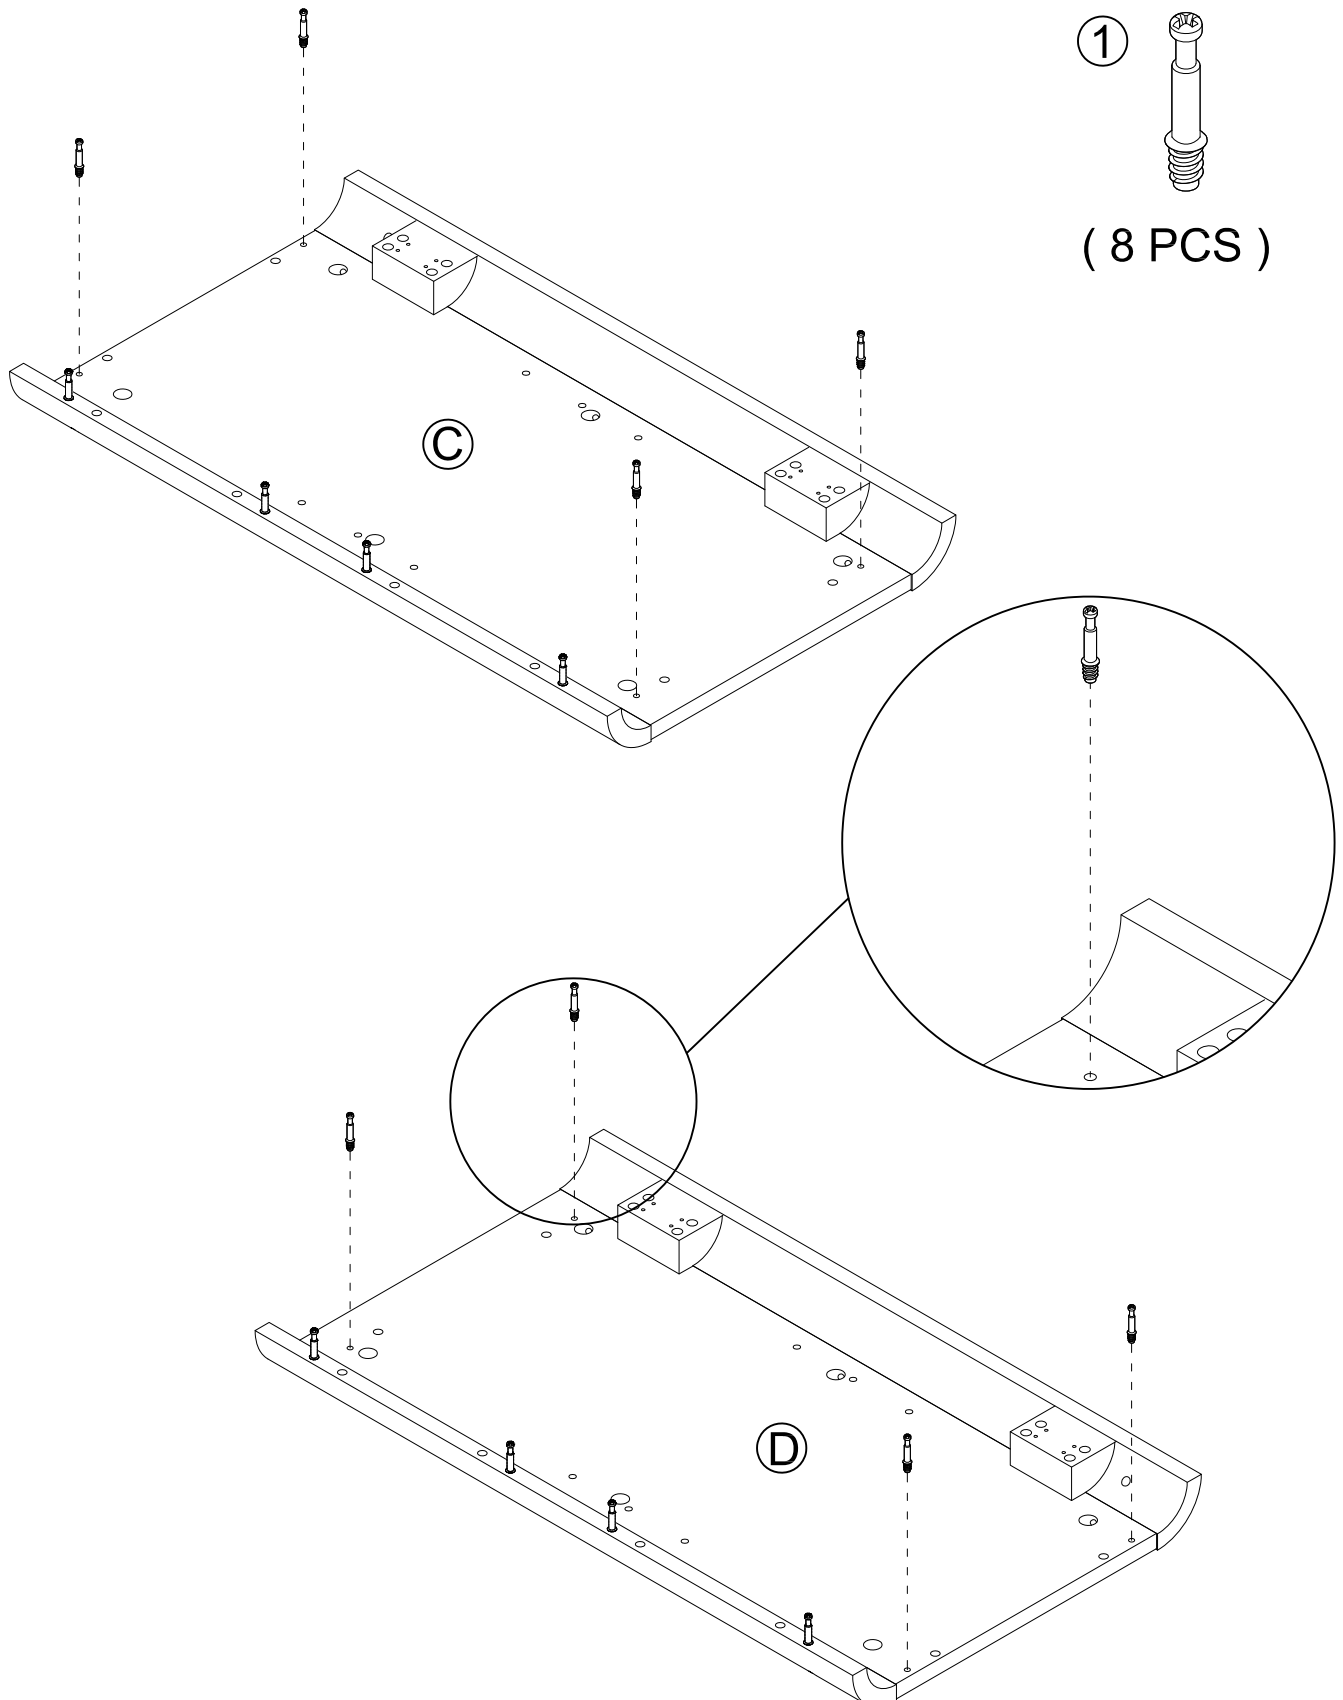

Step 4:


* Insert Six KD BOLT (1) to the TOP BACK PANEL (F) and BOTTOM BACK PANEL (G).

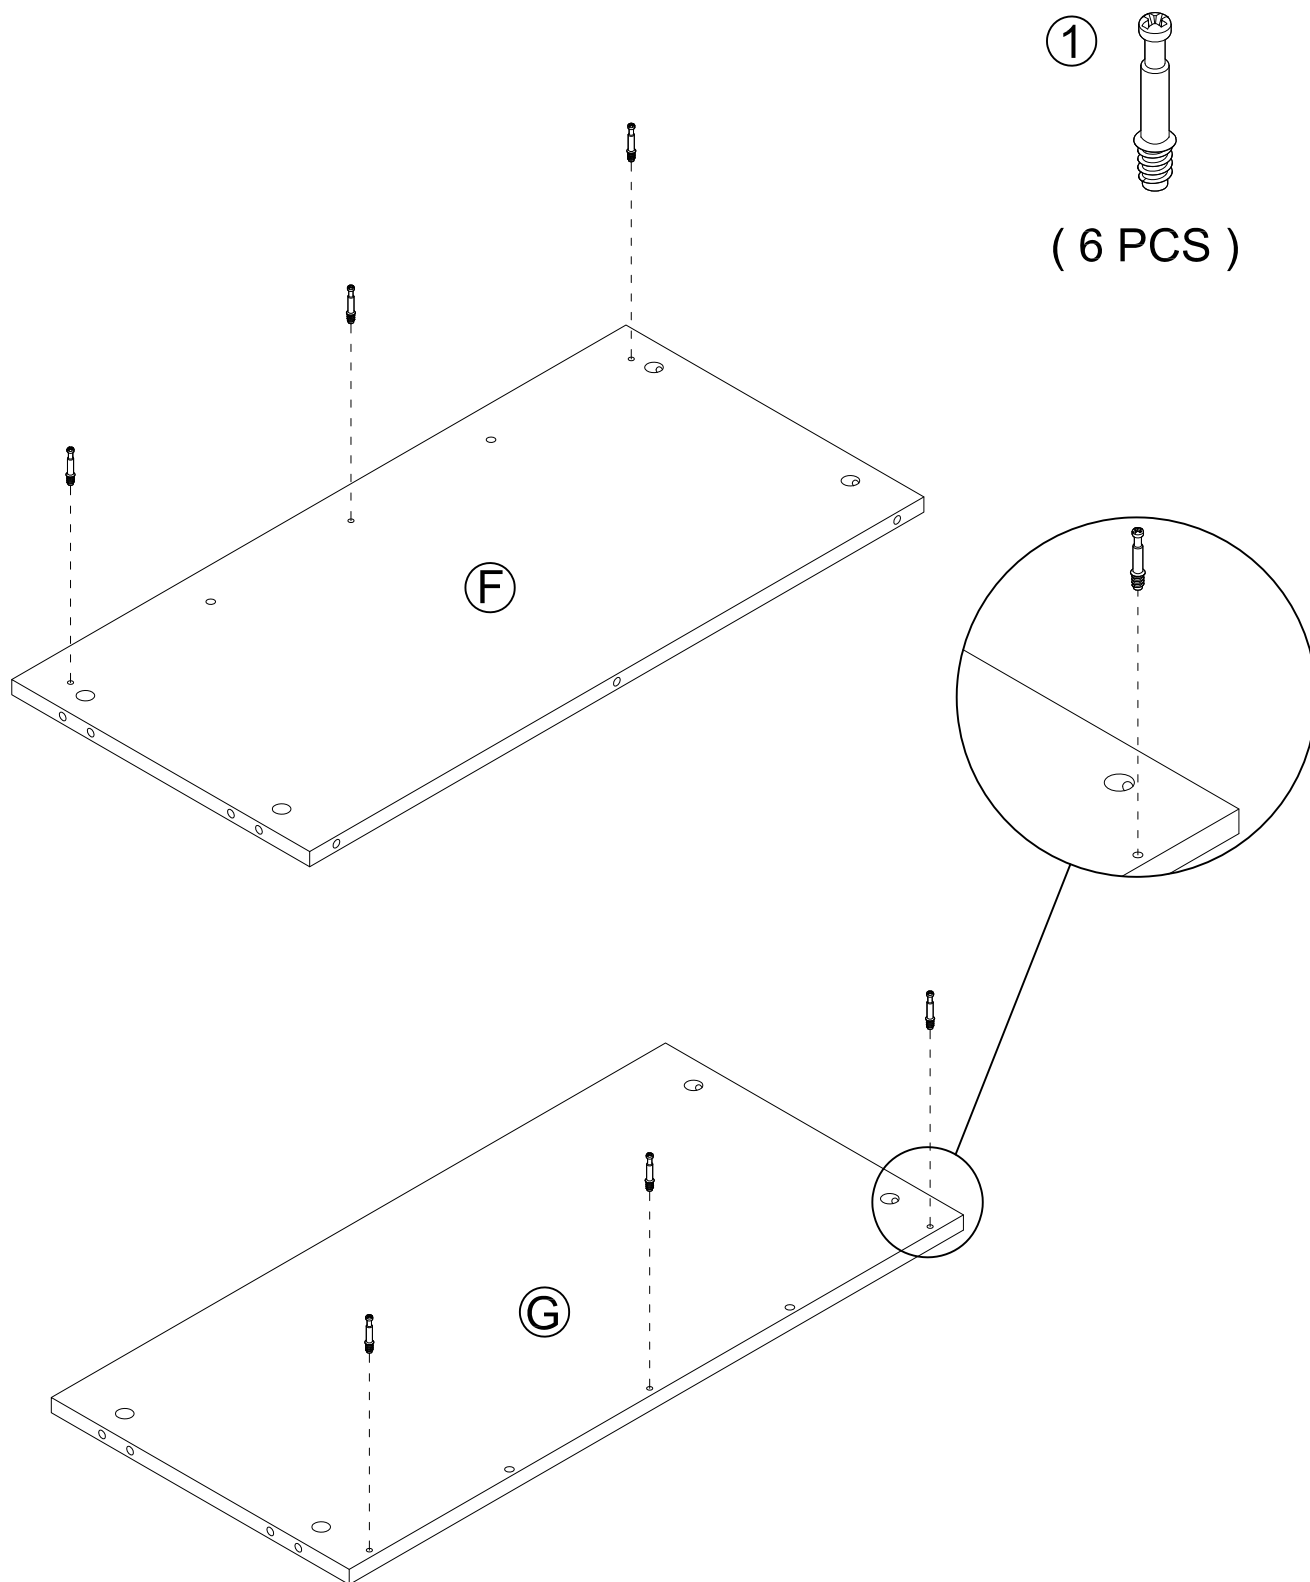

Step 5:


* Attach the TOP (A) to the TOP BACK PANEL (F) by the Three KD CAM (2) , Three COVER CAP (3) ,and Two WOOD DOWEL (4) .

②




(3 PCS)

③




(3 PCS)

④




(2 PCS)

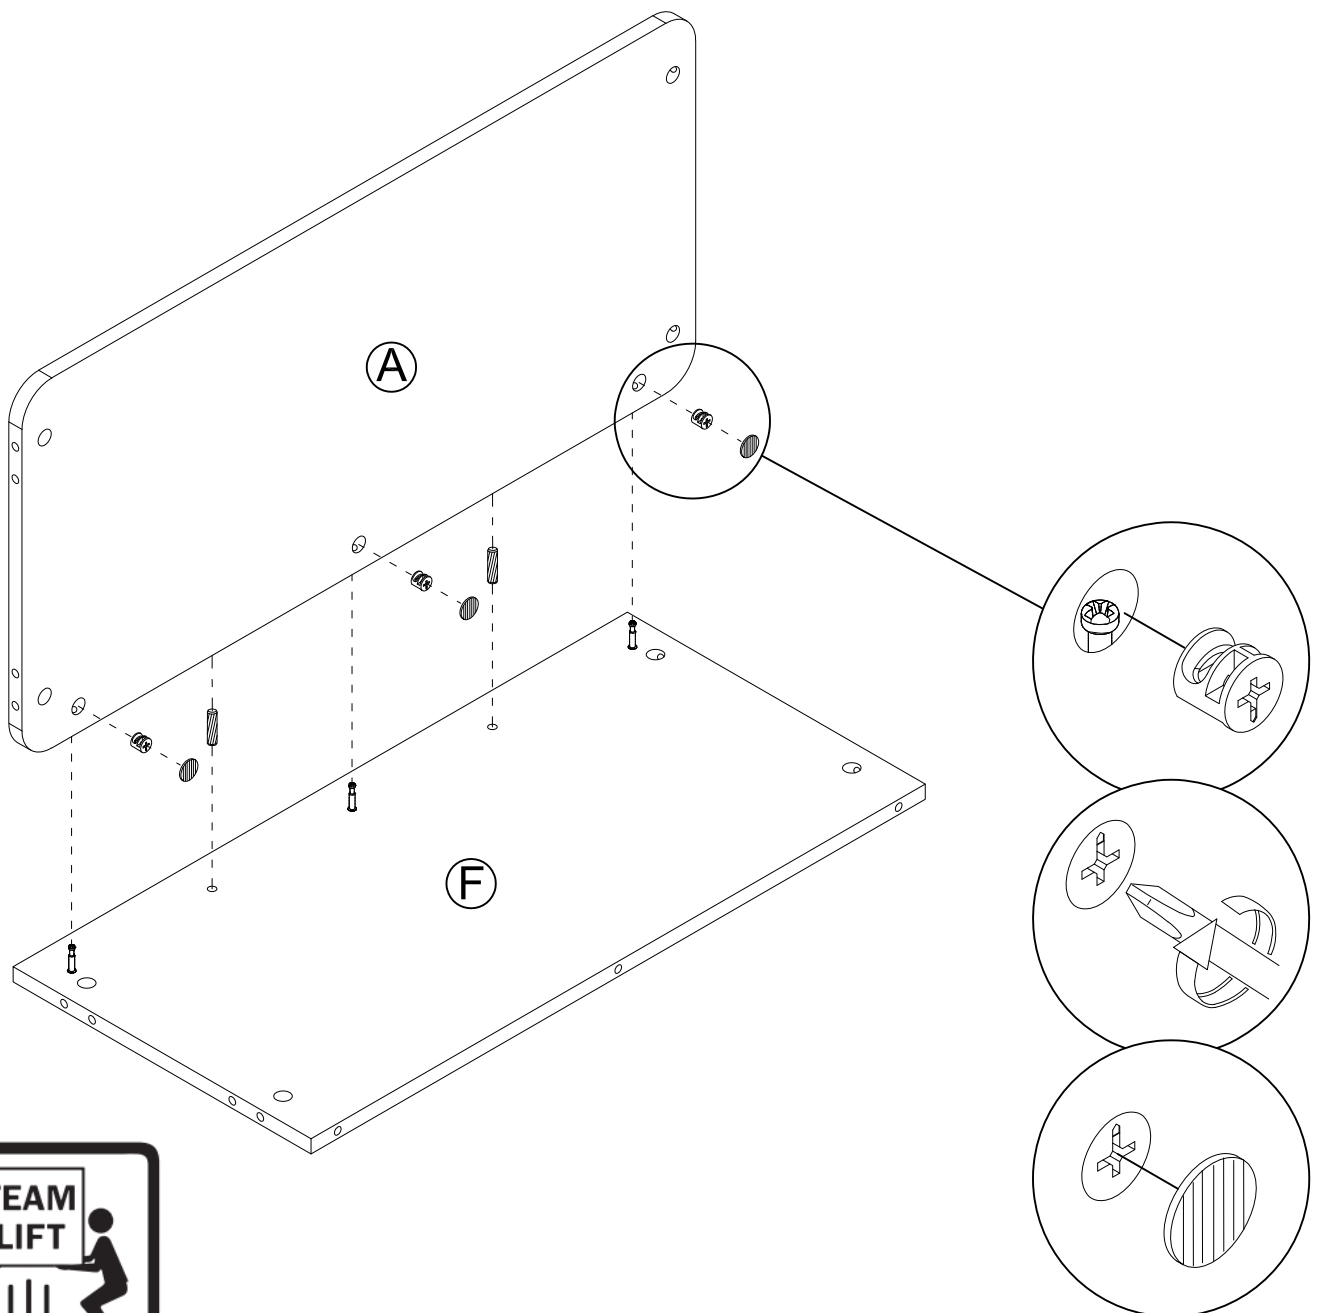

Step 6:


* Attach the BOTTOM (B) to the BOTTOM BACK PANEL (G) by the Three KD CAM (2) , Three COVER CAP (3) ,and Two WOOD DOWEL (4) .

②




(3 PCS)

③




(3 PCS)

④




(2 PCS)

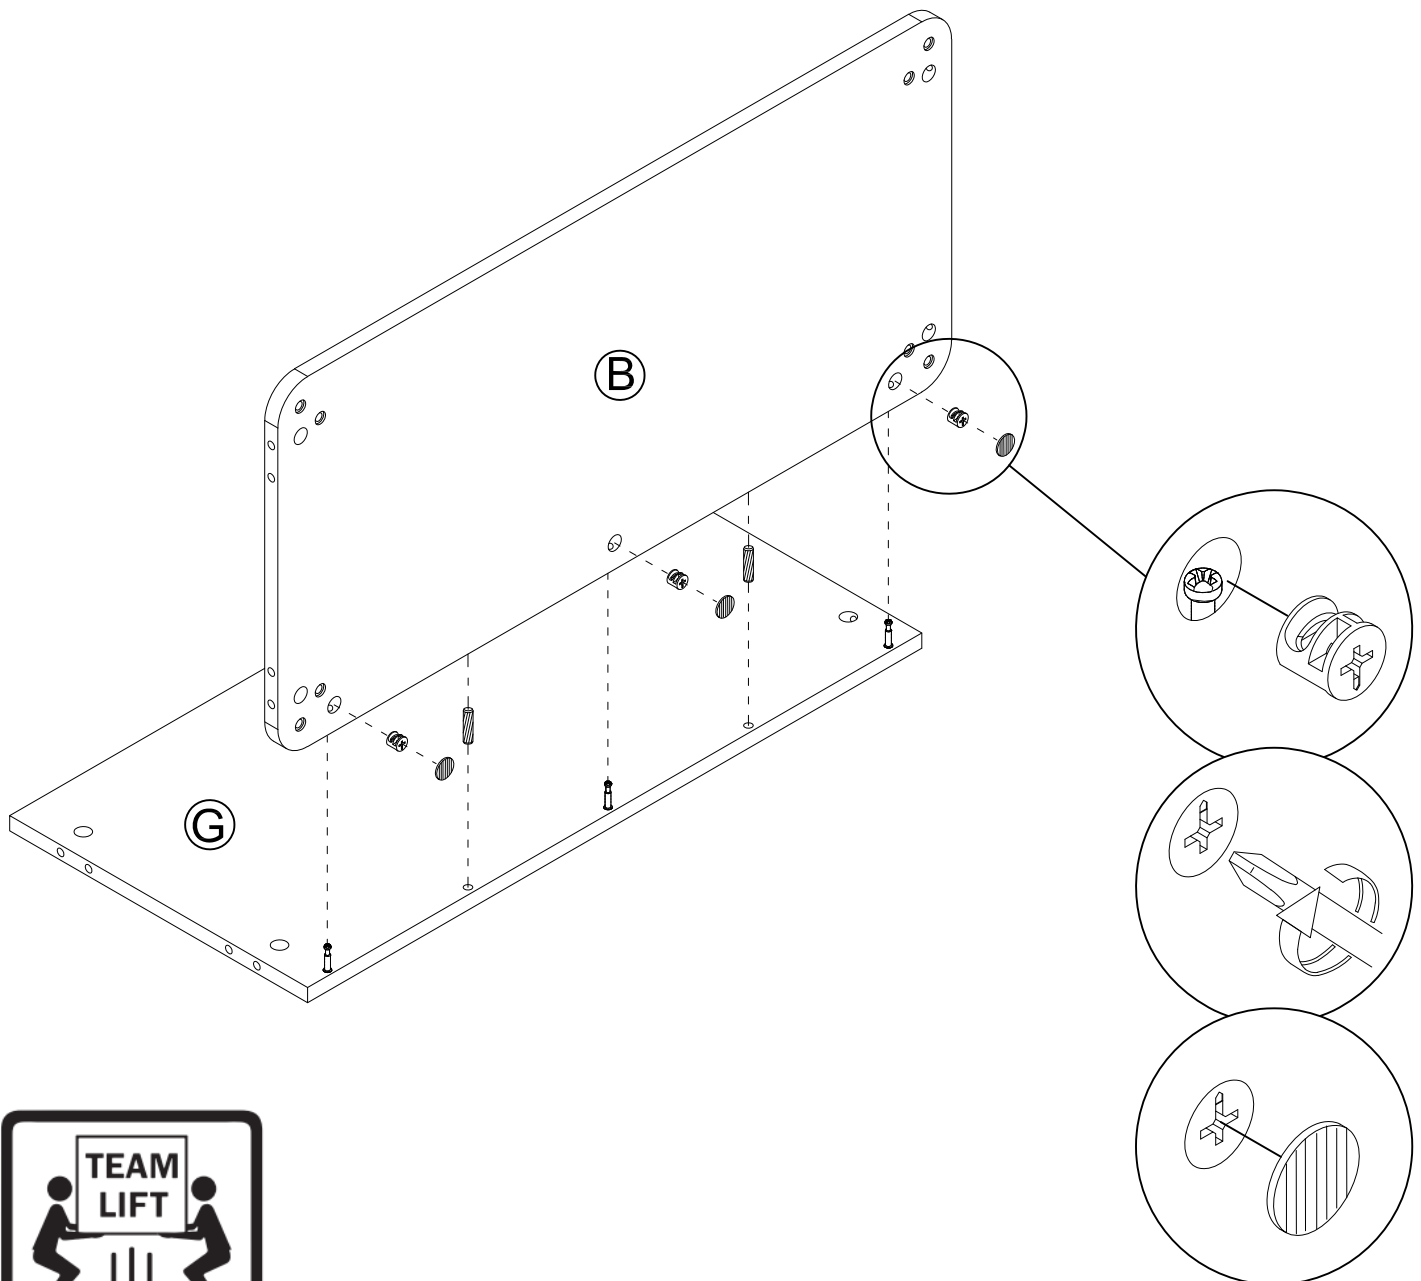


Step 7:

* Attach the TOP BACK PANEL (F) to the BOTTOM BACK PANEL (G) by the Three WOOD DOWEL (4) .

④




(3 PCS)

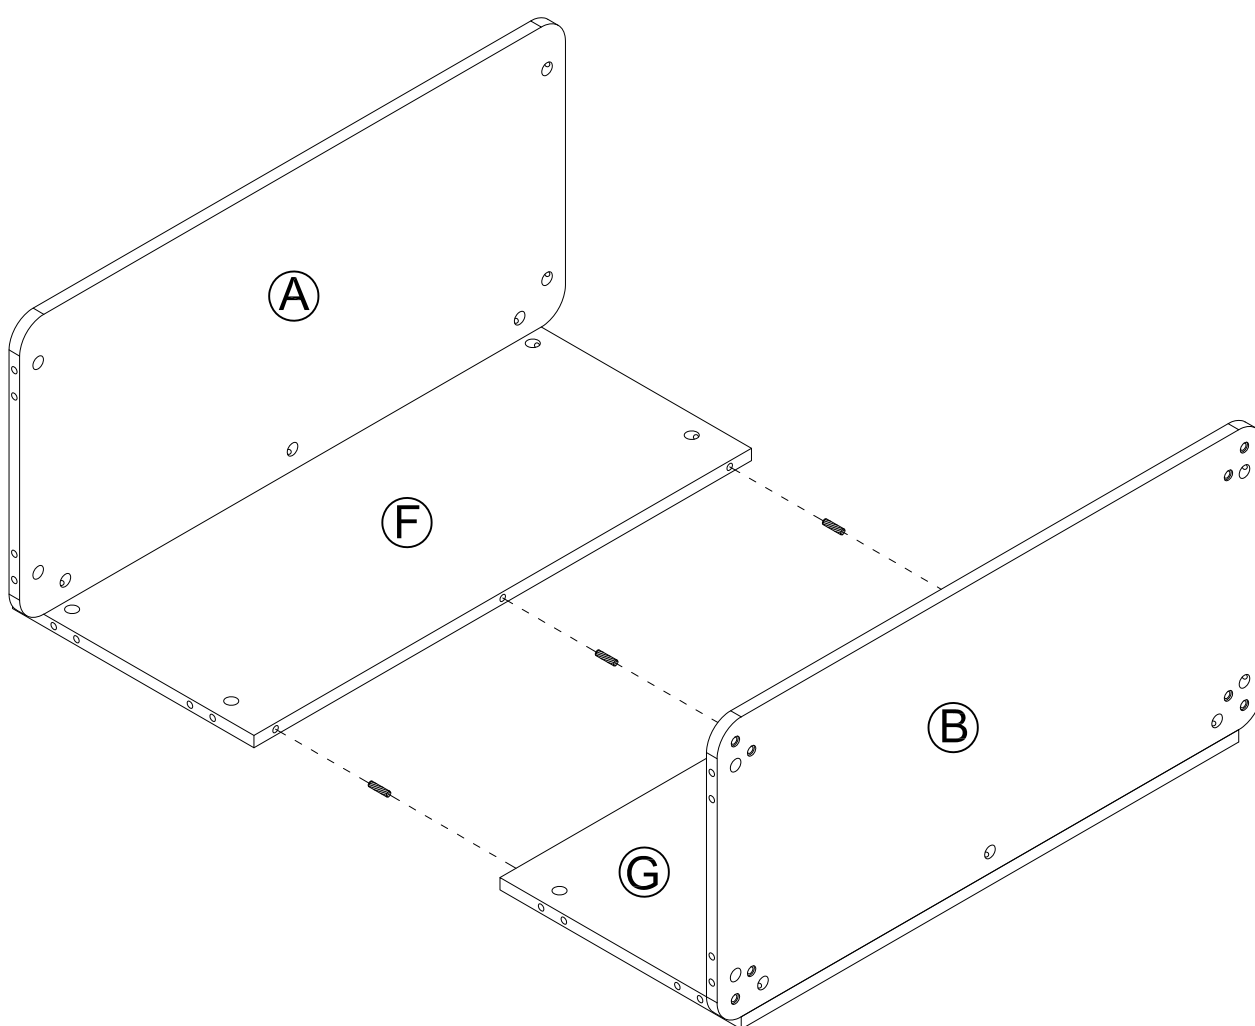


Step 8:

* Attach the LEFT PANEL (C) and RIGHT PANEL (D) to the ASSEMBLY by the Sixteen KD CAM (2) , Sixteen COVER CAP (3), Sixteen WOOD DOWEL (4) .


②





③



④





(16 PCS) (16 PCS) (16 PCS)

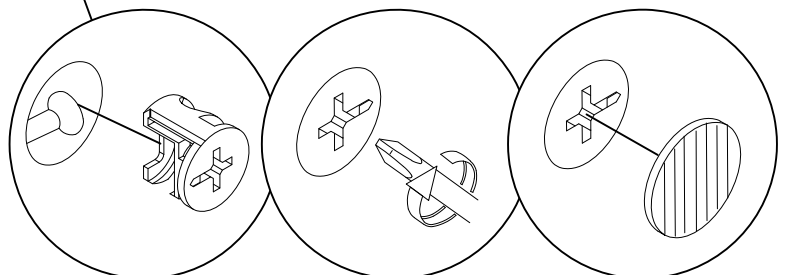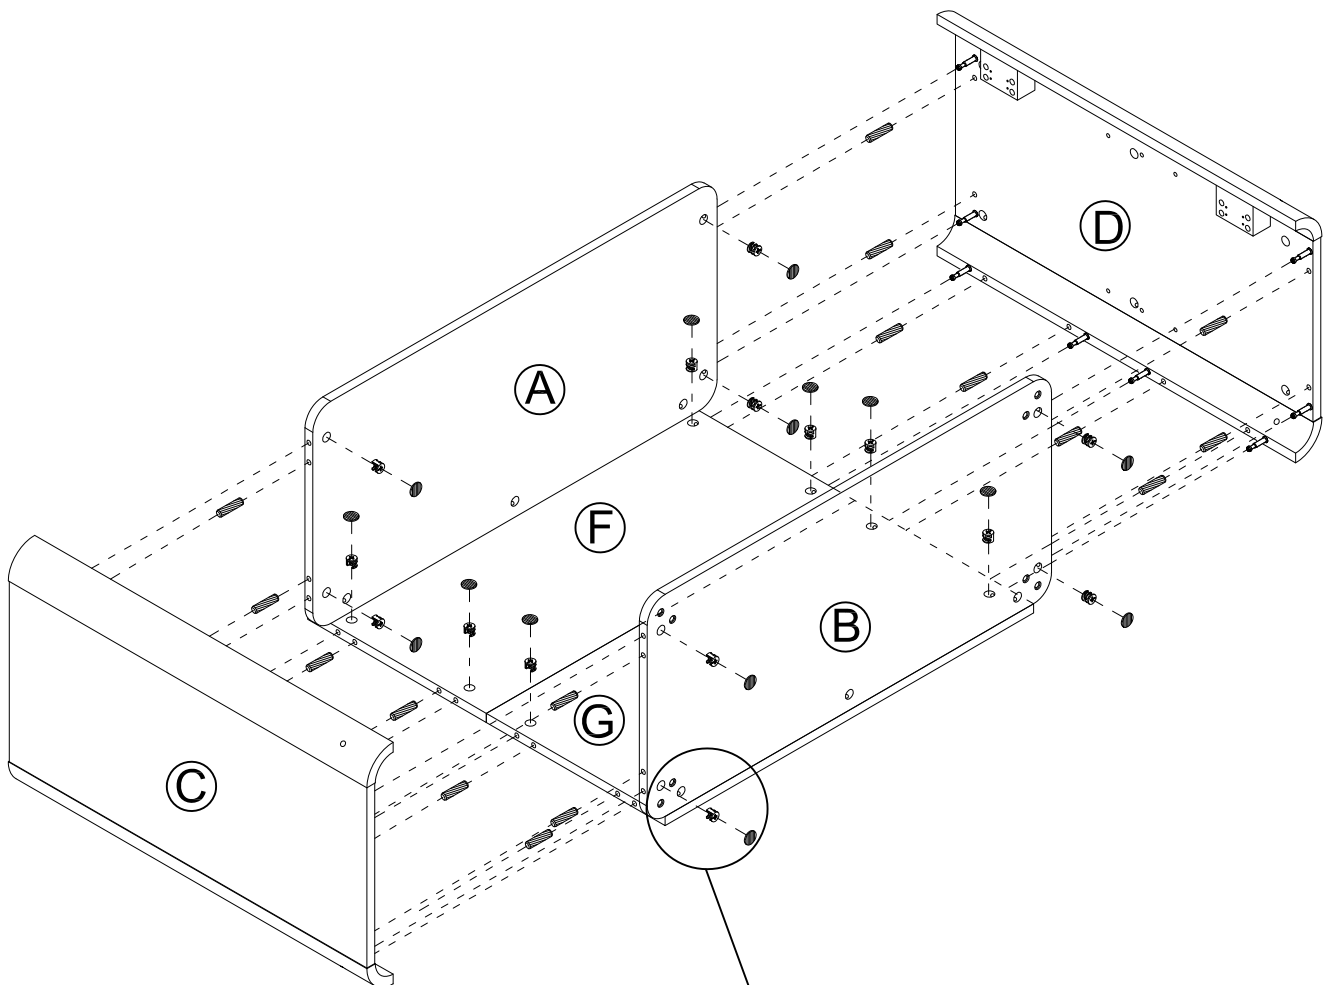


Step 9:

* Attach the LEGS (7) to the ASSEMBLY by the BOLT (10) .

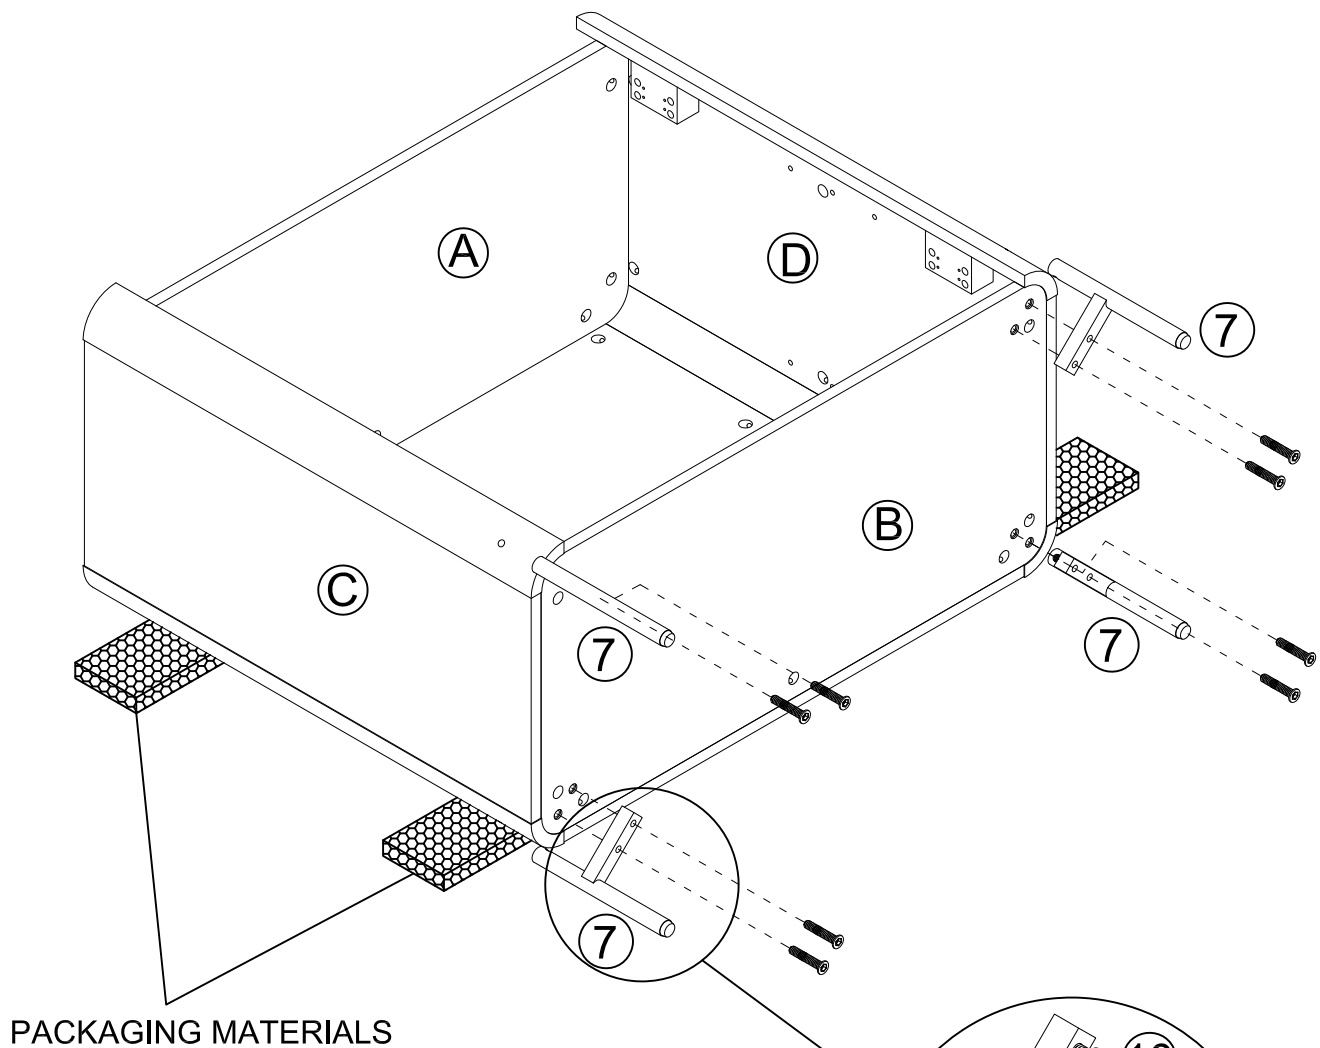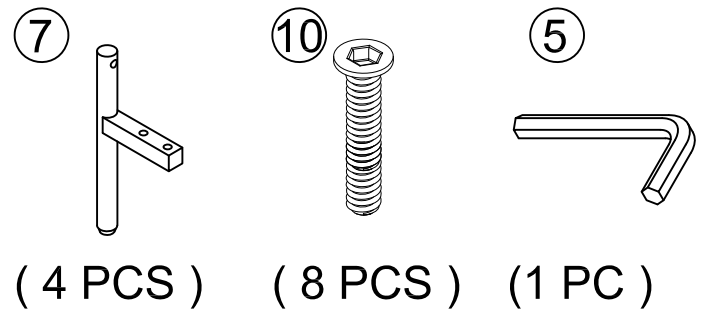


Note:Do not tighten all Bolts.

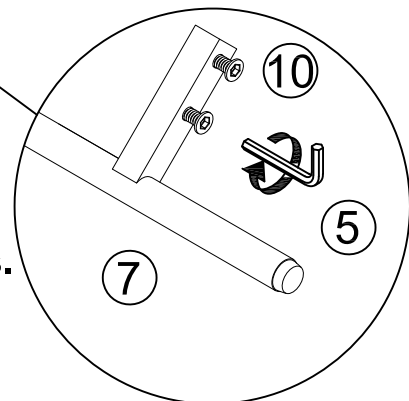


Step 10:

* Attach the ASSEMBLY by the Four BOLT (7) .

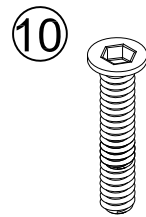


(4 PCS)

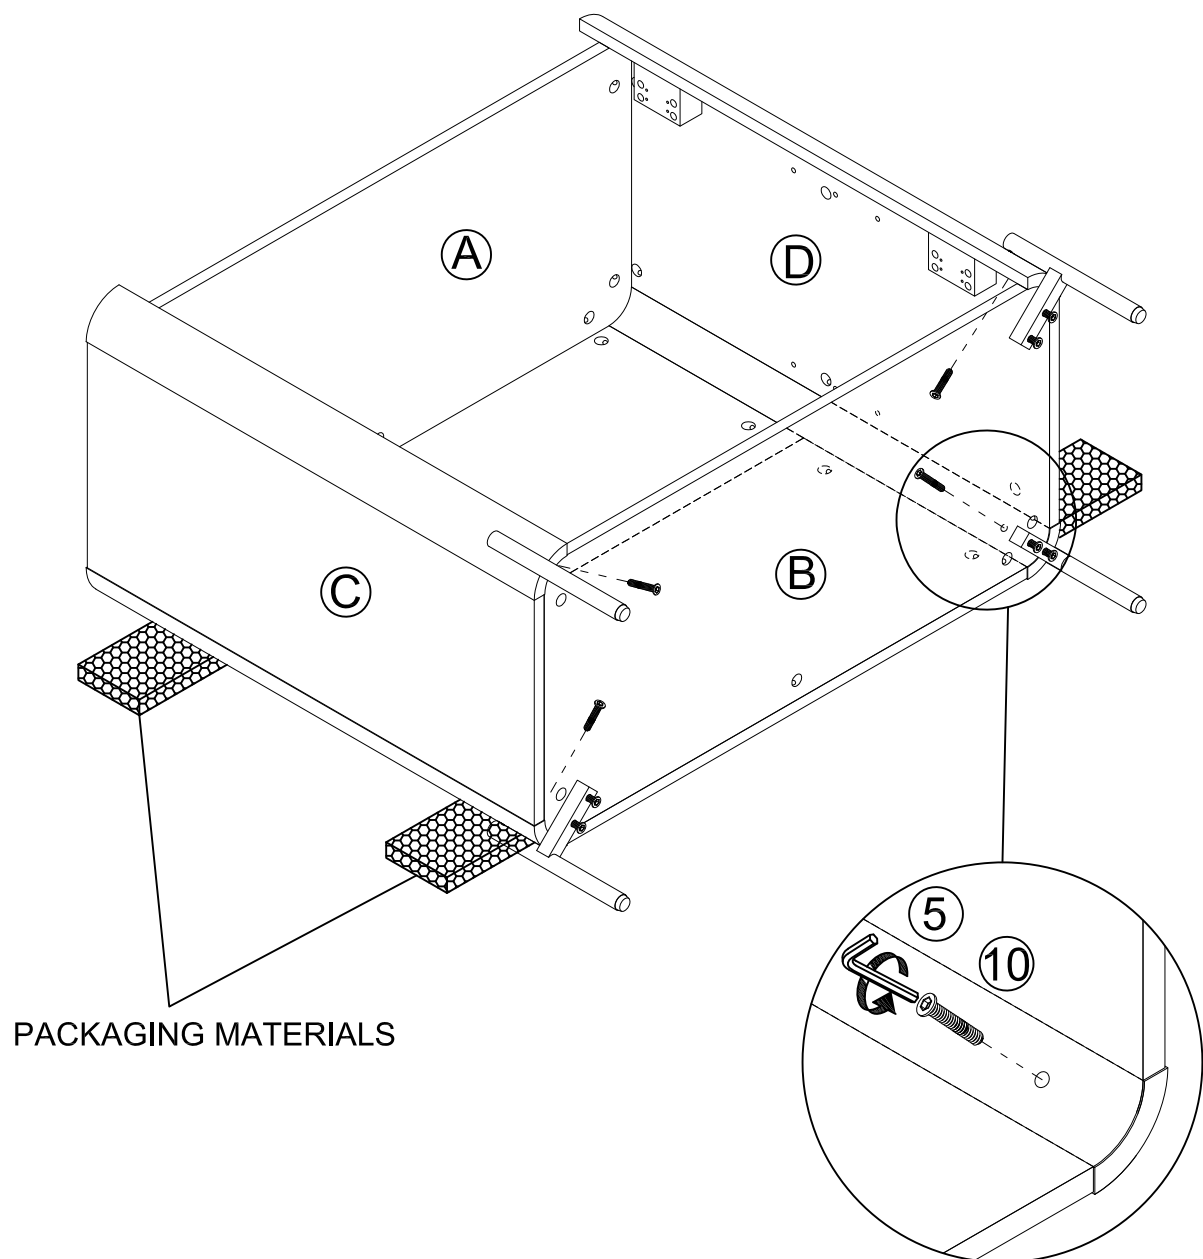

Note:Do tighten all Bolts.


Step 11:

* Use LOCK (5) tighten all Bolts .

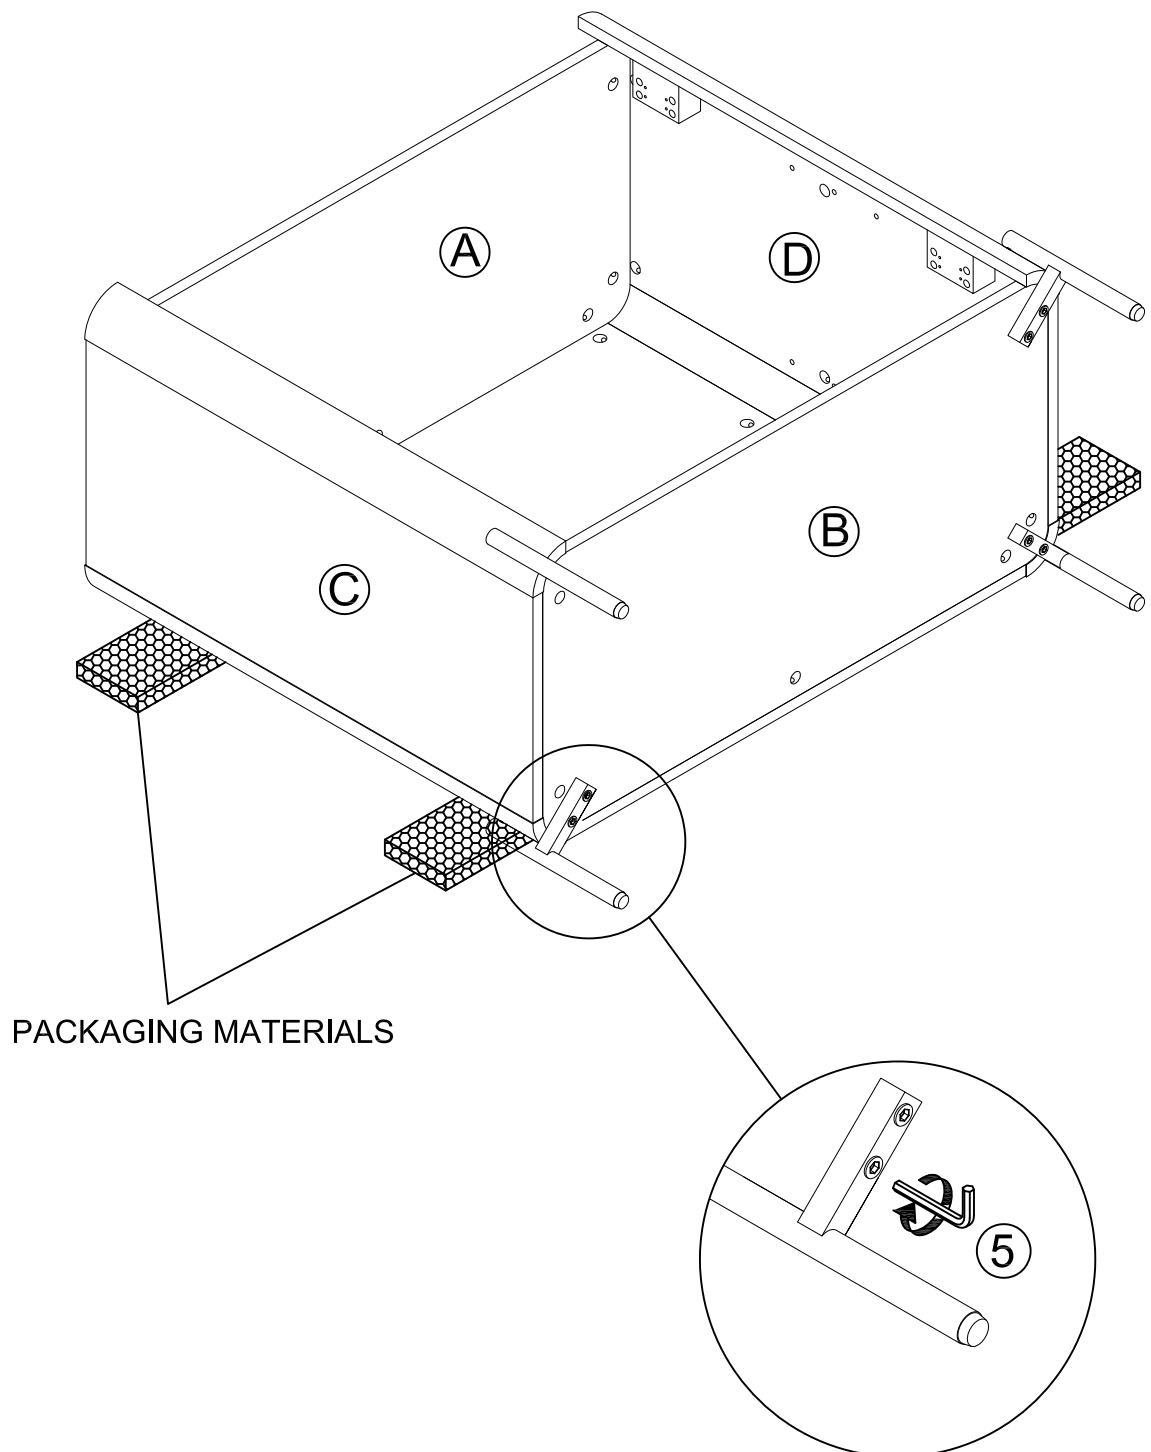



Step 12:

* Insert Four SHELF PEGS (6) into the Sideboard and put on the One SHELF PANEL (H) .

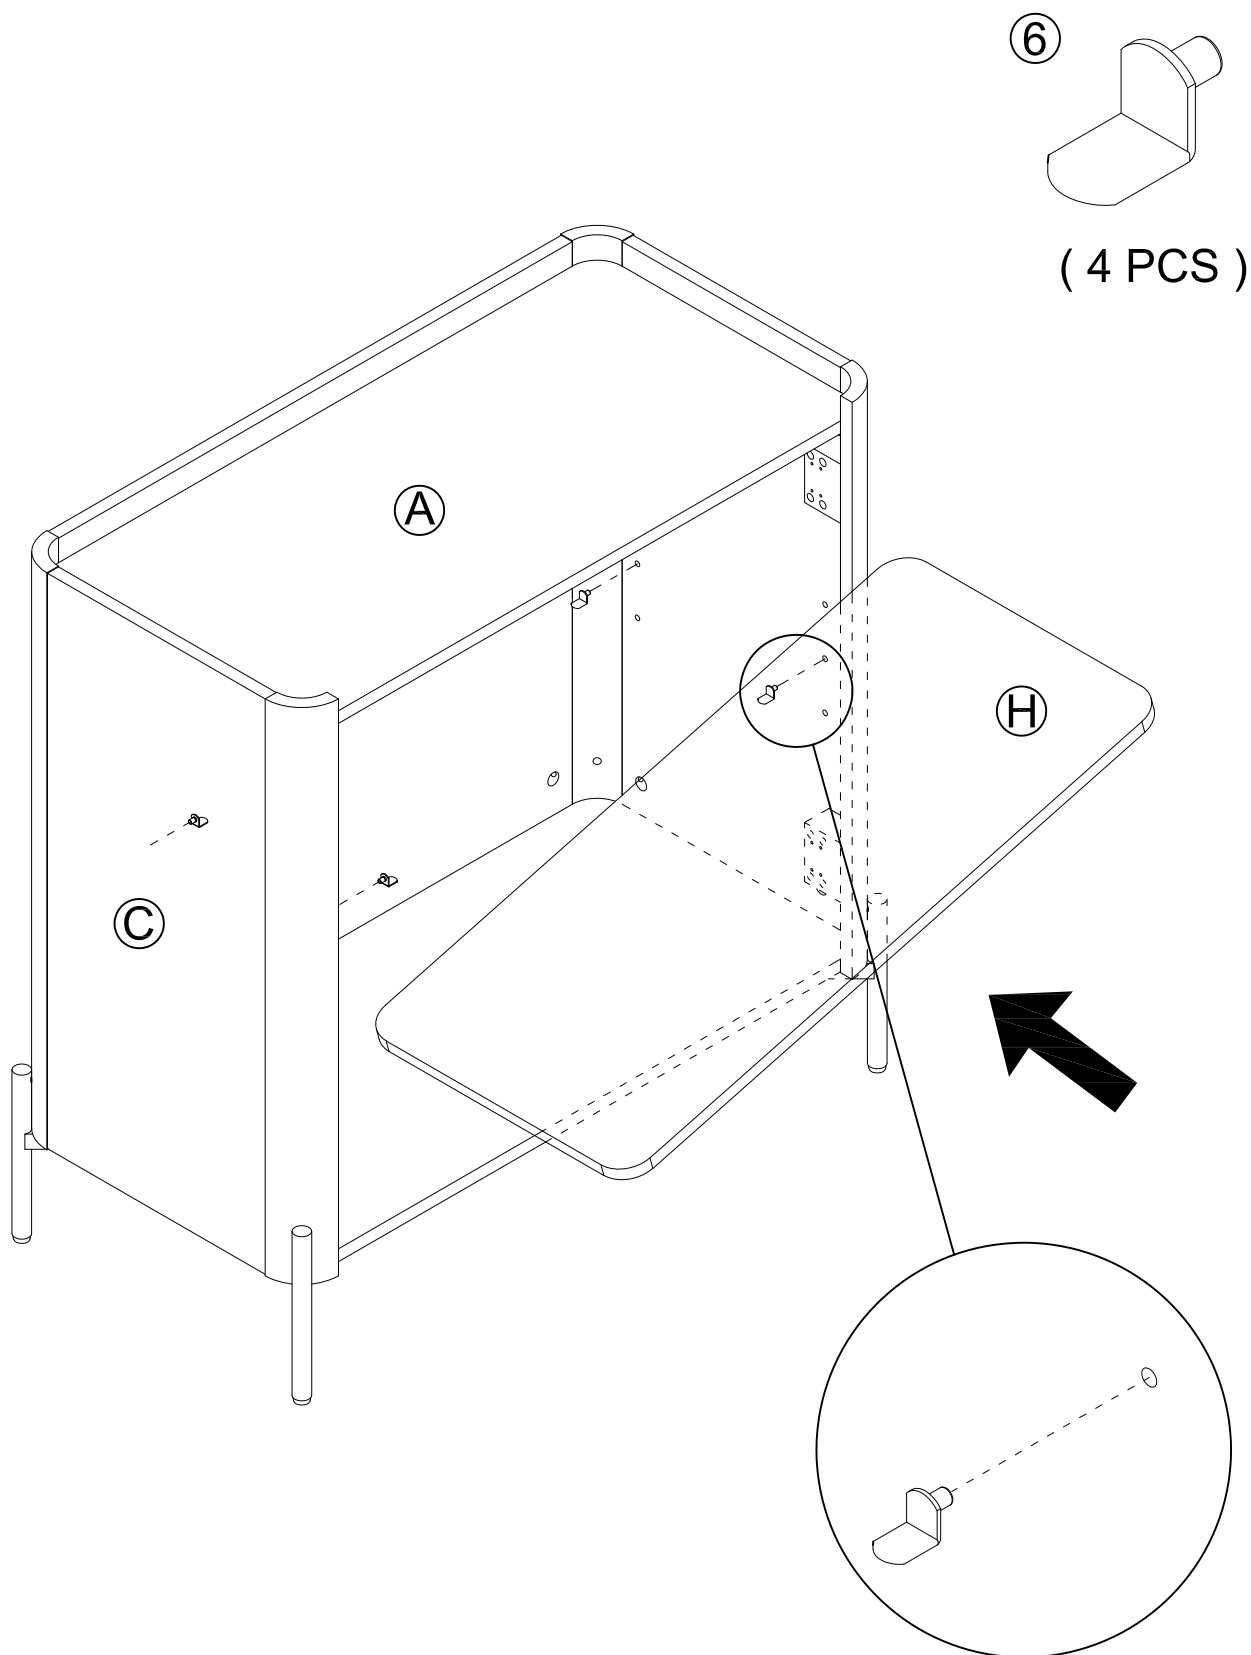

Step 13:

*** Attach HINGE (8) and SCREW (9) to the Two DOOR (E)**


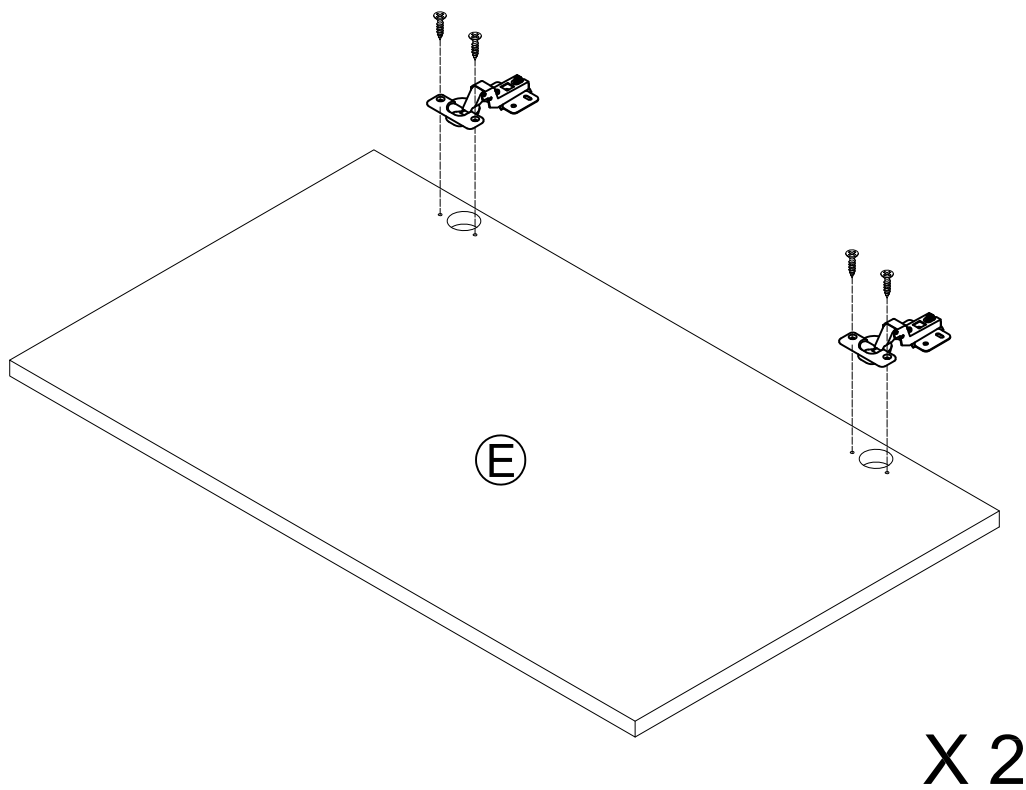
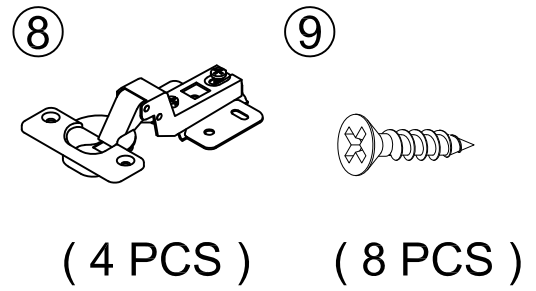


Step 14:

* Carefully stand your unit upright.


Fasten the DOORS (E) to the LEFT PANEL (C) and RIGHT PANEL (D) .

* Note : The hinges should be hooked first from the top to the middle and lower hinge combinations in the "PRESS" order . Note that the hinge leaf must be inserted into the slot along the angle.

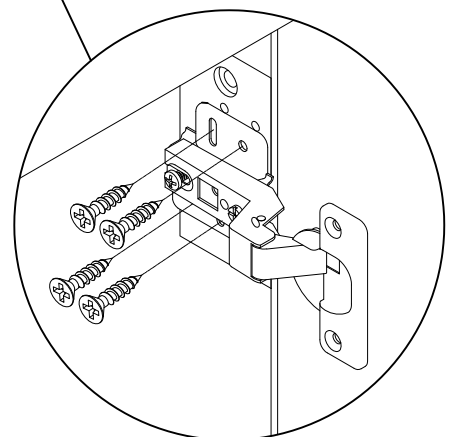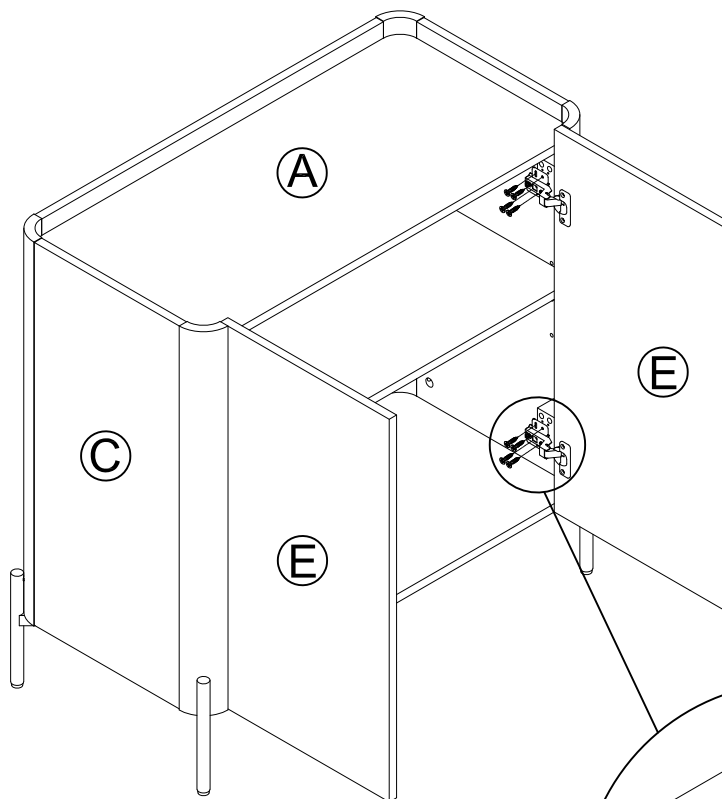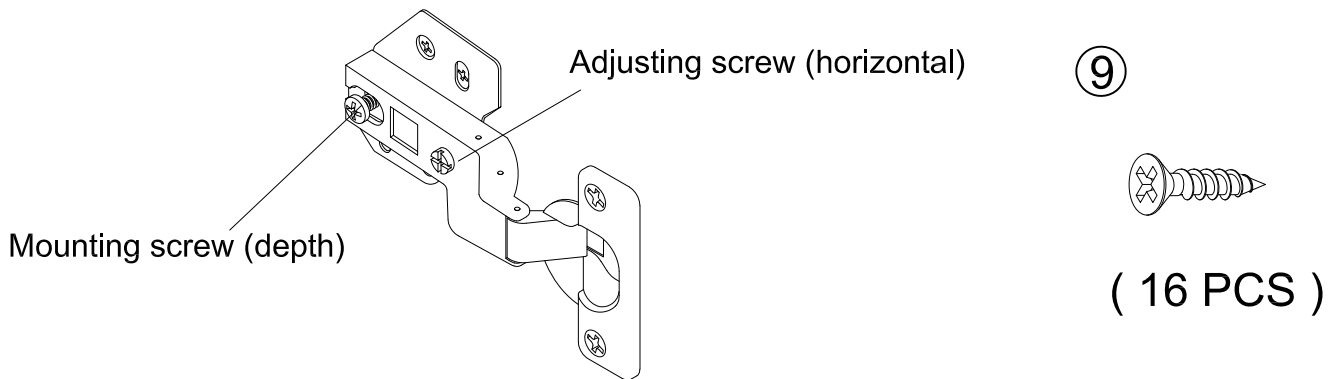

Step 15:

* Attach anti-tipping straps to the back of the stand.

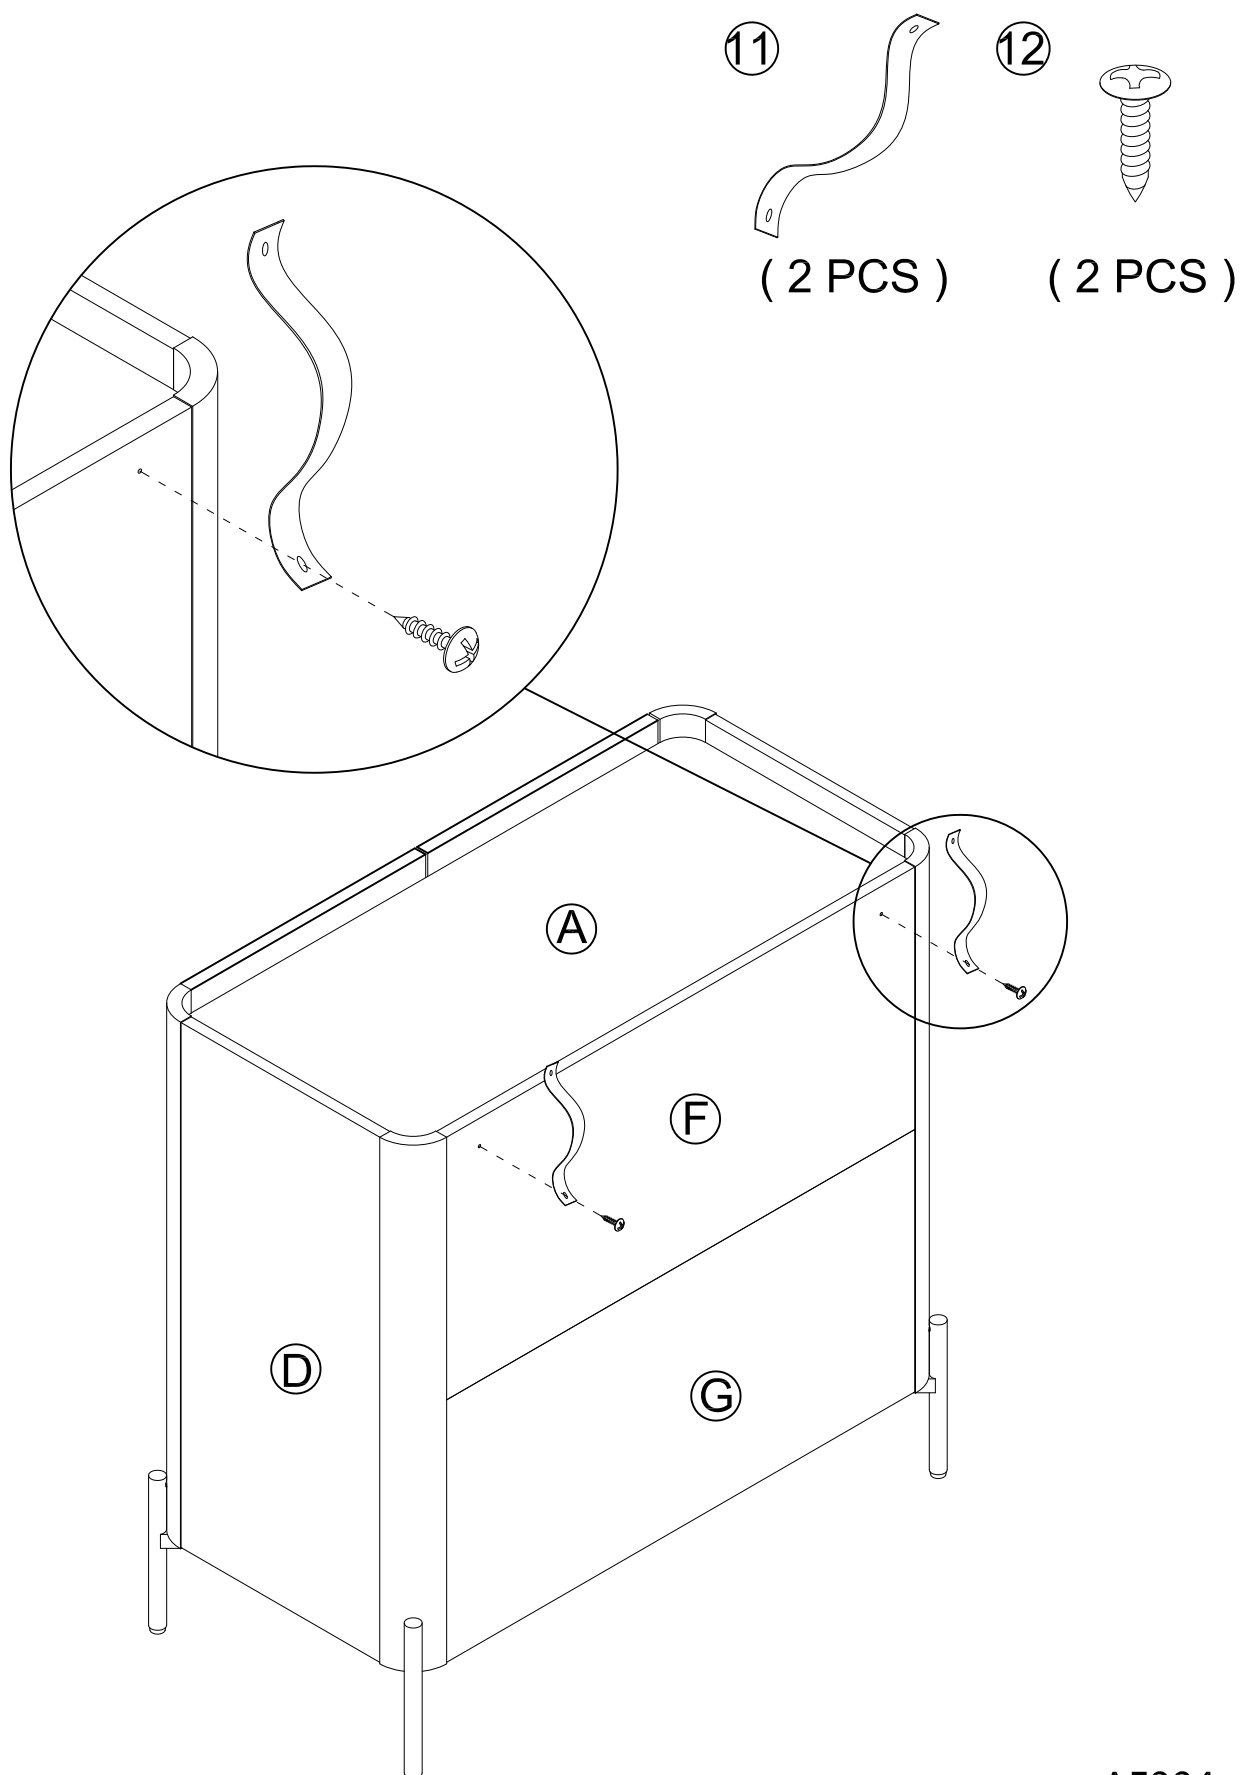

Step 16:


1st- With your pencil, strike a mark through the center of the hole in the SAFETY STRAP.

2nd- Drill a 3/8" hole on the mark.

3rd- FURNITURE TIPPING RESTRAINT KIT (15) into the hole until it is even with the surface of the wall.

4th- Turn the LONG SCREW through the hole in the SAFETY STRAP and into the WALL ANCHOR.

NOTE: You will need to turn the LONG SCREW multiple turns to completely tighten and secure your unit.

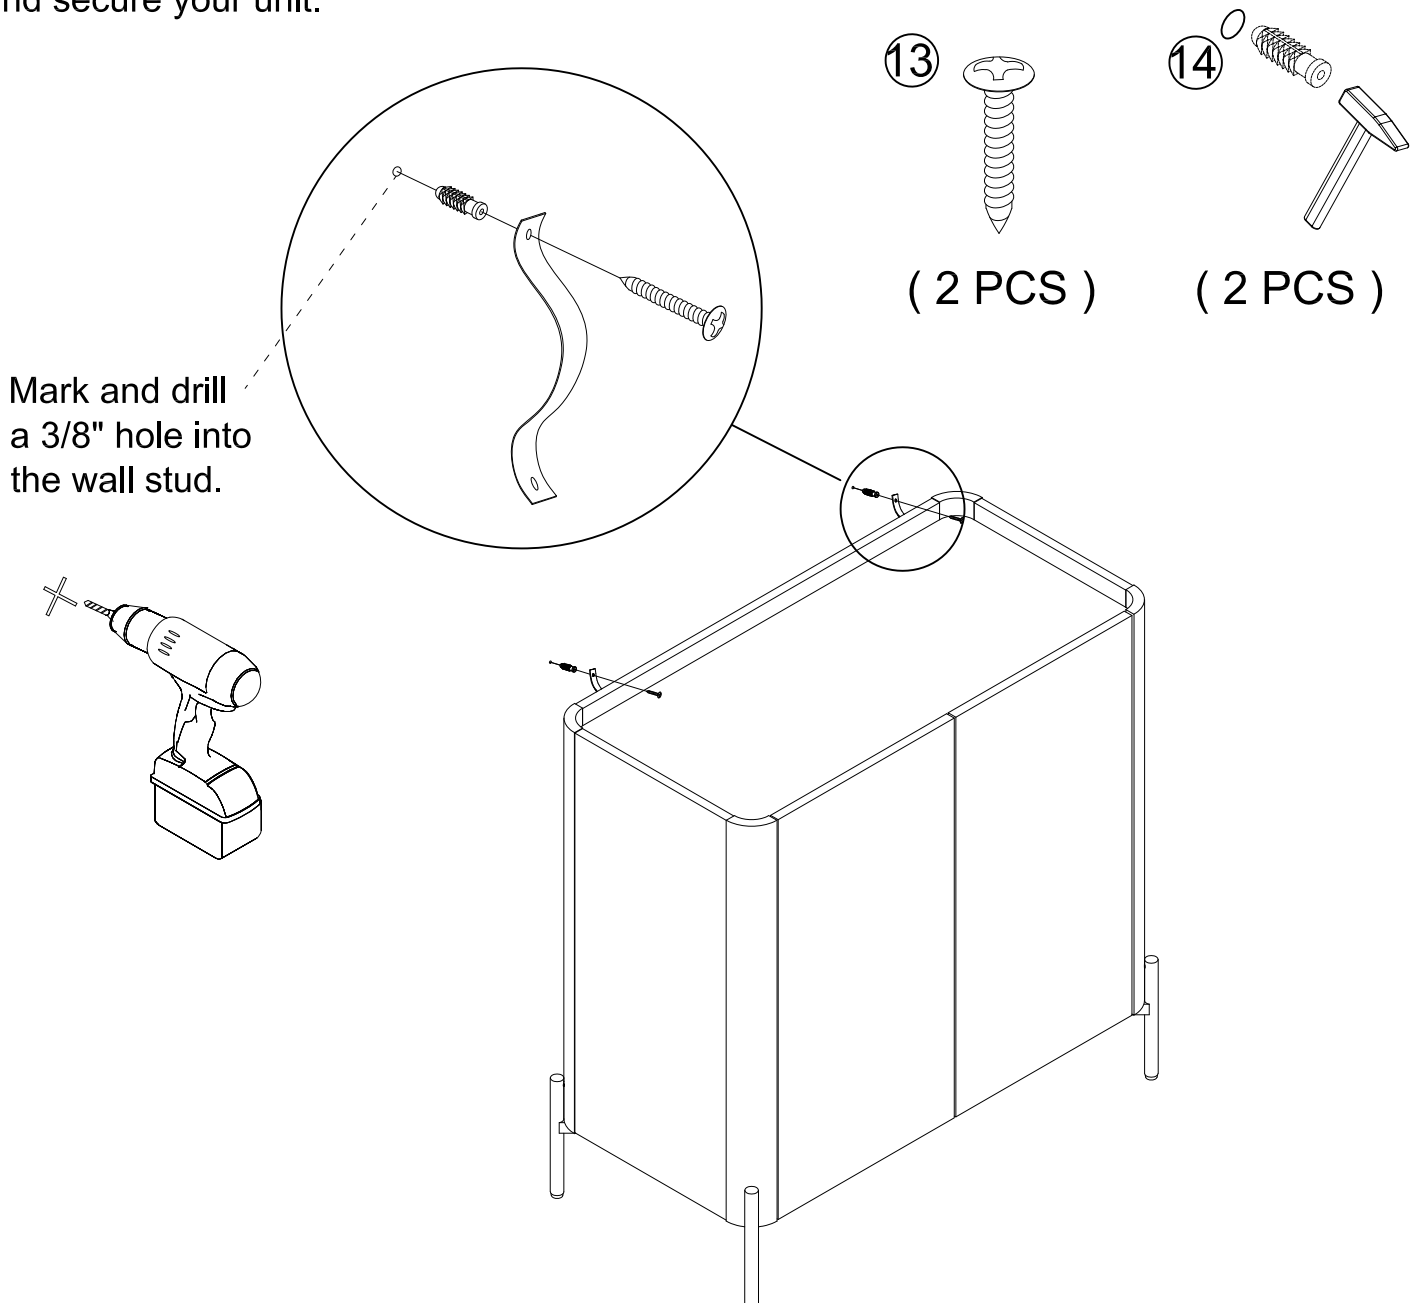



MANHATTAN COMFORT

WARRANTY POLICY

All Manhattan Comfort furniture products are warranted, to the original purchaser at the time of purchase and for a period of 30 days thereafter.

Our warranty is limited to new products purchased in factory sealed cartons. This warranty is valid in the United States of America and Canada.

In order to provide you with timely assistance, please thoroughly inspect your furniture for missing or defective parts immediately after opening the carton.

Manhattan Comfort offers a 30-day parts replacement warranty on all items.

Our furniture products are not intended for outdoor use.

THE WARRANTY DOES NOT COVER:

Defects/damages by improper assembly or disassembly.

-Defects/damages caused by inappropriate use of the furniture.




319 Ridge Rd. Dayton, NJ 08810
908-888-0818



**MANHATTAN
COMFORT**

SB006

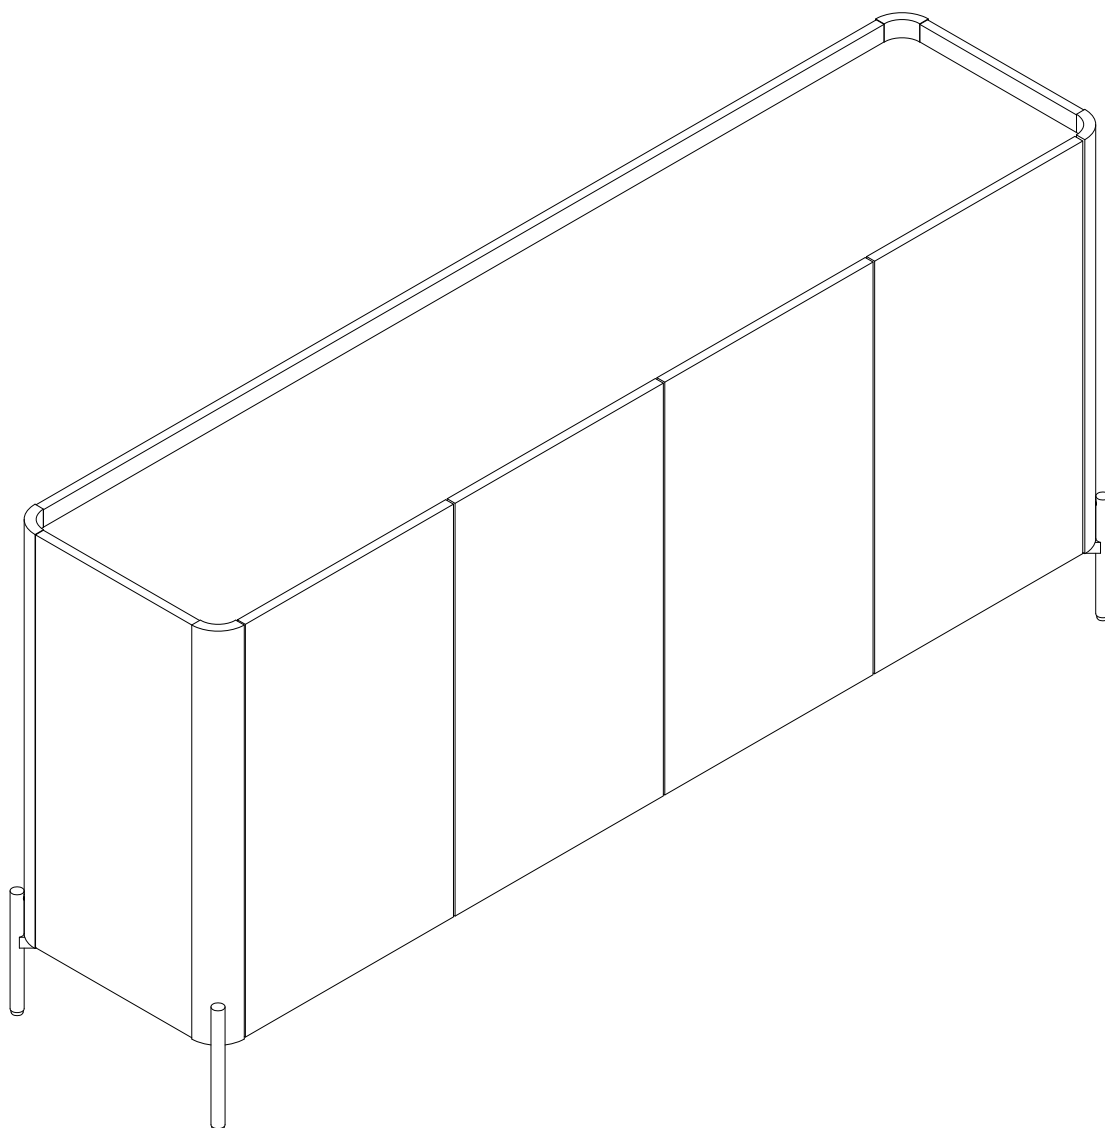

V.08202024







STOP!


Before beginning the assembly process,
ensure all boxes and parts have been delivered.

FOR BEST RESULTS:

- Do not throw away packaging materials until assembly is complete.
- Assemble item on a soft surface, such as cardboard or carpet, to protect finish.
- Proper assembly requires two people.

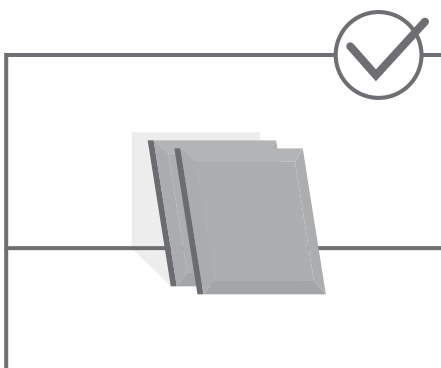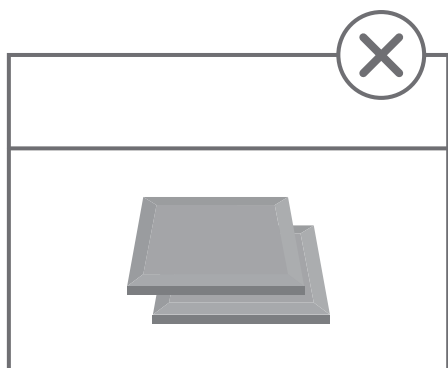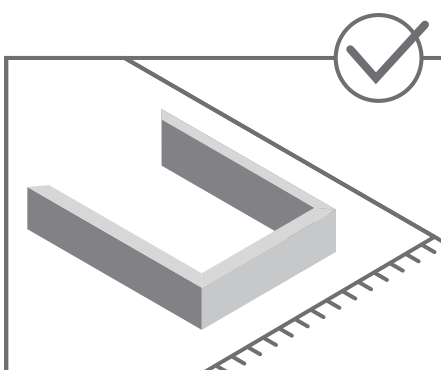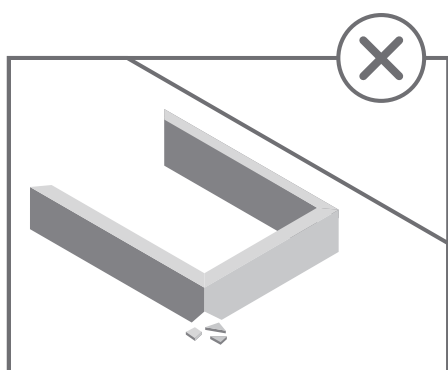

TOOLS REQUIRED

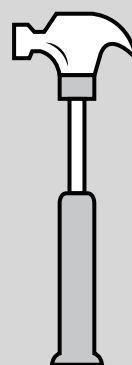

View our assembly video online:
WWW.MANHATTANCOMFORT.COM




Stuck? Question? We are here to help.
tel: 908-888-0818
e-mail: help@manhattancomfort.com

Support Site



Included in this package:

- A. TOP (1)
- B. BOTTOM (1)
- C. LEFT PANEL (1)
- D. RIGHT PANEL (1)
- E. MEDIAN PANEL (1)
- F. TOP BACK PANEL (1)
- G. BOTTOM BACK PANEL (1)
- H. SHELF PANEL (2)
- I. LEFT MIDDLE DOOR ,
LEFT RIGHT DOOR(3)
- J. RIGHT MIDDLE DOOR(1)
- K. BACK LEFT STRIP (1)
- L. BACK RIGHT STRIP (1)

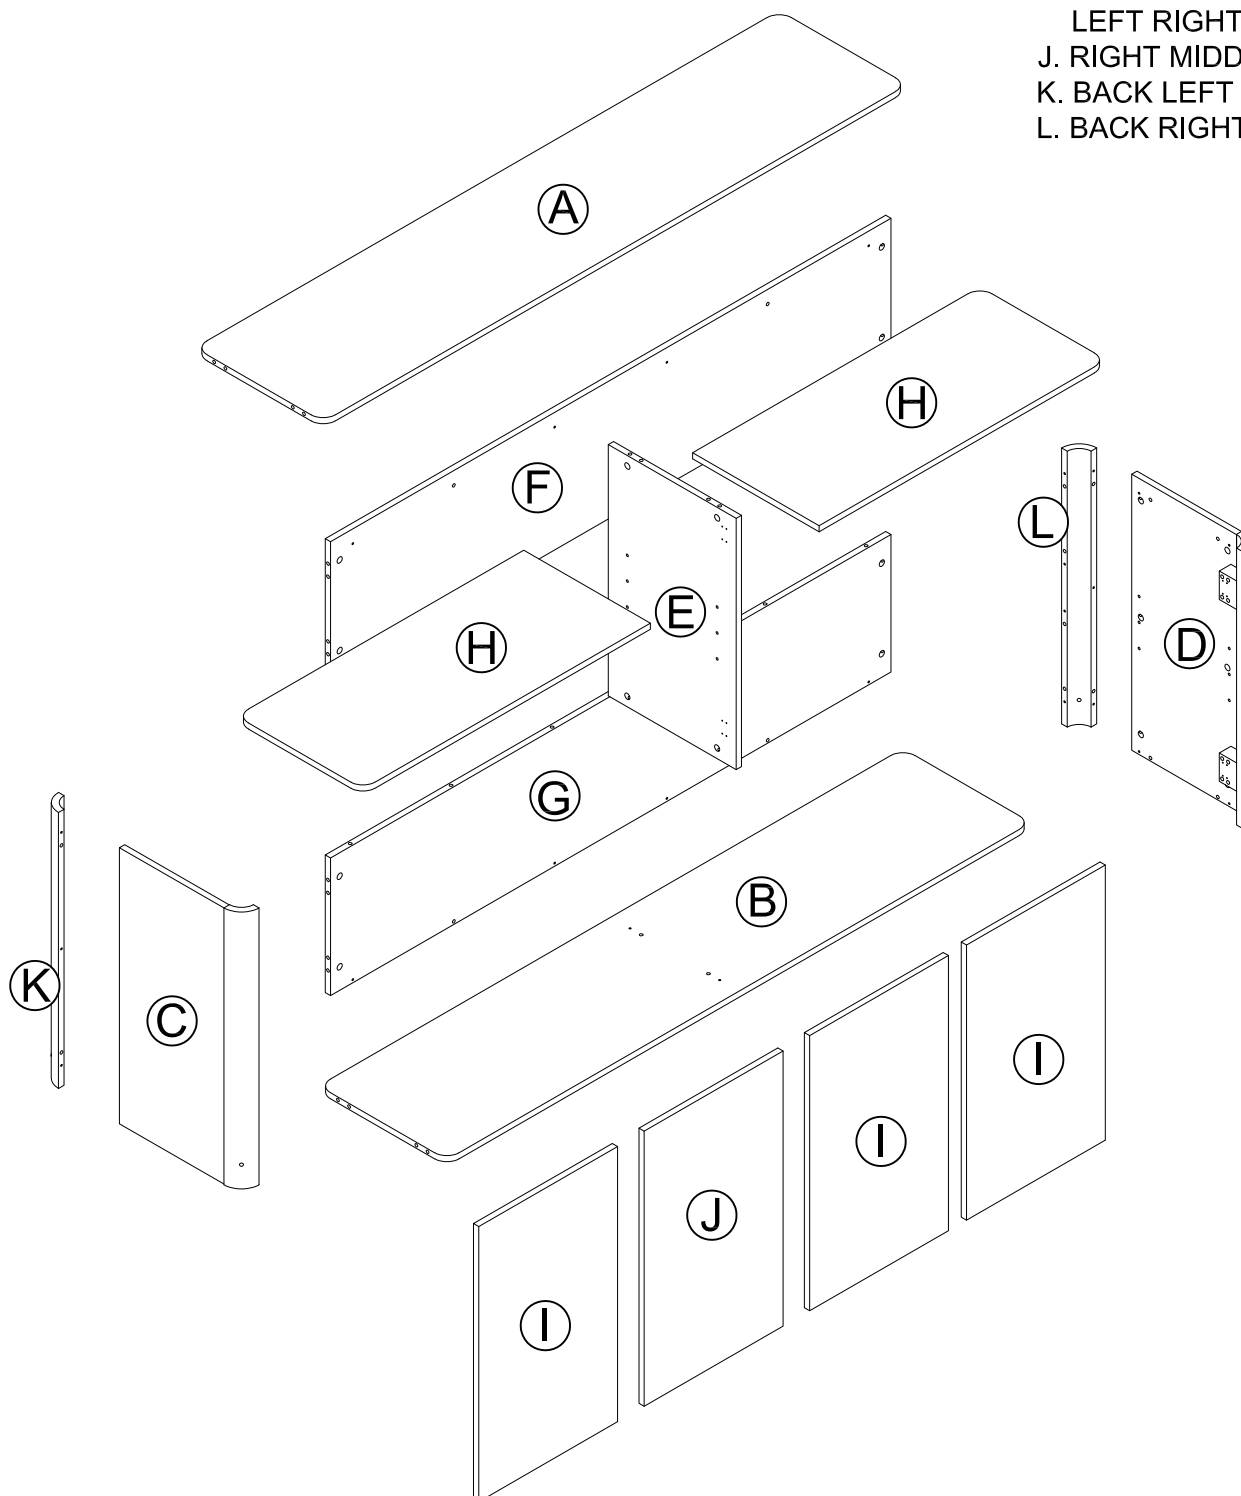


Hardware Identification


- ① KD BOLT - 34pcs
L=25mm




- ② KD CAM - 34pcs
Ø15*11mm




- ③ COVER CAP - 34pcs




- ④ WOOD DOWEL - 34pcs
Ø8*30mm




- ⑤ LOCK - 1pc




- ⑥ SHELF PEGS - 8pcs

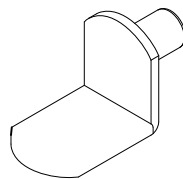

- ⑦ HINGE - 4pcs




- ⑧ HINGE - 4pcs

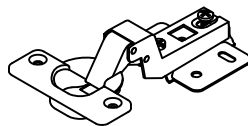


- ⑨ SCREW - 48pcs
Ø4*14mm




- ⑩ IRON PLATE - 1pc




- ⑪ MEDIAN LEG - 1pc




- ⑫ LEGS - 4pcs




- ⑬ BOLT - 5pcs
M6*12mm




- ⑭ BOLT - 12pcs
M6*28mm




- ⑮ STRAPS - 2pcs

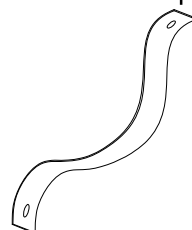

- ⑯ SCREW - 2pcs
Ø4*18mm




- ⑰ SCREW - 2pcs
Ø4*25mm




- ⑱ PLASTIC - 2pcs



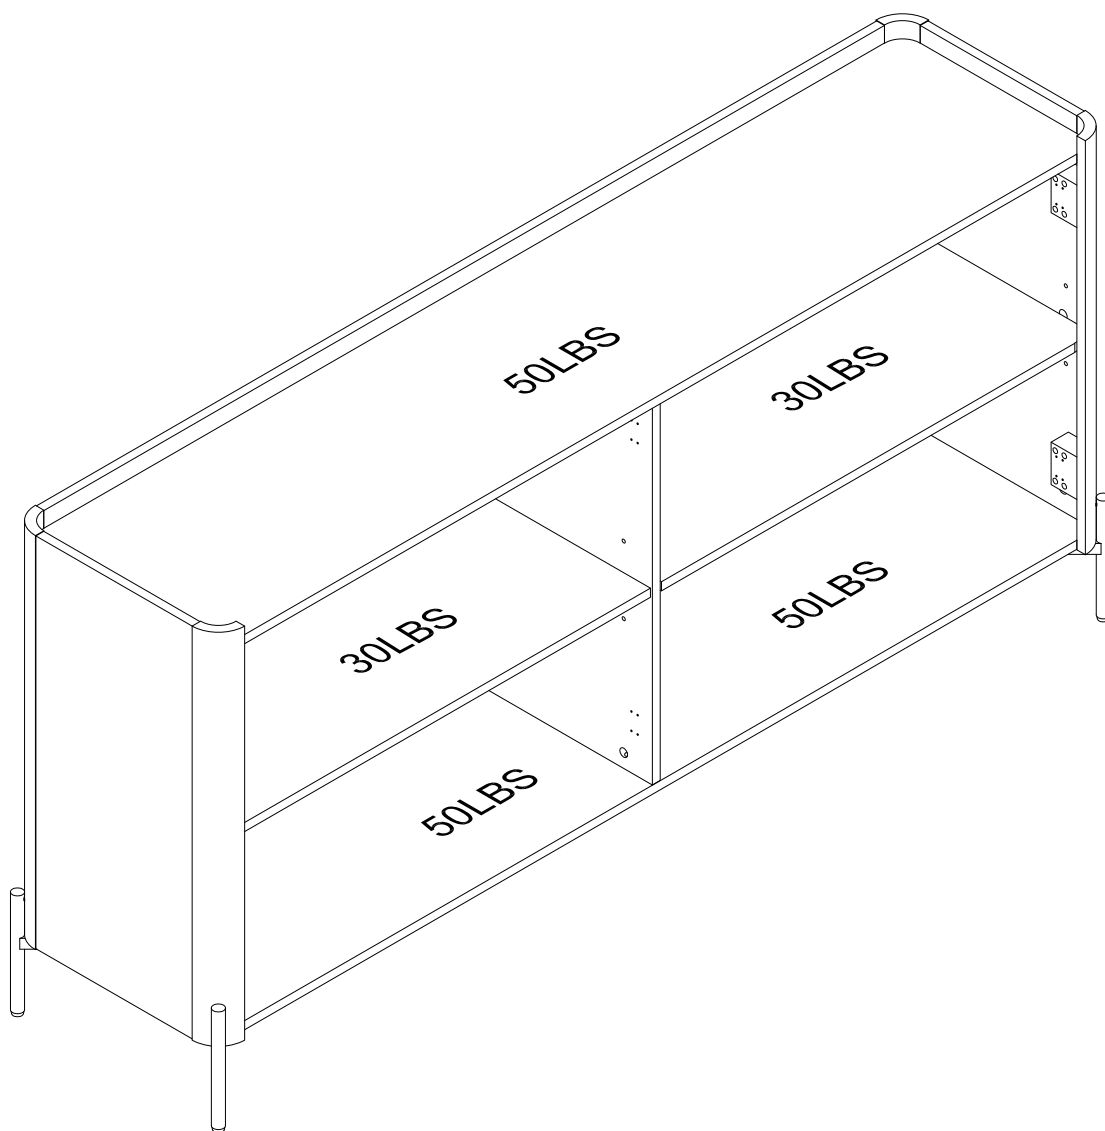



Step 1:

* Insert Fourteen KD BOLT (1) to the BACK LEFT STRIP (K) and BACK RIGHT STRIP (L).

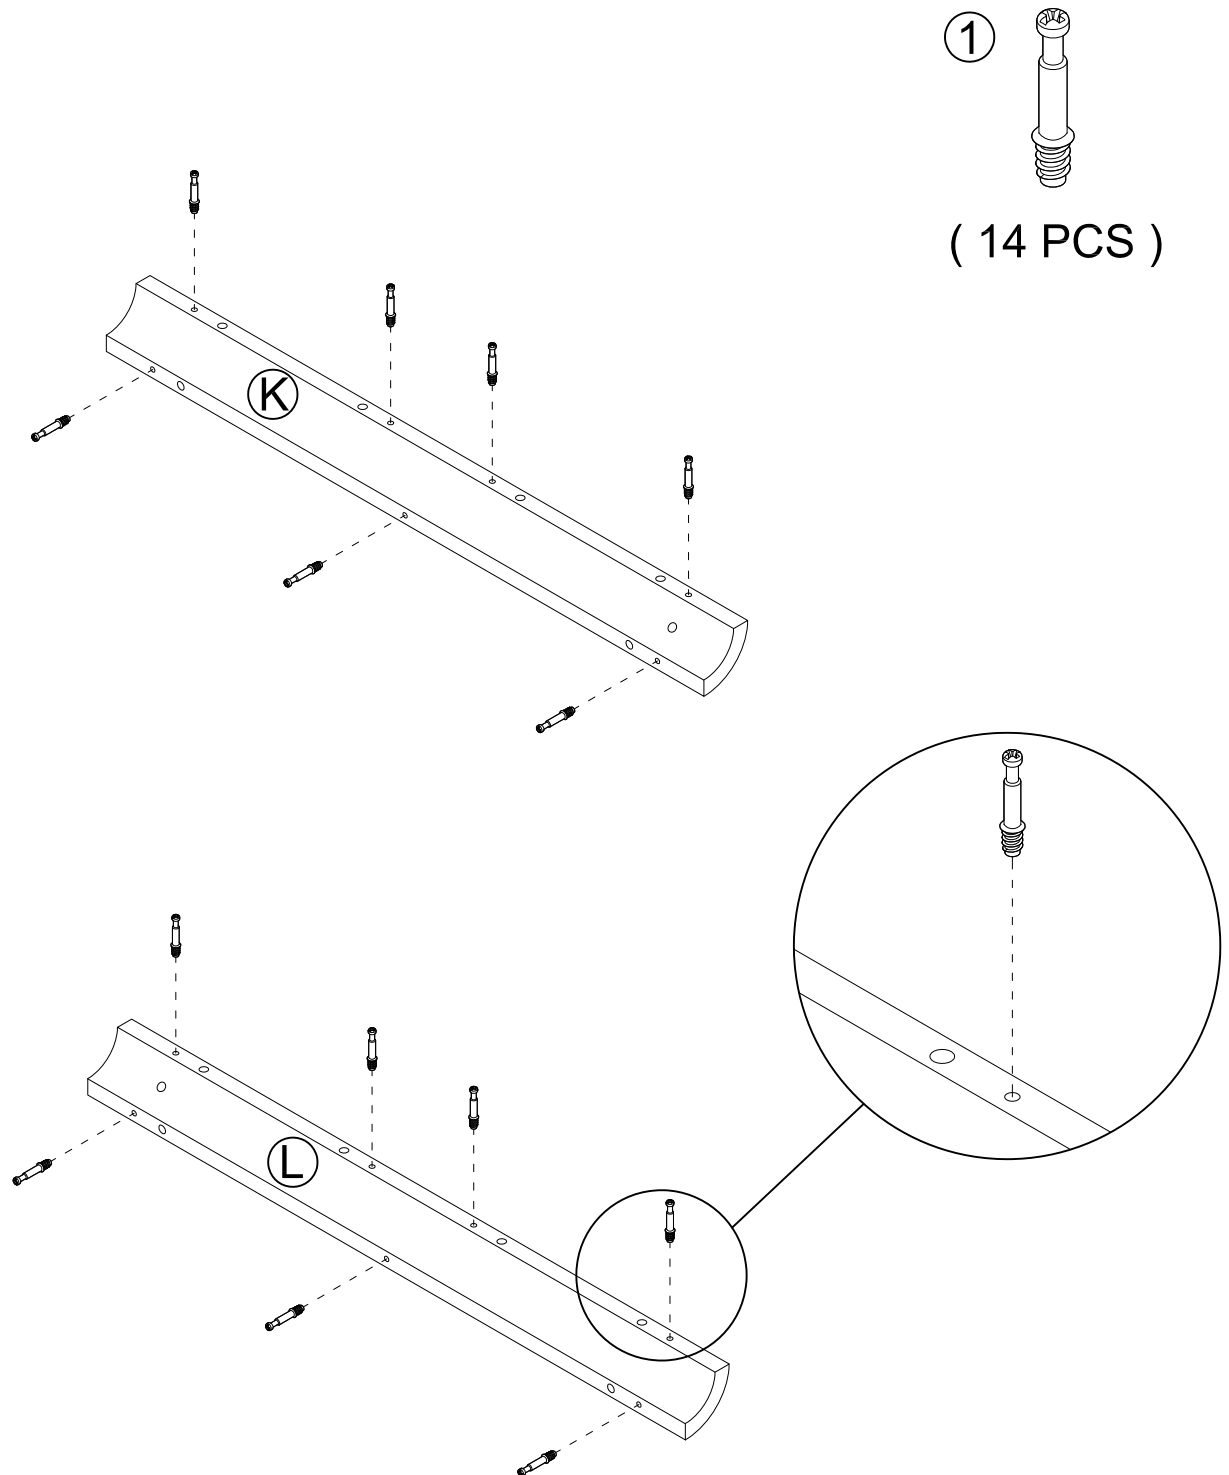


Step 2:

- * Attach the BACK LEFT STRIP (K) to the LEFT PANEL (C) by the Three KD CAM (2) , Three COVER CAP (3) ,and Two WOOD DOWEL (4) .
- * Attach the BACK RIGHT STRIP (L) to the RIGHT PANEL (D) by the Three KD CAM (2) , Three COVER CAP (3) ,and Two WOOD DOWEL (4) .

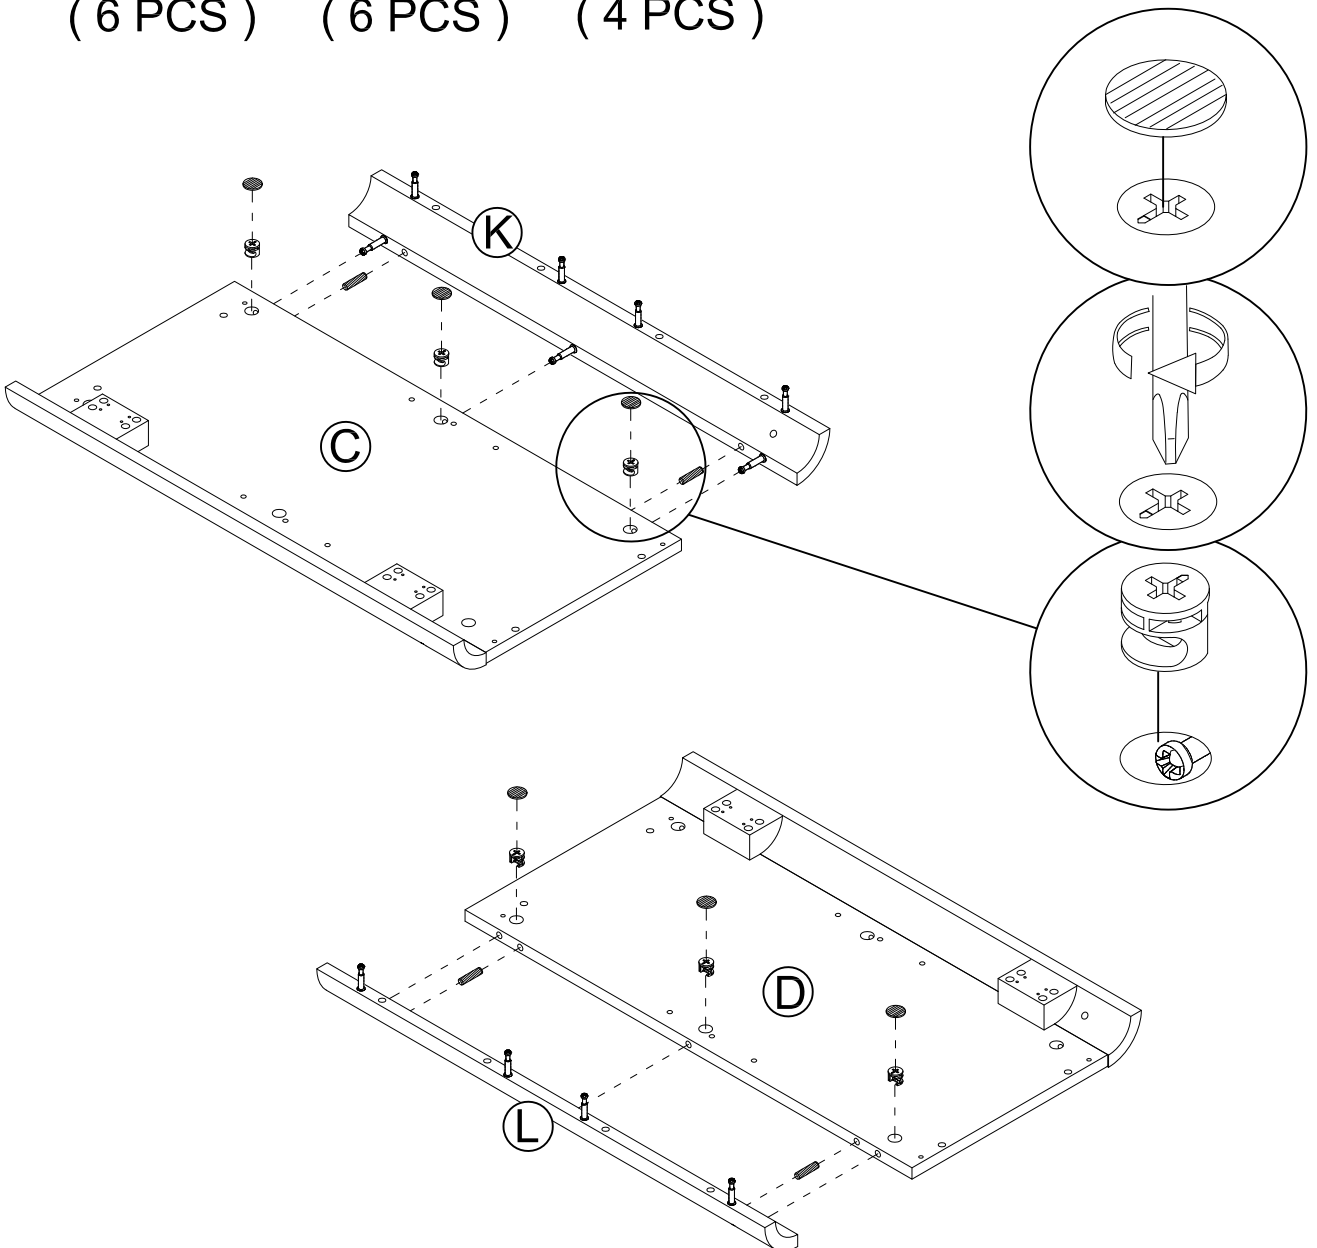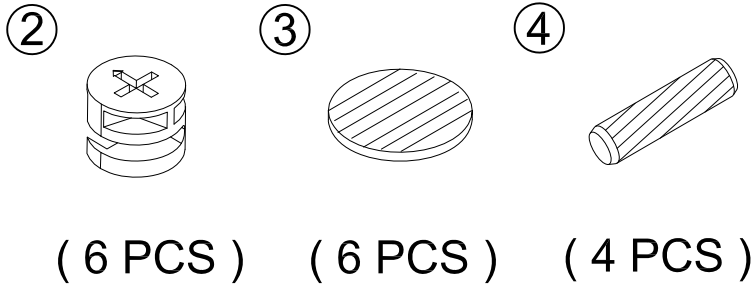


Step 3:

* Insert Eight KD BOLT (1) to the LEFT PANEL (C) and RIGHT PANEL (D).

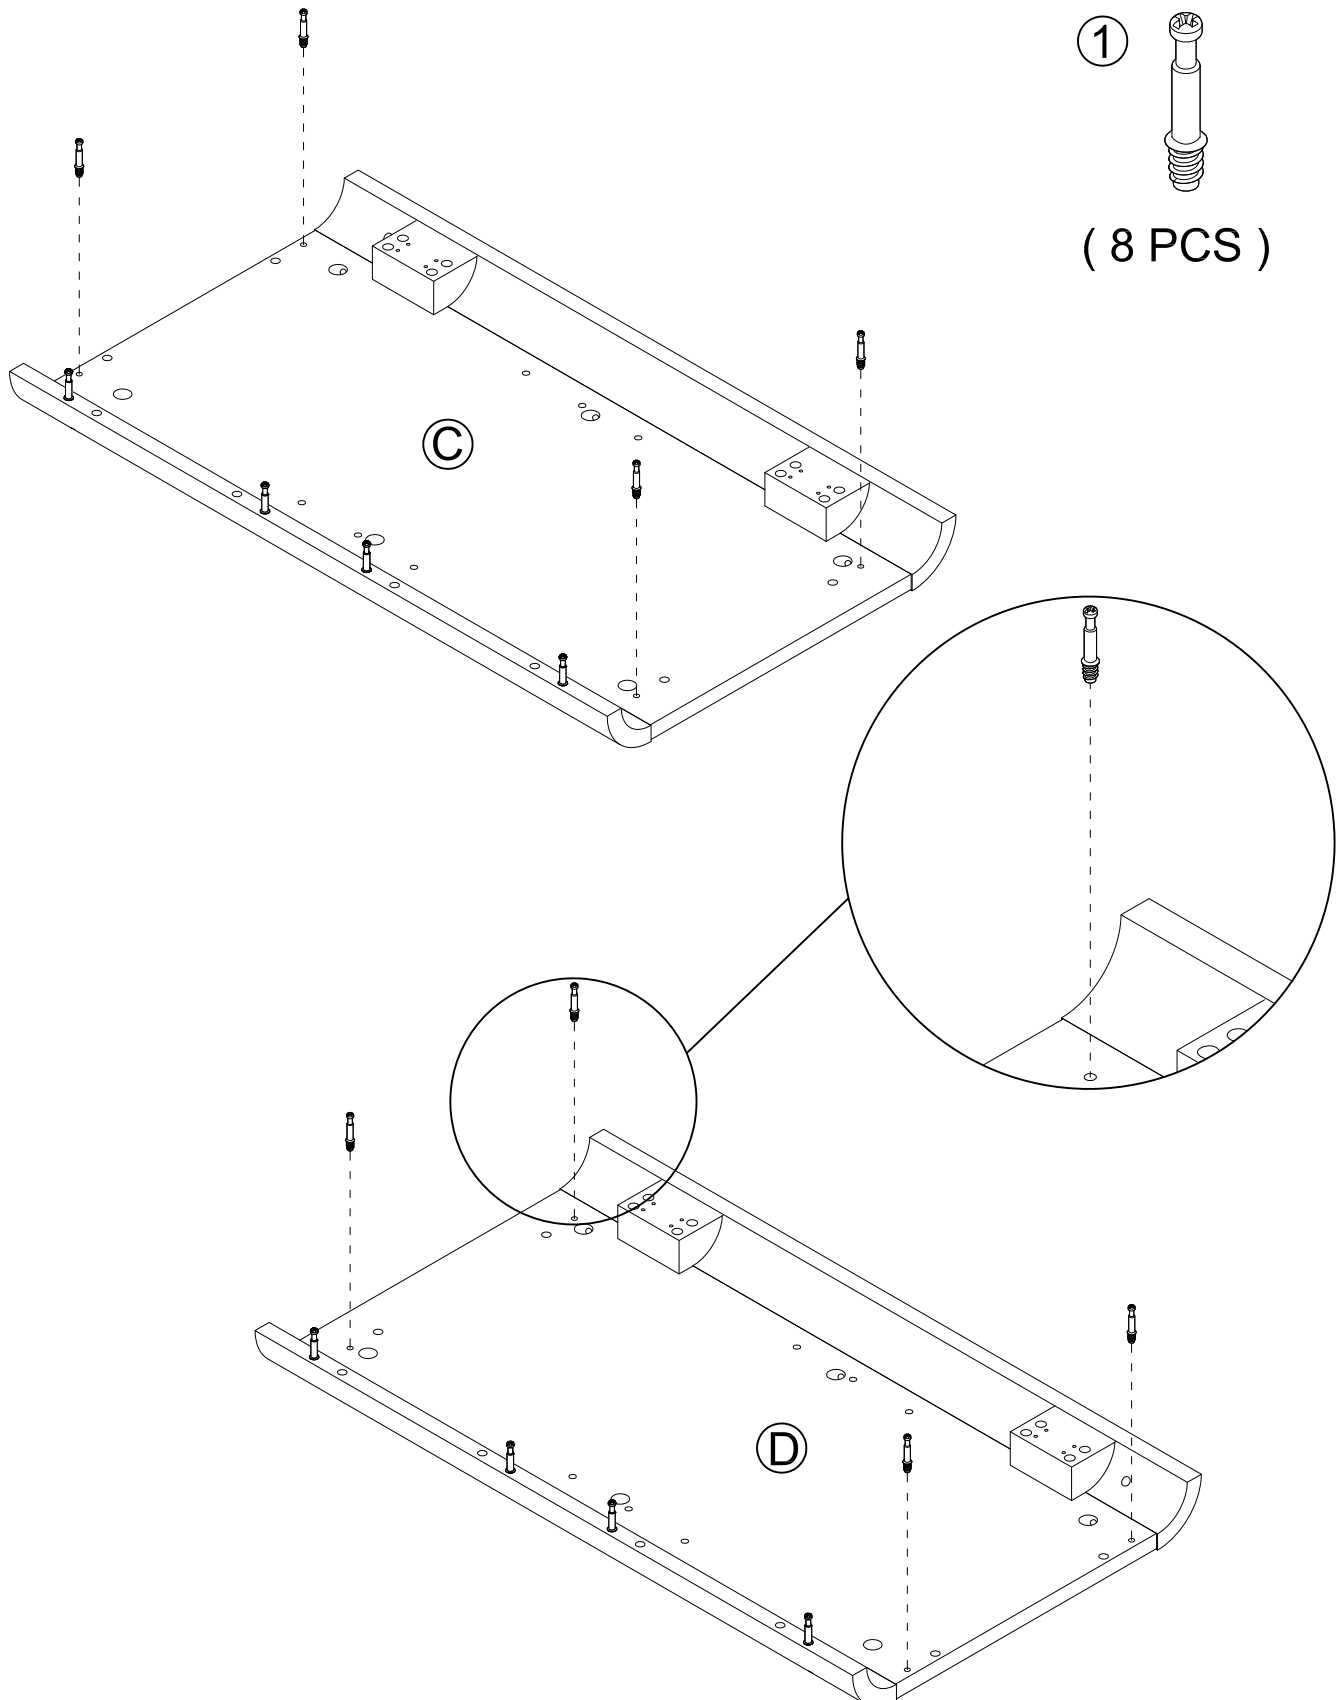

Step 4:


* Insert Twelve KD BOLT (1) to the TOP (A) , BOTTOM (B) ,TOP BACK PANEL (F) and BOTTOM BACK PANEL (G).

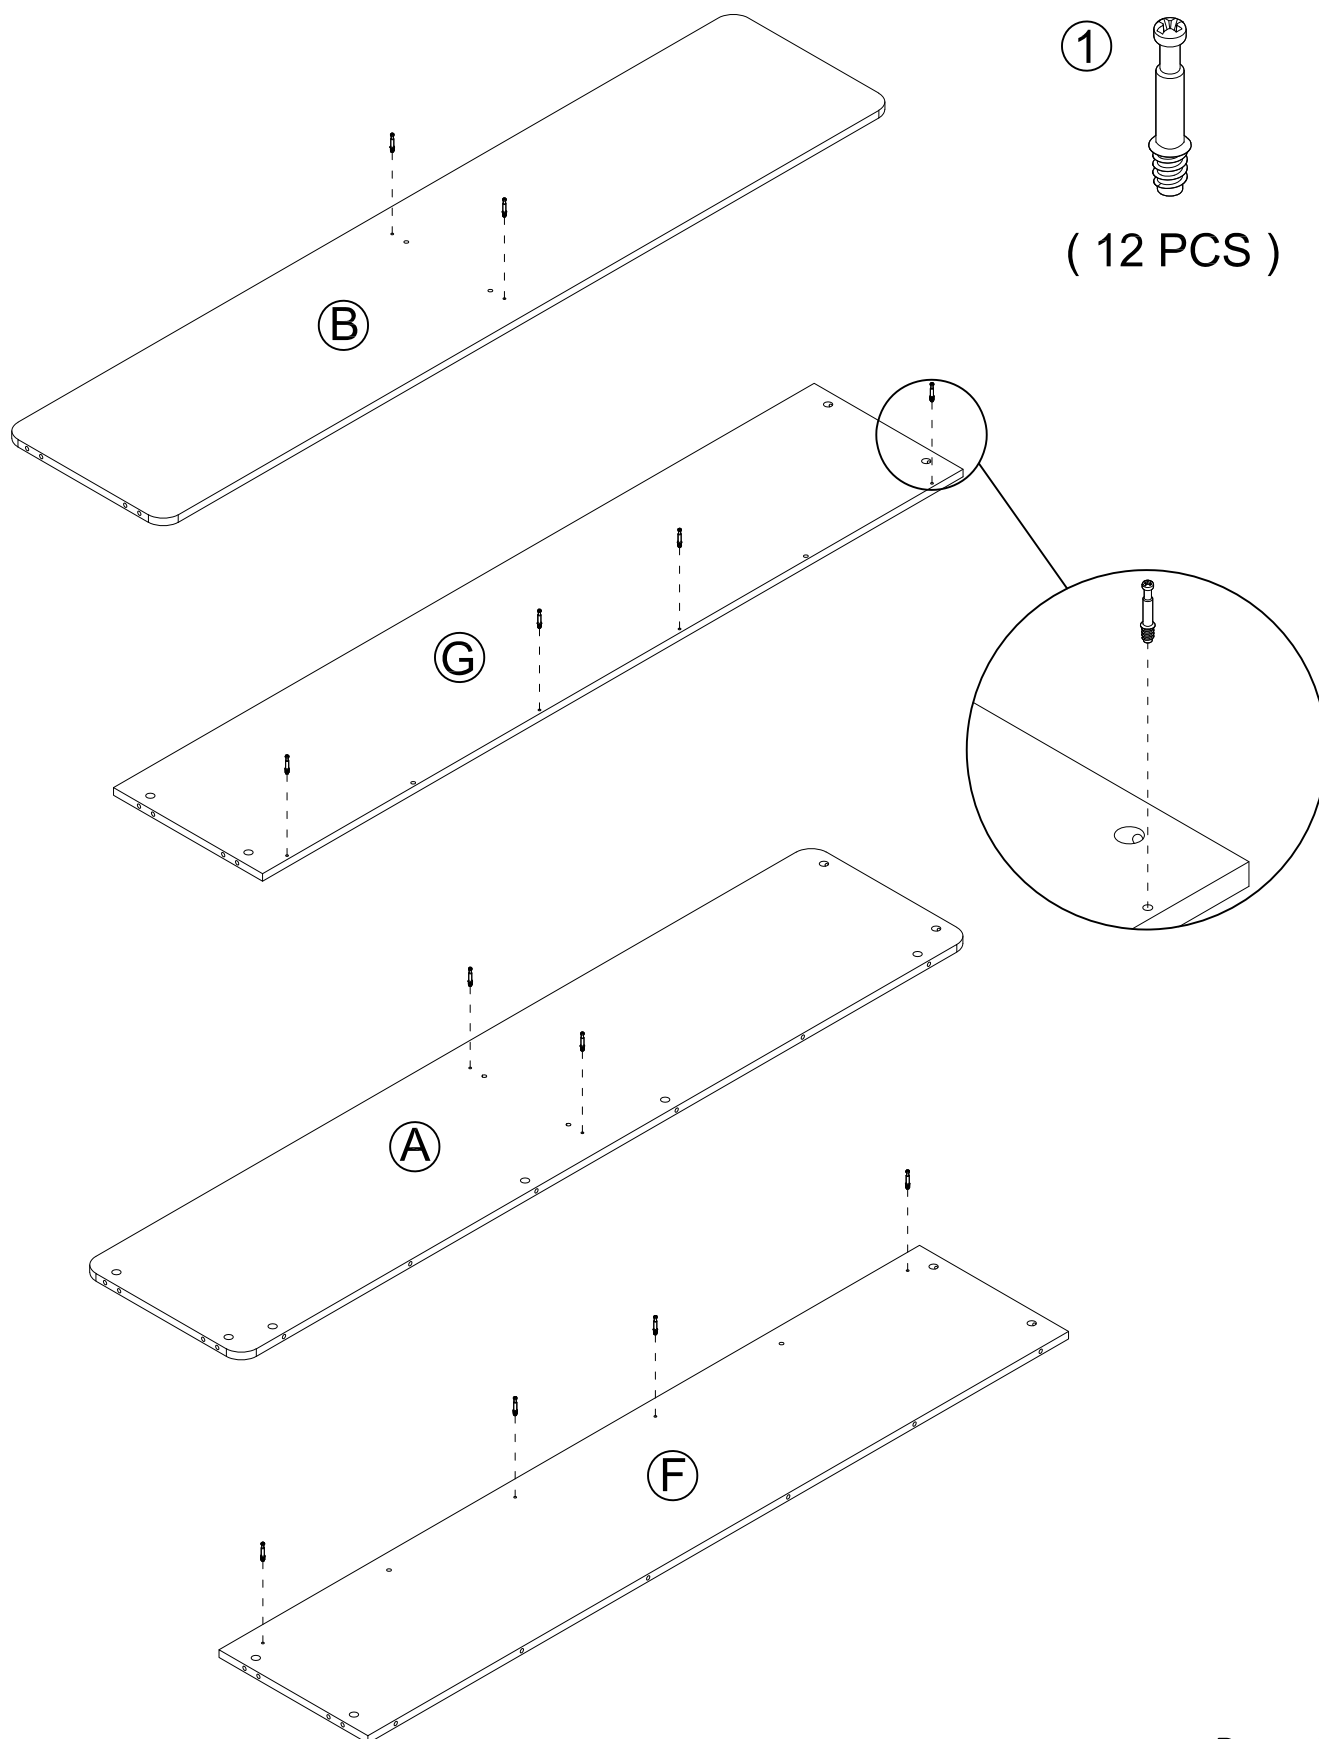

Step 5:


* Attach the BOTTOM (B) to the BOTTOM BACK PANEL (G) by the Four KD CAM (2) , Four COVER CAP (3) ,and Two WOOD DOWEL (4) .

②




(4 PCS)

③




(4 PCS)

④




(2 PCS)

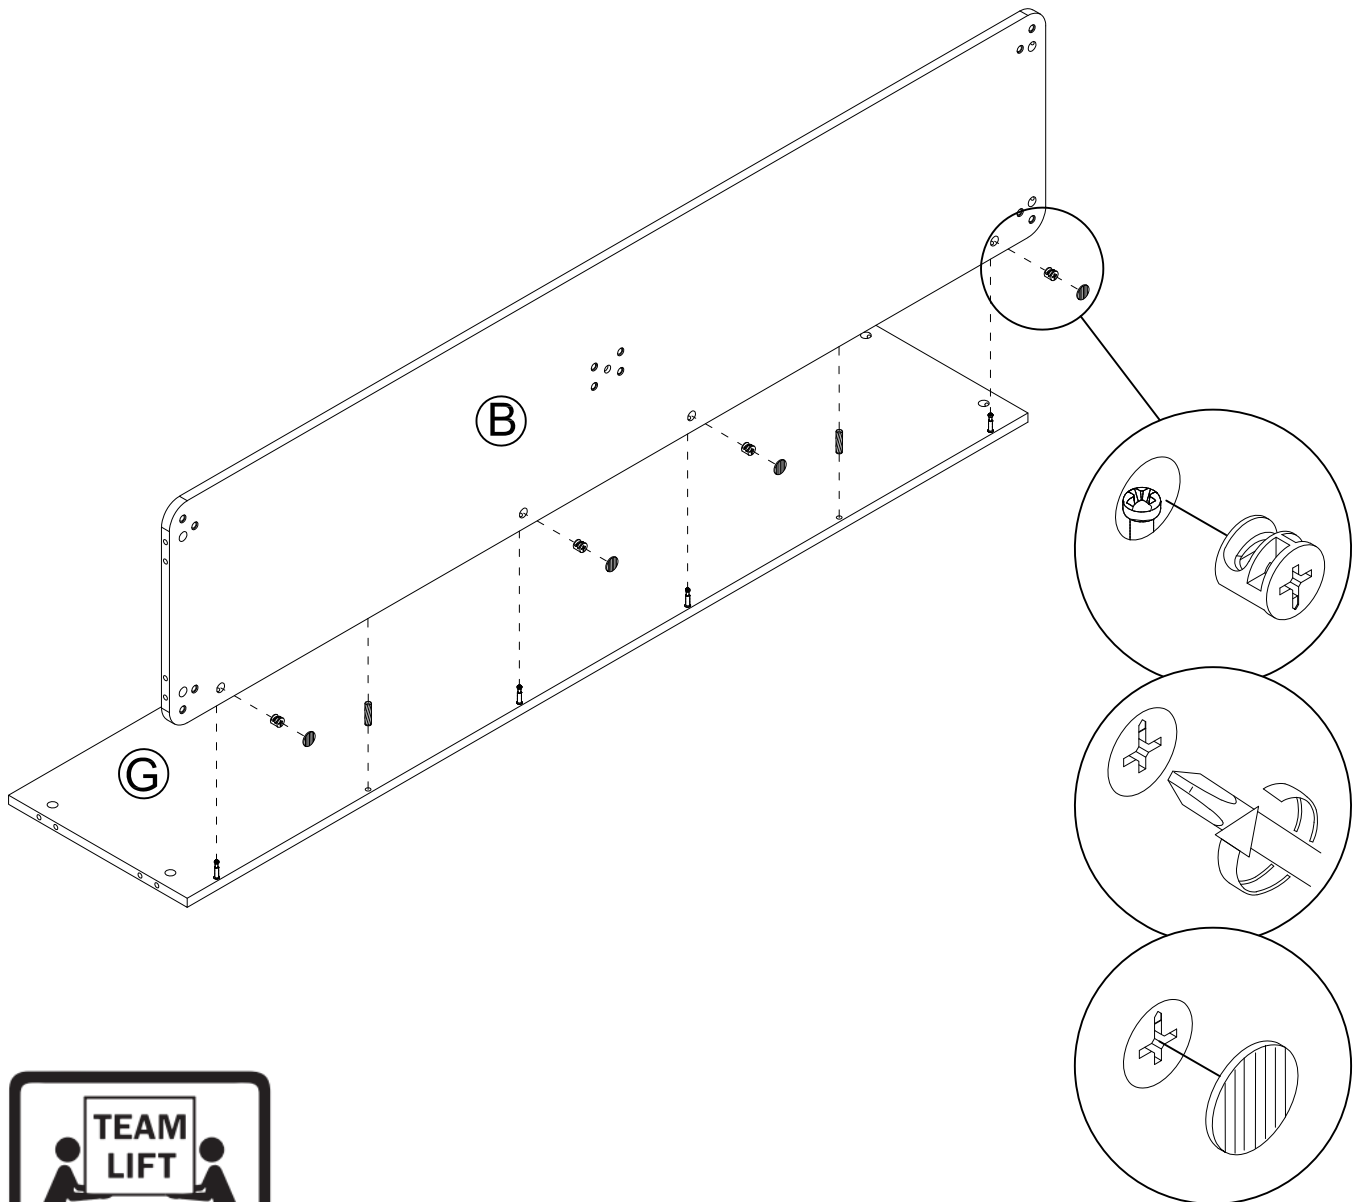

Step 6:


* Attach the MEDIAN PANEL (E) to the BOTTOM (B) by the
Two KD CAM (2) , Two COVER CAP (3) ,and Two WOOD DOWEL (4) .

②




(2 PCS)

③




(2 PCS)

④




(2 PCS)

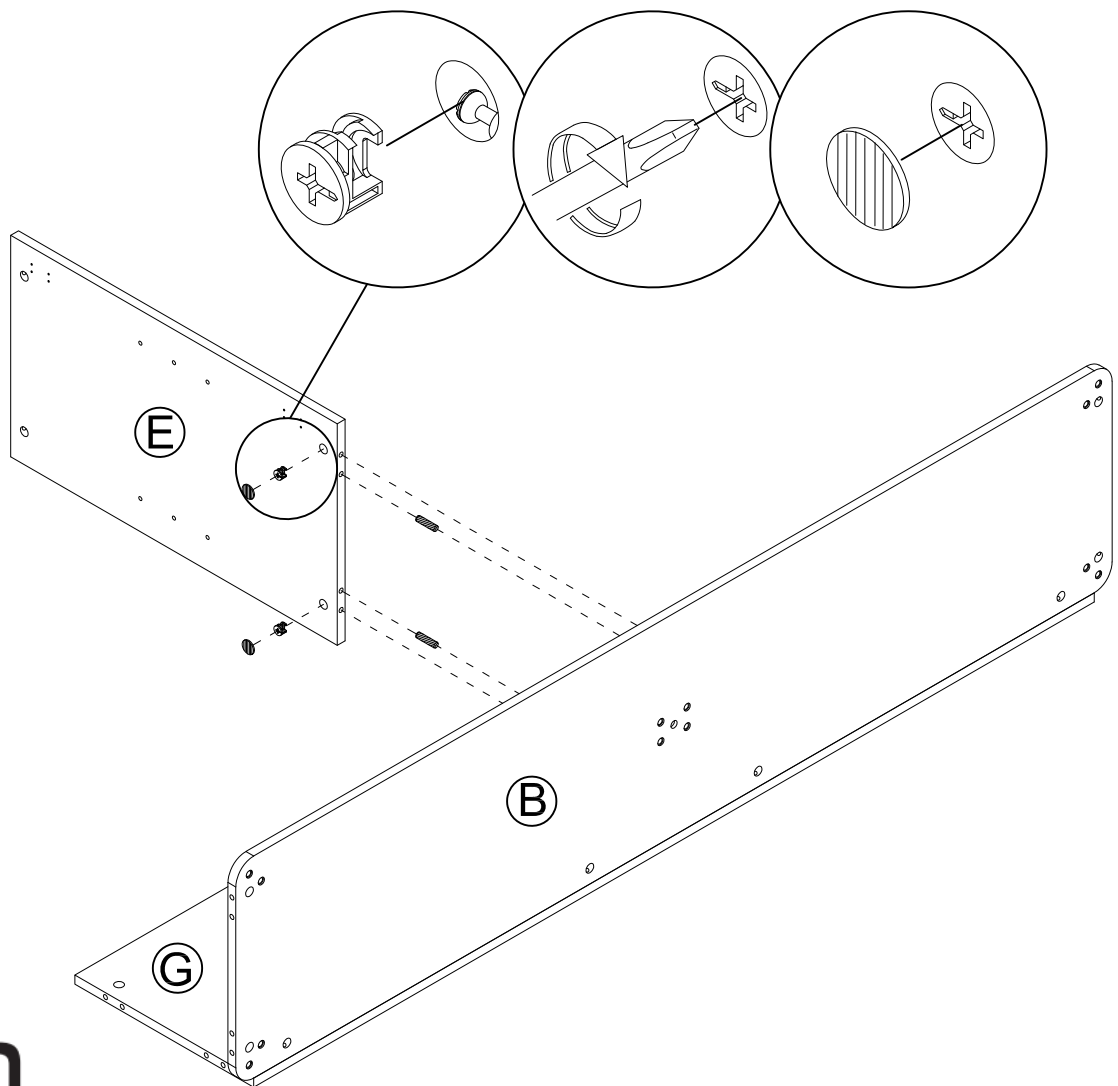

Step 7:


* Attach the TOP (A) to the TOP BACK PANEL (F) by the Four KD CAM (2) , Four COVER CAP (3) ,and Two WOOD DOWEL (4) .

②




(4 PCS)

③




(4 PCS)

④




(2 PCS)

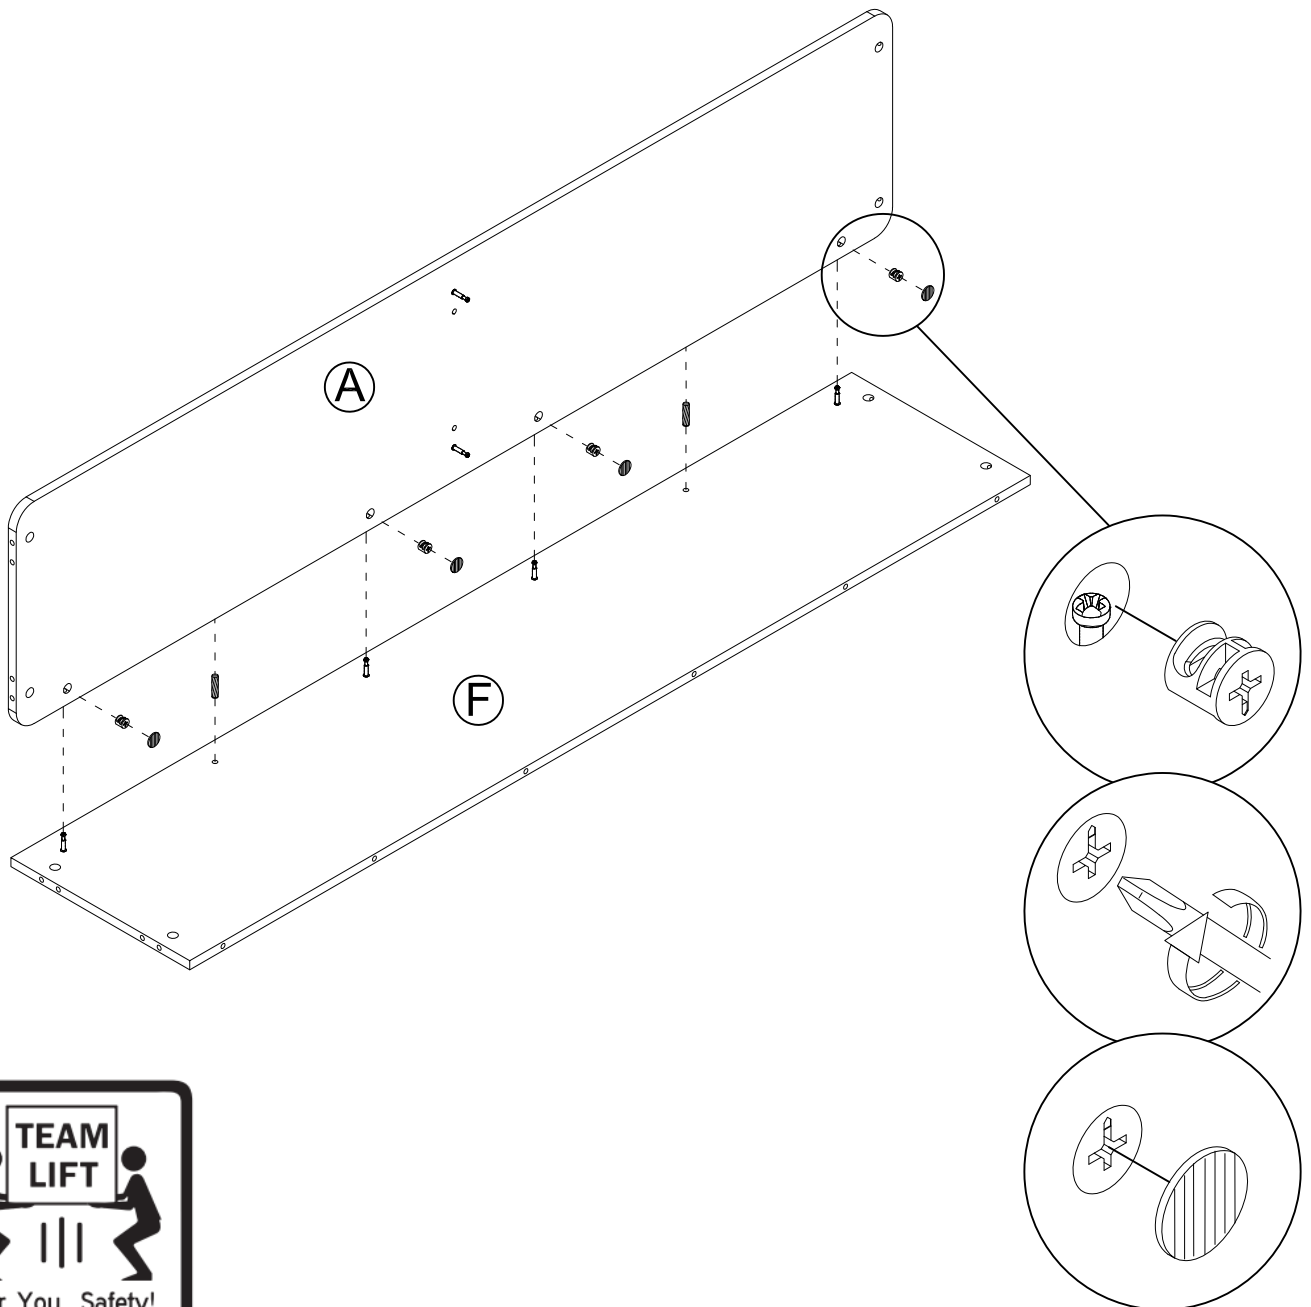

Step 8:


* Attach the TOP (A) to the MEDIAN PANEL (E) by the
Two KD CAM (2) , Two COVER CAP (3) ,and Eight WOOD DOWEL (4) .

②




(2 PCS)

③




(2 PCS)

④




(8 PCS)

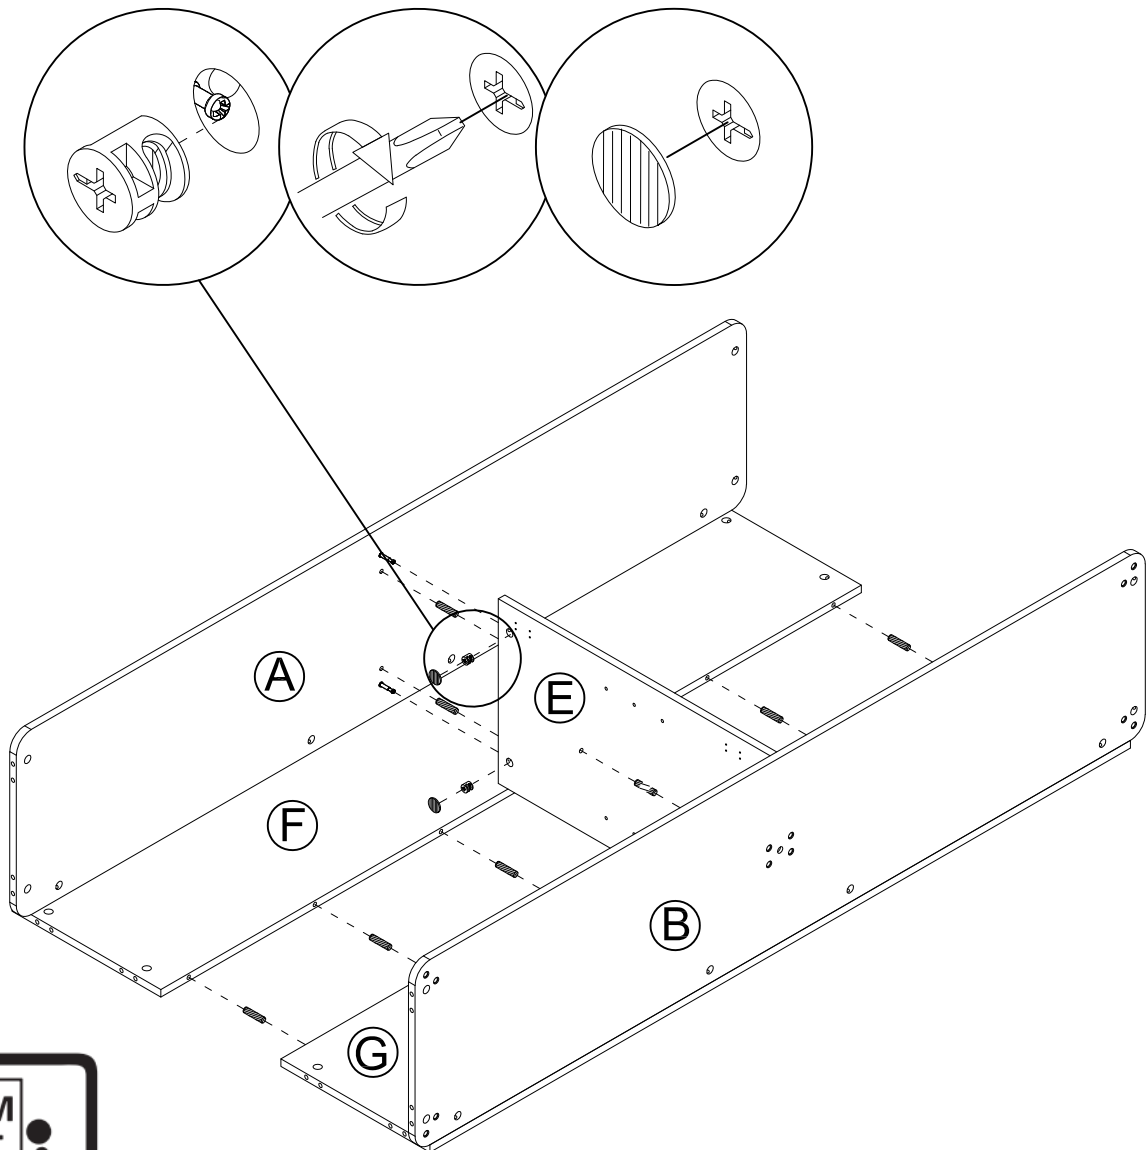


Step 9:

* Attach the LEFT PANEL (C) and RIGHT PANEL (D) to the ASSEMBLY by the Sixteen KD CAM (2) , Sixteen COVER CAP (3) , Sixteen WOOD DOWEL (4) .


②





③



④




(16 PCS) (16 PCS) (16 PCS)

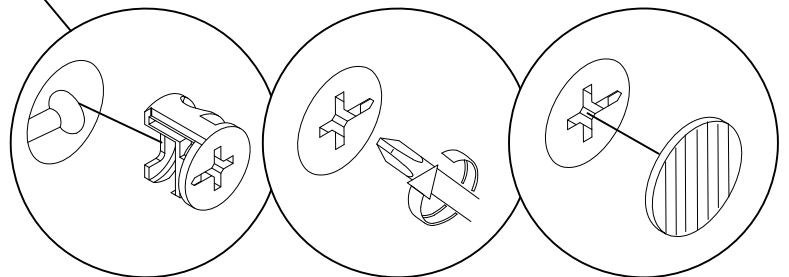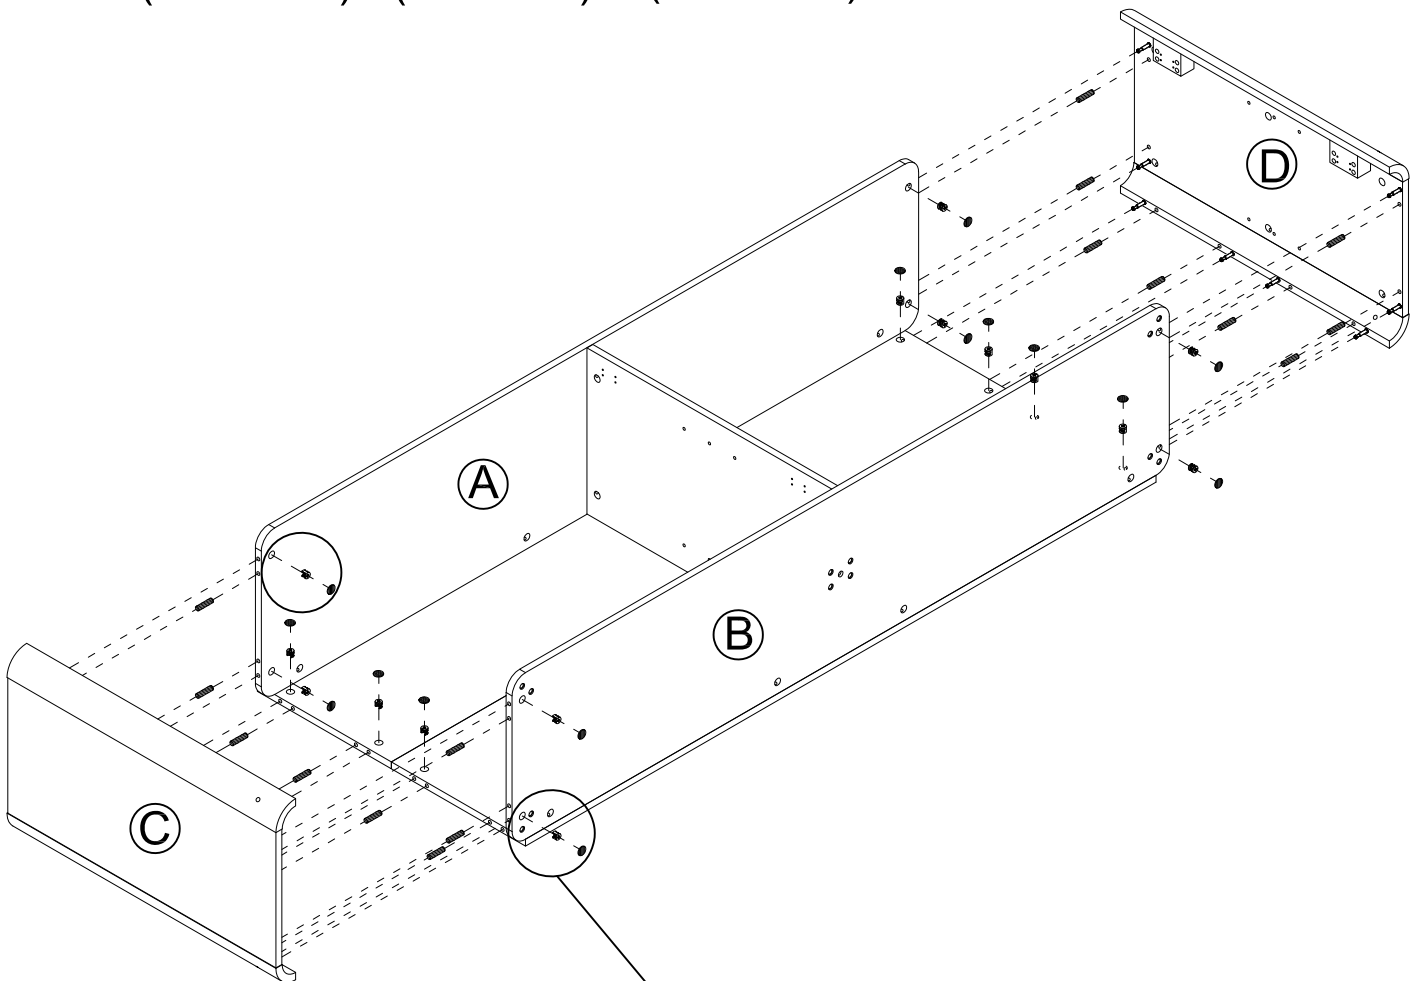

Step 10:

* Attach the LEGS (10,11,12) to the ASSEMBLY by the BOLT (13,14) .

⑩




(1 PC)

⑪




(1 PC)

⑫




(4 PCS)

⑬




(5 PCS)

⑭




(8 PCS)

⑤




(1 PC)

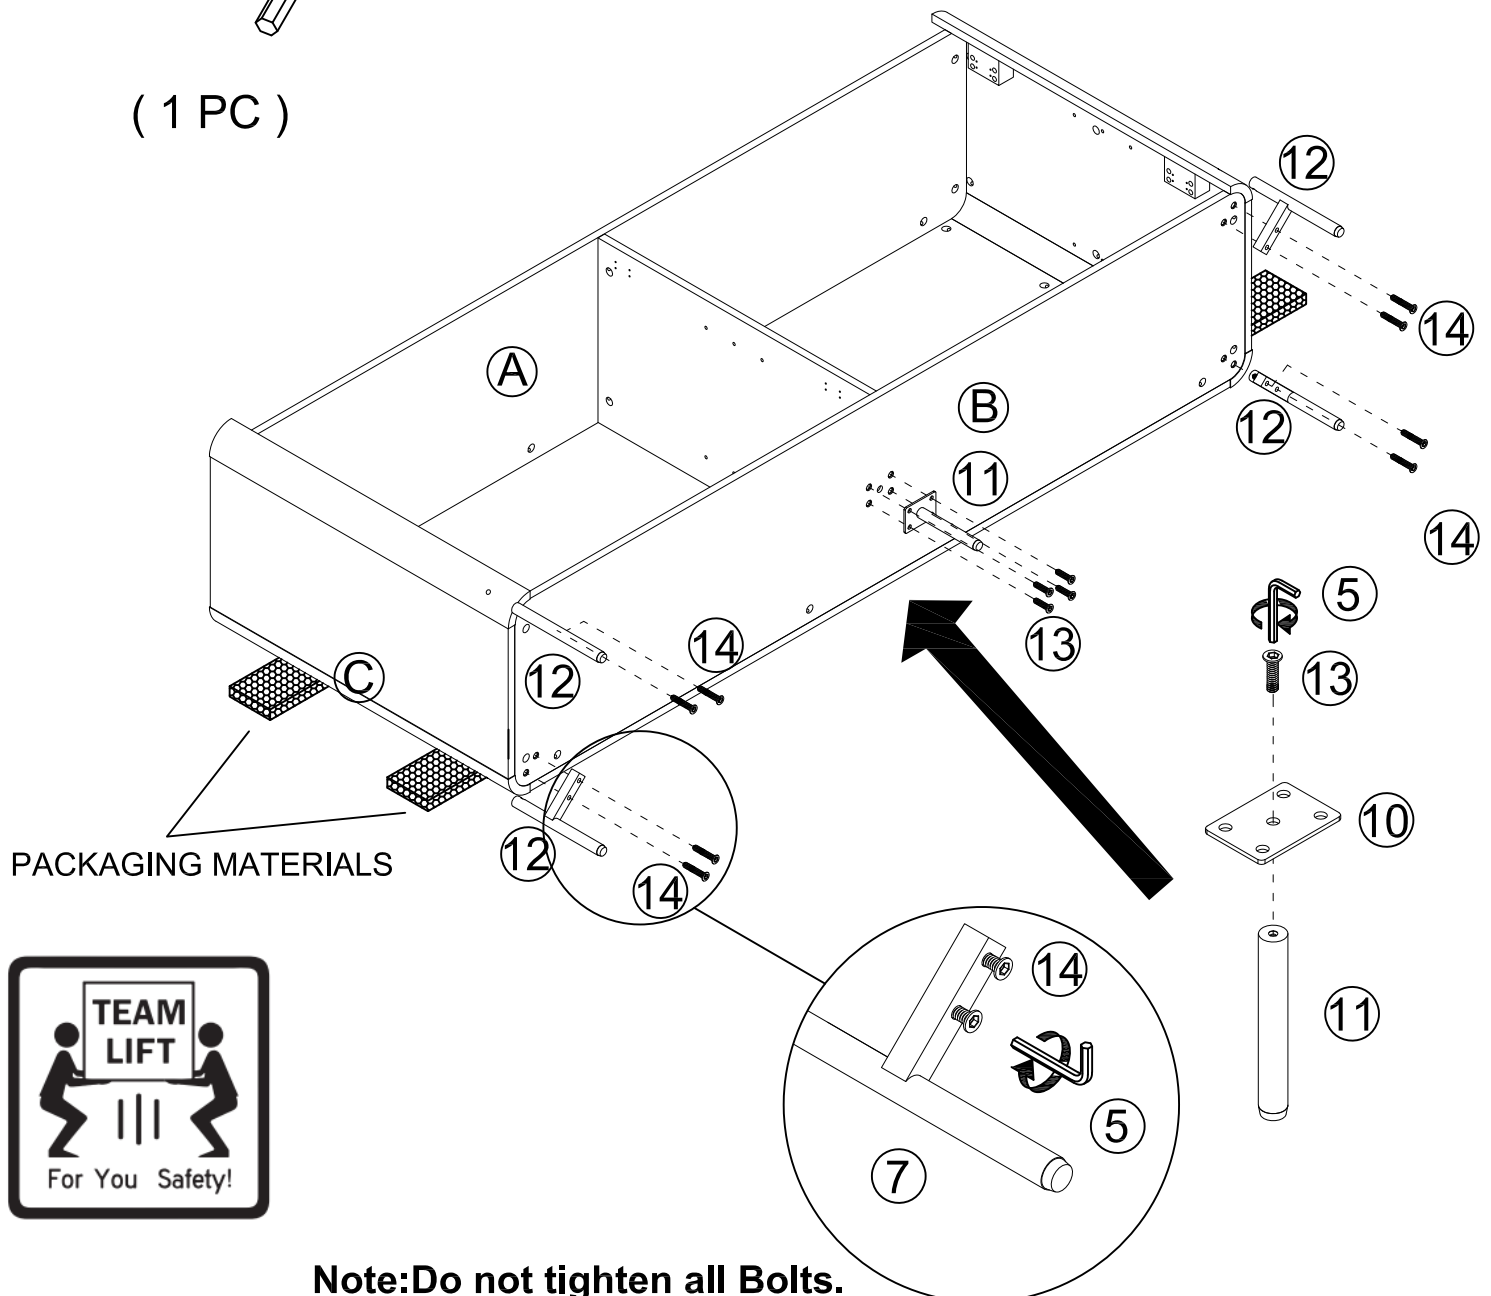


Note:Do not tighten all Bolts.

Step 11:

* Attach the ASSEMBLY by the BOLT (14) .

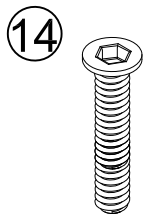


(4 PCS)

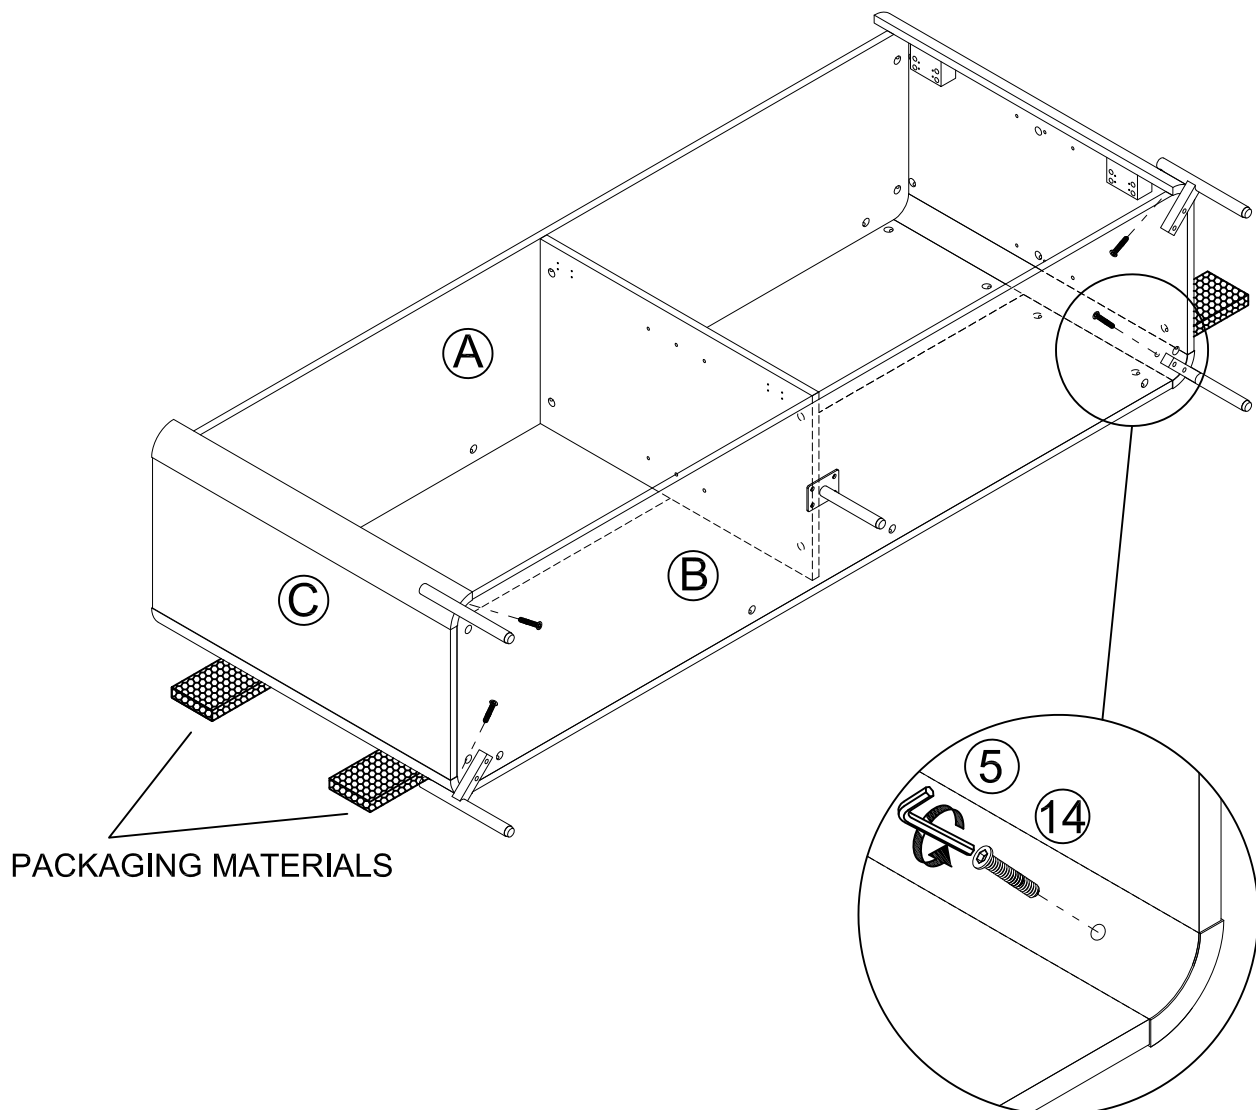

Note:Do tighten all Bolts.



Step 12:

* Use LOCK (5) tighten all Bolts .

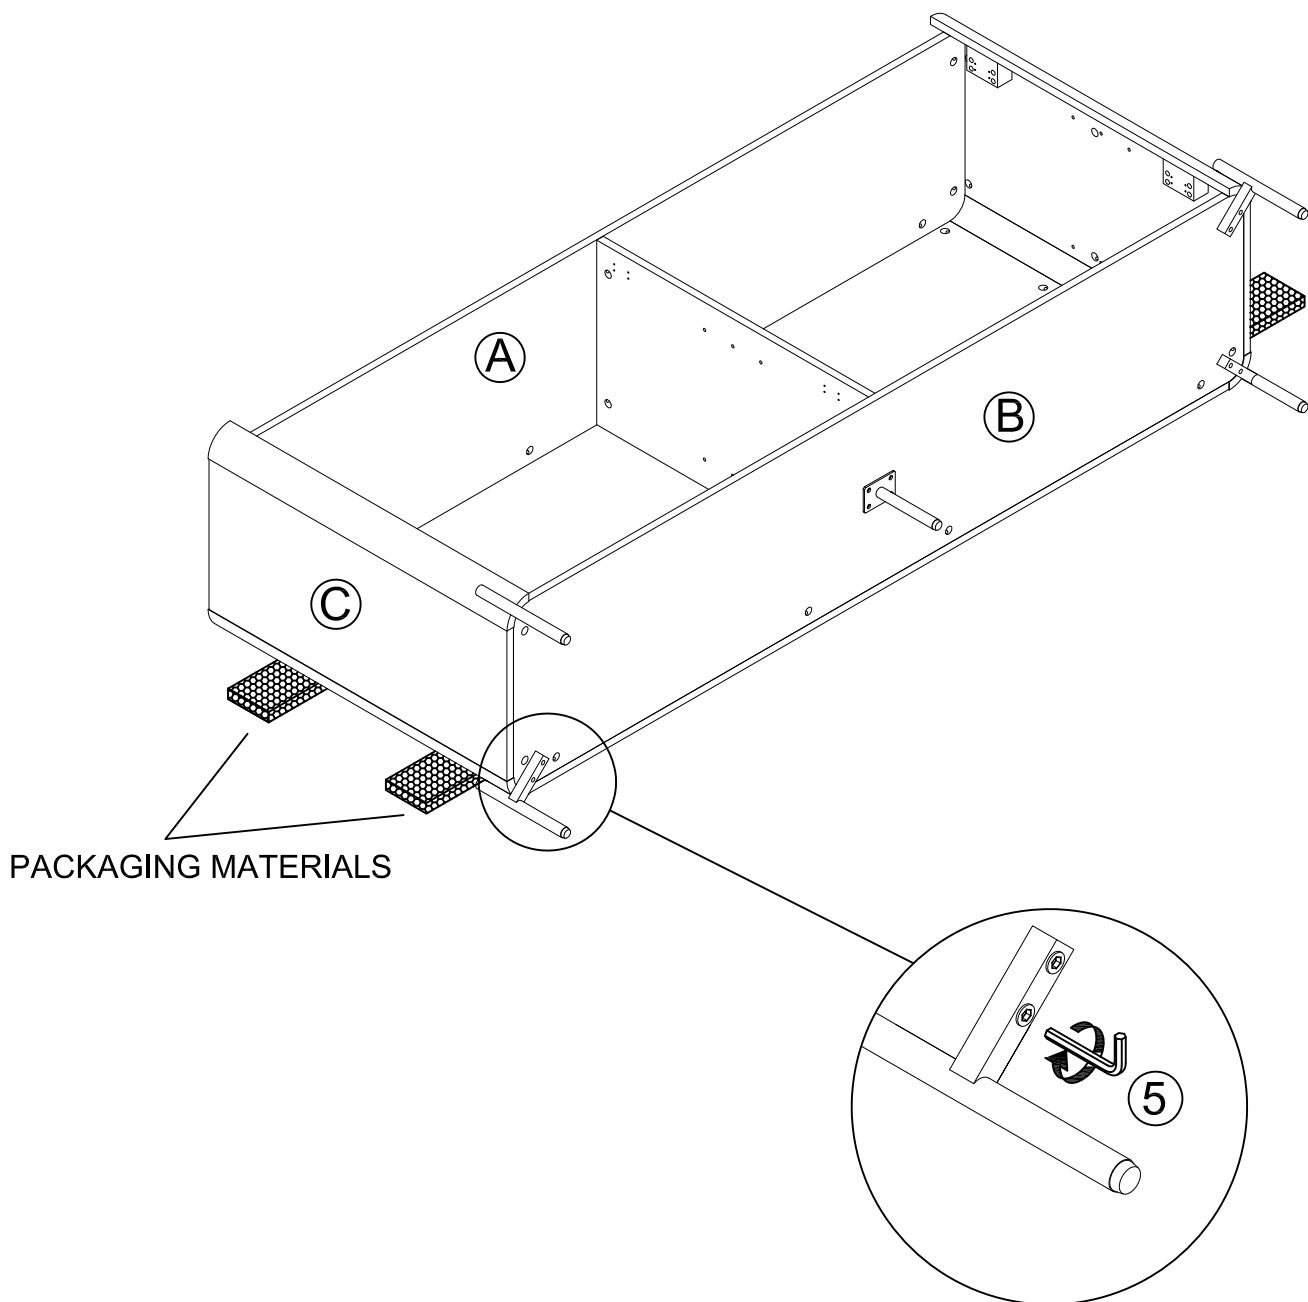



Step 13:

* Insert Sixteen SHELF PEGS (6) into the Sideboard and put on the Two SHELF PANEL (H) .

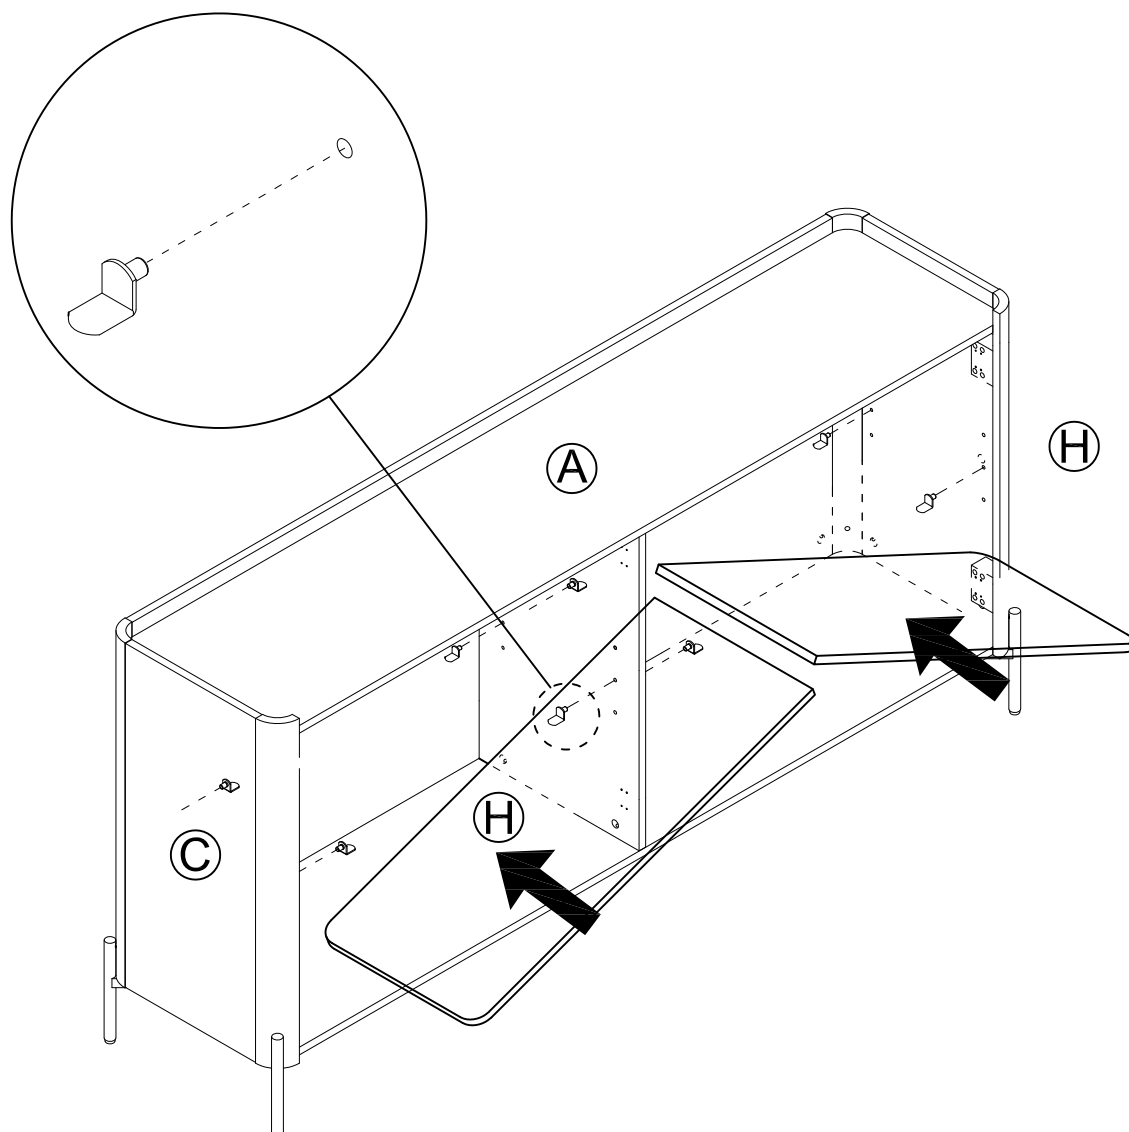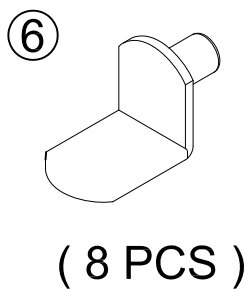

Step 14:

*** Attach HINGE (8) and SCREW (9) to the Two DOOR (I)**

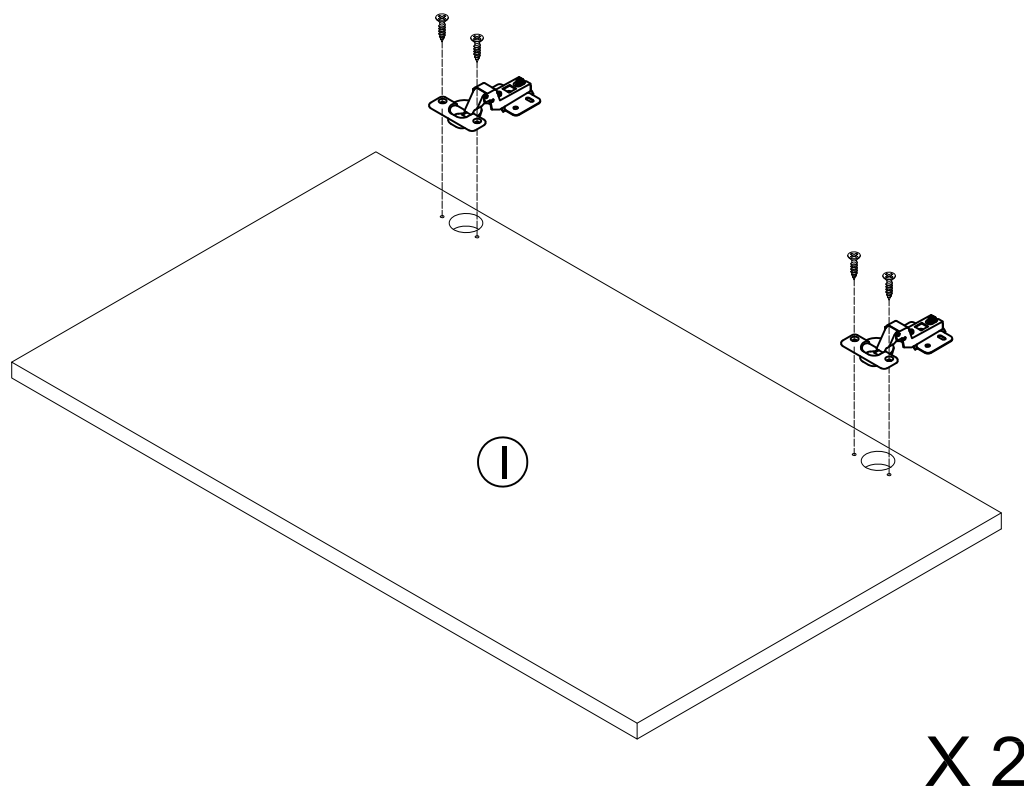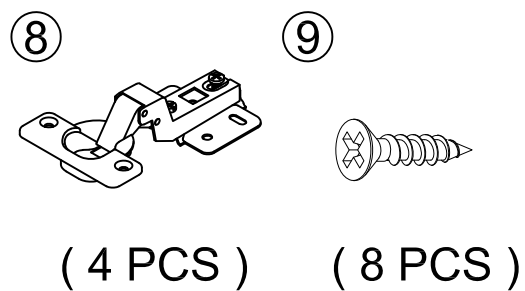


Step 15:

* Carefully stand your unit upright.

Fasten the DOORS (I) to the LEFT PANEL (C) and RIGHT PANEL (D) .


* Note : The hinges should be hooked first from the top to the middle and lower hinge combinations in the "PRESS" order . Note that the hinge leaf must be inserted into the slot along the angle.

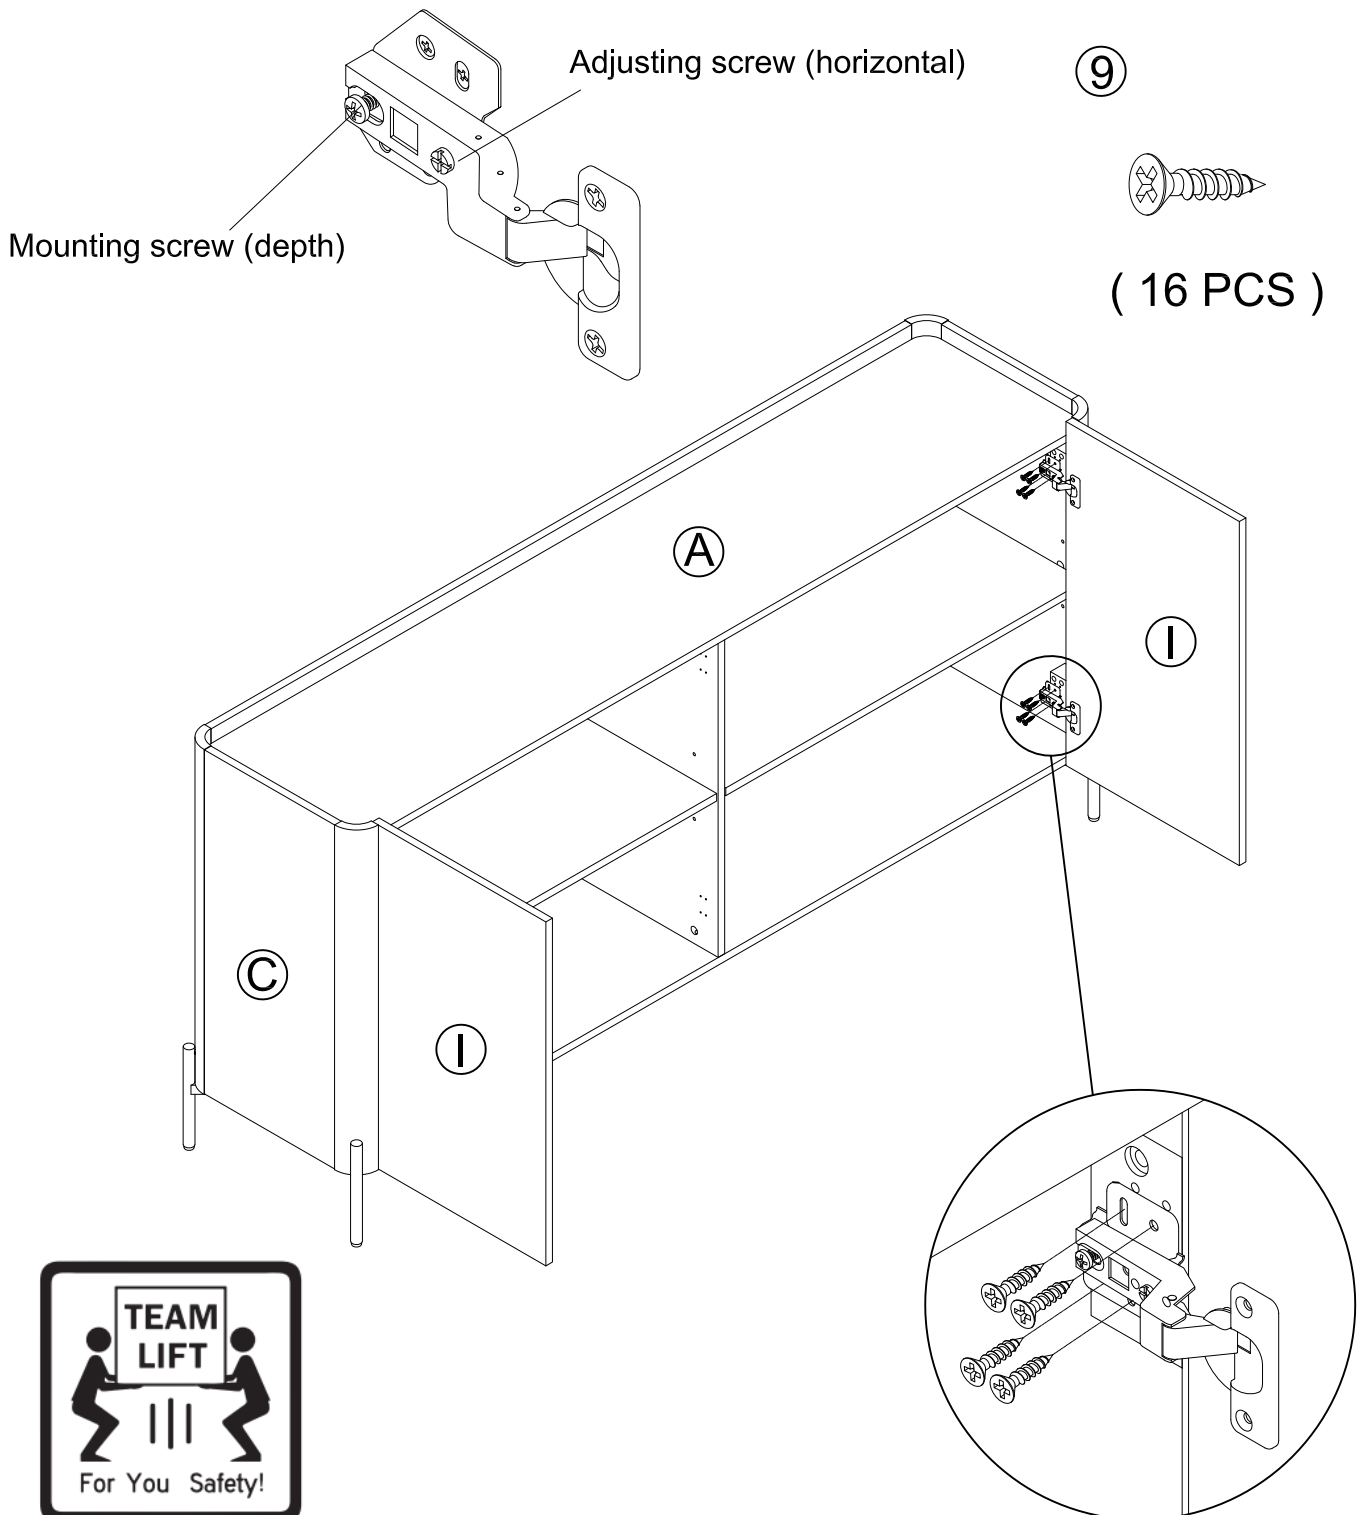

Step 16:

* **Attach HINGE (7) and SCREW (9) to the DOOR (I) and DOOR (J) .**

⑦





(4 PCS)

⑨



(8 PCS)

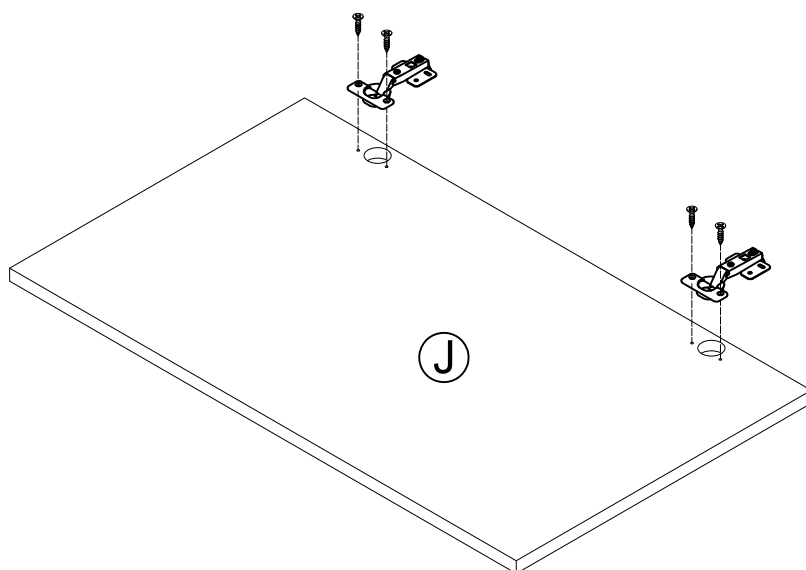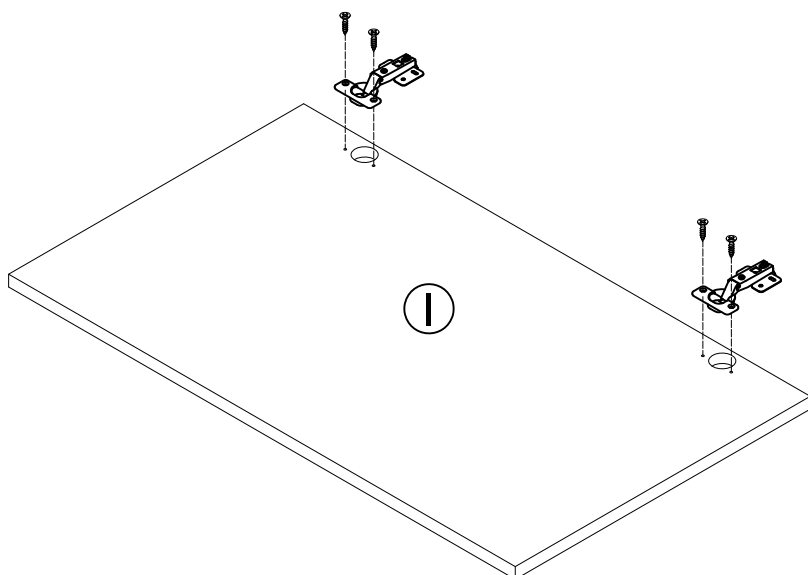


Step 17:

*** Carefully stand your unit upright.**


Fasten the DOOR (I) and DOOR (J) to the MEDIAN PANEL (E)

*** Note :** The hinges should be hooked first from the top to the middle and lower hinge combinations in the "PRESS" order . Note that the hinge leaf must be inserted into the slot along the angle.

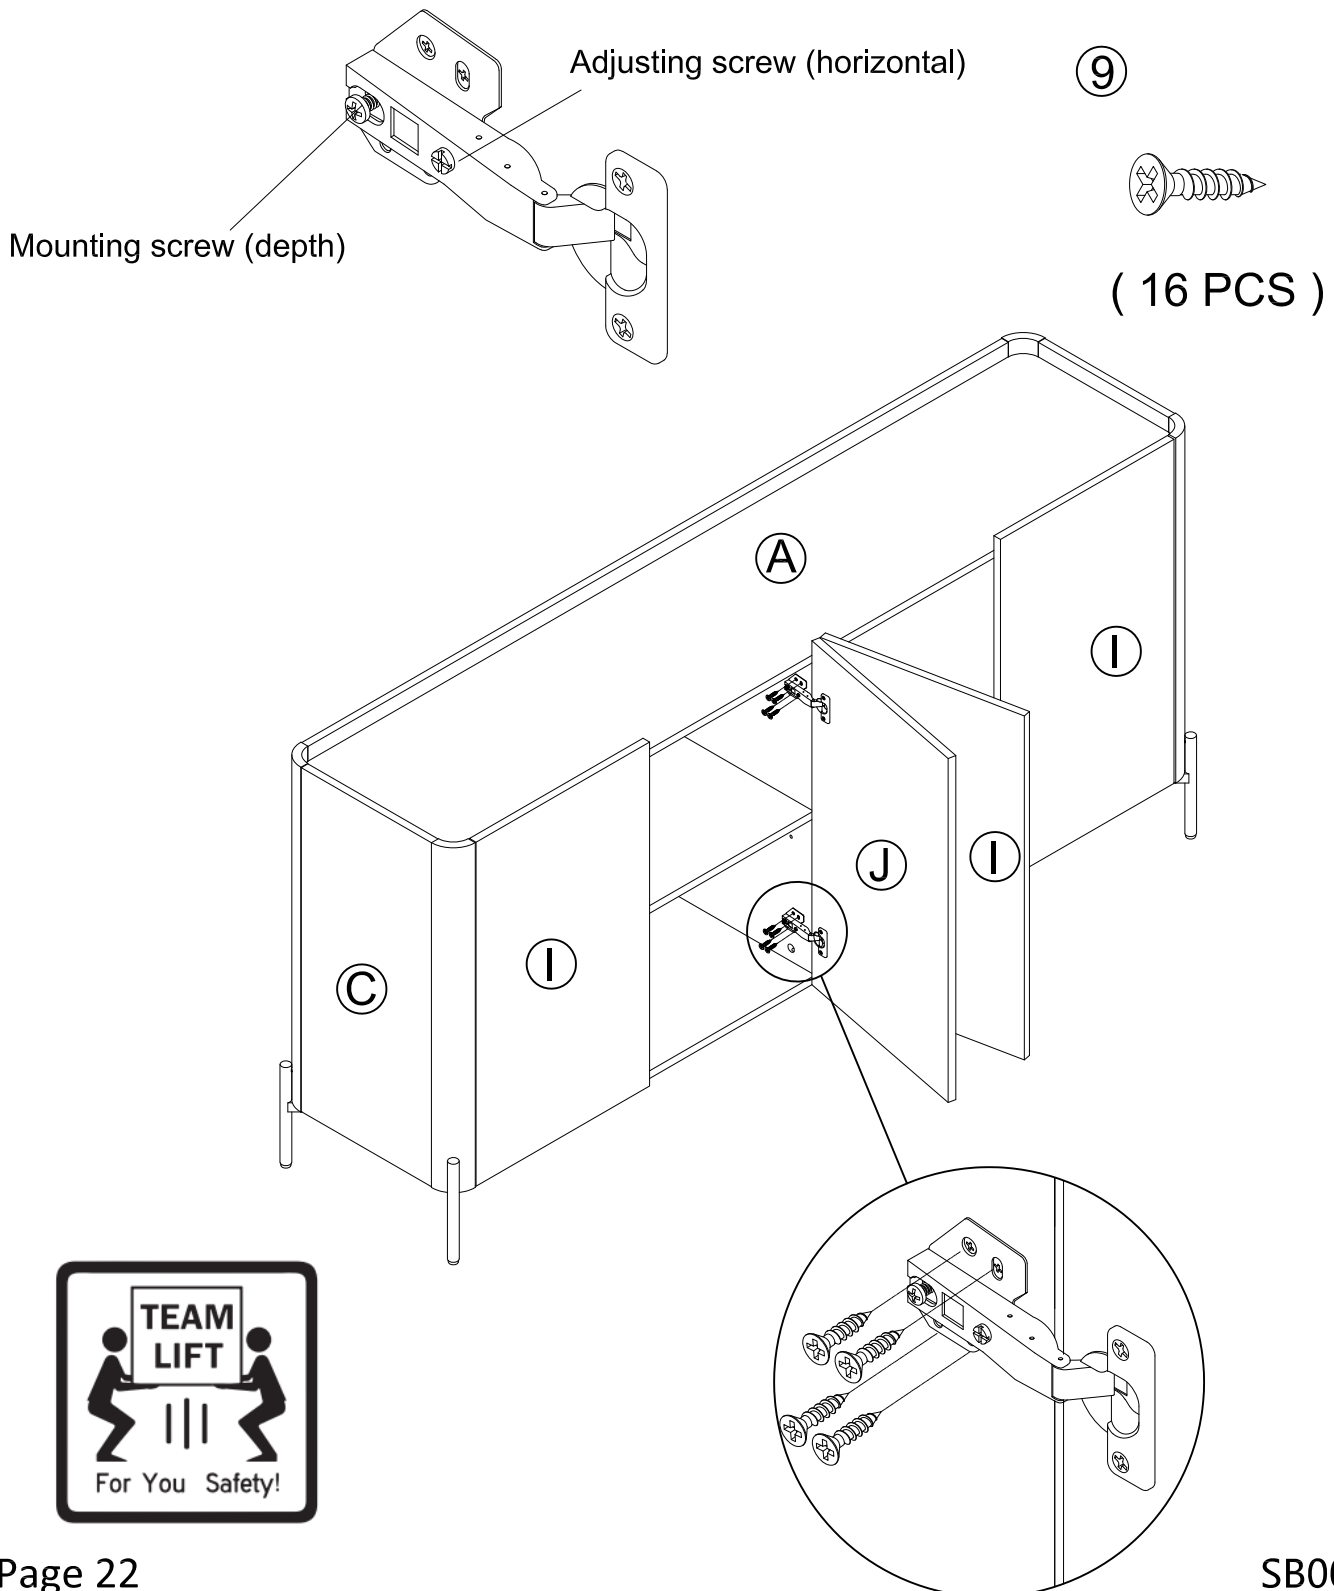

Step 18:

* Attach anti-tipping straps to the back of the stand.

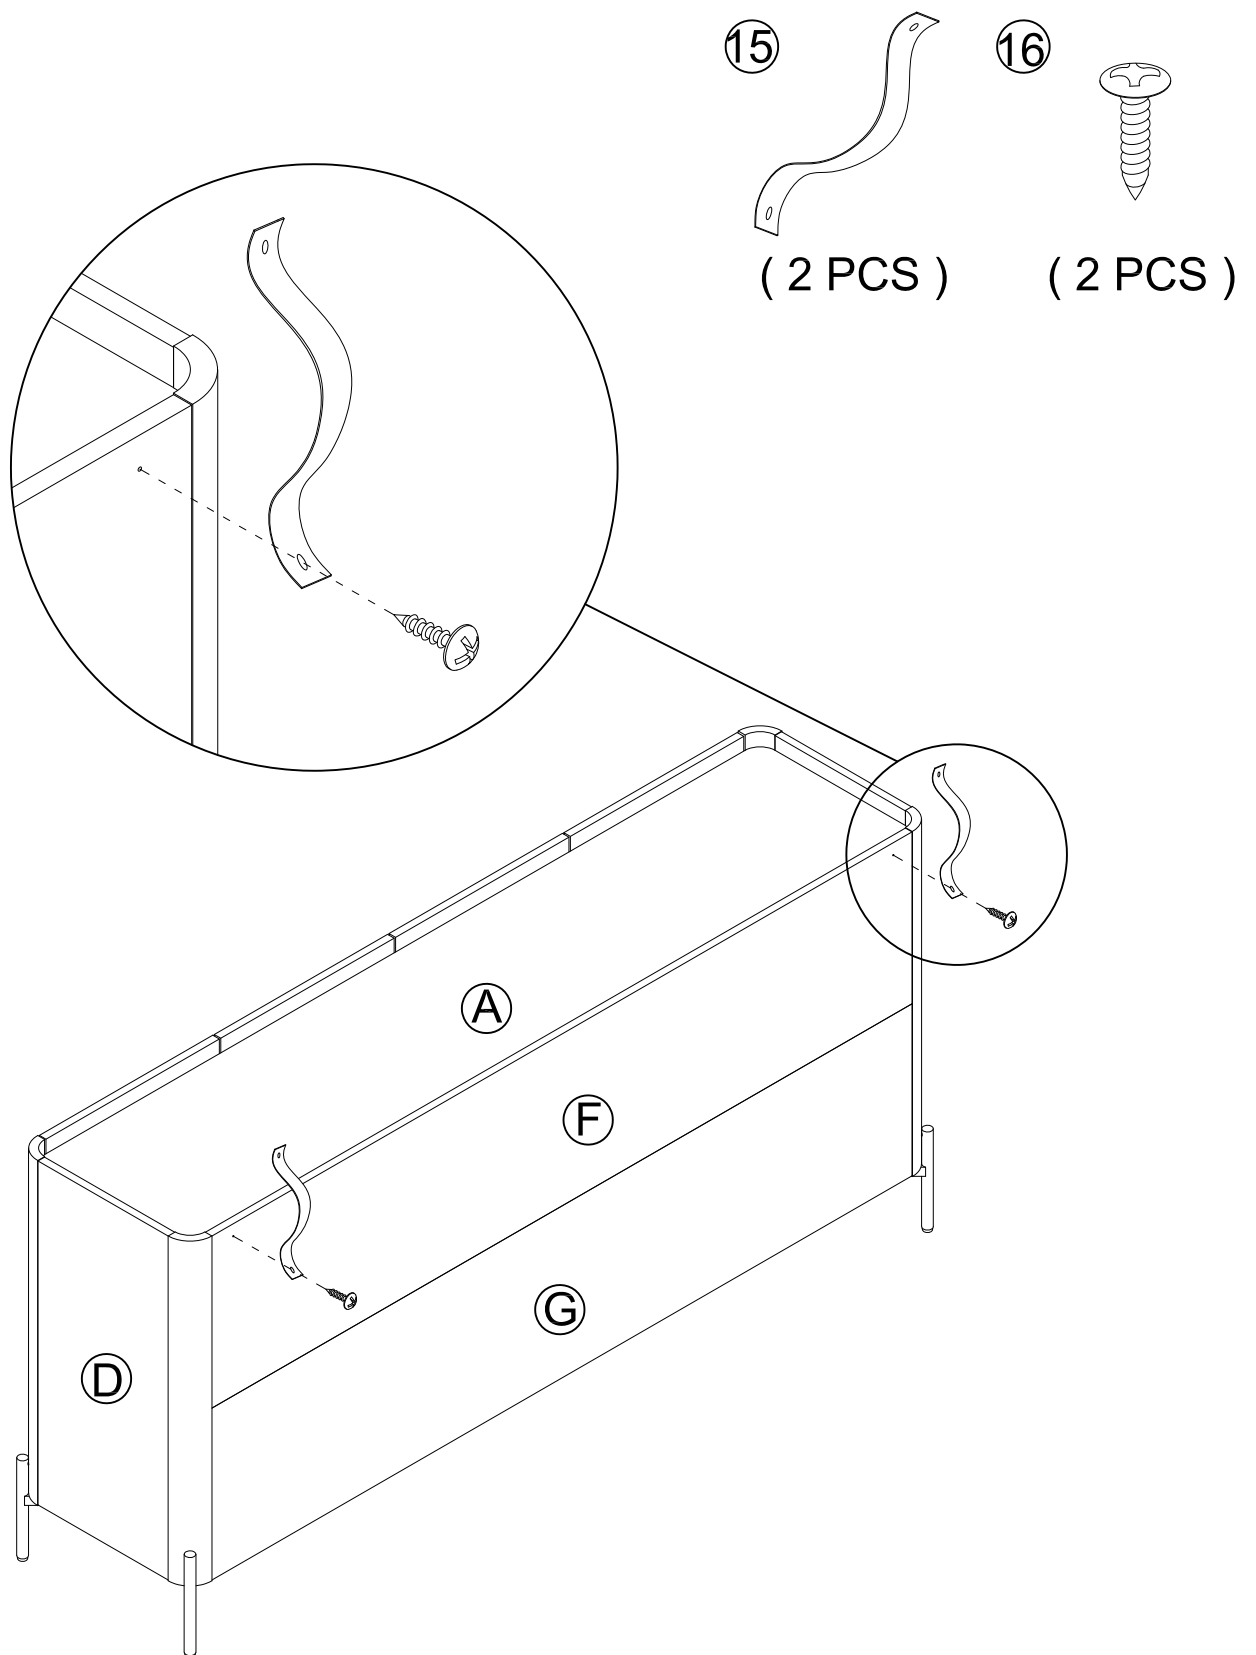

Step 19:


1st- With your pencil, strike a mark through the center of the hole in the SAFETY STRAP.

2nd- Drill a 3/8" hole on the mark.

3rd- FURNITURE TIPPING RESTRAINT KIT (15) into the hole until it is even with the surface of the wall.

4th- Turn the LONG SCREW through the hole in the SAFETY STRAP and into the WALL ANCHOR.

NOTE: You will need to turn the LONG SCREW multiple turns to completely tighten and secure your unit.

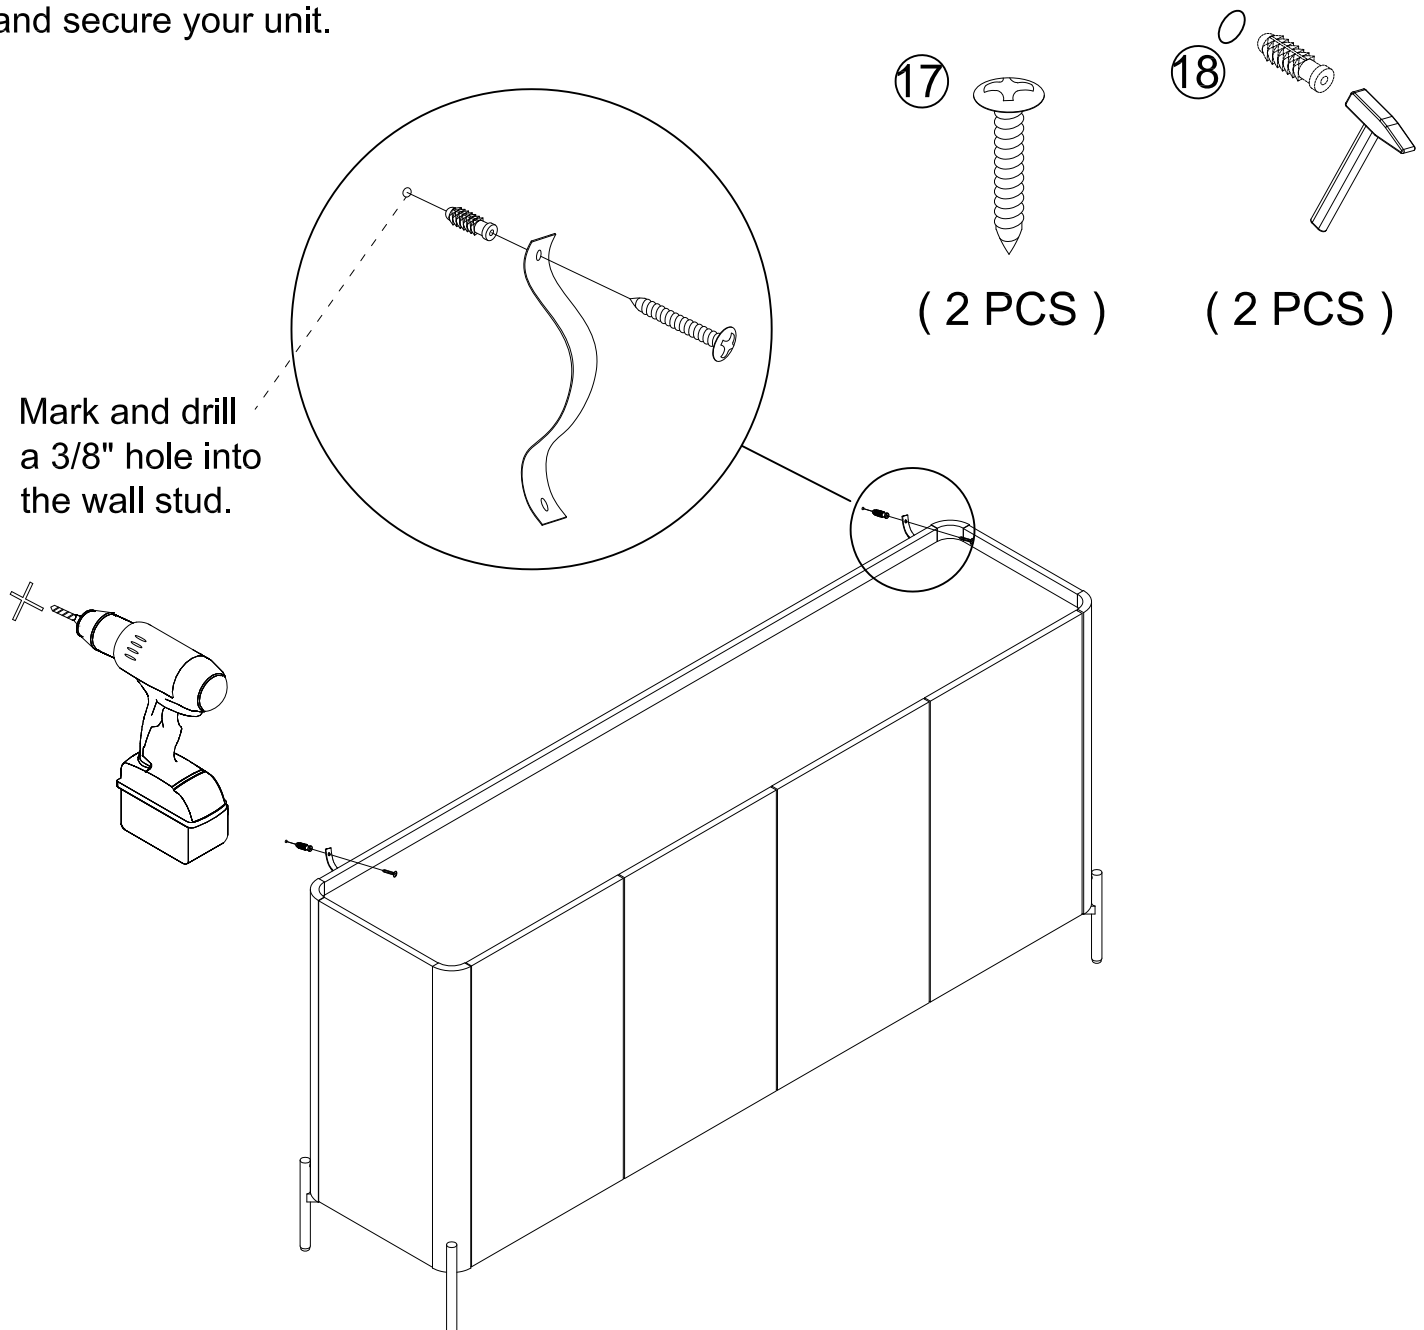



MANHATTAN COMFORT

WARRANTY POLICY

All Manhattan Comfort furniture products are warranted, to the original purchaser at the time of purchase and for a period of 30 days thereafter.

Our warranty is limited to new products purchased in factory sealed cartons. This warranty is valid in the United States of America and Canada.

In order to provide you with timely assistance, please thoroughly inspect your furniture for missing or defective parts immediately after opening the carton.

Manhattan Comfort offers a 30-day parts replacement warranty on all items.

Our furniture products are not intended for outdoor use.

THE WARRANTY DOES NOT COVER:

Defects/damages by improper assembly or disassembly.

-Defects/damages caused by inappropriate use of the furniture.



319 Ridge Rd. Dayton, NJ 08810
908-888-0818