ASSEMBLY INSTRUCTION FOR ACME FURNITURE

MODEL#92248

Thank you for purchasing the quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the cation during shipment. Seperate, identify and count all parts and metal hardware. Compare with all parts list to be sure all parts are present. If any part(s) are missing or damaged, please contact your local furniture dealer. For efficient and speedy service, please indicate the model number and code letter of part(s) needed.


*** Do not fully tighten screws until fully assembled ***

COMPONENT PARTS								
DESCRIPTION	PART NAME	QTY (PCS)	DESCRIPTION	PART NAME	QTY (PCS)			
1	LEFT FRAME	1	4	METAL BACK HOLDER	2			
2	RIGHT FRAME	1	5	TUBE	1			
3	WOOD TOP	1						

HARDWARE REQUIRED

A	ALLEN KEY		1 PCS
\bigcirc	WRENCH		1 PCS
©	CARRIAGE BOLT	Ø1/4"*35mm	6 PCS
D	BOLT	ø1/4"*12mm	9 PCS
E	FLAT WASHER	ø1/4"*19mm	10 PCS
F	FLANGE NUT	Ø1/4"	6 PCS
(G)	ACORN NUT	Ø1/4"	1 PCS
\bigoplus	LEVELER	Ø30mm	4 PCS






^{***} Some number parts listed on the instruction sheet may not be in parts bag as they may already be assembled. Carefully check parts and packing materials prior to ordering replacements.

PAGE 1/2

How to assemble:

STEP 1

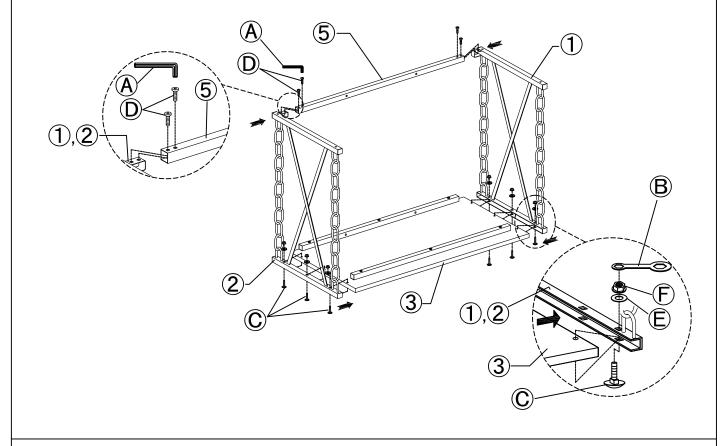

STEP 2

