



S-Class® Field Eyelet Repair Kit Instructions

Fish Tape Preparation

Proper preparation and stripping of S-Class® Fish Tape is critical to the strength of the eye-to-tape connection.

1. Cut back damaged end with Side-Cutting Pliers.




2. Strip outer yellow nylon jacket with stripper (using 10 AWG solid hole) exposing fiberglass.
3. Pulling eye strip length to be 1-1/8".

Gluing Eyelet

1. Apply industrial adhesive (supplied with kit) to both fiberglass core and the yellow nylon jacket.



2. Insert stripped end into eye. Fish tape jacket must bottom-out in eye, and fiberglass end must extend completely to the edge of eye hole.

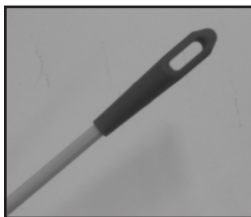

Allow adhesive to cure for 24 hours before use.

IDEAL INDUSTRIES, INC.

Sycamore, IL 60178, U.S.A.

800-435-0705 Customer Assistance

www.idealindustries.com

ND 7974-1

Made in U.S.A. of US and global components.