




MANHATTAN
COMFORT

ASSEMBLY INSTRUCTIONS

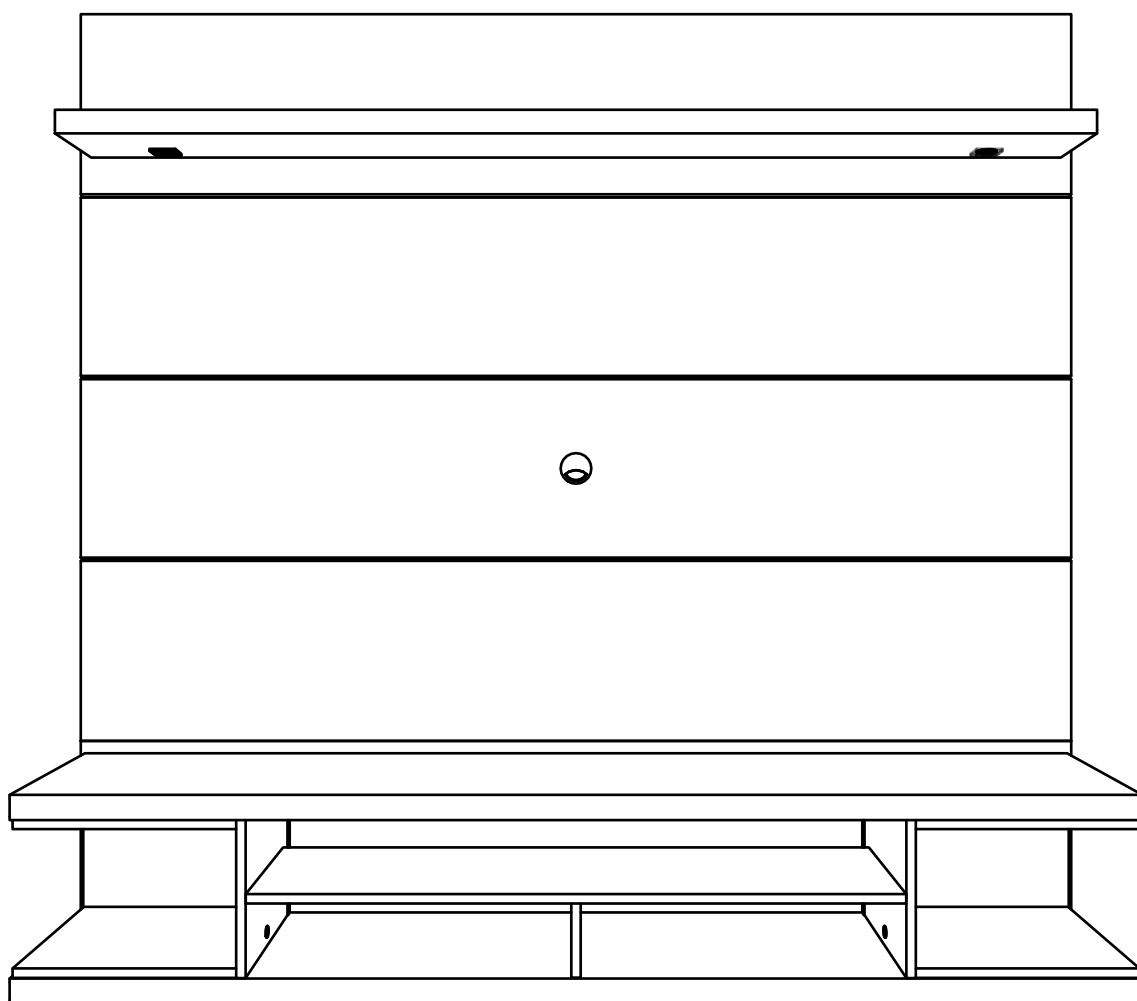


COD:27900

REV. 00


IMPORTANT REMARKS




Never climb or lean on the furniture.
You may suffer serious accidents.

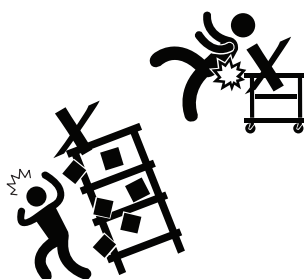

Use the packaging to cover the
assembly area and separate
all parts.

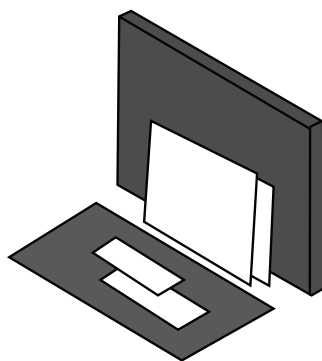

Identify the parts by observing the
number printed on their edges.

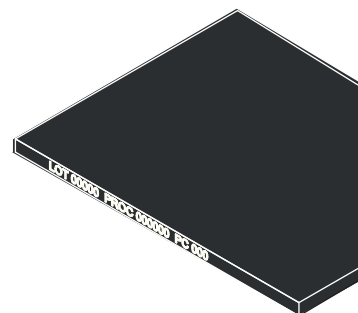


CARE INSTRUCTIONS



Wipe clean using a damp cloth and a mild cleaner.
Do not use abrasive and chemical products.



HANDLING

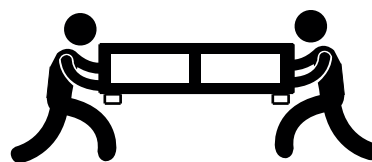


Move the piece carefully, don't drag it. Ask
for someone else's help to do so.

HARDWARE



Identify and separate the hardware used in the assembly. There's a label on each package identifying the parts and where to use them.

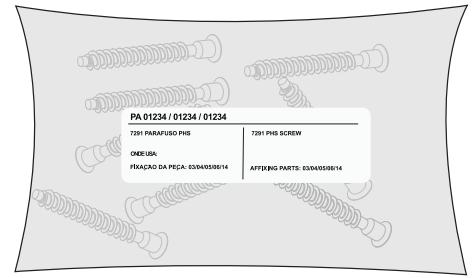

STICKER-10x






COD. 1668-4x

COD. 1668-33x

COD. 9070-6x

COD. 4157-14x

KIT LED-1x

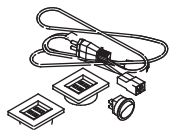

A

B

C

D

E

F

WIRE CHANNEL-2x


COD. 0348-2x

COD. 2088-14x

COD. 0494-12x

COD. 0599-12x

COD. 0160-28x



G

H

I

J

K

L

COD. 3557-18x




COD. 3706-30x

COD. 3527-16x

SUPORT - 1x

COD. 9333-8x

COD. 9069-12x



SUPORT TV



M

N

O

P


Q

R

COD. 4505-2x




S

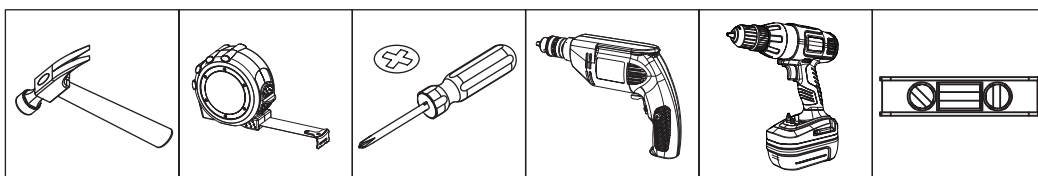


DESCRIPTION

W:71.26 inches H:67.24 inches D: 15.47 inches
L:1810mm A:1708 P:393 mm

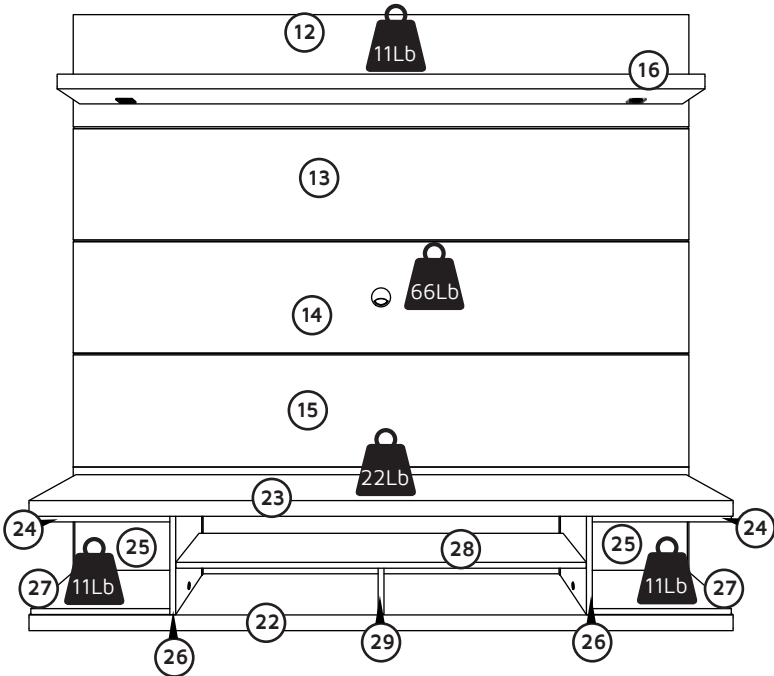

CÓD:27900			
PART	QUANTITY	DESCRIPTION	BOX
12	01	TOP PANEL	02
13	01	TOP PANEL	02
14	01	CENTRAL PANEL	02
15	01	BACK PANEL	02
16	01	TOP SHELF	02
17	02	BACKSIDE BATTEN	02
21	01	BACK PANEL	01
22	01	BASE	01
23	01	TOP BOARD	01
24	02	NICHE TOP PANEL	01
25	02	NICHE BACK PANEL	01
26	02	SIDE NICHE	01
27	02	NICHE BOTTOM	01
28	01	LONG DIVIDER	01
29	01	SHORT DIVIDER	01
40	02	BOTTOM BATTEN	01

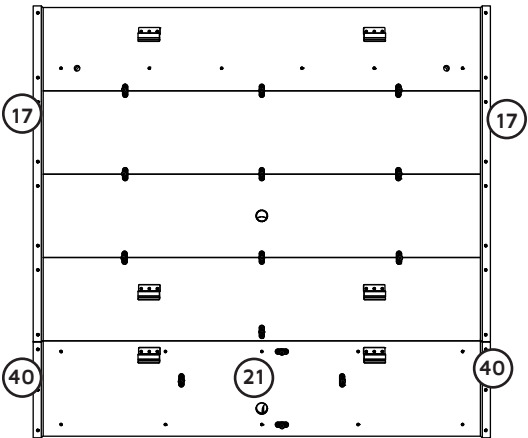

01

STICKER

A

COD. 1668


C

COD. 0494

J


COD. 0599

K

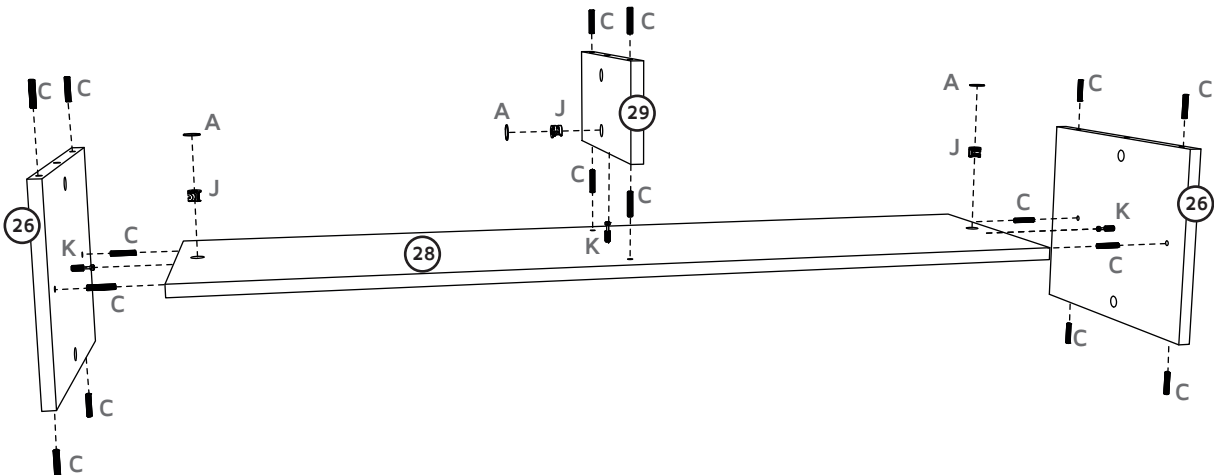


STICKER A	COD. 0329 C	COD. 0494 J	COD. 0599 K	COD. 3706 N


02

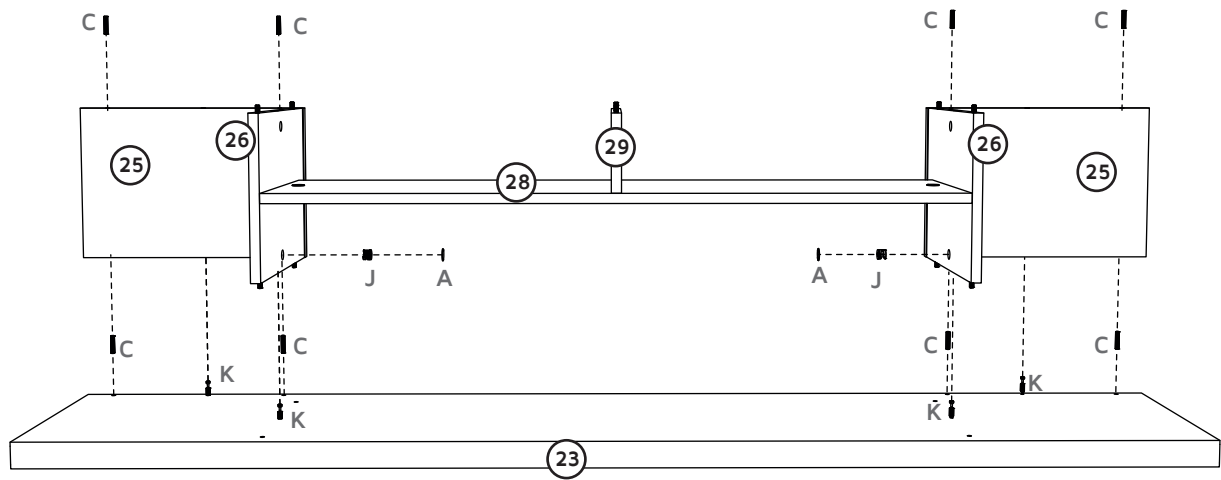


03

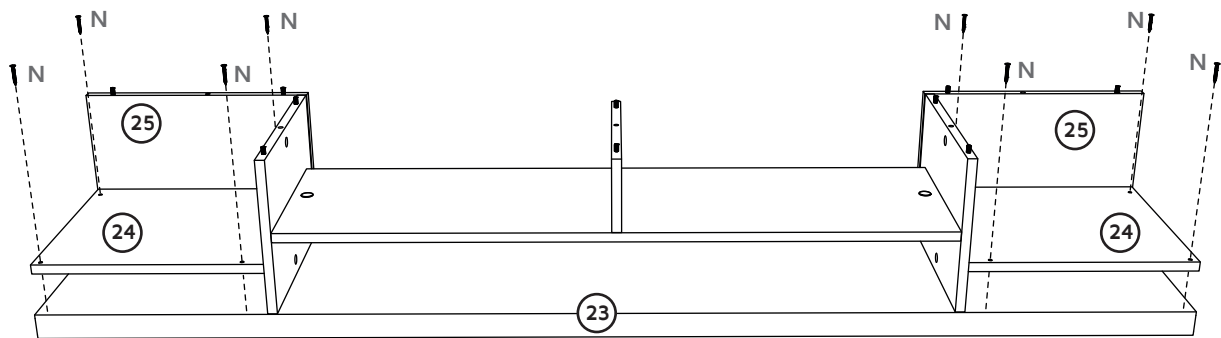



04

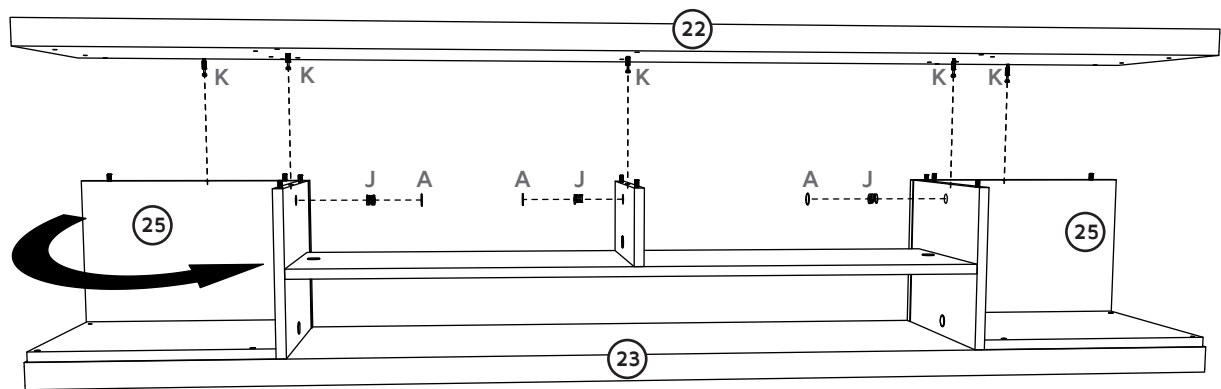


05

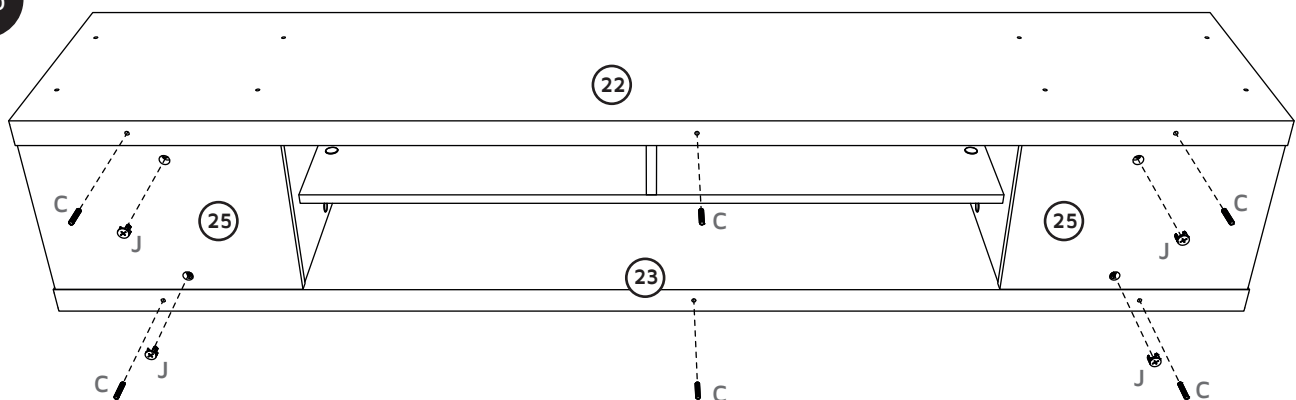


06

COD. 1668 C	COD. 9070 D	COD. 4157 E	KIT LED F	COD. 0160 L	COD. 3557 M	COD. 3706 N	COD. 3527 O	COD. 9333 Q
								


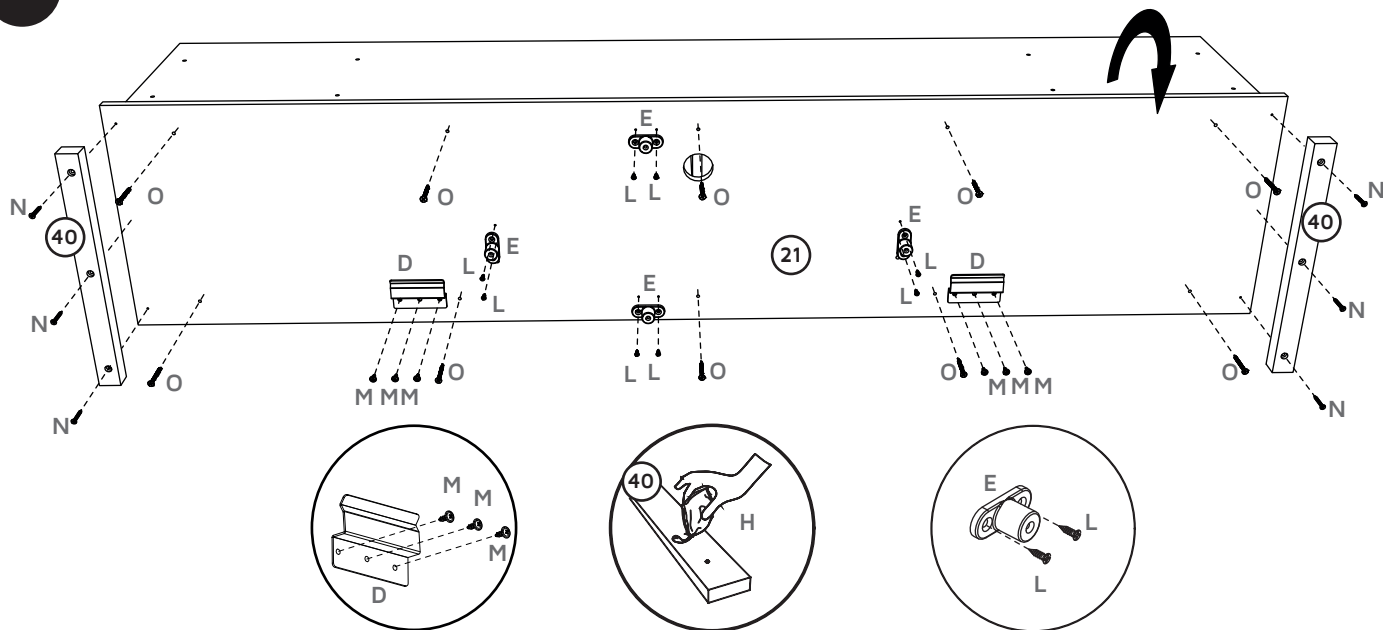


Use the PVA glue before screwing.


07

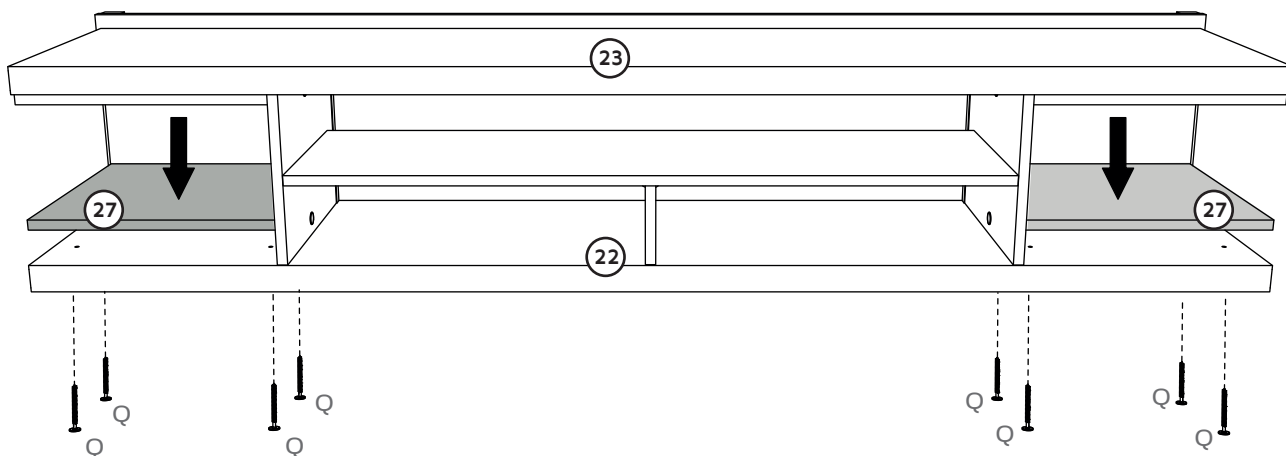

08



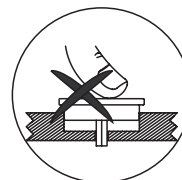
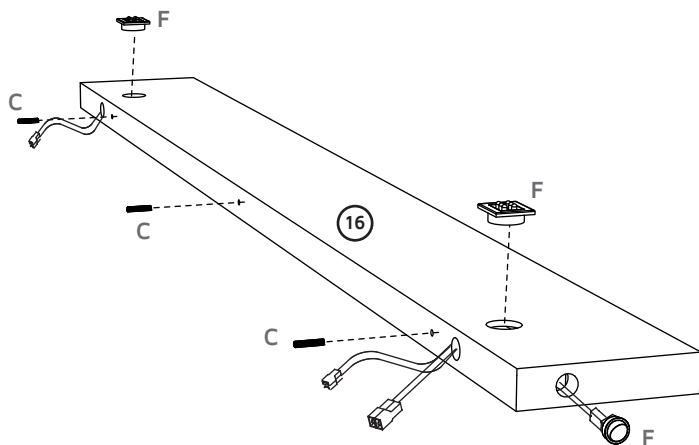


COD. 9070 D 	COD. 4157 E 	COD. 0348 H 	COD. 2088 I 	COD. 0160 L 	COD. 3557 M 	COD. 3706 N 	COD. 9069 R 
--	--	--	--	--	--	--	--

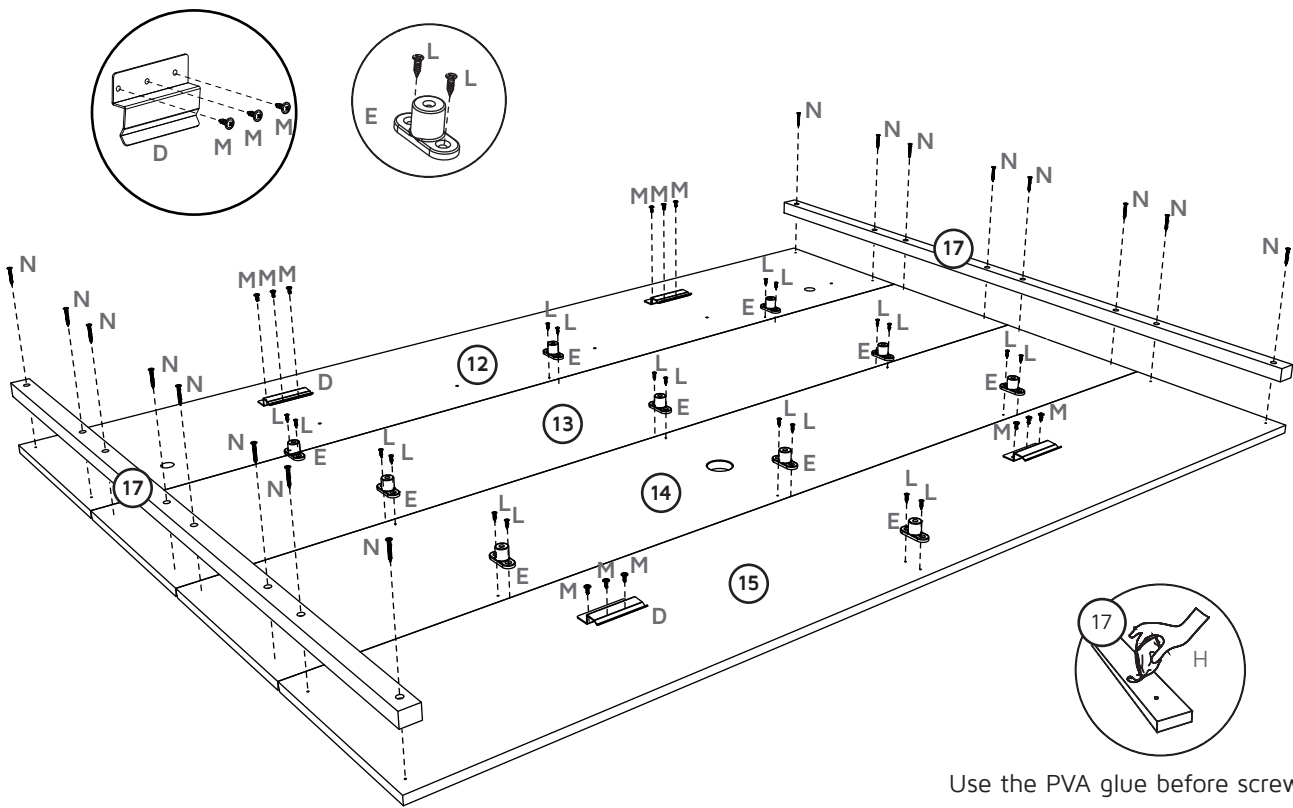




Use the PVA glue before screwing.

Measurement to drill the wall.

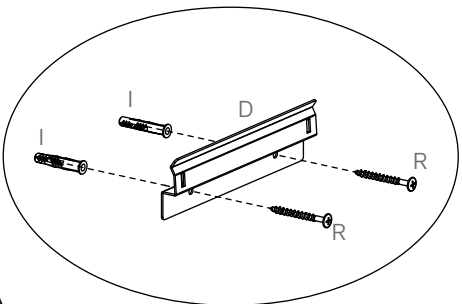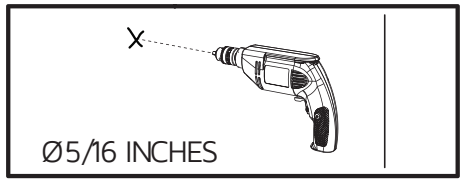
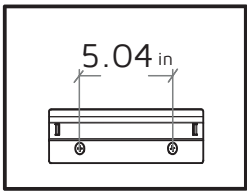
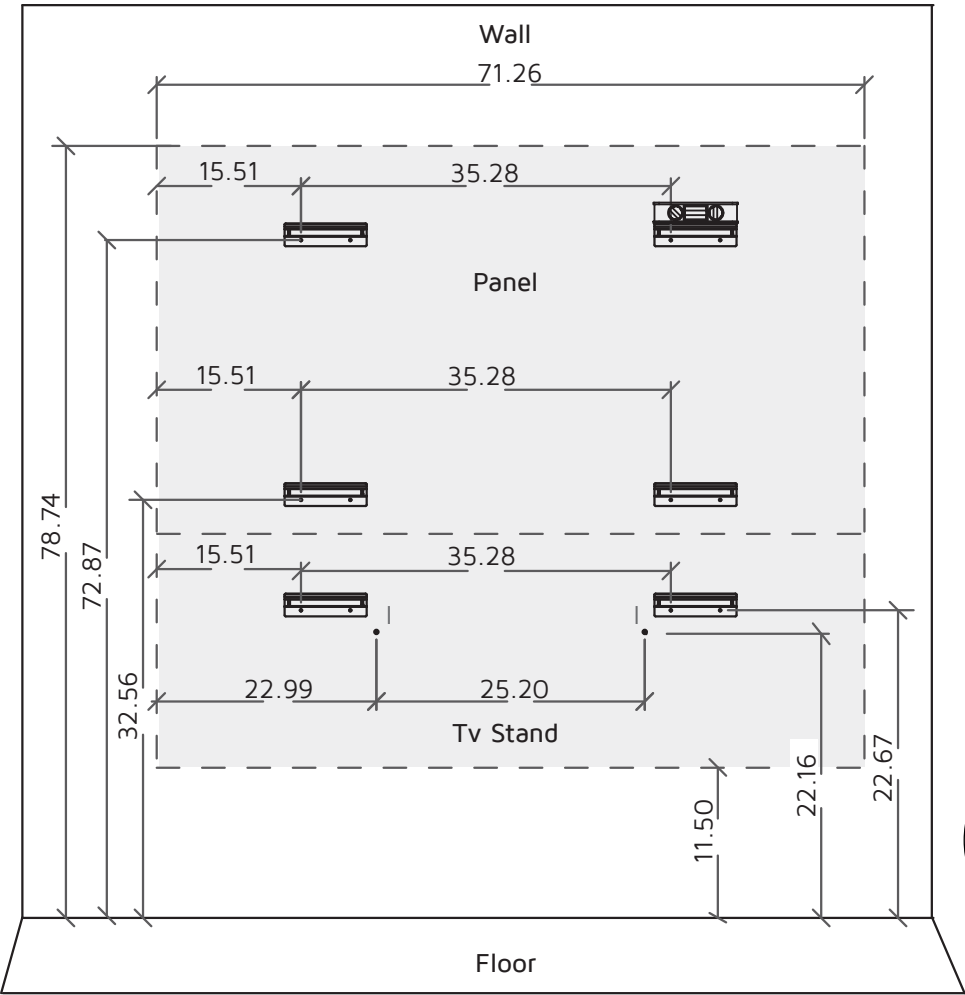


11

STICKER A	COD. 7702 B	WIRE CHANNEL G	COD. 3527 O	COD. 4505 S

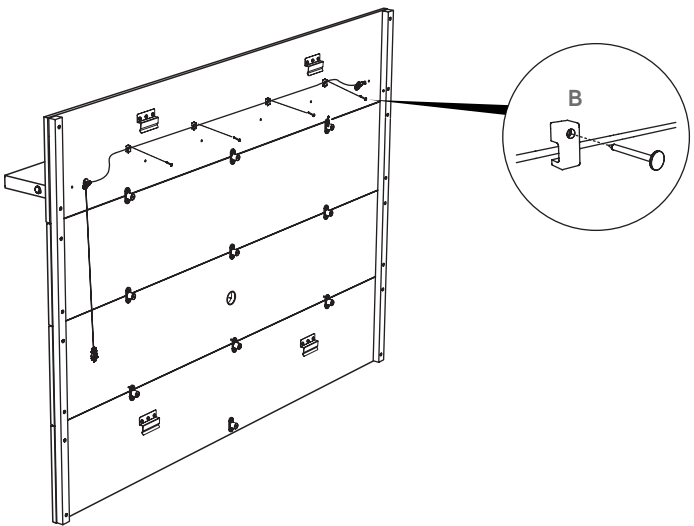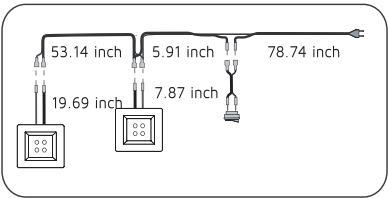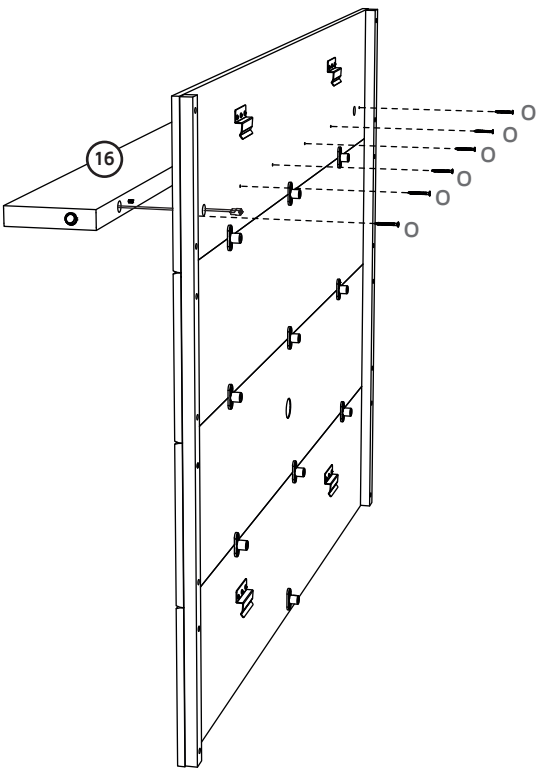

12

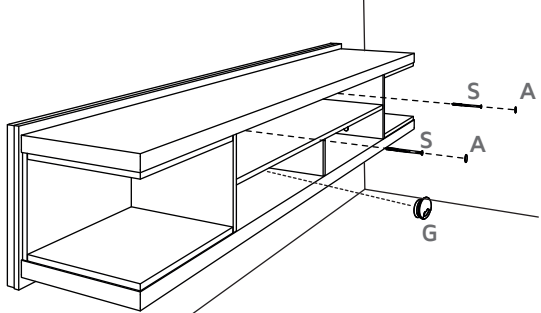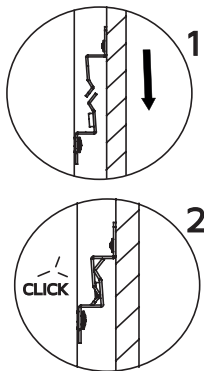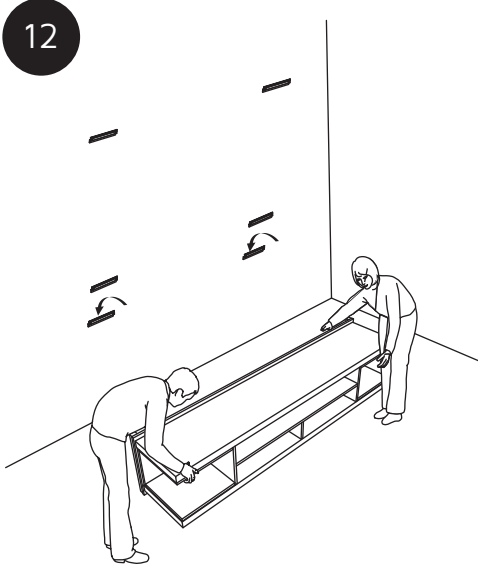


SAFETY SCREW




ATTENTION

Pass the cables through the wire channel before screwing (P)

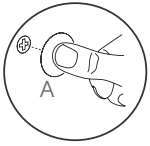

13

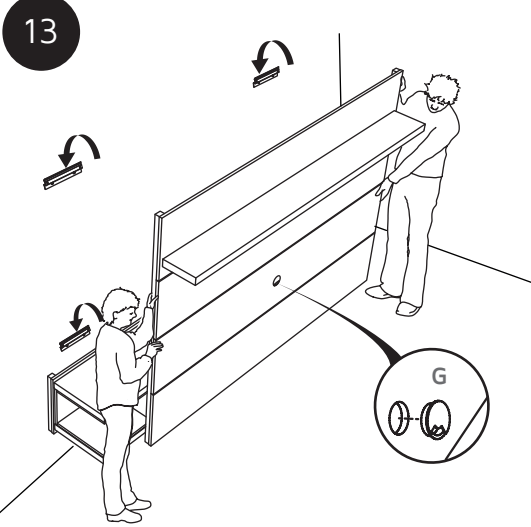

ATTENTION

Pass the cables through the back before Panel.

