



1

Take mounting base off of bumper, align on door, drill pilot holes, then secure with 2 screws included.

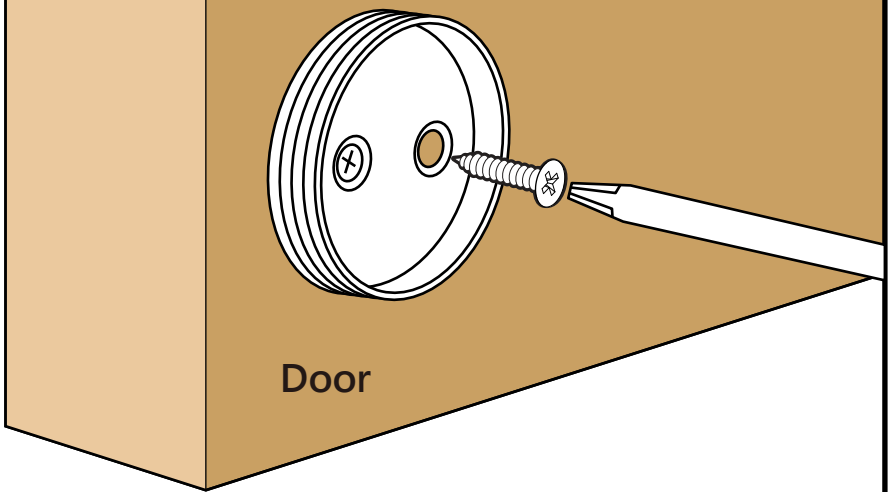


2

Attach bumper to mounting base.

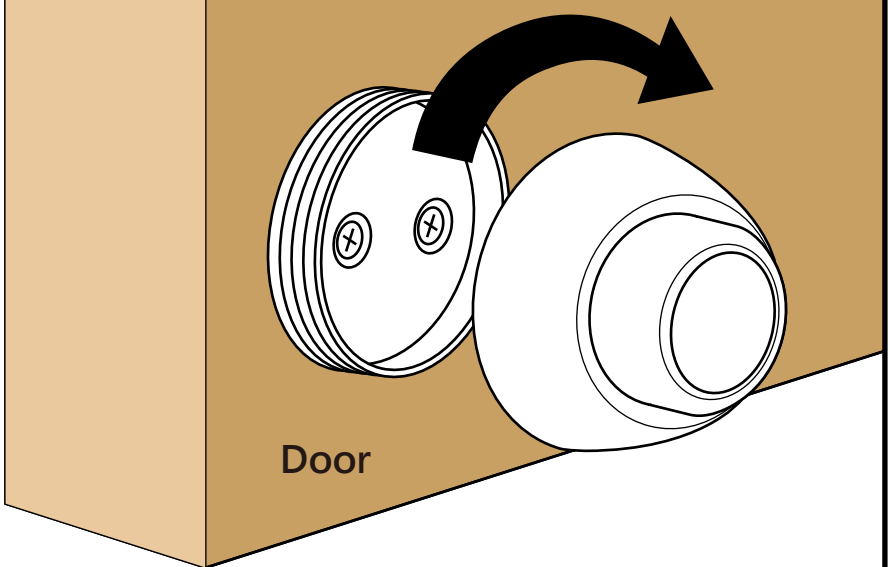


3

Before securing door stop to wall check alignment with bumper to mark location on wall. Pre-drill holes for door stop mounting base, then secure with 3 screws included.

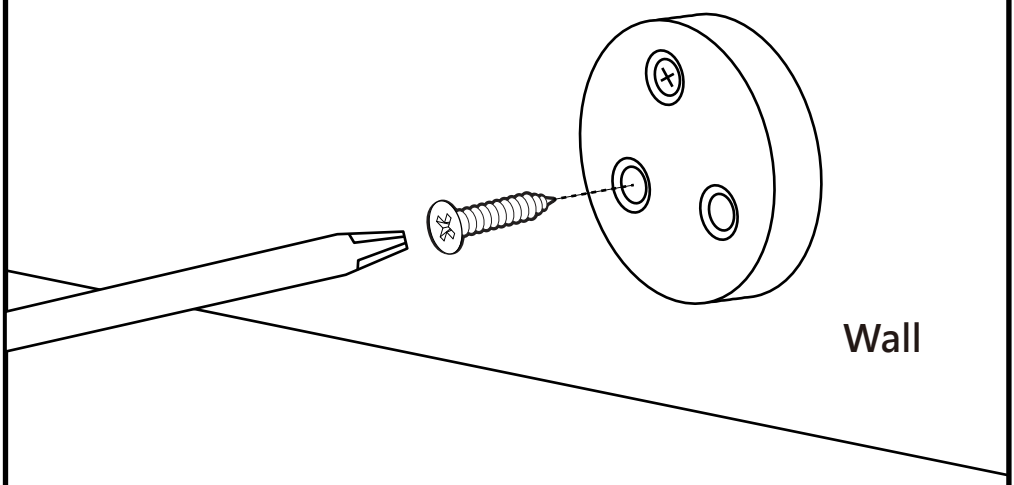

4

Attach door stop to mounting base.

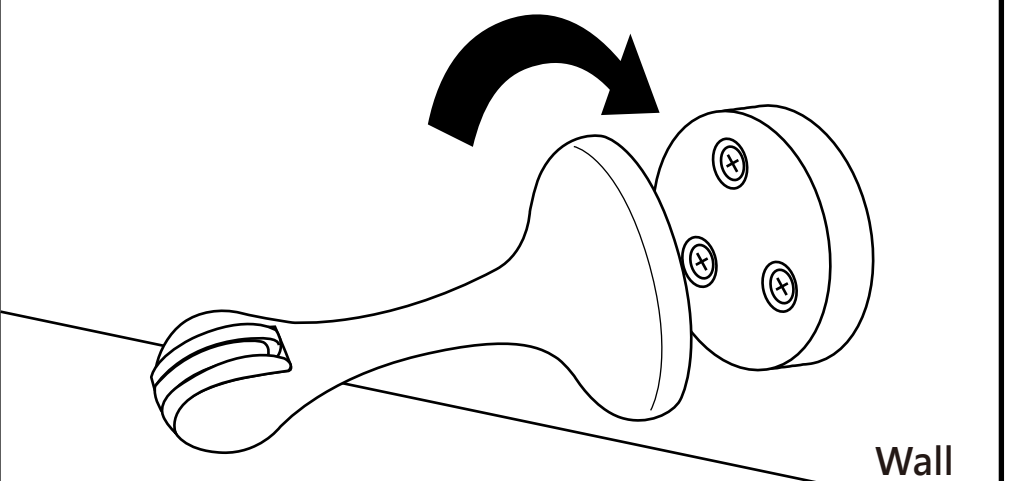

Note: Door stop and bumper locations are interchangeable.