


READ INSTRUCTIONS PRIOR TO INSTALLATION

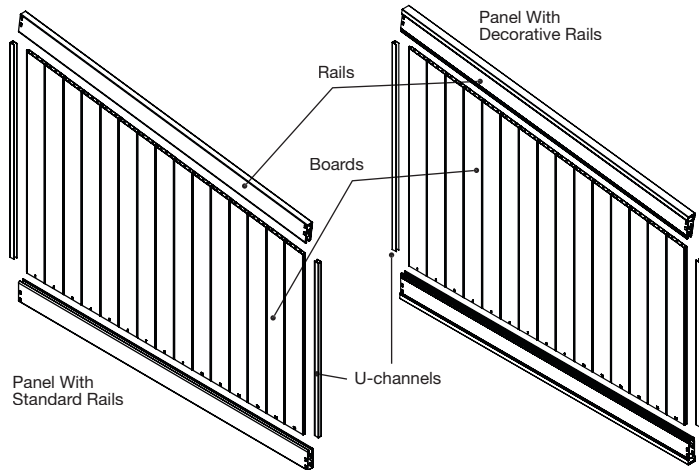

Panel Kit Components:

QTY.	Description
2	Rails
14 or 15	Boards (depending on kit ordered)
2	U-Channels

TOOLS/MATERIALS NEEDED:

Posts	Jig saw
Post Hole Digger/Shovel	Tape Measure
Concrete	Pencil
Coarse Gravel/Filler (6" per hole)	Safety Glasses

⚠ WARNING:

- Improper installation of this product can result in personal injury. Always wear safety goggles when cutting, drilling and assembling the product.
- Incorrect installation may cause harm to the product or individual.
- Check local building codes to determine pool-safe fencing options.


NOTICE:

- DO NOT attempt to assemble the kit if parts are missing or damaged.
- DO NOT return the product to the store. For assistance or replacement parts call: 1-800-336-2383.

1. Before beginning, the top post route on the taller (6') side will need to be opened a small amount to accept the angled rail. Follow the guide based on panel ordered. Measure from the top of the route to the designated measurement and mark with a pencil (Fig. 1). Using a jig saw, cut away the excess material.

NOTE:

Bottom of the top route is the only portion that should be cut away. The top of the route should remain as-is.

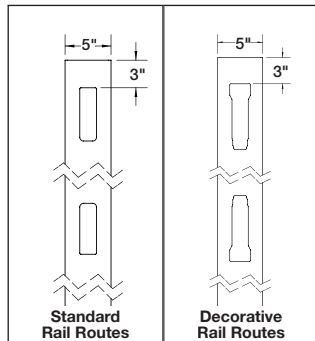

Standard Rail Measurements Measure and cut to 5-13/16"

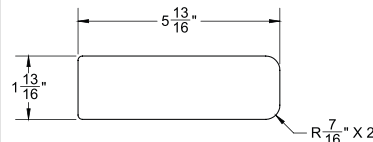


Fig. 1a

Decorative Rail Measurements Measure and cut to 7-5/16"

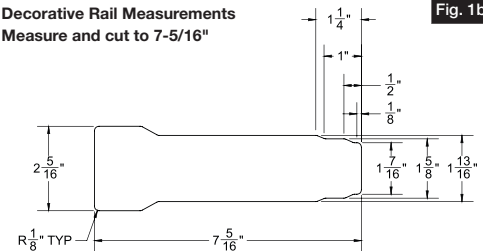


Fig. 1b

NOTE:

This is a decorative rail and is recommended to cut the steps at the designated measurements.

2. Follow level panel instructions for fence location, post location and post installation.

3. Insert bottom rail into bottom post route holes.

4. Lay out and number all infill boards from left to right with board #1 being the longest (Fig. 2).

Attach U-channels to outer boards.

5. Starting with board #1 (longest board), install infill boards from left to right in numerical order.

NOTE:

Transitioning from 6'-5' will use 15 boards;
Transitioning from 6'-4' will use 14 boards

6. Insert top rail into the left side of the post route then guide over top of boards.

7. Insert the completed fence panel into the route hole of the second fence post. Plumb and level the posts and add concrete according to manufacturer's instructions (Fig. 3).

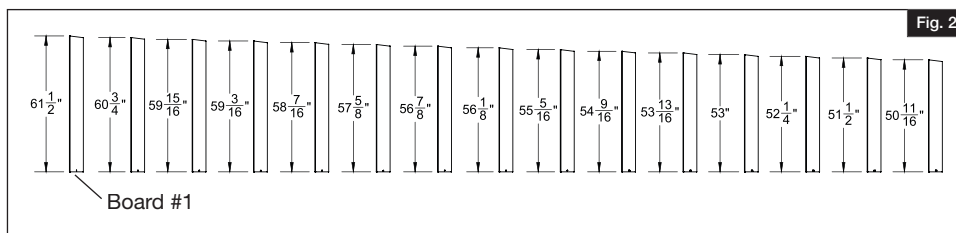


Fig. 2

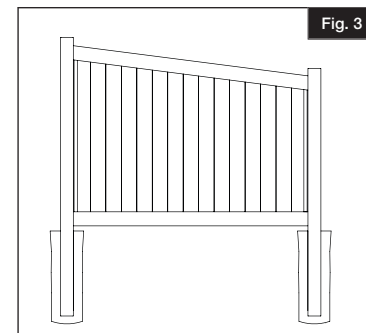


Fig. 3

BARRETTE OUTDOOR LIVING

7830 FREEWAY CIRCLE
MIDDLEBURG HEIGHTS, OHIO 44130
TEL: (800) 336-2383 • WWW.FREEDOMPRODUCT.COM


To register your product, please visit: FreedomProduct.com

To obtain and review a copy of the warranty please go to: Freedomproduct.com/warranty.
You can also contact 1.888.418.4400 or write to Freedom Outdoor Living,
7830 Freeway Circle, Middleburg Heights, Ohio 44130 to obtain a copy of the warranty.



FREEDOM-WEB

LEER LAS INSTRUCCIONES ANTES DE LA INSTALACIÓN

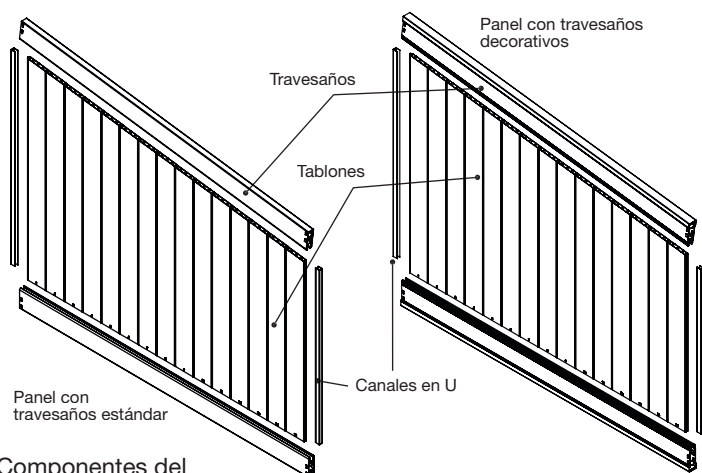

Componentes del
kit de panel:

CANT.	Descripción
2	Travesaños
14 or 15	Tablones (dependiendo del kit comprado)
2	Canales en U

HERRAMIENTAS Y MATERIALES NECESARIOS:

	Postes		Caladora
	Excavadora de pozos/pala		Cinta métrica
	Concreto		Lápiz
	Grava gruesa/relleno (6" o 15,25 cm por hoyo)		Gafas de protección

⚠ ADVERTENCIA:

- La instalación incorrecta de este producto puede resultar en lesiones corporales. Utilizar siempre gafas de seguridad al momento de cortar, taladrar y ensamblar el producto.
- La instalación incorrecta puede causar daños al producto o a la persona.
- Revisar los códigos de construcción locales para determinar las opciones de vallas seguras para piscinas.


AVISO:

- NO intentar ensamblar el kit si faltan piezas o las piezas están dañadas.
- NO devolver el producto a la tienda. Para obtener ayuda o piezas de repuesto, llamar al: 1-800-336-2383.

1. Antes de comenzar, la ranura superior del poste del lado más alto (6") deberá abrirse una pequeña cantidad para aceptar el travesaño en ángulo. Seguir la guía basada en el panel ordenado. Medir desde la parte superior de la ranura hasta la medición designada y marcar con un lápiz (Fig. 1). Usando una caladora, cortar el material sobrante.

NOTA:

La parte inferior de la ranura superior es la única porción que debe ser cortada. La parte superior de la ranura debe permanecer como está.

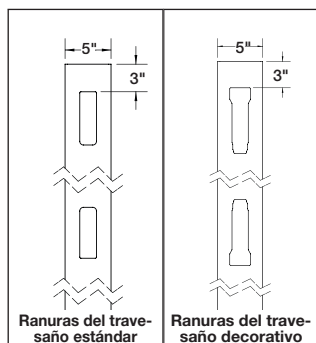

Mediciones del travesaño estándar
Medir y cortar 5-13/16" (12.7 cm)

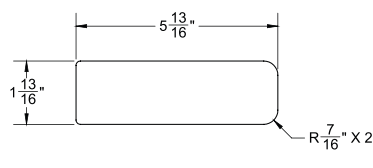


Fig. 1a

Mediciones del travesaño decorativo
Medir y cortar 7-5/16" (17.78 cm)

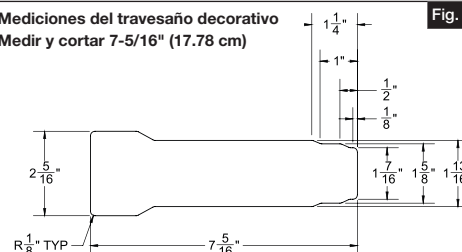


Fig. 1b

NOTA:

Se trata de un travesaño decorativo y se recomienda cortar los escalones a las medidas designadas.

2. Seguir las instrucciones del panel de nivel para la ubicación de la valla, la ubicación del poste y la instalación del poste.

3. Insertar el travesañ inferior en los agujeros ranurados del poste inferior.

4. Colocar y numerar todos los tabloncillos de relleno de izquierda a derecha, siendo el tabloncillo 1 el más largo (Fig. 2).

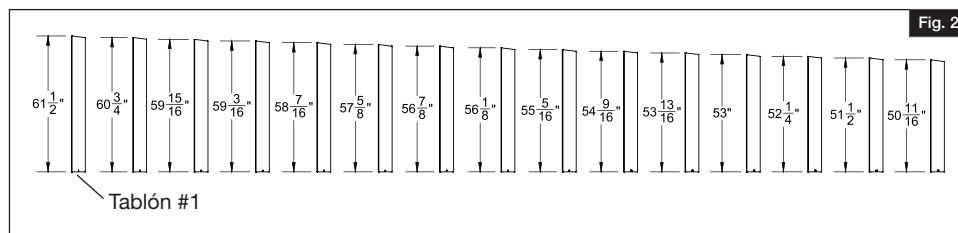


Fig. 2

Fijar los canales en U a los tablonces exteriores

5. Empezando con el tablón 1 (el más largo), instalar tabloncillos de relleno de izquierda a derecha en orden numérico.

NOTA:

En la transición de 6' a 5' se usarán 15 tablonos;
En la transición de 6' a 4' se utilizará 14 tablonos

6. Insertar el travesaño superior en el lado izquierdo de la ranura del poste y luego guiarlo sobre la parte superior de los tablones.

7. Insertar el panel de valla completado en el agujero ranurado del segundo poste de la valla. Aplomar y nivelar los postes y agregar concreto de acuerdo a las instrucciones del fabricante (Fig. 3).

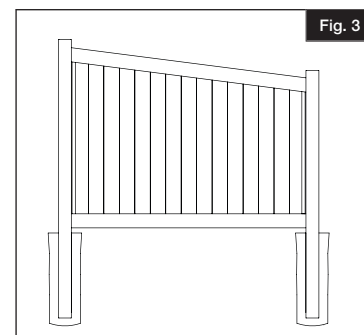


Fig. 3